



**BMW
MOTORRAD**

RIDER'S MANUAL

F 750 GS



MAKE LIFE A RIDE

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

YOUR BMW.

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About this rider's manual

Read this rider's manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features.

In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

If the time comes to sell your BMW, please remember to hand over this rider's manual to the new owner. It is an important part of the vehicle.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 GENERAL INSTRUCTIONS	2	03 STATUS INDICATORS	26
Quick & easy reference	4	Overview, displays	28
Abbreviations and symbols	4	Warning indicators	30
Equipment	5	Overview, displays with connectivity	49
Technical data	5	Indicator lights with Connectivity	52
Currency	6		
Additional sources of information	6	04 OPERATION	80
Certificates and operating licences	6	Ignition switch/steering lock	82
Data memory	6	Ignition with Keyless Ride	83
Intelligent emergency call system	11	Electronic immobiliser	
		EWS	87
02 GENERAL VIEWS	16	Emergency-off switch (kill switch)	88
General view, left side	18	Intelligent emergency call	88
General view, right side	19	Lighting	92
Underneath the seat	20	Multifunction display	97
Multifunction switch, left	21	SETUP	99
Multifunction switch, right	22	Date and time	100
Multifunction switch, right	23	General settings in the multifunction display	102
Instrument cluster	24	Traction control (DTC)	104
Instrument cluster with Connectivity	25	Electronic Suspension Adjustment (D-ESA)	105
		Riding mode	108
		Cruise control	111
		Anti-theft alarm (DWA)	114

Tyre pressure monitoring (RDC)	118	Shifting gear	165
Heated grips	118	Off-road use	166
Seat	119	Brakes	167
		Parking your motorcycle	169
05 TFT DISPLAY	122	Refuelling	170
General notes	124	Securing motorcycle for transportation	175
Principle	125		
Pure Ride view	131	08 ENGINEERING DETAILS	178
General settings	132	General notes	180
Bluetooth	134	Antilock Brake System (ABS)	180
My vehicle	137	Traction control (DTC)	183
On-board computer	140	Dynamic engine brake control	185
Navigation	140	Dynamic ESA	186
Media	142	Riding mode	186
Telephone	143	Dynamic Brake Control	188
Display software version	144	Tyre pressure control (RDC)	189
Display licence information	144	Gear Shift Assistant	191
06 ADJUSTMENT	146	09 MAINTENANCE	194
Mirrors	148	General notes	196
Headlight	148	Toolkit	196
Windscreen	149	Front-wheel stand	197
Clutch	149	Rear-wheel stand	197
Brakes	150	Engine oil	198
Spring preload	151	Brake system	200
Damping	151	Clutch	204
		Coolant	205
07 RIDING	154		
Safety information	156		
Regular check	160		
Starting	161		
Running in	164		

Tyres	207
Wheel rims	208
Wheels	209
Chain	219
Air filter	223
Lighting	224
Trim panel components	226
Jump-starting	226
Battery	228
Fuses	232
Diagnostic connector	233

10 ACCESSORIES 236

General notes	238
Power sockets	238
USB charging socket	239
Cases	240
Topcase	243
Navigation system	246

11 CARE 252

Care products	254
Washing the vehicle	254
Cleaning easily damaged components	255
Care of paintwork	256
Paint preservation	257
Laying up motorcycle	257
Restoring motorcycle to use	258

12 TECHNICAL DATA 260

Troubleshooting chart	262
Threaded fasteners	264
Fuel	266
Engine oil	266
Engine	267
Clutch	268
Transmission	268
Final drive	268
Frame	269
Chassis and suspension	269
Brakes	270
Wheels and tyres	270
Electrical system	272
Dimensions	273
Weights	274
Performance figures	274

13 SERVICE 276

Reporting safety-relevant defects	278
Recycling	279
BMW Motorrad Service	279
BMW Motorrad Service history	280
BMW Motorrad mobility services	281
Maintenance work	281
Maintenance schedule	283
BMW Motorrad running-in check	284
Maintenance confirmations	285

Service confirmations	297
------------------------------	------------

APPENDIX	300
-----------------	------------

Declaration of Con-	
formity	301

Certificate for elec-	
tronic immobiliser	304

Certificate for Key-	
less Ride	307

Certificate for Key-	
less Ride	309

Certificate for Key-	
less Ride	311

Certificate for Key-	
less Ride	313

Certificate for tyre	
pressure control (Re-	
ifendruck-Control,	
RDC)	315

Certificate for TFT	
instrument cluster	316

INDEX	320
--------------	------------

GENERAL INSTRUCTIONS

01

QUICK & EASY REFERENCE	4
ABBREVIATIONS AND SYMBOLS	4
EQUIPMENT	5
TECHNICAL DATA	5
CURRENCY	6
ADDITIONAL SOURCES OF INFORMATION	6
CERTIFICATES AND OPERATING LICENCES	6
DATA MEMORY	6
INTELLIGENT EMERGENCY CALL SYSTEM	11

4 GENERAL INSTRUCTIONS

QUICK & EASY REFERENCE

An important aspect of this rider's manual is that it can be used for quick and easy reference. Consulting the extensive index at the end of this rider's manual is the fastest way to find information on a particular topic or item. To first read an overview of your vehicle, please go to Chapter 2. All maintenance and servicing work on the vehicle is documented in the "Service" section. The record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims.

ABBREVIATIONS AND SYMBOLS

 **CAUTION** Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

 **WARNING** Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

 **DANGER** High-risk hazard. Non-avoidance leads to fatal or severe injury.

 **ATTENTION** Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

 Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.

- Instruction.
- » Result of an activity.
- ➡ Reference to a page with more detailed information.
- ◁ Indicates the end of a passage relating to specific accessories or items of equipment.
-  Tightening torque.
-  Technical data.
- NV National-market version.

OE	Optional equipment. The vehicles are assembled complete with all the BMW Motorrad optional equipment originally ordered.
OA	Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
ABS	Anti-lock brake system.
D-ESA	Electronic chassis and suspension adjustment.
DTC	Dynamic Traction Control.
DWA	Anti-theft alarm.
EWS	Electronic immobiliser.
RDC	Tyre pressure monitoring.

EQUIPMENT

When you ordered your BMW Motorrad, you chose various items of custom equipment. This rider's manual describes optional equipment (OE) and selected optional accessories (OA) provided by BMW. This explains why the manual may also contain descriptions of equipment that you might not have selected. Please note, too, that on account of country-specific differences, your motorcycle might not be exactly as illustrated.

If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

TECHNICAL DATA

All dimensions, weights and power ratings stated in the rider's manual are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e. V. (DIN).

Technical data and specifications in this rider's manual are guide values. The vehicle-specific data may deviate from these, for example as a result

6 GENERAL INSTRUCTIONS

of selected optional equipment, the national-market version or country-specific measuring procedures. Detailed values can be taken from the vehicle registration documents, or can be obtained from your authorised BMW Motorrad retailer or another qualified service partner or specialist workshop. The specifications in the vehicle documents always have priority over the information provided in this rider's manual.

CURRENCY

The high safety and quality standards of BMW motorcycles are maintained by constant development work on designs, equipment and accessories. Because of this, your vehicle may differ from the information supplied in the rider's manual. Nor can BMW Motorrad entirely rule out errors and omissions. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in these operating instructions.

ADDITIONAL SOURCES OF INFORMATION

Authorised BMW Motorrad retailer

Your authorised BMW Motorrad retailer will be happy to answer any questions you may have.

Internet

The rider's manual for your vehicle, operating and installation instructions for accessories and general information about BMW Motorrad, in relation to technology, for example, are available for download from **bmw-motorrad.com/manuals**.

CERTIFICATES AND OPERATING LICENCES

The certificates for the vehicle and the official operating licences for accessories can be downloaded from **bmw-motorrad.com/certification**.

DATA MEMORY

General

Control units are installed in the vehicle. Control units process data that they receive, for example, from vehicle sensors, or that they generate themselves or exchange between

each other. Some control units are required for the vehicle to function safely or provide assistance during riding, for example assistance systems. In addition, control units enable comfort or infotainment functions.

Information on data that has been stored or exchanged can be obtained from the manufacturer of the vehicle, for example via a separate booklet.

Personal reference

Each vehicle is identified with a clear vehicle identification number. Depending on the country, the vehicle identification number, the number plate and the corresponding authorities can be referenced to ascertain the vehicle owner. There are also other ways to use data obtained from the vehicle to trace the rider or vehicle owner, for example using the Connected-Drive user account.

Data protection rights

In accordance with applicable data protection laws, vehicle users have certain rights in relation to the manufacturer of the vehicle or in relation to companies which collect or process personal data.

Vehicle users have the right to obtain full information at no cost from persons or entities storing personal data of the vehicle user.

These entities may include:

- Manufacturer of the vehicle
- Qualified service partners
- Specialist workshops
- Service providers

Vehicle users have the right to request information on what personal data has been stored, for what purpose the data is used, and where the data comes from. To obtain this information, proof of ownership or use is required.

The right to information also includes information about data that has been shared with other companies or entities. The website of the vehicle manufacturer contains the applicable data protection information. This data protection information includes information on the right to have data deleted or corrected. The manufacturer of the vehicle also provides their contact details and those of the data protection officer on their website.

8 GENERAL INSTRUCTIONS

The vehicle owner can also request that a BMW Motorrad retailer or another qualified service partner or specialist workshop read out the data that is stored in the vehicle for a charge.

The vehicle data is read out using the legally prescribed socket for on-board diagnosis (OBD) in the vehicle.

Legal requirements for the disclosure of data

As part of its legal responsibilities, the manufacturer of the vehicle is obligated to make its stored data available to the relevant authorities. This data is provided in the required scope in individual cases, for example to clarify a criminal offence. In the context of applicable laws, public agencies are entitled in individual cases to read out data from the vehicle themselves.

Operating data in the vehicle

Control units process data to operate the vehicle.

This includes, for example:

- Status reports of the vehicle and its individual components, for example wheel speed, wheel circumferential velocity, deceleration
- Environmental conditions, for example temperature

The data is only processed in the vehicle itself and is generally non-permanent. The data is not stored beyond the operating period.

Electronic components, for example control units, contain components for storing technical information. Information can be temporarily or permanently stored on the vehicle condition, component loads, incidents or errors.

This information is generally used to document the condition of a component, a module, a system or the surrounding area, for example:

- Operating conditions of system components, for example filling levels, tyre pressure
- Malfunctions and faults in important system components, for example light and brakes
- Response of the vehicle in special riding situations, for example engagement of the driving dynamics systems

- Information on incidents resulting in damage to the vehicle

The data is necessary for the provision of control unit functions. Furthermore, the data is used to detect and rectify malfunctions and to enable the vehicle manufacturer to optimise vehicle functions.

The vast majority of this data is non-permanent and is only processed in the vehicle itself. Only a small amount of the data is stored in incident or fault memories as required by events.

If services are accessed, for example repairs, service processes, warranty cases and quality assurance measures, this technical information can be read out of the vehicle together with the vehicle identification number.

The information can be read out by a BMW Motorrad retailer or another qualified service partner or specialist workshop. The legally stipulated socket for on-board diagnosis (OBD) in the vehicle is used to read out the data. The data is obtained, processed and used by the

relevant parts of the retailer network. The data is used to document the technical conditions of the vehicle, to help with error localization, to comply with warranty obligations and to improve quality.

In addition, the manufacturer has various product monitoring obligations arising from product liability legislation. To meet these obligations, the vehicle manufacturer requires technical data from the vehicle. The data from the vehicle can also be used to check warranty claims from the customer. Error and incident memories in the vehicle can be reset during servicing or repair work by a BMW Motorrad retailer or another qualified service partner or specialist workshop.

Data input and data transfer in the vehicle

General

Depending on the equipment, comfort and customised settings can be stored in the vehicle and can be changed or reset at any time.

If required, data can be entered in the entertainment and communication system of the

10 GENERAL INSTRUCTIONS

vehicle, for example using a smartphone.

Depending on the individual equipment, this includes:

- Multimedia data, such as music for playback
- Contacts data for use in connection with a communication system or an integrated navigation system
- Entered destinations
- Data on the use of internet services. This data can be stored locally in the vehicle or is located on a device that is connected to the vehicle, for example smartphone, USB stick, MP3 player. If this data is stored in the vehicle, the data can be deleted at any time.

This data is transferred to third parties only if personally requested within the context of using online services. This depends on the selected settings when using the services.

Incorporation of mobile devices

Depending on the equipment, mobile devices connected to the vehicle, for example smartphones, can be controlled using the operating elements of the vehicle.

The image and sound of the mobile device can then be output via the multimedia system. At the same time, specific information is transferred to the mobile device. Depending on the type of integration, this includes, for example, position data and additional general vehicle information. This enables optimal use of the selected apps, for example navigation or music playback.

The type of additional data processing is determined by the provider of the respective app. The scope of the possible settings depends on the corresponding app and the operating system of the mobile device.

Services

General

If the vehicle has a wireless connection, this enables the exchange of data between the vehicle and other systems. The wireless connection is enabled by the vehicle's own transceiver unit or using personally integrated mobile devices, for example smartphones. Online functions can be accessed through this wireless connection. These include online services and

apps that are provided by the vehicle manufacturer or by other providers.

Services of the vehicle manufacturer

For online services of the vehicle manufacturer, the individual functions are described at suitable points, for example rider's manual, website of the manufacturer. At the same time, information is also provided on the relevant data protection law. Personal data may be used to provide online services. Data is exchanged using a secure connection, for example with the IT systems provided by the vehicle manufacturer.

Obtaining, processing and using personal data outside of the normal provision of services requires legal permission, contractual agreement or consent. It is also possible to have the entire data connection activated or deactivated. Statutory functions are excluded from this.

Services from other providers

When using online services from other providers, these services are subject to the responsibility and the data protection and operating conditions of the individual provider. The vehicle manufacturer has no influence on the content that is exchanged in this instance. Information on the type, scope and purpose of the data capture and use of personal data as part of the services of third parties can be ascertained from the individual provider.

INTELLIGENT EMERGENCY CALL SYSTEM

—with intelligent emergency call^{OE}

Principle

The intelligent emergency call system enables manual or automatic emergency calls, for example in the event of an accident.

The emergency calls are received by an emergency call centre that is commissioned by the vehicle manufacturer.

For information on operating the intelligent emergency call

12 GENERAL INSTRUCTIONS

system and its functions see (▮▮▮ 88).

Legal basis

Processing of personal data using the intelligent emergency call system is in line with the following regulations:

–Protection of personal data:

Directive 95/46/EC of the European Parliament and of the Council.

–Protection of personal data:

Directive 2002/58/EC of the European Parliament and of the Council.

The legal basis for the activation and function of the intelligent emergency call system is the concluded Connected-Ride contract for this function, as well as the corresponding laws, ordinances and directives of the European Parliament and of the European Council.

The relevant ordinances and directives regulate the protection of natural persons during the processing of personal data.

The processing of personal data by the intelligent emergency call system satisfies the European directives for the protection of personal data.

The intelligent emergency call system processes personal data only with the agreement of the vehicle owner.

The intelligent emergency call system and other services with additional benefits can process personal data only with the express permission of the person affected by the data processing, for example the vehicle owner.

SIM card

The intelligent emergency call system operates via the mobile phone network using the SIM card installed in the vehicle. The SIM card is permanently logged into the mobile phone network to enable rapid connection setup. Data is sent to the vehicle manufacturer in the event of an emergency.

Improving quality

The data that is transferred in an emergency is also used by the manufacturer of the vehicle to improve product and service quality.

Location determination

The position of the vehicle can be determined exclusively by the mobile phone network provider based on the mobile

phone site locations. It is not possible for the provider to trace a connection between the vehicle's VIN and the phone number of the installed SIM card. Only the manufacturer of the vehicle can link a VIN and the phone number of the SIM card installed in a particular vehicle.

Log data of emergency calls

The log data of emergency calls is stored in a memory of the vehicle. The oldest log data is regularly deleted. The log data includes, for example, information on when and where an emergency call was made. In exceptional cases, the log data can be read out of the vehicle memory. As a rule, log data is only read out following a court order, and this is only possible if the corresponding devices are connected directly to the vehicle.

Automatic emergency call

The system is designed so that, following a sufficiently serious accident, which is detected by sensors in the vehicle, an emergency call is automatically activated.

Sent information

When making an emergency call using the intelligent emergency call system, the system forwards the same information to the designated emergency call centre as is forwarded to the public emergency operations centre by the statutory emergency call system eCall. In addition, the intelligent emergency call system sends the following additional information to an emergency call centre commissioned by the vehicle manufacturer and, if required, to the emergency services:

- Accident data, for example the direction of impact detected by the vehicle sensors, to assist the emergency services response.
- Contact details, for example the phone number of the installed SIM card and the phone number of the rider, if available, to enable rapid contact with those involved in the accident if required.

Data storage

The data for an activated emergency call is stored in the vehicle. The data contains information on the emergency

14 GENERAL INSTRUCTIONS

call, for example the location and time of the emergency call.

The voice recordings of the emergency call are stored at the emergency call centre.

The voice recordings of the customer are stored for 24 hours in case details of the emergency call need to be analysed. After this, the voice recordings are deleted. The voice recordings of the employee of the emergency call centre are stored for 24 hours for quality assurance purposes.

Information on personal data

The data that is processed as part of the intelligent emergency call is processed exclusively to carry out the emergency call. As part of its statutory obligation, the manufacturer of the vehicle provides information about the data that it has processed and any data that it still has stored.

GENERAL VIEWS

02


GENERAL VIEW, LEFT SIDE	18
GENERAL VIEW, RIGHT SIDE	19
UNDERNEATH THE SEAT	20
MULTIFUNCTION SWITCH, LEFT	21
MULTIFUNCTION SWITCH, RIGHT	22
MULTIFUNCTION SWITCH, RIGHT	23
INSTRUMENT CLUSTER	24
INSTRUMENT CLUSTER WITH CONNECTIVITY	25

18 GENERAL VIEWS

GENERAL VIEW, LEFT SIDE




- 1** Power socket (➡ 238)
- 2** USB charging interface (➡ 239)
- 3** Seat lock (➡ 119)
- 4** Passenger grab handle
- 5** Adjustment of damping (➡ 152)
- 6** rear footrest
- 7** rider footrest
- 8** Oil filler opening and oil dipstick (➡ 198)

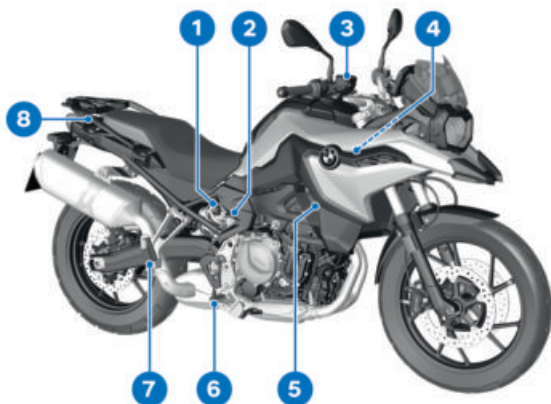GENERAL VIEW, RIGHT SIDE

- 1** Adjustment of spring pre-load (►► 151)
- 2** Brake-fluid reservoir, rear (►► 203)
- 3** Brake-fluid reservoir, front (►► 202)
- 4** Vehicle identification number, type plate (on steering head)
- 5** Coolant level indicator (behind the side trim panel) (►► 205)
- 6** rider footrest
- 7** rear footrest
- 8** Passenger grab handle


20 GENERAL VIEWS

UNDERNEATH THE SEAT

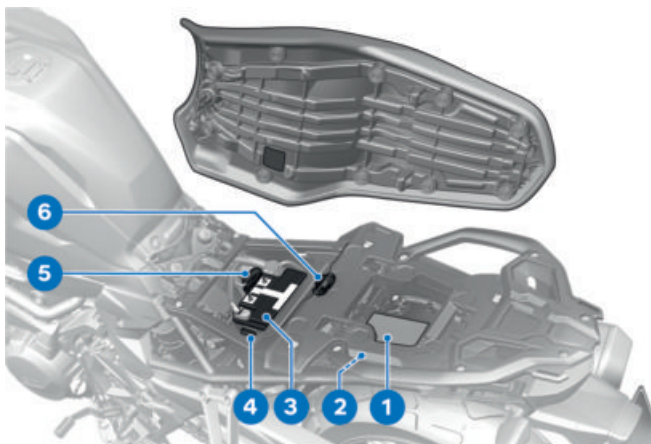

- 1 Toolkit (►► 196)
- 2 Payload table
- 3 Battery (►► 228)
- 4 Main fuse (►► 232)
- 5 Diagnostic connector (►► 233)
- 6 Fuses (►► 232)

MULTIFUNCTION SWITCH, LEFT

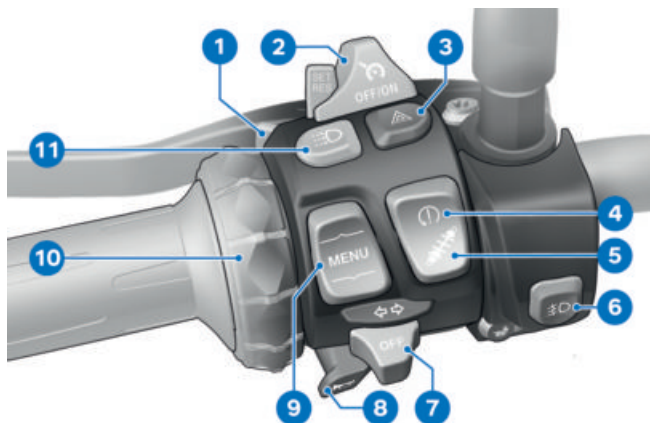

- | | |
|---|--|
| <p>1 High-beam headlight and headlight flasher (►► 93)</p> <p>2 Cruise control (►► 112)</p> <p>3 Hazard warning lights (►► 96)</p> <p>4 DTC (►► 104)</p> <p>5 Dynamic ESA (►► 105)</p> <p>6 Auxiliary headlights (►► 94)</p> <p>7 Turn indicators (►► 96)</p> <p>8 Horn</p> <p>9 MENU rocker button (►► 125)</p> <p>10 Multi-Controller Controls (►► 125)</p> | <p>11 Manual daytime riding light (►► 94)</p> |
|---|--|

22 GENERAL VIEWS

MULTIFUNCTION SWITCH, RIGHT

—with intelligent emergency call^{OE}




- 1 Operating heated handle-bar grips (➡ 118)
- 2 Select the riding mode (➡ 109)
- 3 Emergency-off switch (kill switch) (➡ 88)
- 4 Starter button (➡ 161)
- 5 SOS button
Intelligent emergency call
(➡ 88)

MULTIFUNCTION SWITCH, RIGHT

- 1** Operating heated handlebar grips (➡ 118)
- 2** Select the riding mode (➡ 109)
- 3** Emergency-off switch (kill switch) (➡ 88)
- 4** Starter button (➡ 161)

24 GENERAL VIEWS


INSTRUMENT CLUSTER

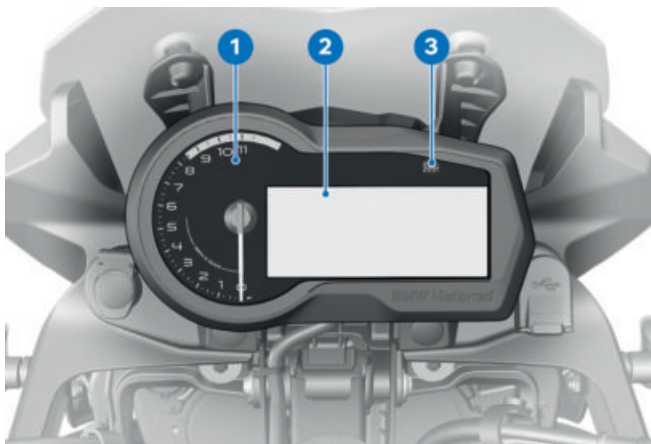

- 1 Engine speed display, indicator and warning lights
(➡ 28)
- 2 Multifunction display
(➡ 29)
- 3 Ambient-light brightness sensor (for adapting the brightness of the instrument lighting)
—with anti-theft alarm
(DWA)^{OE}
DWA light-emitting diode
(➡ 115)

INSTRUMENT CLUSTER WITH CONNECTIVITY

—with Connectivity^{OE}

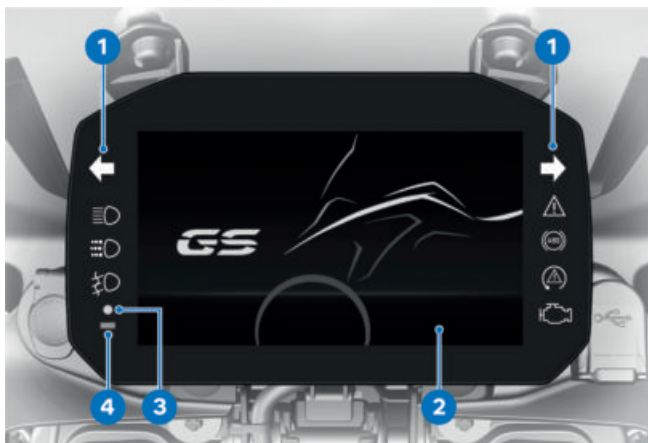

- 1** Indicator and warning lights with Connectivity (➡ 49)
- 2** TFT display (➡ 50)
(➡ 51)
- 3** DWA light-emitting diode (➡ 115)
—with Keyless Ride^{OE}
Indicator light for the radio-operated key (➡ 84)
- 4** Photosensor (for adapting the brightness of the instrument lighting)

STATUS INDICATORS


03

OVERVIEW, DISPLAYS	28
WARNING INDICATORS	30
OVERVIEW, DISPLAYS WITH CONNECTIVITY	49
INDICATOR LIGHTS WITH CONNECTIVITY	52

28 STATUS INDICATORS


OVERVIEW, DISPLAYS

INDICATOR AND WARNING LIGHTS

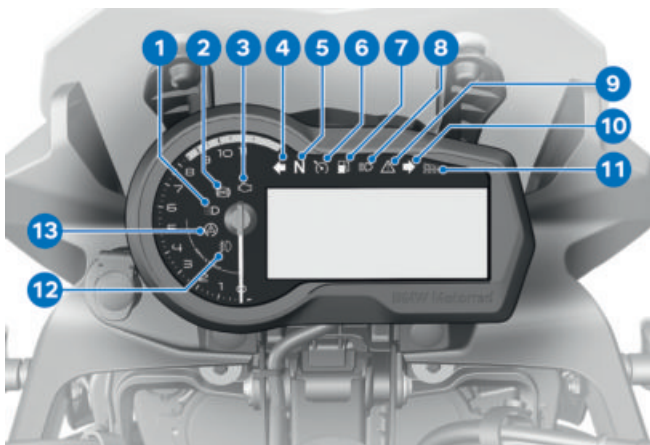

- | | |
|---|--|
| 1 Manual daytime riding light (➡ 94) | 10 Turn indicators, right (➡ 96) |
| 2 ABS (➡ 43) (➡ 43) | 11 Photosensor (for adapting the brightness of the instrument lighting) |
| 3 Warning light, drive malfunction (➡ 37) | 12 DWA light-emitting diode (➡ 115) |
| 4 Turn indicators, left (➡ 96) | 12 -with additional headlight ^{OE} |
| 5 Neutral | Auxiliary headlights. (➡ 94) |
| 6 Cruise control (➡ 112) | 13 DTC (➡ 44) |
| 7 Warning light, fuel down to reserve (➡ 45) | |
| 8 High-beam headlight (➡ 93) | |
| 9 General warning light (➡ 30) | |

MULTIFUNCTION DISPLAY

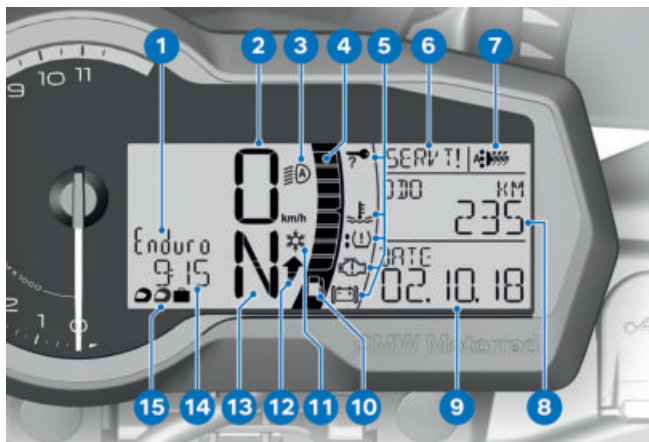


- | | |
|---|--|
| 1 Riding mode (► 109) | 11 Outside temperature warning (► 34) |
| 2 Speedometer | 12 Recommendation to up-shift (► 48) |
| 3 Automatic daytime riding light (► 94) | 13 Gear indicator |
| 4 Fuel gauge | 14 Time (► 100) |
| 5 Warning lights (see indicator lights overview) | 15 Dynamic ESA (► 105) |
| 6 Warning messages (see indicator lights overview) | |
| 7 Heated grips (► 118) | |
| 8 Display area, top (► 97) | |
| 9 Display area, bottom (► 97) | |
| 10 Fuel reserve indicator light (► 45) | |

30 STATUS INDICATORS

WARNING INDICATORS

Mode of presentation

Warnings are indicated by the corresponding warning lights.

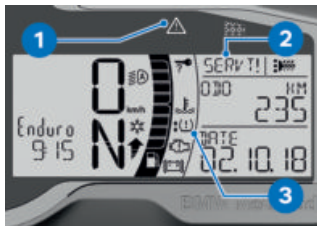

Warnings for which there is no dedicated warning light are indicated by 'General' warning light **1** showing in combination with a warning message at position **2** such as, for example, **LAMPE !** or a warning symbol **3** appearing in the multifunction display.

The 'general' warning light shows red or yellow, depending on the urgency of the warning. If two or more warnings occur at the same time all the appropriate warning lights and warning symbols appear; text warnings show alternately. The possible warnings are listed on the next pages.

Warnings, overview

Indicator and warning lights	Display text	Meaning
	 is displayed.	Outside temperature warning (▮▮▮ 34)
 lights up yellow.	 is displayed.	Electronic immobiliser active (▮▮▮ 35)
 lights up yellow.	 appears on the display.	Radio-operated key out of range (▮▮▮ 35)
 lights up yellow.	KEYLO! appears on the display.	Replacing battery of radio-operated key (▮▮▮ 35)
 lights up red.	 is displayed.	Voltage of the vehicle electrical system too low (▮▮▮ 36)
 lights up red.	 is displayed.	Coolant temperature too high (▮▮▮ 36)
 shows.		Drive malfunction (▮▮▮ 37)
 flashes yellow.	 flashes	Serious drive malfunction (▮▮▮ 37)
 flashes.		
 lights up yellow.	 is displayed.	Engine in emergency-operation mode (▮▮▮ 37)
 flashes yellow.	 flashes.	Engine warning (▮▮▮ 38)

STATUS INDICATORS


Indicator and warning lights	Display text	Meaning
 flashes red.	 flashes.	Engine control failed (►►► 38)
 shows.	 is displayed.	
	 is displayed.	
 lights up yellow.	LAMPF!, LAMPR! or LAMPS! is displayed.	Bulb faulty (►►► 38)
	DWALO! is displayed.	Anti-theft alarm battery weak (►►► 39)
 lights up yellow.	DWA! is displayed.	Anti-theft alarm battery flat (►►► 39)
 lights up yellow.	 The tyre symbol is displayed with one or two arrows. The critical tyre pressure flashes.	Tyre pressure close to limit of permitted tolerance (►►► 40)
 flashes red.	 The tyre symbol is displayed with one or two arrows. The critical tyre pressure flashes.	Tyre pressure outside the permitted tolerance (►►► 41)
 lights up yellow.	 The tyre symbol is displayed with one or two arrows.	Sensor faulty or system fault (►►► 42)
	"--" or "-- --" is displayed.	Transmission fault (►►► 42)
 lights up yellow.	RDC! appears on the display.	Battery for tyre pressure sensor weak (►►► 43)

Indicator and warning lights	Display text	Meaning
 flashes.		ABS self-diagnosis not completed (→ 43)
 lights up.		ABS fault (→ 43)
 quick-flashes.		DTC intervention (→ 44)
 slow-flashes.		DTC self-diagnosis not completed (→ 44)
 lights up.		DTC switched off (→ 44)
 lights up.		DTC fault (→ 44)
 lights up.		Fuel down to reserve (→ 45)
 lights up yellow.	 Emergency call system error.	Emergency call function restricted (→ 46)
 lights up yellow.	 Emergency call system error.	Emergency call function failed (→ 47)

34 STATUS INDICATORS

Ambient temperature

When the vehicle is at a standstill, the heat of the electrical machine can falsify the ambient-temperature reading. If the effect of the engine's heat becomes excessive, "—" temporarily appears on the display.

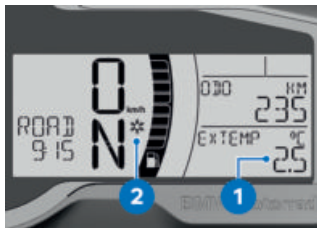

At ambient temperatures below approx. 3 °C, there is a risk of ice forming. Regardless of the display settings, when the ambient temperature drops below this threshold for the first time the display automatically switches to the outside temperature **1** and the reading flashes. Ice crystal symbol **2** also appears on the display.



is displayed.



WARNING

Risk of black ice forming even when temperature is above approx. 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.

Outside temperature warning



is displayed.

Possible cause:



The air temperature measured at the vehicle is lower than:

approx. 3 °C



WARNING

Risk of black ice forming even when temperature is above approx. 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.

- Ride carefully and think well ahead.

Electronic immobiliser active



lights up yellow.



is displayed.

Possible cause:

The key being used is not authorised for starting, or communication between key and engine electronics is disrupted.

- Remove all other vehicle keys from the same ring as the vehicle key being used.
- Use spare key.
- Have the defective key replaced, preferably by an authorised BMW Motorrad retailer.

Radio-operated key out of range

—with Keyless Ride^{OE}



lights up yellow.



appears on the display.

Possible cause:

Communication between R/C key and engine electronics is disrupted.

- Check the battery in the radio-operated key.

—with Keyless Ride^{OE}

- Replace the battery of the radio-operated key. (→ 86)

- Use the reserve key to continue your journey.

—with Keyless Ride^{OE}

- Battery of the radio-operated key is empty or loss of the radio-operated key. (→ 85)
- Remain calm if the warning symbol appears while you are riding. You can continue your journey; the engine will not switch off.
- Have the defective radio-operated key replaced by an authorised BMW Motorrad Retailer.

Replacing battery of radio-operated key

—with Keyless Ride^{OE}



lights up yellow.

KEYLO! appears on the display.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the radio-operated key can remain operational.

36 STATUS INDICATORS

- Replace the battery of the radio-operated key. (► 86)

Voltage of the vehicle electrical system too low



lights up red.



is displayed.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey.

Battery is not being charged. If you continue to ride the motorcycle the on-board electronics will drain the battery.



If the 12 V battery is not correctly installed or if the polarity of the terminals is reversed (e.g. in an attempt to jump-start the vehicle), this can cause the fuse for the alternator regulator to blow.

Possible cause:

Alternator or alternator drive faulty, battery faulty or fuse has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an

authorised BMW Motorrad retailer.

Coolant temperature too high



lights up red.



is displayed.



ATTENTION

Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential.

Possible cause:

The coolant level is too low.

- Check the coolant level. (► 205)

If the coolant level is too low:

- Top up the coolant. (► 206)

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- In traffic jams, switch off the engine, but leave the ignition switched on so that the radiator fan continues to operate.
- If the coolant temperature is frequently too high, have the fault rectified as soon as

possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Drive malfunction



shows.

Possible cause:

The engine control unit has diagnosed a fault that affects pollutant emissions and/or reduces power.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

Serious drive malfunction



flashes yellow.



flashes.



The engine symbol flashes.

Possible cause:

The engine control unit has diagnosed a fault that can lead to damage to the exhaust system.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

» It is possible to continue to ride but not recommended.

Engine in emergency-operation mode



lights up yellow.



is displayed.



WARNING

Unusual ride characteristics when engine running in emergency-operation mode

Risk of accident

- Avoid accelerating sharply and overtaking.

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine performance might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

38 STATUS INDICATORS

Engine warning



flashes yellow.



flashes.



WARNING

Engine damage when running in emergency-operation mode

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

The engine control unit has diagnosed a fault that can lead to serious consequential faults.

The engine is in emergency-operation mode.

- It is possible to continue to ride but not recommended.
- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Engine control failed



flashes red.



shows.



flashes.



is displayed.



is displayed.

Possible cause:

Communication with the engine control unit is disrupted.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

» It is possible to continue to ride but not recommended.

Bulb faulty



lights up yellow.

LAMP! is displayed:

- LAMPF!: low-beam headlight, high-beam, side light or front turn indicator faulty.
- with daytime riding light^{OE}
- LAMPF!: additionally: daytime riding light faulty.<
- LAMPR!: brake light, rear light, rear indicator light or license plate light faulty.

–LAMPS!: several bulbs faulty.



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.

Possible cause:

Bulb faulty.

- Visually inspect to ascertain which bulb is faulty.
- Have LED light sources replaced as complete units; consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Anti-theft alarm battery weak

–with anti-theft alarm (DWA)^{OE}

DWALO! is displayed.



This error message shows briefly only after the Pre-Ride-Check completes.

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if

the vehicle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Anti-theft alarm battery flat

–with anti-theft alarm (DWA)^{OE}



lights up yellow.

DWA! is displayed.



This error message shows briefly only after the Pre-Ride-Check completes.

Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the motorcycle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Tyre pressure

–with tyre pressure control (RDC)^{OE}

40 STATUS INDICATORS



The front tyre pressure is on the left **1**; the reading on the right **2** is the rear tyre pressure. "-- --" appears directly after the ignition is switched on. The sensors do not transmit tyre pressures until the first time the vehicle accelerates to more than 30 km/h. The reference tyre-air temperature for these tyre-pressure readings is always 20 °C.

 If the **3** symbol also shows, this is a warning. The critical tyre pressure flashes.

 If the value in question is close to the limit of the permissible tolerance range, the reading is accompanied by the 'General' warning light showing yellow. If the tyre pressure registered by the sensor is outside the permissible tolerance range,

the 'General' warning light flashes red.

For more information on the BMW Motorrad RDC system of tyre pressure monitoring, see (» 189).

Tyre pressure close to limit of permitted tolerance

—with tyre pressure control (RDC)^{OE}



lights up yellow.



The tyre symbol is displayed with one or two arrows. The critical tyre pressure flashes.

The up arrow indicates a pressure problem on the front wheel, the down arrow indicates a pressure problem on the rear wheel.

Possible cause:

Measured tyre pressure is close to the limit of permitted tolerance.

- Correct tyre pressure.
- Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details":

» Temperature compensation (» 190)

- » Pressure adaptation (190)
- » Find the correct tyre pressures in the following places:
 - Back cover of the rider's manual
 - Instrument cluster in the TYRE PRESSURE view
 - Sign under the seat

Tyre pressure outside the permitted tolerance

- with tyre pressure control (RDC)^{OE}



flashes red.



The tyre symbol is displayed with one or two arrows. The critical tyre pressure flashes.



WARNING

Tyre pressure outside the permitted tolerance.

Risk of accident, degradation of the vehicle's driving characteristics.

- Adapt your style of riding accordingly.

The up arrow indicates a pressure problem on the front wheel, the down arrow indicates a pressure problem on the rear wheel.

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.



The RDC warning messages can be deactivated for off-roading.



Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details".

» Temperature compensation (190)

- Have the tyre checked for damage by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

42 STATUS INDICATORS

Sensor faulty or system fault

—with tyre pressure control (RDC)^{OE}



lights up yellow.



The tyre symbol is displayed with one or two arrows.

Possible cause:

Vehicle is fitted with wheels not equipped with RDC sensors.

- Fit wheels and tyres equipped with RDC sensors.

Possible cause:

1 or 2 RDC sensors have failed or there is a system fault.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Transmission fault

—with tyre pressure control (RDC)^{OE}

"--" or "-- --" is displayed.

Possible cause:

The vehicle has not reached the minimum speed ( 189).



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

- Increase speed above this threshold and observe the RDC readings.



Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Possible cause:

Wireless communication with the RDC sensors has been disrupted. Radio systems are located in the surrounding area which are interfering with the transmission between the RDC control unit and the sensors.

- Move to another location and observe the RDC readings.



Assume that a permanent fault has not occurred unless the 'General' warning light

comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Battery for tyre pressure sensor weak

—with tyre pressure control (RDC)^{OE}



lights up yellow.

RDC! appears on the display.



This error message shows briefly only after the Pre-Ride-Check completes.

Possible cause:

The integral battery in the tyre-pressure sensor has lost a significant proportion of its original capacity. There is no assurance of how long the tyre pressure monitoring system can remain operational.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS self-diagnosis not completed



flashes.

Possible cause:

The ABS function is not available, because self-diagnosis did not complete. The motorcycle has to move forward a few metres for the wheel sensors to be tested.

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

ABS fault



lights up.

Possible cause:

The ABS Pro control unit has detected a fault. The ABS Pro function is not available. The ABS function is available, subject to restrictions. ABS provides support only for braking in straight-ahead driving.

- You can continue to ride. Bear in mind the more detailed information on certain situations that can lead to an ABS Pro fault message (181).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

44 STATUS INDICATORS

Possible cause:

The ABS control unit has detected a fault.

- You can continue to ride. Bear in mind that the ABS function is not available. Take note of the more detailed information on certain situations that can lead to an ABS fault message (► 181).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DTC intervention



quick-flashes.

The DTC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The indicator and warning light flashes for longer than DTC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

DTC self-diagnosis not completed



slow-flashes.

Possible cause:



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the DTC function is not available until self-diagnosis has completed.

DTC switched off



lights up.

Possible cause:

The rider has switched off the DTC system.

- Switch on DTC. (► 104)

DTC fault



lights up.

Possible cause:

The DTC control unit has detected a fault.

- Bear in mind that the DTC function is not available or the functionality is subject to certain restrictions.
- You can continue to ride. Bear in mind the more

detailed information on situations that can lead to a DTC fault (➡ 184).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Fuel down to reserve



lights up.



WARNING

Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Reserve fuel

approx. 3.5 l

- Refuel. (➡ 171)

Fuel reserve

The fuel quantity remaining in the fuel tank once the fuel reserve indicator light switches on depends on the riding dynamics. The more the fuel moves around in the fluid tank (caused by frequent changes in lean angle, frequent braking and accelerating), the harder it is to determine the fuel reserve. For this reason, it is not possible to accurately state the fuel reserve volume.



The range is displayed automatically once the fuel warning light is switched on.

The distance that can still be travelled using the reserve quantity depends on the style of riding (consumption) and the amount of fuel remaining at the time the light came on (see explanation above).

After a refuelling stop, the distance counter for reserve fuel is reset if the amount of fuel in the tank is greater than the reserve quantity.

46 STATUS INDICATORS

Service-due indicator



When the next service is due within a month, the wording **SERV T!** **1** and the service due date **2** are displayed. This information appears briefly after the Pre-Ride-Check completes.



When a service is due within 1000 kilometres, the wording **SERV D!** **3** and countdown distance **4** are displayed and the distance counts down in steps of 100 kilometres. This information appears briefly after the Pre-Ride-Check completes.



If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow. The **SERVD!** or **SERV T!** messages are displayed permanently.



If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected.

Emergency call function restricted

—with intelligent emergency call **OE**



lights up yellow.



Emergency call system error. Make an appointment at a specialist workshop.

Possible cause:

The emergency call cannot be made automatically or cannot be made via BMW.

- Consult the information on operating the intelligent emergency call on page **88**

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Emergency call function failed

—with intelligent emergency call^{OE}



lights up yellow.



Emergency call system error. Make an appointment at a specialist workshop.


Possible cause:

The control unit of the emergency call system has diagnosed a fault. The emergency call function has failed.


- Bear in mind that an emergency call cannot be made.
- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Emergency call display

—with intelligent emergency call^{OE}

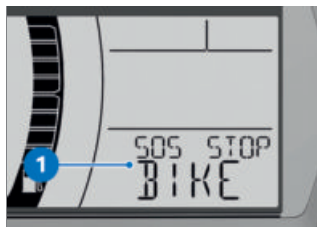


Message **1** is displayed if an emergency call is triggered manually by the rider while riding..

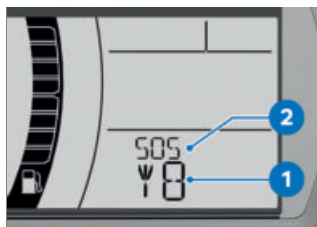


A countdown **1** is displayed below the **SOS 2** message while the connection is being established.

48 STATUS INDICATORS

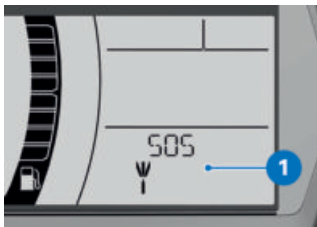


The message **1** is displayed once a connection has been established.

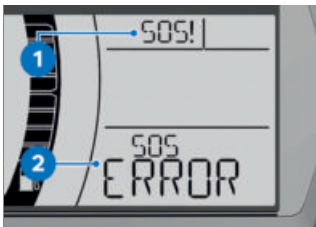

Messages **SOS! 1** and **SOS ERROR 2** are displayed if emergency calls are not possible as a result of a technical fault.

Recommendation to upshift

The upshift recommendation must be activated in the display settings (→ 99).

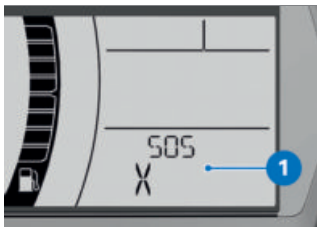

The message **1** is displayed if it was not possible to establish a connection.



Upshift recommendation **1** indicates the best time to upshift economically.




The symbol **1** is displayed if there is no mobile phone signal.

OVERVIEW, DISPLAYS WITH CONNECTIVITY

INDICATOR AND WARNING LIGHTS WITH CONNECTIVITY

—with Connectivity^{OE}

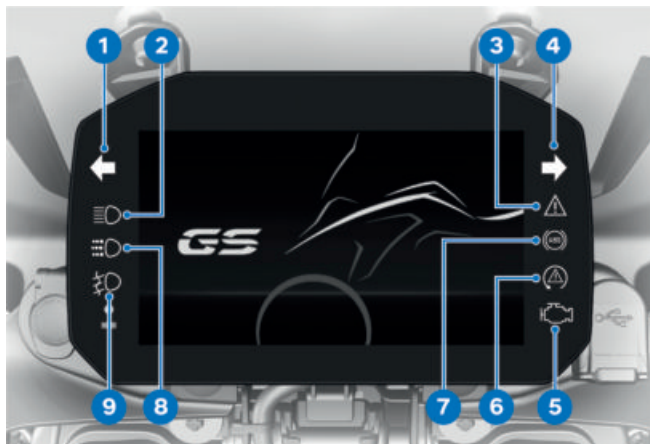


- | | |
|---|---|
| <p>1 Turn indicators, left
(96)</p> <p>2 High-beam headlight
(93)</p> <p>3 General warning light
(52)</p> <p>4 Turn indicators, right
(96)</p> <p>5 Warning light, drive mal-
function (65)</p> <p>6 DTC (74)</p> <p>7 ABS (73)</p> <p>8 Manual daytime riding
light (94)</p> | <p>9 —with additional head-
light^{OE}
Auxiliary headlights.
(94)</p> |
|---|---|

50 STATUS INDICATORS

TFT DISPLAY IN PURE RIDE VIEW


—with Connectivity^{OE}

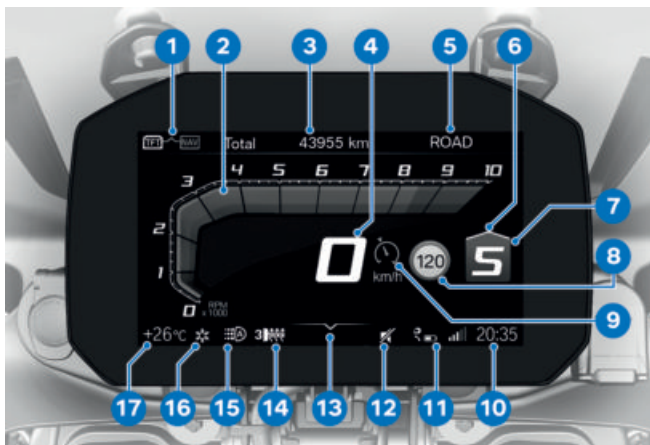

- | | | | |
|----|--|----|---|
| 1 | Change of operating focus (➡ 129) | 11 | Connection status (➡ 135) |
| 2 | Rev. counter (➡ 131) | 12 | Muting (➡ 132) |
| 3 | Status line (➡ 129) | 13 | Operating help |
| 4 | Speedometer | 14 | Heating stages, handlebar grips (➡ 118) |
| 5 | Riding mode (➡ 108) | 15 | Automatic daytime riding light (➡ 95) |
| 6 | Recommendation to up-shift (➡ 132) | 16 | Outside temperature warning (➡ 59) |
| 7 | Gear indicator; "N" indicates neutral. | 17 | Ambient temperature |
| 8 | Speed Limit Info (➡ 131) | | |
| 9 | Cruise control (➡ 112) | | |
| 10 | Clock (➡ 133) | | |

TFT DISPLAY IN MENU VIEW

—with Connectivity^{OE}

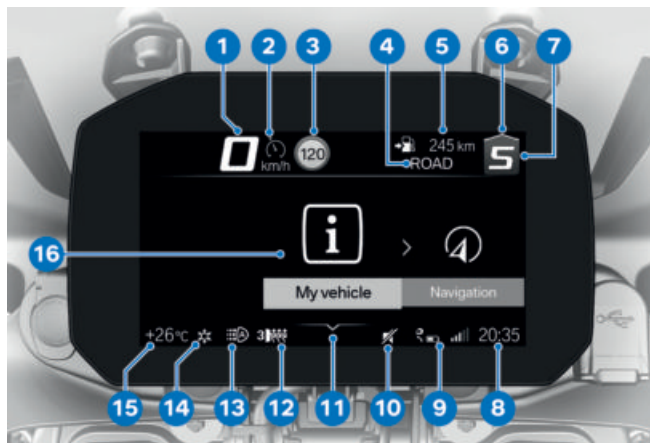

- | | |
|---|---|
| 1 Speedometer | 12 Heating stages, handlebar grips (➡ 118) |
| 2 Cruise control (➡ 112) | 13 Automatic daytime riding light (➡ 95) |
| 3 Speed Limit Info (➡ 131) | 14 Outside temperature warning (➡ 59) |
| 4 Riding mode (➡ 108) | 15 Ambient temperature |
| 5 Status line (➡ 129) | 16 Menu section |
| 6 Recommendation to up-shift (➡ 132) | |
| 7 Gear indicator; "N" indicates neutral. | |
| 8 Clock | |
| 9 Connection status | |
| 10 Muting (➡ 132) | |
| 11 Operating help | |

52 STATUS INDICATORS

INDICATOR LIGHTS WITH CONNECTIVITY

Mode of presentation

Warnings are indicated by the corresponding warning lights. Warnings are indicated by the 'General' warning light showing in combination with a dialogue in the TFT display. The 'General' warning light shows yellow or red, depending on the urgency of the warning.



The status of the 'General' warning light matches the most urgent warning.


The possible warnings are listed on the next pages.



Check Control display

The messages differ in how they show on the display. Different colours and symbols are used depending on priority:

- Green CHECK OK **1**: No message, optimum values.
- White circle with small "i" **2**: Information.
- Yellow warning triangle **3**: Warning, value not ideal.
- Red warning triangle **3**: Warning, value critical

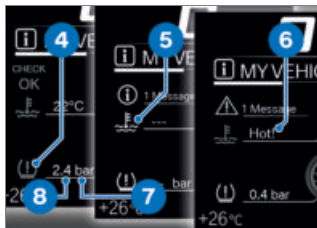

Values display

Symbols **4** differ in how they show on the display. The colours used differ and reflect the urgency of the message. Along with numerical values **8** with units **7**, texts **6** are displayed as well:


Colour of the symbol

- Green: (OK) Current value is ideal.
- Blue: (Cold!) Current temperature is too low.
- Yellow: (Low!/High!) Current value is too low or too high.

- Red: (Hot!/High!) Current temperature or value is too high.
- White: (---) No valid value available. Dashes **5** are displayed instead of a numerical value.

 The assessment of some values is only possible from a certain journey duration or speed. If a measured value is still not being displayed because the conditions for measurement have not been met, dashes are displayed instead as a placeholder. If there are no valid measured values, there will be no assessment in the form of a coloured symbol.

- If there are two or more Check Control messages of equal priority, the messages keep changing in the order of their occurrence until they are acknowledged.
- If symbol **2** is actively displayed, it can be acknowledged by tilting the Multi-Controller to the left.
- Check Control messages are attached dynamically to the pages as additional tabs in the *My vehicle* menu ( 127). The message can be called up again as long as the fault persists.

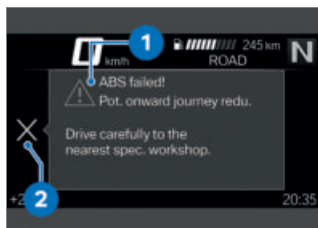

Check Control dialogue

Messages are output as Check Control dialogues **1**.

54 STATUS INDICATORS

Warnings, overview

Indicator and warning lights	Display text	Meaning
	 is displayed.	Outside temperature warning (►►► 59)
 lights up yellow.	 Remote key not in range.	Radio-operated key out of range (►►► 59)
 lights up yellow.	 Keyless Ride failure	Keyless Ride failed (►►► 60)
 lights up yellow.	 Remote key battery weak.	Replacing battery of radio-operated key (►►► 60)
	 is displayed in yellow.	Voltage of the vehicle electrical system too low (►►► 60)
	 Vehicle voltage low.	
 lights up yellow.	 is displayed in yellow.	Voltage of the vehicle electrical system critical (►►► 61)
	 Vehicle voltage critical!	
 flashes yellow.	 is displayed in yellow.	Charging voltage critical (►►► 62)
	 Battery voltage critical!	
 lights up yellow.	 The faulty bulb is displayed.	Bulb faulty (►►► 62)
 lights up yellow.	 Light control failure!	Light control failed (►►► 63)
	 Alarm system batt. capacity weak.	Anti-theft alarm battery weak (►►► 63)

Indicator and warning lights	Display text	Meaning
	 Alarm system battery empty.	Anti-theft alarm battery flat (▮▮▮ 64)
	 Alarm system failure	DWA failed (▮▮▮ 64)
 lights up yellow.	 Engine temp. high!	Engine temperature high (▮▮▮ 64)
 lights up red.	 Engine overheating!	Engine overheated (▮▮▮ 65)
 shows.	 Engine!	Drive malfunction (▮▮▮ 65)
 flashes red.	 Serious fault in the engine control!	Serious drive malfunction (▮▮▮ 66)
 flashes.		
 lights up yellow.	 No communication with engine control.	Engine control failed (▮▮▮ 66)
 lights up.		
 lights up yellow.	 Fault in the engine control.	Engine in emergency-operation mode (▮▮▮ 66)
 flashes red.	 Serious fault in the engine control!	Serious fault in engine control (▮▮▮ 67)
 lights up yellow.	 is displayed in yellow.	Tyre pressure close to limit of permitted tolerance (▮▮▮ 69)
	 Tyre pressure does not match setpoint	

56 STATUS INDICATORS

Indicator and warning lights	Display text	Meaning
 flashes red.	 is displayed in red.	Tyre pressure outside permitted tolerance (→ 69)
	 Tyre pressure does not match setpoint	
	 Tyre press. control. Loss of pressure.	
	 "---	Transmission fault (→ 70)
 lights up yellow.	 "---	Sensor faulty or system fault (→ 71)
 lights up yellow.	 RDC sensor battery weak.	Battery for tyre pressure sensor weak (→ 71)
 lights up yellow.	 Tyre pressure check failure!	Tyre pressure monitoring (RDC) failed (→ 72)
	 Drop sensor faulty.	Drop sensor defective (→ 72)
 lights up yellow.	 Emergency call system error.	Emergency call function restricted (→ 46)
 lights up yellow.	 Emergency call system error.	Emergency call function failed (→ 47)
 lights up yellow.	 Side stand monitoring faulty.	Side stand monitoring is faulty (→ 73)
 flashes.		ABS self-diagnosis not completed (→ 43)

Indicator and warning lights	Display text	Meaning
 lights up yellow.	 Limited ABS availability!	ABS fault (→ 73)
 lights up.		
 lights up yellow.	 ABS failure!	ABS failed (→ 74)
 lights up.		
 lights up yellow.	 ABS Pro failure!	ABS Pro failed (→ 74)
 lights up.		
 quick-flashes.		DTC intervention (→ 74)
 slow-flashes.		DTC self-diagnosis not completed (→ 75)
 lights up.	 Off!	DTC switched off (→ 75)
	 Traction control deactivated.	
 lights up yellow.	 Traction control limited!	DTC restricted (→ 75)
 lights up.		
 lights up yellow.	 Traction control failure!	DTC fault (→ 76)
 lights up.		

58 STATUS INDICATORS

Indicator and warning lights	Display text	Meaning
 lights up yellow.	 Spring strut adjustment faulty!	D-ESA fault ( 76)
	 Fuel reserve reached. Go to a filling station soon	Fuel down to reserve ( 77)
	 flashes.	Gear not trained ( 77)
 flashes green.		Hazard warning lights system
 flashes green.		is switched on ( 77)
	 is displayed in white. Service due!	Service due ( 78)
 lights up yellow.	 is displayed in yellow. Service overdue!	Service-due date has passed ( 78)

Ambient temperature

The outside temperature is displayed in the status line of the TFT display.

When the vehicle is at a standstill, the heat of the electrical machine can falsify the ambient-temperature reading. If the heat of the electrical machine is affecting it too much, dashes are temporarily shown in place of the value.



There is a risk of black ice if the ambient temperature falls below the limit value of approx. 3 °C.

The first time the temperature drops below this value, the ambient-temperature reading and the ice crystal symbol flash in the status line of the TFT display.

Outside temperature warning



is displayed.

Possible cause:



The air temperature measured at the vehicle is lower than:

approx. 3 °C



WARNING

Risk of black ice forming even when temperature is above approx. 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.

- Ride carefully and think well ahead.

Radio-operated key out of range

—with Keyless Ride^{OE}



lights up yellow.



Remote key not in range. Not possible to switch on ignition again.

Possible cause:

Communication between radio-operated key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- with Keyless Ride^{OE}
- Replace the battery of the radio-operated key. (► 86)

60 STATUS INDICATORS

- Use the spare key to continue your journey.
—with Keyless Ride^{OE}
- Battery of the radio-operated key is empty or loss of the radio-operated key. (► 85)
- Remain calm if the Check Control dialogue appears on the display while you are riding. You can continue your journey, the engine will not switch off.
- Have the faulty radio-operated key replaced by an authorised BMW Motorrad retailer.

Keyless Ride failed

—with Keyless Ride^{OE}



lights up yellow.



Keyless Ride failure
Do not stop the engine. It may not be possible to restart the engine.

Possible cause:

The Keyless Ride control unit has diagnosed a communication fault.

- Do not switch off the engine. Proceed as directly as possible to an authorised workshop, preferably an authorised BMW Motorrad retailer.
- » Engine start with Keyless Ride can no longer be initiated.

» DWA can no longer be activated.

Replacing battery of radio-operated key

—with Keyless Ride^{OE}



lights up yellow.



Remote key battery weak. Function limited. Change battery.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the radio-operated key can remain operational.
- Replace the battery of the radio-operated key. (► 86)

Voltage of the vehicle electrical system too low



is displayed in yellow.



Vehicle voltage low. Switch off unnecessary consumers.

The voltage of the vehicle electrical system is too low. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:

Consumers with high power consumption are in operation (such as heated body warmers), too many consumers are in operation at one time, or battery faulty.

- Switch off non-essential consumers or disconnect them from the vehicle's electrical system.
- If the fault persists or occurs without consumers connected, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Voltage of the vehicle electrical system critical



lights up yellow.



is displayed in yellow.



Vehicle voltage critical! Consumers were switched off. Check battery condition.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey.

The voltage of the vehicle electrical system is critical. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:

Consumers with high power consumption are in operation (such as heated body warmers), too many consumers are in operation at one time, or battery faulty.

- Switch off non-essential consumers or disconnect them from the vehicle's electrical system.
- If the fault persists or occurs without consumers connected, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

62 STATUS INDICATORS

Charging voltage critical



flashes yellow.



is displayed in yellow.



Battery voltage critical! Accident risk. Stop driving.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey.

Battery is not being charged. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:

Alternator or alternator drive faulty, battery faulty or fuse has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Bulb faulty



lights up yellow.



The faulty bulb is displayed:



High beam faulty!



Front left turn indicator faulty! or. Front right turn indicator faulty!



Low-beam headlight faulty!



Front side light faulty!

—with daytime riding light^{OE}



Daytime riding light faulty!◀



Tail light faulty!



Brake light faulty!

—with additional headlight^{OE}



Left additional headlight faulty! or. Right additional headlight faulty!◀



Rear left turn indicator faulty! or. Rear right turn indicator faulty!



Number plate light faulty!

—Have it checked by a specialist workshop.

**WARNING****Vehicle overlooked in traffic due to failure of the lights on the vehicle**

Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

Bulb faulty.

- Visually inspect to ascertain which bulb is faulty.
- Have LED light sources replaced as complete units; consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Light control failed

lights up yellow.



Light control failure! Have it checked by a specialist workshop.

**WARNING****Vehicle overlooked in traffic on account of failure of the vehicle lighting**

Safety risk

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

The vehicle lighting has partially or completely failed.

Possible cause:

Light control has diagnosed a communication fault.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Anti-theft alarm battery weak—with anti-theft alarm (DWA)^{OE}

Alarm system batt. capacity weak. No restrictions. Make an appointment at a specialist workshop.



This error message shows briefly only after the Pre-Ride-Check completes.

64 STATUS INDICATORS

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Anti-theft alarm battery flat

—with anti-theft alarm (DWA)^{OE}

 Alarm system battery empty. No independent alarm. Make an appointment at a specialist workshop.

 This error message shows briefly only after the Pre-Ride-Check completes.

Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the motorcycle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

DWA failed

—with anti-theft alarm (DWA)^{OE}

 Alarm system failure
Have it checked by a specialist workshop.

Possible cause:

The DWA control unit has diagnosed a communication fault.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.
 - » DWA can no longer be activated or deactivated.
 - » False alarm possible.

Engine temperature high

 lights up yellow.

 Engine temp. high!
Continue riding with restriction to allow cooling.



ATTENTION

Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential.

Possible cause:

The coolant level is too low.

- Check the coolant level.

( 205)

If the coolant level is too low:

- Top up the coolant. ( 206)

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- In traffic jams, switch off the engine, but leave the ignition switched on so that the radiator fan continues to operate.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Engine overheated



lights up red.



Engine overheating! Stop when it is safe to do so and switch off the engine.



ATTENTION

Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential.

Possible cause:

The coolant level is too low.

- Check the coolant level.

( 205)

If the coolant level is too low:

- Top up the coolant. ( 206)

Possible cause:

Engine is overheated.

- Carefully bring the vehicle to a stop, switch off the engine and wait until the engine has cooled down.
- If engine overheating is a frequent occurrence, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Drive malfunction



shows.



Engine! Have it checked by a specialist workshop.

66 STATUS INDICATORS

Possible cause:

The engine control unit has diagnosed a fault that affects pollutant emissions and/or reduces power.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

Serious drive malfunction



flashes red.



flashes.



Serious fault in the engine control! Riding at mod. speed pos. Damage possible. Have checked by workshop.

Possible cause:

The engine control unit has diagnosed a fault that can lead to damage to the exhaust system.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

» It is possible to continue to ride but not recommended.

Engine control failed



lights up yellow.



lights up.



No communication with engine control. Multiple sys. affected. Ride carefully to the next specialist workshop.

Possible cause:

Communication with the engine control unit has failed.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Engine in emergency-operation mode



lights up yellow.



Fault in the engine control. Onward journey possible. Ride carefully to next specialist workshop.

**WARNING****Unusual ride characteristics when engine running in emergency-operation mode**

Risk of accident

- Avoid accelerating sharply and overtaking.

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine performance might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Serious fault in engine control

flashes red.



Serious fault in the engine control! Riding at mod. speed pos. Damage possible. Have checked by workshop.

**WARNING****Engine damage when running in emergency-operation mode**

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

The engine control unit has diagnosed a fault that can lead to serious consequential faults. The engine is in emergency-operation mode.


- It is possible to continue to ride but not recommended.
- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

68 STATUS INDICATORS

Tyre pressure

—with tyre pressure control (RDC) ^{OE}

In addition to the MY VEHICLE menu screen and the Check Control messages, there is also the TYRE PRESSURE screen for showing the tyre pressures:

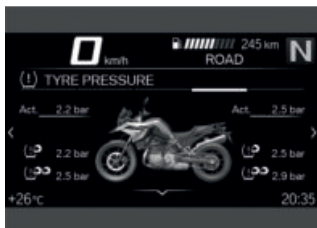

The values on the left are for the front wheel; those on the right are for the rear wheel. Along with the measured tyre pressures, the specified tyre pressures dependent on load are shown as well. Immediately after the ignition is switched on, only dashes are displayed. The sensors do not start transmitting measured tyre pressure signals until the first time the vehicle accelerates to more than the minimum speed stated below:



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)



The tyre pressures are shown in the TFT display as temperature compensated and always refer to the following tyre air temperature:

20 °C



If the tyre symbol appears as well, showing yellow or red, this is a warning.



The stated tolerance ranges for tyre pressures are referenced to one-up riding.



If the value in question is close to the limit of the permissible tolerance range, the reading is accompanied by the 'General' warning light showing yellow.



The 'General' warning light flashes red if the tyre pressure registered by the

sensor is outside the permissible tolerance range.

For further information about BMW Motorrad RDC, see the section entitled "Engineering details" (► 189).

Tyre pressure close to limit of permitted tolerance

–with tyre pressure control (RDC)^{OE}

 lights up yellow.

 is displayed in yellow.

 Tyre pressure does not match setpoint
Check tyre pressure.

Possible cause:

Measured tyre pressure is close to the limit of permitted tolerance.

- Correct tyre pressure.
- Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details":
 - » Temperature compensation (► 190)
 - » Pressure adaptation (► 190)
 - » Find the correct tyre pressures in the following places:

- Back cover of the rider's manual
- Instrument cluster in the TYRE PRESSURE view
- Sign under the seat

Tyre pressure outside permitted tolerance

–with tyre pressure control (RDC)^{OE}

 flashes red.

 is displayed in red.

 Tyre pressure does not match setpoint
Stop immediately! Check tyre pressure.

 Tyre press. control.
Loss of pressure.
Stop immediately! Check tyre pressure.



WARNING

Tyre pressure outside the permitted tolerance.

Risk of accident, degradation of the vehicle's driving characteristics.

- Adapt your style of riding accordingly.

70 STATUS INDICATORS

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.
- Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details":
 - » Temperature compensation (190)
 - » Pressure adaptation (190)
 - » Find the correct tyre pressures in the following places:
 - Back cover of the rider's manual
 - Instrument cluster in the **TYRE PRESSURE** view
 - Sign under the seat
- Have the tyre checked for damage by a specialist workshop, preferably an authorised BMW Motorrad retailer.



The RDC warning messages can be deactivated for off-roading.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

Transmission fault

–with tyre pressure control (RDC)^{OE}



"---"

Possible cause:

The vehicle has not reached the minimum speed (189).



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

- Increase speed above this threshold and observe the RDC readings.



Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop,

preferably an authorised
BMW Motorrad retailer.

Possible cause:

Wireless communication with the RDC sensors has been disrupted. Radio systems are located in the surrounding area which are interfering with the transmission between the RDC control unit and the sensors.

- Move to another location and observe the RDC readings.

 Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Sensor faulty or system fault

—with tyre pressure control (RDC)^{OE}

 lights up yellow.

 "----"

Possible cause:

Vehicle is fitted with wheels not equipped with RDC sensors.

- Fit wheels and tyres equipped with RDC sensors.

Possible cause:

1 or 2 RDC sensors have failed or there is a system fault.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Battery for tyre pressure sensor weak

—with tyre pressure control (RDC)^{OE}

 lights up yellow.

 RDC sensor battery weak. Function limited. Have it checked by a specialist workshop.

 This error message shows briefly only after the Pre-Ride-Check completes.

Possible cause:

The integral battery in the tyre-pressure sensor has lost a significant proportion of its original capacity. There is no assurance of how long the tyre pressure monitoring system can remain operational.

72 STATUS INDICATORS

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Tyre pressure monitoring (RDC) failed



lights up yellow.



Tyre pressure check failure! Function limited. Have it checked by a specialist workshop.

Possible cause:

The tyre pressure control (RDC) control unit has diagnosed a communication fault.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

» Tyre pressure warnings not available.

Drop sensor defective



Drop sensor faulty. Have it checked by a specialist workshop.

Possible cause:

The drop sensor is not available.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Emergency call function restricted

—with intelligent emergency call^{OE}



lights up yellow.



Emergency call system error. Make an appointment at a specialist workshop.

Possible cause:

The emergency call cannot be made automatically or cannot be made via BMW.

- Consult the information on operating the intelligent emergency call on page (▮▮▮ 88).
- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Emergency call function failed

—with intelligent emergency call^{OE}



lights up yellow.



Emergency call system error. Make an appointment at a specialist workshop.

Possible cause:

The control unit of the emergency call system has diagnosed a fault. The emergency call function has failed.

- Bear in mind that an emergency call cannot be made.
- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Side stand monitoring is faulty



lights up yellow.



Side stand monitoring faulty. Onward journey possible. Engine will stop if stationary! Have checked by workshop.

Possible cause:



Side-stand switch or wiring damaged

The engine will switch off when speed drops below the minimum threshold. You cannot resume your journey.

min 5 km/h

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS self-diagnosis not completed



flashes.

Possible cause:

The ABS function is not available, because self-diagnosis did not complete. The motorcycle has to move forward a few metres for the wheel sensors to be tested.

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

ABS fault



lights up yellow.



lights up.



Limited ABS availability! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The ABS function is available, subject to restrictions.

- You can continue to ride. Bear in mind the more detailed information on certain situations that can

74 STATUS INDICATORS

lead to an ABS fault message (181).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS failed



lights up yellow.



lights up.



ABS failure! Onward journey possible.

Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault.

- You can continue to ride. Bear in mind that the ABS function is not available. Take note of the more detailed information on certain situations that can lead to an ABS fault message (181).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS Pro failed



lights up yellow.



lights up.



ABS Pro failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS Pro control unit has detected a fault. The ABS Pro function is not available. The ABS function is available, subject to restrictions. ABS provides support only for braking in straight-ahead driving.

- You can continue to ride. Bear in mind the more detailed information on certain situations that can lead to an ABS Pro fault message (181).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DTC intervention



quick-flashes.

Possible cause:

The DTC has detected a degree of instability at the rear wheel and has intervened to reduce torque.

The indicator and warning light flashes longer than the duration of the DTC. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

- You can continue to ride.
Ride carefully and think well ahead.

DTC self-diagnosis not completed



slow-flashes.

Possible cause:



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the DTC function is not available until self-diagnosis has completed.

DTC switched off



lights up.



Off!



Traction control deactivated.

Possible cause:

The rider has switched off the DTC system.

- Switch on DTC. (➡ 104)

DTC restricted



lights up yellow.



lights up.



Traction control limited! Onward journey possible.

Ride carefully to next specialist workshop.

Possible cause:

The DTC control unit has detected a fault.

76 STATUS INDICATORS



ATTENTION

Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
 - Secure the toolkit.
- Do not damage the angular rate sensor.
 - Bear in mind that the DTC function is restricted.
 - You can continue to ride. Bear in mind the more detailed information on situations that can lead to a DTC fault (➡ 184).
 - Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DTC fault



lights up yellow.



lights up.



Traction control failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The DTC control unit has detected a fault.

- Bear in mind that the DTC function is not available or the functionality is subject to certain restrictions.
- You can continue to ride. Bear in mind the more detailed information on situations that can lead to a DTC fault (➡ 184).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

D-ESA fault

—with Dynamic ESA^{OE}



lights up yellow.



Spring strut adjustment faulty! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The D-ESA control unit has detected a fault. The damping and/or spring adjuster may be the cause. In this condition, the motorcycle may have too much damping and is uncomfortable to drive, especially on roads in poor condition. Alternatively,

the spring preload may be incorrectly adjusted.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Fuel down to reserve



Fuel reserve reached. Go to a filling station soon.



WARNING

Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Reserve fuel

approx. 3.5 l

- Refuel. (171)

Gear not trained

—with shift assistant Pro^{OE}



The gear indicator flashes. The Pro shift assistant is not available.

Possible cause:

—with shift assistant Pro^{OE}

The gearbox sensor is not fully trained.

- Select neutral N and allow the engine to idle for at least 10 seconds to teach the neutral position.
- Use clutch control to engage each gear in turn and ride for a minimum of 10 seconds in each gear.
- » The gear indicator stops flashing when the gearbox sensor has been trained successfully.
- When the gearbox sensor has been taught successfully, Gear Shift Assistant Pro works as described (191).
- If teaching is not successful, have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Hazard warning lights system is switched on



flashes green.



flashes green.

78 STATUS INDICATORS

Possible cause:

The driver has switched on the hazard warning lights system.

- Operate the hazard warning flashers. (► 96)

Service display

 If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow.

If the service is overdue, a yellow CC message is displayed. Exclamation marks also draw your attention to the displays for service, service appointment and countdown distance in the MY VEHICLE and SERVICE REQUIREMENTS menu screens.

 If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected.

Service due

 is displayed in white.

Service due! Have service performed by a specialist workshop.

Possible cause:

Service is due, because of either distance covered or time expired.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad retailer.

» The vehicle remains operationally reliable and road-worthy.

» The vehicle retains its value.

Service-due date has passed

 lights up yellow.

 is displayed in yellow.

Service overdue! Have service performed by a specialist workshop.

Possible cause:

Service is overdue because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad retailer.

» The vehicle remains operationally reliable and road-worthy.

» The vehicle retains its value.

OPERATION

04

IGNITION SWITCH/STEERING LOCK	82
IGNITION WITH KEYLESS RIDE	83
ELECTRONIC IMMOBILISER EWS	87
EMERGENCY-OFF SWITCH (KILL SWITCH)	88
INTELLIGENT EMERGENCY CALL	88
LIGHTING	92
MULTIFUNCTION DISPLAY	97
SETUP	99
DATE AND TIME	100
GENERAL SETTINGS IN THE MULTIFUNCTION DISPLAY	102
TRACTION CONTROL (DTC)	104
ELECTRONIC SUSPENSION ADJUSTMENT (D-ESA)	105
RIDING MODE	108
CRUISE CONTROL	111
ANTI-THEFT ALARM (DWA)	114
TYRE PRESSURE MONITORING (RDC)	118
HEATED GRIPS	118
SEAT	119

82 OPERATION

IGNITION SWITCH/STEERING LOCK

Keys


You receive two vehicle keys. If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (► 87). Ignition switch, fuel filler cap lock and seat lock are all operated with the same key.

- with case^{OA}
- with topcase^{OA}

If you wish you can arrange to have the cases and the topcase fitted with locks that can be opened with this key as well. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Engaging steering lock

- Turn the handlebars all the way to the left.

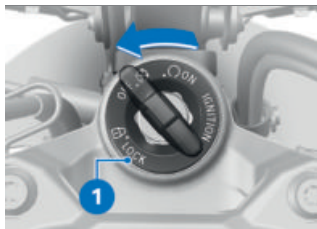

- Turn the key to position **1** while moving the handlebars slightly.

- » Ignition, lights and all function circuits switched off.
- » Steering lock engaged.
- » Key can be removed.

Switching on ignition



- Turn the key to position **1**.
- » Side lights and all function circuits switched on.
- » Engine can be started.
- » Pre-Ride-Check is performed. (► 161)
- » ABS self-diagnosis is in progress. (► 162)
- » DTC self-diagnosis is in progress. (► 163)

Switching off ignition



- Turn the key to position **1**.

- » Lights switched off.
- » Handlebars not locked.
- » Key can be removed.
- » Electrically powered accessories remain operational for a limited period of time.
- » The battery can be recharged via the vehicle socket.

IGNITION WITH KEYLESS RIDE

—with Keyless Ride^{OE}

Keys

 The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.

The light goes out as soon as the radio-operated key or the emergency key is found.

The light goes out briefly if the search times out without the radio-operated key or the emergency key being found.

You receive one radio-operated key and one spare key. If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (▮▮▮ 87).

Ignition, fuel filler cap and anti-theft alarm system all work with the radio-operated key. Seat lock, topcase and cases can be locked and unlocked manually.

 The vehicle cannot be started if the radio control key is not within range (e.g. key inside one of the cases or the topcase).

If the radio-operated key remains out of range the ignition is switched off after about 90 seconds to protect the battery.

It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket) and to have the emergency key with you as an alternative.



Range of the Keyless Ride radio-operated key

—with Keyless Ride^{OE}

approx. 1 m

Engaging steering lock Requirement

The handlebars are turned towards the left. Radio-operated key is within range.

84 OPERATION



- Press and hold down button **1**.
 - » The steering lock engages with an audible click.
 - » Ignition, lights and all function circuits switched off.
- Short-press button **1** to disengage the steering lock.

Switching on ignition Requirement

Radio-operated key is within range.



- There are **two** ways of activating the ignition.

Version 1:

- Short-press button **1**.
 - » Side lights and all function circuits are switched on.
 - with daytime riding light^{OE}
 - » Daytime riding light is switched on.◁
 - with additional headlight^{OE}
 - » LED auxiliary headlights are switched on.◁
 - » Pre-Ride-Check is performed. (▮▮▮ 161)
 - » ABS self-diagnosis is in progress. (▮▮▮ 162)
 - » DTC self-diagnosis is in progress. (▮▮▮ 163)

Version 2:

- Steering lock is engaged; press and hold down button **1**.
 - » The steering lock disengages.
 - with daytime riding light^{OE}
 - » Daytime riding light is switched on.◁
 - with additional headlight^{OE}
 - » LED auxiliary headlights are switched on.◁
 - » Side lights and all function circuits switched on.
 - » Pre-Ride-Check is performed. (▮▮▮ 161)
 - » ABS self-diagnosis is in progress. (▮▮▮ 162)
 - » DTC self-diagnosis is in progress. (▮▮▮ 163)

Switching off ignition Requirement

Radio-operated key is within range.



- There are **two** ways of deactivating the ignition.

Version 1:

- Short-press button **1**.
 - » Light is switched off.
 - » Handlebars (steering lock) are not locked.

Version 2:


- Turn the handlebars all the way to the left.
- Press and hold down button **1**.
 - » Light is switched off.
 - » The steering lock engages.

Battery of the radio-operated key is empty or loss of the radio-operated key

- If a key is lost or mislaid, consult the notes on the electronic immobiliser (**EWS**).
- If you happen to lose or mislay the radio-operated

key while on a journey, you can start the vehicle with the spare key.

- If the battery of the radio-operated key is empty, the vehicle can be started by simply inserting the folded radio-operated key into the ring aerial under the seat.

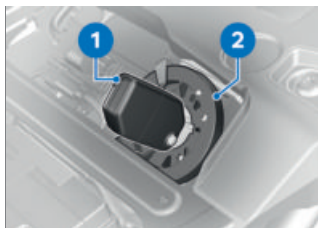

- Remove the seat. (➡ 119)
- Insert the spare key or folded-in radio-operated key with the empty battery **1** into ring aerial **2**.

 The spare key or the closed radio-operated key with the empty battery **must be inserted into** the opening in the ring aerial.



Time during which the engine has to be started.

The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

86 OPERATION

- » Pre-Ride-Check is performed.
- Key has been recognised.
- Engine can be started.
- Start the engine. (161)

Replacing battery of radio-operated key Requirement

The radio-operated key does not react because the battery is weak.

KEYLO! appears on the display.



DANGER

Swallowing a battery

Risk of injury or death

- An ignition key contains a button cell as its battery. Batteries or button cells, if swallowed, can cause serious or fatal injury within two hours, for example resulting from internal burns or caustic action.
- Keep ignition keys and batteries out of reach of children.
- If there is any suspicion that a battery or button cell has been swallowed or is inside a part of the body, seek medical assistance immediately.


- Change the battery.

-with Connectivity^{OE}



Remote key battery weak. Function limited. Change battery.<

- Change the battery.<

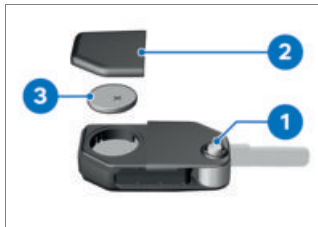

- Press button **1**.
» Key bit flips out.
- Push battery cover **2** up.
- Remove battery **3**.
- Dispose of the old battery in accordance with all applicable laws and regulations; do not attempt to dispose of batteries as domestic waste.



ATTENTION

Unsuitable or incorrectly inserted batteries

Component damage

- Use a battery compliant with the manufacturer's specifications.
- When inserting the battery, always make sure polarity is correct.

- Insert the new battery with the positive terminal up.



Battery type

For Keyless Ride radio-operated key

CR 2032

- Install battery cover **2**.
 - » Red LED in the instrument cluster flashes.
 - » The radio-operated key is again ready for use.

ELECTRONIC IMMOBILISER EWS

The on-board electronics access the data saved in the vehicle key via a ring aerial in the ignition lock / R/C ignition lock. The ignition is not enabled for starting until the engine control unit has recognised the ignition

key as "authorised" for your motorcycle.



A spare key attached to the same ring as the ignition key/radio-operated key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued. Always keep the spare key separate from the ignition key/radio-operated key.

If you lose a key, you can have it barred by your BMW Motorrad authorised retailer. In order to have a key barred you must bring along all the other keys belonging to the motorcycle.

The engine cannot be started by a barred ignition key, but an ignition key that has been barred can subsequently be reactivated.

You can obtain extra keys only through an authorised BMW Motorrad retailer. The ignition keys are part of an integrated security system, so the retailer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

88 OPERATION

EMERGENCY-OFF SWITCH (KILL SWITCH)



- 1 Emergency-off switch (kill switch)



WARNING

Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding.

The emergency off switch is a kill switch for switching off the engine quickly and easily.



- A Engine switched off
B Normal operating position (run)

INTELLIGENT EMERGENCY CALL

—with intelligent emergency call^{OE}

Emergency call via BMW

Press the SOS button in an emergency only.

The emergency call is not able to be ensured because of technical reasons due to unfavourable conditions, e.g. in areas where there is no mobile phone reception.

During an emergency call, the location of the vehicle, the choice of language and, if applicable, accident-related data are transmitted to BMW (11). Under unfavourable conditions, data transfer can be restricted or delayed. This can

lead to delayed processing of the emergency call.

Even if an emergency call using BMW is not possible, the system may make an emergency call to a public emergency call number. This depends on the respective mobile phone network and the national regulations.

Language for emergency call

Each vehicle has a language assigned to it depending on the market for which it is intended. The BMW Call Center answers in this language.


 A changeover of the language for the emergency call can only be performed by the BMW Motorrad partner. The language assigned to the vehicle varies from the selectable language the driver can choose as the display language in the multifunction display.

Manual emergency call Requirement

An emergency has occurred.
The vehicle is at a standstill.
The ignition is switched on.




- Open cover **1**.
- Short-press SOS button **2**.

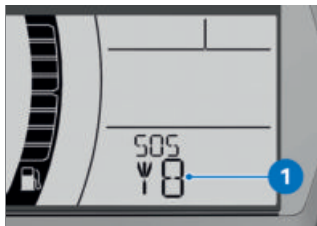


The time until transmission of the emergency call **1** is displayed. During that time, it is possible to cancel the emergency call.

90 OPERATION

—with Connectivity^{OE}

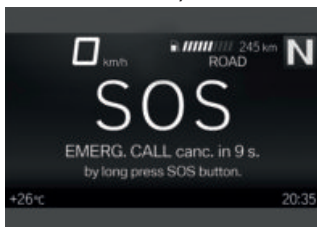


- » The time until transmission of the emergency call is displayed. During that time, it is possible to cancel the emergency call.
- To cancel an emergency call: Press SOS button **2** and hold it down for two seconds.
- Operate the emergency-off switch to stop the engine.
- Remove helmet.
- » After expiry of the timer, a voice contact to the BMW Call Center is established.

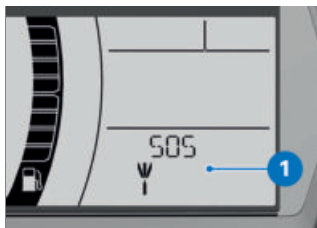

The reception symbol **1** indicates that the connection has been established.

—with Connectivity^{OE}

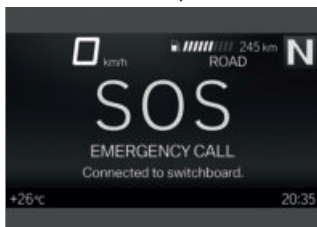

The connection was established.◀




- Provide information to the emergency services using the microphone **3** and speaker **4**.

Automatic emergency call

The intelligent emergency call is active after the ignition is switched on and reacts if a fall or crash occurs.

Emergency call in the event of a light fall


- A minor fall or a crash is detected.
- » An acoustic signal is sounded.

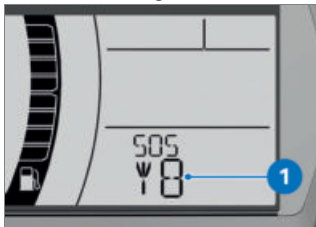

The time until transmission of the emergency call **1** is displayed. During that time, it is


possible to cancel the emergency call.

—with Connectivity^{OE}

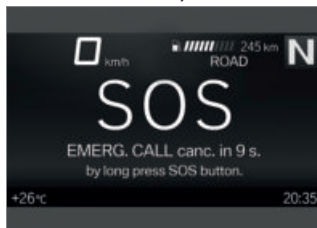


- » The time until transmission of the emergency call is displayed. During that time, it is possible to cancel the emergency call.
- To cancel an emergency call: Press the SOS button and hold it down for two seconds.
- If possible, remove helmet and stop engine.
- » A voice contact connection to the BMW Call Center is established.

92 OPERATION

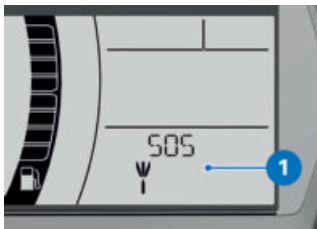


The reception symbol **1** indicates that the connection has been established.

—with Connectivity^{OE}

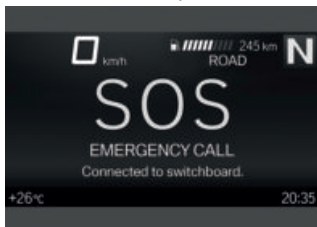

The connection was established.◀

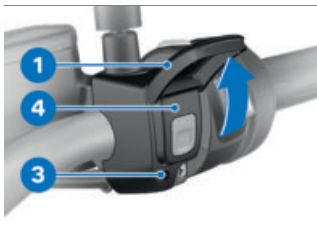

• Open cover **1**.

- Provide information to the emergency services using the microphone **3** and speaker **4**.

Emergency call in the event of a severe fall

- A severe fall or a crash is detected.
 - » The emergency call is placed automatically without delay.

LIGHTING

Low-beam headlight and sidelights

The side lights switch on automatically when the ignition is switched on.

-  The side lights place a strain on the battery; leave the ignition switched on for a limited time only.

The low-beam headlight switches on automatically under the following conditions:

- When the engine is started.
- If the vehicle is pushed while the ignition is on.

-  When the engine is not running you can switch on the lights by switching on the ignition and either switching on the high-beam headlight or operating the headlight flasher.

—with daytime riding light^{OE}
In daytime the daytime riding light can be switched on as an alternative to the low-beam headlight.

High-beam headlight and headlight flasher

- Switch on the ignition.
( 82)



- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

Headlight courtesy delay feature

- Switch off the ignition.



- Immediately after switching off the ignition, pull switch **1** back and hold it in that position until the headlight courtesy delay feature comes on.
» The vehicle's lights come on for one minute and then switch off automatically.
- This can be used to light up the path to the house door after the vehicle has been parked, for example.

Parking lights

- Switch off the ignition.
( 82)



- Immediately after switching off the ignition, push button **1** to the left and hold it

94 OPERATION

in that position until the parking lights come on.

- Switch the ignition on and off again to switch off the parking lights.

Auxiliary headlights


—with additional headlight^{OE}

Requirement

The auxiliary headlights are active only when the low-beam headlight is active.

 The auxiliary headlights have approval as fog lights and their use is permissible in bad weather conditions only. Always comply with the road traffic regulations in force in the country in which the vehicle is used.

- Start the engine. (➡ 161)

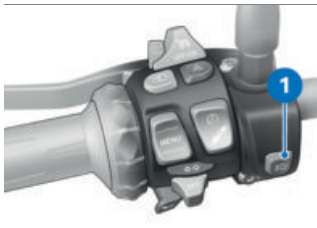

- Press button **1** to switch on the auxiliary headlights.

 The indicator light for the auxiliary headlight illuminates.

- Press button **1** again to switch off the auxiliary headlights.

Manual daytime riding light

—with daytime riding light^{OE}

Requirement

Automatic daytime riding light is switched off.



WARNING

Switching on the daytime riding light in the dark.

Risk of accident

- Do not use the daytime riding light in the dark.



By comparison with the low-beam headlight, the daytime running light makes the vehicle more visible to oncoming traffic. This improves daytime visibility.

- Start the engine. (➡ 161)
- In the SETUP menu, switch off the A DRL function.
—with Connectivity^{OE}
- Navigate to Settings, Vehicle settings, Lights and switch off the Auto. daytime light function. (For mode detailed information on how to operate the Multi-Controller,

see the section entitled “TFT display (► 125)”.<



- Press button **1** to switch on the daytime riding light.



The indicator light for the daytime riding light shows.

» The low-beam headlight and the front side lights are switched off.

- In the dark or in tunnels: Press button **1** again to switch off the daytime riding light and switch on the low-beam headlight and the front side lights.



If the high-beam headlight is switched on while the daytime riding light is on, the daytime riding light is switched off after approx. two seconds and the high-beam headlight, low-beam headlight and front side light are switched on. If the high beam headlight is switched off again, the daytime

running light is not automatically reactivated, but must be switched on again if required.

Automatic daytime riding light

—with daytime riding light^{OE}



WARNING

The automatic daytime riding light is not a substitute for the rider's personal judgement of the light conditions

Risk of accident

- Switch off the automatic daytime riding light in poor light conditions.



The changeover between daytime riding light and low-beam headlight including front side lights can be effected automatically.

- In the SETUP menu, switch on the A DRL function.

—with Connectivity^{OE}

- Navigate to **Settings**, **Vehicle settings**, **Lights** and switch on the **Auto. daytime light** function.



The indicator light for the automatic daytime riding light shows.

96 OPERATION

» If ambient brightness drops below a certain value, the low-beam headlight is automatically switched on (e.g. in a tunnel). When sufficient ambient brightness is detected, the daytime riding light is switched back on.



The indicator light for the daytime riding light shows if the daytime riding light is active.◀

Manual operation of the light when the automatic system is switched on

—with daytime riding light^{OE}

—If you press the button for the daytime riding light the daytime riding light is switched off and the low-beam headlight and front side lights are switched on (e. g. when you ride into a tunnel, and the response of the automatic daytime riding light to the change in ambient brightness is delayed).


—If you press the button again the daytime riding light is reactivated, in other words the daytime riding light is switched on again when ambient light is bright enough.

Operating hazard warning flashers

• Switch on the ignition.



The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary.

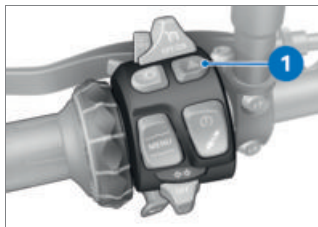

• Press button **1** to switch on the hazard warning lights system.

» Ignition can be switched off.

• To switch off the hazard warning lights system, switch on the ignition if necessary and press button **1** again.

Operate the turn indicators

• Switch on the ignition.



—with Connectivity^{OE}

• Navigate to **Settings**, **Vehicle settings** and select **Lights**.

• Switch **Comfort turn indicator on or off**.◀



- Push button **1** to the left or right, as appropriate, to switch on the turn indicators.
» The comfort turn indicators are cancelled automatically when the speed-dependent distance is covered.
- Alternatively: Press button **1** to cancel the turn indicators.

MULTIFUNCTION DISPLAY

Select the reading at the top

- Switch on the ignition.
(82)



- Short-press the MENU rocker button top section **1** to select the reading in top display line **3**.

The following values can be displayed:

- Odometer ODO
- Tripmeter 1 TRIP 1
- Tripmeter 2 TRIP 2
- Automatic tripmeter TRIP A is reset automatically 6 hours after the ignition is switched off and the date has changed.
- Call up the settings menu:
SETUP ENTER (is only displayed when the vehicle is stationary)

Select the reading at the bottom



- Short-press the MENU rocker button bottom section **2** to select the reading in bottom display line **4**.

The following values can be displayed:

- Range RANGE
- Average consumption CONS 1
- Average consumption CONS 2
- Current consumption CONS C
- Outside temperature EXTEMP

98 OPERATION

- Coolant temperature **ENG TMP**
- Average speed **SPEED Ø**
- with tyre pressure control (RDC)^{OE}
- Tyre pressure control **RDC <**
- Battery voltage **VOLTGE**
- Riding time **RD TIME**
- Date **DATE**

Reset the trip distance recorder

- Switch on the ignition.
- Select the tripmeter.
- » The tripmeter you want is displayed.



- Press and hold down MENU rocker button top section **1** until tripmeter **3** is reset.
- » Trip recorder reading = 0.0

Reset the average values

- Switch on the ignition.
- Press the bottom part of the MENU rocker button repeatedly until the desired

average consumption or the average speed is displayed.



- Press and hold down MENU rocker button bottom section **2** until displayed average value **4** is reset.

» Average value = - - - - -

Resetting the riding time

- Switch on the ignition.
- Repeatedly short-press the MENU rocker button bottom section **2** until ride time **RD TIME** is displayed.



- Press and hold down MENU rocker

button bottom section **2** until ride time RDTIME **3** is reset.

» Riding time starts at
00:00:00

SETUP

Select SETUP Requirement

The vehicle is at a standstill.



- Repeatedly short-press the MENU rocker button top section **1** until SETUP ENTER **3** is displayed.
- Long press MENU rocker button top section **1** to start SETUP.
- Repeatedly short-press MENU rocker button top section **1** to select the following parameters in SETUP in turn:
 - with anti-theft alarm (DWA)^{OE}
 - Automatically activate anti-theft alarm function when the ignition is switched off DWA ON or leave the auto-
 - matic function switched off DWA OFF.<◁
 - Set the time CLOCK.
 - Set the date DATE.
 - Switch upshift recommendation off ECOSFT OFF or on ECOSFT ON.
 - Adjust the brightness of the backlighting in the instrument cluster BRIGHT.
 - with daytime riding light^{OE}
 - Activate automatic daytime riding light A DRL ON or manual daytime riding light A DRL OFF.<◁
 - with tyre pressure control (RDC)^{OE}
 - Switch minimum pressure warning off RDC PRO OFF or on RDC PRO ON. The minimum pressure warning can only be switched off in off-road mode.<◁
 - Set units UNIT.
 - Reset displays RESET.
 - Exit SETUP EXIT.

Exit SETUP Requirement

There are four options for exiting SETUP.



- Long-press MENU rocker button top section **1**.

» SETUP ENTER is displayed.

- Alternatively: Repeatedly short-press the MENU rocker button top section **1** until SETUP EXIT is displayed.

- Long-press MENU rocker button bottom section **2**.

» SETUP ENTER is displayed.

- Alternatively: Switch ignition off and on again.

» SETUP ENTER is displayed.

- Alternatively: Ride off.



Speed for operation in
SETUP mode

max 10 km/h

» SETUP will be quit when the permissible speed for operation is exceeded.

» ODO is displayed.

» All settings will be saved whatever method is used to quit SETUP.


DATE AND TIME

Set the clock

Requirement

The vehicle is at a standstill.

- Switch on the ignition.
- Select SETUP. (▶▶ 99)
- » SETUP CLOCK is displayed.

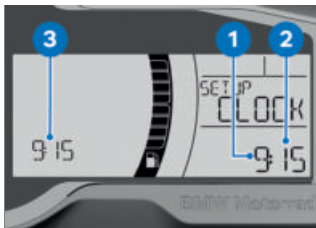

- Press and hold the bottom part of the MENU rocker button to set the hours.

» Hours number **1** flashes.

- Short-press the top section of the MENU rocker button to add one hour.

- Press the bottom part of the MENU rocker button briefly to go back an hour.

- Press and hold the bottom part of the MENU rocker button once the desired hour has been set.

» Minutes number **2** flashes.


- Short-press the top section of the MENU rocker button to add one minute.

- Press the bottom part of the MENU rocker button briefly to go back a minute.
- Press and hold the bottom part of the MENU rocker button once the desired minute has been set.
 - » The minutes **2** stop flashing.
- Checking the setting on the time display **3**.
 - » This completes the process.
- Press and hold down the top section of the MENU rocker button.
 - » **SETUP ENTER** is displayed.

Set the date Requirement

The vehicle is at a standstill.

- Switch on the ignition.
- Select **SETUP**. (▣➡ 99)
- » **SETUP DATE** is displayed.

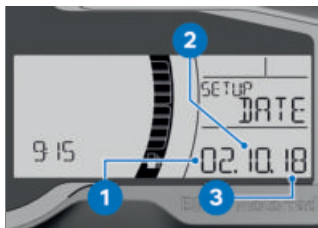

- Press the top part of the MENU rocker button briefly to advance the day.
- Press the bottom part of the MENU rocker button briefly to go back one day.
- Press the bottom part of the MENU rocker button and hold once the desired day has been set.
 - » Month **2** flashes.
- Press the top part of the MENU rocker button briefly to advance the month.
- Press the bottom part of the MENU rocker button briefly to go back one month.
- Press the bottom part of the MENU rocker button and hold once the desired month has been set.
 - » Year **3** flashes.
- Press the top part of the MENU rocker button briefly to advance the year.
- Press the bottom part of the MENU rocker button briefly to go back one year.
- Press the bottom part of the MENU rocker button and hold once the desired year has been set.
 - » Year **3** no longer flashes.
 - » This completes the process.

- Press and hold the bottom part of the MENU rocker button.
 - » Day **1** flashes.

102 OPERATION

- Press and hold the top part of the MENU rocker button.
» SETUP ENTER is displayed.

GENERAL SETTINGS IN THE MULTIFUNCTION DISPLAY

Adjusting the brightness of the backlighting in the instrument cluster

Requirement

The vehicle is at a standstill.

- Switch on the ignition.
- Select SETUP. (▶▶ 99)
- Repeatedly short-press the MENU rocker button top section **1** until SETUP BRIGHT is displayed.



- Repeatedly short-press MENU rocker button bottom section **2** until the desired brightness of the backlighting is set.
- Long-press MENU rocker button top section **1** to exit SETUP.
» SETUP ENTER is displayed.

Set the units Requirement

The vehicle is at a standstill.

- Switch on the ignition.
- Select SETUP. (▶▶ 99)
- Repeatedly short-press the MENU rocker button top section **1** until SETUP UNIT ENTER is displayed.
- Long-press the MENU rocker button bottom section **2** to activate SETUP UNIT.
» SETUP UNIT SPEED is displayed.
- Repeatedly short-press MENU rocker button top section **1** to select the following parameters in turn: SETUP UNIT in turn:
 - Change speed indicator unit between KMH and MPH
 - Change distance recorder unit between KM and MI
 - Change fuel consumption display between L/100, KM/L and MPG
 - Change tyre pressure control (RDC) unit between BAR, PSI and KPA
 - Change temperature display unit between °C and °F
 - Change clock display between 24H and 12H

–Change date format between DMY and MDY



- Short-press the MENU rocker button bottom section **2** until the desired unit **3** for speed or the tripmeter is set.
- To exit setup, repeatedly short-press the MENU rocker button top section **1** until SETUP UNIT EXIT is displayed.
- Long-press the MENU rocker button bottom section **2** to exit SETUP UNIT.
» SETUP RESET is displayed.



- To reset to the factory default setting, repeatedly

press the MENU rocker button top section **1** until SETUP UNIT RESET is displayed.

- Long press the MENU rocker button bottom section **2** until RESET **3** flashes.
» Units have been reset to the factory setting.
» SETUP UNIT EXIT is displayed.
- Long-press the MENU rocker button bottom section **2** to exit SETUP UNIT.
» SETUP RESET is displayed.

Reset SETUP

- Switch on the ignition.
- Select SETUP. (➡ 99)



- Repeatedly short-press the MENU rocker button top section **1** until SETUP RESET is displayed.
- Press and hold down the MENU rocker button bottom section **2** until SETUP is reset.

104 OPERATION

 Date and time can also be reset to a default value by using the **SETUP RESET** function.

» A time of 12:00 is displayed.

- Long-press **MENU** rocker button top section **1** to exit **SETUP**.


» **SETUP ENTER** is displayed.

TRACTION CONTROL (DTC)

Switching off DTC

- Switch on the ignition.

 Dynamic Traction Control (DTC) can also be switched off when the motorcycle is in motion.

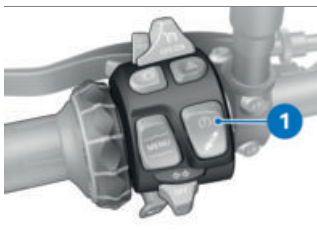

- Press and hold button **1** until the DTC indicator light changes its status.

—with Connectivity^{OE}

Immediately after button **1** is pressed, the DTC system status **ON** is displayed.◁



lights up.

—with Connectivity^{OE}

Possible DTC system status **OFF!** is displayed.◁

- Release button **1** once the status has changed.



remains lit.

—with Connectivity^{OE}

The new DTC system status **OFF!** appears briefly on the display.◁

» The DTC function is switched off.

Switch on DTC



- Press and hold down button **1** until the DTC indicator light changes status.

—with Connectivity^{OE}

Immediately after button **1** is pressed, the DTC system status **OFF!** is displayed.◁



goes out; if self-diagnosis has not completed it starts flashing.

—with Connectivity^{OE}

Possible DTC system status **ON** is displayed.◁

- Release button **1** once the status has changed.



remains off or continues to flash.

—with Connectivity^{OE}

The new DTC system status **ON** appears briefly on the display.◁

» The DTC function is switched on.

- You also have the option of switching the ignition off and then on again.



A DTC fault has occurred if the DTC indicator light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 5 km/h

- For more information on Dynamic Traction Control, see the section entitled "Engineering details" (▮ 183).

ELECTRONIC SUSPENSION ADJUSTMENT (D-ESA)

—with Dynamic ESA^{OE}

Possible settings


Dynamic ESA (electronic chassis and suspension adjustment) enables you to adjust rear-wheel damping to the road surface. Three damper settings and three spring preload levels are available.

Viewing suspension settings




- Switch on the ignition. (▮ 82)
- Short-press button **1** to view the current setting.

106 OPERATION

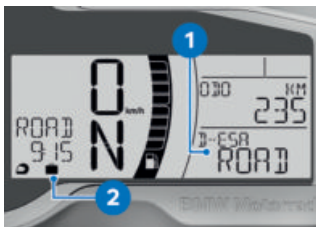

The damping action is displayed on the multifunction display in area 1; the spring preload is displayed in area 2.

—with Connectivity^{OE}

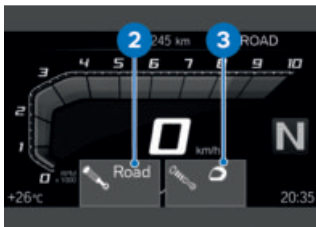

Immediately after button 1 is pressed, the settings for damping 2 and spring preload 3 are displayed.◁

» The setting shows briefly, then disappears automatically.

Adjust the suspension

- Switch on the ignition.
(82)



- Short-press button 1 to view the current setting.

To adjust damping:

- Repeatedly short-press button 1 until the setting you want to use is displayed.

You can adjust the damping characteristic while the motorcycle is on the move.

—with Connectivity^{OE}



Selection arrow 4 is displayed.

◁

» The selection arrow 4 disappears after the status is changed.


—with Connectivity^{OE}

The following settings are available:

- Road: Damping for comfortable on-road riding
- Dynamic: Damping for dynamic on-road riding
- Enduro: Damping for off-road riding. Available only in the **ENDURO** riding mode and not adjustable in this riding mode.

—with Connectivity^{OE}

A message is issued if a setting is not possible in the selected riding mode. Example: In **ENDURO** riding mode damp. not adjustable.<

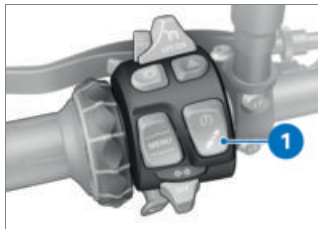

To adjust spring preload:

- Start the engine. (161)
- Repeatedly long-press button **1** until the setting you want to use is displayed.

 You cannot adjust spring preload while the motor-cycle is on the move.

The following settings are available:

-  One-up riding
-  One-up with luggage
-  Two-up (with luggage)

—with Connectivity^{OE}

The following message is displayed if it is not possible to adjust a setting: Load adjustment only avail. stopped.<

—with Connectivity^{OE}



Selection arrow **4** is displayed.
<

» The selection arrow **4** disappears after the status is changed.

108 OPERATION

- Wait for the mechanism to complete all adjustments before you ride off.
- » The settings for damping and spring preload shown on the display are automatically accepted if you allow a certain length of time to pass without pressing button 1.

RIDING MODE

Using riding modes

BMW Motorrad has developed operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

Standard

- RAIN: Riding on a rain-wet road surface.
 - ROAD: Riding on a dry road surface.
 - with riding modes Pro^{OE}
- #### with Pro riding modes
- DYNAMIC: Dynamic riding on a dry road surface.
 - ENDURO: Riding off-road with road tyres.

The respective optimum interplay of engine characteristic, ABS control and DTC control is provided for each of these scenarios.



See the section entitled "Engineering details" for more information on the selectable riding modes.

–with Dynamic ESA^{OE}

The chassis and suspension adjustment can also be adjusted in the scenario selected.

Riding-mode preselection

–with riding modes Pro^{OE}

–with Connectivity^{OE}

Riding mode preselection is a function for shortlisting the rider's subset of preferred riding modes.

Between two and a maximum of four riding modes can be added to the riding modes preselection shortlist.

Factory setting:

RAIN, ROAD, DYNAMIC and ENDURO

Configure riding-mode preselection

–with riding modes Pro^{OE}

–with Connectivity^{OE}

- Switch on the ignition.
( 82)
- Navigate to Settings, Vehicle settings, Driving mode preselection.

- Activate or deactivate riding modes for riding mode preselection.
- » The activated riding modes are available for subsequent selection.
- » If fewer than two riding modes are preselected, this message is displayed:
Action not possible.
Min. number reached.
- » The list of preselected riding modes is retained in memory, even after the ignition is switched off.

Select the riding mode

- Switch on the ignition.
( 82)




- Press button 1.



The selection arrow **1** and the first selectable riding mode **2** are displayed.

—with Connectivity^{OE}

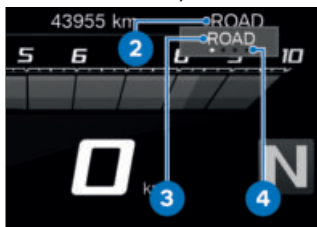

The riding mode currently active **2** is sent to the back and is displayed in the pop-up **3**. The guide **4** indicates how many riding modes are available.◀

110 OPERATION



ATTENTION

Activation of the off-road mode (ENDURO) when riding on-road

Risk of crash due to lack of stability when the vehicle brakes in the control range of ABS or accelerates in that of DTC.

- Switch on the off-road mode (ENDURO) for off-roading only.
- Repeatedly press button **1** until the riding mode you want is displayed.
- » With the vehicle at a standstill, the selected mode is activated after approximately 2 seconds.
- » The following conditions must be satisfied for activation of a new riding mode while riding:
 - Throttle grip is in idle position.
 - Brake is not applied.

– Adaptive cruise control deactivated.

» The selected riding mode is retained with the engine-characteristic, ABS, DTC and Dynamic ESA adaptation settings even after the ignition has been switched off.

– with riding modes Pro^{OE}

– with Connectivity^{OE}



ATTENTION

Activation of the off-road mode (ENDURO) when riding on-road

Risk of crash due to lack of stability when the vehicle brakes in the control range of ABS or accelerates in that of DTC.

- Switch on the off-road mode (ENDURO) for off-roading only.

- Repeatedly press button **1** until the riding mode you want is displayed in the pop-up.

 The intervention of riding dynamics control systems can be restricted, depending on which riding mode is selected and how the selected mode is configured.

Possible restrictions are indicated by a pop-up message, for example Warning! ABS & DTC setting..

See the section entitled "Engineering details" for more information on riding dynamics control systems such as ABS and DTC.

- » The availability of the riding modes depends on the custom configuration of the riding modes preselection function.
- » With the vehicle at a standstill, the selected mode is activated after approximately 2 seconds.
- » The following conditions must be satisfied for activation of a new riding mode while riding:
 - Throttle grip is in idle position.
 - Brake is not applied.
 - Cruise control is deactivated.

- » The selected riding mode is retained with the engine-characteristic, ABS, DTC and Dynamic ESA adaptation settings even after the ignition has been switched off.◀

CRUISE CONTROL

Display when adjusting settings (Speed Limit Info not active)

- with cruise control^{OE}
- with Connectivity^{OE}



Symbol **1** for cruise control is displayed in the Pure Ride view and in the top status line.◀

Display when adjusting settings (Speed Limit Info active)

- with cruise control^{OE}
- with Connectivity^{OE}

112 OPERATION



Symbol **1** for cruise control is displayed in the Pure Ride view and in the top status line.◀

Switching on cruise control

—with cruise control^{OE}

Requirement


Adaptive cruise control is not available until after you exit the Enduro riding mode.



- Slide switch **1** to the right.
- » Button **2** is operational.

Setting road speed

—with cruise control^{OE}

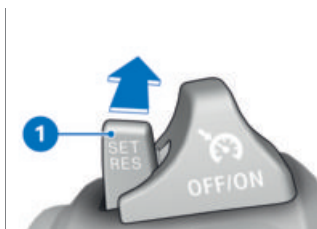

- Short-push button **1** forward.



Adjustment range for cruise control (gear-dependent)

15...190 km/h



shows.

» The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating

—with cruise control^{OE}



- Short-push button **1** forward.

- » Speed is increased by approx. 1 km/h each time you push the button.
- Push button **1** forward and hold it in this position.
- » The vehicle accelerates smoothly.
- » The current speed is maintained and saved if button **1** is not pushed again.

Decelerating

—with cruise control^{OE}



- Short-push button **1** back.
- » Speed is reduced by approx. 1 km/h each time you push the button.
- Push button **1** back and hold it in this position.
- » The vehicle decelerates smoothly.
- » The current speed is maintained and saved if button **1** is not pushed again.

Deactivating cruise control

—with cruise control^{OE}

- Brake, pull the clutch lever or turn the throttle grip (close the throttle by turning the grip back past the idle position) to deactivate adaptive cruise control.
- » Indicator light for adaptive cruise control goes out.

Resuming former cruising speed

—with cruise control^{OE}



- Short-push button **1** back to return to the speed saved beforehand.

 Opening the throttle does not deactivate cruise control. When the twistgrip is released the motorcycle decelerates only to the speed saved in memory, even if the rider intended slowing to a lower speed.


114 OPERATION



shows.

Switching off cruise control

—with cruise control^{OE}

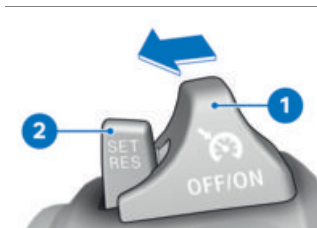

- Slide switch **1** to the left.
 - » The system is deactivated.
 - » Button **2** is disabled.


ANTI-THEFT ALARM (DWA)

Activation


—with anti-theft alarm (DWA)^{OE}

- Switch on the ignition.
(82)
- Set up the alarm system.
(116)
- Switch off the ignition.
 - » If the alarm system is activated, then the alarm system will be automatically activated when the ignition is switched off.
 - » Activation takes approximately 30 seconds to complete.
 - » Turn indicators flash twice.

- » Confirmation tone sounds twice (if programmed).
 - » Anti-theft alarm is active.
- with Keyless Ride^{OE}

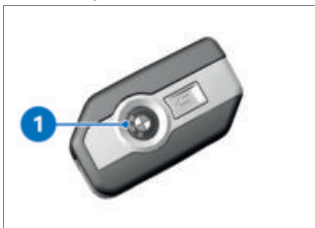

- Switch off the ignition.
- Press button **1** on the radio-operated key twice.
 - » Activation takes approximately 30 seconds to complete.
 - » Turn indicators flash twice.
 - » Confirmation tone sounds twice (if programmed).
 - » Anti-theft alarm is active.

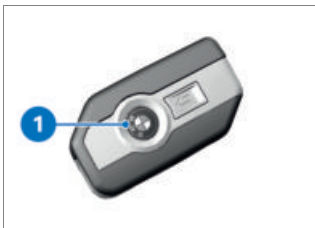

- To deactivate the motion sensor (for example if you are about to transport the motorcycle on a train and the sway-movement of the mov-

ing train could trip the alarm), press button **1** on the radio-operated key again during the activation phase.

- » Turn indicators flash three times.
- » Confirmation tone sounds three times (if programmed).
- » Motion sensor has been deactivated.◀

Alarm signal

–with anti-theft alarm (DWA)^{OE}

A DWA alarm can be triggered by:

- Motion sensor
- Switch-on attempt with an unauthorised vehicle key.
- Disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - acoustic alarm only, the turn indicators do not flash)


 When the radio-operated key is within range, an alarm triggered by the tilt sensor is suppressed.

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered

if the system is disconnected from the motorcycle's battery.

An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of acoustic alarm tone can be set by an authorised BMW Motorrad retailer.

–with Keyless Ride^{OE}

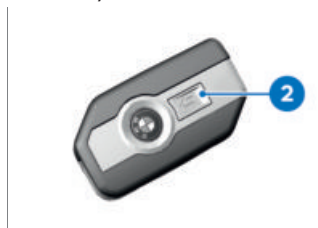

You can cancel an alarm at any time by pressing button **2** on the radio-operated key; this does not deactivate the alarm system.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the alarm for one minute.

116 OPERATION

Light signals issued by the indicator light:

- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised vehicle key
- Flashes 4x: Disconnection of the anti-theft alarm from the vehicle's battery
- Flashes 5x: Motion sensor 3

Deactivation

-with anti-theft alarm (DWA)^{OE}

- Switch on the ignition.
( 82)
 - » Turn indicators flash once.
 - » Confirmation tone sounds once (if programmed).
 - » DWA has been switched off.
- with Keyless Ride^{OE}



- Press button **2** on the radio-operated key once.

 If the alarm function is deactivated by the radio-operated key and the ignition is not subsequently switched on,

the alarm function is automatically reactivated after approx. 30 seconds if Arm automatically is switched on.

- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » DWA has been switched off.◀

Adjusting the alarm system

-with anti-theft alarm (DWA)^{OE}

- Switch on the ignition.
( 82)
- Select SETUP. ( 99)
- Repeatedly short-press the MENU rocker button top section **1** until SETUP DWA is displayed.



- Short-press the MENU rocker button bottom section **2** to toggle between DWA ON **3** and DWA OFF.

The following settings are available:

- DWA ON: The DWA anti-theft alarm is active and will be

armed automatically when the ignition is switched off.

–DWA OFF: The DWA anti-theft alarm is deactivated.

• Long-press the MENU rocker button top section **1** to exit SETUP.

» SETUP ENTER is displayed.

–with Connectivity^{OE}

• Switch on the ignition.

( 82)◀

• Navigate to Settings, Vehicle settings, Alarm system.

» The following adaptation settings are available:

–Adapting Warning signal

–Switch Tilt sensor on or off

–Switch Arming tone on or off

–Switch Arm automatically on or off

» Possibilities for adjustment

( 117)

Possibilities for adjustment

–with anti-theft alarm (DWA)^{OE}

The alarm system can be adapted to your particular needs in the following respects by your authorised BMW Motorrad Retailer:

–Confirmation alarm tone after activation/deactivation of the anti-theft alarm (DWA) in addition to visual confirmation by turn indicators flashing.

–Rising and falling or intermittent alarm tone.

–with Connectivity^{OE}

Warning signal: Set the increasing and decreasing or intermittent alarm tone.

Tilt sensor: Activate tilt sensor to monitor the inclination of the vehicle. The anti-theft alarm is tripped if any attempt is made to steal a wheel or lift the vehicle for towing, for example.

 When the vehicle is going to be transported, deactivate the tilt sensor to prevent the anti-theft alarm (DWA) from being triggered.

Arming tone: In addition to turn indicators flashing, alarm tone sounds as confirmation of activation/deactivation of the DWA.

Arm automatically: Automatic activation of the alarm function when the ignition is switched off.

118 OPERATION

Default settings

The anti-theft alarm ships with the following default settings:

- Confirmation alarm tone after having activated/deactivated the DWA: no.
- Alarm tone: intermittent.

TYRE PRESSURE MONITORING (RDC)

- with tyre pressure control (RDC)^{OE}
- with riding modes Pro^{OE}

Switch the target-pressure warning on or off

- The system can be set to issue a specified-pressure warning when tyre pressure drops to the defined minimum.
- Select SETUP. (🔑 99)
- To switch off: Select RDC PRO ON.
 - » The specified-pressure warning can be switched off only in off-road mode.
- Select RDC PRO OFF.
- with Connectivity^{OE}
- Navigate to Settings, Vehicle settings, RDC.
- Switch Target pressure warn. on or off.◀

HEATED GRIPS

- with heated grips^{OE}

Operating heated handlebar grips

- Start the engine. (🔑 161)

 The heating in the heated handlebar grips can be activated only when the engine is running.

 The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.



- Repeatedly press button 1 until desired heating stage 2 appears in front of heated grip symbol 3.

The handlebar grips can be heated to three levels. High

heating power is for heating the grips quickly: it is advisable to switch back to a lower heating power as soon as the grips are warm.


 high heating power

 medium heating power

 low heating power

» The selected heating stage will be saved if you allow a certain length of time to pass without making further changes.

—with Connectivity^{OE}

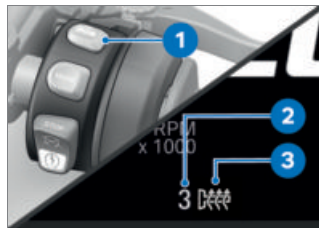

- Repeatedly press button **1** until desired heating stage **2** appears in front of heated grip symbol **3**.

The handlebar grips can be heated to three levels. High heating power is for heating the grips quickly: it is advisable to switch back to a lower heat-

ing power as soon as the grips are warm.

 high heating power

 medium heating power

 low heating power


» The selected heating stage will be saved if you allow a certain length of time to pass without making further changes.◁

- To switch off the heated grips, repeatedly press button **1** until heated grip symbol **3** disappears.

SEAT

Removing seat Requirement


Place the motorcycle on its stand on firm, even ground.

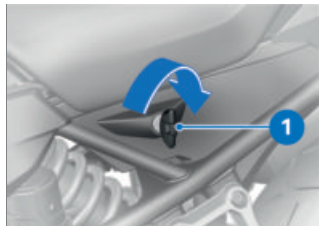

- Turn seat lock **1** to the right with the vehicle key.


120 OPERATION

» Seat bench is unlocked.

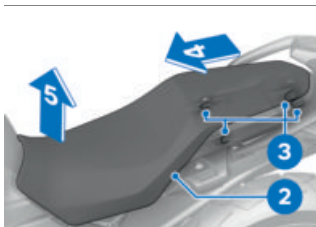

- Push seat **2** in direction of arrow **4** out of holders **3**.
- Lift seat off in direction of arrow **5** and set down on its rubber buffers on a clean surface.

Installing seat

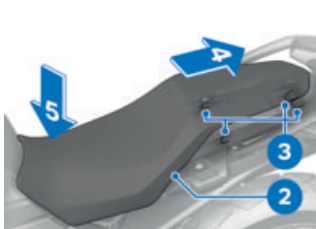

- Push seat **2** in direction of arrow **4** into holders **3**.
 - Press seat firmly in direction of arrow **5**.
- » The seat bench audibly engages.

TFT DISPLAY

05

GENERAL NOTES	124
PRINCIPLE	125
PURE RIDE VIEW	131
GENERAL SETTINGS	132
BLUETOOTH	134
MY VEHICLE	137
ON-BOARD COMPUTER	140
NAVIGATION	140
MEDIA	142
TELEPHONE	143
DISPLAY SOFTWARE VERSION	144
DISPLAY LICENCE INFORMATION	144

124 TFT DISPLAY

GENERAL NOTES

Warnings



WARNING

Operation of a smartphone while riding the vehicle

Risk of accident

- Always comply with the road traffic regulations in force where you are riding.
- Do not use a smartphone while riding. This applies with the exception of applications without operation, such as hands-free telephony.



WARNING

Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.

Connectivity functions

Connectivity functions include media, telephony and navigation. Connectivity functions can be used when the TFT display is paired with a mobile end device and a helmet (134). For more information on the Connectivity functions go to: **bmw-motorrad.com/connectivity**



If the fuel tank is between the mobile device and the TFT display, the Bluetooth connection may be restricted. BMW Motorrad recommends storing the device above the fuel tank (e.g. in your jacket pocket).



Depending on the mobile device, the scope of the Connectivity functions may be restricted.

BMW Motorrad Connected app

The BMW Motorrad Connected app enables the user to call up usage data and vehicle status information. For some functions such as navigation, for example, the app has to be installed on the mobile device and paired to the TFT display. The app is used to start route

guidance and adjust the navigation.


 On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

Currency

Updates of the TFT display subsequent to the date of publication are possible. Because of this, your vehicle may differ from the information supplied in the rider's manual. Up-to-date information is available at **bmw-motorrad.com/service**.

PRINCIPLE

Controls

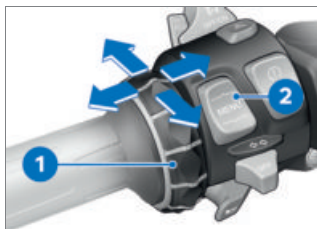

All display content is controlled by means of Multi-Controller **1** and MENU rocker button **2**. Depending on the context, the following functions are possible.

Multi-Controller functions

Turn the Multi-Controller up:

- Move the cursor up in lists.
- Adjust settings.
- Increase volume.

Turn the Multi-Controller down:

- Move the cursor down in lists.
- Adjust settings.
- Decrease volume.

Tilt the Multi-Controller to the left:

- Activate the function appropriate to the Check Control messages.
- Activate the function to the left or back.
- Go back to the Menu view after making the settings.
- In Menu view: Change up one level.
- In the My Vehicle menu: advance one menu screen.

Tilt the Multi-Controller to the right:

- Confirm selection.
- Confirm settings.
- Advance a menu step.
- Scroll to the right in lists.
- In the My Vehicle menu: advance one menu screen.

126 TFT DISPLAY

MENU rocker button functions

 Instructions given by the navigation system are displayed in a dialogue box if the Navigation menu has not been called up. Operation of the MENU rocker button is temporarily restricted.

Short-press the top section of the MENU button:

- In Menu view: Change up one level.
- In Pure Ride view: Change the display for status line.

Long-press the top section of the MENU button:

- In Menu view: Call up Pure Ride view.
- In Pure Ride view: Change operating focus to the Navigator.


Short-press the bottom section of the MENU button:

- Change down a level.
- No function if the lowest hierarchical level has been reached.


Long-press the bottom section of the MENU button:

- Change back to the last menu after a previous menu change effected by long-pressing the top section of the MENU rocker button.

Operating pointers in the main menu

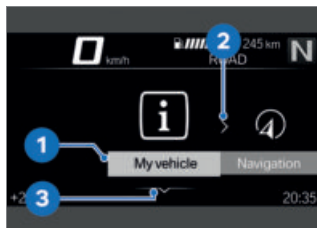

Operating pointers show whether interactions are possible, and which ones.

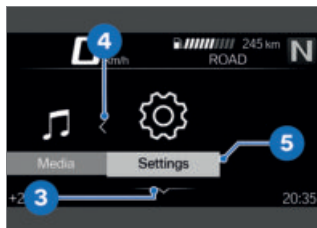


Meaning of the operating pointers:

- Operating pointer 1: Left end reached.
- Operating pointer 2: You can scroll to the right.
- Operating pointer 3: You can scroll down.
- Operating pointer 4: You can scroll to the left.
- Operating pointer 5: Right end reached.

Operating pointers in submenus

In addition to the operating pointers in the main menu, there are additional operating pointers in the submenus.

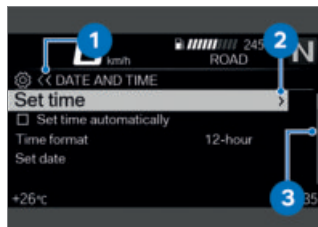


Meaning of the operating pointers:

- Operating pointer **1**: The current display is in a hierarchical menu. The number of symbols indicates up to three submenu levels. The colour of the symbol changes, depending on whether you can return to a higher level.
- Operating pointer **2**: One more submenu level can be accessed.
- Operating pointer **3**: There are more entries than can be displayed.

Display Pure Ride view

- Long-press the top section of the MENU rocker button.

Switching functions on and off

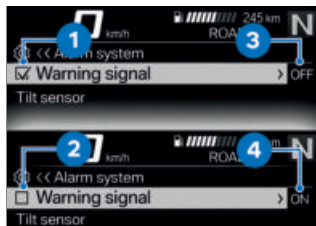


Some menu items have a check box in front of them. The check box shows whether the function is on or off. Action symbols after the menu items indicate what action you can trigger by short-tilting the Multi-Controller to the right.

Examples for switching on and off:

- Symbol **1** shows that the function is switched on.
- Symbol **2** shows that the function is switched off.
- Symbol **3** shows that the function can be switched off.
- Symbol **4** shows that the function can be switched on.

128 TFT DISPLAY

Calling up menu

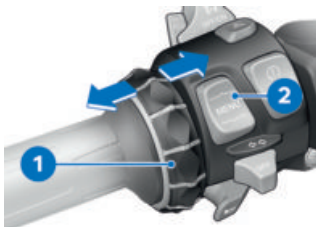

- Display the Pure Ride view. (127)
- Short-press the bottom section of button 2.


The following menus can be called up:

-My vehicle
-Navigation
-Media
-Telephone
-Settings

- Repeatedly short-push Multi-Controller 1 to the right until the menu item you want is highlighted.
- Short-press the bottom section of button 2.


 The Settings menu can only be called up when the vehicle is stationary.

Moving cursor in lists

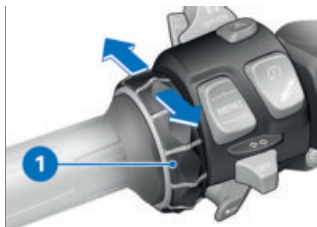

- Call up a menu. (128)
- To move the cursor down in a list, turn Multi-Controller 1 down until the entry you want is highlighted.
- To move the cursor up in a list, turn Multi-Controller 1 up until the entry you want is highlighted.

Confirming selection

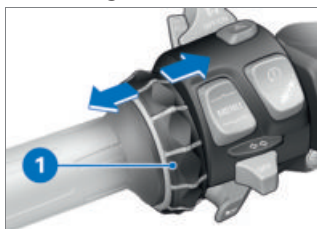

- Select the desired entry.
- Short-push Multi-Controller 1 to the right.

Call up the last menu used

- In Pure Ride view: Long-press the bottom section of the MENU rocker button.
- » The last menu used is called up. The last entry highlighted is selected.

Change of operating focus

- with preparation for navigation system^{OE}

If the Navigator is connected, you can toggle between operation of Navigator and TFT display.


Change the operating focus

- with preparation for navigation system^{OE}

- Secure the navigation device. (III► 246)
- Display the Pure Ride view. (III► 127)
- Long-press the top section of the MENU rocker button.
- » Operating focus switches to the Navigator or the TFT display, as applicable. The active device is highlighted on the left in the top status line. Operator actions affect the currently active device until the operating focus is changed again.
- » Operating navigation system (III► 248)

System status displays

The system status is displayed in the lower area of the menu if a function is switched on or off.

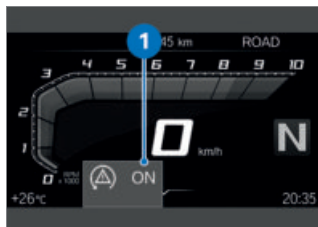

Examples of what the system statuses mean:

- System status 1: DTC function is switched on.

Change the display for the status line

Requirement

The vehicle is at a standstill. The Pure Ride view is displayed.

- Switch on the ignition. (III► 82)
- » The TFT display shows all the information necessary for riding on public roads from the on-board computer (e.g. TRIP 1) and the trip computer (e.g. TRIP 2). The information can be displayed in the top status line.

130 TFT DISPLAY

—with tyre pressure control (RDC)^{OE}

» Information from the tyre pressure monitoring can also be displayed.<

- Select the content of the top status line. (11111 130)



- Long-press button **1** to obtain the Pure Ride view.
- Repeatedly short-press button **1** to select the value in the top status line **2**.

The following values can be displayed:



Total distance



Current distance 1



Current distance 2



Consumption 1 (Average)



Consumption 2 (Average)



Riding time 1



Riding time 2



Break 1



Break 2



Speed 1 (Average)



Speed 2 (Average)

—with tyre pressure control (RDC)^{OE}



Tyre pressure<



Fuel tank level




Range

Select the content of the top status line

- Navigate to Settings, Display, Status line content.
- Switch on the desired displays.
- » You can switch between the selected displays in the top status line. If no displays are selected, only the range will be displayed.

Adjusting settings

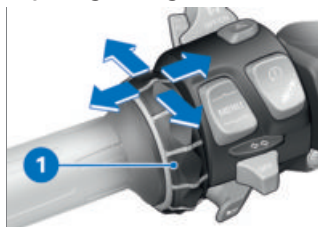

- Select and confirm the desired settings menu.
 - Turn Multi-Controller 1 down until the setting you want is highlighted.
 - If an operating pointer shows, tilt Multi-Controller 1 to the right.
 - If no operating pointer shows, tilt Multi-Controller 1 to the left.
- » The setting is saved.

Switch Speed Limit Info on or off

Requirement

Vehicle is connected to a compatible mobile device. The BMW Motorrad Connected app is installed on the mobile device.


- Speed Limit Info shows the maximum speed permitted at the time, if this information is made available by the

publisher of the map material in the navigation system.

- Navigate to Settings, Display.
- Switch Speed Limit Info on or off.

PURE RIDE VIEW

Rev. counter

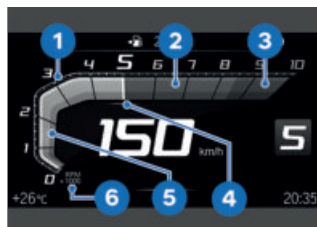

- 1 Scale
- 2 Low engine speed range
- 3 Upper/red engine speed range
- 4 Needle
- 5 Secondary indicator
- 6 Unit for engine speed display:
1000 revolutions per minute

132 TFT DISPLAY

Range



The range readout **1** indicates how far you can ride with the fuel remaining in the tank. This distance is calculated on the basis of average consumption and the quantity of fuel on board.

- When the vehicle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly. This is the reason why the range is recalculated only when the side stand is in the retracted position.
- The range is shown together with a warning once the fuel reserve has been reached.
- After a refuelling stop, range is recalculated if the amount of fuel in the tank is greater than the reserve quantity.
- The calculated range is only an approximate figure.

Recommendation to upshift



The recommendation to upshift in the status line **1** or in the Pure Ride view **2** indicates the best time to upshift economically.

GENERAL SETTINGS

Adjusting volume

- Connect the rider's and passenger's helmets. (136)
- Increase volume: Turn the Multi-Controller up.
- Reduce volume: Turn the Multi-Controller down.
- Mute: Turn the Multi-Controller all the way down.

Set the date

- Switch on the ignition. (82)
- Navigate to Settings, System settings, Date and time, Set date.
- Set Day, Month and Year.
- Confirm setting.

Set date format

- Navigate to Settings, System settings, Date and time, Date format.
- Select the desired setting.
- Confirm setting.

Set the clock

- Switch on the ignition.
( 82)
- Navigate to Settings, System settings, Date and time, Set time.
- Set Hour and Minute.

Set the time format

- Navigate to Settings, System settings, Date and time, Time format.
- Select the desired setting.
- Confirm setting.

Set units of measurement

- Navigate to Settings, System settings, Units.

The following units of measurement can be set:

- with tyre pressure control (RDC)^{OE}
- Pressure ◀
- Temperature
- Speed
- Consumption

Set the language

- Navigate to Settings, System settings, Language.

The following languages can be set:

- German
- English (UK)
- English (US)
- Spanish
- French
- Italian
- Dutch
- Polish
- Portuguese (Brazil)
- Portuguese (Portugal)
- Turkish
- Romanian
- Russian
- Ukrainian
- Chinese
- Japanese
- Korean
- Thai

Adjusting brightness

- Navigate to Settings, Display, Brightness.
- Adjust display brightness.
- » When ambient brightness drops below a defined threshold, the display is dimmed to the brightness set here.

134 TFT DISPLAY

Reset all settings

- All the settings in the `Settings` menu can be reset to the factory settings.
- Call up the `Settings` menu.
- Select `Reset all` and confirm.

The settings in the following menus are reset:

- Vehicle settings
- System settings
- Connections
- Display
- Information

» Existing Bluetooth connections are not deleted.

BLUETOOTH

Short-range wireless technology

Bluetooth is a short-range wireless technology. Bluetooth devices are short-range devices transmitting on the license-free ISM band (Industrial, Scientific, Medical) between 2.402...2.480 GHz. They can be operated anywhere in the world without a licence being required.

Although Bluetooth is designed to establish and sustain robust connections over short distances, as with every other wireless technology disruptions

are possible. Interference can affect connections or connections can sometimes fail. Particularly when multiple devices operate in a Bluetooth network, with wireless technology of this nature it is not possible to ensure fault-free communications in every situation.

Possible sources of interference:

- interference zones due to transmission masts and similar.
- devices with non-compliant Bluetooth implementations.
- proximity of other Bluetooth-compatible devices.
- Shielding by metal objects or bodies.

Pairing

Two Bluetooth devices have to recognise each other before they can communicate. This process of mutual recognition is known as pairing. When two devices have paired they remember each other, so the pairing process is conducted only once, on initial contact.



On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

During the pairing process, the TFT display searches for other Bluetooth-compatible devices within its reception range. The conditions that have to be satisfied before the audio system can recognise another device are as follows:

- The device's Bluetooth function must be active
- The device must be "visible" to others
- Other Bluetooth-compatible devices must be OFF (e.g. mobile phones and navigation systems).

Please consult the operating instructions for your communication system.

Pairing

- Navigate to **Settings, Connections**.

» Bluetooth connections can be established, managed and deleted in the **CONNECTIONS** menu. The following Bluetooth connections are displayed:

- Mobile device
- Rider's helmet
- Passenger helm.

The connection status for mobile devices is displayed.

Connect mobile device

- Perform pairing. (▶▶ 135)
- Activate the mobile device's Bluetooth function (see mobile device's operating instructions).
- Select **Mobile device** and confirm.
- Select **Pair new mobile device** and confirm.

Mobile devices are being searched for.



The Bluetooth symbol flashes in the bottom status line during pairing.

Mobile devices found are displayed.

- Select and confirm mobile device.
- Follow the instructions on the mobile device.
- Confirm that the code matches.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (▶▶ 262)
- » Depending on the mobile device, telephone data is

136 TFT DISPLAY

transferred to the vehicle automatically.

- » Telephone data (144)
- » If the telephone book is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (263)
- » If the Bluetooth connection does not work as expected, consult the troubleshooting chart in the section entitled "Technical data". (263)

Connect rider's and passenger's helmet

- Perform pairing. (135)
- Select Rider's helmet or Passenger helm. and confirm.
- Make the helmet's communication system visible.
- Select Pair new rider's helmet or Pair new passenger. helmet and confirm.

Helmets are searched for.



The Bluetooth symbol flashes in the bottom status line during pairing.

Helmets found are displayed.

- Select and confirm helmet.
- » The connection is established and the connection status updated.


- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (262)
- » If the Bluetooth connection does not work as expected, consult the troubleshooting chart in the section entitled "Technical data". (263)

Delete connections

- Navigate to Settings, Connections.
- Select Delete connections.
- To delete an individual connection, select the connection and confirm.
- To delete all connections, select Delete all connections and confirm.

MY VEHICLE


START SCREEN

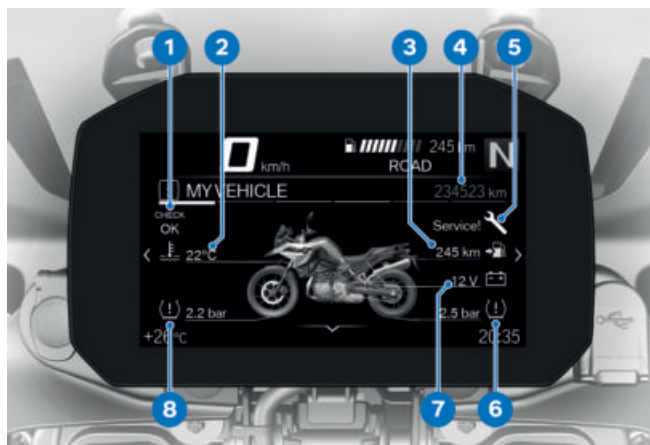

- 1 Check Control display
(➡ 52)
- 2 Coolant temperature
(➡ 64)
- 3 Range (➡ 132)
- 4 Odometer
- 5 Service display (➡ 78)
- 6 Tyre pressure, rear
(➡ 207)
- 7 On-board voltage
(➡ 228)
- 8 Tyre pressure, front
(➡ 207)


138 TFT DISPLAY

Operating pointers

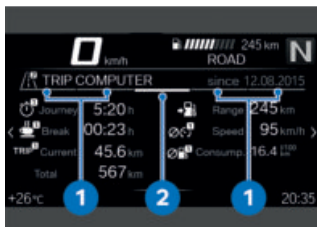

- Operating pointer 1: Indicators showing how far you can scroll to the left or right.
- Operating pointer 2: Indicator showing the position of the current menu screen.

Scrolling through menu screens

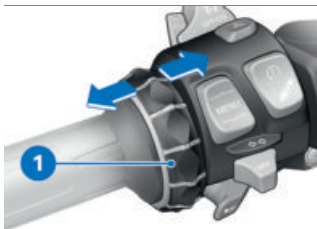

- Call up the My vehicle menu.
- To scroll to the right, short-press Multi-Controller 1 to the right.

- To scroll to the left, short-press Multi-Controller 1 to the left.

The My Vehicle menu contains the following screens:


- MY VEHICLE
- ON-BOARD COMPUTER
- TRIP COMPUTER
- with tyre pressure control (RDC)^{OE}
- TYRE PRESSURE◀
- SERVICE REQUIREMENTS
- CC MESSAGE (if available)
- For more information on tyre pressures and Check Control messages, see the section on displays (► 52).

 Check Control messages are attached dynamically to the menu screens as additional tabs in the My vehicle menu.

On-board computer and trip computer

The ON-BOARD COMPUTER and TRIP COMPUTER menu screens display vehicle and trip data, such as average values.

Service requirements

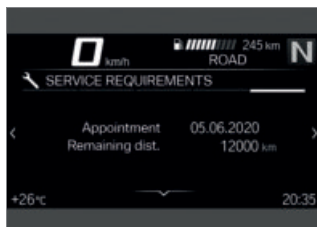

When the next service is due within less than a month or within 1000 km, a white Check Control message is displayed.

140 TFT DISPLAY

ON-BOARD COMPUTER

Call up the on-board computer

- Call up the `My vehicle` menu.
- Scroll to the right until the `ON-BOARD COMPUTER` menu screen is displayed.

Reset the on-board computer

- Call up the on-board computer. (140)
- Press down the MENU rocker button.
- Select `Reset all values` or `Reset individual values` and confirm.

The following values can be reset:

- Break
- Journey
- Current (TRIP 1)
- Speed
- Consump.

Call up the trip computer

- Call up the on-board computer. (140)
- Scroll to the right until the `TRIP COMPUTER` menu screen is displayed.

Reset the trip computer

- Call up the trip computer. (140)
- Press down the MENU rocker button.

- Select `Autom. reset` or `Reset all values` and confirm.
- » If `Autom. reset` is selected, the trip computer is automatically reset when a minimum of 6 hours have passed and the date has changed since the ignition was switched off.

NAVIGATION

Warnings



WARNING

Operation of a smartphone while riding the vehicle

Risk of accident

- Always comply with the road traffic regulations in force where you are riding.
- Do not use a smartphone while riding. This applies with the exception of applications without operation, such as hands-free telephony.



WARNING

Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.

Precondition

The vehicle is connected via Bluetooth to a compatible mobile device.

The BMW Motorrad Connected app is installed on the connected mobile device.



On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

Enter the destination address

- Connect a mobile device.
(11111 135)
- Call up the BMW Motorrad Connected app and start the route guidance.

- Call up the Navigation menu in the TFT display.
- » Active route guidance is displayed.
- » If active route guidance is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (11111 263)

Select destination from recent destinations

- Navigate to Navigation, Recent destinations.
- Select and confirm destination.
- Select Start route guidance.

Select destination from favourites

- The FAVOURITES menu shows all the destinations saved as favourites in the BMW Motorrad Connected app. You cannot use the TFT display to add favourites to the list.
- Navigate to Navigation, Favourites.
- Select and confirm destination.
- Select Start guidance.

142 TFT DISPLAY

Enter special destinations

- Special destinations, such as points of interest, can be displayed on the map.
- Navigate to Navigation, POIs.

The following locations can be selected:

- At current location
- At destination
- Along the route
- Select where the special destinations should be looked for. e.g. the following special destination can be selected:
 - Filling station
- Select and confirm the special destination.
- Select Start route guidance and confirm.

Set route criteria

- Navigate to Navigation, Route criteria.

The following criteria can be selected:

- Route type
- Avoid
- Select desired Route type.
- Switch desired Avoid on or off.

The number of avoidances activated is displayed in brackets.

End route guidance

- Navigate to Navigation, Active route guidance.
- Select End route guidance and confirm, or tilt the Multi-Controller to the left.

Switch spoken instructions on or off

- Connect the rider's and passenger's helmets. (136)
- The navigation can be read out by a computer voice. For this purpose, Spoken instruction must be switched on.
- Navigate to Navigation, Active route guidance.
- Switch Spoken instruction on or off.

Repeat last spoken instruction


- Navigate to Navigation, Active route guidance.
- Select Current instruction and confirm.

MEDIA

Precondition

The vehicle is connected to a compatible mobile device and helmet.

Controlling music playback

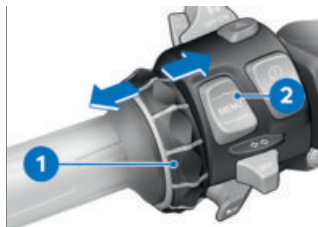

- Call up the Media menu.

 BMW Motorrad recommends setting the volume on the mobile end device for media and calls to maximum before setting off.

- Adjust volume. (→ 132)
- Next track: Short-tilt Multi-Controller **1** to the right.
- Preceding track or start of current track: Short-tilt Multi-Controller **1** to the left.
- Fast forward: Long-tilt Multi-Controller **1** to the right.
- Rewind: Long-tilt Multi-Controller **1** to the left.
- Call up context menu: Press bottom section of button **2**.

 Depending on the mobile device, the scope of the Connectivity functions may be restricted.

- » The following functions can be used in the context menu:
- Playback or Pause.

- Select the Now playing, All artists, All albums or All tracks category for search and playback.
- Select Playlists.

You can make the following adjustments in the Audio settings submenu:


- Switch Shuffle on or off.
- Select Repeat: Off, One (current track) or All.

TELEPHONE

Precondition

The vehicle is connected to a compatible mobile device and helmet.

Telephone calls

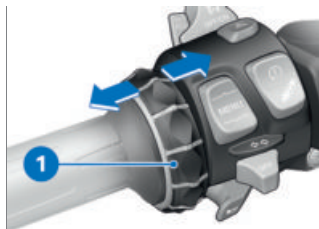

- Call up the Telephone menu.
- Accept call: Tilt Multi-Controller **1** to the right.
- Reject call: Tilt Multi-Controller **1** to the left.
- End call: Tilt Multi-Controller **1** to the left.

144 TFT DISPLAY

Muting

During active phone calls, the microphone in the helmet can be muted.

Phone calls with multiple participants

While a phone call is in progress, a second call can be accepted. The first phone call is put on hold. The number of active calls is shown in the Telephone menu. It is possible to switch between two phone calls.

Telephone data

Depending on the mobile device, when pairing (134) completes telephone data are automatically sent to the vehicle.

Phone book: List of contacts saved on the mobile device

Call list: List of calls with the mobile device

Favourites: List of favourites saved on the mobile device

DISPLAY LICENCE INFORMATION

- Navigate to Settings, Information, Licences.

DISPLAY SOFTWARE VERSION

- Navigate to Settings, Information, Software version.

ADJUSTMENT

06

MIRRORS	148
HEADLIGHT	148
WINDSCREEN	149
CLUTCH	149
BRAKES	150
SPRING PRELOAD	151
DAMPING	151

148 ADJUSTMENT


MIRRORS

Adjusting mirrors



- Turn the mirror to the appropriate position.

Adjusting mirror arm

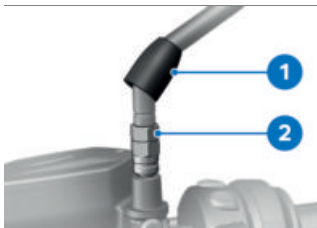

- Push protective cap **1** over the threaded fastener of the mirror arm up to expose the threaded fastener.
- Slacken nut **2**.
- Turn the mirror arm to the appropriate position.
- Tighten the nut to the specified torque, while holding the mirror arm to ensure that it does not move out of position.



Mirror (locknut) to clamping piece

M10 x 1.25

22 Nm (Left-hand thread)

- Push the protective cap over the threaded fastener.

HEADLIGHT

Headlight adjustment for right- or left-hand traffic

The asymmetrical low-beam headlight dazzles the oncoming traffic when riding in countries which drive on the other side of the road to that of the motorcycle's country of registration.

Have the headlights adjusted to the prevailing conditions by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Headlight beam throw and spring preload

Headlight beam throw is generally kept constant when spring preload is adjusted to suit load.

Spring preload adjustment might not suffice only if the motorcycle is very heavily loaded. Under these circumstances, headlight beam throw has to be adjusted to suit

the weight carried by the motorcycle.

 If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Adjusting headlight beam throw




- Slacken screws **1** on left and right.
- Adjust beam throw by tilting the headlight slightly about its horizontal axis.
- Tighten screws **1** on left and right.

WINDSCREEN

Adjusting windscreen Requirement

The motorcycle is at a standstill.

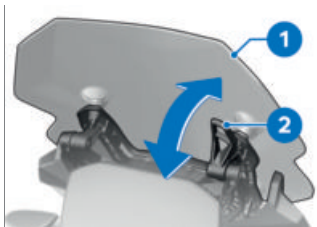

WARNING

Adjusting the windscreen while riding

Risk of falling

- Do not attempt to adjust the windscreen unless the motorcycle is at a standstill.

- Pull lever **2** down to raise windscreen **1**.
- Push lever **2** up to lower windscreen **1**.

CLUTCH

Adjusting clutch lever


WARNING

Adjusting the clutch lever while riding

Risk of accident

- Adjust the clutch lever only when the motorcycle is at a standstill.

150 ADJUSTMENT

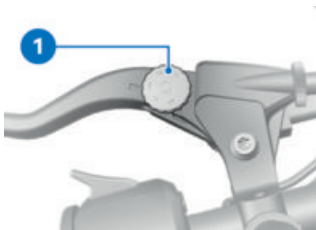

- Turn adjusting screw **1** clockwise to increase the span between the clutch lever and the handlebar grip.
- Turn adjusting screw **1** counter-clockwise to reduce the span between the clutch lever and the handlebar grip.

 The adjusting screw can be turned more easily if the clutch lever is pushed forward.

BRAKES

Adjusting brake lever

WARNING

Relocated brake fluid tank

Air in the brake system


- Do not turn the handlebars or the handlebar fitting on the handlebar.

WARNING

Adjusting the handbrake lever while riding

Risk of accident

- Do not attempt to adjust the handbrake lever unless the motorcycle is at a standstill.

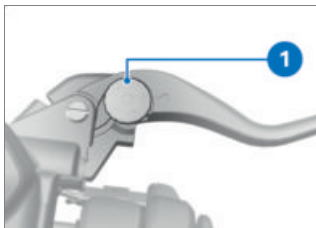

- Turn adjusting screw **1** counter-clockwise to increase the span between the brake lever and the handlebar grip.
- Turn adjusting screw **1** clockwise to reduce the span between the brake lever and the handlebar grip.

 The adjusting screw is easier to turn when the handbrake lever is pushed forward.

SPRING PRELOAD


—without Dynamic ESA^{OE}

Adjustment

It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring preload when the motorcycle is heavily loaded and reduce spring preload accordingly when the motorcycle is lightly loaded.

Adjusting spring preload for rear wheel

- Remove the seat. (➡ 119)
- Removing the toolkit.

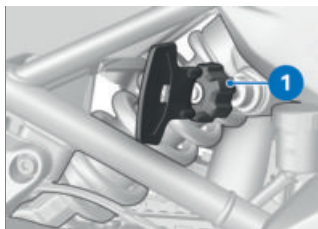

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload.

- To increase spring preload, use the tool from the on-board toolkit to turn adjuster knob **1** clockwise.
- To reduce spring preload, use the tool from the on-board toolkit to turn adjuster knob **1** counter-clockwise.



Basic setting of spring preload, rear

Turn the adjuster knob counter-clockwise as far as it will go. (One-up without luggage)

Turn the adjuster knob counter-clockwise as far as it will go, then back it off 20 turns in the clockwise direction. (One-up with luggage)

Turn the adjuster knob clockwise as far as it will go. (Two-up with luggage)

- Stow the on-board toolkit in its correct position.
- Install the seat. (➡ 120)

DAMPING

—without Dynamic ESA^{OE}

152 ADJUSTMENT

Adjustment

Damping must be adapted to suit the condition of the surface on which the motorcycle is ridden and to suit spring preload.


- An uneven surface requires softer damping than a smooth surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjusting damping for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Adjust the damping action by turning adjusting screw **1**.

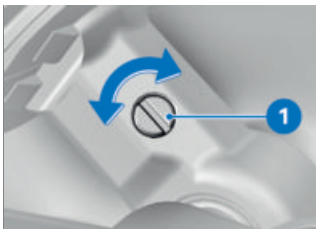

- Turn the adjusting screw **1** clockwise to harden the damping action.
- Turn the adjusting screw **1** anticlockwise to soften the damping action.



Basic setting of rear-suspension damping characteristic

Turn the adjusting screw as far as it will go clockwise, then back it off 1.5 turns.
(One-up without luggage)

Turn the adjusting screw as far as it will go clockwise, then back it off 0.5 turns.
(One-up with luggage)

Turn the adjusting screw as far as it will go clockwise, then back it off 0.25 turn.
(Two-up with luggage)

RIDING

07

SAFETY INFORMATION	156
REGULAR CHECK	160
STARTING	161
RUNNING IN	164
SHIFTING GEAR	165
OFF-ROAD USE	166
BRAKES	167
PARKING YOUR MOTORCYCLE	169
REFUELLING	170
SECURING MOTORCYCLE FOR TRANSPORTATION	175

SAFETY INFORMATION

Rider's equipment

Do not ride without the correct clothing! Always wear

- Helmet
- Suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad retailer will be happy to advise you on the correct clothing for every purpose.



WARNING

Loose textiles, items of luggage or straps snagged by open rotating parts of the vehicle (wheels, drive shaft)

Risk of accident

- Make sure that loosely worn or carried textiles cannot be snagged by openly rotating parts of the vehicle.
- Keep all items of luggage and straps well clear of openly rotating parts of the vehicle.

Restricted angle of heel

—with low-slung^{OE}

A motorcycle with lowered suspension has less ground clearance and cannot corner at bank angles as extreme as those achievable by a counter-part motorcycle with standard-height suspension (see the section entitled "Technical data").



WARNING

When a motorcycle with lowered suspension is cornering, certain components can come into contact with the surface at a bank angle less than that to which the rider is accustomed.

Risk of falling

- Carefully try out the limits of the motorcycle's bank angle and adapt your style of riding accordingly.

Test your motorcycle's angle of heel in situations that do not involve risk. When riding over kerbs and similar obstacles, bear in mind that your motorcycle's ground clearance is limited.

Lowering the motorcycle's suspension shortens spring travel. Ride comfort might be restricted as a result. Be sure to adjust spring preload accordingly, particularly for riding two-up.

Loading correctly



WARNING

Handling adversely affected by overloading and imbalanced loads

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.

- Adjusting spring preload setting and damping to the total weight.

—with case^{OA}

- Ensure that the case volumes on the left and right are equal.
- Make sure that the weight is uniformly distributed between right and left.
- Pack heavy items at the bottom of the cases and toward the inboard side.
- Note the maximum permissible payload and maximum permissible speed, see

also the section entitled "Accessories" (▮▮▮ 243).



Payload per case

max 8 kg



Maximum permissible speed for riding with cases fitted to the motorcycle

max 160 km/h◁

—with topcase^{OA}

- Note the maximum permissible payload and maximum permissible speed, see also the section entitled "Accessories" (▮▮▮ 246).



Payload of topcase

max 5 kg



Maximum speed for riding with a loaded topcase

max 160 km/h◁

—with tank bag^{OA}

- Note the maximum permissible payload of the tank bag.



Payload of tank rucksack

max 5 kg

	Maximum speed for riding with a loaded tank bag
max 130 km/h◁	

–with rear softbag^{OA}

- Note the maximum payload of the rear softbag.

	Payload of rear softbag
max 1.5 kg	

	Maximum speed for riding with a loaded rear bag
max 130 km/h◁	

Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle, e.g.:

- Spring-strut and shock-absorber system not set up correctly
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Added luggage systems such as cases, topcase and tank rucksack.

Maximum speed with knobbly tyres or winter tyres



DANGER

Maximum speed of the motorcycle is higher than the permissible maximum rated speed of the tyres

Risk of accident due to tyre damage at high speed

- Comply with the tyre-specific speed restrictions.

Always bear the maximum permissible speed of the tyres in mind when riding a motorcycle fitted with knobbly tyres or winter tyres.

Affix a label stating the maximum permissible speed to the instrument panel in the rider's field of vision.

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.

**WARNING****Exhaust gases adversely affecting health**

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.

**WARNING****Inhalation of harmful vapours**

Health hazard

- Do not inhale vapours from operating fluid and plastics.
- Use the vehicle only outdoors.

Risk of burning**CAUTION****Engine and exhaust system become very hot when the vehicle is in use**

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.

**WARNING****Opening radiator cap**

Risk of burning

- Do not open the radiator cap when the system is hot.
- Check and, if necessary, top up the coolant in the expansion tank only.

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry
- Do not attempt to start or run the engine with a spark-plug cap disconnected
- Stop the engine immediately if it misfires
- Use only unleaded fuel
- Comply with all specified maintenance intervals.

**ATTENTION****Unburned fuel in catalytic converter**

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.

Risk of overheating



ATTENTION

Engine running for prolonged period with vehicle at standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.

Tampering



ATTENTION

Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

- Do not tamper with the vehicle in any way that could result in tuned performance.

REGULAR CHECK

Checklist

- At regular intervals, use the checklist below to check your motorcycle.

When load status changes:

—without Dynamic ESA^{OE}

- Adjust the spring preload for the rear wheel. (151)

- Adjust the damping for the rear wheel. (152)

—with Dynamic ESA^{OE}

- Adjust the suspension. (106)

Always before riding off:

- Check operation of the brake system.
- Check operation of the lights and signalling equipment.
- Check operation of the clutch. (204)
- Check the tyre tread depth. (208)
- Check the tyre pressures. (207)
- Check security of cases and luggage.

Every 3rd refuelling stop:

- Check the engine oil level. (198)
- Check the brake pad thickness, front brakes. (200)
- Check the brake pad thickness, rear brakes. (201)
- Check the brake-fluid level, front brakes. (202)
- Check the brake-fluid level, rear brakes. (203)

- Check the coolant level. (▮▮▮ 205)
- Lubricate the chain. (▮▮▮ 219)
- Check the chain tension. (▮▮▮ 220)

STARTING

Starting engine



ATTENTION

Sufficient gearbox lubrication only with the engine is running.

Gearbox damage

- Do not allow the motorcycle to roll for a lengthy period of time or push it a long distance with the engine switched off.
- Switch on the ignition. (▮▮▮ 82)
- » Pre-Ride-Check is performed. (▮▮▮ 161)
- » ABS self-diagnosis is in progress. (▮▮▮ 162)
- » DTC self-diagnosis is in progress. (▮▮▮ 163)
- Select neutral or, if a gear is engaged, pull the clutch lever.



You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then en-

gage a gear before retracting the side stand.



- Press starter button 1.



The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.

See the subsection on jump starting in "Maintenance" for more details.



The engine starts.

- » If the engine refuses to start, consult the troubleshooting chart in the section entitled "Technical data". (▮▮▮ 262)

Pre-Ride-Check

The instrument cluster runs a test of the instruments and the indicator and warning lights when the ignition is switched on. This test is known as the

162 RIDING

Pre-Ride-Check. The check is aborted if you start the engine before it completes.

Phase 1

All indicator and warning lights are switched on.

—with Connectivity^{OE}

All indicator and warning lights are switched on.

 The intervention of riding dynamics control systems can be restricted, depending on which riding mode is selected and how the selected mode is configured.

Possible restrictions are indicated by a pop-up message, for example **Warning! ABS & DTC setting..**

See the section entitled "Engineering details" for more information on riding dynamics control systems such as ABS and DTC.

After a longer vehicle standstill period, an animation is displayed when the system starts up.◁

Phase 2

The 'General' warning light changes from red to yellow.

Phase 3

All the indicator and warning lights switched on in the initial phase are switched off in reverse sequence.

The malfunction indicator lamp (MIL) does not go out until 15 seconds have elapsed.

If one of the indicator and warning lights did not switch on:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS self-diagnosis

BMW Motorrad ABS performs self-diagnosis to ensure its operability. Self-diagnosis starts automatically when you switch on the ignition.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



ABS indicator and warning light flashes.

Phase 2

» Test of the wheel-speed sensors as the vehicle pulls away from rest.



ABS indicator and warning light flashes.

ABS self-diagnosis completed

» The ABS indicator and warning light goes out.



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride. Bear in mind that the ABS function is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DTC self-diagnosis

BMW Motorrad DTC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



slow-flashes.

Phase 2

» Pullaway test of the diagnosis-compatible system components.



slow-flashes.

DTC self-diagnosis completed

» The DTC symbol no longer shows.

- Observe all the indicator and warning lights.



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

If an indicator showing a DTC fault appears when DTC self-diagnosis completes:

- You can continue to ride. Bear in mind that the DTC function is not available or the

functionality might be subject to certain restrictions.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad re-tailer.

RUNNING IN

Engine

- Until the running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads, avoiding high-speed main roads and highways if possible.
- Comply with the running-in speeds.



Running-in speed

<6500 min⁻¹ (Odometer reading 0...1200 km)

No full load (Odometer reading 0...1200 km)

- Note the mileage after which the running-in check should be carried out.



Mileage until the first running-in check

500...1200 km

Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.



WARNING

New brake pads

Longer stopping distance, risk of accident

- Apply the brakes in good time.

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.

**WARNING**

New tyres losing grip on wet roads and at extreme bank angles

Risk of accident

- Ride carefully and avoid extremely sharp inclines.


SHIFTING GEAR

–with shift assistant Pro^{OE}

Gear Shift Assistant Pro



For safety reasons, adaptive cruise control is automatically deactivated when Gear Shift Assistant Pro downshifts.

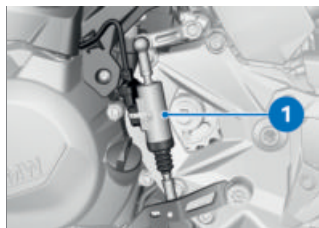

- Select the gears in the usual way by using the foot-operated gearshift lever.
- » The shift assistant assists upshifts and downshifts without the rider having to pull the clutch or close the throttle.
- This is not an automatic-shift system.
- The rider is the most important part of the system and decides when to shift gears.
- The sensor **1** on the gearshift shaft registers the gearshift request and triggers shift assistance.
- » When riding at a steady speed in a low gear at high engine rpm, an attempt to shift gear without pulling the clutch can cause a severe load-change reaction.
- BMW Motorrad recommends disengaging the clutch for shifts in these circumstances.
- It is advisable to avoid using Gear Shift Assistant Pro at engine speeds close to the limits at which the governor cuts in to limit engine rpm.
- » Shift assistance is not available in the following situations:
 - With clutch lever pulled.
 - Gearshift lever not in its initial position
 - Upshifts with the throttle valve closed (engine overrun) and when slowing.
 - When downshifting with throttle valve open.
- Once the gearshift has completed, the gearshift lever has

166 RIDING

to be fully released before another gearshift with the Pro can take place. More detailed information on the Gear Shift Assistant Pro (► 191).

OFF-ROAD USE

After off-roading

BMW Motorrad recommends checking the following after off-roading:

Tyre pressure



WARNING

Lower tyre pressure for off-roading in operation on smooth roads

Risk of accident due to impaired driving characteristics.

- Always check that the tyre pressures are correct.

Brakes



WARNING

Driving on unpaved or dirt roads

Delayed braking efficiency due to soiled brake disks and brake pads.

- Brake early until the brakes are clean.



ATTENTION

Riding on unsurfaced or dirty roads

Increased brake pad wear

- Check the thickness of the brake pads more frequently and replace the brake pads in good time.

Spring preload and shock-absorber settings



WARNING

Changed values for spring preload and spring strut damping for off-roading

Impaired driving characteristics on paved roads

- Before leaving the off-road terrain, set the correct spring preload and shock absorption.

Wheel rims

BMW Motorrad recommends checking the rims for damage after off-roading.

Air filter element



ATTENTION

Dirty air filter element

Engine damage

- If you ride in dusty terrain check the air filter element for clogging at shorter intervals; clean or replace as necessary.

Operation in very dusty conditions (desert, steppes, or the like) necessitates the use of air filter elements specially designed for conditions of this nature.

BRAKES

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The higher the wheel load, the more braking force can be transmitted without the wheel locking.

To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake

lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time. In the "emergency braking situations" that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road. Under these circumstances the front wheel can lock up. BMW Motorrad ABS prevents the front wheel from locking up.

Emergency braking

If you brake sharply from a speed in excess of >50 km/h, the brake light flashes rapidly as a warning for road users behind you.

If you brake until your speed is less than <15 km/h, the hazard warning lights start to flash as well. The hazard warning lights switch off automatically as soon as you start to accelerate.

168 RIDING

ate and vehicle speed reaches 20 km/h.

Descending mountain passes



WARNING

Braking mostly with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.



WARNING

Wetness and dirt result in diminished braking efficiency

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.

ABS Pro

Physical limits applicable to motorcycling



WARNING

Braking when cornering

Risk of crash despite ABS Pro

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.

Possibility of a fall not precluded

Although ABS Pro provides the rider with valuable assistance and constitutes a huge advance

in safety for braking with the motorcycle banked for cornering, it cannot under any circumstances be considered as re-defining the physical limits that apply to motorcycling. It is still possible for these limits to be overshot due to misjudgement or rider error. In extreme cases this can result in a crash.

Use on public roads

ABS Pro helps make the motorcycle even safer for riding on public roads. When the brakes are applied because of an unforeseen hazard when the motorcycle is banked for cornering, within the physical limits that apply to motorcycling the system prevents the wheels from locking and skidding away.

 ABS Pro was not developed to enhance individual braking performance with the motorcycle banked into corners.

PARKING YOUR MOTORCYCLE

Side stand

- Switch off the engine.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.



ATTENTION

Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.

- Extend the side stand and prop the motorcycle on the stand.
- If the camber of the roadway permits, turn the handlebars all the way to the left.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Centre stand

—with centre stand^{OE}

- Switch off the engine.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.



ATTENTION

Centre stand retracts due to severe movements

Risk of damage to parts if vehicle topples

- Do not lean or sit on the vehicle with the centre stand extended.
- Extend the centre stand and lift the motorcycle on to the stand.

REFUELLING

Fuel grade

Requirement

For optimum fuel consumption, fuel should be sulphur-free or as low-sulphur as possible.



ATTENTION

Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron).
 - Observe the maximum ethanol content of the fuel.
-  Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.



Recommended fuel grade



Regular unleaded (maximum 15 % ethanol, E15)



91 ROZ/RON
min 87 AKI

- » Pay attention to the following symbols in the fuel filler cap and on the fuel pump:



Refuelling



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank.



ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.

- Make sure the ground is level and firm and place the motorcycle on its side stand.

—with centre stand^{OE}

- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀



- Open protective flap **1**.
- Unlock cap **2** of the fuel tank by turning the vehicle key clockwise in the lock and pop the cap open.



- Do not fill the tank past the bottom edge of the filler neck.



When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and

172 RIDING

the fuel reserve indicator light is switched off.

 The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.

	Usable fuel capacity
approx. 15 l	
	Reserve fuel
approx. 3.5 l	

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

Refuelling

—with Keyless Ride^{OE}

Requirement

The steering lock is disengaged.

WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.

WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank.

ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.

- Make sure the ground is level and firm and place the motorcycle on its side stand.

—with centre stand^{OE}

- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁

—with Keyless Ride^{OE}

- Switch off the ignition.

( 85)

 The fuel filler cap can be opened within the defined waiting time after the ignition has been switched off, without the radio-operated key being within range.



Waiting time for opening the fuel filler cap

2 min


- » There are **two variant ways** of opening the fuel filler cap:
 - Within the waiting time.
 - After the waiting time has expired.

Variant 1

– with Keyless Ride^{OE}

Requirement

Within the waiting time

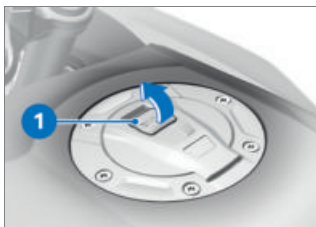

- Slowly pull tab **1** on the fuel filler cap up.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.

Variant 2

– with Keyless Ride^{OE}

Requirement

After the waiting time has expired

- Bring the radio-operated key into range.

- Slowly pull tab **1** up.
- » The indicator light for the radio-operated key flashes while the search for the radio-operated key is in progress.
- Slowly pull tab **1** on the fuel filler cap up again.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.



When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and the fuel reserve indicator light is switched off.



The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and

174 RIDING

the engine had cut out due to a lack of fuel.



Usable fuel capacity

approx. 15 l



Reserve fuel

approx. 3.5 l

- Press down firmly on the filler cap of the fuel tank.
 - » The fuel filler cap engages with an audible click.
 - » The fuel filler cap locks automatically when the waiting time expires.
 - » The engaged fuel filler cap locks immediately when you secure the steering lock or switch on the ignition.

Opening fuel filler cap emergency release

—with Keyless Ride^{OE}

Fuel filler cap cannot be opened.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.




- Remove screws **1**.
- Remove emergency release **2**.
 - » Fuel filler cap unlocks.
- Fully open the fuel filler cap.
- Refuel. (▮▮▮ 172)
- Close the fuel filler cap emergency release. (▮▮▮ 174)

Closing fuel filler cap emergency release

—with Keyless Ride^{OE}

Requirement

Fuel filler cap is in closed position.

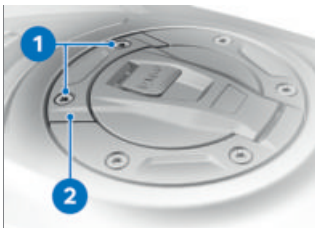

- Hold emergency release **2** in position.
- Install screws **1**.

SECURING MOTORCYCLE FOR TRANSPORTATION

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching, e.g. adhesive tape or soft cloths should be used for this purpose.



ATTENTION

Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.
- Push the motorcycle on to the transportation flat and hold it in position: do not place it on the side stand or centre stand.



ATTENTION

Trapping of components

Component damage

- Do not trap components such as brake lines or cable legs.
- At the front, secure the straps to the bottom fork bridge on both sides and tighten the straps.



- At the rear, secure the straps to the rear frame on both sides and tighten the straps.
- Tighten all the straps uniformly; the vehicle's suspension should be

176 RIDING

compressed as tightly as possible front and rear.

ENGINEERING DETAILS

08

GENERAL NOTES	180
ANTILOCK BRAKE SYSTEM (ABS)	180
TRACTION CONTROL (DTC)	183
DYNAMIC ENGINE BRAKE CONTROL	185
DYNAMIC ESA	186
RIDING MODE	186
DYNAMIC BRAKE CONTROL	188
TYRE PRESSURE CONTROL (RDC)	189
GEAR SHIFT ASSISTANT	191

GENERAL NOTES

To find out more about engineering, go to bmw-motorrad.com/technik.

ANTILOCK BRAKE SYSTEM (ABS)

How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean, dry asphalt surface. The lower the coefficient of friction, the longer the stopping distance. If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the motorcycle loses its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force, so the wheels continue to turn and directional stability is maintained irrespective of the condition of the road surface.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the BMW Motorrad ABS must assume an extremely low coefficient of friction (gravel, ice, snow), so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

Rear wheel lift

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the BMW Motorrad ABS will be unable to prevent the rear wheel from lifting clear of the ground. If this happens the outcome can be a highside situation in which the motorcycle can flip over.



WARNING

Rear wheel lift due to severe braking

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.

What is the design baseline for BMW Motorrad ABS?

Within the limits imposed by physics, the BMW Motorrad ABS ensures directional stability on any surface.

At speeds above 4 km/h, within the limits imposed by physics the BMW Motorrad ABS can ensure directional stability on any surface. Limitations inherent to the design principle mean that at lower speeds the BMW Motorrad ABS cannot provide optimum assistance on all surfaces.

The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the track.

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued. In addition to problems with the BMW Motorrad ABS, exceptional riding conditions can lead to a fault message being issued:

182 ENGINEERING DETAILS

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by application of the front brake (burn-out).
- Heating up with the motor-cycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending on a loose or slippery surface.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

What significance devolves on regular servicing?



WARNING

Brake system not regularly serviced

Risk of accident

- In order to ensure that the BMW Motorrad ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.

Safety reserves

The potentially shorter braking distances which BMW Motorrad ABS permits must not be used as an excuse for careless riding. The system is primarily a means of ensuring a safety margin in genuine emergencies.

Take care when cornering!

When you apply the brakes on a corner, the vehicle's weight and momentum take over and even BMW Motorrad ABS is unable to counteract their effects.

Evolution of ABS to ABS Pro

Until now, BMW Motorrad ABS has helped ensure a very high degree of safety for braking with the motorcycle upright and travelling in a straight line. Now ABS Pro offers enhanced safety for braking in corners as well. ABS Pro prevents the wheels from locking even under sharp braking. ABS Pro reduces abrupt changes in steering force, particularly in shock-braking situations, counteracting the vehicle's otherwise natural but undesirable tendency to straighten up.

ABS intervention

Technically speaking, depending on the riding situation ABS Pro adapts ABS intervention to the motorcycle's bank angle. Signals for rate of roll and rate of yaw and lateral acceleration are used to calculate bank angle. As the motorcycle is heeled over more and more as it banks into a corner, an increasingly strict limit is imposed on the brake-pressure gradient for the start of brake application. This slows the build-up of brake pressure to a corresponding degree. Addi-

tionally, pressure modulation is more uniform across the range of ABS intervention.

Advantages for the rider

The advantages of ABS Pro for the rider are sensitive response and high braking and directional stability combined with best-case deceleration of the motorcycle, even when cornering.

TRACTION CONTROL (DTC)

How does traction control work?

Traction control compares the front and rear wheel circumferential velocities. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine management system intervenes and adapts engine torque accordingly. BMW Motorrad DTC is designed as an assistant system for the rider and for use on public roads. The extent to which the rider affects DTC control can be considerable (weight shifts when cornering, items of luggage loose on the motorcycle), especially when the style of riding takes rider

and machine close to the limits imposed by physics.

Activate **Enduro** riding mode for off-roading. This mode delays DTC intervention slightly in order to permit controlled drifting.

The system is not optimised for special requirements that apply under extreme competitive conditions off-road or on the track. The BMW Motorrad DTC can be deactivated in these cases.



WARNING

Risky riding

Risk of accident despite DTC

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional safety offered by this system.

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared and the angle of heel taken into account as one means of detecting the rear wheel's incipient tendency to spin or slip sideways.

If the electronic processor receives values for the bank angle that it considers implausible over a lengthy period, a dummy value is used for the bank angle or the DTC function is switched off. Under these circumstances the indicator for a DTC fault shows. Self-diagnosis has to complete before fault messages can be issued.

The BMW Motorrad Traction Control can shut down automatically under the exceptional riding conditions outlined below.

Exceptional riding conditions:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by application of the front brake (burn-out).
- Heating up with the motorcycle on an auxiliary stand,

in neutral or with a gear engaged.

Accelerating the motorcycle to a defined minimum speed after switching the ignition off and then on again reactivates the DTC after a fault.



Minimum speed for activation of DTC

min 5 km/h

If the front wheel lifts clear of the ground under severe acceleration, the DTC reduces engine torque in the **RAIN** and **ROAD** riding modes until the front wheel regains contact with the ground.

The **ENDURO** riding mode is designed for off-road operation and not suitable for on-road operation.

Front wheel lift-off detection allows brief wheelies in the **DYNAMIC** and **ENDURO** riding modes.

BMW Motorrad recommends turning the throttle grip back slightly when lifting the front wheel in order to reach a stable driving condition again as soon as possible.

DYNAMIC ENGINE BRAKE CONTROL

—with riding modes Pro^{OE}

How does dynamic engine brake control work?

The purpose of dynamic engine brake control is to prevent the unstable riding states that can be produced by excessive engine braking moment acting on the rear wheel. Depending on the road condition and riding dynamic, excessive braking torque can produce a sharp rise in rear-wheel slip and impair directional stability. Dynamic engine brake control limits this slip at the rear wheel to a safe, mode-dependent regulated slip.

Causes for excessive slip at the rear wheel:

- Riding with engine overrun on a surface with a low coefficient of friction (e.g. wet leaves).
- Rear-wheel hop when rider downshifts.
- Sharp braking during sporty riding.

In the same way as BMW Motorrad DTC dynamic traction control, dynamic engine brake control compares the wheel circumferential

velocities of the front and rear wheels calculated from the wheel speeds and the tyre radius. Dynamic engine brake control uses this differential to compute slip as a measure of the reserve of stability available at the rear wheel.

If slip overshoots the applicable limit, the throttle valves are opened very slightly to increase engine torque. Slip is reduced and the vehicle is stabilised.

Effect of dynamic engine brake control

- In the RAIN and ROAD riding modes: Maximum stability.
- with riding modes Pro^{OE}
- In DYNAMIC riding mode: Compared with the RAIN and ROAD riding modes, reduced intervention.
- In ENDURO riding mode: Maximum performance. On a poor road surface or with unsuitable tyres, stability might be impaired.

DYNAMIC ESA

- with Dynamic ESA^{OE}

Dynamic ESA function

Dynamic ESA uses a ride height sensor to detect movements in the suspension and responds by adjusting the damper valve. This enables the suspension to adapt to the terrain.

Dynamic ESA calibrates itself at regular intervals to ensure the system functions correctly.

Possibilities for adjustment Damping modes

- Road: Damping for comfortable on-road riding
- Dynamic: Damping for dynamic on-road riding
- Enduro: Damping for off-road riding

Load settings

- One-up riding
- One-up with luggage
- Two-up (with luggage)

RIDING MODE

Selection

To adjust the motorcycle to the road condition and the desired driving experience, the following riding modes can be selected:

Standard

- RAIN
- ROAD (default mode)
- with riding modes Pro^{OE}
- with Pro riding modes**
- DYNAMIC
- ENDURO

For each of these riding modes, there is a matching setting for the ABS, DTC systems, for dynamic engine brake control and for throttle response.

- with Dynamic ESA^{OE}
- The adjustment of the Dynamic ESA also depends on the riding mode selected.

DTC can be switched off in each riding mode. The explanations below always refer to the dynamic safety systems that are switched on.

Throttle response

- In RAIN riding mode: Gentle throttle response.
- In ROAD riding mode: Optimum throttle response.
- with riding modes Pro^{OE}
- In DYNAMIC riding mode: Direct throttle response.
- In ENDURO riding mode: Gentle throttle response.

ABS

- The rear wheel lift-off detection is activated in all riding modes.
- In DYNAMIC and ENDURO riding modes, rear wheel lift-off detection is reduced to achieve an enhanced braking effect.
- In RAIN, ROAD and DYNAMIC riding modes, the ABS is set up for on-road riding.
- In ENDURO riding mode, the ABS is set up for off-road riding with road tyres.

- with riding modes Pro^{OE}

ABS Pro

- In the RAIN and ROAD riding modes, ABS Pro is fully available. The tendency of the motorcycle to straighten up when the brakes are applied with the machine banked for cornering is reduced to a minimum.
- In DYNAMIC and ENDURO riding modes, ABS Pro is available only when the coefficient of friction is good. Assistance is less than in ROAD riding mode and instead, the system is set up to achieve maximised braking effect.

DTC

Tyres

- In RAIN, ROAD and DYNAMIC riding modes, DTC is set up for on-road riding with road tyres.
- In ENDURO riding mode, DTC is set up for off-road riding with road tyres.

Driving stability

- In RAIN riding mode, DTC intervenes early to maximise riding stability.
- In ROAD riding mode, DTC intervenes later than in RAIN riding mode. This prevents the rear wheel from spinning whenever possible.
- In RAIN and ROAD riding modes, the front wheel is prevented from lifting.
- In DYNAMIC riding mode, DTC intervenes later than in ROAD mode, so slight drift can be induced when exiting corners and brief wheelies are also possible.
- In ENDURO riding mode, the DTC intervenes even later than in the other modes and the set-up is for off-road riding, so lengthy drifts and short wheelies are possible when exiting corners.

Mode changes

The riding mode can be changed while the vehicle is stationary with the ignition on. Under the following precondition, it is also possible to change modes while riding:

- No drive torque on the rear wheel.
- No brake pressure in the brake system.

The following steps must be taken to change the riding mode:

- Close the throttle twistgrip.
- Release the brake levers.
- Deactivate adaptive cruise control.

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state. The selection menu does not disappear from the display until the mode change has taken place.

DYNAMIC BRAKE CONTROL

- with riding modes Pro^{OE}

How Dynamic Brake Control works

The Dynamic Brake Control function assists the rider in emergency braking situations.

Detection of emergency braking

– Sudden, sharp application of the front brake is interpreted as emergency braking.

Behaviour in emergency braking

– If emergency braking occurs at a speed in excess of 10 km/h, the ABS function is further assisted by Dynamic Brake Control.

Behaviour during accidental actuation of the throttle grip

- If the throttle is accidentally opened (throttle grip position > 5 %) during emergency braking, Dynamic Brake Control ensures the desired braking effect by ignoring actuation of the throttle grip. The effectiveness of emergency braking is ensured.
- If the throttle is closed (throttle grip position < 5 %) while Dynamic Brake Control is in action, the engine torque requested by the ABS brake system is restored.

– If emergency braking ceases and the rider still has not changed the position of the throttle grip, Dynamic Brake Control steadily ramps engine torque back to the rider's requested level.

TYRE PRESSURE CONTROL (RDC)

– with tyre pressure control (RDC) ^{OE}

Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit. Each sensor has a centrifugal-force trip switch that does not enable transmission of the measured values until the motorcycle has accelerated to a defined minimum speed for the first time.



Minimum speed for transmission of the RDC measured values:

min 30 km/h

The display shows -- for each tyre until the tyre-pressure signal is received for the first time. The sensors continue to transmit the measured-value signals

190 ENGINEERING DETAILS

for some time after the vehicle comes to a stop.



Time for transmission of measured values after vehicle comes to a stop:

min 15 min

An error message is issued if wheels without sensors are fitted to a vehicle equipped with an RDC control unit.

Tyre pressure ranges

The RDC control unit distinguishes between three tyre pressure ranges matched to the vehicle:

- Tyre pressure within permitted tolerance.
- Tyre pressure close to limit of permitted tolerance.
- Tyre pressure outside permitted tolerance.

Temperature compensation

Tyre pressure is a temperature-sensitive variable: pressure increases as tyre-air temperature rises and decreases as tyre-air temperature drops. Tyre-air temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.



The tyre pressures are shown in the display as temperature compensated and always refer to the following tyre air temperature:

20 °C

The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre-air pressure. As a result, the values displayed there usually do not correspond to the values displayed in the display.

Pressure adaptation

Compare the RDC value on the display with the value in the table on the back cover of the rider's manual. Then use the air-line gauge at a service station to compensate for the difference between the RDC reading and the value in the table.



Example

According to the operating instructions, the tyre pressure should be:

2.5 bar

 Example
The following value is shown in the display:
2.3 bar
So pressure is low by:
0.2 bar
The gauge on the air line shows:
2.4 bar
You must now increase tyre pressure until the value is:
2.6 bar

GEAR SHIFT ASSISTANT

—with riding modes Pro^{OE}

Shift assistant Pro

Your vehicle is equipped with the shift assistant Pro, which was initially developed for racing and has been adapted for touring. It permits upshifts and downshifts without declutching or closing the throttle in virtually all load and rpm ranges.

Advantages

- 70-80 % of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.

- It is not necessary to close the throttle valve when shifting under acceleration.
- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the spring through a certain "overtravel" at ordinary speed or rapidly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the shift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place. Keep the corresponding load condition (throttle grip position) constant before and during the gear shift for gear shifts using the shift assistant Pro. A change in the position of the throttle twistgrip during

192 ENGINEERING DETAILS

a gearshift can cause the function to abort and/or lead to a missed shift. The shift assistant Pro provides no assistance for the gear change if the rider declutches.

Downshifting

- Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents over-revving.



Maximum engine speed

max 9000 min⁻¹

Upshifting

- Upshifting is assisted until idle rpm for the target gear to be selected is reached.
- This prevents the engine from dropping below idle speed.



Idle speed

1250^{±50} min⁻¹ (Engine at regular operating temperature)

MAINTENANCE

09

GENERAL NOTES	196
TOOLKIT	196
FRONT-WHEEL STAND	197
REAR-WHEEL STAND	197
ENGINE OIL	198
BRAKE SYSTEM	200
CLUTCH	204
COOLANT	205
TYRES	207
WHEEL RIMS	208
WHEELS	209
CHAIN	219
AIR FILTER	223
LIGHTING	224
TRIM PANEL COMPONENTS	226
JUMP-STARTING	226
BATTERY	228
FUSES	232
DIAGNOSTIC CONNECTOR	233

GENERAL NOTES

The Maintenance chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

Microencapsulated screws


The microencapsulation is a chemical thread-locker. An adhesive compound creates a secure connection between bolt and nut or between screw and component. Consequently, microencapsulated screws are for once-only use and are not intended for re-installation after being slackened.

After removal of the screw, clean the internal thread to remove all traces of thread-locking compound. Always use new microencapsulated screws when re-assembling. Consequently, prior to disassembly make sure that you have suitable tools for cleaning the threads and a new replacement for each screw to be removed. If the job is not done correctly there is no guaran-

tee that the screw will remain secure, which means that you would be putting yourself at risk!

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad retailer.

TOOLKIT

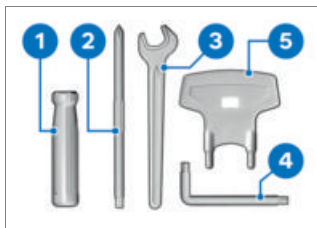

- 1** Screwdriver handle
- 2** Reversible screwdriver blade
With star-head and plain-tip ends
-Remove the battery.
(230)
-Adjust the damping for the rear wheel.
(152)
- 3** Open-ended spanner
Width across flats 14 mm

- 3 -Adjust the mirror arm.
( 148)
- 4 Torx wrench, T25/T30
T25 on short end, T30 on
long end
-Remove the tank cover.
( 226)
- 5 Keys
-Adjust the spring pre-
load for the rear wheel.
( 151)

FRONT-WHEEL STAND

Installing front-wheel stand



ATTENTION

Use of the BMW Motorrad front-wheel stand without also using the auxiliary stand

Risk of damage to parts if vehicle topples

- Place the motorcycle on an auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.
- Make sure the motorcycle is standing firmly.
- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad auxiliary stand.

- Install the rear-wheel stand.
( 197)



- See the instructions issued with the front-wheel stand for the details of the correct procedure for installation.
- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

REAR-WHEEL STAND

Install the rear-wheel stand



- The description of how to fit the rear-wheel stand cor-

198 MAINTENANCE

rectly will be found in the instructions for the stand.

- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

ENGINE OIL

Checking engine oil level



ATTENTION

Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)

Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature.
- Wipe the area around the oil filler opening clean.
- Allow the engine to idle until the fan starts up, then allow it to idle one minute longer.
- Switch off the engine.



ATTENTION

Vehicle toppling sideways


Risk of damage to parts if vehicle topples

- Secure the vehicle, preferably with the assistance of a second person, so that it cannot topple sideways.
- Make sure the engine is at operating temperature and hold the motorcycle upright. BMW Motorrad recommends using a suitable auxiliary stand.
 - with centre stand^{OE}
- Make sure the ground is level and firm and with the engine at operating temperature, place the motorcycle on its centre stand.◁
- Wait five minutes for the oil to drain into the oil pan.
- Remove oil dipstick **1**.





- Use a dry cloth to wipe gauge length **2** clean
- Seat the oil dipstick on the oil filler neck, but do not engage the threads. Turn the dipstick one full turn backward to make the oil level easier to read.
- Remove the oil dipstick and check the oil level.

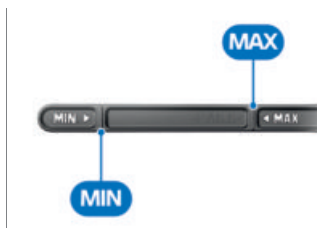

 Engine oil, specified level

Between **MIN** and **MAX** marks

 Engine oil, quantity for topping up

max 0.5 l (Difference between **MIN** and **MAX**)

If the oil level is below the **MIN** mark:

- Topping up the engine oil. (199)

If the oil level is above the **MAX** mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad retailer.


- Install the oil dipstick.

 As a contribution to reducing environmental impact, BMW Motorrad recommends checking the engine oil on occasion after a trip of min 50 km.

Topping up engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Wipe the area around the filler neck clean.

200 MAINTENANCE

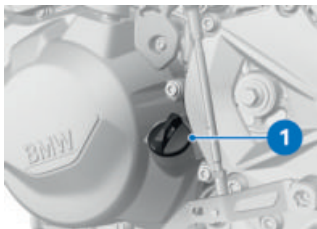

- Remove oil dipstick 1.



ATTENTION

Use of insufficient engine oil or too much engine oil

Engine damage

- Always make sure that the oil level is correct.
- Top up the engine oil to the specified level.
- Check the engine oil level.
(198)
- Install the oil dipstick.

BRAKE SYSTEM

Check operation of the brakes

- Operate the brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:



ATTENTION

Work on brake system not in compliance with correct procedure

Risk to operational reliability of the brake system

- Have all work on the brake system undertaken by trained and qualified specialists.
 - Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- #### Checking brake pad thickness, front brakes
- Make sure the ground is level and firm and place the motorcycle on its stand.



- Visually inspect the left and right brake pads to ascertain their thickness. View-

ing direction: Between wheel and front suspension toward brake calipers **1**.



Brake-pad wear limit,
front

min 1.0 mm (Friction pad only, without backing plate. The wear indicators, i.e. the grooves, must be clearly visible.)

If the wear indicating marks are no longer clearly visible:



WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake pad thickness, rear brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Visually inspect the brake pads to ascertain their thickness. Viewing direction: from the rear toward brake caliper **1**.



Brake-pad wear limit,
rear

min 1.0 mm (Friction pad only, without backing plate.)

If the brake pads are worn:



WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake-fluid level, front brakes



WARNING

Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.

—with centre stand^{OE}

- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Move the handlebars to the straight-ahead position.◁
- Make sure the ground is level and firm and hold the motorcycle upright.

- Move the handlebars to the straight-ahead position.



- Check the brake fluid level in brake fluid reservoir for front wheel brake 1.



Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, front

Brake fluid, DOT4

It is not permissible for the brake fluid level to be below the **MIN** mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake-fluid level, rear brakes



WARNING


Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.

204 MAINTENANCE

- Make sure the ground is level and firm and hold the motor-cycle upright.
—with centre stand^{OE}
- Make sure the ground is level and firm and place the motor-cycle on its centre stand.◁

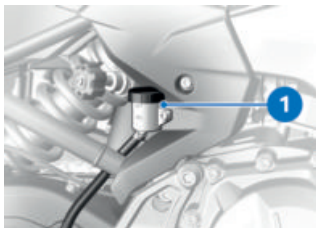

- Check the brake fluid level in brake fluid reservoir for rear wheel brake **1**.

 Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, rear
(visual inspection)

It is not permissible for the brake fluid level to be below the **MIN** mark.

If the brake fluid level drops below the permitted level:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

CLUTCH

Checking operation of the clutch

- Pull the clutch lever.
» An increase in force with increasing actuation must be perceptible.

If no increase in force with increasing actuation is perceptible:


- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.



Brake fluid level, rear
(visual inspection)

Brake fluid, DOT4

Checking the clutch play

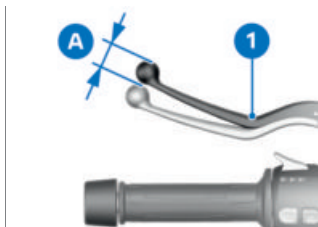

- Repeatedly pull clutch lever **1** tight against the grip.
- Pull clutch lever **1** gently until resistance is perceptible, observing the clutch play **A**.




Clutch cable play

3...5 mm (at the outer end of the handlebar lever, handlebars in straight-ahead position, engine cold)

Clutch play is out of tolerance:

- Adjust the clutch play.
(205)

Adjust the clutch play

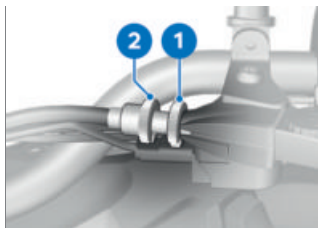

- Loosen lock nut **1**.

- To increase clutch play:
Tighten adjusting screw **2** into the handlebar fitting.
- To reduce clutch play: Back off adjusting screw **2** in the handlebar fitting.



The distance between locknut and adjusting nut (measured at the inside) must be no more than 8 ± 1.5 mm. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer, if the distance has to be exceeded in order to obtain the correct clutch play.

- Check the clutch play.
(205)
- Tighten locknut **1** while counter-holding adjusting screw **2**.

COOLANT

Check the coolant level



WARNING


Opening radiator cap

Risk of burning

- Do not open the radiator cap when the system is hot.
- Check and, if necessary, top up the coolant in the expansion tank only.

206 MAINTENANCE

- Make sure the ground is level and firm and position the motorcycle upright.
- Turn the handlebars all the way to the right.

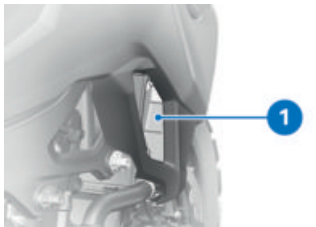

- Check the coolant level in expansion tank **1**. Viewing direction: from behind through opening in right-hand side trim panel.




Specified coolant level

Between **MIN** and **MAX** marks on the expansion tank (Engine cold)


If the coolant drops below the permitted level:

- Top up the coolant.

Topping up coolant

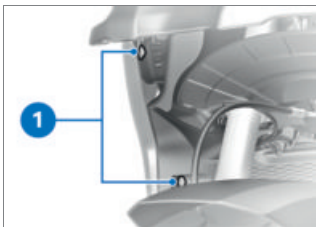


- Undo screws for the radiator cowl **1** from the inside.

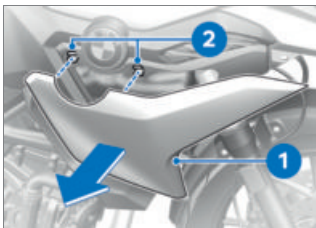


- Pull radiator cowl **1** out of holders **2**.



- Open cap **1** of the expansion tank.
- Using a suitable funnel, top up with coolant until the level is correct.
- Check the coolant level.
(205)
- Close cap **1** of the expansion tank.

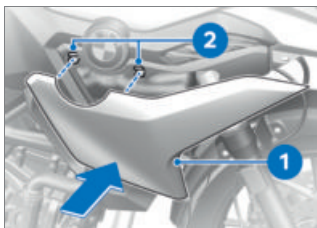

- Press radiator cowl **1** into holders **2**.
» The radiator cowl engages with an audible click.

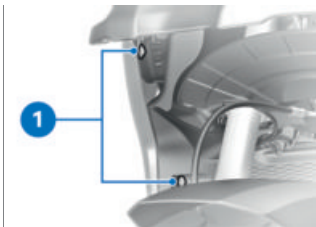

- Tighten screws for the radiator cowl screws **1** from the inside.

TYRES

Check the tyre pressures



WARNING

Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct.



WARNING

Tendency of valve inserts installed vertically to open by themselves at high riding speeds

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly.

208 MAINTENANCE

- Make sure the ground is level and firm and place the motor-cycle on its stand.
- Check tyre pressures against the data below.

 Tyre pressure, front
2.2 bar (One-up, tyre cold)
2.5 bar (Two-up and/or with luggage, tyre cold)
 Tyre pressure, rear
2.5 bar (One-up, tyre cold)
2.9 bar (Two-up and/or with luggage, tyre cold)

If tyre pressure is too low:

- Correct tyre pressure.

Check the tyre tread depth



WARNING

Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law.
- Make sure the ground is level and firm and place the motor-cycle on its stand.

- Measure the tyre tread depth in the main tread grooves with wear marks.



Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow. If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

WHEEL RIMS

Checking rims

- Make sure the ground is level and firm and place the motor-cycle on its stand.
- Visually inspect the rims for defects.
- Have damaged rims checked and, if necessary, replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

WHEELS

Tyre recommendation

For each size of tyre, BMW Motorrad tests and classifies as roadworthy certain makes. BMW Motorrad cannot assess the suitability or provide any guarantee of road safety for other tyres.

BMW Motorrad recommends using only tyres tested by BMW Motorrad.

More detailed information is available from your authorised BMW Motorrad retailer.

Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the suspension control systems. In particular, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.


The sensor rings are essential for correct road-speed calculation, and they too must match

the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad retailer. In some cases, the data programmed into the control units can be changed to suit the new wheel sizes.


Removing front wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.

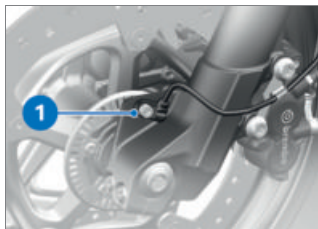


- Remove screw **1** and remove the wheel speed sensor from its bore.

210 MAINTENANCE

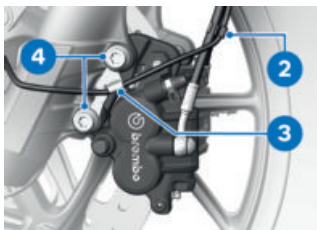

- Disengage the cable for the wheel speed sensor from holding clips **2** and **3**.
- Remove securing screws **4** from the left and right brake calipers.

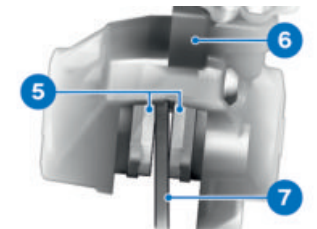

- Force brake pads **5** slightly apart by rocking brake caliper **6** back and forth against brake disc **7**.



ATTENTION

Use of hard or sharp-edged objects in proximity to component

Component damage

- Take care not to scratch components; cover or mask as necessary.

- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.



ATTENTION

Unwanted inward movement of the brake pads


Component damage on attempt to install the brake caliper or because brake pads have to be forced apart

- Do not operate the brakes with a brake caliper not correctly secured.

- Carefully pull the brake calipers back and out until clear of the brake discs.
- Place the motorcycle on a suitable auxiliary stand.
- Install the rear-wheel stand.
(197)

—with centre stand^{OE}


- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀
- Raise front of motorcycle until the front wheel can turn freely. BMW Motorrad recommends the BMW Motorrad front-wheel stand for lifting the motorcycle.
- Install the front-wheel stand. (▶ 197)

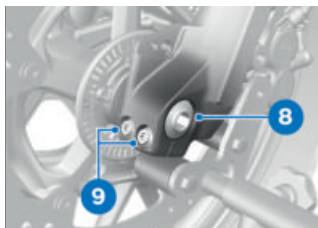

- Remove axle screw **8**.
- Slacken left axle clamping screws **9**.



- Slacken right axle clamping screws **10**.

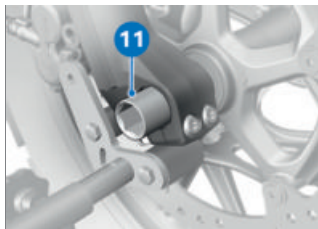

- Remove axle **11**, while supporting the wheel.
- Do not remove the grease from the axle.
- Roll the front wheel forward to remove.



- Remove spacing bushing **12** from the left-hand side of the wheel hub.

212 MAINTENANCE

Installing front wheel

WARNING

Use of a non-standard wheel
Malfunctions in operation of ABS and DTC

- See the information on the effect of wheel size on the ABS and DTC systems at the start of this chapter.

ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.



- Lubricate the running surface of spacer bush **12**.



Lubricant

Unirex N3

- Insert spacer bushing **12**, turned with the collar facing out, into the wheel hub on the left-hand side.




ATTENTION

Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim.
- Roll the front wheel into position between the forks of the front suspension.

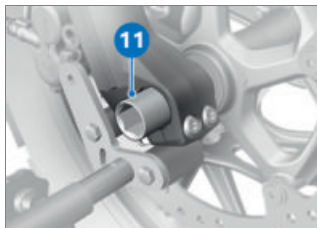

- Lubricate the quick-release axle **11**.



Lubricant


Unirex N3

**WARNING****Improper installation of the quick-release axle**

Loosening of the front wheel

- After securing the brake calipers and relieving the front forks, tighten the quick-release axle and the axle clamping to the specified tightening torque.

- Raise the front wheel and insert quick-release axle **11** until seated.

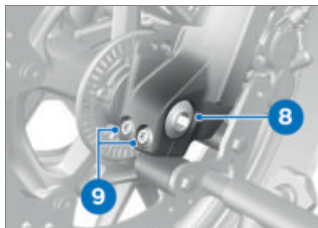

- Install axle screw **8** and tighten to the specified torque. In this process, counter-hold the quick-release axle on the right side.



Axle screw in front quick-release axle

M20 x 1.5

50 Nm

- Remove front-wheel stand and firmly compress front

forks several times. Do not operate the handbrake lever in this process.

- Install the front-wheel stand. (→ 197)
- Tighten left axle clamping screws **9** to the specified torque.



Clamp of quick-release axle

Tightening sequence: Tighten screws six times in alternate sequence

M8 x 35

19 Nm

214 MAINTENANCE



- Tighten right axle clamping screws **10** to the specified tightening torque.




Clamp of quick-release axle

Tightening sequence: Tighten screws six times in alternate sequence

M8 x 35

19 Nm

- Position left and right brake calipers on the brake discs.

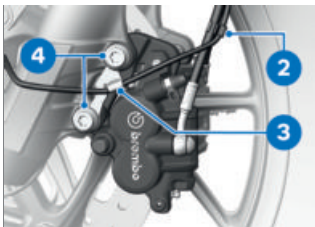

- Tighten securing screws **4** of the left and right brake calipers to the specified torque.



Brake caliper to telescopic fork

M10 x 45

38 Nm

- Remove the adhesive tape from the wheel rim.



WARNING

Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.

- Operate the brake several times until the brake pads are bedded.
- Seat the cable for the wheel-speed sensor in holding clips **2** and **3**.



- Insert the wheel speed sensor into the bore and tighten **new** screw **1** to the specified torque.



Wheel-speed sensor,
front, to fork leg

M6 x 16

Thread-locking compound:
micro-encapsulated

8 Nm

- Remove the front-wheel stand.
- without centre stand^{OE}
- Remove the auxiliary stand.
 - Place the motorcycle on its side stand.◀

Removing rear wheel



ATTENTION


Unwanted inward movement of the brake pads

Component damage on attempt to install the brake caliper or because brake pads have to be forced apart


- Do not operate the brakes with a brake caliper not correctly secured.

- Make sure the ground is level and firm and place the motorcycle on a suitable auxiliary stand.
 - Install the rear-wheel stand. (197)
- with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀
 - Slip wooden chocks or similar under the rear wheel to prevent it from dropping out after the quick-release axle has been removed.


216 MAINTENANCE

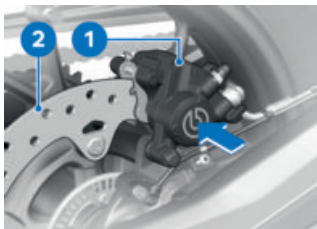


- Press the brake caliper **1** against the brake disc **2**.
» Brake pistons are pushed back.

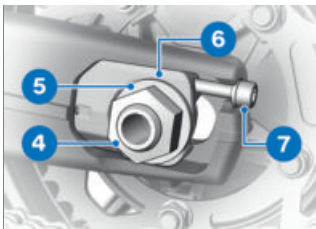


- Remove axle nut **4** and washer **5**.
- Back off adjusting screws **7** on both sides.
- Remove chain tensioner **6** and push the axle in as far as possible.

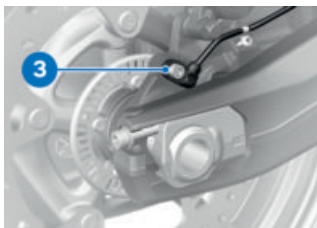

- Remove screw **3** and remove the wheel speed sensor from its bore.

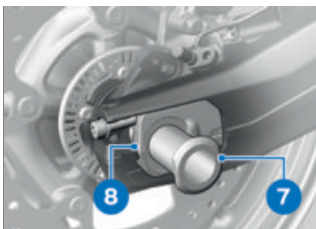

- Remove quick-release axle **7** and remove chain tensioner **8**.

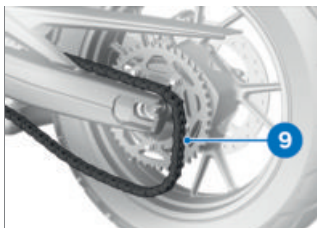

- Roll the rear wheel as far forward as possible and disengage chain **9** from the chain sprocket.



- Roll the rear wheel to the rear and clear of the swinging arm and at the same time pull brake-caliper carrier **10** back far enough to allow the rear wheel to clear it.

 The sprocket and the spacer bushes on left and right are loose fits in the wheel. Make sure that these parts are not damaged or get lost on removal.

Installing rear wheel

WARNING

Use of a non-standard wheel

Malfunctions in operation of ABS and DTC

- See the information on the effect of wheel size on the ABS and DTC systems at the start of this chapter.

ATTENTION

Tightening threaded fasteners to incorrect tightening torque


Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.


 The chain sprocket and the spacer bushes on left and right are loose fits in the wheel. When installing, make sure that no parts are not damaged or mislaid.

- Roll the rear wheel on the support into the swinging arm as far as necessary to permit the brake-caliper carrier to be inserted.


218 MAINTENANCE

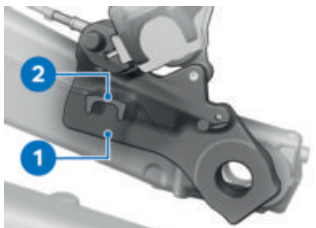

- Insert brake-caliper mounting bracket **1** into guide **2**.

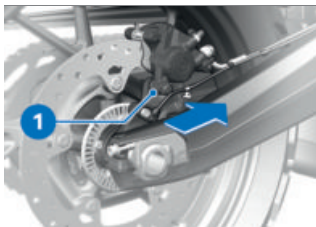


- Roll the rear wheel farther into the swinging arm, while pushing brake-caliper carrier **1** forward at the same time.

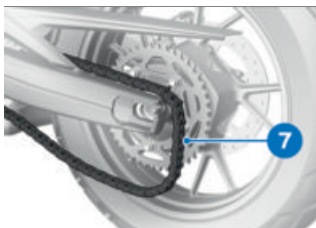

- Roll the rear wheel as far forward as possible and

loop chain **7** over the chain sprocket.

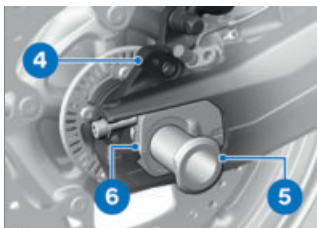


- Insert right chain tensioner **6** into the swinging arm.
- Lubricate quick-release axle **5** and install it in brake caliper mounting bracket **4** and rear wheel.



Lubricant

Unirex N3

- Make sure that the axle fits into the recess of the chain tensioner.

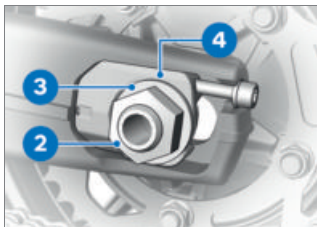


- Insert left chain tensioner **4**.

- Install washer **3** and axle nut **2**, but do not tighten yet.

—without centre stand^{OE}

- Remove the auxiliary stand.◁

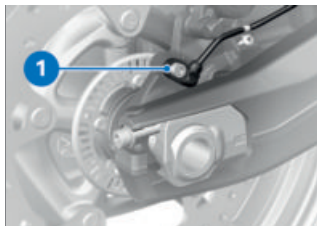

- Insert the wheel speed sensor into the bore and tighten **new** screw **1** to the specified torque.



Wheel-speed sensor,
rear, to brake caliper
carrier

M6 x 16

Thread-locking compound:
micro-encapsulated

8 Nm



WARNING

Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.

- After completing work, operate the brake several times until the brake pads are bedded.

- Adjust the chain tension.
(→ 221)

- Check the chain tension.
(→ 220)

CHAIN

Lubricate the chain



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.
- Lubricate the drive chain every 3rd refuelling stop.
- Lubricate the chain more frequently if the motorcycle is ridden in wet, dusty or dirty conditions.
- Switch the ignition off and select neutral.
- Clean the drive chain with a suitable cleaning product, dry it and apply chain lubricant.
- To prolong chain life, BMW Motorrad recommends using BMW Motorrad chain lubricant, or:

220 MAINTENANCE



Lubricant

Chain spray, O-ring compatible

- Wipe off excess lubricant.

Lubricating and caring for low-maintenance chain

—with M Endurance chain^{OE}



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.



The low-maintenance drive chain is cleaned and lubricated as part of the annual service. For optimum durability, the low-maintenance chain can also be lubricated at intervals by application of a chain lubricant suitable for low-maintenance chains. If riding involves above-average wear and tear due to exposure to salt or dust and dirt, carry out lubrication at correspondingly more frequent intervals.

- Switch the ignition off and select neutral.
- Clean the drive chain with a suitable cleaning product,

dry it and apply chain lubricant. To prolong chain life, BMW Motorrad recommends the use of BMW Motorrad chain lubricant or:




Lubricant

Chain spray, O-ring compatible

- Wipe off excess lubricant.

Check the chain tension

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Turn the rear wheel until it reaches the position of least chain sag.

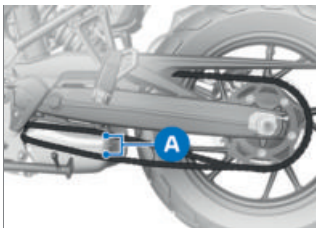

- Use a screwdriver to push the chain up and down at a point midway between the pinion and chain sprocket and measure difference **A**.


	Chain deflection
30...40 mm (Motorcycle with no weight applied, supported on its side stand)	
–with low-slung ^{OE}	
25...35 mm (Motorcycle with no weight applied, supported on its side stand)◁	

If measured value is outside permitted tolerance:

- Adjust the chain tension.
( 221)

Adjust the chain tension


- Make sure the ground is level and firm and place the motorcycle on its stand.

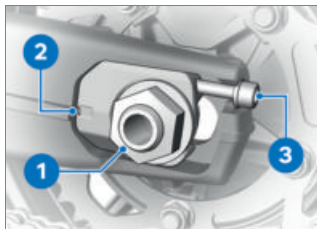

- Slacken axle nut **1**.
- Use adjusting screws **3** on left and right to adjust chain tension.
- Check the chain tension.
( 220)

- Make sure that scale readings **2** are the same on left and right.
- Tighten quick-release axle nut **1** to the specified torque.

	Rear quick-release axle in swinging arm
M24 x 1.5	
125 Nm	

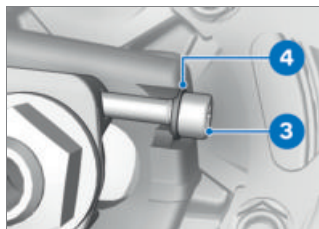

- Check that washer **4** is seated all round against screw head **3**, correct if necessary.

Check the chain wear Requirement


Chain tension is correct.

- Make sure the ground is level and firm and place the motorcycle on its stand.

222 MAINTENANCE



- Check whether third marker line **1** is fully visible.
- If third marker line **1** is fully visible, check chain length:
- Engage 1st gear.
 - Turn the rear wheel in the normal direction of travel until the chain is tensioned.
 - Measure the length of the chain, rivet centre to rivet centre, over 10 rivets below the rear wheel swinging arm.
 - Turn the rear wheel in the forward direction of travel and measure chain length at 3 different points.

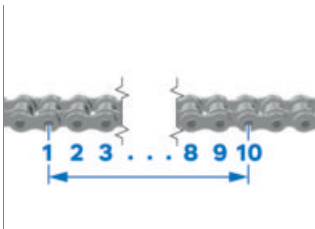


Permissible chain length

max 144 mm (measured from the **centre** of 10 rivets, chain pulled taut)

If the chain has stretched to the maximum permissible length:

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

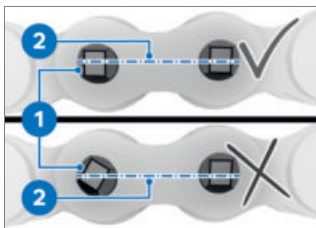

- Check whether a rivet head **1** has twisted out of line.

Rivet heads are parallel to the chain centreline **2**.

- Chain riveting is OK.


If one or more rivet heads have twisted out of line:

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.


AIR FILTER

Remove the air filter

- Remove the tank cover.
( 226)

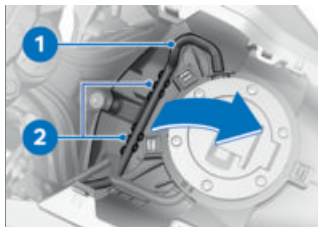

- Unclip hose **1** from retaining lugs **2**.

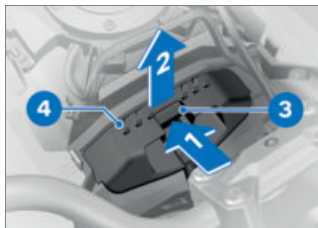

- To unlock, press and hold down button **3** (**arrow 1**).

- Pull frame **4** out of the holder (**arrow 2**).



- Remove frame **4**.
- Remove air filter **5**.

Install the air filter



ATTENTION

Poor filter function, drawing in of dirt particles. Air filter insert slips during insertion.


Component damage

- Correctly insert the air filter insert in the filter frame and hook into the pins.



- Install air filter **5** in frame **4**.

224 MAINTENANCE

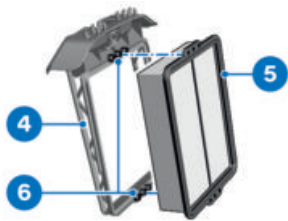


- Make sure that air filter **5** is correctly seated on lugs **6** of frame **4**.


—with Keyless Ride^{OE}



- Make sure that cable **7** is not trapped.◁

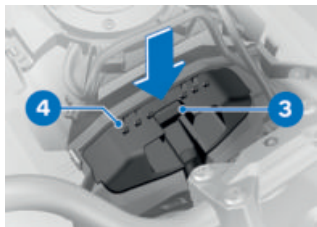

- Install frame **4**.
» Button **3** snaps into engagement.

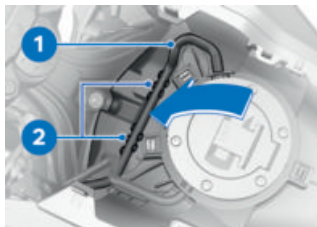

- Clip hose **1** into retaining lugs **2**.

LIGHTING

Replacing LED light sources



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk


- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

All light sources of the vehicle are LED light sources. The service life of the LED light sources is longer than the presumed vehicle service life. If an LED light source is faulty contact a specialist workshop,

preferably an authorised BMW Motorrad retailer.

Removing number-plate light

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.

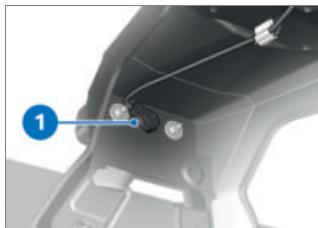

- Remove bulb socket **1** from the bulb carrier.



- Pull the bulb out of the bulb socket.

Install the number-plate light

- Replace the defective bulb.




Light source for the number plate light

W5W / 12 V / 5 W

- Use a clean, dry cloth to hold the new bulb in order to keep the glass free of foreign matter.



- Insert the bulb into the socket.

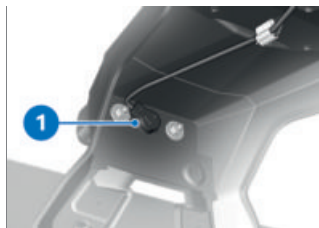


- Insert bulb socket **1** into the bulb carrier.

226 MAINTENANCE

TRIM PANEL COMPONENTS


Remove the tank cover

- Remove the seat. (➡ 119)

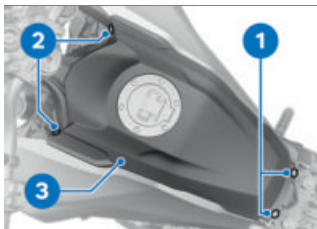

- Remove screws **1**.
- Remove screws **2**.
- Remove tank cover **3**, noting the mounting clips and retaining lugs.

Install the tank cover

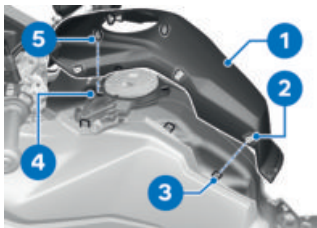

- Make sure that all six mounting clips **2** engage in connectors **3** and all three mounting clips **5** engage in connectors **4**.
- Install tank cover **1**.



- Install screws **2**.
- Install screws **1**.
- Install the seat. (➡ 120)

JUMP-STARTING



CAUTION

Touching live parts of the ignition system when the engine is running

Electric shock

- Do not touch parts of the ignition system when the engine is running.

**ATTENTION**
**Excessive current flowing
when the motorcycle is
jump-started**

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the engine by connecting leads to the on-board socket.

**ATTENTION**
**Contact between crocodile
clips of jump leads and
vehicle**

Risk of short-circuit


- Use jump leads fitted with fully insulated crocodile clips at both ends.

**ATTENTION**
**Jump-starting with a voltage
greater than 12 V**

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V.

- Remove the seat. (➡ 119)
- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.

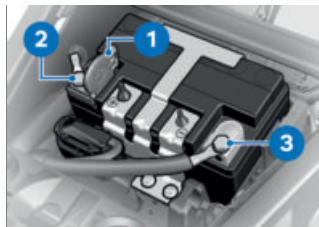

- Press in the lock and flip open positive terminal cover **1**.
- Begin by connecting one end of the red jump lead to the positive terminal of the discharged battery and the other end to the positive terminal of the donor battery (positive terminal on this vehicle: position **2**).
- Then connect one end of the black jump lead to the negative terminal of the donor battery and the other end to the negative terminal of the discharged battery (negative terminal on this vehicle: position **3**).



The spring-strut screw can be used as an altern-

228 MAINTENANCE

ative to the battery's negative terminal.

- Run the engine of the donor vehicle during jump-starting.
- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.
- Allow both engines to idle for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminals first, then disconnect the second lead from the positive terminals.

 Do not use proprietary start-assist sprays or other products to start the engine.

- Install the seat. (►► 120)

BATTERY

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.
- Do not turn the battery upside down.



ATTENTION

On-board electronics (e.g. clock) draining connected battery

Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.



BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.

Charging battery when connected

- Disconnect devices plugged into the sockets.



ATTENTION

Charging the battery that is connected to the vehicle via the battery terminals

Damage to the on-board electronics

- Disconnect the battery at the battery terminals before charging.



ATTENTION

Unsuitable chargers connected to a socket

Damage to charger and vehicle electronics

- Use suitable BMW chargers. The suitable charger is available from your authorised BMW Motorrad dealer.



ATTENTION

Recharging a fully discharged battery via the power socket or extra socket

Damage to the vehicle electronics

- If a battery has discharged to the extent that it is completely flat (battery voltage less than 12 V, indicator lights and multifunction display remain off when the ignition is switched on) always charge the **disconnected** battery with the charger connected directly to the battery terminals.

- With the battery connected to the vehicle's on-board electrical system, charge via the power socket.



The motorcycle's on-board electronics know when the battery is fully charged. The on-board socket is switched off when this happens.

- Comply with the operating instructions of the charger.



If you are unable to charge the battery through the on-board socket,

230 MAINTENANCE

you may be using a charger that is not compatible with your motorcycle's electronics. In this case, directly charge the battery at the terminals of the battery that has been disconnected from the vehicle.


Charge the battery when disconnected

- Disconnect the battery.
- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- After charging, disconnect the charger's terminal clips from the battery terminals.

 The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.

Removing battery

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Remove the seat. (► 119)
—with anti-theft alarm (DWA)^{OE}
- If applicable, switch off the anti-theft alarm.◁
- Switch off the ignition.

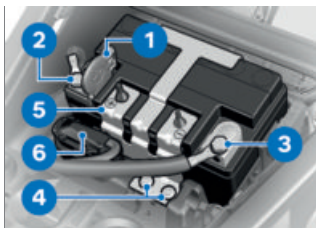

ATTENTION

Battery not disconnected in accordance with correct procedure


Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.
- First disconnect negative battery cable **3**.
- Press in the lock and flip open positive terminal cover **1**.
- Then disconnect positive battery cable **2**.
- Disengage diagnostic socket **6** from the holder.
- Remove screws **4** and work battery holder **5** forward until it is clear of the battery.
- Lift the battery up and out; work it slightly back and forth if it is difficult to remove.

Installing battery

 If the vehicle has been disconnected from the battery for a significant time, the current date will have to be entered in the instrument cluster to guarantee correct operation of the service display.

- Switch off the ignition.
- Insert the battery into the battery compartment, with the positive terminal on the right in the direction of travel.

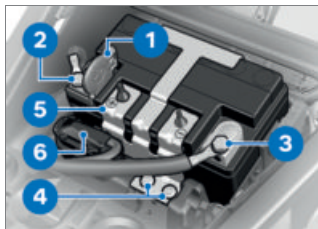

- Place battery holder **5** in position.
- Install screws **4**.
- Secure diagnostic socket **6** in the holder.
- Press in the lock and flip open positive terminal cover **1**.



ATTENTION

Battery not connected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with specified installation sequence.

- Connect positive battery cable **2**.




Wiring harness to battery

M6 x 13.5

5 Nm

- Close positive terminal cover **1**.

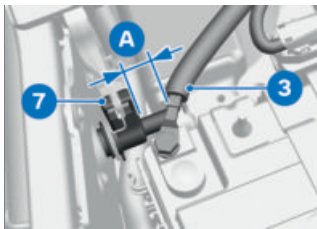

- Connect negative battery cable **3**, making sure that there is adequate clearance **A** between the negative battery cable and seat locking lever **7**.

232 MAINTENANCE



Wiring harness to battery

M6 x 13.5

5 Nm

–with anti-theft alarm (DWA)^{OE}

- If applicable, switch on the anti-theft alarm. ◁

- Install the seat. (➡ 120)
- Set the clock. (➡ 133)
- Set the date. (➡ 132)

FUSES

Replace the main fuse



ATTENTION

Jumpering of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
 - Always replace a defective fuse with a new fuse of the same amperage.
-
- Switch off the ignition.
 - Make sure the ground is level and firm and place the motorcycle on its stand.
 - Remove the seat. (➡ 119)



- Replace blown fuse 1.



If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.




Main fuse

40 A (Voltage regulator)

- Install the seat. (➡ 120)

Replacing fuses

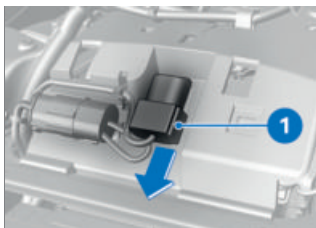

- Switch off the ignition.
- Remove the seat. (➡ 119)
- Remove fuse box 1.



ATTENTION

Jumping of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
- Always replace a defective fuse with a new fuse of the same amperage.

- Consult the fuse assignment diagram and replace blown fuse **1** or **2**.



If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.



Fuse box

10 A (Slot 1: instrument cluster, alarm system (DWA), ignition lock, diagnostic socket, coil main relay)



Fuse box

7.5 A (Slot 2: multifunction switch left, tyre pressure control (RDC))

- Insert the fuse box.
- Install the seat. (► 120)

DIAGNOSTIC CONNECTOR

Disengaging diagnostic socket



CAUTION


Incorrect disconnection of the diagnostic socket for on-board diagnosis

Malfunctions of the vehicle

- Do not disconnect the diagnostic socket or allow it to be disconnected except in the course of a BMW Motorrad service by a specialist workshop or by other authorised persons.
- Have the work carried out by appropriately trained personnel.
- Comply with the stipulations of the vehicle manufacturer.

- Remove the seat. (► 119)


234 MAINTENANCE

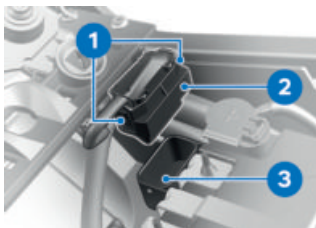

- Press locks **1** on both sides.
 - Disengage diagnostic socket **2** from holder **3**.
- » The interface to the diagnosis and information system can be connected to the diagnostic connector **2**.

Securing diagnostic socket

- Disconnect the interface for the diagnosis and information system.

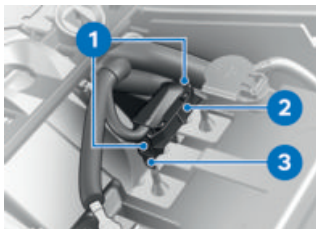

- Insert diagnostic socket **2** into holder **3**.
- » The locks **1** engage.
- Install the seat. (120)

ACCESSORIES

10

GENERAL NOTES	238
POWER SOCKETS	238
USB CHARGING SOCKET	239
CASES	240
TOPCASE	243
NAVIGATION SYSTEM	246

GENERAL NOTES



CAUTION

Use of other-make products

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle.

BMW has conducted extensive testing of the parts and accessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts responsibility for the products. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

All modifications must be in compliance with legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country.

Your authorised BMW Motorrad retailer can offer expert advice on the choice of genuine BMW parts, accessories and other products. To find out more about accessories go to:

bmw-motorrad.com/equipment

POWER SOCKETS

Notes on use of power sockets:

Automatic shutdown

Power sockets are shut down automatically under the following circumstances:

- If battery charge state is too low, to maintain the vehicle's start capability.
- If the maximum load capacity as stated in the technical data is exceeded.
- During the starting operation.
- The sockets continue to receive power for only 60 seconds after the ignition is switched off.

Operating electrical accessories

You can start using electrical accessories connected to the sockets only when the ignition is switched on.

Low-wattage electrical accessories might not be recognised by the vehicle's electronics. In such cases, power sockets are switched off very shortly after the ignition is turned off.

Cable routing

Note the following with regard to the routing of cables from sockets to items of electrical equipment:

- Make sure that cables do not impede the rider.
- Make sure that cables do not restrict the steering angle or obstruct handling.
- Make sure that cables cannot be trapped.

USB CHARGING SOCKET

Notes on use:

Charge current

This is a 5 V USB charging interface that provides a maximum charge current of 2.4 A.

Automatic shutdown

The USB charging sockets are shut down automatically under the following circumstances:

- If battery charge state is too low, to maintain the motor-cycle's start capability.
- If the maximum load capacity as stated in the technical data is exceeded.
- During the starting operation.

Connection of electrical devices

You can start using electrical devices connected to the USB charging sockets only when the ignition is switched on. The power supply to the sockets is switched off no more than 15 minutes after the ignition is switched off, in order to prevent overloading of the on-board electrics.

While riding in the rain, you should disconnect the device from the interface in order to protect against damage.

To prevent dirtying, keep the protective cover closed when no device is connected.

240 ACCESSORIES

Cable routing


Note the following with regard to the routing of cables from USB charging sockets to items of electronic equipment:

- Make sure that cables do not impede the rider.
- Make sure that cables do not restrict the steering angle or obstruct handling.
- Make sure that cables cannot be trapped.

CASES

Opening cases

– with case^{OA}

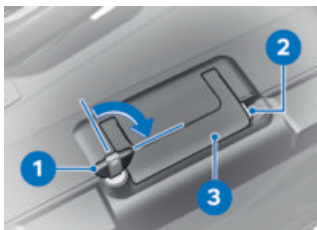

- Turn key **1** clockwise.
- Press and hold down yellow latch **2** and pull out carry handle **3**.




- Push yellow button **1** down, simultaneously opening the case lid.

Adjust the case volume

– with case^{OA}

- Open the case and remove all its contents.

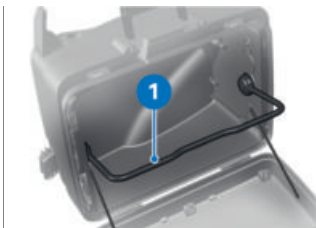

- Engage lever **1** in the upper end position to obtain the smaller volume.
- Engage lever **1** in the lower end position to obtain the larger volume.
- Close the case.

	Capacity, left case
25...35 l	
	Capacity, right case
15...23 l	

Closing cases

—with case^{OA}

- Turn the lock with the key until it is at right angles to the forward direction of travel.
- Close the case lid.
- » The lid engages with an audible click.



ATTENTION

Closure of carrying handle with case lock latched


Damage to locking tab

- Make sure that the case lock is at right angles to the forward direction of travel when you close the carry handle.

- Close carry handle **1**.
- Turn key **2** anti-clockwise and withdraw.

Removing cases

—with case^{OA}

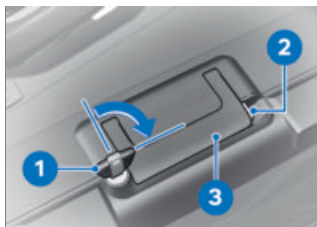

- Turn key **1** clockwise.

242 ACCESSORIES

- Press and hold down yellow latch **2** and pull out carry handle **3**.




- Pull red release lever **1** up.
 - » Latching flap **2** pops up.
- Fully open the latching flap.
- Take a firm grip of the carry handle and lift the case out of the holder.

Installing cases


—with case^{OA}




- Pull red release lever **1** up.
 - » Latching flap **2** pops up.
- Fully open the latching flap.

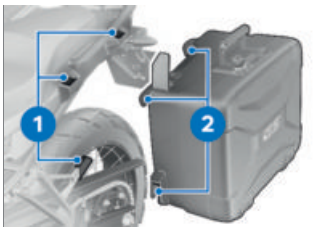

- Insert case into brackets **1** and **2** from above.

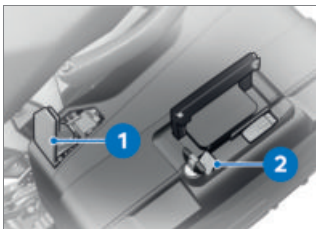

- Push locking flap **1** down until you feel some resistance.
- Then push locking flap and red release lever **2** down simultaneously.
 - » The locking flap engages.

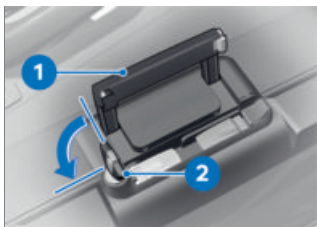**ATTENTION****Closure of carrying handle with case lock latched**

Damage to locking tab

- Make sure that the case lock is at right angles to the forward direction of travel when you close the carry handle.

- Close carry handle **1**.
- Turn key **2** anti-clockwise and withdraw.

Maximum payload and maximum speed

Note the maximum payload and the maximum permissible speed.



Maximum permissible speed for riding with cases fitted to the motorcycle

max 160 km/h



Payload per case

max 8 kg

TOPCASE**Opening topcase**

—with topcase^{OA}



- Turn key **1** clockwise.
- Press and hold down yellow latch **2** and pull out carry handle **3**.



- Push yellow button **1** forwards, simultaneously opening the topcase lid.

244 ACCESSORIES

Adjust the topcase volume

—with topcase^{OA}

- Open the topcase and remove all its contents.




- Engage lever **1** in the front limit position for the larger volume.
- Engage lever **1** in the rear limit position for the smaller volume.
- Close the topcase.

Closing topcase

—with topcase^{OA}

- Press down firmly on the topcase lid to close.

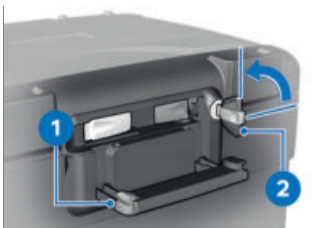

ATTENTION

Closure of carrying handle with case lock latched

Damage to locking tab

- Make sure that the topcase lock is vertical when you close the carry handle.

- Close carry handle **1**.
» The handle engages with an audible click.
- Turn key **2** anti-clockwise and withdraw.

Removing topcase

—with topcase^{OA}



- Turn key **1** clockwise.

- Press and hold down yellow latch **2** and pull out carry handle **3**.



- Pull red lever **1** to the rear.
» Latching flap **2** pops up.
- Fully open the latching flap.
- Take a firm grip of the handle and lift the topcase out of the holder.

Installing topcase

—with topcase^{OA}



- Pull red lever **1** to the rear.
» Latching flap **2** pops up.
- Fully open the latching flap.




- Engage the topcase in front holders **1** of the topcase carrier plate.
- Press the rear of the topcase on to the topcase carrier plate.



- Push locking flap **1** forwards until you feel some resistance.
- Then push locking flap and red release lever **2** forwards simultaneously.
» The locking flap engages.

246 ACCESSORIES

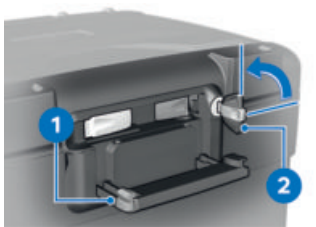

ATTENTION

Closure of carrying handle with case lock latched

Damage to locking tab

- Make sure that the topcase lock is vertical when you close the carry handle.

- Close carry handle **1**.
» The handle engages with an audible click.
- Turn key **2** anti-clockwise and withdraw.

Maximum payload and maximum speed

Note the maximum payload and the maximum permissible speed.



Maximum speed for riding with a loaded topcase

max 160 km/h



Payload of topcase

max 5 kg

NAVIGATION SYSTEM

—with preparation for navigation system^{OE}

Secure the navigation device




Navigation preparation is suitable from BMW Motorrad Navigator IV.




The latching system of the Mount Cradle is not designed to protect against theft.

Always remove the navigation system and stow it away safely as soon as you finish your ride.

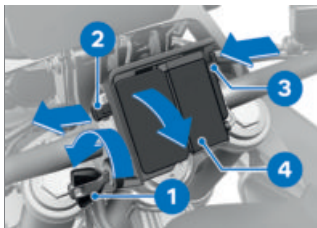

- Turn ignition key **1** counter-clockwise.
- Pull the lock retainer **2** to the **left**.
- Press the lock **3** in.

» The Mount Cradle is unlocked and cover **4** can be pivoted forward and removed.

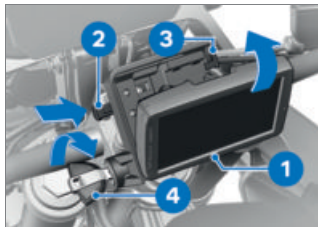

- Insert navigation device **1** at bottom and pivot it toward the rear.
- » The navigation device engages with an audible click.
- Push the lock retainer **2** all the way to the **right**.
- » Lock **3** is locked.
- Turn ignition key **4** clockwise.
- » The navigation device is secured and the ignition key can be removed.

Remove the navigation device and install cover




ATTENTION


Dust and dirt on the Mount Cradle contacts

Damaged contacts

- Always reinstall the cover as soon as you finish your ride.

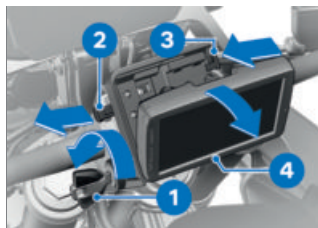

- Turn ignition key **1** counter-clockwise.
- Pull the lock retainer **2** all the way to the **left**.
- » Lock **3** is unlocked.
- Push lock **3** all the way to the **left**.
- » The navigation device **4** is unlocked.
- Tilt the navigation device **4** down and remove.

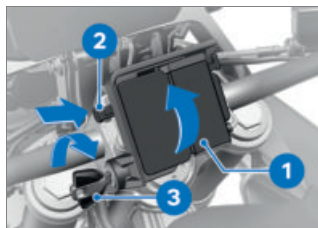

- Insert cover **1** in the lower section and swing to the top with a rotational movement.
- » The cover engages with an audible click.

248 ACCESSORIES


- Push lock retainer **2** to the **right**.
- Turn ignition key **3** clockwise.
- » Cover **1** is secured and the vehicle key can be removed.

Operating navigation system

 The description below is based on the BMW Motorrad Navigator V and the BMW Motorrad Navigator VI. The BMW Motorrad Navigator IV does not support all the options described here.

 Only the latest version of the BMW Motorrad communication system is supported. A software update of the BMW Motorrad communication system may be necessary. If this is the case, consult your authorised BMW Motorrad dealer.

If the BMW Motorrad Navigator is installed and the operating focus is switched to the Navigator ( 129), some of its functions can be operated without the rider removing a hand from the handlebars.

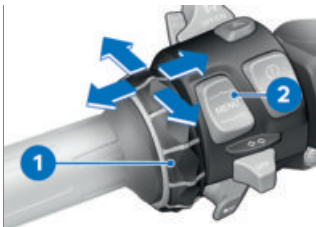

The navigation system is operated using Multi-Controller **1** and MENU rocker button **2**.

Turning Multi-Controller 1 up and down

On the Compass and Mediaplayer pages: Increase or decrease the volume of a Bluetooth-connected BMW Motorrad communication system.

In the BMW special menu: Select menu item.

Short-tilting Multi-Controller 1 to the left and right

Switch between the main pages of the Navigator:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My Motorcycle page

Long-tilting Multi-Controller 1 to the left and right

Activate certain functions on the Navigator display. An arrow to the right or to the left above the corresponding button area on the display indicates a function that can be activated in this way.



Long-push to the right to activate this function.



Long-push to the left to activate this function.

Pressing bottom section of MENU rocker button 2

Switch operating focus to Pure Ride view.

In detail, the following functions can be controlled:

Map view

- Turn up: Zoom in.
- Turn down: Zoom out.

BMW special menu

- Speak: Repeat most recent navigation announcement.
- Waypoint: Save current location as a favourite.
- Home: Starts navigation to home address (greyed if no home address has been defined).
- Mute: Switch automatic navigation announcements off

or on (off: a crossed-out lips symbol appears in the top line of the display). "Speak" will still activate navigation announcements. All other acoustic outputs remain switched on.

- Switch off display: Deactivate the display.
- Dial home number: Dials the home phone number saved in the Navigator (not shown unless a telephone is connected).
- Diversion: Activates the diversion function (not shown unless a route is active).
- Skip: Skips the next waypoint (not shown unless the route has waypoints).

My Motorcycle

- Turn: Changes the number of data shown.
- Touch a data field on the display to open the menu for selecting data.
- The values available for selection depend on the optional extras installed on the vehicle.



The MediaPlayer function is only available when a Bluetooth device complying with the A2DP standard is used, for example a


250 ACCESSORIES

BMW Motorrad communication system.

Mediaplayer

- Long-push to the left: Play preceding track.
- Long-push to the right: Play next track.
- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

Indicator and warning messages

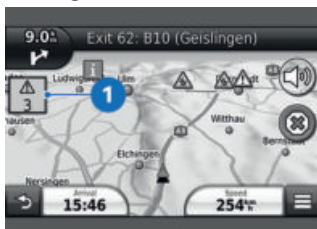

Indicator and warning messages from the motorcycle are indicated by an appropriate symbol **1** which appears at the top left in the map view.

 If a BMW Motorrad communication system is connected, warnings are accompanied by an acoustic signal.

If there are two or more active warnings the number appears below the warning triangle.

Touching the warning triangle when more than one warning is active opens a list of all the warnings.

Additional information appears as soon as a message is selected.

 Detailed information cannot be displayed for all warnings.

Special functions

Integration of the BMW Motorrad Navigator has produced a number of deviations from the descriptions in the operating instructions for the Navigator.

Reserve fuel level warning

The settings for the fuel gauge are not available, because the reserve warning is transmitted from the vehicle to the Navigator. Touch the message when it is active to view the locations of the nearest filling stations.

Security settings

The BMW Motorrad Navigator V and the BMW Motorrad Navigator VI can be secured against unauthorised use with a four-digit PIN (Garmin Lock). If this function is activated, while the Navigator is cradled on the vehicle and the ignition is

switched on you are prompted to add the vehicle to the list of secured vehicles. If you answer "Yes" at this prompt, the Navigator saves the VIN of this vehicle in its internal memory. A maximum of five VINs can be saved in this way.

It is then no longer necessary to enter the PIN when the Navigator is switched on by ignition ON on any of these vehicles.

If the Navigator is removed from the vehicle while switched on, a security prompt is issued asking for the PIN to be entered.

Screen brightness

Screen brightness is adjusted by the motorcycle while the unit is cradled. Manual input is not necessary.

Automatic setting can be switched off in the display settings for the Navigator if desired.

CARE

11

CARE PRODUCTS	254
WASHING THE VEHICLE	254
CLEANING EASILY DAMAGED COMPONENTS	255
CARE OF PAINTWORK	256
PAINT PRESERVATION	257
LAYING UP MOTORCYCLE	257
RESTORING MOTORCYCLE TO USE	258

CARE PRODUCTS

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad retailer. The substances in BMW Care Products have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



ATTENTION

Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol.



ATTENTION

Use of strongly acidic or strongly alkaline cleaning agents

Damage to vehicle parts

- Dilute in accordance with the dilution ratio stated on the packaging of the cleaning agent.
- Do not use strongly acidic or strongly alkaline cleaning agents.

WASHING THE VEHICLE

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Remove dirt from the fork legs at regular intervals.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt deposits, clean the vehicle and mounted parts, as applicable, with cold

water immediately after every trip.



After a ride in the rain, when humidity is high or after the vehicle has been washed, condensation might form inside the headlight. This can cause temporary fogging on the headlight lens. If moisture is constantly present inside the headlight consult a specialist workshop, preferably an authorised BMW Motorrad retailer.



WARNING

Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads.



ATTENTION

Effect of road salt intensified by warm water

Corrosion

- Use only cold water to remove road salt deposits.



ATTENTION

Damage due to high water pressure from high pressure cleaners or steam cleaners

Corrosion or short circuit, damage to labels, seals, hydraulic brake system, electrical system and the motorcycle seat

- Exercise restraint when using a steam jet or high pressure cleaning equipment.

CLEANING EASILY DAMAGED COMPONENTS

Plastics



ATTENTION

Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.

Clean the plastic parts with water and BMW plastic care product. This includes in particular:

- Windscreen and slipstream deflectors
- Headlight lens made of plastic
- Glass cover of the instrument cluster
- Black, unpainted parts

 Soften stubborn dirt and insects by covering the affected areas with a wet cloth.

TFT display

Clean the TFT display with warm water and washing-up liquid. Then dry it with a clean cloth, e.g. a paper towel.

Chrome

Carefully clean chrome parts with plenty of water and motorcycle cleaner from the BMW Motorrad Care Products range. This is particularly important to counter the effects of road salt. For an additional treatment, use BMW Motorrad metal polish.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



ATTENTION

Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.

Rubber

Treat rubber components with water or BMW rubber-care products.



ATTENTION

Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.

CARE OF PAINTWORK

Washing the vehicle regularly will help counteract the long-term effects of substances that can damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen. Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel,

oil, grease, brake fluid and bird droppings. For this, we recommend BMW Motorrad solvent cleaner followed by BMW Motorrad gloss polish for preservation.

Marks on the paintwork are particularly easy to see after the motorcycle has been washed. Remove stains of this kind at the earliest possible opportunity, using benzine or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Then apply preserving agent to the areas treated in this way.



ATTENTION

Damage to paintwork due to metal polish

Risk of damage

- Do not treat painted surfaces and chrome-painted surfaces with metal polish.

PAINT PRESERVATION

If water no longer rolls off the paint, the paint must be preserved.

For paint preservation, BMW Motorrad recommends the use of BMW Motorrad

gloss polish or agents containing carnauba wax or synthetic wax.



Do not use chrome polish to preserve chrome paints. Use only the agents recommended by BMW Motorrad.

LAYING UP MOTORCYCLE

- Fill the motorcycle's fuel tank.



Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.

- Clean the motorcycle.
- Remove the battery.
- Spray the brake and clutch lever pivots and the side stand pivot mounts with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel (preferably using the front-

258 CARE

wheel and rear-wheel stands from BMW Motorrad).

RESTORING MOTORCYCLE TO USE

- Remove the protective wax coating.
- Clean the motorcycle.
- Install the battery.
- Checklist. (🔌 160)

TECHNICAL DATA

12

TROUBLESHOOTING CHART	262
THREADED FASTENERS	264
FUEL	266
ENGINE OIL	266
ENGINE	267
CLUTCH	268
TRANSMISSION	268
FINAL DRIVE	268
FRAME	269
CHASSIS AND SUSPENSION	269
BRAKES	270
WHEELS AND TYRES	270
ELECTRICAL SYSTEM	272
DIMENSIONS	273
WEIGHTS	274
PERFORMANCE FIGURES	274

TROUBLESHOOTING CHART

The engine does not start:

Possible cause	Rectification
Side stand extended and gear engaged	Select neutral or retract the side stand.
Gear engaged and clutch not disengaged	Select neutral or pull the clutch lever.
No fuel in tank	Refuel.
Battery flat	Charge the battery when connected.
Starter motor overheating protection has tripped. The starter motor can be operated for a limited time only.	Allow the starter motor to cool down for approximately 1 minute before trying again.

The Bluetooth connection is not established.

Possible cause	Rectification
The steps required for pairing were not carried out.	Check the necessary steps for pairing in the operating instructions for the communication system.
The communication system was not connected automatically despite successful pairing.	Switch off the helmet's communication system and reconnect it after a minute or two.
Too many Bluetooth devices are saved on the helmet.	All pairing entries on the helmet are deleted (see the communication system operating instructions).
There are other vehicles with Bluetooth-capable devices in the vicinity.	Avoid simultaneously pairing with more vehicles.

Bluetooth connection is interrupted.

Possible cause	Rectification
The Bluetooth connection to the mobile device is interrupted.	Switch off energy saving mode.
The Bluetooth connection to the helmet is interrupted.	Switch off the helmet's communication system and reconnect it after a minute or two.
The volume in the helmet cannot be adjusted.	Switch off the helmet's communication system and reconnect it after a minute or two.

The telephone book is not displayed in the TFT display.

Possible cause	Rectification
The phone book was not transmitted to the vehicle.	Confirm transmission of the phone data ( 144) when pairing the mobile device.

Active route guidance is not displayed in the TFT display.

Possible cause	Rectification
Navigation from the BMW Motorrad Connected app was not transmitted.	The BMW Motorrad Connected app is opened on the connected mobile device prior to departure.
The route guidance cannot be started.	Secure the mobile device's data connection and check the map data on the mobile device.

264 TECHNICAL DATA

THREADED FASTENERS

Front wheel	Value	Valid
Wheel-speed sensor, front, to fork leg		
M6 x 16, Replace screw micro-encapsulated	8 Nm	
Brake caliper to telescopic fork		
M10 x 45	38 Nm	
Clamp of quick-release axle		
M8 x 35	Tightening sequence: Tighten screws six times in alternate sequence	
	19 Nm	
Axle screw in front quick-release axle		
M20 x 1.5	50 Nm	

Rear wheel	Value	Valid
Wheel-speed sensor, rear, to brake caliper carrier		
M6 x 16, Replace screw micro-encapsulated	8 Nm	
Rear quick-release axle in swinging arm		
M24 x 1.5	125 Nm	

Mirror arm	Value	Valid
Mirror (locknut) to clamping piece		
M10 x 1.25	Left-hand thread, 22 Nm	
Adapter to clamping block		
M10 x 14 - 4.8	25 Nm	

266 TECHNICAL DATA

FUEL

Recommended fuel grade	 Regular unleaded (maximum 15 % ethanol, E15)  91 ROZ/RON min 87 AKI
Usable fuel capacity	approx. 15 l
Reserve fuel	approx. 3.5 l
Fuel consumption	4.1 l/100 km, in accordance with WMTC
CO2 emission	98 g/km, according to WMTC
Exhaust emissions standard	EU5

ENGINE OIL

Engine oil, capacity	approx. 3.0 l, with filter change
Specification	SAE 5W-40, API SL / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

Oil additives	BMW Motorrad recommends not using oil additives, because they can have a detrimental effect on clutch operation. Please do not hesitate to contact your authorised BMW Motorrad retailer if you have any questions relating the choice of a suitable engine oil for your motorcycle.
Engine oil, quantity for topping up	max 0.5 l, Difference between MIN and MAX

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

ENGINE

Engine number location	Crankcase top section, near oil/coolant heat exchanger
Engine type	A24A08B
Engine design	Water-cooled 2-cylinder four-stroke engine with four valves per cylinder operated via rocker arms, two overhead camshafts and dry-sump lubrication
Displacement	853 cm ³
Cylinder bore	84 mm
Piston stroke	77 mm
Compression ratio	12.7 : 1
Nominal capacity	57 kW, at engine speed: 7500 min ⁻¹
—with power reduction to 35 kW ^{OE}	35 kW, at engine speed: 6500 min ⁻¹

268 TECHNICAL DATA

Torque	83 Nm, at engine speed: 6000 min ⁻¹
—with power reduction to 35 kW ^{OE}	63 Nm, at engine speed: 4500 min ⁻¹
Maximum engine speed	max 9000 min ⁻¹
Idle speed	1250 ^{±50} min ⁻¹ , Engine at reg- ular operating temperature

CLUTCH

Clutch type	Multiplate oil-bath clutch (anti- hopping)
-------------	---

TRANSMISSION

Type of transmission	Claw-shifted 6-speed manual gearbox integrated in the en- gine housing
Gearbox transmission ratios	1.821, Primary transmission ratio 2.833, 1st gear 2.067, 2nd gear 1.600, 3rd gear 1.308, 4th gear 1.103, 5th gear 0.968, 6th gear

FINAL DRIVE

Type of final drive	Chain drive
Chain deflection	30...40 mm, Motorcycle with no weight applied, supported on its side stand
—with low-slung ^{OE}	25...35 mm, Motorcycle with no weight applied, supported on its side stand

Permissible chain length	max 144 mm, measured from the centre of 10 rivets, chain pulled taut
Final drive, number of teeth (Pinion / sprocket)	17/44
Secondary transmission ratio	2.588

FRAME

Frame type	Bridge-type steel frame in shell construction
Type plate location	Frame, front left at steering head
Position of the vehicle identification number	Frame, front right by steering head

CHASSIS AND SUSPENSION

Front wheel

Type of front suspension	Telescopic forks
Spring travel, front	170 mm, at front wheel
–with low-slung ^{OE}	150 mm, at front wheel

Rear wheel

Type of rear suspension	Double arm aluminium swinging arm
Type of rear-wheel suspension	Central spring strut with coil spring, adjustable rebound stage damping and spring pre-load
Spring travel at rear wheel	170 mm, at rear wheel
–with low-slung ^{OE}	150 mm, at rear wheel

270 TECHNICAL DATA

BRAKES

Front wheel

Type of front brake	Hydraulically operated twin disc brake with 2-piston floating calipers and floating brake discs
Brake-pad material, front	Sintered metal
Brake disc thickness, front	4.5 mm, When new min 4.0 mm, Wear limit
Play of brake controls (Front brake)	0.7...1.7 mm, measured on the piston

Rear wheel

Type of rear brake	Hydraulically actuated disc brake with 1-piston floating caliper and fixed disc
Brake-pad material, rear	Organic material
Brake disc thickness, rear	5.0 mm, When new min 4.5 mm, Wear limit
Blow-by clearance of the foot-brake lever	1.9...2.1 mm, On the limit position for the footbrake lever on the footrest plate.

WHEELS AND TYRES

Recommended tyre combinations	Your authorised BMW Motorrad retailer will be happy to supply an up-to-date list of the approved wheel/tyre combinations.
Speed category, front/rear tyres	V, required at least: 240 km/h

Front wheel

Front-wheel type	Aluminium cast wheel
Front-wheel rim size	2.50" x 19" MTH2
Tyre designation, front	110/80 R 19
Load index, front tyre	59
Permissible front-wheel imbalance	max 5 g
Balance weight for front wheel (Weights have to be affixed with one half on the left and one half on the right, in other words centred on the rim)	max 80 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
Rear wheel rim size	4.25" x 17" MTH2
Tyre designation, rear	150/70 R 17
Load index, rear tyre	69
Permissible rear-wheel imbalance	max 45 g
Balance weight for rear wheel (Weights have to be affixed with one half on the left and one half on the right, in other words centred on the rim)	max 80 g

Tyre pressure

Tyre pressure, front	2.2 bar, One-up, tyre cold 2.5 bar, Two-up and/or with luggage, tyre cold
Tyre pressure, rear	2.5 bar, One-up, tyre cold 2.9 bar, Two-up and/or with luggage, tyre cold

272 TECHNICAL DATA

ELECTRICAL SYSTEM

Main fuse	40 A, Voltage regulator
Fuse box	10 A, Slot 1: instrument cluster, alarm system (DWA), ignition lock, diagnostic socket, coil main relay 7.5 A, Slot 2: multifunction switch left, tyre pressure control (RDC)
Fuses	All circuits are protected electronically. If a circuit has been switched off by the electronic fuse, the circuit is once again active after having switched on the ignition and as soon as the activating fault has been eliminated.
Electrical rating of on-board sockets	max 5 A, Total for all sockets

Battery

Battery type	AGM battery (Absorbent Glass Mat), maintenance-free
Battery rated voltage	12 V
Battery rated capacity	10 Ah
Battery type (For Keyless Ride radio-operated key)	
—with Keyless Ride ^{OE}	CR 2032

Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR9J-9E
---	---------------

Lighting

Bulb for high-beam headlight	LED
Bulbs for the low-beam headlight	LED
Bulb for parking light	LED
Bulb for tail light/brake light	LED
Light source for the number plate light	W5W / 12 V / 5 W
Bulbs for turn indicators	LED

DIMENSIONS

Length of motorcycle	2255 mm, over number-plate carrier
—with low-slung ^{OE}	2240 mm, over number-plate carrier
Height of motorcycle	min 1225 mm, over wind-screen, at DIN vehicle kerb weight
—with low-slung ^{OE}	1210 mm, over windscreen, at DIN vehicle kerb weight
Width of motorcycle	850 mm, without mounted parts 988 mm, with cases
Height of rider's seat	815 mm, without rider, at DIN vehicle kerb weight
—with comfort seat ^{OE}	830 mm, without rider, at DIN vehicle kerb weight
—with low-slung ^{OE}	770 mm, without rider, at DIN vehicle kerb weight

274 TECHNICAL DATA

Rider's inside-leg arc, heel to heel	1830 mm, without rider, at DIN vehicle kerb weight
–with comfort seat ^{OE}	1870 mm, without rider, at DIN vehicle kerb weight
–with low-slung ^{OE}	1750 mm, without rider, at DIN vehicle kerb weight

WEIGHTS

Vehicle kerb weight	227 kg, DIN unladen weight, ready for road, 90 % load of fuel, without optional equipment
Permissible gross vehicle weight	440 kg
Maximum payload	213 kg

PERFORMANCE FIGURES

Top speed	190 km/h
–with case ^{OA}	160 km/h
–with topcase ^{OA}	160 km/h
–with power reduction to 35 kW ^{OE}	161 km/h
–with Dynamic ESA ^{OE}	161 km/h

SERVICE

13

REPORTING SAFETY-RELEVANT DEFECTS	278
RECYCLING	279
BMW MOTORRAD SERVICE	279
BMW MOTORRAD SERVICE HISTORY	280
BMW MOTORRAD MOBILITY SERVICES	281
MAINTENANCE WORK	281
MAINTENANCE SCHEDULE	283
BMW MOTORRAD RUNNING-IN CHECK	284
MAINTENANCE CONFIRMATIONS	285
SERVICE CONFIRMATIONS	297

REPORTING SAFETY-RELEVANT DEFECTS

—with Canada export^{NV}

If you think that your motorcycle has a fault which may cause an accident, injury or death, you must inform the NHTSA (National Highway Traffic Safety Administration) immediately and BMW of North America, LLC.

If the NHTSA receives other similar complaints, it may open an investigation. If it finds that a safety defect exists in a group of vehicles, the NHTSA may order the manufacturer to perform a recall and remedy campaign. However, the NHTSA cannot become involved in individual problems between you, your retailer, or BMW of North America, LLC.

You can contact the NHTSA by calling the Vehicle Safety hotline on 1-888-327-4236 (teletypewriter TTY for the hearing impaired: 1-800-424-9153) for free, by visiting the website at <http://www.safercar.gov> or by writing to Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. Further information on vehicle safety is available at <http://www.safercar.gov>.

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls can call the toll-free hotline 1-800-333-0510. You can also obtain other information about motor vehicle safety from <http://www.tc.gc.ca/roadsafety>.

RECYCLING

Disposal of an EOL vehicle

BMW Motorrad recommends disposing of a vehicle that has reached the end of its useful life by taking it to a manufacturer-designated receiving centre for EOL vehicles.

In general, the laws of the country in question apply for receiving and recycling of EOL vehicles. Information about recycling and sustainability can be viewed on the country-specific websites of the manufacturer. Additional information can be obtained on request from your authorised BMW Motorrad retailer or another qualified service partner, or from a specialist workshop.

Disposal of the rider's manual

—with France export^{NV}



Dispose of this rider's manual by depositing it in the container provided for the purpose.

BMW MOTORRAD SERVICE

BMW Motorrad has an extensive network of retailers in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad retailers have the technical information and the technical know-how to carry out reliably all preventive maintenance and repair work on your BMW.

You can locate the nearest authorised BMW Motorrad retailer by visiting our website: **bmw-motorrad.com**.



WARNING

Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a specialist workshop, preferably an authorised BMW Motorrad dealer.

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle.

Have all maintenance and repair work carried out confirmed in the "Service" chapter in this manual. Evidence of regular preventive maintenance is essential for generous treatment of claims submitted after the warranty period has expired.

You can inquire about the content of BMW Motorrad services at your authorised BMW Motorrad retailer.

BMW MOTORRAD SERVICE HISTORY

Entries

Maintenance work that has been carried out is entered in the proof of maintenance. The entries are like a Service Booklet and provide proof of regular maintenance.

When an entry is made in the electronic service booklet of the vehicle, service-relevant data is saved in the central IT systems of BMW AG, Munich, Germany.

If there is a change in vehicle ownership, the data saved in the electronic service booklet can also be viewed by the new vehicle owner. A BMW Motorrad retailer or a specialist workshop can also view data that is stored in the electronic service booklet.

Objection

The vehicle owner can object to entries being made by the BMW Motorrad retailer or a specialist workshop in the electronic service booklet along

with the corresponding storage of data in the vehicle and transfer of data to the vehicle manufacturer for the period of time that they are the vehicle owner. In this instance, no entry is made in the electronic service booklet of the vehicle.

BMW MOTORRAD MOBILITY SERVICES

As owner of a new BMW vehicle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile Service, breakdown service, vehicle recovery service). Your authorised BMW Motorrad retailer will be happy provide information about the mobility services available to you.

MAINTENANCE WORK

BMW pre-delivery check

Your authorised BMW Motorrad retailer conducts the BMW pre-delivery check before handing over the vehicle to you.

BMW Running-in Check

The BMW running-in check has to be performed when the motorcycle has covered between 500 km and 1200 km.

BMW Motorrad Service

The BMW Motorrad Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad retailer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odometer reading is reached before the next scheduled date for the service.

282 SERVICE

The service-due indicator in the display reminds you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:

bmw-motorrad.com/service

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below:

MAINTENANCE SCHEDULE

	500 -1200 km 300 - 750 mls	10 000 km 6 000 mls	20 000 km 12 000 mls	30 000 km 18 000 mls	40 000 km 24 000 mls	50 000 km 30 000 mls	60 000 km 36 000 mls	70 000 km 42 000 mls	80 000 km 48 000 mls	90 000 km 54 000 mls	100 000 km 60 000 mls	12 months	24 months
1	X												
2		X	X	X	X	X	X	X	X	X	X	X ^a	
3		X	X	X	X	X	X	X	X	X	X	X ^a	
4			X		X		X		X		X		
5			X		X		X		X		X		
6			X		X		X		X		X		
7		X ^b	X ^b	X ^b	X ^b	X ^b	X ^b	X ^b	X ^b	X ^b	X ^b	X ^b	
8												X ^c	X ^c

1 BMW Motorrad running-in check (including oil change and oil filter change)

2 BMW Motorrad Service, standard scope

3 Engine-oil change, with filter

4 Check valve clearances

5 Replace all spark plugs

6 Replace air-filter element

7 Check or replace air filter insert

8 Change brake fluid, entire system

^a annually or every 10000 km (whichever comes first)

^b If the vehicle is used off-road, annually or every 10000 km (whichever comes first).

^c for the first time after one year, then every two years

BMW MOTORRAD RUNNING-IN CHECK

BMW Motorrad running-in check

The tasks included in the BMW Motorrad running-in check are listed below. The actual scope of work applicable for your vehicle may vary.

- Performing vehicle test with BMW Motorrad diagnostic system
- Oil change in engine with filter conversion (long oil filter)
- Adjusting steering-head bearing
- Securing top fork bridge
- Check the coolant level
- Checking brake-fluid level, front brakes
- Checking brake-fluid level, rear brakes
- Check/adjust the clutch play
- Checking chain tension and lubricating chain
- Check the tyre pressures
- Check the lighting and signalling system
- Function test, engine start suppression
- Final inspection and check for road safety
- Performing vehicle test with BMW Motorrad diagnostic system
- Setting service due date and countdown distance with BMW Motorrad diagnosis system
- Confirm the BMW service in the on-board literature

MAINTENANCE CONFIRMATIONS

BMW Motorrad Service standard scope

The tasks included in the BMW Motorrad Service standard scope are listed below. The actual scope of maintenance work applicable for your vehicle may vary.

- Performing vehicle test with BMW Motorrad diagnostic system
- Check the coolant level
- Check/adjust the clutch play
- Check the front brake pads and brake discs for wear
- Check the rear brake pads and brake disc for wear
- Check the brake fluid level, front and rear
- Visual inspection of the brake lines, brake hoses and connections
- Check the tyre pressures and tread depth
- Checking and lubricating the chain drive
- Check the side stand's ease of movement
- Check the ease of movement of the centre stand
- Check steering-head bearing
- Check the lighting and signalling system
- Function test, engine start suppression
- Final inspection and check for road safety
- Setting service-due date and countdown distance with BMW Motorrad diagnostic system
- Check the battery state of charge
- Confirm the BMW Motorrad service in the on-board literature

286 SERVICE

BMW Motorrad pre-delivery check

carried out

on _____

Stamp, signature

BMW Motorrad running-in check

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	☐	☐
Engine oil change with filter	☐	☐
Checking valve clearance	☐	☐
Renewing all spark plugs	☐	☐
Replacing the air filter element	☐	☐
Checking or replacing the air filter element (during service)	☐	☐
Changing the brake fluid in the entire system	☐	☐

Notes

Stamp, signature

298 SERVICE

[illegible]

DECLARATION OF CONFORMITY	301
CERTIFICATE FOR ELECTRONIC IMMOBILISER	304
CERTIFICATE FOR KEYLESS RIDE	307
CERTIFICATE FOR KEYLESS RIDE	309
CERTIFICATE FOR KEYLESS RIDE	311
CERTIFICATE FOR KEYLESS RIDE	313
CERTIFICATE FOR TYRE PRESSURE CONTROL (RE- IFENDRUCK-CONTROL, RDC)	315
CERTIFICATE FOR TFT INSTRUMENT CLUSTER	316

DECLARATION OF CONFORMITY**Manufacturer**

Bayerische Motoren Werke Aktiengesellschaft
Petuelring 130, 80809 Munich, Germany

Hereby, BMW AG declares that the radio equipment components listed below are in compliance with Directive 2014/53/EU and with Radio Equipment Regulations 2017 of the United Kingdom. The full text of the EU/UK declarations of conformity are available at the following internet address:
bmw-motorrad.com/certification



Simplified UK Declaration of Conformity according to Radio Equipment Regulations 2017 of the United Kingdom.



Simplified EU Declaration of Conformity according to EU RED (2014/53/EU).

302 APPENDIX

Technical information

Radio equipment	Component	Frequency band	Output/Transmission Power
EWS4	EWS	134 kHz	50 dB μ V/m
HUF5750	Keyless Ride	434,42 MHz	10 mW
HUF8465	Keyless Ride	134,45 kHz	42 dB μ V/m
HUF5794	Keyless Ride	433,92 MHz	10 mW
HUF8485	Keyless Ride	134,45 kHz	42 dB μ V/m
ZB001	Keyless Ride	134.5 kHz	allowed 66 dB μ A/ m@ 10m
ZB002	Keyless Ride	433.92 MHz	max. 10 dBm e.r.p
TXBM-WMR	DWA	433.05 MHz - 434.79 MHz	18,8 dBm
RDC3	RDC	433.92 MHz	<13 mW
Wus Moto gen 3	RDC	433,05 MHz - 434,79 MHz	<10 mW e.r.p.
MC24MA4	RDC		
WCA Motorrad-Ladestufach	Charging compartment	110 kHz - 115 kHz	< 6 W
ICC6.5in	Instrument Cluster	Bluetooth: 2402 MHz - 2480 MHz WLAN: 2412 MHz - 2462 MHz	Bluetooth: < 4 dBm WLAN: < 20 dBm

Radio equipment	Component	Frequency band	Output/Transmission Power
ICC10in	Instrument Cluster	Bluetooth: 2402 MHz - 2480 MHz WLAN: 2402 MHz - 2472 MHz	Bluetooth: < +4 dBm WLAN: < +14 dBm
MRR e14FCR	ACC	76 - 77 GHz	Peak max. 32 dBm Nom max. 27 dBm
TL1P22	Intelligent emergency call	832 MHz - 862 MHz 880 MHz - 915 MHz 1710 MHz - 1785 MHz 1920 MHz - 1980 MHz 2500 MHz - 2570 MHz 2570 MHz - 2620 MHz GNSS: 1559 MHz-1610 MHz	23 dBm 33 dBm 30 dBm 24 dBm 23 dBm 23 dBm
MCR001	Audio system		

Declaration of Conformity

Radio equipment electronic immobiliser (EWS4)

For all countries without EU

Technical information

Frequency Band: 134 kHz
(Transponder: TMS37145 /
Type DST80, TMS3705
Transponder Base Station IC)
Output Power: 50 dBμV/m

Manufacturer and Address

Manufacturer:
BECOM Electronics GmbH
Address: Technikerstraße 1,
A-7442 Hochstraß

Argentina

 **RAMATEL**
H-25246

Australia/New Zealand



R-NZ

Brunei



TA No: DTA-007061

United Arab Emirates

TRA
REGISTERED No:
ER89926/20

DEALER No:
DA96133I20

Philippiens



NTC

Type Approved
No.: ESD-RCE-2023298

South Africa



TA-2020/6131

APPROVED

India

ETA-SD-20200905860

Belarus



Indonesia

72790/SDPPI/2021
13349




Dilarang melakukan perubahan
Spesifikasi yang dapat
Menimbulkan gangguan fisik
dan/atau elektromagnetik
terhadap lingkungan sekitarnya

Taiwan



低功 電波 射性電機管 辦法
第十二條 經型式認證合格之低
功率射頻電 機，非經許可，公
司、商號或使用者均不得擅 自變
更頻率、加大功率或變更原設計
之特性及 功能。第十四條 低功
率射頻電機之使用不 得影響飛航
安全及干擾合法通信；經發現有
干 擾現象時，應立即停用，並改
善至無干擾時方 得繼續使用。前
項合法通信，指依電信法規定作
業之無線電 通信。

Paraguay

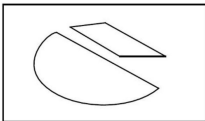

CONATEL

NR: 2020-11-I-0834

Malaysia



RFCL/47A/0920/S(20-3358)

Singapore

Complies with
IMDA Standards
N3504-20

Israel

מספר אישור אלחוטי של משרד התקשורת הוא
51-74908
אסור להחליף את האנטנה המקורית של המכשיר
ולא
לעשות בו כל שינוי טכני אחר

United States (USA)

Contains FCC ID:

ODE-MREWS5012

FCC § 15.19 Labelling requirements

This device complies with part 15 of the FCC Rules and Industry Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC § 15.21 Information to user

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Requirements

To comply with FCC RF exposure compliance requirements, the device must be installed to provide a separation distance of at least 20 cm from all persons.

Serbia



P1620118300

Canada

Contains IC:


10430A-MREWS5012

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Vietnam

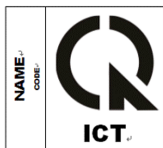

A1109091120AF04A3

Declaration of Conformity

Keyless Ride ECU

For all Countries without EU

Model name: HUF8485

Technical information

Frequenzy band: 134,45 kHz
Output/Transmission Power:
42 dBμV/m

Manufacturer and Address

Huf Hülsbeck &
Fürst GmbH & Co. KG
Steeger Str. 17,
42551 Velbert, Germany

Argentina

R RAMATEL

H-27411

Morocco

AGREE PAR L'ANRT MAROC
Numéro d'agrément: MR00031290ANRT2022
Date d'agrément: 06/01/2022

Nigeria

Connection and use of this communications
equipment is permitted by the Nigerian
Communications Commission

United Arab Emirates



TRA – United Arab Emirates

Dealer ID: DA36976/14
TA RTTE: ER04912/22
Model: HUF8485
Type: BMW



Malaysia



Philippines



NTC

Type Approved
No. ESD-RCE-2228692

South Africa



TA-2022/0251

APPROVED

Vietnam



Indonesia

81597/SDPPI/2022



13349

Paraguay



Pakistan



Oman

OMAN - TRA

R/13020/22

D100428

Singapore

Complies with
IMDA Standards
DA105282

Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

Thailand



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



nadb. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (Inswr)

Declaration of Conformity

Keyless Ride Key

For all Countries without EU

Model name: HUF5794

Technical information

Frequenzy band: 433,92 MHz

Output/Transmission Power:

10 mW

Manufacturer and Address

Huf Hülsbeck &

Fürst GmbH & Co. KG

Steeger Str. 17,

42551 Velbert, Germany

Oman

OMAN - TRA

R/13021/22

D100428

Morocco

AGREE PAR L'ANRT MAROC

Numéro d'agrément: MR00031289ANRT2022

Date d'agrément: 06/01/2022

Nigeria

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

United Arab Emirates



TRA - United Arab Emirates

Dealer ID: DA36976/14

 
TA RTTE: ER04909/22

Model: HUF5794

Type: BMW



Malaysia



MCMC

HIDF17000037

Philippines



NTC

Type Approved

No. ESD-RCE-2228693

South Africa



TA-2022/0252

APPROVED

Vietnam



Serbia



 
Indonesia

81598/SDPPI/2022



13349

Paraguay



CONATEL

2022-01-I-0051

Pakistan



Approved by PTA
TAC NO: 9.140/2022

PTA
Pakistan Telecom Authority

Belarus



Singapore

Complies with
IMDA Standards
DA105282

Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

Thailand



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



nabp. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (Inswr)

Declaration of Conformity

Keyless Ride ECU

For all Countries without EU

Model name: HUF8465

Technical information

Frequenzy band: 134,45 kHz
Output/Transmission Power:
42 dBµV/m

Manufacturer and Address

Huf Hülsbeck &
Furst GmbH & Co. KG
Steeger Str. 17,
42551 Velbert, Germany

Argentina

R. RAMATEL

H-27885

Morocco

AGREE PAR L'ANRT MAROC
Numéro d'agrément: MR 9389 ANRT 2014
Date d'agrément: 24/06/2014

Nigeria

Connection and use of this communications
equipment is permitted by the Nigerian
Communications Commission


United Arab Emirates



TRA – United Arab Emirates

Dealer ID: DA36976/14
TA RTTE: ER59309/17
Model: HUF8465
Type: ELV incl. ECU

 Malaysia



MCMC
HIDF17000037

Philippines



NTC

Type Approved
No. ESD-1409281C

South Africa



TA-2014/886

APPROVED

Vietnam



 
Indonesia

81555/SDPPI/2022



13349

Paraguay



CONATEL

2020-05-I-0278

Singapore

Complies with
IMDA Standards
DA101586

Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

Thailand



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มิ ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



nabp. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (InsWร)

Declaration of Conformity

Keyless Ride Key

For all Countries without EU

Model name: HUF5750

Technical information

Frequenzy band: 434,42 MHz

Output/Transmission Power:

10 mW

Manufacturer and Address

Huf Hulsbeck &

Fürst GmbH & Co. KG

Steeger Str. 17,

42551 Velbert, Germany

Argentina

CNC COMISIÓN NACIONAL
DE COMUNICACIONES

H-17115

Morocco

AGREE PAR L'ANRT MAROC

Numéro d'agrément: MR 8851 ANRT 2014

Date d'agrément: 17/01/2014

Nigeria

Connection and use of this communications
equipment is permitted by the Nigerian
Communications Commission

United Arab Emirates



TRA – United Arab Emirates

Dealer ID: DA36976/14

 
TA RTE: ER57698/17

Model: HUF5750

Type: RF transceiver for BMW Motorcycles



Malaysia



MCMC

HIDF17000037

Philippines



NTC

Type Approved

No. ESD-1408693C

South Africa



TA-2013/1674

APPROVED

Vietnam



THACO AUTO
C900248

ICT

 
Indonesia

81556/SDPPI/2022



13349

Paraguay



CONATEL

2020-05-I-0277

Belarus



Singapore

Complies with
IMDA Standards
DA101586

Serbia



M005 19

Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

Thailand



nabp.

เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มิ ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



nabp. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (InsWร)

Certification Tire Pressure Control (TPC)

FCC ID: MRXBC54MA4
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Declaration of Conformity

Radio equipment TFT instrument cluster

For all Countries without EU

Technical information

BT operating frq. Range:
2402 – 2480 MHz
BT version: 4.2 (no BTLE)
BT output power: < 4 dBm
WLAN operating frq. Range:
2412 – 2462 MHz
WLAN standards:
IEEE 802.11 b/g/n
WLAN output power: < 20 dBm

Manufacturer and Address

Manufacturer:
Robert Bosch GmbH
Address: Robert Bosch Str. 200,
31139 Hildesheim, Germany

Turkey

Robert Bosch GmbH, ICC6.5'in
tipi telsiz sisteminin 2014/53/EU
nolu yönetmeliğe uygun
olduğunu beyan eder. AB
Uygunluk Beyanı'nın tam metni,
aşağıdaki internet adresinden
görülebilir: <http://cert.bosch-carmultimedia.net>

Argentina

 **RAMATEL**

C-24711

Brazil

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

Canada

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Korea

적합성평가에 관한 고시

R-CMM-RBR-ICC65IN

상호 : Robert Bosch GmbH모델

명 : ICC6.5in

기자재명칭 : 특정소출력 무선기기
(무선데이터통신시스템용 무선기기)

제조사 및 제조국가 : Robert

Bosch GmbH / 포르투갈

제조년월 : 제조년월로 표기

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

Mexico

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Taiwan, Republic of

根據 NCC 低功率電波輻射性電機
管理辦法 規定: 第十二條

經型式認證合格之低功率射頻電機, 非經許可, 公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信; 經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。

前項合法通信, 指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Thailand

เครื่องโทรคมนาคมและอุปกรณ์นี้

มีความสอดคล้องตามข้อกำหนดของ กทช.

(This telecommunication equipments is in compliance with NTC requirements)

United States (USA)

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

320 INDEX

A

Abbreviations and symbols, 4

ABS

Control, 21

Engineering details, 180

Self-diagnosis, 162

Warning indicators, 43, 73, 74

Ambient temperature, 34, 59

Average values, 98

B

Battery

charging, 229, 230

installing, 231

Maintenance instructions, 228

removing, 230

Technical data, 272

Warning indicators, 36, 60, 61, 62

Bluetooth, 134

Brake fluid

Checking fill level, 202, 203

Fluid reservoir, 19

Brake pads

Check, 200, 201

Running in, 164

Brakes

ABS Pro, 168, 183

Adjusting brake lever, 150

Checking operation, 200

Safety information, 167

Technical data, 270

C

Care

Care products, 254

Chrome, 256

Paintwork preservation, 257

Washing the vehicle, 254

Cases, 240

Chain

Checking wear, 221

Lubricating, 219

Sag, 220, 221

Chassis and suspension, 269

Check control, 52

Checklist, 160

Clock

adjusting, 99, 100, 133

Control, 24

Clutch

Adjusting clutch lever, 149

Checking operation, 204

Play, 205

Technical data, 268

Coolant

Checking fill level, 205

Fill-level indicator, 19

topping up, 206

Warning indicators, 36

Cruise control, 111

D

Damping, 18

Date, 100

Daytime riding lights, 94, 95

Default settings, 118

Diagnostic connector

disengaging, 233

Position on the vehicle, 20

securing, 234

Dimensions, 273

Distance recorders

Control, 24

Tripmeter, 98

DTC

Engineering details, 183

operating, 104

Self-diagnosis, 163

Warning indicators, 44, 74,
75, 76

DWA

Indicator light, 25

Warning indicator lights, 64

Warning indicators, 39, 63,
64

Dynamic Brake Control, 188

Dynamic engine brake

control, 185

Dynamic ESA

Control, 21

operating, 105

E

Electrical system, 272

Emergency call

automatic, 91, 92

Control, 22

Language, 89

manual, 89

Notes, 11

Reading, 47

Warning indicators, 46, 47,
72

Emergency off switch (kill
switch)

Control, 22, 23

operating, 88

Engine

starting, 161

Technical data, 267

Warning indicator lights, 37,
66

Warning indicators, 37, 38,
66, 67

Engine oil

Checking fill level, 198

Filler neck, 18

Oil dipstick, 18

Technical data, 266

topping up, 199

Engine temperature, 64, 65

F

Final drive, 268

Footrests, 18, 19

Frame, 269

Front-wheel stand, 197

Fuel

Fuel grade, 170

Fuel reserve, 45

refuelling, 171, 172, 173

Technical data, 266

Fuel filler cap emergency

release, 174

Fuel reserve

Range, 132

Warning indicators, 45, 77

Fuses

Position on the vehicle, 20

replacing, 232

G

General views

Indicator and warning
lights, 28, 49

Instrument cluster, 24, 25

322 INDEX

- Left multifunction switch, 21
- left side of vehicle, 18
- Multifunction display, 29
- My vehicle, 137
- Right multifunction switch, 22, 23
- right side of vehicle, 19
- SETUP, 99
- TFT display, 50, 51
- Underneath the seat, 20

H

- Hazard warning flashers, 96
 - Control, 21
- Headlight
 - Headlight beam throw, 148, 149
 - Right- or left-hand traffic, 148
- Headlight courtesy delay
 - feature, 93
- Heated handlebar grips
 - Control, 22, 23
 - operating, 118
- Horn, 21

I

- Ignition, 82
- Immobiliser
 - Spare key, 87
 - Warning indicators, 35
- Indicator lights
 - Instrument cluster, 25
 - Overview, 28, 49

- Instrument cluster
 - Adjusting the brightness of the backlighting, 102
 - Ambient-light brightness sensor, 25
 - Overview, 24, 25
 - Photosensor, 24
 - Set the units, 102

J

- Jump-starting, 226

K

- Keyless Ride
 - Battery empty or loss of radio-operated key, 85
 - Engaging steering lock, 83
 - Fuel filler cap, unlocking, 172, 173
 - Ignition, 84, 85
 - Warning indicators, 35, 59, 60
- Keys, 82, 83

L

- Lighting
 - replacing, 224
 - Technical data, 273
 - Warning indicators, 38, 62
- Lights
 - Auxiliary headlights, 94
 - Control, 21
 - Daytime riding light, 94, 95
 - Headlight courtesy delay
 - feature, 93
 - Headlight flasher, 93
 - High-beam headlight, 93
 - Low-beam headlight, 92
 - Parking lights, 93

Side light, 92
 Lowered suspension, 156
 Luggage, 157

M

Maintenance confirma-
 tions, 285
 Maintenance intervals, 281
 Maintenance schedule, 283
 Media, 142
 Menu, 128
 Mirrors, 148
 Mobility services, 281
 Motorcycle
 care, 252
 cleaning, 252
 lashing, 175
 laying up, 257
 parking, 169
 restoring to use, 258
 Multifunction display
 Display, 97, 102
 Indicator and warning
 lights, 24
 operating, 97
 Overview, 29
 SETUP, 99
 Multifunction switch
 Overview, left side, 21
 Overview, right side, 22, 23

N

Navigation, 140

O

Off-road mode
 adjusting, 108
 Engineering details, 186
 Off-roading, 166

On-board computer, 97, 140
 On-board voltage, 36, 60, 61,
 62
 Operating focus, 129

P

Pairing, 134
 Parking light, 93
 Performance figures, 274
 Phone, 143
 Power socket
 Notes on use, 238
 Position on the vehicle, 18
 Pre-Ride-Check, 161
 Pure Ride, 50

R

Radio-operated key
 Replacing battery, 86
 Warning indicators, 59, 60
 RDC
 Engineering details, 189
 Warning indicators, 39, 40,
 68, 69, 70, 71, 72
 Rear grab handle, 18, 19
 Rear-wheel stand, 197
 Recycling, 279
 Redline warning, 24
 Refuelling
 Fuel grade, 170
 Refuelling, 171, 172, 173
 Rev. counter, 24, 25, 131
 Riding mode, 108
 Riding time, 98
 Riding-mode preselection, 108
 Running in, 164

324 INDEX

S

- Safety instructions
 - for brakes, 167
 - for riding, 156
- Screw connections, 264
- Seat
 - installing, 119
 - Lock, 18
 - removing, 119
- Service
 - BMW Motorrad Service, 279
 - Reporting safety-relevant defects, 278
 - Service history, 280
 - Warning indicators, 78
- Service-due indicator, 46
- SETUP
 - ending, 99
 - resetting, 103
 - selecting, 99
- Shift assistant
 - Engineering details, 191
 - Gear not trained, 77
 - Riding, 165
- Shifting gear, 48, 132
- Spark plugs, 272
- Speed Limit Info, 131
- Speedometer, 24, 25
- Spring preload
 - Adjuster, 19
 - adjusting, 151
- Starting
 - Control, 22, 23
 - Engine, 161
- Status line, top, 129, 130
- Steering lock, 82

T

- TFT display
 - Control, 21
 - Instrument cluster, 25
 - operating, 128, 129
 - Overview, 50, 51
- Toolkit, 20
- Topcase, 243
- Torques, 264
- Transmission, 268
- Trim panels, 226
- Tripmeter, 98
- Troubleshooting chart, 262
- Turn indicators, 96
 - Control, 21
- Type plate, 19
- Tyres
 - Checking tread depth, 207, 208
 - Checking tyre pressure, 207
 - Pressures, 271
 - Recommendation, 209
 - Running in, 164
 - Technical data, 270
 - Top speed, 158

U

- USB charging socket, 18

V

- Vehicle Identification
 - Number, 19

W

- Warning indicator lights
 - ABS, 43, 73, 74
 - Anti-theft alarm, 39, 64
 - Bulb faulty, 38, 62
 - Coolant temperature, 36
 - DTC, 44, 74, 75, 76

- DWA, 63, 64
- Electrical machine control
 - unit, 66, 67
 - Electrical machine temperature, 64, 65
- Emergency call, 46, 47, 72
- Engine, 37, 66
- Engine electronics, 37, 66
- Engine warning, 38
- EWS, 35
- Fuel reserve, 45, 77
- Gear not trained, 77
- Keyless Ride, 59, 60
- Light control failed, 63
- Mode of presentation, 30, 52
- My vehicle, 137
- On-board voltage, 36, 60, 61, 62
- Outside temperature
 - warning, 34, 59
- RDC, 39, 40, 68, 69, 70, 71, 72
- Service, 78
- Side stand, 73
- Warning light, drive malfunction, 37, 65
- Warning lights
 - Instrument cluster, 25
 - Overview, 28, 49
- Warnings, overview, 31, 54
- Weights
 - Payload table, 20
 - Technical data, 274
- Wheels
 - Change of size, 209
 - Checking rims, 208
 - installing, 212, 217
 - removing, 209, 215
- Technical data, 270
- Windscreen, 149

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2022 Bayerische Motoren
Werke Aktiengesellschaft
80788 Munich, Germany

Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Original rider's manual, printed in Germany.

Important data for refuelling:

Fuel

Recommended fuel grade	 Regular unleaded (maximum 15 % ethanol, E15)  91 ROZ/RON min 87 AKI
------------------------	--

Usable fuel capacity	approx. 15 l
----------------------	--------------

Reserve fuel	approx. 3.5 l
--------------	---------------

Tyre pressure

Tyre pressure, front	2.2 bar, One-up, tyre cold 2.5 bar, Two-up and/or with luggage, tyre cold
----------------------	--

Tyre pressure, rear	2.5 bar, One-up, tyre cold 2.9 bar, Two-up and/or with luggage, tyre cold
---------------------	--

For further information on all aspects of your vehicle, visit: [bmw-motorrad.com](https://www.bmw-motorrad.com)

