

Rider's Manual

K 1200 LT



**BMW Motorrad
On-board
documentation**

consisting of
Rider's Manual
and Maintenance
Instructions



Please note



Warning:

This symbol stands for precautions and measures which are essential in order to protect the rider or other persons from possibly severe or fatal injury.



Caution:

Instructions and precautions specifically intended to prevent damage to the motorcycle. Failure to comply with them could invalidate the warranty.



Note:

Special information on operating and inspecting your motorcycle as well as maintenance and adjustment procedures.

Welcome to BMW

We are delighted that you have chosen a new BMW K 1200 LT and would like to welcome you to the community of BMW riders.

Familiarise yourself with your new motorcycle, so that you can ride it safely and confidently in all traffic situations.

To make sure of this, please read this Rider's Manual carefully before starting to use your new motorcycle. It contains important information on how to operate the controls and how to make the best possible use of all the motorcycle's technical features.

In addition, it contains useful hints and information on the correct equipment for machine and rider to ensure maximum reliability and safety, and advice on how to maintain the value of your motorcycle.

If you have any questions concerning your motorcycle, your BMW motorcycle dealer will gladly provide advice and assistance.

We hope you enjoy reading this Rider's Manual and wish you many a pleasant, safe journey on your BMW motorcycle.

Best wishes,

BMW Motorrad

General information and controls

General view, left side	4-5
General view, right side	6-7
Cockpit	8-9
Telltale and warning lights	10-11
Ignition switch and steering lock	12-13
Handlebar fittings	14-15
Hazard warning flashers	16
Adjusting windscreen/deflectors	17
Reverser	18-20
Cruise control	21-24
On-board computer	25-29
Cases	30
Topcase	31
Front seat	32-33
Rear seat	34-36
Seat heating	37
Helmet holder	38

Safety check

Checklist	39
Engine oil	40-41
Fuel	42-43
Handlebar levers	44-45
Brake system - general ..	46-47
Brake system - with BMW Integral ABS	48-50
Clutch	51
Suspension spring preload ..	52
Wheels	53-54
Loading	55-56
Lights	57-58
Coolant	59

Starting – Riding – Parking

First time out	60-61
Important notes	62-63
Side stand	64-65
Main (centre) stand.....	66-67
Running in	68-69
Before you start.....	70
Starting	71
Warning lights.....	72-73
Riding and changing gear.....	74-75
Brake system - general.....	76-77
Brake system - with BMW Integral ABS.....	78-84
BMW Integral ABS - troubleshooting chart	85

Arrive safely


Dependability	86-87
Service worldwide	88
Protecting the environment .	89
BMW rider's equipment.....	90
BMW motorcycle accessories.....	91
Training means extra safety.	92
Concluding thoughts	93

General view, left side

1

4

General information and controls

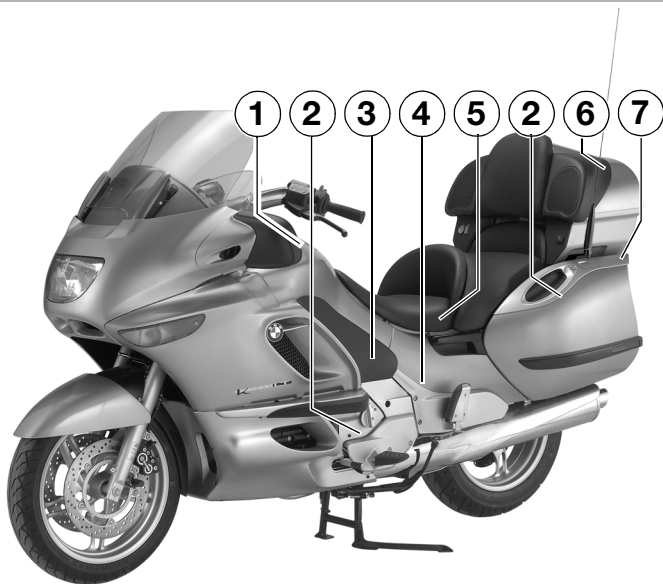

- 1** Reservoir for clutch fluid (➡ 51)
- 2** Power socket, 12 V
For connecting auxiliary equipment – max. 5 A 60 W
- 3** Type plate with vehicle identification number (VIN)
- 4** Knob for adjusting spring preload, rear (➡ 52)

- 5** Fuse box
(Maintenance Instructions ➡ Chapter 2)
- 6** Aerial (Maintenance Instructions ➡ Chapter 2)
- 7** Topcase (➡ 31) with
 - Interior lighting
 - Mirror and
 - Oddments box for: on-board literature and oil funnel

() Figure in brackets ➡ page number for description

General view, left side



1

5

General information and controls

8 Case, left (➡ 30)

- Seat opener (➡ 32)
 - Toolkit
 - Repair kit for tubeless tyres
- (Maintenance Instructions
➡ Chapter 2)
- Helmet holder (steel rope)
(➡ 38)

9 Coolant reservoir (➡ 59)

10 Lifting handle (➡ 66-67)

11 Helmet holder (➡ 38)

12 Selector lever for reverser (➡ 18-20)

() Figure in brackets ➡ page number
for description

General view, right side

1
6

General information and controls



1 Case, right (➡ 30)

2 Passenger's controls for audio system^{OE}
(➡ Supplementary Rider's Manual)

3 Brake fluid reservoir, rear

4 Stowage compartment with hand lamp

5 Brake fluid reservoir, front
(➡ 50)


6 Fuel tank filler cap (➡ 42)

() Figure in brackets ➡ page number
for explanation

^{OE} Optional extra



- 7** Adjustable deflector (➡ 17)
 - 8** Oil filler neck, engine oil (➡ 41)
 - 9** Oil level sight glass, engine oil (➡ 41)
 - 10** Vehicle identification number
 - 11** Rocker switch for seat heating^{OE} (➡ 37)
 - 12** CD changer^{OE} (➡ Supplementary Rider's Manual)
- () Figure in brackets ➡ page number for description
- ^{OE} Optional extra

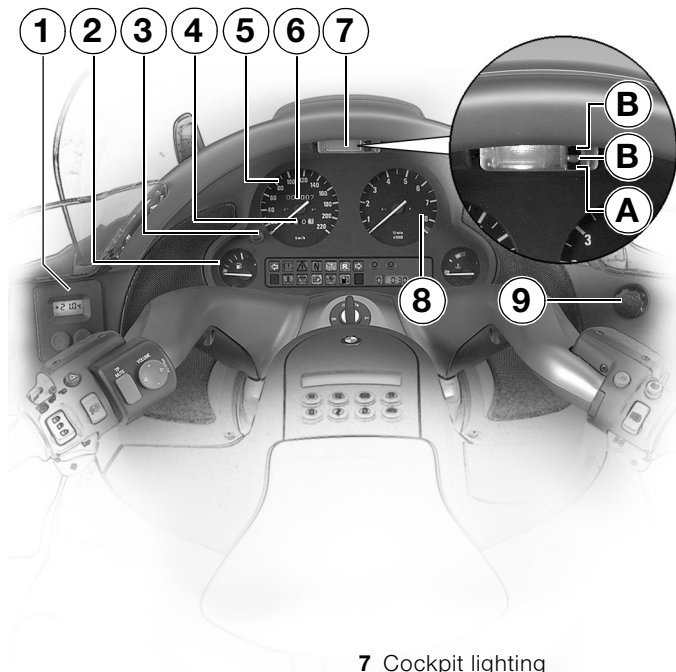


- 1** On-board computer^{OE}
(➡ 25)
- 2** Fuel gauge (➡ 43)
- 3** Trip meter reset knob
- 4** Trip meter
- 5** Speedometer
- 6** Odometer

- 7** Cockpit lighting
 - **A** On
 - **B** Off
- 8** Rev. counter (➡ 68)
- 9** Rotary knob for headlight beam angle (➡ 57)

() Figure in brackets ➡ page number
for explanation

^{OE} Optional extra

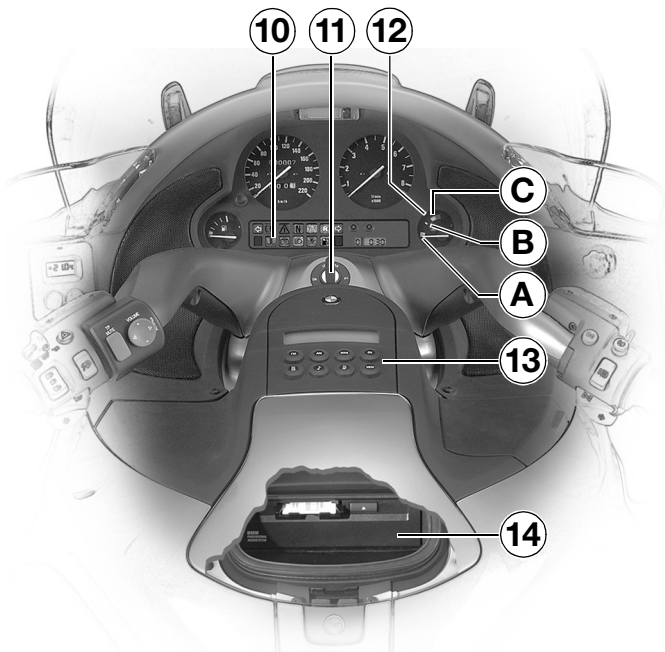

10 Telltale and warning lights
(► 10, 11)

11 Ignition switch and steering lock (► 13)

12 Coolant temperature gauge

A Engine cold

B Engine at normal operating temperature

C Engine overheated
(► 73)

13 Radio controls
(► Supplementary Rider's Manual)

14 Radio/cassette player with storage compartment


() Figure in brackets ► page number for explanation

Telltale and warning lights

1

10

General information and controls

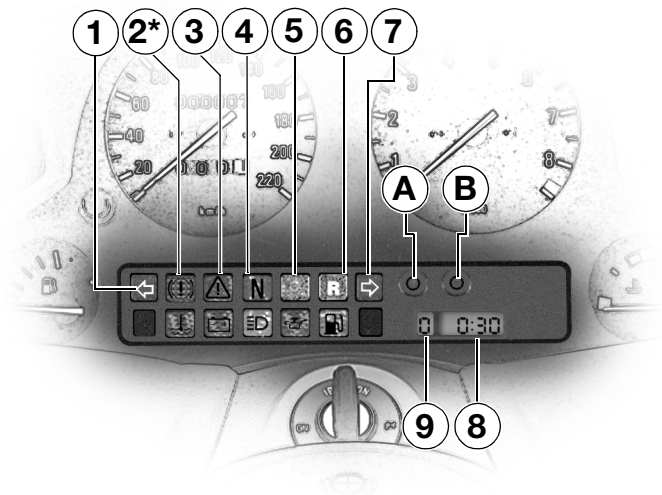

- 1 Flashing turn indicator repeater, left **green**
- 2 Warning light, ABS **red** (➡ 72)
- 3 Warning light, general **red** (➡ 72)
- 4 Telltale light, neutral **green** (➡ 70)
- 5 Telltale light, cruise control **yellow** (➡ 21)
- 6 Telltale light, reverser **yellow**

- 7 Flashing turn indicator repeater, right **green**

- 8 Clock
Adjust by pressing with a ball-point pen or similar object at point **A** (hours) or point **B** (minutes)

- 9 Gear indicator (➡ 75)

() Figure in brackets ➡ page number for description


* depending on national-market specification

Telltale and warning lights

1

11

General information and controls

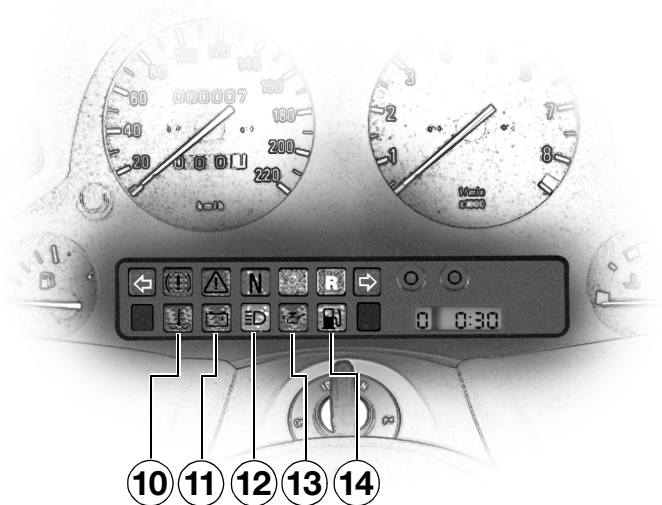

- 10** Warning light, coolant temperature  **red** (➡ 59, 73)
- 11** Warning light, battery charge current  **red** (➡ 73)
- 12** Telltale light, high-beam headlight **blue** 
- 13** Warning light, engine oil pressure  **red** (➡ 40, 72)
- 14** Warning light, fuel level/ approx. 4 litres (0.880 Imp.gal) reserve **yellow**  (➡ 43, 72)

() Figure in brackets ➡ page number for description

Ignition switch and steering lock

1

12

General information and controls



Keys

You will receive two master keys and one spare key. The key number is shown on a tag which is also supplied.



Warning:

Only RESIDUAL BRAKING FUNCTIONALITY is available when the ignition is switched off (➡ 81).



Warning:

Never attach other keys or key rings to the motorcycle key – risk to safety if bunch of keys were to get trapped behind the fairing as you turn the handlebars.



Note:

Ignition switch and steering lock, fuel tank filler cap lock, radio-compartment lock and side and topcase locks are all operated with the same key.

Ignition switch and steering lock

1

13

General information and controls



Key positions

- ON** Operating position, ignition, lights and all electrical circuits switched on
- R *** Ignition and lights off, steering lock disengaged (handlebars can be turned freely to left or right)



Warning:

Never turn the key to OFF or P while the motorcycle is being ridden.

- Turn the handlebars to full left lock.



Attention:

Engage the steering lock with the handlebars in this position only.

OFF* Ignition and lights off, steering lock engaged

P * Parking light on, steering lock engaged




Note:

Switch the parking light on only for limited periods.
Note state of battery charge.

* The key can be removed in these positions

Left handlebar fitting

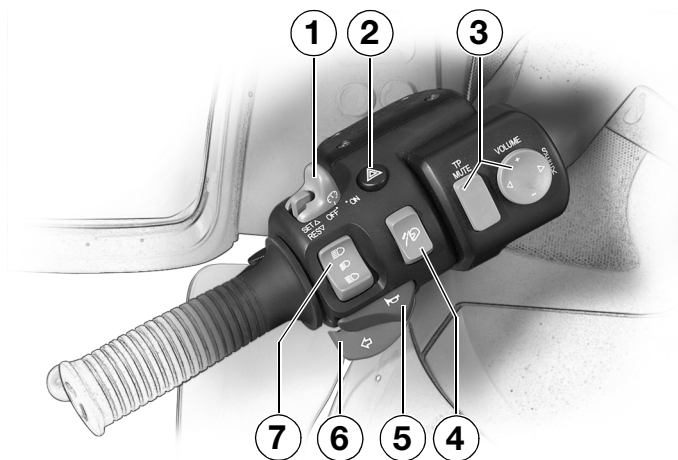

Warning:

To prevent air from entering the clutch system:

- Do not turn the fitting on the handlebars.

1 Switch for cruise control (➡ 21)

2 Hazard warning flasher switch (➡ 16)

3 Handlebar controls for audio system (➡ Supplementary Rider's Manual)

4 Switch for windscreen adjustment (➡ 17)

5 Horn button

6 Turn indicator switch, left

- Press

– Turn indicators operate
To switch off turn indicators:

- Self-cancelling while riding, or press turn indicator cancel switch **13** (➡ 15)


7 High/low (dipped) headlight switch

☰ High-beam headlight

☷ Low-beam headlight

☷ Headlight flasher

Right handlebar fitting

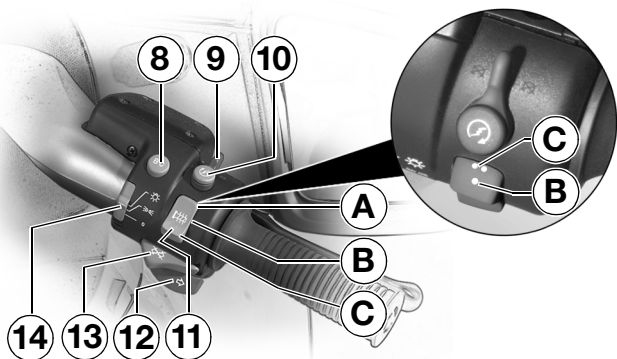

Warning:

To prevent air from entering the brake system:

- Do not turn the fitting on the handlebars.

- 8** Handlebar controls for on-board computer^{OE} (➡ 25)
- 9** Emergency off (kill) switch for ignition (➡ 70)
- 10** Starter button (➡ 18, 71)
- 11** Switch for heated handlebar grips^{OE}
 - A** Heating function OFF
 - B** 50% (centre position)
 - C** 100%
- 12** Turn indicator switch, right
 - Press
 - Turn indicators operate
 - To switch off turn indicators:
 - Self-cancelling while riding, or press turn indicator cancel switch **13**
- 13** Turn indicator cancel switch
 - Press
 - Left/right flashers off

^{OE} Optional extra

Hazard warning flashers

1

16

General information and controls



Switching on the hazard warning flashers:

- Switch on the ignition
- Operate hazard warning flasher switch **1**
 - Hazard warning flashers in operation
 - Telltale light in switch is on
- Switch off the ignition
 - The hazard warning flashers continue to operate
 - Telltale light in switch goes out

Hazard warning flashers



Note:

The ignition must be switched on before the hazard warning flashers can be used.


Do not use the hazard warning flashers for longer than absolutely necessary.

Note state of battery charge.

Switching off the hazard warning flashers:

- Operate hazard warning flasher switch **1**
 - Hazard warning flashers cease to operate

Adjusting windscreen/deflectors

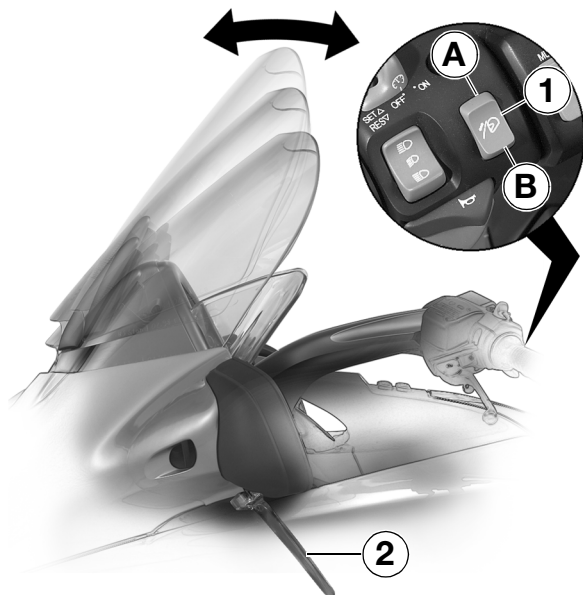

Adjusting windscreen:

- Switch on the ignition
- Press switch **1**
 - **A** Raise windscreen
 - **B** Lower windscreen

Adjust windscreen steplessly by moving switch to position

A or **B**, as appropriate



Caution:

Windscreen and deflectors are not fuel-resistant.

Adjusting left/right deflectors:

- Move the deflectors **2** on left and right to the desired position



Note:

The deflectors regulate the pressure of the airflow against the rider.

**Warning:**

Avoid steep and uneven road surfaces when reversing. Take great care to maintain your balance when reversing on wet, slippery, uneven, unpaved or muddy surfaces. Engage the reverser only when the motorcycle is at a standstill and do not press the starter pushbutton while engaging the reverser lever.


**Warning:**

The rules for reversing:

- **No pillion passenger**
- **You must be seated on the motorcycle**
- **Keep both feet on the ground**
- **Keep your feet well clear of the footrests on both sides**
- **Keep both hands on the handlebars**
- **Make sure side stand and main stand are both fully retracted (→ 65, 67)**
- **Check that the area behind the motorcycle is free of obstructions**

**Caution:**

Do not operate the reverser for more than 1 minute – bear the state of battery charge in mind. The reverser switches off if it is overloaded.

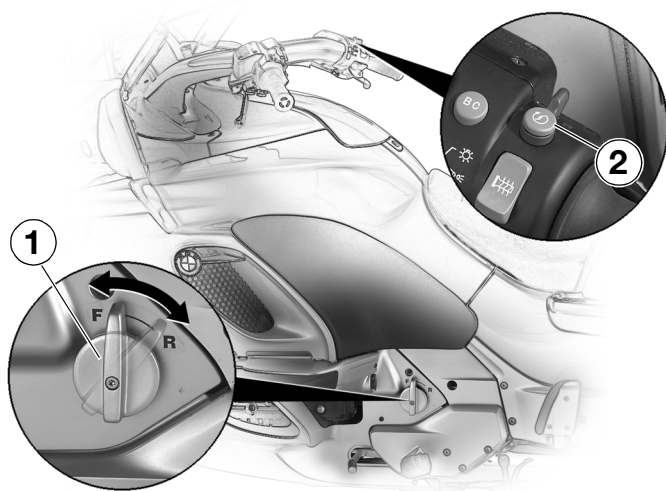

Reversing

- Start the engine (➡ 70, 71)
- Select neutral
 - Neutral telltale light **green** **N** is on (➡ 10)
- Push lever **1** of reverser all the way toward position **R** until it engages



Note:

If lever **1** does not engage easily at the **R** position

- rock the motorcycle gently backwards and forwards until lever **1** engages.


- Telltale light, reverser **yellow** **R** is on (➡ 10)
- Press and hold down starter button **2**
 - Carefully reverse the motorcycle

Reverser

1

20

General information and controls

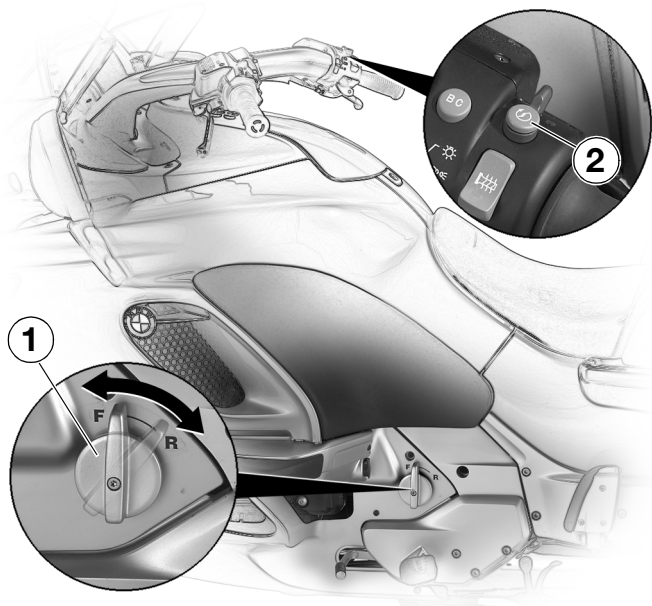

Stopping

- Release starter button **2**
 - The motorcycle comes to a stop
- Apply the brake if necessary

Normal operation

- Push lever **1** of reverser all the way toward position **F** until it engages
 - Telltale light, reverser **yellow**  is off (➡ 10)



Warning:

Do not engage cruise control when:

- Riding on twisty roads with poor forward vision
- Heavy traffic does not enable you to maintain a constant road speed
- Riding on wet, unpaved or dirty roads

The motorcycle might exceed your chosen cruise control speed if the engine's braking effect is insufficient on a downhill gradient. It could also drop below this speed when riding uphill.

For safety reasons, always keep both hands on the handlebars!



Note:

With automatic cruise control, the range can be controlled between 40 and 160 km/h (25 and 100 mph).

When the motorcycle is at a standstill and – ignition “**OFF**” – the system is switched off and the stored road speed is cancelled.

Telltale for cruise control OFF.



Step-by-step acceleration

- Press button **2** in **SET** direction
 - Memorised road speed increases by approx. 2 km/h (approx. 1 mph)




Note:

Every subsequent time you press button **2** in the **SET** direction, road speed increases by a further 2 km/h (approx. 1 mph).

Infinitely variable acceleration

- Press and hold down button **2** in **SET** direction (arrow)
 - The motorcycle accelerates steadily, even though you do not manually open the throttle
- Release button **2**
 - The motorcycle maintains and memorises your current cruising speed

^{OE} Optional extra

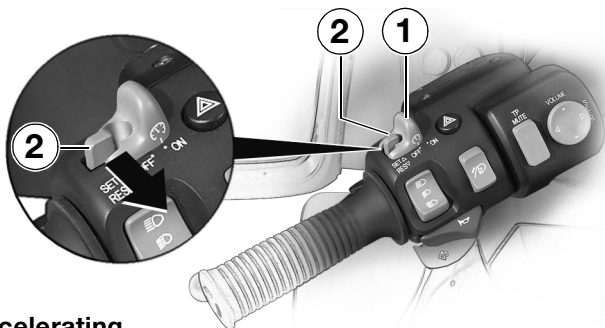

Decelerating

- Press and hold down button **2** in **RES** direction (arrow)
- The motorcycle decelerates steadily, even though you do not manually close the throttle



Note:

Every subsequent time you press the button in the **RES** direction, road speed decreases by a further 2 km/h (approx. 1 mph)

Switching off the system

- Move switch **1** to **OFF**
- The cruise control system switches off immediately
- **Red** telltale light and **yellow** telltale light for cruise control  10) off

Temporary override

When you actuate the:

- brakes
- clutch
- throttle twistgrip (close the throttle)

the cruise control system is briefly switched off

- **Yellow** telltale light, cruise control  10) off
- **Red** telltale light on
- Push button **2** in the **RES** direction
- The motorcycle returns to and maintains the cruising speed stored in memory
- **Yellow** telltale light, cruise control  10) on



Calling up functions




Warning:

While the motorcycle is on the move, the on-board computer can only be operated remotely from the right handlebar fitting.

- On the on-board computer (➡ 8)
- OR**
- Using remote control on the right-hand handlebar fitting (➡ 15, 26)

On-board computer

- Only do this when the motorcycle is stationary!
- Ignition lock in operating position “ON” (➡ 12), the display shows:
 - Ambient temperature (➡ 28)
- Press button **2** (MODE) once: each time you press the button, data is displayed in the following order:
 - Estimated range (➡ 28)
 - Average consumption (➡ 29)
 - Average road speed (➡ 29)
 - Ambient temperature (➡ 28)

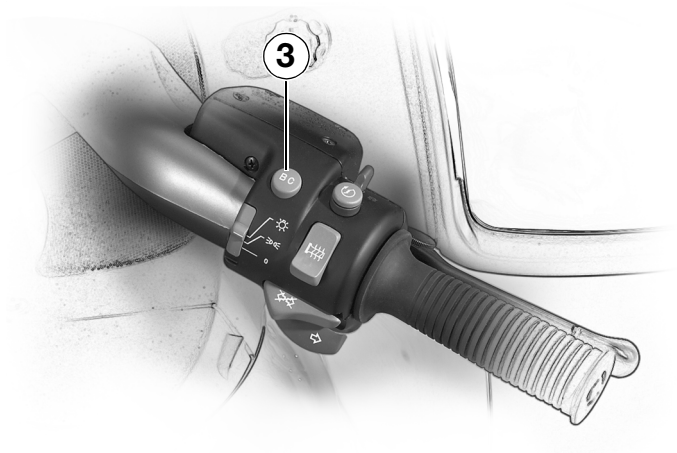

Handlebar controls



Note:

Recalculation of functions can only be performed directly on the on-board computer (➡ 25)

- Briefly press pushbutton **3** on the right handlebar fitting: the following data is displayed in the following sequence:
 - Ambient temperature (➡ 28)
 - Estimated range (➡ 28)
 - Average consumption (➡ 29)
 - Average road speed (➡ 29)

^{OE} Optional extra



Starting recalculation

- Use this function only when the motorcycle is stationary with the engine running.
- Press button **2** (MODE) briefly until
 - Average fuel consumption (➡ 29) or
 - Average road speed (➡ 29) appears on the display
- Press and hold down switch **1** (RESET) for approx. 3 seconds
 - Average values for fuel consumption and road speed are now recalculated.

^{OE} Optional extra

Ambient temperature

**Note:**

Reading in °C or °F, depending on national market.

^{OE} Optional extra

Estimated range

**Note:**

Reading in km or miles, depending on national market. The range is estimated on the basis of style of riding and taking the remaining supply of fuel into account.

Note that the range cannot be shown accurately if the motorcycle was placed on the side stand. The display is corrected during the journey.

If three dashes appear on the display, your range has dropped below 15 km (9.5 miles). It is high time to refuel!

It is also important to observe the fuel gauge/warning light for fuel level (8, 11).

The on-board computer registers that you have refuelled when approximately 3 litres (0.66 Imp. gal) have been added.

Average fuel consumption



Note:

Display can be altered for national preferences (liter/km, litres/mile or miles per gallon). The average is calculated over the time the engine is running. Stops with the engine switched off are ignored.

The calculation time for average speed always refers back to the last time “RESET” was pressed on the on-board computer.

Average speed



Note:

Display can be altered to suit national preferences to km/h or mph.


Stops with the engine switched off are ignored. The calculation time for average fuel consumption always refers back to the last time “RESET” was pressed on the on-board computer.

Opening and closing cases

1

30

General information and controls

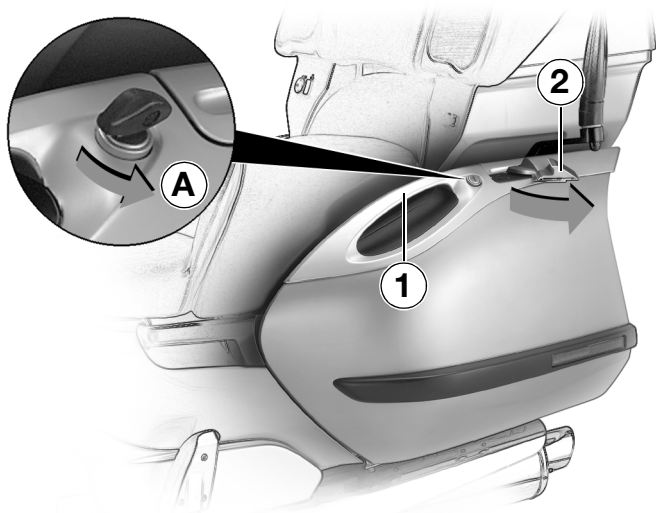

- Place the motorcycle on the centre or side stand
 - Make sure the ground is level and firm.

Opening the case

- If necessary, unlock the case
 - Turn key in case lock to position **A**
- Press down locking cylinder
 - Latch **2** snaps open
- Hand on handle **1**
- Open latch **2** (arrow)
- Open the case

Closing the case




Caution:

To ensure the case is leak-tight, keep the sealing edges clear when locking.

- Lock the case lid
- Close latch **2**
- If necessary, close case and remove key

Opening and closing topcase

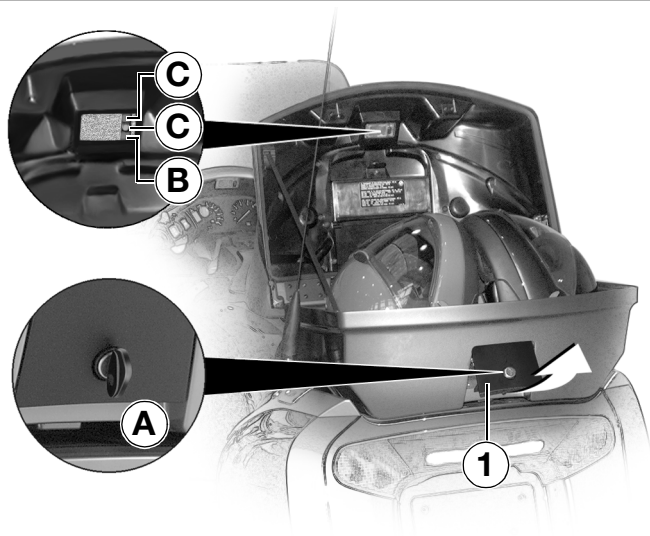

Opening the topcase

- If necessary, unlock the topcase
 - Turn key in topcase lock to position **A**
- Press down locking cylinder
 - Latch **1** snaps open
- Open latch **1** (arrow)
- Open the topcase

– Topcase light

- B** On
- C** Off

Closing the topcase



Note:

The interior light goes out automatically when you close the topcase.

- Close topcase lid
- Close latch **1**
- If necessary, lock topcase and remove key

Front seat

1


32

General information and controls



Opening the front seat

- Place the motorcycle on the main (centre) or side stand
 - Make sure the ground is level and firm.
- Open the left case (➡ 30)
- Pull out lever **1** (arrow)
 - Lift the seat up and forward (arrow):
 - mount for helmet holder (➡ 38),
 - handwheel for spring preload (➡ 52),
 - battery and fuses (Maintenance Instructions ➡ Chapter 2) are accessible

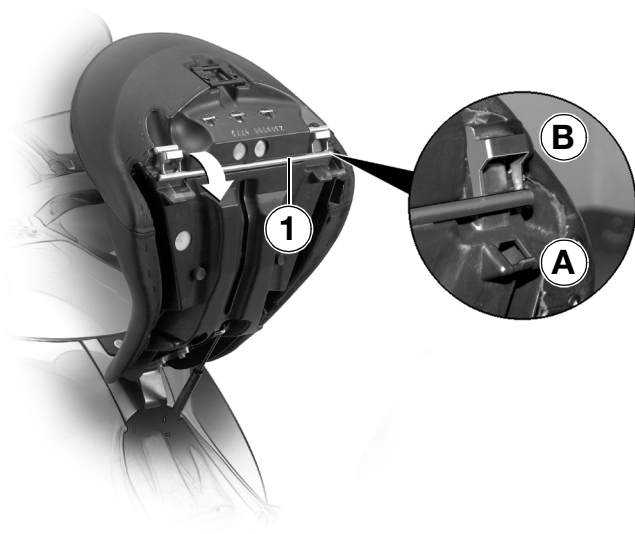

Locking the front seat



Caution:

When closing the front seat:

- Fold in handwheel for adjusting spring strut.
- Check that front seat is firmly secured.

Adjusting the front seat:

- Open the seat (➡ 32)
- Swivel adjusting bracket **1** into desired position (arrow) and make sure it engages with an audible click
- The front seat can be moved to 2 positions:
 - **A** = high **B** = low


- Swing front seat toward rear until latch engages with an audible click
- Lock left case (➡ 30)

Rear seat

1

34

General information and controls

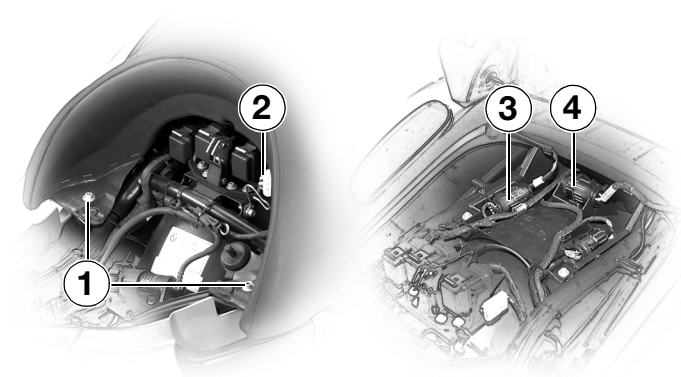

Adjusting backrest:



Note:


The backrest can be adjusted by moving the topcase by one setting.

It is advisable to have this adjustment performed by your BMW motorcycle dealer.

- Place the motorcycle on its main (centre) stand
 - Make sure the ground is level and firm.
- Open the seat (➡ 32)

- Remove screws **1** securing rear seat
- Raise rear seat slightly and disconnect plug **2** for seat heating^{OE}
- Carefully pull rear seat forward
- Remove connectors **3** and **4** for loudspeakers from their holders and disconnect by turning counter-clockwise
- Remove connector cables **3** and **4** from their holders

^{OE} Optional extra

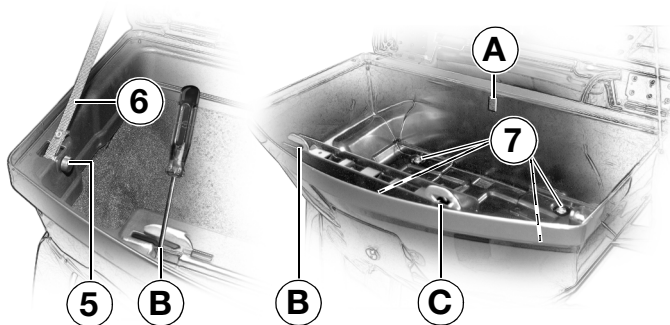

- Open the topcase (➡ 31)
- Slacken knurled screw **5**
- Hold topcase lid
- Carefully disconnect retaining strap **6**



Caution:

To avoid damaging the topcase lid hinges and the loudspeakers, hold the topcase lid in position or fit suitable supports beneath it.


- Carefully raise topcase lid
- Unfasten inner Velcro fastener strip at point **A**
- Press back retaining clips at points **B** and **C** using a small screwdriver
- Carefully lift the inner shell out of the topcase
- Remove 4 securing screws **7** from topcase
- Carefully remove topcase

Rear seat

1

36

General information and controls

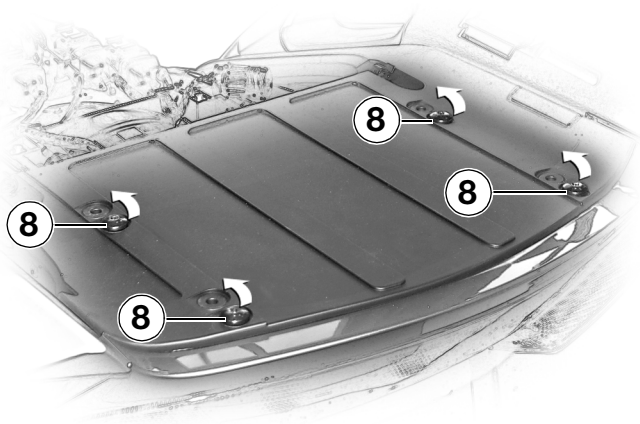

- Reposition retaining screws **8** (short) in the retaining plate (arrow)



Caution:

The retaining screws on the topcase and retaining plate have different lengths. Do not interchange them.


- Backrest can be adjusted one setting

- Carefully fit the topcase
- Tighten four retaining screws **7** (long) in topcase to correct tightening torque
- From this point on, installation is the reverse of the removal procedure



Tightening torque:

Securing screws for
topcase..... 9 Nm
retaining plate 9 Nm
rear seat 9 Nm

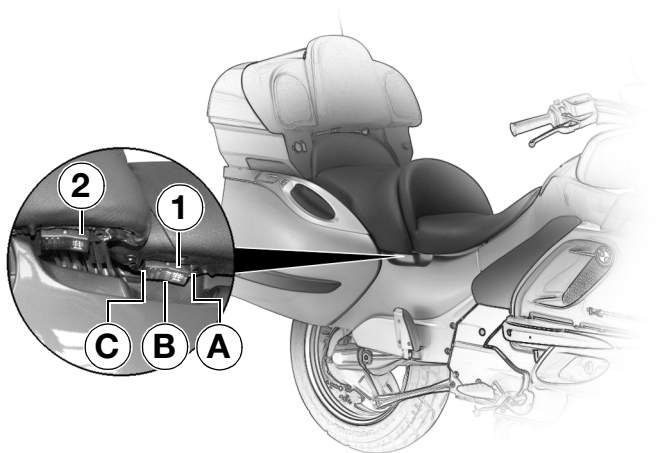**Note:**

Use the seat heating only when necessary.

The increase in power consumption can cause the battery to discharge at low engine speeds.

- Press down switch for front seat heating **1** or rear seat heating **2**
 - **A** Continuous heating
 - **B** Heating function OFF
 - **C** Rapid heating, then switch to position **A** or **B**

**Note:**


The backrest heating switches off automatically at 50 °C.

Helmet holder

1

38

General information and controls

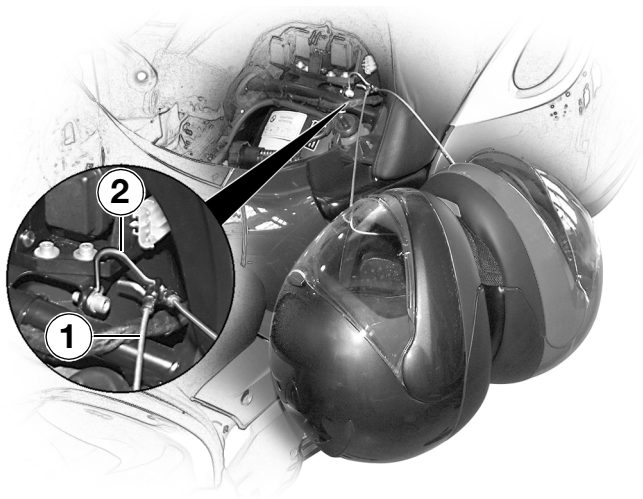

- Open the seat (➡ 32)
- Pass steel rope **1** through the chinguards of the helmets
- Hook steel rope **1** over holder **2**
- Carefully close and lock the seat (➡ 32)



Note:

Helmets can also be stored in the topcase (➡ 56)

For this reason, check the details in the following sections before you start the journey:

- Fuel level
- Positions of the handlebar-lever fittings
- Brake fluid level
- Clutch fluid level
- Brakes
- Warning lights and telltale lights
- Suspension spring preload
- Wheel rim and tyre condition, tread depth and tyre pressures
- Load, gross weight
- Lights
- Coolant level
- Check regularly (every time you stop for fuel), on the basis of the following section:
- Engine oil level (every second/third stop for fuel):
- brake pads

If you encounter any problems or difficulties, it is always best to contact your authorised BMW motorcycle dealer. He will provide the necessary advice and assistance.

Use the safety checklist – before every journey

Please perform the safety check accurately. If your motorcycle needs any routine maintenance, you can then attend to it before the journey starts

( Maintenance Instructions), or have it carried out by a specialist workshop, preferably an authorised BMW Motorrad dealer. This is to ensure that your motorcycle corresponds with road-vehicle use and safety laws.

A motorcycle in perfect technical condition is essential for your safety and that of other road users.

Checking oil level

Check the oil level at regular intervals.

Always check the oil level when the engine is at operating temperature, because the difference between the oil level indicated when the engine is at operating temperature and the oil level indicated when the engine is very cold due to extremely low outdoor temperatures (-10 °C/14 °F) can be as much as 10 mm (0.393 in).

After switching off the engine at operating temperature, wait at least 5 minutes for the oil to drain back into the sump.

Checking the oil level after the engine has been run only briefly or when it is not properly warm will falsify the reading and could lead to the engine being operated with the wrong quantity of oil, because cold oil is viscous and takes longer to drain back into the sump.



Caution:

To avoid damage to the engine:

- Never exceed the maximum oil level.
- Always keep the oil level above the minimum mark.


- Check the oil level with the engine at its regular operating temperature
- Check the oil level after the engine has been stopped for at least 5 minutes



Note:

You can check the oil level with the motorcycle on the main (centre) stand or the side stand. Use pocket lamp to simplify visual inspection.

- Place the motorcycle on the **side stand**
 - Make sure the ground is level and firm.
- Read off the oil level at the sight glass:
 - B (MAX)** centre of sight glass
 - C (MIN)** bottom edge of sight glass

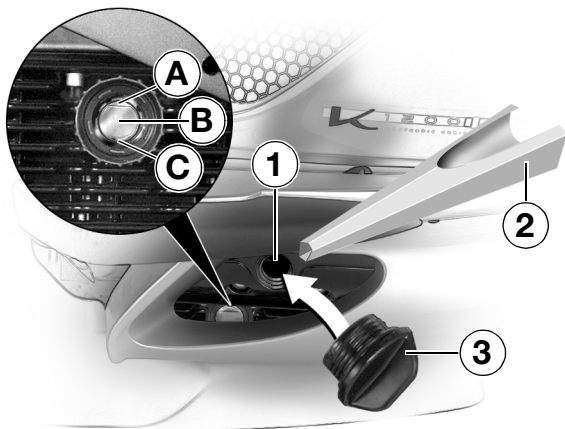


- Place the motorcycle on the **main (centre) stand**
 - Make sure the ground is level and firm.
- Read off the oil level at the sight glass:
 - A (MAX)** top edge of sight glass
 - C (MIN)** bottom edge of sight glass
 - The difference is equivalent to approx. 0.5 litres (0.88 Imp.pints)
- If necessary, remove oil filler plug **3** and pour in engine oil using funnel **2**, through oil filler neck **1**

- Insert and tighten the filler plug **3**

**Caution:**

Warning light, engine oil pressure **red**  (11) indicates no (or very little) oil pressure in the lube-oil system; this light must not be regarded as an oil level check. Oil pressure builds up after 1-2 seconds and the warning light goes out – the **red** engine oil pressure warning light  should remain off while the engine is running.

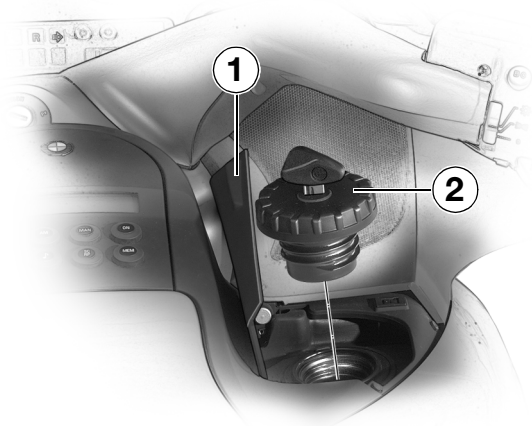

Refuelling



Warning:

The motorcycle's fuel (petrol/gasoline) is flammable and explosive. Do not smoke. Never bring a naked flame near the fuel tank.

The fuel expands when hot (for instance if the fuel tank is in the sun). For this reason, only fill as far as the lower edge of the filler neck.




Caution:

Note that fuel containing lead will destroy the catalytic converter.

Do not run the fuel tank dry or you may damage the engine or catalytic converter.

- Place motorcycle on side stand
 - Make sure the ground is level and firm.
- Open fuel tank flap **1**
- Open fuel filler cap **2**:
 - Unlock the filler cap, turn it counter-clockwise and remove

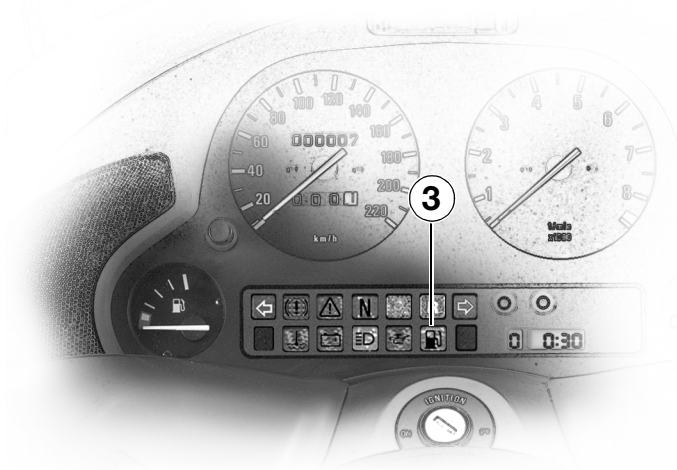

- Refuel
- Always use super (premium) unleaded fuel to DIN 51607 or equivalent standard, min. octane number 95 (RON) or 85 (MON)
- Close fuel filler cap **2**:
 - Place the filler cap in position, turn it clockwise as far as it will go and lock it

Capacity

- Total capacity: 24 litres (5.28 Imp. gal)
- When reserve is reached (approx. 4 litres/0.88 Imp. gal) **yellow** warning light **3** comes on



Note:

Hold the tank cap while locking.

- Close fuel tank flap **1**



Note:


The warning light and fuel gauge function only when the ignition is on.

Handlebar levers

2

44

Safety check

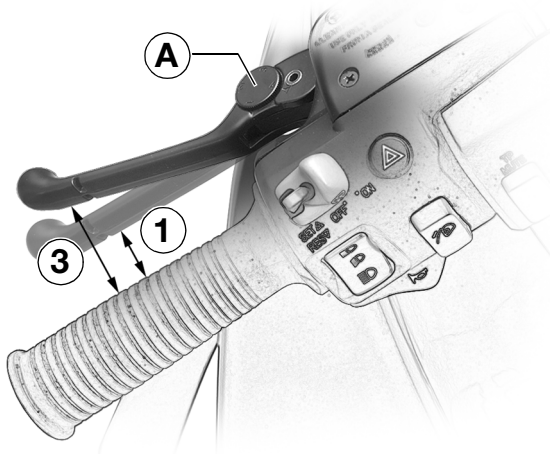

Adjusting clutch lever



Caution:

Sudden changes in the amount of play at the lever or a spongy feeling when it is applied may indicate a fault in the hydraulic system.

If you are doubtful about the reliability of the hydraulic clutch operating system, it is best to consult an authorised BMW motorcycle dealer.




Warning:

To prevent air from entering the hydraulic circuit: do not turn the fitting on the handlebar.

- Turn knob **A** to set the most comfortable span:
 - Setting **1**: minimum span
 - Setting **3**: maximum span

Handlebar levers

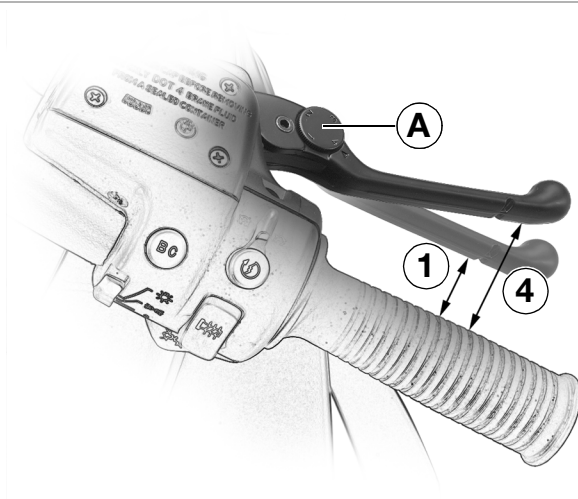

2

45

Safety check



Warning:

To prevent air from entering the brake circuit: do not turn the fitting on the handlebar.

Adjusting handbrake lever

- Turn knob **A** to set the most comfortable span:
 - Setting **1**: minimum span
 - Setting **4**: maximum span

Work on the brake system



Warning:

To ensure reliability have all work on the brake systems carried out by a specialist workshop, preferably an authorised BMW motorcycle dealer.

Checking brake system



Warning:

Sudden changes in play or spongy action of the brake lever indicate a fault in the brake system.

Before riding off, therefore, always check the resistance of the front and rear brake levers and test operation of the brakes.

Do not ride the motorcycle if you have any doubts about the safety of the brake system.

Immediately seek the advice of a specialist workshop, preferably an authorised BMW motorcycle dealer.

**Warning:**

Have the brake pads replaced before they wear to the minimum permissible thickness: have the work performed by a specialist workshop, preferably an authorised BMW motorcycle dealer.

Checking brake pads

Brake pad wear depends on your personal style of riding. To ensure reliable operation of the brakes: do not allow lining thickness to fall below minimum value (Maintenance Instructions ► Chapter 2).

Checking brake fluid level



Warning:

If your motorcycle is equipped with BMW Integral ABS, the brake fluid level in the reservoir (➡ 50) does **NOT** drop as the brake pads wear.



Warning:

Have the brake system checked immediately by a specialist workshop, preferably an authorised BMW motorcycle dealer, if the brake fluid level in the reservoir of the brake system (➡ 50) drops below the **MIN** mark.

Changing brake fluid



Warning:

Brake fluid is exposed to severe thermal loads, and absorbs moisture from the atmosphere.

Consequently, the brake fluid must be changed regularly (see the Maintenance Instructions ➡ Chapter 1) by a specialist workshop, preferably an authorised BMW motorcycle dealer.

Residual braking function



Warning:

When the ignition is switched off, before and during self-diagnosis (➡ 82), or if the BMW Integral ABS fails, only a **RESIDUAL BRAKING FUNCTION** (➡ 81) remains available for slowing the motorcycle. When the **RESIDUAL BRAKING FUNCTION** is active, you must apply **CONSIDERABLY** higher pressure to the brake lever in question in order to apply the brakes, and lever travel is longer.

When the RESIDUAL BRAKING FUNCTION is active, the ABS function is unavailable in the brake systems in question.



Warning:

When the **RESIDUAL BRAKING FUNCTION** is active, maintain a defensive riding style and proceed immediately to the nearest specialist workshop, preferably an authorised **BMW motorcycle dealer**.



Note:


When the **RESIDUAL BRAKING FUNCTION** is active, it is advisable to set adjuster **A** (➡ 45) on the front-brake lever to position 4.

Brake system - with BMW Integral ABS

2

50

Safety check

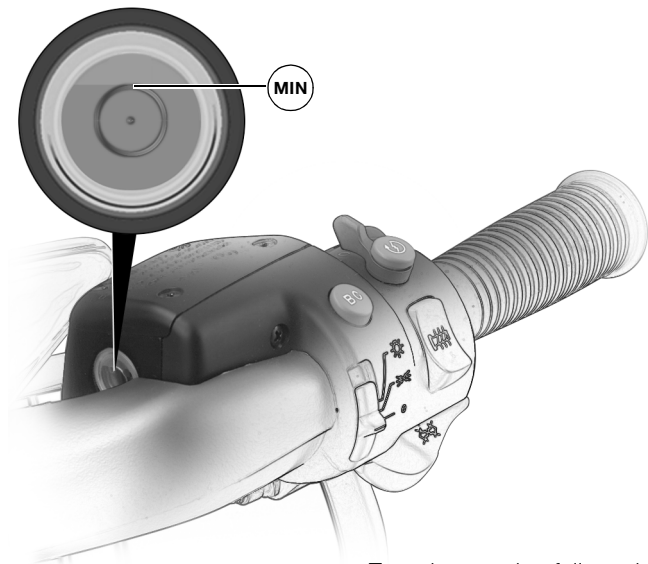

Checking brake fluid level, front brakes



Warning:

Never permit the brake fluid level to drop below the minimum level (MIN mark)


- Place the motorcycle on its main (centre) stand
 - Make sure the ground is level and firm.

- Turn the steering fully to the left; the fluid reservoir must be horizontal
- Check the brake fluid level in the sight glass
MIN Minimum level (top of marking ring)



Note:

The brake fluid level in the brake fluid reservoir remains constant despite wear of the brake pads.

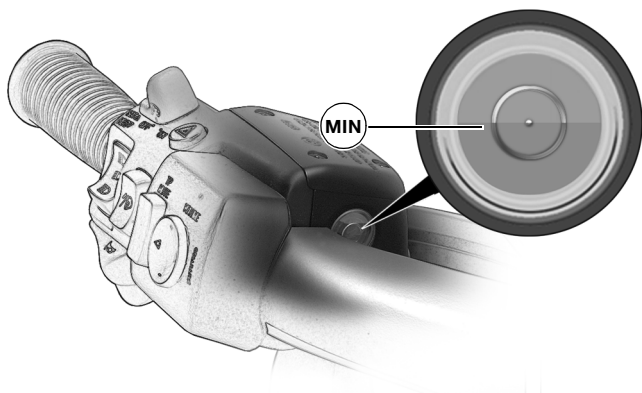

Checking the fluid level in the clutch fitting



Warning:

The fluid level must not fall below the centre of the sight glass (MIN).

- Place the motorcycle on its main (centre) stand
 - Make sure the ground is level and firm.
- Turn the steering fully to the right; the fluid reservoir must be horizontal

- Check the fluid level in the sight glass

MIN Minimum level
(centre of sight glass)



Note:

The fluid level in the reservoir rises as the clutch plate wears.



Caution:


If the fluid level drops, assume there is a defect in the clutch system. Have your clutch system examined by a BMW motorcycle dealer without delay.

Suspension spring preload

2

52

Safety check

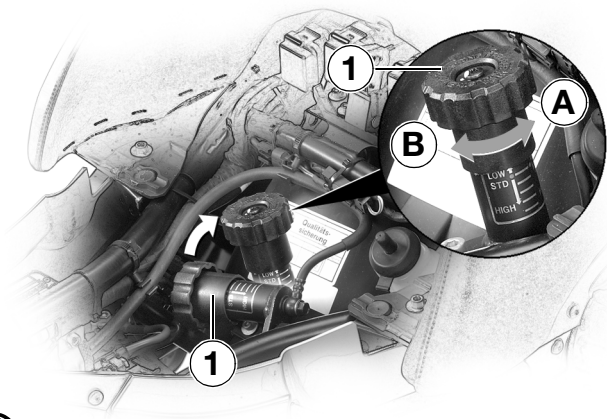

Warning:

Before setting out on a journey, set spring preload to reflect total weight / laden condition.

Adjusting spring load

- Open the seat (➡ 32)
- Unfold handwheel **1**
- Steplessly adjust spring preload by turning handwheel **1** to suit motorcycle load

One-up without luggage

(approx. 85 kg/187 lb rider and clothing)

- Turn handwheel **1** as far as it will go in direction of arrow **A** “LOW”

With luggage

(approx. 120 kg/265 lb)

- Turn handwheel **1** to central setting (arrow **B**)

Two-up with luggage

(150 kg/331 lb and above)

- Turn handwheel **1** as far as it will go in direction of arrow **B** “HIGH”



Caution:

Fold handwheel **1** in before closing front seat.

- Lock the front seat (➡ 33)

Checking tyre tread depth



Warning:

Comply with local legal requirements concerning minimum tread depth.

Worn tyres can impair the handling characteristics of your motorcycle.

Checking wheel rims



Warning:

Have damaged wheel rims checked and, if necessary, replaced by a specialist workshop, preferably an authorised BMW motorcycle dealer.

- Measure tread depth at the centre of the tyre tread

BMW's minimum tread depth recommendation:

front2 mm
rear3 mm

Checking tyre pressures



Warning:

Incorrect tyre pressures have a considerable influence on handling and on tyre life.

Tyre pressures must be chosen to suit the total weight on the motorcycle. Do not exceed the gross weight limit or the tyres' specified load capacity (➔ 56).

– Tyres cold:

- Unscrew and remove valve cap
- Check/correct tyre pressure

Tyre pressures:

	front	rear
One-up	2.5 bar 36.3 psi	2.9 bar 42.0 psi
Two-up	2.5 bar 36.3 psi	2.9 bar 42.0 psi
Two-up with luggage	2.5 bar 36.3 psi	3.2 bar 46.4 psi

- Screw the valve caps back on tightly

Tightening valve caps



Warning:

At high road speeds, tyre valves have a tendency to open as a result of centrifugal force.

Use only metal valve caps with rubber seals.

Valve caps that are screwed on well prevent air from escaping suddenly.




Warning:

BMW cannot examine or test each product of outside origin on the accessories and tyres market to ensure that it can be used on or in connection with BMW motorcycles without constituting a safety hazard. Even approval by a technical inspectorate or an official permit (General Operating Permit) cannot always provide this guarantee. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW motorcycles and consequently, they are not sufficient in some circumstances.



Note:

BMW accessories and other products approved by BMW can be obtained from your authorised BMW motorcycle dealer.

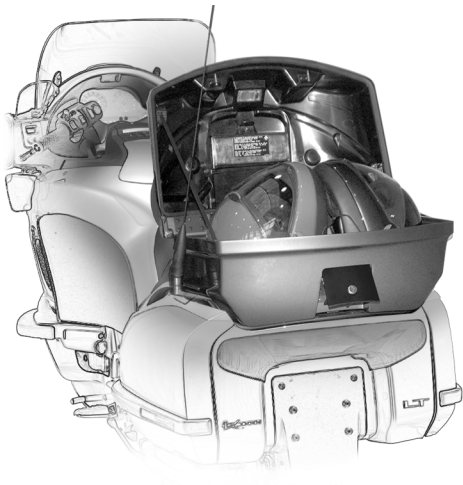

Correct loading



Warning:

Overloading can impair the stability of your motorcycle.

- Make sure that the weight is uniformly distributed between right and left
- Pack heavy items at the bottom of the cases
- Max. load in topcase: 10 kg (approx. 22 lb)
- Max. load in left and right cases 10 kg (approx. 22 lb) per case



Caution:

Do not exceed the gross weight limit of 600 kg (1,323 lb). Do not exceed the wheel load limits of 204 kg (449 lb) at the front and 402 kg (886 lb) at the rear. Adjust the rear suspension spring and shock absorber settings and the tyre pressures to suit the gross weight (► 52-54). The gross weight consists of:

- motorcycle with full tank
- rider
- pillion passenger
- luggage

Checking lights



Caution:

Check that all lights are operational at the start of each journey.



Note:

If turn indicator repeater flashes at twice the usual speed:

Defective flasher bulb.

To change bulbs in parking lights, headlight (dipped and main beams), rear and brake lights: (➡ Maintenance Instructions).

Tail light

General warning light (➡ 72) on: Brake-light or tail-light bulb defective.

Check brake light or tail light.

If the rear light is defective the brake light is dimmed and acts as a tail light. When you apply the brakes the brake light shines at full brightness.


Adjusting headlight beam throw



Caution:

Only adjust the beam throw of your headlights to suit laden condition when the motorcycle is stationary.

Have the headlight basic setting adjusted by a specialist workshop, preferably an authorised BMW motorcycle dealer.

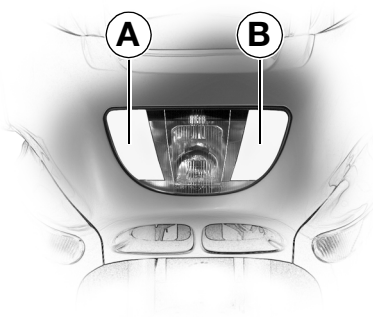

Normal setting:

- Turn rotary knob **1** anti-clockwise as far as limit stop

Setting to suit load:

- Change the spring strut setting to suit the load (➡ 52)



Note:

Setting spring preload (➡ 52) also adjusts the beam throw to suit the load on the motorcycle.

- Perform precision adjustment using rotary knob **1**

Adjusting headlight for RHD/LHD traffic

If the motorcycle is ridden in a country where the opposite rule of the road applies, its asymmetric dipped beam will tend to dazzle oncoming traffic.

To prevent this dazzle/glare problem, shade off a section of the headlight lens (cut adhesive tape to size and apply to lens)

- **A** from RHD to LHD traffic
- **B** from LHD to RHD traffic



Checking coolant level



Caution:

Always keep the coolant level above the minimum mark. Add coolant only when the engine is cold.

- Place the motorcycle on its main (centre) stand
 - Make sure the ground is level and firm.
- Open the left case (➡ 30)
- Check coolant level at the expansion tank, using a pocket lamp if necessary:
 - MAX** Maximum level
 - MIN** Minimum level



Caution:

Never overfill the expansion tank under the seat.

- Add coolant if necessary
- Lock left case (➡ 30)



Note:

If the expansion tank is full and coolant temperature is high (as indicated by red warning light  or coolant consumption is excessive, consult an authorised BMW motorcycle dealer.

Handling your motorcycle safely

Every motorcycle has a “life of its own”. You can gradually familiarise yourself with exactly how your motorcycle performs:

- acceleration
- roadholding
- cornering
- braking ...

These are all things you need to become familiar with.

Please remember too that if the motorcycle has not yet covered 1,000 kilometres (approx. 600 miles), the engine is not yet fully run in.



Attention:

BMW Integral ABS incorporates a brake booster, so braking efficiency is significantly higher than with conventional brake systems.



Warning:

The tyres need to cover a certain distance before they acquire their full road grip (→ 69).

When riding at high speed, always bear in mind that various boundary conditions such as: settings of the spring and shock-absorber system, unbalanced loading, loose clothing, low tyre pressures, worn tyres, etc., can affect the handling of your motorcycle.

Safe motorcycling does not depend on the motorcycle and equipment alone.

Your own skill and common-sense are needed too.

The key to genuine safety on the road is a sensible balance between the motorcycle's technical features and the rider's skill, so that together they form a single efficient unit. Riding safely in traffic calls for a sense of responsibility to your passenger and to other road users.



Warning:

Do not ride the motorcycle after drinking alcoholic beverages. Even small amounts of alcohol or drugs, particularly if taken in conjunction with medicines, will adversely affect your perception and your ability to assess situations and make decisions, and also slow down your reflexes.

Take to the road now by all means, but think carefully about everything you do!

Risk of fatal accident

Your motorcycle is equipped with Digital Motor Electronics (Motronic) and an a high-power ignition system.



Warning:

When the engine is running or the ignition switched on, never touch any electrically live parts of the ignition system or the Digital Motor Electronics.

BMW Integral ABS



Warning:

When the ignition is switched off or if the BMW Integral ABS fails, only a RESIDUAL BRAKING FUNCTION remains available for slowing the motorcycle (➔ 81).

Under these circumstances you must apply CONSIDERABLY higher pressure to the brake levers in order to apply the brakes, and lever travel is longer.

Risk of poisoning

The exhaust from a motor vehicle contains carbon monoxide, which is colourless and odourless, but none the less toxic.



Warning:

Inhaling the exhaust fumes therefore represents a health hazard and can even cause loss of consciousness with fatal consequences.

Do not run the engine in an enclosed space.

Catalytic converter



Caution:

To avoid damage to the catalytic converter:

- Do not run the fuel tank dry
- Do not push start your motorcycle. Use jump leads instead
- Do not run the engine with a spark plug lead detached
- Do not exceed the engine-speed limits marked on the revolution counter
- Comply with all specified maintenance intervals
- Stop the engine at once if it is misfiring
- In the event of misfiring or a severe drop in engine power, consult a specialist workshop, preferably an authorised BMW motorcycle dealer

If misfiring or malfunction of the fuel-air mixture preparation system causes unburned fuel to reach the catalytic converter, there is a risk of it overheating and being damaged.

Risk of fire

High temperatures occur at the exhaust system, particularly if a catalytic converter is installed.



Warning:

Make sure that whether riding or standing still or when the motorcycle is parked, no easily flammable material (for example hay, grass, leaves, clothing or luggage etc.) can come into contact with the hot exhaust system.

Do not allow the engine to idle unnecessarily or for prolonged periods

—Risk of overheating or fire.

Ride away immediately after starting the engine.



Placing motorcycle on side stand



Warning:

For safety reasons, never sit on the motorcycle with the side stand extended.



Caution:

Stop the engine before using the side stand.

Make sure the surface under the stand is firm.

On a gradient, the motorcycle should always face uphill; select 1st gear.

- Switch off the ignition
- Keep both feet on the ground
- Hold the left handlebar grip with your left hand
- Keep your right hand on the right handlebar grip and the handbrake lever
- Hold the motorcycle upright and balanced
- Use your left foot at the extension pin to extend the side stand fully (arrow)
- Slowly lean the motorcycle to the side until its weight is taken by the stand and dismount from the motorcycle
- Turn the handlebars to full left lock (➡ 13)
- **Check that the motorcycle is firmly supported**



Lifting motorcycle off the side stand



Warning:

When the ignition of a motorcycle fitted with BMW Integral ABS is switched off, only a “RESIDUAL BRAKING FUNCTION” is available (➡ 81). Make sure the side stand is fully retracted before you ride off.

– Allowing the motorcycle to roll with the side stand extended represents a safety risk.

- Turn the ignition key to the “R” or “ON” position (➡ 13)
 - Handlebars unlocked
- Both feet on the ground, no weight on the motorcycle
- Hold the left handlebar grip with your left hand
- Keep your right hand on the right handlebar grip and the handbrake lever
- Slowly raise the motorcycle to the upright position and keep it balanced
- Sit on the motorcycle and use your left foot to retract the side stand

Main (centre) stand



Placing motorcycle on main (centre) stand



Warning:

For safety reasons never sit on the motorcycle with the centre stand extended.



Caution:

Switch off the engine before using the main (centre) stand. Make sure the surface under the stand is firm.

- Switch off the ignition
- Hold the left handlebar grip with the left hand
- Hold the lifting handle with the right hand
- Place the right foot on the extension pin and press it down until the curved shoes of the stand touch the ground
- Place the right foot on the tread surface of the stand
- Apply all your body weight to the stand
- Pull the motorcycle to the rear and upwards (arrow) until it rests on the centre stand
- **Check that the motorcycle is firmly supported**



Removing motorcycle from main (centre) stand



Warning:

For safety reasons never sit on the motorcycle with the centre stand extended.


When the ignition of a motorcycle fitted with BMW Integral ABS is switched off, only a “RESIDUAL BRAKING FUNCTION” is available (➔ 81).



Caution:

Make sure the centre stand is fully retracted before you ride off.

- Turn the ignition key to the “R” or “ON” position (➔ 13)
 - Handlebars unlocked
- Hold the left handlebar grip with the left hand
- Hold the lifting handle with the right hand
- Push the motorcycle forward off the stand (arrow)
- **Check that the stand has fully retracted**

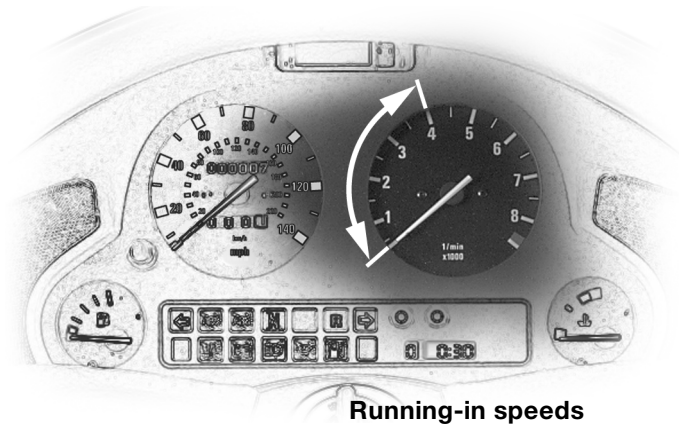**Caution:**

Exceeding the running-in speed limits will cause premature engine wear.

**Note:**

While running in the motorcycle, vary the throttle opening and engine-speed range frequently.

Try to do most of your riding during this initial period on twisting, fairly hilly roads rather than high-speed main roads and highways.

Running-in speeds**From 0 to 1,000 km****(approx. 600 miles)**

- Max. engine speed 4,000 rpm and no full-load acceleration
- The first inspection should always be performed after 1,000 km (approx. 600 miles). Make an appointment with your BMW motorcycle dealer in good time, so that the work can be performed punctually.

From 1,000 to 2,000 km**(approx. 600 to 1,200 miles)**

- Engine speeds can be gradually increased after 1,000 km (600 miles)
- Avoid lengthy periods at full load until 2,000 km (1,243 miles) have been covered

Running in new brake pads



Warning:

New brake pads must “bed down” and therefore do not achieve their optimum friction levels during the first 500 km (approx. 300 miles).

This slight initial reduction in braking efficiency can be compensated for by exerting greater pressure on the lever. Try to avoid all unnecessary hard braking applications during this initial period.



Caution:

Comply with the notes on BMW Integral ABS (► 78-85).

Running in new tyres



Warning:

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to reach their maximum level of grip.

Before you start

3

70

Switch on the ignition

- Emergency off (kill) switch in operating position **1**
- Turn ignition key to **ON**

In an emergency only:

- Move emergency off switch to the **0** position.
- The Motronic, fuel pump and starter motor electrical circuits are out of action



Note:

If you move the kill switch to the **0** position while the ignition is on (switch in **ON** position), the BMW Integral ABS remains operational (► 78-85).

Fully retract the side stand



Note:

If the side stand is extended and a gear engaged, you cannot start the motorcycle.

Select neutral

- Neutral indicator light **green**  on (► 10)
- Gear indicator shows “0”




Note:

Engine does not start:

- Move the gear lever to the  position or disengage the clutch

Engine stops when first gear is engaged:

- Fully retract the side stand; if necessary, consult the troubleshooting chart (► Maintenance Instructions, Chapter 2)

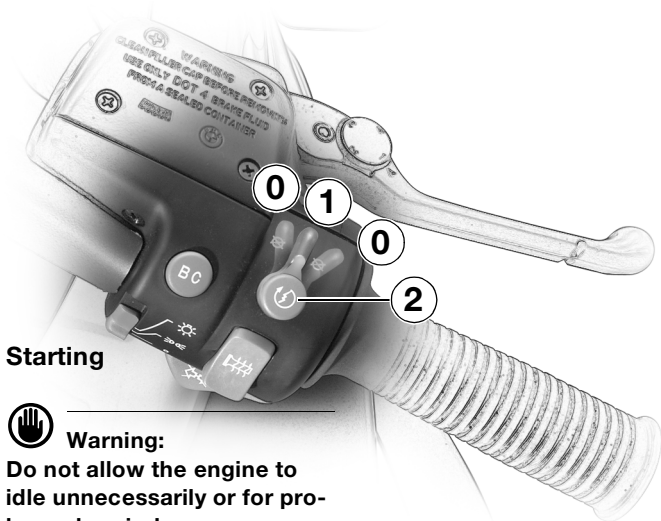

Starting



Warning:

Do not allow the engine to idle unnecessarily or for prolonged periods

– Risk of overheating or fire.

Ride away immediately after starting the engine.

Avoid high engine speeds after a cold start.



Caution:

If you attempt to start the engine when the battery is flat, you will hear the relay chattering. Further attempts will damage the starter relay and starter motor. Before trying again: charge the battery (Maintenance Instructions ➡ Chapter 2).



Note:

Do not turn the throttle twistgrip when starting the engine.

- Press starter pushbutton **2**
- The engine will then start
- Gently turn the throttle twistgrip



Note:


At ambient temperatures below 0 °C, pull the lever to disengage the clutch when starting the engine.

Warning lights

3

72

Starting – Riding – Parking

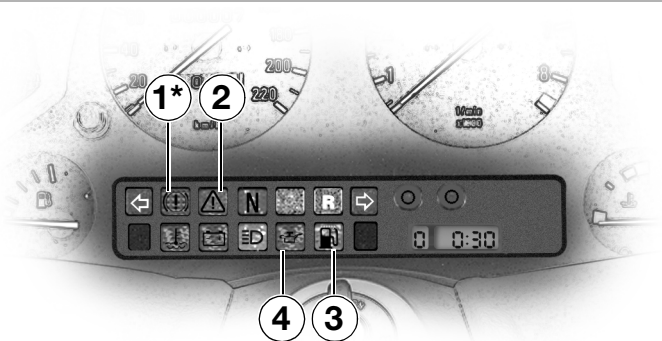

ABS warning light

The ABS warning light **1** lights up if the BMW Integral ABS (► 85) develops a fault

Warning light, general

General warning light **2** lights up if the BMW Integral ABS develops a fault (► 85), or if the tail light or brake light is defective.

Low fuel level

When warning light **3** comes on, there are still approx. 4 litres (0.9 gal) of fuel in the tank.

Engine oil pressure

Warning light **4** goes out above idle speed.




Caution:

If warning light **4** comes on during the journey, take the following action immediately if no road safety risk is incurred:

- Declutch
- Operate the emergency off switch
- Bring the motorcycle safely to a halt
- Check engine oil level (► 41)

Top up the oil if the level is low. If the warning light comes on even though the oil level is correct, you must consult a specialist workshop, preferably an authorised BMW motorcycle dealer.

* depending on national-market specification

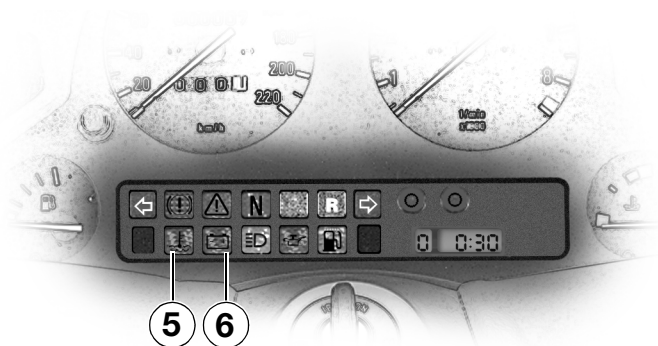

Coolant temperature

Warning light **5 (red)** goes out when the engine is started, above idle speed.



Caution:

If the coolant temperature warning light **5** comes on, stop the engine and allow it to cool down.

Check coolant level in the expansion tank (► 59).

If the expansion tank is full, but the warning light remains on, or if coolant consumption is excessive, consult a specialist workshop, preferably an authorised BMW motorcycle dealer.

Battery charge current

Warning light **6** goes out above idle speed.



Caution:

If warning light **6** comes on during the journey: seek the advice of a specialist workshop, preferably an authorised BMW motorcycle dealer.

Engine speed

Choose engine speeds in accordance with the coolant temperature reading, and do not use maximum engine speeds until the engine has reached its regular operating temperature (➡ 9).

In the red zone of the revolution counter the fuel supply is interrupted in order to protect the engine, so that misfiring occurs.



Warning:

Never run the engine in the red zone of the revolution counter.

Load changes



Warning:

Try not to open and close the throttle abruptly, particularly on wet or slippery roads.


Changing gear



Note:

Never slip the clutch excessively when changing gear. Vary your speed only by using the throttle in a suitable gear, not by slipping the clutch. The digital cockpit display shows which gear has been selected (➡ 10).

Riding and changing gear

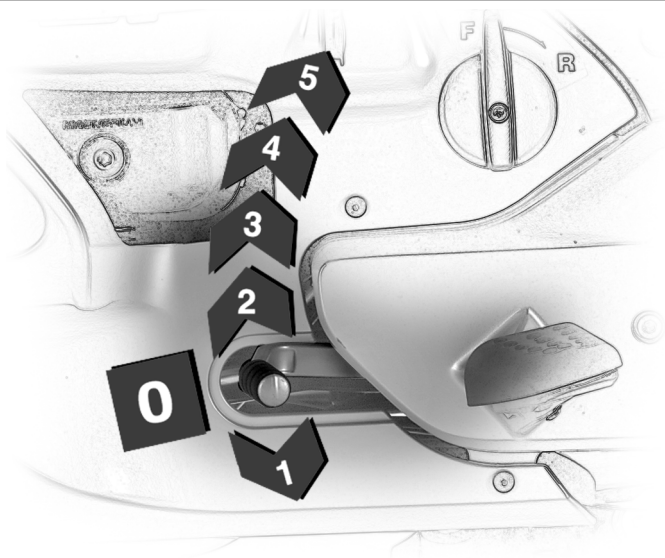

3

75

Starting – Riding – Parking

Moving away/shifting up:

- Pull the clutch lever in
- Press down on the gearshift lever (to select first gear) and take your foot off the lever
- Smoothly re-engage the clutch
- Increase engine speed slightly as necessary
- Accelerate when the clutch is fully engaged
- For upward shifts into 2nd, 3rd, 4th and 5th gears, repeat the above procedure

Shifting down:

- Close the throttle (twistgrip)
- Pull the clutch lever in
- Select the next-lower gear: (opposite direction to arrow)
- Engage the clutch again smoothly

Wet brakes

After the motorcycle has been washed, ridden through water or ridden in the rain, the brake discs and pads may be wet (or iced-over in winter), and may not take effect immediately.



Warning:

The brakes should always be applied first to dry them.

Salt on brakes

The brakes may fail to take effect immediately if the motorcycle was ridden on salt-covered roads and the brakes were not applied for some time.



Warning:

The layer of salt on the brake discs and pads must first be worn away.

Oil and grease on brakes



Warning:

Brake discs and pads must be free from oil and grease.

Dirt or mud on brakes

When riding on loose surfaces or muddy roads, the brakes may fail to take effect immediately because of dirt or moisture on the discs or brake pads.



Warning:

The brakes must first be applied until the discs and pads are clean.

Dirt on the brakes increases the rate of pad wear.



Warning:

If the brake lever can be moved right to the limit of its travel, this indicates a mechanical or hydraulic fault. The brake system is defective.

Immediately consult a specialist workshop, preferably an authorised BMW motorcycle dealer.

Sensitive electronic control

It takes skill and sensitive control of the brakes to pull up safely on a motorcycle. If the front wheel brake locks and the wheel skids, the necessary longitudinal and lateral stabilising forces are lost, and a fall can result.

For this reason, the rider seldom makes full use of available braking performance in an emergency.

BMW Integral ABS is the latest-generation BMW ABS development: by preventing both wheels from locking and optimising braking-force distribution by means of the integral function, it offers much improved braking performance (80). Full use is made of technical braking capacity to minimise braking distances, even when road conditions are poor. When the motorcycle is ridden in a straight line, the BMW Integral ABS is able to handle emergency braking safely.

Extra safety margin

But remember: the potentially shorter braking distances which BMW Integral ABS permits must not be used as an excuse for careless riding. ABS is primarily a means of ensuring a safety margin in genuine emergencies.

- You have to familiarise yourself with the new, electronically assisted braking. Try the brakes several times when you take your motorcycle out for the first time. Find out for yourself how the brakes feel.
- Never ride without due care and attention, or assume that good fortune will protect you from your own foolhardiness
- Keep within the permitted speed limits
- Take care when cornering. When you apply the brakes on a corner, the motorcycle's weight and momentum take over and even BMW Integral ABS is unable to counteract their effects.

Fully integral brakes

The integral brake function interlinks the front and rear brakes, so both wheels are braked when you operate the brake lever.

The electronic controller in the BMW Integral ABS computes the braking-force distribution between front and rear wheels, and applies the brakes accordingly.

The braking-force distribution depends on load and is recalculated every time the ABS controller comes into action.

In a fully integral brake configuration, the integral braking function is activated by either the handbrake lever or the footbrake lever.

Brake servo

The hydraulic pump in the BMW Integral ABS actively boosts the braking force acting on the wheel when the brakes are applied.

By boosting the braking force in this way, the BMW Integral ABS achieves a higher braking efficiency than standard brake systems.

ABS - anti-lock brake system

ABS prevents the wheels locking under heavy braking when the motorcycle is travelling in a straight line, thus contributing significantly to road safety.

RESIDUAL BRAKING FUNCTION

If the BMW Integral ABS develops a fault, a RESIDUAL BRAKING FUNCTION only is available in the brake circuits in question.

The RESIDUAL BRAKING FUNCTION is the braking efficiency without the hydraulic servo assistance of the BMW Integral ABS. Under these circumstances, therefore, you must apply CONSIDERABLY higher pressure to the brake levers in question in order to apply the brakes, and lever travel is longer. When the RESIDUAL BRAKING FUNCTION is active, the ABS function is unavailable in the brake system in question. When the RESIDUAL BRAKING FUNCTION is active, the integral braking function is partially or entirely unavailable.



Warning:

When the RESIDUAL BRAKING FUNCTION is active, maintain a defensive riding style and proceed immediately to the nearest specialist workshop, preferably an authorised BMW motorcycle dealer.



Note:

When the RESIDUAL BRAKING FUNCTION is active, it is advisable to set adjuster **A** (➡ 45) on the front-brake lever to position 4.

The RESIDUAL BRAKE FUNCTION is active under the following circumstances:

- Ignition off
- Before and during self-diagnosis (➡ 82)
- Fault in the BMW Integral ABS (➡ 85)



Note:


When the RESIDUAL BRAKING FUNCTION is active for both brake circuits, the noise of the pump is no longer audible when you operate the brake levers.

Brake system - with BMW Integral ABS

3

82

Starting - Riding - Parking

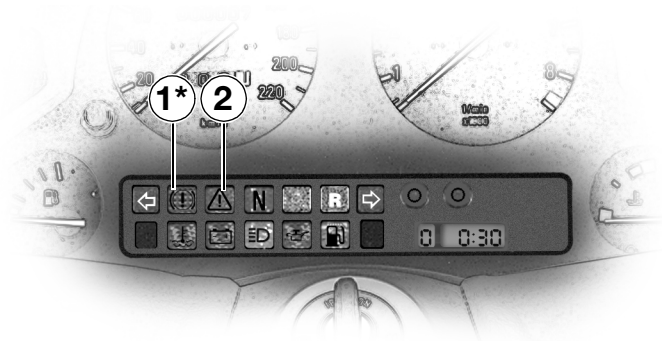

Self-diagnosis with pull-away test

The BMW Integral ABS performs self-diagnosis and a pull-away test to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.



Warning:

Self-diagnosis is not performed unless both brake levers are in their fully released positions. Only the RESIDUAL BRAKING FUNCTION is available until self-diagnosis is completed (➡ 81).

- Release the brake levers, if necessary.

- Switch on the ignition

Initially:

- ABS warning light **1**: flashes at 4 Hz
- General warning light **2**: ON

➡ Self-diagnosis is in progress


Then:

- ABS warning light **1**: flashes at 1 Hz
- General warning light **2**: OFF

➡ Self-diagnosis successfully completed

* depending on national-market specification

Brake system - with BMW Integral ABS

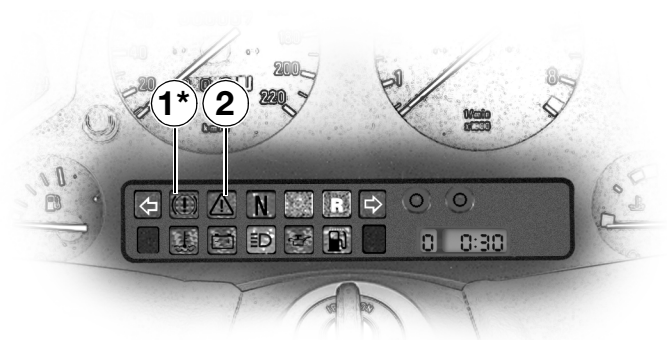

- Start the engine
- Move off
- ABS warning light **1**:
OFF (as of approx. 5 km/h
(3 mph) road speed)
- ➡ Pull-away test successfully
completed
- ➡ BMW Integral ABS is
available



Note:

Flashing at 1 Hz = 1 x flash per
second (slow flashing)
Flashing at 4 Hz = 4 x flashes
per second (fast flashing)

* depending on national-market specification



Note:

Starting on gradients:
Always switch on the ignition
with gear engaged, clutch lever
released and both brake levers
released.

Self-diagnosis cannot be performed if you do not follow this procedure.


When self-diagnosis completes,
apply the brakes, disengage the
clutch, and start the engine.

Brake system - with BMW Integral ABS

3

84

Starting - Riding - Parking

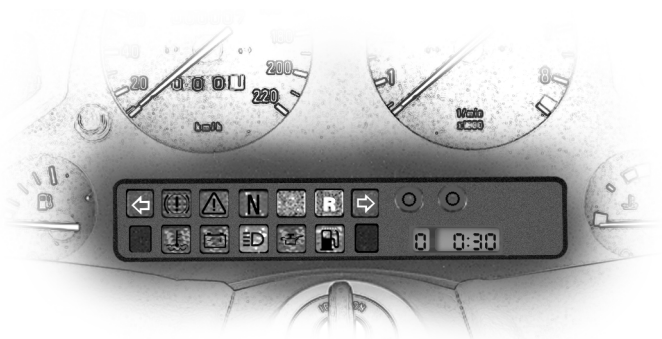

Warning:

If the BMW Integral ABS fails in both brake circuits, a **RESIDUAL BRAKING FUNCTION** only is available. (➡ 81)



Warning:

If the **RESIDUAL BRAKING FUNCTION** is active (➡ 81), maintain a defensive riding style and proceed immediately to a specialist workshop, preferably an authorised BMW motorcycle dealer.



Warning:

If there is a fault in the ABS system, the reserves of safety normally afforded by ABS are not available until the defect has been put right.

There is a risk of dropping the motorcycle if the brakes are applied too hard and the wheels lock or the rear wheel lifts clear of the ground as a result of a high level of tyre adhesion. Have the defect rectified immediately by a specialist workshop, preferably an authorised BMW motorcycle dealer.

BMW Integral ABS - Troubleshooting

Warning light, general 	Warning light, ABS  / brake failure	Malfunctions
OFF	ON	Only RESIDUAL BRAKING FUNCTION available in both circuits (➡ 81)
OFF	Flashes at 1 Hz	ABS not available Pull-away test not completed (➡ 82)
OFF	Flashes at 4 Hz	Only RESIDUAL BRAKING FUNCTION available in both circuits (➡ 81) Self-diagnosis not completed (➡ 82)
ON	OFF	Tail light/brake light defective (Maintenance Instructions, ➡ Chapter 2)
ON	Flashes at 1 Hz	At least one brake circuit without ABS (➡ 84)
ON	Flashes at 4 Hz	At least one brake circuit in RESIDUAL BRAKING FUNCTION mode (➡ 81)
Alternate flashing at 1 Hz	Alternate flashing at 1 Hz	Fluid level in BMW Integral ABS too low. Check the motorcycle as follows: – Ignition OFF: is brake pressure OK at the brake levers? – Are the brakes acting on both wheels? – Is the brake system leaktight, no signs of brake fluid escaping? The brake system is defective if the test outcome is negative.
Alternate flashing at 4 Hz	Alternate flashing at 4 Hz	Fluid level in the BMW Integral ABS is too low, perform the checks listed above. Only RESIDUAL BRAKING FUNCTION available in at least one circuit (➡ 81)
 Warning: Do not ride the motorcycle if you have any doubts about the dependability of the brake system.		



Know-how...

In recent years, motorcycles' technical design features have become more and more sophisticated.

Motronic, electronic ignition, integral brakes, the catalytic converter or the use of four valves per cylinder are clear signs that far more than basic technical knowledge may be needed to solve certain problems. In addition, high-tech materials are increasingly taking the place of conventional ones, which again calls for thorough and expert knowledge if they are to be handled correctly during repair work.

To be sure of achieving the necessary standard, it is always advisable to consult your authorised BMW motorcycle dealer.

The authorised BMW motorcycle dealer employs staff who attends regular and comprehensive training courses.

Your authorised BMW motorcycle dealer also receives all the current technical information and is therefore fully aware of the latest developments.

...technical features...

The BMW motorcycle dealer's staff has the experience and all the necessary facts at its disposal when it comes to solving problems quickly and effectively. Workshops are equipped with the latest technical facilities, for example the special tools developed by BMW such as the

BMW diagnosis system or exhaust emissions tester.

Regular visits to the workshop for routine servicing are strongly recommended even after the warranty period has elapsed.

They are the only way to be genuinely certain that your BMW motorcycle is being kept in perfect working order.

For generous treatment of claims submitted after the warranty period has expired, evidence of regular maintenance is essential.

Certain signs of wear may not otherwise be noticed until it is too late to put them right at moderate cost.

The staff in the authorised BMW motorcycle dealer's workshop know every detail of your motorcycle and can take remedial action if necessary before minor faults develop into serious problems. By having the necessary repairs done properly and in good time, you save time and money in the long run.

...service

You can obtain accurate advice in all cases, and make appointments with a firm completion deadline which we will comply with punctually. But the most gratifying feeling of all is that your BMW is in genuinely good shape when it leaves the authorised BMW motorcycle dealer's workshop – and above all, safe.

BMW Service Card

A Service Card is available for all new BMW motorcycles.

A wide range of emergency-assistance services are in place to help you in the unlikely event of a problem occurring somewhere far from home.

If you have a breakdown anywhere in Europe, just call our Central Emergency Service number from any telephone. Our experts are on duty there day and night to arrange assistance for you. They can provide practical advice on what to do next and can make arrangements on your behalf, for example notifying local emergency services anywhere in Europe, arranging recovery and transportation of the motorcycle to the nearest authorised BMW motorcycle dealer, a taxi for you, and even a replacement vehicle and hotel accommodation, if necessary.

BMW Service worldwide

And if your travels take you even further afield, you have no need to worry: we are represented in more than 100 countries of the world.



Note:

Call us if you have any questions about the BMW dealership network. You can contact us from any European country on a telephone hotline. The phone numbers are listed in the **European Service** booklet (see on-board documentation). Or if you prefer you can use the homepage address to contact us on the Internet.

Development...

Motorcyclists have an intensive relationship with nature. BMW has made sure that they continue to enjoy the best possible prospects for successful riding in the future.

This not only because your new BMW is available with exhaust emission control by closed-loop, three-way catalytic converter.


...waste disposal...

Behind the scenes, in the repair shop, we don't neglect the pro-environmental aspects of our work either.

Wherever possible, we use environmentally acceptable, biodegradable materials. We ensure strict compliance with all environmental legislation, for example the correct disposal of old oil, which is now classified as hazardous waste in many countries.

...recycling

Alongside the correct disposal of materials that are potentially hazardous to the environment, recycling is being given increasing priority by BMW. For example, plastics are individually marked so that they can be returned to the materials cycle. Remember: when it comes to making repairs to your motorcycle, the authorised BMW motorcycle workshop is far better equipped to protect the environment than you are at home.

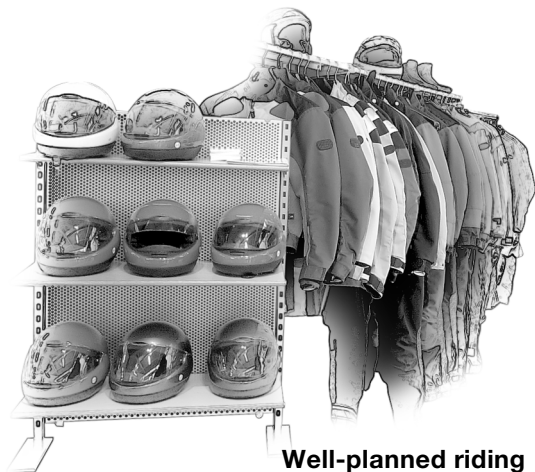

The essentials

To reach your destination safely every time, there's only one choice:


- Helmet
- Suit
- Gloves
- Boots

It's foolhardy to ride without these items of clothing. This even applies to short journeys, and to every season of the year.

Well-planned riding pleasure

Many motorcyclists have learned the hard way that the proper clothing contributes so much to riding pleasure. You must feel comfortable and relaxed – and your own safety must never be endangered.

There's no doubt about it: when buying motorcycling clothing, you simply can't set your sights too high. It's good to know that the BMW brand can be trusted to supply you with safe, high-quality rider's clothing as well. Information on the latest products is always available from your BMW motorcycle dealer.

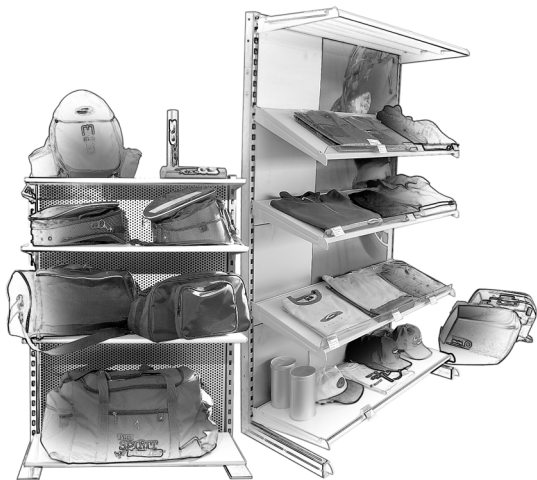

Always an idea ahead

This is our motto – and it's one we live up to. For many years now, BMW has offered the enthusiast everything capable of enhancing the fascination of motorcycling. A unique programme that is regularly updated and offers plenty of scope for choosing items according to individual preferences.

Ask your authorised BMW motorcycle dealer for the latest details of what can be upgraded on or retrofitted to your motorcycle.

Every accessory product is made to the same exemplary standards of design, function and quality as the motorcycle itself. At the end of the day, there is a great deal of experience involved here since all our engineers are themselves keen motorcyclists who know what is really needed. Whenever development work starts on a new motorcycle, equipment items are also taken into consideration and their practical value confirmed by extensive testing. This is your guarantee of the high quality you expect from BMW.

Cornering and braking need to be practised

Develop a “sixth sense” for potentially dangerous situations. What this means: look ahead, plan how to avoid possibly dangerous situations and view other road users' behaviour with a degree of healthy scepticism.

- Take bends smoothly and rhythmically, avoiding braking and acceleration
- Approach bends slower than you feel they can be taken; a neat riding style will get you to your destination more safely than sheer speed
- Ride at the inner edge of the ideal line, look ahead and plan to leave the bend as smoothly as you entered it

Allow for reaction time when judging braking distances.

- At 50 km/h (approx. 30 mph), for instance, every second lost represents a further distance of about 14 metres (46 feet) before the brakes are applied.
- at 90 km/h (approx. 55 mph), this distance grows to 25 meters (82 feet).

Practice applying the brakes with and without an extra load on the motorcycle, and study its reactions on various kinds of road surface.

Work up to the wheel lock limit gradually.

BMW has a worthwhile safety contribution to make in this area too – BMW Safety Training. These programmes are a wonderful opportunity: systematic basic and follow-up training enables you to master situations close to the limit and keep your motorcycle under supreme control whatever happens.

Now it's your turn

- Regular care is important, with all functions checked before the journey starts.
- Use only genuine BMW accessories. These satisfy all safety requirements and are precisely matched to your BMW motorcycle.
- Have your motorcycle serviced only by the trained, expert personnel at your local authorised BMW motorcycle dealer.
- You should never fit accessories that don't have official type approval for your motorcycle. This can represent a safety hazard, invalidate the motorcycle's general operating permit or cause you to lose your insurance cover.
- Technical modifications should always be entrusted to your authorised BMW motorcycle dealer.



Note:

Your local authorised BMW motorcycle dealer can supply you with useful items to add to your motorcycle's toolkit and accompany the Maintenance Instructions.

- BMW Repair Manual
- BMW set of circuit diagrams

It's good to know you've thought of everything, isn't it?

Our aim is to make your journey safer

We want you to reach all your destinations safely – and we want you to enjoy riding your BMW as a constant source of relaxed pleasure and satisfaction.

A

- ABS, 80
- Adjusting deflectors, 17
- Adjusting windscreen, 17
- Aerial, 4
- Anti-lock brake system
 - notes, 78, 80-85
- Audio system controls
 - passenger, 6

B

- BMW Integral ABS, 78-84
 - brake fluid level, 50
 - brake fluid reservoir, front, 6
 - brake fluid reservoir, rear, 6
 - troubleshooting chart, 85
 - warning lights, 10
- Brake pads
 - running in, 69
- Brake pads, checking, 47
- Brake servo, 80
- Brake system
 - general, 46, 47
 - with BMW Integral
 - ABS, 48, 49, 50
- Brake system, checking, 46

C

- Cases
 - opening/closing, 30
- Cassette player/radio, 9
- Catalytic converter, 63
 - safety instructions, 63

- CD changer, 7
- Changing gear, 75
- Checklist, 39
- Clock, 10
- Clock (in cockpit), 10
- Clutch
 - fluid level, 51
- Clutch lever, adjusting, 44
- Cockpit
 - general view, 8, 9
- Coolant level
 - checking, 59
- Coolant reservoir, 5
- Coolant temperature, 72
- Coolant temperature gauge, 9
- Cruise control
 - notes, 21
 - operation, 22, 23, 24
 - switch, 14

E

- Emergency off (kill) switch for
 - ignition, 15, 70
- Engine oil, 40
 - oil filler neck, 41
- Engine oil pressure
 - telltale light, 72
- Engine speed, 74
- Environmental protection, 89

F

- Front brake
 - brake fluid level, 50
 - handbrake lever, 45
- Front seat
 - adjusting, 33
 - locking, 33
 - opening, 32
- Front-seat heating, 37
- Fuel filler cap, 6, 42
- Fuel gauge, 8
- Fuel grade, 43
- Fuel level, 72
- Fully integral brakes, 80
- Fuse box, 4

G

- Gear indicator, 10
- Gearshifts, 74, 75
- General view
 - left side, 4, 5
 - right side, 6, 7
- Gross weight, 56

H

- Hand lamp
 - location, 6
- Handbrake lever, adjusting, 45
- Handlebar controls for audio system, 14
- Handlebar controls for on-board computer, 15

Handlebar fitting

- left, 14
- right, 15
- Hazard warning flasher switch, 14
- Hazard warning flashers, 16
- Headlight adjustment
 - LHD/RHD traffic, 58
- Headlight beam throw, adjusting, 57
- Heated handlebar grips, 15
- Helmet holder, 5, 38
- High/low (dipped) headlight switch, 14
- Horn, 14
- Horn button, 14

I

- Ignition switch and steering
 - lock, 9, 12, 13
- Ignition, switching on, 70
- Instruments in cockpit, 8, 9
- Integral brake function, 80
- Integral brakes, 80

K

- Keys, 12, 13

L

- LHD traffic
 - headlight adjustment, 58
- Light switch, 15
- Lights
 - headlight beam throw, 57, 58
 - notes, 57

Loading, 55, 56

Low/high headlight switch, 14

M

Main (centre) stand, 66, 67

Motorcycle accessories, 91

N

Neutral, 70

Notes on safety
general, 62

O

Octane number, fuel, 43

Odometer, 8

Oil filler neck, 7, 40, 41

Oil funnel, 41
location, 4

Oil level

check, 40, 41

engine oil pressure, 11, 72

sight glass, 7

On-board computer, 8

ambient temperature, 28

average fuel consumption, 29

average speed, 29

calling up functions, 25

estimated range, 28

handlebar controls, 26

recalculation, 27

starting recalculation, 27

On-board literature

location, 4

P

Power socket

rider and passenger, 4

R

Radio/cassette player, 9

Rear seat

adjusting backrest, 34, 35, 36

Rear-seat heating, 37

Refuelling, 42

Remote control

audio system

handlebar controls, 14

passenger, 6

on-board computer, 26

Repair kit for tubeless tyres, 5

Residual braking function, 49, 81

Rev. counter, 8

Reverser, 18

selector lever, 5

RHD traffic

headlight adjustment, 58

Rider's equipment, 90

Riding, 74

Rims, 53

Roadspeed indicator, 8

Running-in speeds, 68

S

Safety check, 39

Safety instructions

braking, 76

catalytic converter, 63

Seat

- adjusting, 33
- removing, 33

Seat heating, 7, 37

Seat opener, 5

Service worldwide, 88

Side stand, 64, 65, 70

Speedometer, 8

Spring preload, 4, 52

Starter button, 15

Starter switch, 15

Starting, 71

Stowage compartment

- hand lamp, 6

T

Tank cap, 6

Telltale and warning lights

- ABS, 10, 72
- battery charge current, 11, 73
- coolant temperature, 11, 73
- cruise control, 10
- engine oil pressure, 11, 72
- fuel level, 11, 72
- high-beam headlight, 11
- neutral, 10
- reverser, 10
- turn indicator, right, 10
- turn indicator, left, 10

Tightening torques

- topcase, rear seat backrest, 36

Toolkit, 5

Tools, 5

Topcase

- opening/closing, 31

Tread depth, tyres, 53, 54

Trip meter, 8

Troubleshooting ABS, 85

Turn indicator cancel switch, 15

Turn indicator repeaters, 10

Turn indicator switch, left, 14

Turn indicator switch, right, 15

Type plate, 4

Tyres

- running in, 69
- tread depth, 53
- tyre pressures, 54

V

Valve caps, 54

W

Warning lights

- ABS, 72
- battery charge current, 73
- coolant temperature, 73
- engine oil pressure, 72
- fuel level, 72
- general, 72

Warnings

- braking, 76

Windscreen adjuster

- switch, 14

Rider's Manual

K 1200 LT

**BMW Motorrad
On-board
documentation**

consisting of
Rider's Manual
and Maintenance
Instructions

Certain illustrations and descriptions in this handbook may differ from your own motorcycle, depending on the equipment or accessories ordered with it or the national-market specification. Please note that no claims will be entertained on the basis of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Printing and other errors and omissions excepted.

©2002 BMW Motorrad
Not to be reproduced either wholly or in part without written permission from
BMW Motorrad,
After Sales.
Printed in Germany

BMW recommends Castrol



**BMW Motorrad
Printed information**

Order No.:
01 41 7 676 931
08.2002
4th edition GB / RF



**The Ultimate
Driving Machine**