



BMW Motorrad



The Ultimate
Riding Machine

Rider's Manual R 1200 R

Vehicle data/dealership details

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

Welcome to BMW

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About this Rider's Manual

Please read this Rider's Manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features. In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

Suggestions and criticism

If you have questions concerning your motorcycle, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 41 8 563 411



Table of Contents

1 General instructions	5	Multifunction display (Touring view)	25	Automatic Stability Control	70
Overview	6	Warnings	26	Electronic Suspension Adjustment.....	72
Abbreviations and symbols	6	Service-due indicator	42	Riding mode	73
Equipment	7	Fuel reserve	42	Cruise-control system	76
Technical data	7	Oil level	43	Heated handlebar grips	78
Actuality	7	Ambient temperature.....	43	5 Adjustment.....	81
2 General views	9	Tyre pressure	44	Mirrors	82
General view, left side	11	Recommendation to up-shift	45	Headlight	82
General view, right side	13	Red rpm range	45	Clutch	83
Underneath the seat	14	4 Operation.....	47	Brakes	84
Multifunction switch, left	15	Ignition	48	Front and rear seats.....	84
Multifunction switch, right	17	Ignition with Keyless Ride	50	Spring preload	85
Instrument panel	18	Emergency off switch (kill switch)	55	Damping	86
3 Status indicators	19	Lights	55	6 Riding.....	89
Warning and telltale lights	20	Daytime riding light.....	57	Safety instructions	90
Multifunction display (Full view)	22	Hazard warning flashers	59	Comply with checklist	92
Multifunction display (Sport view)	24	Turn indicators	59	Starting.....	92
		Multifunction display	60	Running in	95
		Anti-theft alarm.....	67	Shifting gear	96
		Anti-lock brake system	69	Brakes	97
				Parking your motorcycle	98

Refuelling	99
Securing motorcycle for transportation	102

7 Engineering details 105

General instructions	106
Anti-lock brake system	106
Automatic Stability Control	108
Dynamic Traction Control	110
Dynamic ESA	112
Riding mode	112
Tyre pressure monitoring (Reifendruck-Control, RDC)	113
Shift assistant Pro	115

8 Maintenance 117

General instructions	118
Toolkit	118
Front-wheel stand	118
Rear-wheel stand	120
Engine oil	120
Brake system	122
Clutch	126

Coolant	126
Rims and tyres	127
Wheels	128
Silencer	135
Lighting	137
Jump-starting	148
Battery	149
Fuses	153

9 Accessories 155

General instructions	156
Power sockets	156
Cases	157
Topcase	160
Navigation system	163

10 Care 169

Care products	170
Washing the vehicle	170
Cleaning easily damaged components	171
Paint care	171
Laying up the motorcycle	172
Protective wax coating	172
Restoring motorcycle to use	172

11 Technical data 173

Troubleshooting chart	174
Threaded fasteners	175
Engine	177
Fuel	178
Engine oil	179
Clutch	179
Transmission	180
Rear-wheel drive	180
Running gear	181
Brakes	182
Wheels and tyres	182
Electrics	183
Frame	185
Anti-theft alarm	185
Dimensions	186
Weights	187
Riding specifications	187

12 Service 189

BMW Motorrad Service ...	190
BMW Motorrad Mobility services	190
Maintenance work	190
Maintenance schedule	193
Standard BMW service	194

Confirmation of maintenance work	195
Confirmation of service....	200
13 Appendix	203
Certificate for electronic immobiliser	204
Certificate for Keyless Ride	206
Certificate for tyre pressure monitoring (Reifendruck-Control, RDC)	208
14 Index	209

General instructions

Overview	6
Abbreviations and symbols	6
Equipment	7
Technical data	7
Actuality	7

Overview

An important aspect of this Rider's Manual is that it can be used for quick and easy reference. Consulting the extensive index at the end of this Rider's Manual is the fastest way to find information on a particular topic or item. To first read an overview of your motorcycle, please go to chapter 2. All maintenance and repair work on the motorcycle is documented in Chapter 12. This record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims. When the time comes to sell your BMW, please remember to hand over this Rider's Manual; it is an important part of the motorcycle.

Abbreviations and symbols



CAUTION Low-risk hazard. Non-avoidance can lead to slight or moderate injury.



WARNING Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.



DANGER High-risk hazard. Non-avoidance leads to fatal or severe injury.



ATTENTION Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.



NOTICE Specific instructions on how to operate, control, adjust or look after items of equipment on the vehicle.



Indicates the end of an item of information.

- Instruction.
- » Result of an activity.
-  Reference to a page with more detailed information.
-  Indicates the end of a passage relating to specific accessories or items of equipment.
-  Tightening torque.
-  Technical data.
- ABS Anti-lock brake system.
- ASC Automatic Stability Control.

DTC	Dynamic Traction Control (optional extra only in combination with Pro riding modes).
DWA	Anti-theft alarm (Diebstahlwarnanlage).
ESA	Electronic Suspension Adjustment.
EWS	Electronic immobiliser.
RDC	Tyre pressure monitoring.
OE	Optional extras. The vehicles are assembled complete with all the BMW Motorrad optional extras originally ordered.

OA Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.

Equipment

When you purchased your BMW motorcycle, you chose a model with individual equipment. This Rider's Manual describes the optional extras (OE) offered by BMW and selected optional accessories (OA). This explains why the manual may also contain descriptions of equipment which you have not ordered. Please note, too, that your motorcycle might not be exactly as illustrated in this manual on account of country-specific differences.

If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

Technical data

All dimensions, weights and power ratings stated in the Rider's Manual are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e.V. (DIN). Versions for individual countries may differ.


Actuality

The high safety and quality level of BMW motorcycles is ensured by continuous development work on design, equipment and accessories. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Nor can BMW Motorrad entirely rule out errors and omissions. We

hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in this manual.


General views

General view, left side	11
General view, right side	13
Underneath the seat	14
Multifunction switch, left	15
Multifunction switch, right	17
Instrument panel	18

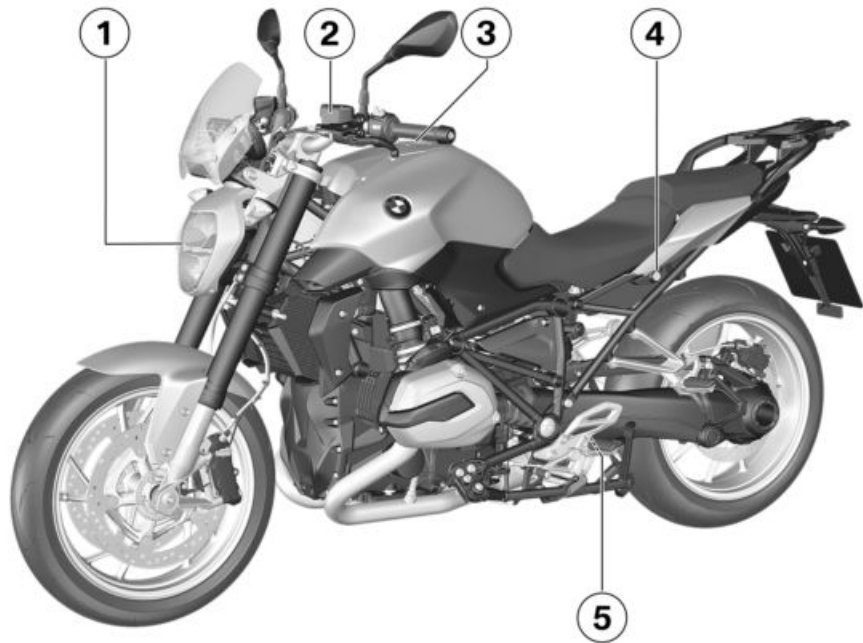

General view, left side

- 1** – with daytime running light^{OE}
– with Pro Headlight^{OE}
Daytime riding light
( 57)
- 2** Clutch-fluid reservoir
( 126)
- 3** Fuel filler neck ( 99)
- 4** Seat lock ( 84)
- 5** – without Dynamic ESA^{OE}
Setting the rear damping
(down at the spring strut)
( 86)

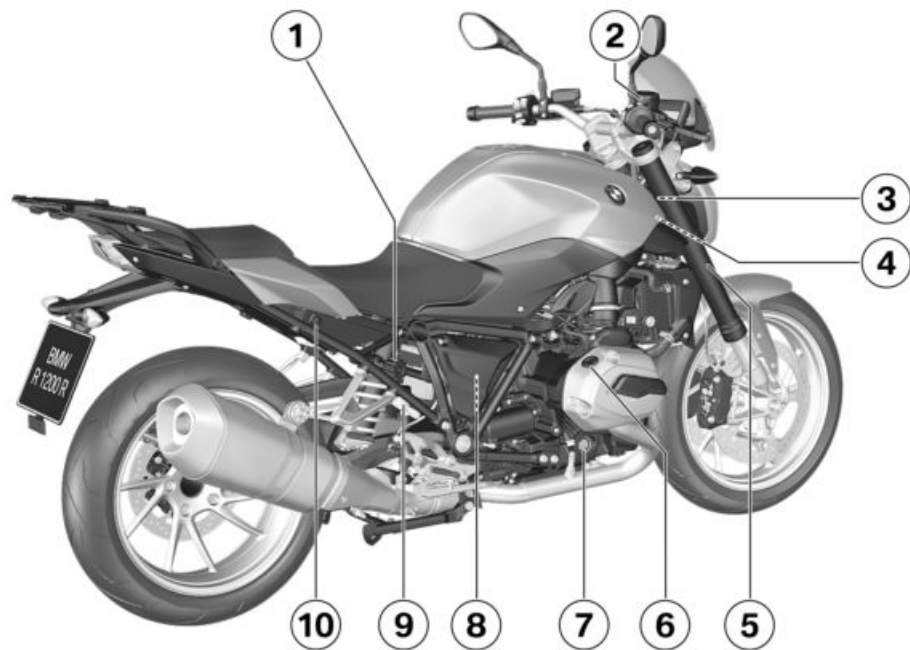


General view, right side


10 Power socket (156)

- 1 – without Dynamic ESA^{OE}
Adjuster for spring preload,
rear (85)
- 2 Brake-fluid reservoir, front
(124)
- 3 Vehicle identification number (VIN) (on steering head, right)
Type plate (on steering head, left)
- 4 Coolant-level indicator
(126)
Coolant reservoir (127)
- 5 Table of tyre pressures
- 6 Oil filler neck (121)
- 7 Engine oil level indicator
(120)
- 8 Battery (behind the side trim panel) (149)
Battery support point (behind the side trim panel)
(148)
- 9 Brake-fluid reservoir, rear
(125)

Underneath the seat

- 1 Fuses (➡ 153)
- 2 Rider's Manual
- 3 Standard toolkit (➡ 118)
- 4 Payload table

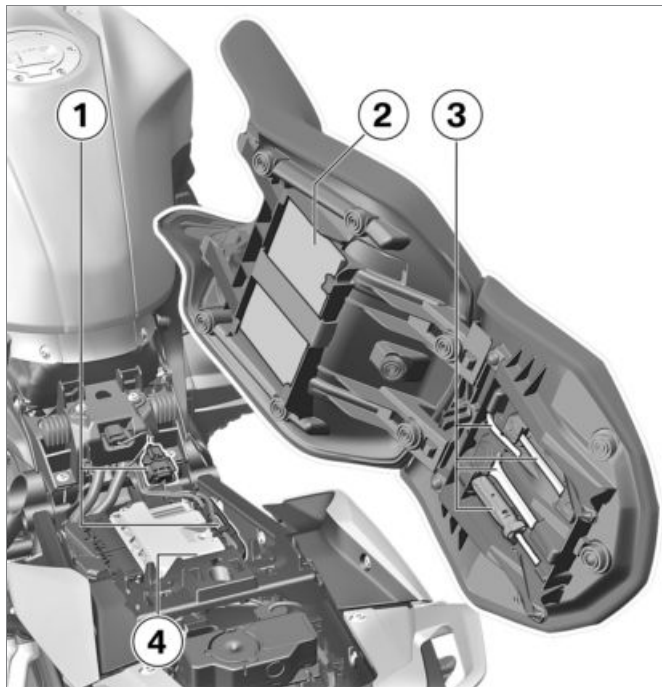


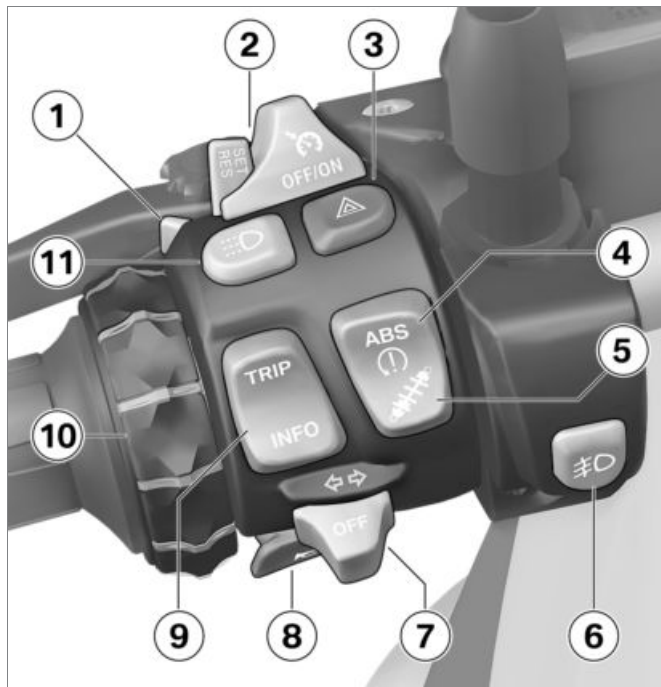

Multifunction switch, left

- 1 High-beam headlight and headlight flasher (➡ 56)
- 2 – with cruise control^{OE}
Cruise-control system (➡ 76)
- 3 Hazard warning flashers (➡ 59)
- 4 ABS (➡ 69)
ASC (➡ 70)
– with Dynamic Traction Control (DTC)^{OE}
DTC (➡ 70)
- 5 – with Dynamic ESA^{OE}
ESA (➡ 72)
- 6 – with LED auxiliary headlights^{OA}
LED auxiliary headlights (➡ 56)
- 7 Turn indicators (➡ 59)
- 8 Horn
- 9 Multifunction display (➡ 60)

- 10** – with preparation for navigation system^{OE}
Multi-Controller (▮▮▮▮ 164)
- 11** – with daytime running light^{OE}
– with Pro Headlight^{OE}
Daytime riding light
(▮▮▮▮ 57)

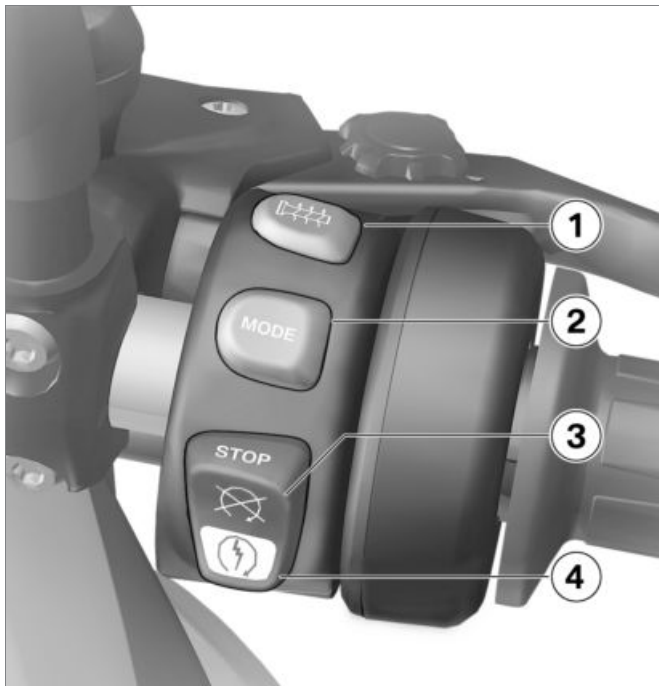


Multifunction switch, right

- 1** – with heated handlebar grips^{OE}
Heated handlebar grips (➡ 78)
- 2** Riding mode (➡ 73)
- 3** Emergency off switch (kill switch) (➡ 55)
- 4** Start engine (➡ 92)

Instrument panel

- 1 Speedometer
- 2 Brightness adjustment of the multifunction display
– with daytime running light^{OE}
Ambient brightness sensor for the automatic mode of the daytime riding light
– with alarm system (DWA)^{OE}
Anti-theft alarm telltale light
– with Keyless Ride^{OE}
Telltale light for the radio-operated key
- 3 Warning and telltale lights (►► 20)
- 4 Multifunction display
There is a choice of 3 different display views:
Full view (►► 22)
Sport view (►► 24)
Touring view (►► 25)

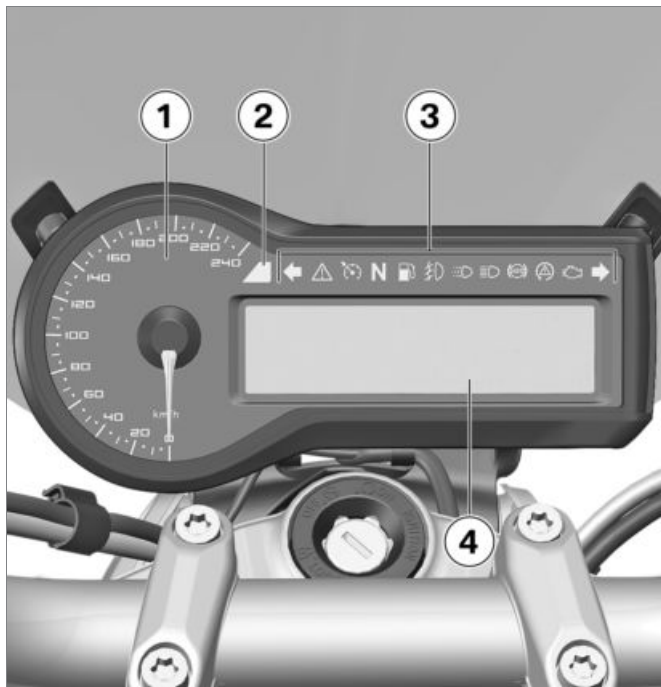


Status indicators

Warning and telltale lights.....	20
Multifunction display (Full view)	22
Multifunction display (Sport view)	24
Multifunction display (Touring view)	25
Warnings	26
Service-due indicator	42
Fuel reserve	42
Oil level	43
Ambient temperature	43
Tyre pressure	44
Recommendation to upshift	45
Red rpm range.....	45

Warning and telltale lights


- 1** General warning light (in combination with warning symbols in the display) (► 26)
- 2** Neutral
- 3** – with LED auxiliary head-lights^{OA}
Auxiliary headlights (► 56)
- 4** High-beam headlight (► 56)
- 5** ASC warning light (► 70)
– with Dynamic Traction Control (DTC)^{OE}
DTC warning light (► 70)
- 6** Turn indicators, right
- 7** Warning light for engine electronics (► 33)
- 8** ABS warning light (► 69)
- 9** – with daytime running light^{OE}
– with Pro Headlight^{OE}
Daytime riding light (► 57)

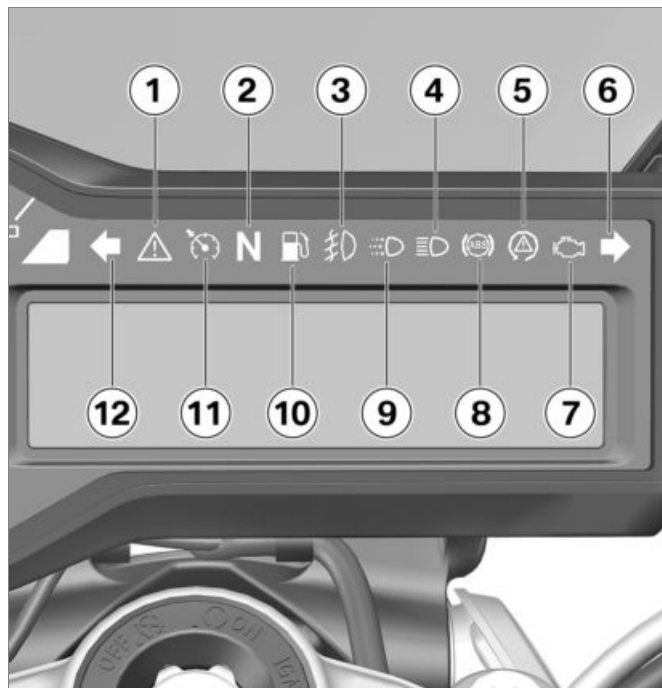

- 10** Fuel reserve (➡ 42)
- 11** – with cruise control^{OE}
Cruise-control system
(➡ 76)
- 12** Turn indicators, left

Multifunction display (Full view)


- 1 Clock (➡ 63)
- 2 Rev. counter
- 3 Tripmeter reading
On-board computer readings (➡ 60)
- 4 – with Dynamic ESA^{OE}
ESA setting (➡ 72)
- 5 Red rpm range (➡ 45)
- 6 Fuel level
- 7 Outside temperature warning (➡ 43)
- 8 Riding mode (➡ 73)
- 9 Tyre pressure monitoring
(Reifendruck-Control, RDC)
On-board computer readings (➡ 60)
- 10 – with daytime running
light^{OE}
– with Pro Headlight^{OE}
Automatic daytime riding
light (➡ 57)

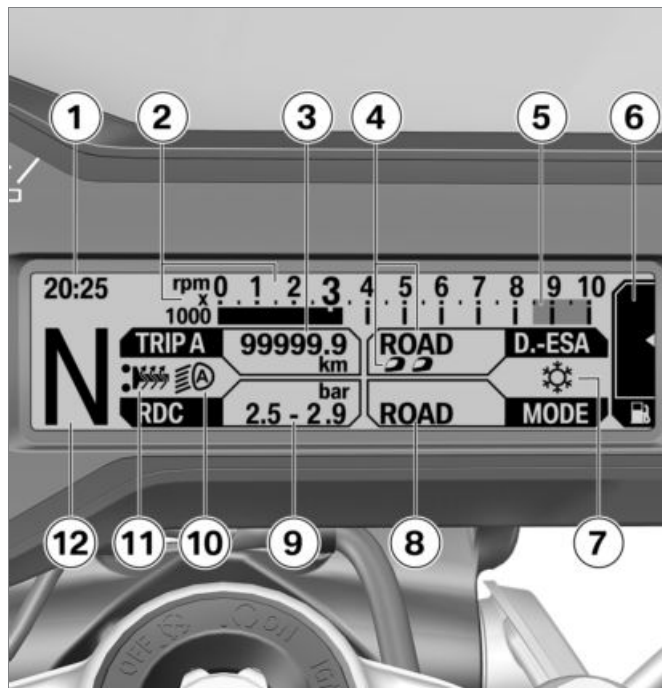


- 11** – with heated handlebar grips^{OE}
Heating stages, handlebar grips (➡ 78)
- 12** Gear indicator; "N" indicates neutral

Multifunction display (Sport view)

- 1 Clock (➡ 63)
- 2 Engine rpm bar
- 3 Red rpm range (➡ 45)
- 4 Engine rpm
- 5 Fuel level
- 6 – with daytime running light^{OE}
– with Pro Headlight^{OE}
Automatic daytime riding light (➡ 57)
- 7 – with heated handlebar grips^{OE}
Heating stages, handlebar grips (➡ 78)
- 8 Outside temperature warning (➡ 43)
- 9 Riding mode (➡ 73)
- 10 On-board computer readings (➡ 60)
- 11 Gear indicator; "N" indicates neutral

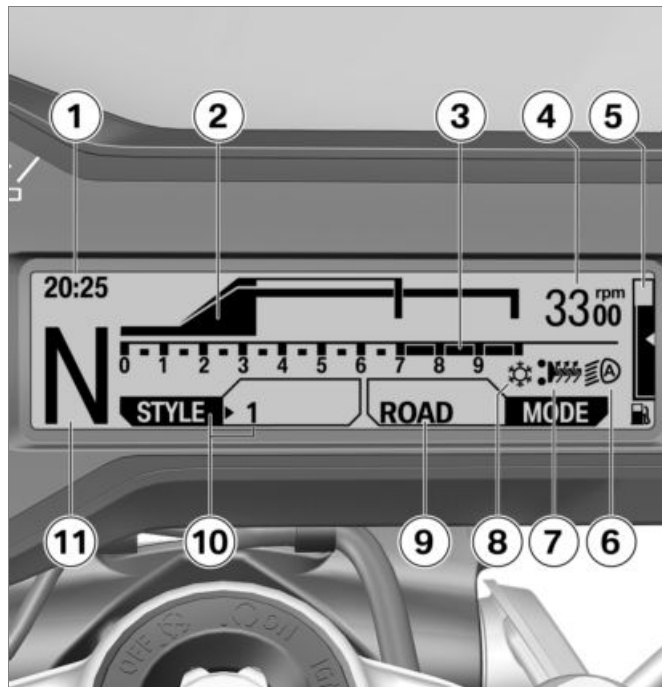

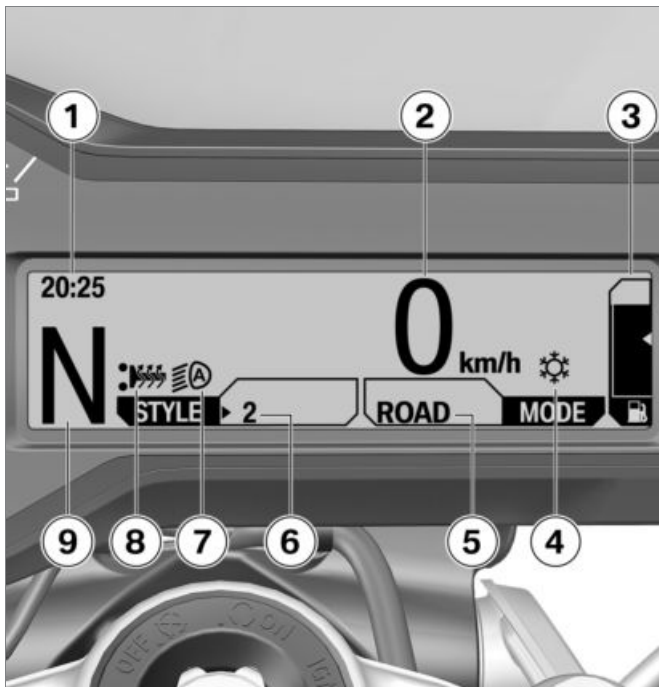


Multifunction display (Touring view)

- 1 Clock (➡ 63)
- 2 Speedometer
- 3 Fuel level
- 4 Outside temperature warning (➡ 43)
- 5 Riding mode (➡ 73)
- 6 On-board computer readouts (➡ 60)
- 7 – with daytime running light^{OE}
– with Pro Headlight^{OE}
Automatic daytime riding light (➡ 57)
- 8 – with heated handlebar grips^{OE}
Heating stages, handlebar grips (➡ 78)
- 9 Gear indicator; "N" indicates neutral

Warnings

Mode of presentation

Warnings are indicated by the corresponding warning lights.

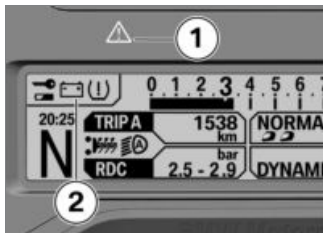

Warnings for which there is no dedicated warning light are indicated by 'General' warning light **1** showing along with up to three warning symbols at position **2** appearing in succession from right to left. These warning symbols appear in their order of priority. The highest priority is on the right. The 'general' warning light shows red or yellow, de-

pending on the urgency of the warning.

If multiple warnings are active at the same time the three highest-priority warnings are shown. The possible warnings are listed on the next pages.

Warnings, overview

Warning and telltale lights

Warning symbols in the display

Meaning

		appears on the display	Outside temperature warning (▮▮▮ 31)
 lights up yellow		appears on the display	EWS active (▮▮▮ 31)
 lights up yellow		appears on the display	Radio-operated key out of range (▮▮▮ 31)
 lights up yellow		appears on the display	Replace the battery of the radio-operated key (▮▮▮ 32)
 flashes red		appears on the display	Coolant temperature too high (▮▮▮ 32)
		appears on the display	Engine has not yet warmed up to operating temperature (▮▮▮ 32)
 lights up yellow		appears on the display	Engine in emergency-operation mode (▮▮▮ 33)
 flashes yellow		appears on the display	Severe fault in the engine control unit (▮▮▮ 33)

Warning and telltale lights		Warning symbols in the display		Meaning
			appears on the display	Engine-oil level too low (▬▬▬ 34)
	flashes red		appears on the display	Tyre pressure outside permitted tolerance (▬▬▬ 34)
	lights up yellow		appears on the display	Sensor defective or system error (▬▬▬ 35)
		"---" or "--- --" is displayed.		
		"---" or "--- --" is displayed.		
	lights up yellow		appears on the display	Battery of tyre-pressure sensor weak (▬▬▬ 36)
	lights up yellow		appears on the display	Light failure (▬▬▬ 36)
	lights up yellow		appears on the display	Front light failure (▬▬▬ 37)
	lights up yellow		appears on the display	Rear light failure (▬▬▬ 37)

Warning and telltale lights

Warning symbols in the display

Meaning

		appears on the display	On-board system voltage low (▮▮▮▮➔ 37)
 lights up yellow		appears on the display	On-board system voltage critical (▮▮▮▮➔ 38)
 lights up red		appears on the display	Battery charge voltage insufficient (▮▮▮▮➔ 38)
		appears on the display	DWA battery weak (▮▮▮▮➔ 39)
 lights up yellow		appears on the display	DWA battery flat (▮▮▮▮➔ 39)
 shows yellow briefly		appears on the display	Service overdue (▮▮▮▮➔ 39)
 flashes			ABS self-diagnosis not completed (▮▮▮▮➔ 39)
 lights up			ABS fault (▮▮▮▮➔ 40)

Warning and telltale lights

Warning symbols in the display

Meaning

	lights up		ABS switched off (→ 40)
	quick-flashes		ASC/DTC intervention (→ 40)
	slow-flashes		ASC/DTC self-diagnosis not completed (→ 40)
	lights up		ASC/DTC switched off (→ 41)
	lights up		ASC/DTC fault (→ 41)
	lights up yellow		appears on the display ESA fault (→ 41)
	lights up		Fuel down to reserve (→ 41)

Outside temperature warning



appears on the display.

Possible cause:



The air temperature measured at the vehicle is lower than:

approx. 3 °C



WARNING

Risk of black ice forming at temperatures above 3 °C, even though no ambient-temperature warning is issued.

Risk of accident due to icy surface.

- Always take extra care when temperatures are low; remember that there is particular danger of black ice

forming on bridges and where the road is in shade.◀

- Ride carefully and think well ahead.

EWS active



lights up yellow.



appears on the display.

Possible cause:

The key being used is not authorised for starting, or communication between key and engine electronics is disrupted.

- Remove all other vehicle keys from the same ring as the ignition key.
- Use the emergency key.
- Have the defective key replaced, preferably by an authorised BMW Motorrad dealer.

Radio-operated key out of range

– with Keyless Ride^{OE}



lights up yellow.



appears on the display.

Possible cause:

Communication between R/C key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- Replacing battery of radio-operated key (► 54).
- Use the reserve key to continue your journey.
- Loss of the radio-operated key (► 53).
- Remain calm if the warning symbol appears while you are riding. You can continue your

journey, the engine will not switch off.

- Have the defective radio-operated key replaced by an authorised BMW Motorrad dealer.

Replace the battery of the radio-operated key

– with Keyless Ride^{OE}



lights up yellow.



appears on the display.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the R/C key can remain operational.
- Replacing battery of radio-operated key (➡ 54).

Coolant temperature too high



flashes red.



appears on the display.



ATTENTION

Riding with overheated engine.

Engine damage

- Compliance with the information set out below is essential. ◀

Possible cause:

If the coolant level is too low.

- Check coolant level (➡ 126).

If the coolant level is too low:

- Top up the coolant and have the coolant system checked by a specialist workshop, preferably by an authorised BMW Motorrad dealer.

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Engine has not yet warmed up to operating temperature



shows only in Touring view.

Possible cause:

The engine has not yet warmed up to its operating temperature.

At low engine temperature:

- Do not warm up the engine with the vehicle at a standstill;

instead, ride off at moderate engine rpm and speed.

- Riding at moderate engine rpm and speed is the quickest way to warm up the engine from cold to operating temperature.



When operating temperature is reached the engine symbol shows for approximately 10 seconds, accompanied by OK.

» The engine symbol disappears from the display.

Engine in emergency-operation mode



lights up yellow.



appears on the display.



WARNING

Unusual ride characteristics when engine running in emergency-operation mode.

Risk of accident

- Adapt your style of riding accordingly.
- Avoid accelerating sharply and overtaking. ◀

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine performance might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad dealer.

Severe fault in the engine control unit



flashes yellow.



appears on the display.



WARNING

Engine damage when running in emergency-operation mode.

Risk of accident

- Adapt your style of riding accordingly: Ride slowly, avoid sharp accelerating and overtaking.
- If possible, have the vehicle brought in and the fault rectified by a specialist workshop, preferably an

authorised BMW Motorrad dealer. ◀

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- It is possible to continue to ride but not recommended.
- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Engine-oil level too low



appears on the display.

Possible cause:

The electronic oil-level sensor has registered an excessively low oil level. The next time you stop for fuel:

- Checking engine oil level (▮▮▮ 120).

If the oil level is too low:

- Topping up the engine oil (▮▮▮ 121).

If the oil level is correct:

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Tyre pressure outside permitted tolerance

– with tyre pressure monitoring (RDC)^{OE}



flashes red.



appears on the display.



WARNING

Tyre pressure outside permitted tolerance.

Impairment of the vehicle's handling characteristics.

- Adapt your style of riding accordingly. ◀

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.



NOTICE

Before you adjust tyre pressure, read the information on temperature compensation and adjusting

pressure in the section entitled "Engineering details". ◀

- Have the tyre checked for damage by a specialist workshop, preferably an authorised BMW Motorrad dealer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

Sensor defective or system error

– with tyre pressure monitoring (RDC)^{OE}



lights up yellow.



appears on the display.

"--" or "-- --" is displayed.

Possible cause:

Motorcycle is fitted with wheels not equipped with RDC sensors.

- Fit wheels and tyres equipped with RDC sensors.

Possible cause:

1 or 2 RDC sensors have failed or a system error has occurred.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Signal transmission disrupted

– with tyre pressure monitoring (RDC)^{OE}

"--" or "-- --" is displayed.

Possible cause:

The vehicle did not reach the minimum required speed (▶ 113).



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

- Increase speed above this threshold and observe the RDC readings. Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms. Under these circumstances:
- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Possible cause:

Wireless communication with the RDC sensors has been disrupted. Possible causes include radio-communication systems operat-

ing in the vicinity and interfering with the link between the RDC control unit and the sensors.

- Move to another location and observe the RDC readings. Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms. Under these circumstances:
- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Battery of tyre-pressure sensor weak

– with tyre pressure monitoring (RDC)^{OE}



lights up yellow.



appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes.◀

Possible cause:

The integral battery in the tyre-pressure sensor has lost a significant proportion of its original capacity. There is no assurance of how long the tyre pressure control system can remain operational.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Light failure



lights up yellow.



appears on the display.



WARNING

Failure of lights on the vehicle adds to possibility of other road users overlooking the vehicle.

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

A combination of light failures has occurred.

- Replacing bulbs for low-beam and high-beam headlight (▮▮▮ 137).
- Replacing bulb for parking light (▮▮▮ 141).
- Replacing bulbs for front and rear turn indicators (▮▮▮ 144).
- Replacing LED turn indicators (▮▮▮ 148).
- Replacing LED rear light (▮▮▮ 148).

Front light failure



lights up yellow.



appears on the display.



WARNING

Failure of lights on the vehicle adds to possibility of other road users overlooking the vehicle.

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Low-beam headlight, high-beam headlight, side light, auxiliary headlight, daytime riding light or front turn indicator bulb faulty. Faulty bulbs have to be replaced.

- Replacing bulbs for low-beam and high-beam headlight (►► 137).
- Replacing bulb for parking light (►► 141).
- Replacing bulbs for front and rear turn indicators (►► 144).
- Replacing LED turn indicators (►► 148).
- Replacing LED daytime riding light (►► 148).
- Replacing LED auxiliary headlights (►► 148).

Rear light failure



lights up yellow.



appears on the display.



WARNING

Failure of lights on the vehicle adds to possibility of

other road users overlooking the vehicle.

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Rear light or rear turn indicator bulb faulty.

The rear light or rear turn indicator bulb has to be replaced.

- Replacing LED rear light (►► 148).
- Replacing bulbs for front and rear turn indicators (►► 144).
- Replacing LED turn indicators (►► 148).

On-board system voltage low



appears on the display.

Generator power is only just sufficient to supply all consumers and charge the battery.

Possible cause:

Too many consumers switched on. On-board system voltage tends to drop particularly at low engine rpm and when the engine is idling.

- When riding at low engine rpm switch off all consumers that are not necessary for road safety (e.g. heated handlebar grips or auxiliary headlights).

On-board system voltage critical



lights up yellow.



appears on the display.

Generator power is no longer sufficient to supply all consumers and charge the battery. In order to ensure that the engine can be started and the motorcycle ridden, the on-board electronics switch off the electricity supply

to the on-board sockets and the auxiliary headlights. In extreme cases the seat heating and the grip heating might also be shut down.

Possible cause:

Too many consumers switched on. On-board system voltage tends to drop particularly at low engine rpm and when the engine is idling.

- When riding at low engine rpm switch off all consumers that are not necessary for road safety (e.g. heated handlebar grips or auxiliary headlights).

Battery charge voltage insufficient



lights up red.



appears on the display.



WARNING

Non-availability of various systems such as lights, engine or ABS on account of discharged battery.

Risk of accident

- Do not continue your journey.◀

Battery is not being charged. If you continue to ride the vehicle the on-board electronics will drain the battery.

Possible cause:

Alternator or alternator drive is faulty or the fuse for the alternator regulator has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

DWA battery weak

– with alarm system (DWA)^{OE}



appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes.◀

Possible cause:

The integral battery in the anti-theft alarm (DWA) has lost a significant proportion of its original capacity. There is no assurance of how long the DWA anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

DWA battery flat

– with alarm system (DWA)^{OE}



lights up yellow.



appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes.◀

Possible cause:

The integral battery in the anti-theft alarm (DWA) has lost its entire original capacity. There is no assurance that the DWA anti-theft alarm will be operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Service overdue



appears on the display.



shows yellow briefly after the Pre-Ride-Check.

Possible cause:

A necessary service has not been carried out.

- Have servicing carried out as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis not completed



flashes.

Possible cause:



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

ABS fault



lights up.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available.

- You can continue to ride. Bear in mind the more detailed in-

formation on certain situations that can lead to an ABS fault message (107).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS switched off



lights up.

Possible cause:

The rider has switched off the ABS system.

- Switch on the ABS function.

ASC/DTC intervention



quick-flashes.

The ASC/DTC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The warning light flashes for longer than ASC/DTC intervention lasts. This affords the rider visual feedback on

control intervention even after the critical situation has been dealt with.

ASC/DTC self-diagnosis not completed



slow-flashes.

Possible cause:



ASC/DTC self-diagnosis not completed

The ASC/DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

- Pull away slowly. The ASC/DTC warning light must go out within a few metres.

If the ASC/DTC warning light continues flashing:

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC/DTC switched off



lights up.

Possible cause:

The rider has switched off the ASC/DTC function.

- Switching on ASC/DTC (► 71).

ASC/DTC fault



lights up.

Possible cause:

The ASC/DTC control unit has detected a fault. The ASC/DTC function is not available.

- You can continue to ride. Bear in mind that the ASC/DTC function is not available. Bear in mind the more detailed in-

formation on situations that can lead to a fault (► 109).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ESA fault

– with Dynamic ESA^{OE}



lights up yellow.



appears on the display.

Possible cause:

The ESA control unit has detected a fault. In this condition, the motorcycle has too much damping and is uncomfortable to drive, especially on roads in poor condition.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad dealer.

Fuel down to reserve



lights up.



WARNING

Irregular engine operation or engine shutdown due to lack of fuel.

Risk of accident. Damage to catalytic converter.

- Do not run the fuel tank dry. ◀

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.




Reserve fuel

approx. 4 l

- Refuelling (► 99).

Service-due indicator

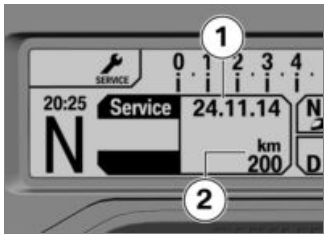

The service-due date **1** shows when a service is due within one month.

When a service is due within 1000 km (US model, 700 miles), countdown distance **2** is shown and counted down in steps of 100 km (US model, 100 miles). This reading appears briefly after the Pre-Ride-Check completes.



If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow.

The word "Service" remains permanently visible.



NOTICE

If the service-due indicator appears more than a month before the service date, the date saved in the instrument cluster must be adjusted. This situation can occur if the battery was disconnected for a prolonged period of time.

If you want to have the date set consult a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

Fuel reserve

The amount of fuel present in the fuel tank when the fuel warning light is switched on is dependent on vehicle dynamics. The more the fuel moves inside the tank (due to regularly changing angles of heel, fre-

quent braking and acceleration), the more difficult it becomes to determine the reserve volume. For this reason, the fuel reserve volume cannot be displayed exactly.




After the fuel warning light has switched on, the range is displayed automatically.

The distance that can still be travelled using the reserve volume depends on the style of driving (usage) and the amount of fuel remaining at the time the light came on (see explanation above).

The odometer for the fuel reserve is reset when the amount of fuel after refuelling is greater than the reserve volume.

Oil level

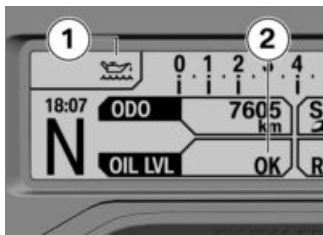

The oil-level indicator **2** gives you an indication of the engine oil level. You can call up this reading only when the vehicle is at a standstill.

The preconditions for the oil level check are as follows:

- Engine at operating temperature
- Engine idling for at least ten seconds
- Side stand retracted

- Motorcycle standing upright on a smooth, level surface.

The readings mean:

OK: Oil level is correct.

CHECK: Check the oil level the next time you stop for fuel.


---: Oil level cannot be measured (conditions as stated above not satisfied).



If the oil level needs to be checked, the symbol **1** is displayed until the oil level is detected as being correct again.

Ambient temperature

When the motorcycle is at a standstill, the heat of the engine can falsify the ambient-temperature reading. If the effect of the engine's heat becomes excessive, "---" temporarily appears on the display.

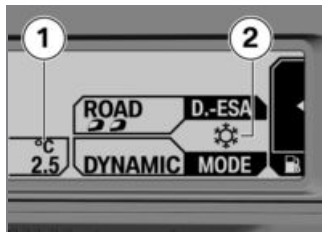

If ambient temperature drops below the threshold a warning appears, drawing your attention to the risk of black ice forming. The display automatically switches from any other mode to temperature reading **1** and the reading flashes when ambient temperature drops below this threshold for the first time.



Threshold for ambient temperature

approx. 3 °C



In addition, the ice crystal symbol **2** is shown.



WARNING


Risk of black ice forming at temperatures above 3 °C, even though no ambient-temperature warning is issued.

Risk of accident due to icy surface.

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.◀

Tyre pressure

- with tyre pressure monitoring (RDC)^{OE}

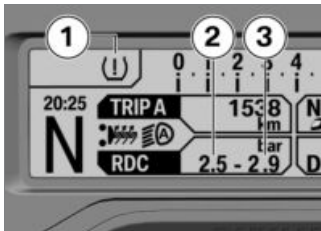

The tyre-pressure readings in the multifunction display are temperature-compensated and are always referenced to the following tyre-air temperature:

20 °C

The front tyre pressure is on the left **2**; the reading on the right **3** is the rear tyre pressure. Immediately after the ignition is switched on "– – –" is displayed.



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)




If the symbol **1** also shows, this is a warning. The critical tyre pressure flashes.



If the value in question is close to the limit of the permissible tolerance range, the reading is accompanied by the 'General' warning light showing yellow. If the tyre pressure registered by the sensor is outside the permissible tolerance range, the 'General' warning light flashes red.

For more information about BMW Motorrad RDC go to Page (➡ 113).


Recommendation to upshift

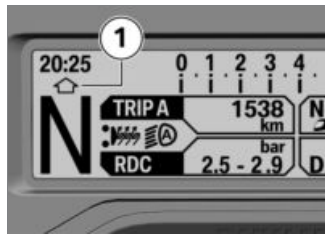

The upshift recommendation **1** signals the economically best point in time for upshift.

Red rpm range

The red range of the revolution counter changes as a function of engine temperature.

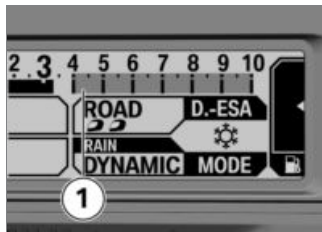


Engine cold

Red rpm range **1**

 Engine has not yet reached its operating temperature.

>4000 min⁻¹

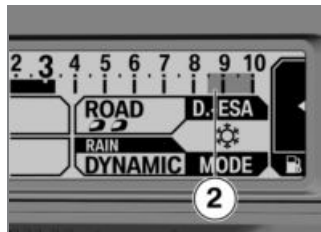

Engine at operating temperature

Red rpm range **2**

 Engine has reached its operating temperature.

>8500 min⁻¹

Operation

Ignition.....	48	Heated handlebar grips	78
Ignition with Keyless Ride.....	50		
Emergency off switch (kill switch).....	55		
Lights.....	55		
Daytime riding light	57		
Hazard warning flashers.....	59		
Turn indicators.....	59		
Multifunction display	60		
Anti-theft alarm	67		
Anti-lock brake system	69		
Automatic Stability Control.....	70		
Electronic Suspension Adjustment.....	72		
Riding mode	73		
Cruise-control system	76		

Ignition Keys

You receive 2 ignition keys. Please consult the information on the electronic immobiliser (EWS) if a key is lost or mislaid (► 49). Ignition switch/steering lock, fuel filler cap lock and seat lock are all operated with the same key.

If you wish you can arrange to have the cases and the top-case fitted with locks that can be opened with the ignition key as well. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Lock the handlebars




ATTENTION

Handlebars turned in wrong direction when motorcycle propped on side stand.

Risk of damage to parts if vehicle topples.

- On level ground, always turn the handlebars to the left to set the steering lock.
- In all other cases it is the lie of the ground that determines the direction in which the handlebars should be turned.◀
- Turn the handlebars to the full left or right lock position.

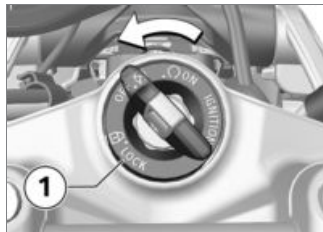

- Turn the key to position **1**, while moving the handlebars slightly.

- » Ignition, lights and all function circuits switched off.
- » Handlebars are locked.
- » Key can be removed.

Switching on ignition




- Insert the vehicle key into the ignition switch and turn it to position **1**.
- » Side lights and all function circuits are switched on.
 - with daytime running light^{OE}
 - with Pro Headlight^{OE}
- » When the ignition is switched on the daytime riding light

comes on briefly (welcome light).◀

- with LED auxiliary headlights^{OA}
 - » LED auxiliary headlights are switched on.◀
 - » Pre-Ride-Check is performed (➡ 93).
 - » ABS self-diagnosis is in progress (➡ 94).
 - » ASC/DTC self-diagnosis is in progress (➡ 95).

Switching off ignition

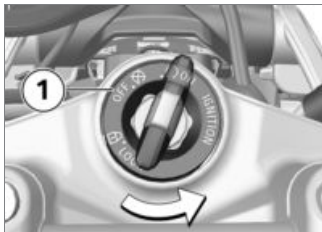

- Turn the ignition key to position **1**.
- » When the ignition is switched off, the instrument cluster re-

mains switched on for a short time and displays any existing fault messages.

- » Handlebars not locked.
- » Electrically powered accessories remain operational for a limited period of time.
- » The battery can be recharged via the socket.
- » Key can be removed.
- with daytime running light^{OE}
- with Pro Headlight^{OE}
 - The daytime riding light goes out soon after the ignition is switched off.◀
- with LED auxiliary headlights^{OA}
 - The LED auxiliary headlights go out soon after the ignition is switched off.◀

Electronic immobiliser EWS

The electronic design of the motorcycle allows it to access data stored in the ignition key by means of a ring antenna located in the ignition switch/steering lock. The engine control unit will not permit the engine to be started unless the key is identified as “authorised”.



NOTICE

A spare vehicle key attached to the same ring as the ignition key used to start the engine could impair operation of the electronics, in which case the enabling signal for starting is not issued. The warning with the key symbol appears in the multifunction display.

Always keep the spare key separately from the ignition key.◀

If you lose your key, you can have it barred by your authorised BMW Motorrad dealer.

If you wish to do this, you will need to bring all other keys for the motorcycle with you. The engine cannot be started by a barred key, but a key that has been barred can subsequently be reactivated.

You can obtain emergency/extra keys only through an authorised BMW Motorrad dealer. The keys are part of an integrated security system, so the dealer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

Ignition with Keyless Ride

– with Keyless Ride^{OE}

Keys



NOTICE

The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.

The telltale light goes out as soon as the radio-operated key or the emergency key is found.

The telltale light goes out briefly if the search times out without the radio-operated key or the emergency key being found.◀

You receive one radio-operated key and one emergency key. Please consult the information on the electronic immobiliser (EWS) if a key is lost or mislaid (► 52). Ignition, fuel filler cap and anti-theft alarm system all work with the radio-operated key. Seat lock, topcase and cases can be locked and unlocked manually.



NOTICE

The vehicle cannot be started if the radio control key is not within range (e.g. key inside one of the cases or the topcase).

If the radio-operated key remains out of range the ignition is switched off after about 1.5 minutes to protect the battery. It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket) and to have the emergency key with you as an alternative.◀



Range of the Keyless

Ride radio-operated key


– with Keyless Ride^{OE}

approx. 1 m◀

Lock the handlebars

Precondition: Handlebars turned to the right or left full-lock posi-

tion. Radio-operated key is within range.

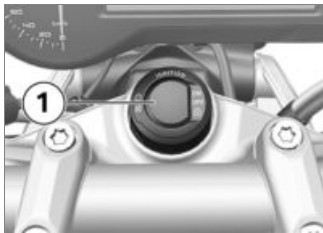

ATTENTION

Handlebars turned in wrong direction when motorcycle propped on side stand.

Risk of damage to parts if vehicle topples.


- On level ground, always turn the handlebars to the left to set the steering lock.
- In all other cases it is the lie of the ground that determines the

direction in which the handlebars should be turned.◀

- Press and hold down button **1**.
 - » The steering lock engages with an audible click.
 - » Ignition, lights and all function circuits switched off.
- Short-press button **1** to disengage the steering lock.

Switching on ignition

Precondition: Radio-operated key is within range.

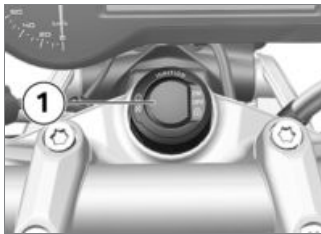

- There are **two** ways of activating the ignition.

Version 1:

- Short-press button **1**.
 - » Side lights and all function circuits are switched on.
 - with daytime running light^{OE}
 - with Pro Headlight^{OE}
 - » Daytime riding light is switched on.◀
 - with LED auxiliary headlights^{OA}
 - » LED auxiliary headlights are switched on.◀
 - » Pre-Ride-Check is performed (▮▮▮ 93).
 - » ABS self-diagnosis is in progress (▮▮▮ 94).
 - » ASC/DTC self-diagnosis is in progress (▮▮▮ 95).


Version 2:

- Steering lock is engaged; press and hold down button **1**.
 - » The steering lock disengages.
 - » Parking lights and all function circuits switched on.

- » Pre-Ride-Check is performed (➡ 93).
- » ABS self-diagnosis is in progress (➡ 94).
- » ASC/DTC self-diagnosis is in progress (➡ 95).

Switching off ignition

Precondition: Radio-operated key is within range.

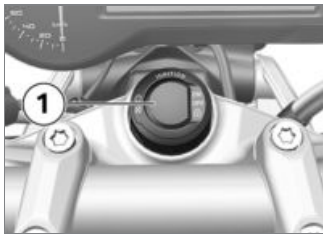

- There are **two** ways of deactivating the ignition.

Version 1:

- Short-press button **1**.
- » Light is switched off.

- » Handlebars (steering lock) are not locked.

Version 2:

- Turn the handlebars to the full left or right lock position.
- Press and hold down button **1**.
- » Light is switched off.
- » The steering lock engages.

Electronic immobiliser EWS

The on-board electronics access the data saved in the radio-operated key via a ring aerial. The ignition is not enabled for starting until the engine control unit has recognised the radio-operated key as "authorised" for your motorcycle.



NOTICE

A spare vehicle key attached to the same ring as the radio-operated key used to start the engine could impair operation of

the electronics, in which case the enabling signal for starting is not issued. The warning with the key symbol appears in the multifunction display.

Always keep the spare key separately from the radio-operated key. ◀

If you mislay a radio-operated key you can have the key in question barred by your authorised BMW Motorrad dealer. In order to have a key barred you must bring along all the other keys belonging to the motorcycle.

The engine cannot be started by a barred radio-operated key, but a radio-operated key that has been barred can subsequently be reactivated.


You can obtain emergency/extra keys only through an authorised BMW Motorrad dealer. The radio-operated keys are part of an integrated security system, so

the dealer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

Loss of the radio-operated key

Consult the information on the electronic immobiliser (EWS) if a key is lost or mislaid.

If you happen to lose or mislay the radio-operated key while on a journey, you can start the vehicle with the emergency key.

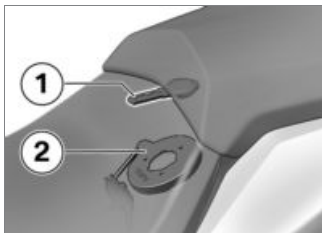

- Insert emergency key **1** into the slot between front seat

and rear seat, in such a way that the emergency key is positioned above aerial **2**.




Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

- » Pre-Ride-Check is performed.
- Emergency key has been recognised.
- Engine can be started.
- Emergency key can be removed.
- Start engine (► 92).

Battery of the radio-operated key is empty

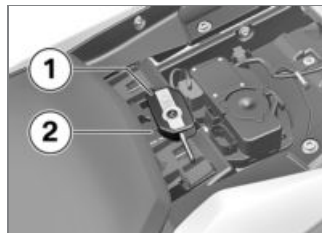

- Removing rear seat (► 84).
- Lay radio-operated key **1** in position **2**.



Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

- Switch on the ignition.
- » Pre-Ride-Check is performed.
- Radio-operated key has been recognised.

- Engine can be started.
- Radio-operated key can be removed.
- Start engine (▮▮▮ 92).
- Install the rear seat (▮▮▮ 85).


Replacing battery of radio-operated key

If the radio-operated key does not react when you short-press or long-press a button:


- The integral battery in the R/C key has lost a significant proportion of its original capacity.
- » Change the battery.



appears on the display.

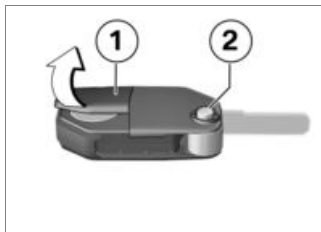

- Press button **2**.
- » Bitted key flips out.
- Push up battery cover **1**.

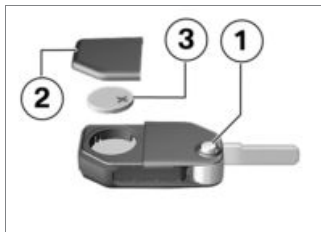

- Remove battery **3**.



Battery type

for Keyless Ride-radio-operated key

CR 2032

- Dispose of the old battery in accordance with all applicable laws and regulations; do not attempt to dispose of batteries as domestic waste.



ATTENTION

Batteries unsuitable or not inserted not in compliance with correct procedure.

Component damage

- Use a battery compliant with the manufacturer's specifications.
- When inserting the battery, always make sure polarity is correct.◀

- Insert new battery **3** with the positive terminal up.
 - Install battery cover **2**.
 - Press button **1** and fold the bitted key closed.
- » The remote control is again ready for use.

Emergency off switch (kill switch)



- 1** Emergency off switch (kill switch)


WARNING

Operation of the kill switch while riding.

Risk of fall due to rear wheel locking.

- Do not operate the kill switch when riding.◀

The emergency off switch is a kill switch for switching off the engine quickly and easily.

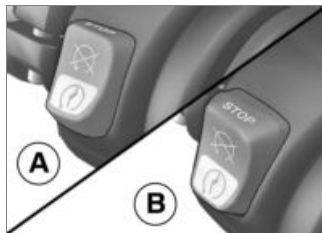

- A** Engine switched off
B Normal operating position (run)

Lights

Low-beam headlight and sidelights

The side lights switch on automatically when the ignition is switched on.



NOTICE


The side lights place a strain on the battery. Do not switch the ignition on for longer than absolutely necessary.◀

The low-beam headlight switches on automatically when the engine is started.

– with daytime running light^{OE}
 In daytime the daytime riding light can be switched on as an alternative to the low-beam headlight.

High-beam headlight and headlight flasher

- Switching on ignition (➡ 48).

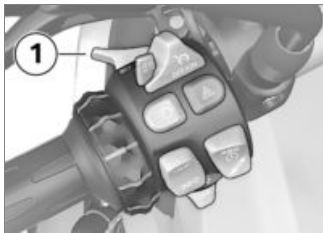

- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

Parking lights

- Switching off ignition (➡ 49).



- Immediately after switching off the ignition, push button **1** to the left and hold it in this position until the parking lights come on.
- Switch the ignition on and off again to switch off the parking lights.

LED auxiliary headlights

– with LED auxiliary headlights^{OA}

Precondition: The LED auxiliary headlights are active only when the low-beam headlight is active; if the daytime riding light is switched on, the LED auxiliary

headlights cannot be switched on.



NOTICE

The auxiliary headlights have approval as fog lights and their use is permissible in bad weather conditions only. Always comply with the road traffic regulations in force in the country in which the vehicle is used.◀

- Start engine (➡ 92).



- Press button **1** to switch on the LED auxiliary headlights.



The indicator light for the auxiliary headlight illuminates.

- Press button **1** again to switch off the LED auxiliary headlights.

Daytime riding light

Manual daytime riding light

- with daytime running light^{OE}
- with Pro Headlight^{OE}

Precondition: automatic daytime riding light is switched off.



WARNING

Activation of daytime riding light in the dark.

Poorer vision and oncoming traffic dazzled.


- Do not use the daytime running light when it is dark.◀



NOTICE

By comparison with the low-beam headlight, the daytime running light makes the vehicle more visible to oncoming traffic. This improves daytime visibility.◀

- Start engine (→ 92).

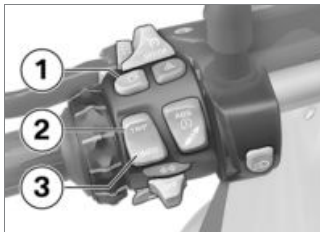

- Repeatedly short-press button **2** until the **SETUP** menu appears on the display.
- Press and hold down button **2** to call up the **SETUP** menu.

- Repeatedly short-press button **2** until **Auto**. **DRL** appears on the display.
- Press button **3** to switch automatic daytime riding light **OFF**.
- Press button **1** to switch on the daytime riding light.



The symbol appears on the display.

- » The low-beam headlight, the front side lights and the auxiliary headlights are switched off.
- In the dark or in tunnels: Press button **1** again to switch off the daytime riding light and switch on the low-beam headlight and the front side lights. The auxiliary headlight is also switched on again.



NOTICE

If you switch on the high-beam headlight on while the daytime running light is on, the daytime riding light is switched off after

approx. 2 seconds and the high-beam headlight, low-beam headlight, front side lights and, if applicable, the auxiliary headlights are switched on.

If the high beam headlight is switched off again, the daytime riding light is not automatically reactivated, but must be switched on again if required.◀

Automatic daytime riding light

– with daytime running light^{OE}



NOTICE

The changeover between daytime running light and low beam headlight including front side lights can be effected automatically.◀



WARNING

The automatic riding light control system cannot replace your personal assessment of lighting conditions, particularly in foggy or misty weather.

Safety risk

- Manually switch on the low-beam headlight in poor lighting conditions.◀
- Repeatedly short-press button **1** until the **SETUP** menu appears on the display.

- Press and hold down button **1** to call up the **SETUP** menu.
- Repeatedly short-press button **1** until **Auto. DRL** appears on the display.
- Press button **2** to switch automatic daytime riding light **ON**.



The indicator light for the automatic daytime riding light illuminates.

- » If the ambient brightness decreases below a certain value, the low beam headlight is automatically switched on (e. B. in a tunnel). When sufficient ambient brightness is detected, the daytime riding light is switched back on. When the daytime riding light is active, the daytime riding light symbol is displayed in the multifunction display.

Manual operation of the light when the automatic system is switched on

- with daytime running light^{OE}
- If you press the button for the daytime riding light, the automatic daytime riding light is switched off and the low-beam headlight and front side lights are switched on (e. g. when you ride into a tunnel, and the response of the automatic daytime riding light to the change in ambient brightness is delayed). The auxiliary headlight switches on again when the daytime riding light is switched off.
- If you press the button again the automatic daytime riding light is reactivated, in other words the daytime riding light is switched on again when ambient light is bright enough.

Hazard warning flashers

Operating hazard warning flashers

- Switching on ignition (▮▮▮▮ 48).



NOTICE

The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary.◀



NOTICE

If you press a turn-indicator button with the hazard warning flashers switched on, the turn-indicator function is activated instead of the hazard warning flashers, and remains active until you release the button. The hazard warning flashers recommence flashing as soon as the button is released.◀




- Press button **1** to switch on the hazard warning flashers.
» Ignition can be switched off.
- To switch off the hazard warning flashers, switch on the ignition and press button **1** again.

Turn indicators

Operating the turn indicators

- Switching on ignition (▮▮▮▮ 48).

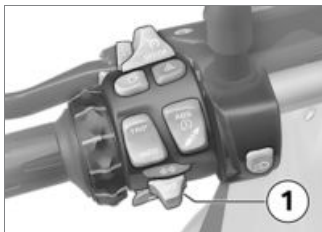


- Push button **1** to the left to switch on the left turn indicators.
- Push button **1** to the right to switch on the right turn indicators.
- Centre button **1** to cancel the turn indicators.



NOTICE

The turn indicators are cancelled automatically after the defined time and distance. The defined time and distance can be set by an authorised BMW Motorrad dealer. ◀

Multifunction display Assistance with menu guidance

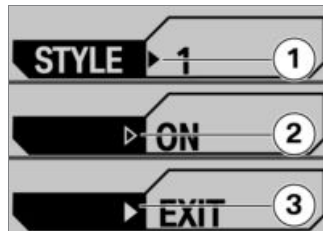

The meanings of the arrows that appear on the display are as follows:

- Arrows **1** and **3**: Press and hold down the corresponding button.
- Arrow **2**: Short-press the corresponding button.

Selecting individual display view


- Switching on ignition (➡ 48).



- Repeatedly short-press button **1** until **STYLE** appears in bottom display line **2**.
- Press and hold down button **1** to change the Display view. The meanings of the numbers are as follows:
 - **0**: Full view
 - **1**: Sport view
 - **2**: Touring view
- » Area **2** shows which Display view has been selected.

Select readings in on-board computer

- Switching on ignition (➡ 48).

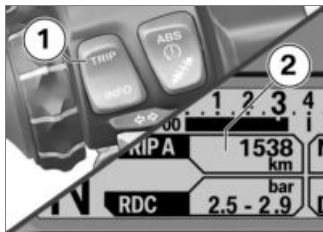

- Short-press button **1** to select the reading in top display line **2**.


In the standard equipment the following values can be displayed and selected at the press of a button:

- Tripmeter reading 1 (TRIP 1)
- Tripmeter reading 2 (TRIP 2)
- Range (RANGE)
- Odometer reading (ODO)
- SETUP-menu (SETUP), only when stationary

- with Pro onboard computer^{OE}

The following information is additionally displayed by means of the on-board computer Pro:

- Automatic tripmeter reading (TRIP A)
- Current consumption (CONS.)<

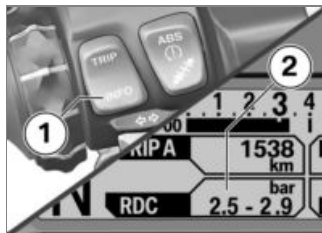


- Short-press button **1** to select the reading in bottom display line **2**.

In the standard equipment the following values can be displayed and selected at the press of a button:

- Ambient temperature (TEMP.)
- Engine temperature (ENG. T.)
- Range (RANGE)
- Average consumption 1 (CONS 1)
- Average consumption 2 (CONS 2)
- Average speed (SPEED)
- with tyre pressure monitoring (RDC)^{OE}
- Tyre pressures (RDC)<
- Date (DATE)
- Oil-level reminder (OIL LVL)
- with Pro onboard computer^{OE}
- Vehicle circuit voltage (VOLTG.)<
- with Pro onboard computer^{OE}
- Stopwatch total time (T. TOT.)<
- with Pro onboard computer^{OE}
- Stop watch driving time (T. RIDE)<

Resetting tripmeter


- Switching on ignition (➡ 48).

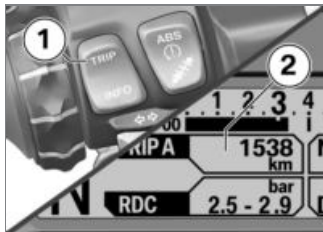

- Repeatedly short-press button **1** until the tripmeter to be reset appears in top display line **2**.
- Press and hold down button **1** until the value shown is reset.

Resetting the average values

- Switching on ignition (➡ 48).

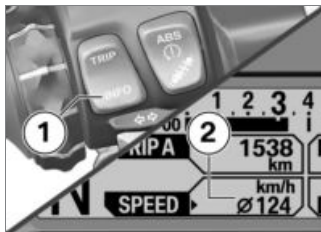

- Repeatedly short-press button **1** until the average value to be reset appears in bottom display line **2**.
- Press and hold down button **1** until the value shown is reset.


Configure the on-board computer

The vehicle is at a standstill.

- Switching on ignition (➡ 48).



- Repeatedly short-press button **1** until top display line **2** shows **SETUP ENTER**.
- Press and hold down button **1** to start the **SETUP** menu.
- » The following indication in the display depends on the equipment selected.

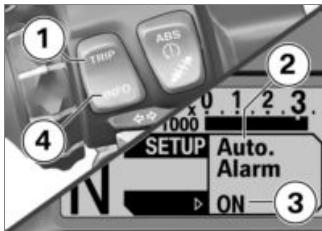


- Short-press button **1** to go to the next menu item in the sequence.
- » The top display line **2** shows the menu item.
- » The bottom display line **3** shows the preset value.
- Short-press button **4** to change the setting.

The following menu items can be selected:

- with alarm system (DWA)^{OE}
- Auto. Alarm: Switch alarm system ON or OFF<

- with preparation for navigation system^{OE}
- GPS Time: Navigation system installed: Accept GPS time and GPS date (ON) or do not accept (OFF)<
- with Pro riding modes^{OE}
- User Mode: User-specific settings for the riding mode.<
- Clock: Setting the clock
- Date: Setting the date
- Shift Indicator: Display upshift recommendation in the display (ON) or not (OFF)
- Brightn.: Set display brightness, from normal (0) to bright (5)
- Clock Format: Setting the format for the time reading
- Date Format: Setting the format for the date reading
- with daytime running light^{OE}
- Auto. DRL: Switch daytime riding light ON or OFF<

- with Pro onboard computer^{OE}
- BC: Toggle between BC Pro and BC Basic<
- RESET!: Reset all settings.
- EXIT: Exit SETUP menu

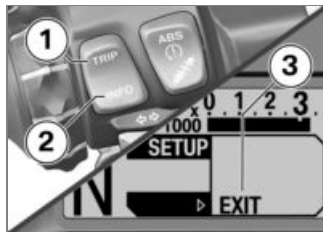

- To exit the SETUP menu with the EXIT menu item **3** selected, short-press button **2**.
- To exit the SETUP menu at any point, press and hold down button **1**.

Setting the clock


- Switching on ignition (III 48).

⚠ WARNING

Adjusting the clock while riding.

Risk of accident

- Set the clock only when the motorcycle is stationary.◀
- In the **SETUP** menu, select the menu item **CLOCK**.

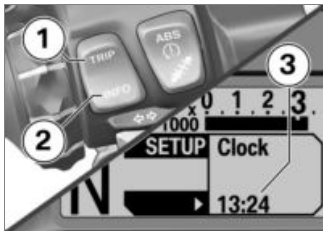

- Press and hold down button **2** until the hours in the bottom display line **3** flash.

🔑 NOTICE

If "-- : --" is displayed instead of the time, the voltage supply of the instrument cluster has been interrupted (e.g. by disconnecting the battery).◀


- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Press and hold down button **2** until the minutes in the bottom display line **3** flash.
- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Press and hold button **2** until the minutes number stops flashing.
- » Setting is complete.
- You can cancel the procedure at any time by pressing and holding down button **1** until the initial value reappears.

🔑 NOTICE

If you drive off before the setting has been completed, the setting will be cancelled.◀

Setting the date

- Switching on ignition (➡ 48).
- In the **SETUP** menu, select the menu item **DATE**.

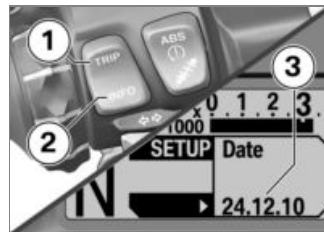

- Press and hold down button **2** until the day in the bottom display line **3** starts to flash.



NOTICE

If "---.---.---" is displayed instead of the date, the voltage supply of the instrument cluster has been interrupted (e.g. by disconnecting the battery).◀

- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Press and hold down button **2** until the month in the bottom display line **3** starts to flash.
- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Press and hold down button **2** until the year in the bottom display line **3** starts to flash.
- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Press and hold down button **2** until the year stops flashing.
- » Setting is complete.

- You can cancel the procedure at any time by pressing and holding down button **1** until the initial value reappears.



NOTICE


If you drive off before the setting has been completed, the setting will be cancelled.◀

Customising the display


– with Pro onboard computer^{OE}

In the customisation menu, it is possible to set which information is to be displayed in which display line.


- Switching on ignition (🔑 48).

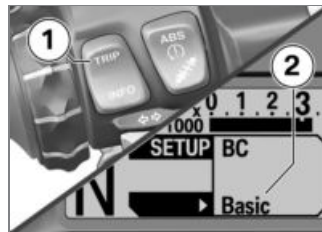

- In the SETUP menu, press button **1** to select the BC menu item **2**.

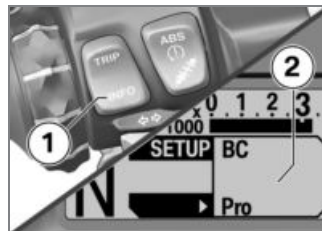


- Short-press button **1** to change to BC Pro **2** (individualisation menu).

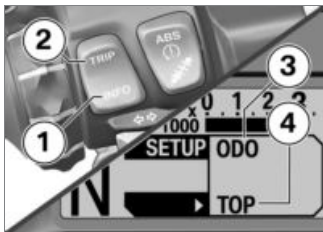

- Press and hold down button **1** to display the first menu item.
 - » ODO appears on the display.
- Short-press button **2** to go to the next menu item in the sequence.
 - » The top display line **3** shows the menu item.
 - » The bottom display line **4** shows the preset value. The following values can be set.
- TOP: The value is displayed in the top display line.
- BOTTOM: The value is displayed in the bottom display line.

- BOTH: The value is displayed in both display lines.
 - OFF: The value is not displayed.
 - Short-press button **1** to change the setting.
- The following menu items can be selected, the works setting is shown in brackets. Some menu items will only be selected if the relevant special equipment (OE) is actually present.
- ODO: Odometer (TOP, the OFF setting is not possible)
 - TRIP 1: Tripmeter 1 (TOP)
 - TRIP 2: Tripmeter 2 (TOP)
 - TRIP A: Automatic tripmeter (TOP)
 - TEMP.: Ambient temperature (BOTTOM)
 - ENG.T.: Engine temperature (BOTTOM)
 - RANGE: Range (TOP)
 - CONS. 1: Average consumption 1 (BOTTOM)

- CONS. 2: Average consumption 2 (BOTTOM)
- CONS.: Current consumption (TOP)
- SPEED: Average speed (BOTTOM)
- RDC: Tyre pressures (BOTTOM)
- VOLTG.: Vehicle circuit voltage (BOTTOM)
- T. TOT.: Stopwatch total time (BOTTOM)
- T. RIDE: Stopwatch driving time (BOTTOM)
- DATE: Date (BOTTOM)
- SRV. 1: Date of the next service (OFF)
- SRV. 2: Countdown distance to next service (OFF)
- OIL LVL: Oil level note (BOTTOM)
- EXIT: Exit individualisation menu.

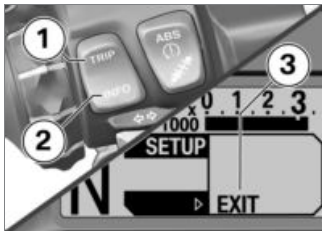

Notes on triggering of the alarm

An alarm can be triggered by:

- motion sensor
- an attempt to use an unauthorised key to switch on the ignition
- disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - alarm tone only, the turn indicators do not flash).

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

- To exit the individualisation menu with the EXIT menu item **3** selected, short-press button **2**.
 - To exit the individualisation menu at any point, press and hold down button **1**.
- » All settings made until then will be saved.

Anti-theft alarm

- with alarm system (DWA)^{OE}



Duration of the alarm

26 s (While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of alarm tone can be set by an authorised BMW Motorrad dealer.)

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA anti-theft alarm telltale light then signals the reason for the alarm for one minute.


The meanings of the flash codes are as follows:

- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised key

- Flashes 4x: Disconnection of the DWA anti-theft alarm from the motorcycle's battery
- Flashes 5x: Motion sensor 3

DWA adjusting

- Switching on ignition (➡ 48).

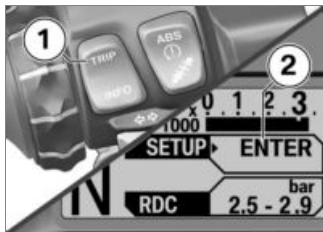

- Repeatedly short-press button **1** until top display line **2** shows ENTER.
- Press and hold down button **1** to start the SETUP menu.



- Repeatedly short-press button **1** to select the Auto. Alarm menu item.
- » In the top display line **2**, Auto. Alarm is displayed.
- » The bottom display line **3** shows the preset ON/OFF value.

- Short-press button **4** to change the setting.


The following settings are available:

- ON: The DWA anti-theft alarm is active and will be armed automatically when the ignition is switched off.

- OFF: The DWA anti-theft alarm is deactivated.

DWA Activating

- Switching on ignition (➡ 48).
- DWA adjusting (➡ 68).
- Switch off the ignition.
- » DWA If the alarm system (DWA) is activated, then the alarm system will be armed automatically when the ignition is switched off.
- » Activation takes approximately 30 seconds to complete.
- with Keyless Ride^{OE}

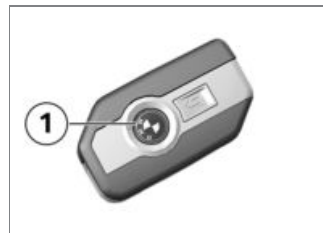


- Short-press button **1**.

- » Turn indicators flash twice.
- » Confirmation tone sounds twice (if programmed).
- » Anti-theft alarm (DWA) is active.

DWA Deactivating

- Switch on the ignition.
– with Keyless Ride^{OE}

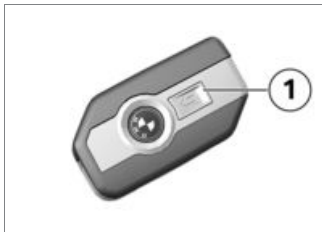


- Short-press button **1**.
- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » Anti-theft alarm (DWA) is deactivated.

Anti-lock brake system ABS Switching off

NOTICE

See the section entitled "Engineering details" for more information on brake systems with BMW Motorrad Integral ABS.◀

- Switching on ignition (▶▶▶ 48).

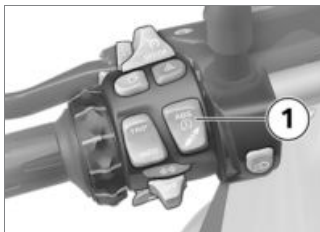

- Press and hold down button **1** until the ABS warning light changes status.

NOTICE

You have the option of deactivating the ABS function while the motorcycle is on the move.◀

- » Initially, the ASC/DTC symbol changes status. Press and hold down button **1** until the ABS warning light responds. Under these circumstances, there is no change in the ASC/DTC setting.



lights up.


- Release button **1** within two seconds.



remains lit.

- » The ABS is deactivated, but the integral function remains active.

ABS Switching on

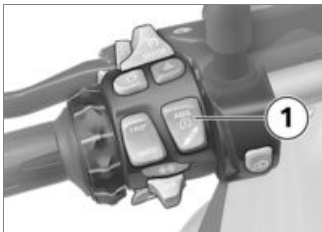

- Press and hold down button **1** until the ABS warning light changes status.



NOTICE

You have the option of activating the ABS function while the motorcycle is on the move.◀



- goes out. If self-diagnosis has not completed the warning light starts flashing.
- Release button **1** within two seconds.



remains off or continues to flash.

- » Anti-theft alarm (ABS) is switched on.
- You also have the option of switching the ignition off and then on again.



ABS fault

An ABS fault has occurred if the ABS warning light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again. (Minimum speed: 5 km/h)

Automatic Stability Control


Switching off ASC/DTC



NOTICE

See the section entitled "Engineering details" for more information on ASC and DTC.◀

- Switching on ignition (➡ 48).

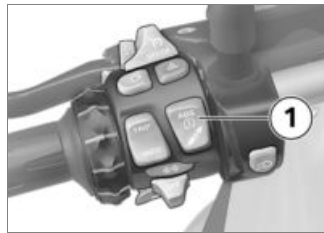

- Press and hold down button **1** until the ASC/DTC telltale light changes status.



NOTICE

You have the option of deactivating the ASC/DTC function while the motorcycle is on the move. ◀



lights up.


- Release button **1** within two seconds.



remains lit.

» ASC/DTC is switched off.

Switching on ASC/DTC

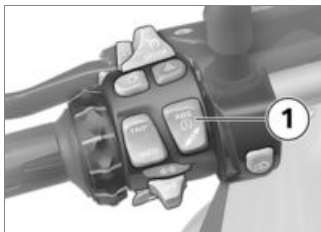

- Press and hold down button **1** until the ASC/DTC telltale light changes status.



NOTICE

You have the option of activating the ASC/DTC function while the motorcycle is on the move. ◀



goes out. If self-diagnosis has not completed the warning light starts flashing.

- Release button **1** within two seconds.



remains off or continues to flash.

- » ASC/DTC is switched on.
- You also have the option of switching the ignition off and then on again.



ASC/DTC fault

An ASC/DTC fault has occurred if the ASC/DTC warning light shows when the motorcycle accelerates to a speed in excess of the minimum as stated, after the ignition was switched off and then on again. (Minimum speed: 5 km/h)

Electronic Suspension Adjustment

– with Dynamic ESA^{OE}

Possible settings


Dynamic ESA enables you to adjust your motorcycle's suspension to suit the load and the road conditions.

By interpreting ride height sensor signals, Dynamic ESA detects movements in the chassis and suspension and responds by adjusting the damper valves. The chassis and suspension will thus be adapted to the characteristics of the terrain.

You can set the damping to a harder (DYNAMIC) setting than the basic setting (ROAD).

Adjusting the chassis and suspension

- Switching on ignition (➡ 48).

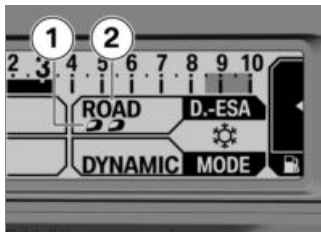

In the multifunction display the spring preload is shown in area **1** and the damping in area **2**.



To adjust damping:

- Repeatedly press button **1** until the setting you want to use appears on the display.



NOTICE

You can adjust the damping characteristic while the motorcycle is on the move. ◀

The following settings are available:

- ROAD: Comfortable damping characteristic
- DYNAMIC: Sporty damping characteristic

To adjust spring preload:

- Start engine (▮▮▮ 92).
- Press and hold down button **1** until the setting you want to use appears on the display.



NOTICE

You cannot adjust spring preload while the motorcycle is on the move.◀

The following settings are available:



One-up



One-up with luggage



Two-up (with luggage)

- Wait for the mechanism to complete all adjustments before you ride off.
- » The settings for damping and spring preload shown on the

display are automatically accepted if you allow a certain length of time to pass without pressing button **1**. The ESA indicator flashes while adjustment is in progress.

- If the temperature is low, take the weight off the motorcycle before increasing spring preload; if applicable, have your passenger dismount.

Riding mode

Using the riding modes



NOTICE

See the section entitled "Engineering details" for more information on the various ride modes that can be selected.◀

BMW Motorrad has developed 3 operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

- Riding on a rain-wet road surface
- Riding on a dry road surface
- with Pro riding modes^{OE}
- Sporty riding on a dry road surface


The interplay of engine torque, throttle response ASC/DTC control is optimised for each of these 3 scenarios.

Setting riding mode

- Switching on ignition (▮▮▮ 48).



- Press button **1**.

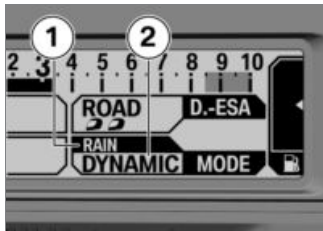

The current setting is shown at position **2**. Each time the button is pressed one of the possible riding modes appears at position **1**.



- Repeatedly press button **1** until the riding mode you want appears on the display.

The following ride modes can be selected:


- RAIN: For riding on a rain-wet road surface.
- ROAD: For riding on a dry road surface.
- with Pro riding modes^{OE}
 - » The following riding modes are additionally available for selection:
 - DYNAMIC: For dynamic riding on a dry road surface.

- USER: User-specific settings for the riding mode.<


- Select the riding mode.
 - » With the motorcycle at a standstill, the selected mode is activated after approximately two seconds.
 - » The newly selected riding mode is activated as you ride only if the throttle twistgrip is returned to the idle position and the brakes are not applied.
 - » The mode selected in this way is retained with the engine-characteristic, ABS, ASC/DTC and Dynamic ESA adaptation settings even after the ignition has been switched off.

Individualising riding mode

- with Pro riding modes^{OE}
 - Select the USER riding mode.

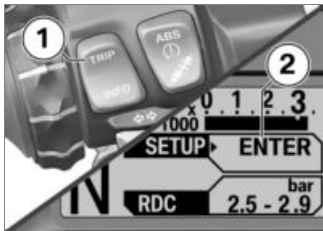

- Repeatedly short-press button **1** until top display line **2** shows SETUP ENTER.
- Press and hold down button **1** to start the SETUP menu.

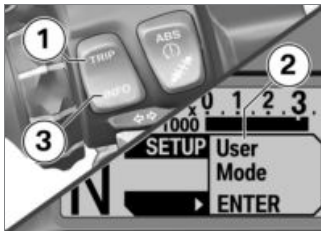

- Repeatedly short-press button **1** until area **2** of the display shows User Mode ENTER.
- Press and hold down button **3** to exit the User mode.



- Short-press button **1** to go to the next menu item in the sequence.
 - » Top display line **2** enables you to choose between the following menu items:
 - ENGINE
 - DTC
- Repeatedly short-press button **4** until the value you want appears in bottom display line **3**.
- Repeatedly short-press button **1** until User EXIT appears on the display.

- Press and hold down button **4** to exit the User menu.

Cruise-control system

– with cruise control^{OE}

Switching on cruise control



- Slide switch **1** to the right.
- » Button **2** is enabled for operation.

Saving road speed



- Briefly push button **1** forward.



Adjustment range for
cruise control

20...210 km/h



Telltale light for cruise control lights up.

- » The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating



- Briefly push button **1** forward.
- » Speed is increased by approx. 2 km/h each time you push the button.
- Push button **1** forward and hold it in this position.
- » The motorcycle accelerates steplessly.
- » The current speed is maintained and saved if button **1** is not pushed again.

Decelerating



- Briefly push button **1** back.
 - » Speed is reduced by approx. 2 km/h each time you push the button.
- Push button **1** back and hold it in this position.
 - » The motorcycle decelerates steplessly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Deactivating cruise control

- Brake, pull the clutch lever or turn the throttle twistgrip (close the throttle by turning the twistgrip back past the idle position) to deactivate the cruise-control system.



NOTICE

Whenever the Pro shift assistant shifts gears, cruise control is automatically disengaged for safety reasons.◀




NOTICE

For safety reasons, cruise control is deactivated automatically when the ASC and DTC systems intervene.◀

- » Telltale light for cruise control goes out.

Resuming former cruising speed

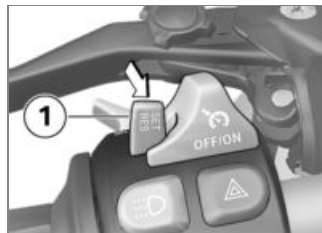

- Briefly push button **1** back to return to the speed saved beforehand.



NOTICE

Opening the throttle does not deactivate the cruise-control system. If you release the twistgrip the motorcycle will decelerate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed.◀



Telltale light for cruise control lights up.

Switching off cruise control



- Slide switch **1** to the left.
» The system is deactivated.
- » Button **2** is disabled.

Heated handlebar grips

– with heated handlebar grips^{OE}

Operating the heated handlebar grips



NOTICE


The heating in the heated handlebar grips can be activated only when the engine is running.◀



NOTICE

The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.◀

- Start engine (▶▶ 92).

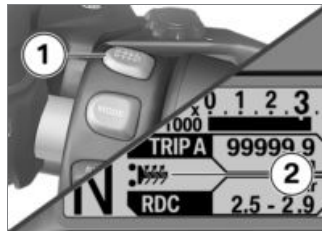

- Repeatedly press button **1** until desired heating stage **2** appears on the display.

The handlebar grips have two-stage heating.



First heating stage

50 % heating power



Second heating stage

100 % heating power

- » The second heating stage is for heating the grips quickly: subsequently one should switch back to the first stage.
- » The selected heating stage will be saved if you allow a certain

length of time to pass without making further changes.

- To switch off the heated handlebar grips, press button **1** until heated handlebar grip symbol **2** disappears.

Adjustment

Mirrors	82
Headlight	82
Clutch	83
Brakes	84
Front and rear seats	84
Spring preload	85
Damping	86


Mirrors

Adjusting mirrors



- Turn the mirror to the desired position.

Adjusting mirror arm

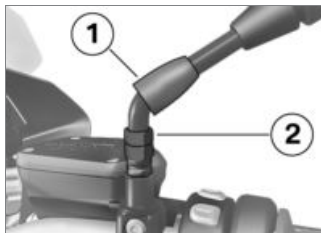

- Push protective cap **1** up over the threaded fastener on the mirror arm.
- Slacken nut **2**.
- Turn the mirror arm to the appropriate position.
- Tighten the nut to the specified tightening torque, while holding the mirror arm to ensure that it does not move out of position.



Mirror (lock nut) to adapter

22 Nm

- Push protective cap **1** over the threaded fastener.

Headlight

Headlight beam throw and spring preload


Headlight beam throw is generally kept constant when spring preload is adjusted to suit load. Spring preload adjustment might not suffice only if the motorcycle is very heavily loaded. Under these circumstances, headlight beam throw has to be adjusted to suit the weight carried by the motorcycle.



NOTICE

If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

Adjusting headlight beam throw

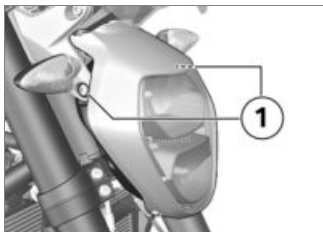

If, for a high load, the adjustment of the spring pre-load is no longer sufficient not to dazzle oncoming traffic:

- Slacken screws **1** with the tool from the on-board toolkit.



NOTICE

Do not place the motorcycle on its centre stand or side stand.◀

- Pivot the headlight down slightly (depending on the load carried on the motorcycle) to

shorten the headlight beam throw.

When the motorcycle is again ridden with a lower load:

- Have the basic settings of the headlight restored by a specialist workshop, best of all by a BMW Motorrad dealer.
- Tighten screws **1** with the tool from the on-board toolkit.

Clutch

Adjusting the clutch lever




WARNING

Adjusting the clutch lever while riding.

Risk of accident

- Do not attempt to adjust the clutch lever unless the motorcycle is at a standstill.◀

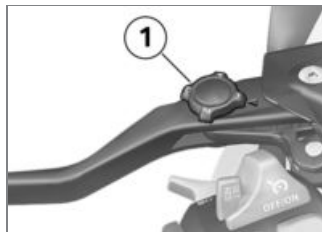

- Turn knob **1** to the desired position.



NOTICE

The adjuster is easier to turn if you push the clutch lever forward.◀

- » Four settings are possible:
- **Position 1:** smallest span between handlebar grip and clutch lever
 - **Position 4:** largest span between handlebar grip and clutch lever

Brakes

Adjusting the front brake lever




WARNING

Adjusting the brake lever while riding.

Risk of accident

- Do not attempt to adjust the brake lever unless the motorcycle is at a standstill. ◀

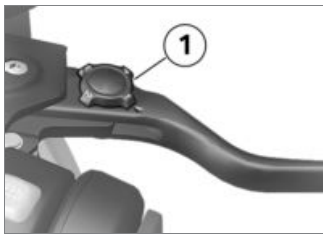

- Turn knob **1** to the desired position.



NOTICE


The adjuster is easier to turn if you push the brake lever forward. ◀

- » Four settings are possible:
- **Position 1:** smallest span between handlebar grip and brake lever
 - **Position 4:** largest span between handlebar grip and brake lever

Front and rear seats


Removing rear seat

- Make sure the ground is level and firm and place the motorcycle on its stand.

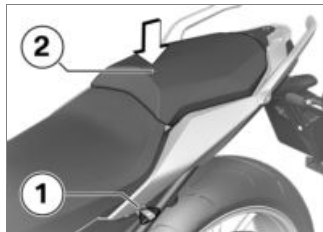

- Press down on the front part of rear seat **2** and at the same time turn seat lock **1** to the left with the vehicle key and hold it in this position.
- Lift rear seat **2** at the front and release the vehicle key.
- Remove rear seat **2** and place it, upholstered side down, on a clean surface.

Installing rear seat

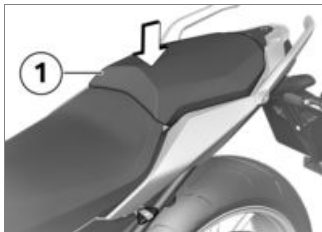


- Begin by slipping rear seat **1** into the mounts at the back.
- Press down firmly on rear seat **1** at the front.
- » The rear seat engages with an audible click.

Removing front seat

- Removing rear seat (▶▶▶ 84). Front seat is unlocked.
- Work the front seat to the rear to remove and place it, upholstered side down, on a clean surface.

Installing front seat

- Removing rear seat (▶▶▶ 84).

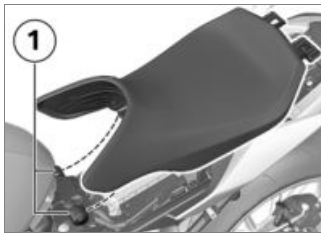

- Push the front seat all the way into front mounts **1** and then lower it into position at the back.

Spring preload

– without Dynamic ESA^{OE}


Adjustment

It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring pre-

load when the vehicle is heavily loaded and reduce spring preload accordingly when the vehicle is lightly loaded.

Adjusting spring preload for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.

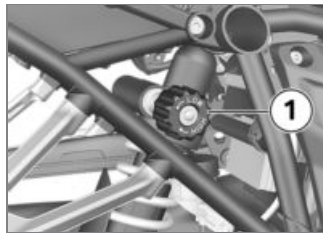

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload.◀



WARNING

Adjusting spring preload while riding.

Risk of accident

- Do not attempt to adjust spring preload unless the motorcycle is at a standstill.◀
- If you want to reduce spring preload, turn knob **1** in the direction indicated by the LOW arrow.
- If you want to increase spring preload, turn knob **1** in the direction indicated by the HIGH arrow.



Basic setting of spring preload, rear

Turn the knob as far as it will go in the LOW direction. (One-up riding without luggage)

Turn the knob as far as it will go in the LOW direction, then turn it back 15 turns in the HIGH direction. (One-up with luggage)

Turn the knob as far as it will go in the HIGH direction. (Two-up riding and luggage)

Damping

– without Dynamic ESA^{OE}

Adjustment

Damping must be adapted to suit the surface on which the motorcycle is ridden and to suit spring preload.

- An uneven surface requires softer damping than a smooth surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjusting the damping characteristic for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Set the damping from the left-hand vehicle side.



- Turn knob **1** clockwise to increase damping.
- Turn knob **1** counter-clockwise to reduce damping.



Basic setting of rear-suspension damping characteristic

Turn the knob clockwise as far as it will go, then back it off 6 clicks in the counter-clockwise direction. (One-up riding without luggage)



Basic setting of rear-suspension damping characteristic

Turn the knob clockwise as far as it will go, then back it off 4 clicks in the counter-clockwise direction. (One-up with luggage)

Turn the knob clockwise as far as it will go. (Two-up with luggage)

Riding

Safety instructions	90
Comply with checklist.....	92
Starting	92
Running in	95
Shifting gear	96
Brakes	97
Parking your motorcycle	98
Refuelling	99
Securing motorcycle for transportation	102

Safety instructions

Rider's equipment

Do not ride without the correct clothing! Always wear:

- Helmet
- Motorcycling jacket and trousers
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad dealer will be glad to advise you on the correct clothing for every purpose.

Loading



WARNING

Handling adversely affected by overloading and imbalanced loads.

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.◀
- Adjust spring preload setting and damping to the total weight.
- Ensure that the case volumes on the left and right are equal.
- Make sure that the weight is uniformly distributed between right and left.
- Pack heavy items at the bottom and toward the inboard side.
- Note the maximum permissible payload and the speed limit for riding with cases fitted, as stated on the label inside the case (see also the section entitled "Accessories").
- with topcase^{OA}
- Note the maximum permissible payload and the speed limit for riding with topcase fitted, as stated on the label inside

the case (see also the section entitled "Accessories").◀

- with tank rucksack, small^{OA}
- Note the maximum permissible payload and the speed limit for riding with the small tank rucksack fitted.



Payload of the tank rucksack, small

max 5 kg



Speed limit for riding with tank rucksack, small, fitted to the vehicle

max 180 km/h◀

Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Spring-strut and shock-absorber system not set up correctly
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

Top speed



DANGER

Top speed of the motorcycle higher than the permissible maximum rated speed of the tyres.

Risk of accident due to tyre damage at high speed.

- Comply with the tyre-specific speed restrictions.◀

Affix a label stating the maximum permissible speed in the rider's field of vision.

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



WARNING

Exhaust gases adversely affecting health.

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.◀

Risk of burn injury



CAUTION

Engine and exhaust system become very hot when the vehicle is in use.

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.◀

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

For this reason, observe the following points:

- Do not run the fuel tank dry.
- Do not attempt to start or run the engine with a spark-plug cap disconnected.
- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.



ATTENTION

Unburned fuel in catalytic converter.

Damage to catalytic converter.

- Note the points listed for protection of the catalytic converter.◀

Risk of overheating



ATTENTION

Engine running for prolonged period with vehicle at standstill.

Overheating due to insufficient cooling. In extreme cases, the motorcycle could catch fire.

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.◀

Tampering



ATTENTION

Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch).

Damage to the affected parts, failure of safety-relevant functions. Damage due to tampering is not covered by the warranty.

- Do not tamper with the vehicle in any way that could result in tuned performance.◀

Comply with checklist

- At regular intervals, use the checklist below to check your motorcycle.

Always before riding off:

- Operation of the brake system
- Operation of the lights and signalling equipment
- Checking clutch function (▮▮▮ 126).
- Checking tyre tread depth (▮▮▮ 128).
- Cases correctly installed and luggage secured

Every 3rd refuelling stop:

- without Dynamic ESA^{OE}
- Adjusting spring preload for rear wheel (▮▮▮ 85).◀

- without Dynamic ESA^{OE}
- Adjusting the damping characteristic for rear wheel (▮▮▮ 86).◀
- with Dynamic ESA^{OE}
- Adjusting the chassis and suspension (▮▮▮ 72).◀
- Checking engine oil level (▮▮▮ 120).
- Checking front brake pad thickness (▮▮▮ 122).
- Check rear brake pad thickness (▮▮▮ 123).
- Checking brake-fluid level, front brakes (▮▮▮ 124).
- Checking the brake-fluid level, rear brakes (▮▮▮ 125).
- Check coolant level (▮▮▮ 126).

Starting

Start engine

- Switch on the ignition.
- » Pre-Ride-Check is performed (▮▮▮ 93).

- » ABS self-diagnosis is in progress (▬▬▬ 94).
- » ASC/DTC self-diagnosis is in progress (▬▬▬ 95).
- Select neutral or, if a gear is engaged, pull the clutch lever.



NOTICE

You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.◀

- For a cold engine start and low temperatures: pull clutch.



- Press starter button 1.



NOTICE

The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.

See the subsection on jump starting in "Maintenance" for more details.◀

- » The engine starts.
- » If the engine refuses to start, consult the troubleshooting

chart in the section entitled "Technical data" (▬▬▬ 174).

Pre-Ride-Check

The instrument panel runs a test of the instruments and the telltale and warning lights when the ignition is switched on: this is the so-called "Pre-Ride-Check". The test is aborted if you start the engine before it completes.

Phase 1

The speedometer needle swings to the limit value on its scale. At the same time, all the warning lights and telltale lights are switched on in succession. The "General" warning light shows red.

Phase 2

The speedometer needle swings to the start position on its scale. At the same time, all the warning lights and telltale lights switched on in the initial

phase are switched off in reverse sequence. The 'General' warning light changes from red to yellow.

If the needle of the speedometer did not move or if a warning light or telltale light did not show:



WARNING

Faulty warning lights.

No indication of malfunctions.

- Check all the warning and telltale lights. ◀
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis

BMW Motorrad Integral ABS performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosable system components with the vehicle at a standstill.



flashes.

Phase 2

- » Test of the wheel-speed sensors as the vehicle pulls away from rest.



flashes.

ABS self-diagnosis completed

- » The ABS warning light goes out.
- Check all the warning and telltale lights.



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride. Bear in mind that neither the ABS function nor the integral braking function is available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC/DTC self-diagnosis

The BMW Motorrad ASC/DTC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosable system components with the vehicle at a standstill.



slow-flashes.

Phase 2

- » Test of the diagnosis-compatible system components while the motorcycle is on the move.



slow-flashes.

ASC/DTC self-diagnosis completed

- » The ASC/DTC warning light goes out.

- Check all the warning and tell-tale lights.



ASC/DTC self-diagnosis not completed

The ASC/DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

If an indicator showing an ASC/DTC fault appears when ASC/DTC self-diagnosis completes:

- You can continue to ride. Bear in mind that the ASC/DTC function is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Running in Engine

- Until the first running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads.
- Comply with the rpm limits for running in.



Running-in speeds

<5000 min⁻¹ (Odometer reading 0...1000 km)

no full throttle (Odometer reading 0...1000 km)

- Note the mileage after which the running-in check should be carried out.



Mileage until the running-in check

500...1200 km

Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.



WARNING

New brake pads.

Longer stopping distance. Risk of accident.

- Apply the brakes in good time. ◀

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



WARNING

New tyres losing grip on wet roads and at extreme bank angles.

Risk of accident

- Ride carefully and avoid extremely sharp inclines. ◀

Shifting gear

– with Pro shift assistant^{OE}

Shift assistant Pro

The Pro shift assistant assists upshifts and downshifts without the rider having to disengage the clutch or close the throttle. This

is not an automatic-shift system. The rider is the most important part of the system and decides when to shift gears.




NOTICE

See the section entitled "Engineering details" for more information on the Pro shift assistant. ◀



NOTICE

Whenever the Pro shift assistant shifts gears, cruise control is automatically disengaged for safety reasons. ◀

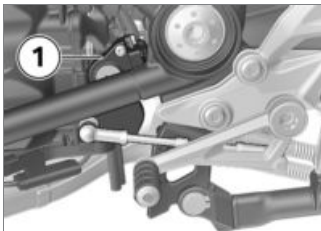

- You select the gear in the usual way by means of the foot-operated shift lever.
- » Sensor **1** on the selector shaft registers the shift request and triggers shift assistance.
- » When riding at a steady speed in a low gear at high engine rpm, an attempt to shift gear without pulling the clutch can cause a severe load-change reaction. BMW Motorrad recommends disengaging the clutch for shifts in these circumstances. It is advisable to avoid using the Pro shift assistant at engine speeds close to

the limits at which the governor cuts in to limit engine rpm.

- » Shift assistance is not available in the following situations:
 - with the clutch lever pulled
 - shift lever not in its initial position
 - upshifts with the throttle valve closed (coasting) and when slowing.
- After a gearshift, the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place.

Brakes

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the vehicle decelerates, the more load is shifted to the front wheel. The

higher the wheel load, the more braking force can be transmitted without the wheel locking. To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time. In the extreme sudden-stop braking situations that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road. BMW Motorrad Integral ABS prevents the front wheel from locking up.

Descending mountain passes



WARNING

Braking only with the rear brake on mountain descents.

Brake fade. Destruction of the brakes due to overheating.

- Use both front and rear brakes, and make use of the engine's braking effect as well.◀

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.

- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirty surfaces.



WARNING

Moisture and dirt.

Diminished braking effect.

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.◀

Parking your motorcycle

Side stand

- Switch off the engine.



ATTENTION

Poor ground underneath the stand.

Risk of damage to parts if vehicle topples.

- Always check that the ground under the stand is level and firm.◀



ATTENTION

Additional weight placing strain on the side stand.

Risk of damage to parts if vehicle topples.

- Do not sit or lean on the vehicle while it is propped on the side stand.◀
- Extend the side stand and prop the motorcycle on the stand.
- If the camber of the roadway permits, turn the handlebars all the way to the left.

- On a gradient, the motorcycle should always face uphill; select 1st gear.

Centre stand

– with centre stand^{OE}

- Switch off the engine.



ATTENTION

Poor ground underneath the stand.

Risk of damage to parts if vehicle topples.

- Always check that the ground under the stand is level and firm.◀



ATTENTION

Centre stand retracts due to severe movements.

Risk of damage to parts if vehicle topples.

- Do not lean or sit on the vehicle with the centre stand extended.◀
- Extend the centre stand and lift the motorcycle onto the stand.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Refuelling

Fuel grade

For optimum fuel consumption, fuel should be sulphur-free or with the lowest sulphur content possible.



ATTENTION

Leaded fuel.

Damage to catalytic converter.

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives, e.g. manganese or iron.◀

- You can run the engine on fuel with a maximum ethanol content of 10 %, i.e. E10.



Recommended fuel grade

Super unleaded (max. 10 % ethanol, E10)
95 ROZ/RON
89 AKI

Refuelling



WARNING

Fuel is highly flammable.

Risk of fire and explosion.

- Do not smoke. Never bring a naked flame near the fuel tank.◀



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled.

Risk of falling

- Do not overfill the fuel tank.◀




ATTENTION

Fuel attacks plastic surfaces.

Surfaces become unsightly or dull.

- Clean plastic parts immediately after contact with fuel.◀
- Make sure the ground is level and firm and place the motorcycle on its side stand.

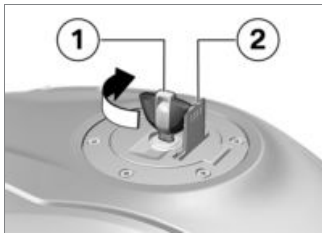

- Open the protective cap **2**.
- Use ignition key **1** to unlock fuel filler cap by turning it

clockwise, and flip the cap open.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.



NOTICE

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the new level will not be registered and the fuel warning light indicating that the

level is down to reserve will not be switched off.◀



NOTICE

The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if it had been run dry and the engine had cut out due to a lack of fuel.◀



Usable fuel capacity

approx. 18 l



Reserve fuel

approx. 4 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

Refuelling

– with Keyless Ride^{OE}

The steering lock is disengaged.

WARNING

Fuel is highly flammable.

Risk of fire and explosion.

- Do not smoke. Never bring a naked flame near the fuel tank.◀

WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled.

Risk of falling

- Do not overfill the fuel tank.◀

ATTENTION

Fuel attacks plastic surfaces.

Surfaces become unsightly or dull.

- Clean plastic parts immediately after contact with fuel.◀
- Make sure the ground is level and firm and place the motorcycle on its side stand.
- Switching off ignition (▶▶▶ 49).

NOTICE

The fuel filler cap can be opened within the defined waiting time after the ignition has been switched off, without the radio-operated key being within range.◀



Waiting time for opening fuel filler cap


2 min

- » There are **two variant ways** of opening the fuel filler cap:
- Within the waiting time
 - After the waiting time has expired

Version 1

– with Keyless Ride^{OE}

Within the waiting time:

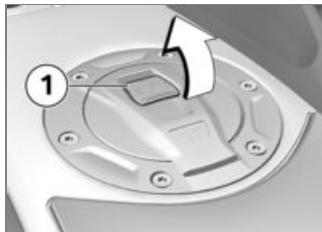

- Pull up tab **1** of the fuel filler cap slowly.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.

Version 2

– with Keyless Ride^{OE}

After the waiting time has expired:

- Bring the radio-operated key into range.

- Slowly pull tab **1** up.
- » The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.
- Again slowly pull up tab **1** of the fuel filler cap.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.

**NOTICE**

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the new level will not be registered and the fuel warning light indicating that the level is down to reserve will not be switched off.◀

**NOTICE**

The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if it had been run dry and the engine had cut out due to a lack of fuel.◀



Usable fuel capacity

approx. 18 l



Reserve fuel

approx. 4 l

- Press down firmly on the filler cap of the fuel tank.
- » The fuel filler cap engages with an audible click.
- » The fuel filler cap locks automatically when the waiting time expires.
- » The engaged fuel filler cap locks immediately when you secure the steering lock or switch on the ignition.

Securing motorcycle for transportation

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use

adhesive tape or soft cloths, for example, for this purpose.




ATTENTION

Vehicle topples to side when being lifted on to stand.

Risk of damage to parts if vehicle topples.

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.◀
- Push the motorcycle onto the transportation flat and hold it in position: do not place it on the side stand or centre stand.

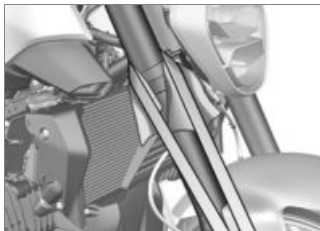


ATTENTION

Trapping of components.

Component damage

- Do not trap components such as brake lines or cable legs.◀
- At the front, loop a strap over the bottom fork bridge on each side.
- Pull the straps down and tight.

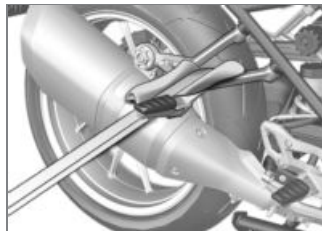

- At the rear, secure the straps to the rear footrests on both sides and tighten the straps.
- Tighten all the straps uniformly; the vehicle's suspension should be compressed as tightly as possible front and rear.

Engineering details

General instructions.....	106
Anti-lock brake system	106
Automatic Stability Control.....	108
Dynamic Traction Control.....	110
Dynamic ESA.....	112
Riding mode	112
Tyre pressure monitoring (Reifendruck-Control, RDC)	113
Shift assistant Pro	115

General instructions

To find out more about engineering go to:

bmw-motorrad.com/technology

Anti-lock brake system Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The footbrake lever acts only on the rear brake.

When actively intervening in the braking process, the BMW Motorrad Integral ABS adapts braking-force distribution between front and rear brakes to suit the load on the motorcycle, and so ABS intervention helps achieve the shortest possible stopping distance.



ATTENTION

The integral function means that it is not possible to make the rear wheel spin with the front brake applied (Burn Out).

Damage to rear brake and clutch.

- Do not attempt Burn Out.◀

How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean and dry asphalt surface. The lower the coefficient of friction, the longer the braking distance.

If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start

to lock and the vehicle loses its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force. The wheels continue to turn and the driving stability is retained irrespective of the road condition.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the ABS

must assume an extremely low coefficient of friction, so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

What feedback does the rider receive from the ABS?

If the ABS has to reduce braking force on account of the circumstances described above, vibration is perceptible through the handbrake lever.

When the handbrake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the handbrake lever is pulled,

the brake pressure built up beforehand is perceptible as counter-pressure sooner than is the case when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

Rear wheel lift

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the ABS will be unable to prevent the rear wheel from lifting clear of the ground. If this happens the outcome can be a highsiding situation in which the motorcycle can flip over.



WARNING

Rear wheel lift due to severe braking.

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to pre-

vent the rear wheel from lifting clear of the ground. ◀

What is the design baseline for ABS?

Within the limits imposed by physics, the ABS ensures directional stability on any surface. The system is not optimised for special requirements that apply under extreme competitive situations on the track. The driving behaviour should be adapted to actual driving skills and the road conditions.

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-dia-

gnosis has to complete before fault messages can be issued. In addition to problems with the ABS, exceptional riding conditions can lead to a fault message being issued:

- Warming up with the motor-cycle on an auxiliary stand, in neutral or with a gear engaged
- Rear wheel locked by the engine brake for a lengthy period, for example while descending on a loose or slippery surface

If a fault message is issued on account of exceptional riding conditions as outlined above, you can reactivate the ABS by switching the ignition off and on again.

What significance devolves on regular maintenance?



WARNING

Brake system not regularly serviced.

Risk of accident

- In order to ensure that the ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals. ◀

Reserves for safety

The potentially shorter braking distances which ABS permits must not be used as an excuse for careless riding. ABS is primarily a means of ensuring a safety margin in genuine emergencies.



WARNING

Braking when cornering.

Risk of accident despite ABS.

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional margin of safety offered by this system. ◀

Automatic Stability Control

How does the ASC work?

The ASC system compares the speed of rotation of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine control inter-

venes and adapts the engine torque accordingly.

What is the design baseline for the ASC?

The ASC is designed as an assistant system for the rider and for use on public roads. The extent to which the rider affects ASC control can be considerable (weight shifts when cornering, items of luggage loose on the motorcycle), especially when style of riding takes rider and machine close to the limits imposed by physics.

The system is not optimised for special requirements that apply under extreme competitive situations on the track. The ASC can be deactivated in these cases.



WARNING

Risky riding.

Risk of accident despite ASC.

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.◀

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible lag in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared as one means of detecting the rear wheel's incipient tendency to spin or slip sideways. If the system registers implausible values for a lengthy period the ASC function is deactivated for safety reasons and an ASC fault message is issued. Self-diagnosis

has to complete before fault messages can be issued.

The following exceptional riding conditions can lead to an automatic shutdown of the ASC:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie)
- Rear wheel rotating with the vehicle held stationary by applying the front brake (burn-out)
- Heating up with the motorcycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged

Accelerating the motorcycle to a defined minimum speed after switching the ignition off and then on again reactivates the ASC.



Minimum speed for activation of ASC

min 10 km/h

If the front wheel lifts clear of the ground under severe acceleration, the ASC reduces engine torque until the front wheel regains contact with the ground.

Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

When riding on a slippery surface, never snap the throttle twistgrip fully closed without pulling the clutch at the same time. Engine braking torque can cause the rear wheel to lock, with a corresponding loss of stability. The ASC is unable to control a situation of this nature.

Dynamic Traction Control

– with Dynamic Traction Control (DTC)^{OE}

How does the DTC work?

The DTC system compares the speed of rotation of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine control intervenes and adapts the engine torque accordingly.

The DTC has a bank-angle sensor, so it can control wheel slip all the more sensitively when the motorcycle is heeled over for cornering. Consequently, more dynamic riding conditions can be achieved without any lessening of directional stability. In the

DYNAMIC mode slight DTC-assisted wheelies are possible.

What is the design baseline for the DTC?

The DTC is designed as an assistant system for the rider and for use on public roads. The extent to which the rider affects DTC control can be considerable (weight shifts when cornering, items of luggage loose on the motorcycle), especially when style of riding takes rider and machine close to the limits imposed by physics.

The system is not optimised for special requirements that apply under extreme competitive situations on the track. You have the option of deactivating the DTC for these circumstances.



WARNING

Risky riding.

Risk of accident despite DTC.

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.◀

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared and the angle of heel taken into account as one means of detecting the rear wheel's incipient tendency to spin or slip sideways. If the electronic processor receives values that it considers implausible over a lengthy period, a dummy value is used for the angle of heel or

the DTC function is switched off. Under these circumstances the indicator for a DTC fault shows. Self-diagnosis has to complete before fault messages can be issued.

Whereas in the RAIN and ROAD riding modes, if the front wheel starts to lift clear of the ground the DTC reduces engine torque and the front wheel quickly regains contact with the ground, in the DYNAMIC mode slight DTC-assisted wheelies are possible.

The DTC can issue an error message under the exceptional riding conditions outlined below.

Exceptional riding conditions:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by applying the front brake (burn-out).

- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.

Accelerating the motorcycle to a defined minimum speed after switching the ignition off and then on again reactivates the DTC.



Minimum speed for activation of DTC

min 10 km/h

If the front wheel lifts clear of the ground under severe acceleration, the DTC reduces engine torque until the front wheel regains contact with the ground. Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

When riding on a slippery surface, never snap the throttle twistgrip fully closed without pulling the clutch at the same time. Engine braking torque can cause the rear wheel to skid, with a corresponding loss of stability. The DTC is unable to control a situation of this nature.

Dynamic ESA

– with Dynamic ESA^{OE}

Possible settings

Dynamic ESA enables you to adjust your motorcycle's suspension to suit the load and the road conditions.

By interpreting ride height sensor signals, Dynamic ESA detects movements in the chassis and suspension and responds by adjusting the damper valves. The chassis and suspension will thus be adapted to the characteristics of the terrain.

You can set the damping to a harder (DYNAMIC) setting than the basic setting (ROAD).

Riding mode

Selection

There is a choice of 4 riding modes for adapting the motorcycle to riding-surface condition:

RAIN

ROAD (standard mode)

– with Pro riding modes^{OE}

DYNAMIC

USER

Each of these modes produces perceptible differences in the way the motorcycle behaves. For the RAIN, ROAD and DYNAMIC riding modes there is a matched setting for the ASC/DTC and ENGINE (throttle response) systems. The mode last selected is automatically reactivated after the ig-

nition has been switched off and then on again.

Broadly speaking: The more dynamic the selected mode, the more ASC/DTC assistance is reduced. Consequently, you must always bear the following in mind with regard to your selection of a ride mode: the more dynamic the setting, the greater the challenge to your riding skill.

Throttle response

– In the RAIN mode: Restrained

– In the ROAD mode: Direct

– In the DYNAMIC mode: Dynamic

RAIN mode

The ASC/DTC system intervenes early enough to prevent the rear wheel from spinning. On road surfaces with high to medium grip (dry and wet asphalt to dry cobblestones) the motorcycle remains very stable; movements

of the tail are clearly perceptible only on slippery road surfaces (wet bitumen or wet cobblestones).

ROAD mode

ASC/DTC system intervention is later than in RAIN mode. On road surfaces with high to medium grip (dry and wet asphalt to dry cobblestones) the motorcycle remains stable. Slight rear-wheel drift is perceptible. Movements of the tail are clearly perceptible on slippery road surfaces (wet bitumen or wet cobblestones).

– with Pro riding modes^{OE}

DYNAMIC mode

The DYNAMIC mode is the sportiest mode. ASC/DTC system intervention is even later, which means that even on dry asphalt drifting is possible under sharp acceleration when cornering.

USER mode

The USER mode enables the DTC and ENGINE system settings to be individualised.

- ENGINE: Choice of RAIN, ROAD and DYNAMIC settings
- DTC: Choice of RAIN, ROAD and DYNAMIC settings

The changed USER are saved in memory until the next time changes are made.

Mode changes

When riding, you can change riding modes only when the following preconditions are satisfied:

- No drive torque at the rear wheel
- No brake pressure in the brake system

This is the status of the motorcycle when it is at a standstill with the ignition switched on. Under other circumstances, you must proceed as follows:

- Close the throttle twistgrip
- Release the brake levers

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state.

Tyre pressure monitoring (Reifendruck-Control, RDC)

- with tyre pressure monitoring (RDC)^{OE}

Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit. Each sensor has a centrifugal-force tripswitch that does not enable transmission of the meas-

ured values until the motorcycle has exceeded a defined minimum speed for the first time.

	Minimum speed for transmission of the RDC measured values:
min 30 km/h	

The display shows -- for each tyre until the tyre-pressure signal is received for the first time. The sensors continue to transmit the measured-value signals for some time after the vehicle comes to a stop.

	Time for transmission of measured values after vehicle comes to a stop:
min 15 min	

An error message is issued if wheels without sensors are fitted to a vehicle equipped with an RDC control unit.

Tyre-pressure ranges

The RDC control unit differentiates between three tyre-pressure ranges, all of which are parameterised for the motorcycle:

- Tyre pressure within permitted tolerance
- Tyre pressure close to limit of permitted tolerance
- Tyre pressure outside permitted tolerance

Temperature compensation

Tyre pressure is a temperature-sensitive variable: pressure increases as tyre temperature rises and decreases as tyre temperature drops. Tyre temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.

	The tyre-pressure readings in the multifunction display are temperature-compensated and are always referenced to the following tyre-air temperature:
20 °C	

The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre pressure. In most instances, therefore, these gauge readings will not tally with the pressures shown by the multifunction display.

Pressure adaptation

Compare the RDC value on the multifunction display with the value in the table on the back cover of the Rider's Manual.

Then use the air line at a service station to compensate for the difference between the RDC reading and the value in the table.

 Example
According to the Rider's Manual, the tyre pressure should be:
2.5 bar
The multifunction display shows the following reading:
2.3 bar
So pressure is low by:
0.2 bar
The gauge on the air line shows:
2.4 bar
You must now increase tyre pressure until the value is:

 Example
2.6 bar

Shift assistant Pro

– with Pro shift assistant^{OE}

Your vehicle is fitted with the Pro shift assistant, a system originally developed for racing. It permits upshifts and downshifts without declutching or closing the throttle in virtually all load and rpm ranges.

Advantages

- 70 - 80 % of all gearshifts on a trip can be performed without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.

- It is not necessary to close the throttle valve when shifting under acceleration.
- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the spring through a certain "over-travel" at ordinary speed or rapidly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the gearshift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift

assistant can take place. When shifting gears with the Pro shift assistant, the rider has to keep load state (throttle twistgrip position) constant before and during the gearshift. A change in the position of the throttle twistgrip during a gearshift can cause the function to abort and/or lead to a missed shift. The Pro shift assistant provides no assistance for the gearshift if the rider de-clutches.

Downshifting

Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents overrevving.

	Maximum engine speed
max 9000 min ⁻¹	

Upshifting

The Pro shift assistant provides no assistance if engine speed drops below idle during an up-shift.

	Idle speed
1150 min ⁻¹ (Engine at regular operating temperature)	

Maintenance

General instructions.....	118
Toolkit	118
Front-wheel stand	118
Rear-wheel stand	120
Engine oil	120
Brake system	122
Clutch	126
Coolant	126
Rims and tyres.....	127
Wheels	128
Silencer.....	135
Lighting.....	137
Jump-starting.....	148
Battery.....	149
Fuses	153

General instructions

The "Maintenance" chapter describes straightforward procedures for checking and replacing certain wear parts.


Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

Further information on maintenance and repair work is available from your BMW Motorrad authorised dealer in the form of a DVD.

Some of the work requires special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Toolkit

Standard toolkit

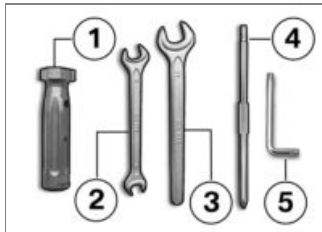

- 1** Screwdriver handle
 - Use with screwdriver insert.
 - Topping up the engine oil (➡ 121).
- 2** Open-ended spanner
Width across flats 8/10
 - Removing battery (➡ 151).
- 3** Open-ended spanner
Width across flats 14
 - Adjusting mirror arm (➡ 82).

- 4** Reversible screwdriver blade
Phillips PH1 and Torx T25
 - Removing bulbs for front and rear turn indicators (➡ 144).
 - Removing battery cover (➡ 151).
- 5** Torx wrench, T40
 - Adjusting headlight beam throw (➡ 83).

Front-wheel stand

Installing the front-wheel stand




ATTENTION

Use of the BMW Motorrad front wheel stand without also accompanying use of centre stand or auxiliary stand.


Risk of damage to parts if vehicle topples.

- Place the motorcycle on its centre stand or another auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Use basic stand with front-wheel adapter. The basic stand and its accessory parts are available from your BMW Motorrad dealer.

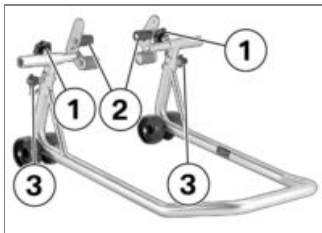

- Loosen the fastening screws **1**.

- Push the two adapters **2** apart until the front forks fit between them.
- Use locating pins **3** to set the front-wheel stand to the desired height.
- Centre the front-wheel stand relative to the front wheel and push it against the front axle.

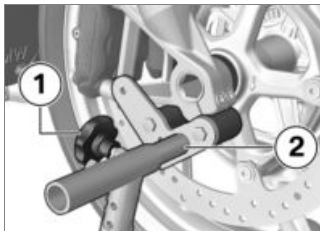

- Align the two adapters **2** so that the front forks are securely seated.
- Tighten securing screws **1**.



ATTENTION

Centre stand retracts if motorcycle lifted too high.


Risk of damage to parts if vehicle topples.

- When raising the vehicle, make sure that the centre stand remains on the ground.◀
- Apply uniform pressure to push the front-wheel stand down and raise the motorcycle.

Rear-wheel stand


Install the rear-wheel stand

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Use basic stand with rear axle adapter. The basic stand and its accessory components are available from your BMW Motorrad authorised dealer.

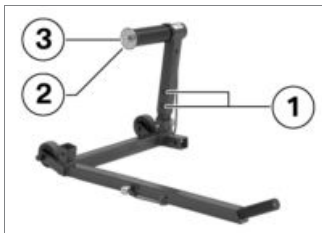

- Use screws **1** to set the rear-wheel stand to the desired height.

- Remove retaining disc **2**. To do so, press release button **3**.

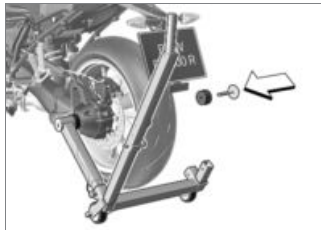

- Push the rear-wheel stand from the right onto the rear axle.
- Push the retaining disc on from the left, while holding the unlock button down.



- Hold the motorcycle upright and at the same time press the handle of the stand back until both rollers of the stand are on the ground.
- Then press the handle down to the ground.

Engine oil

Checking engine oil level




ATTENTION

The oil level varies with the temperature of the oil. The higher the temperature, the

higher the level of oil in the sump.

Misinterpretation of the oil level

- Check the oil level only after a lengthy ride or when the engine is at operating temperature.◀
- Switch off the engine when it is at operating temperature.
- Extend the side stand and take up a position on the right side of the motorcycle.
- Hold the motorcycle upright.
 - with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.<
- Wait five minutes for the oil to drain into the oil pan.

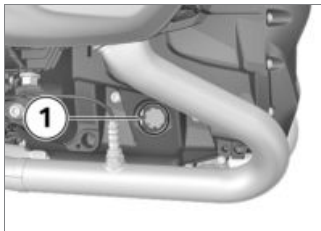

- Check the oil level in oil-level indicator **1**.



Engine oil, specified level

between MIN and MAX marks

If the oil level is below the MIN mark:


- Topping up the engine oil (➡ 121).

If the oil level is above the MAX mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Topping up the engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.

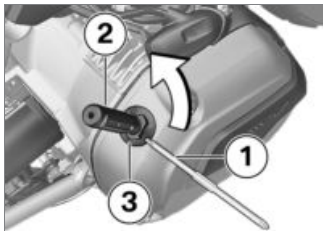

- Wipe the area around the oil filler neck clean.
- Insert Torx end of reversible screwdriver insert **1** into screwdriver handle **2** (on-board tool-kit) for additional leverage.
- Insert the screwdriver handle into cap **3**.
- Turn cap **3** counter-clockwise to remove.
- Checking engine oil level (120).



ATTENTION

Not enough or too much engine oil.

Engine damage

- Always make sure that the oil level is correct.◀
- Top up the engine oil to the specified level.



Engine oil, quantity for topping up

max 0.95 l (Difference between MIN and MAX)

- Checking engine oil level (120).
- Install cap **3** of the oil filler neck.

Brake system

Checking function of brakes

- Pull the front brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:



ATTENTION


Work on brake system not in compliance with correct procedure.

Risk to operational reliability of the brake system.


- Have all work on the brake system undertaken by trained and qualified specialists.◀
- Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking front brake pad thickness

- Make sure the ground is level and firm and place the motorcycle on its stand.

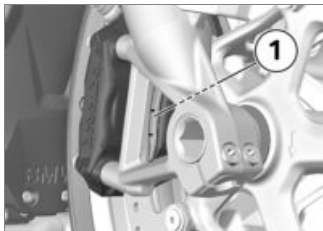

 - Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: between wheel and front suspension toward brake pads **1**.



1.0 mm (Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.)

If the wear indicating marks are no longer clearly visible:



WARNING


Brake-pad thickness less than permissible minimum.

Diminished braking effect. Damage to the brakes.

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness. ◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Check rear brake pad thickness

- Make sure the ground is level and firm and place the motorcycle on its stand.

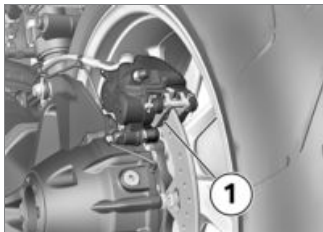

- Visually inspect the brake pads to ascertain their thickness. Viewing direction: From the rear toward brake pads **1**.



Brake-pad wear limit,
rear

1.0 mm (Friction pad only,
without backing plate)

If the wear limit has been reached:



WARNING

Brake-pad thickness less than permissible minimum.

Diminished braking effect. Damage to the brakes.

- In order to ensure the dependability of the brake system, do not permit the brake pads to

wear past the minimum permissible thickness.◀

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking brake-fluid level, front brakes



WARNING

Not enough brake fluid in brake fluid reservoir.

Considerably reduced braking power due to air in the brake system.

- Check the brake-fluid level at regular intervals.◀
- with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.<◀

- without centre stand^{OE}
- Make sure the ground is level and firm and hold the motorcycle upright.◀
- Turn the handlebars to a position in which the brake fluid reservoir is horizontal.



- Check the brake fluid level in front reservoir **1**.



NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink.◀



Brake fluid level, front

Brake fluid, DOT4

It is impermissible for the brake fluid level to drop below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking the brake-fluid level, rear brakes




WARNING

Not enough brake fluid in brake fluid reservoir.

Considerably reduced braking power due to air in the brake system.

- Check the brake-fluid level at regular intervals.◀

- with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀
- without centre stand^{OE}
- Make sure the ground is level and firm and hold the motorcycle upright.◀

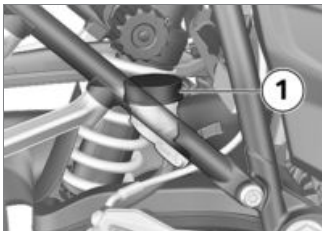

- Check the brake fluid level in rear reservoir **1**.



NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink. ◀



Brake fluid level, rear

Brake fluid, DOT4

It is impermissible for the brake fluid level to drop below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Clutch

Checking clutch function

- Pull the clutch lever.
 - » The pressure point must be clearly perceptible.
- If the pressure point is not clearly perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Coolant

Check coolant level

- Extend the side stand and take up a position on the right side of the motorcycle.
- Hold the motorcycle upright.
- with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand. ◀



⚠ CAUTION

Hot engine.

Risk of burn injury

- Keep clear of all hot engine components.
- Do not touch hot engine components. ◀
- Check the coolant level in expansion tank **1**.
» The coolant level must be between the MIN and MAX marks.

If the coolant level drops below the MIN mark:

- Top up the coolant.

Top up coolant

- Check coolant level (▶▶▶ 126).



- Open cap **1** of the coolant expansion tank and top up the coolant to the specified level.
- Check coolant level (▶▶▶ 126).
- Close cap **1** of the coolant expansion tank.

Rims and tyres

Checking tyre pressure

⚠ WARNING

Incorrect tyre pressure.

Impairment of the motorcycle's handling characteristics. Shorter useful tyre life.

- Always check that the tyre pressures are correct. ◀

⚠ WARNING

Tendency of valve inserts installed vertically top open by themselves at high riding speeds.

Sudden loss of tyre pressure.

- Install valve caps fitted with rubber sealing rings and tighten firmly. ◀
- Make sure the ground is level and firm and place the motorcycle on its stand.

- Check tyre pressures against the data below.

 Tyre pressure, front
2.5 bar (tyre cold)
 Tyre pressure, rear
2.9 bar (tyre cold)

If tyre pressure is too low:

- Correct tyre pressure.

Checking rims

- Make sure the ground is level and firm and place the motor-cycle on its stand.
- Visually inspect the rims for defects.
- Have any damaged rims inspected by a specialist workshop and replaced if necessary, preferably by an authorised BMW Motorrad dealer.

Checking tyre tread depth



WARNING

Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law.◀
- Make sure the ground is level and firm and place the motor-cycle on its stand.
- Measure the tyre tread depth in the main tread grooves with wear marks.



NOTICE

Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g.

by the letters TI, TWI or by an arrow.◀

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

Wheels

Tyre recommendation

For each size of tyre, BMW Motorrad tests and classifies as roadworthy certain makes. BMW Motorrad cannot assess the suitability or provide any guarantee of road safety for other tyres.

BMW Motorrad recommends using only tyres tested by BMW Motorrad.

Detailed information is available from your authorised BMW Motorrad dealer or in the internet at

bmw-motorrad.com

Effect of wheel size on chassis and suspension control systems


Wheel size is very important as a parameter for the frame and suspension control systems ABS and ASC/DTC. In particular, the diameter and the width of the vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems. The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to your motorcycle, it is very im-

portant to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad dealer. In some cases, the data programmed into the control units can be changed to suit the new wheel sizes.

RDC adhesive label

- with tyre pressure monitoring (RDC)^{OE}

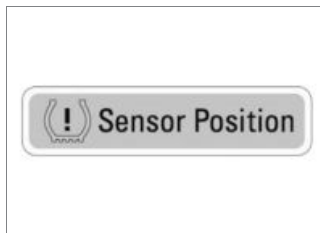

Tyre removal not in compliance with correct procedure.
Damage to RDC sensors.

- Be sure to explain to the specialist workshop or authorised BMW Motorrad dealer that the wheel is fitted with an RDC sensor.◀


If the motorcycle is equipped with RDC, each wheel rim bears an adhesive label indicating the position of the RDC sensor. When a tyre is being changed, special care must be taken not to damage the RDC sensor. Be sure to draw the attention of the authorised BMW Motorrad dealer or specialist workshop to the fact that the wheel is fitted with an RDC sensor.

Removing front wheel

- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand (120).

– with centre stand^{OE}

- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀

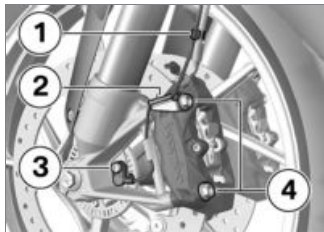

- Disengage the cable for the wheel-speed sensor from retaining clips **1** and **2**.
- Remove screw **3** and remove the wheel-speed sensor from its bore.
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.




ATTENTION

Brake pads pushed together with brake caliper removed.

It is not possible to slip the brake caliper over the brake disc.

- Do not operate the brake lever while a brake caliper has been removed.◀
- Remove securing screws **4** of the left and right brake calipers.

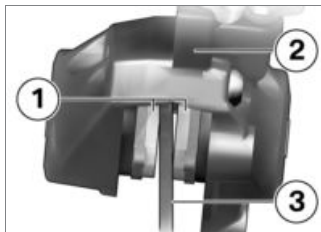


- Force the brake pads **1** slightly apart by rotational movement

of the brake caliper **2** against brake disc **3**.

- Carefully pull the brake calipers back and out until clear of the brake discs.
- Lift the front of the motorcycle until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Installing the front-wheel stand (▶ 118).




- Slacken axle clamping screws **1**.

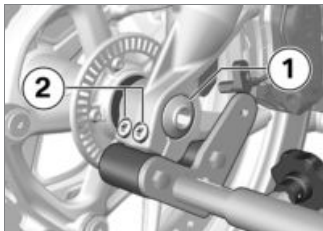

- Remove screw **1**.
- Slacken axle clamping screws **2**.
- Press quick-release axle slightly toward the inside, so as to be better able to grip it on the right-hand side.



- Withdraw quick-release axle **1**, support the front wheel when doing this.
- Set down front wheel and roll forwards out of the front suspension.

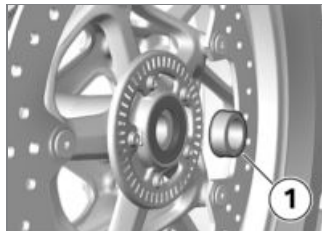

- Remove spacer bush **1** from the wheel hub.

Installing front wheel



WARNING

Use of a non-standard wheel.

Malfunctions in operation of ABS and ASC/DTC.

- See the information on the effect of wheel size on the ABS and ASC/DTC systems at the start of this chapter.◀




ATTENTION

Tightening threaded fasteners to incorrect tightening torque.

Damage, or threaded fasteners work loose.

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

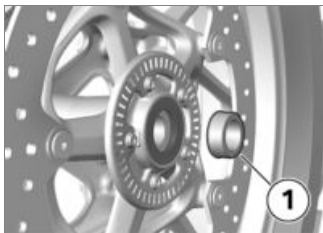

- Slip spacing bushing **1** into the wheel hub on the left-hand side.



ATTENTION

Front wheel installed wrong way round.


Risk of accident

- Note direction-of-rotation arrows on tyre or rim. ◀
- Roll the front wheel into position between the front forks.



- Lift front wheel and fit quick-release axle **1**.
- Remove front-wheel stand and firmly compress front forks several times. Do not operate front break lever.

- Installing the front-wheel stand (▶ 118).

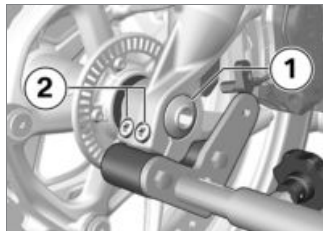

- Install screw **1** and tighten to specified torque. Counter-hold quick-release axle on the right-hand side.



Quick-release axle in telescopic forks

50 Nm

- Tighten axle clamping screws **2** to the specified tightening torque.



Clamping screws in axle holder

Tightening sequence: Tighten screws six times in alternate sequence

19 Nm



- Tighten axle clamping screws **1** to the specified tightening torque.




Clamping screws in axle holder

Tightening sequence: Tighten screws six times in alternate sequence

19 Nm

- Removing the front-wheel stand.
- Position left and right brake calipers on the brake discs.

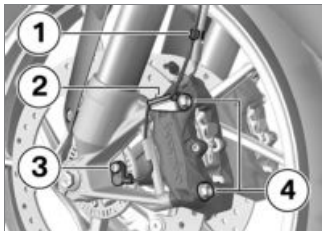

- Install securing screws **4** on left and right and tighten to specified tightening torque.



Brake caliper on telescopic fork

38 Nm

- Remove the adhesive tape from the wheel rim.



WARNING

Brake pads not contacting the brake disc.

Delayed braking effect.

- Before riding off, always check that the brakes bite as soon as

the brake lever is pulled or the brake pedal depressed. ◀

- Operate the brake several times until the brake pads are bedded.
- Seat the cable for the wheel-speed sensor in retaining clips **1** and **2**.
- Insert the wheel-speed sensor into the bore and install screw **3**.



Wheel-speed sensor to fork leg

Joining compound: Micro-encapsulated or medium-strength thread-locking compound

8 Nm

Removing rear wheel

- Swivelling silencer (➡ 135).



- Engage first gear.
- Remove studs **1** from the rear wheel, while supporting the wheel.
- Roll the rear wheel out toward the rear.

Installing the rear wheel



WARNING

Use of a non-standard wheel.

Malfunctions in operation of ABS and ASC/DTC.

- See the information on the effect of wheel size on the ABS

and ASC/DTC systems at the start of this chapter.◀



ATTENTION

Tightening threaded fasteners to incorrect tightening torque.

Damage, or threaded fasteners work loose.

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀
- Seat the rear wheel on the rear-wheel adapter.



- Install wheel studs **1** and tighten to specified torque.



Rear wheel to wheel flange

Tightening sequence: tighten in diagonally opposite sequence

60 Nm

- Securing silencer (111 ➔ 136).

Silencer

Swivelling silencer




CAUTION


Hot exhaust system.

Risk of burn injury


- Do not touch a hot exhaust system.◀
- Allow rear silencer to cool down.
- Make sure the ground is level and firm and place the motorcycle on a suitable auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand (111 ➔ 120).
 - with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀

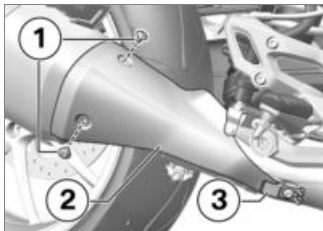

- Remove screws **1**.
- Ease cover **2** out of holder **3** and remove.

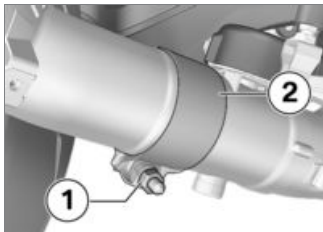

- Slacken nut **1** to loosen clamp **2** slightly.

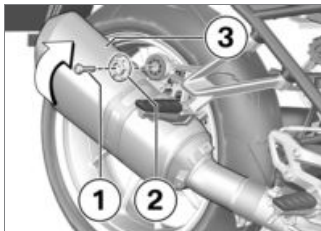

- Remove screw **1** and washer **2**.
- Turn silencer **3** counter-clockwise.

Securing silencer




ATTENTION

Tightening threaded fasteners to incorrect tightening torque.

Damage, or threaded fasteners work loose.

- Always have the security of the fasteners checked by a specialist workshop, preferably

an authorised BMW Motorrad dealer. ◀

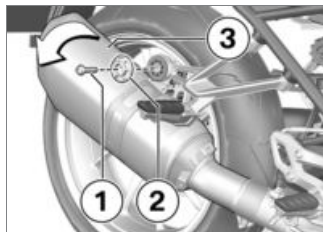


- Turn silencer **3** clockwise until it is seated against the rear footrest bracket.
- Install screw **1** and washer **2**.



Silencer to rear frame

19 Nm

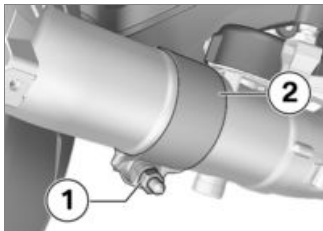


- Tighten nut **1** of clamp **2**.



Clamp to silencer and
exhaust manifold

22 Nm

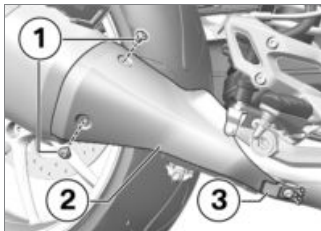

- Secure cover **2** in holder **3** and hold in position.
- Install screws **1**.

Lighting

Replacing bulbs for low-beam and high-beam headlight



NOTICE


The positions of the plugs and the bulbs might not be as illustrated below.◀



NOTICE


The procedure described here for replacing the low-beam headlight bulb applies by analogy for the high-beam headlight bulb.◀

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.
- with windscreen, Pure^{OE}

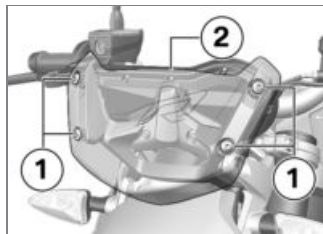

- Remove screws **1**. Make sure that the shouldered bushings from the grommets are not mislaid.


- Remove windscreen **2**.◀

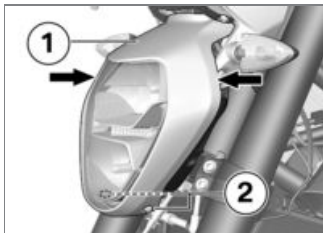

- Remove screws **2** and initially ease cover **1** out slightly at the top and then remove.




- Slacken screw **1** through 2 turns.

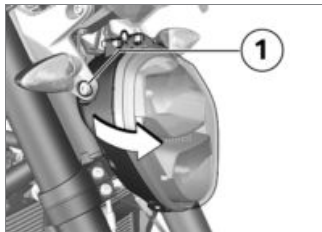


- Remove screw **1** and swivel the headlight aside.



- Press retaining hooks **2** down slightly and remove cover **1** by pulling retaining hooks **2**.

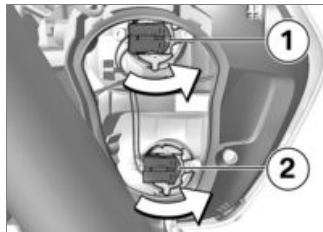

- Turn plug with bulb **1** for the low-beam headlight counter-clockwise and remove it.
- Turn plug with bulb **2** for the high-beam headlight counter-clockwise and remove it.

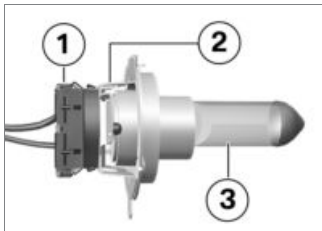

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of dirt and foreign matter.
- Hold the bulb by the base only, in order to keep the glass free of foreign matter.
- Remove bulb **3** from plug **1**. Make sure that holder **2** remains on the plug.
- Replace the defective bulb.




Bulbs for the low-beam headlight

H7 / 12 V / 55 W



Bulb for high-beam headlight


H7 / 12 V / 55 W

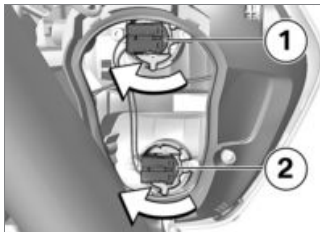

- Insert plug with bulb **1** for the low-beam headlight into the light housing and turn it clockwise.
- Insert plug with bulb **2** for the high-beam headlight into the light housing and turn it clockwise.



- Hold the cover in position at the bottom on connector **2** and secure retaining hooks **1** at the top.

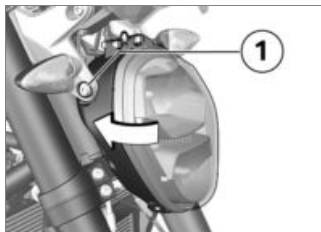

- Swing the headlight back to its original position and install screw **1**.



Headlight to front panel carrier

19 Nm




- Tighten screw **1**.




Adjuster to headlight

8 Nm

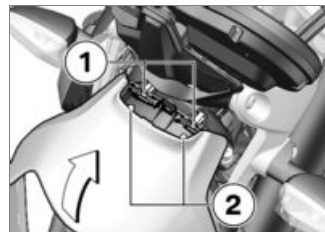


- Clip both retaining hooks **2** into holders **1**.

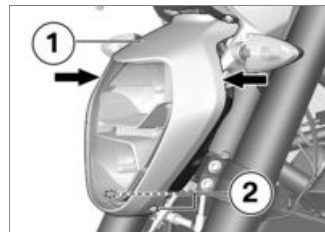

- Engage cover **1** at the bottom and install screws **2**.

– with windscreen, Pure^{OE}

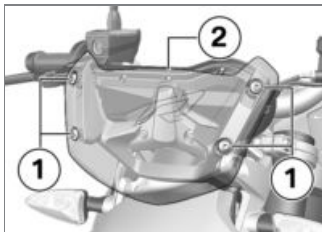

- Place windscreen **2** in position.
- Install screws **1**.




Windscreen to holder

4 Nm


Replacing bulb for parking light

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.

– with windscreen, Pure^{OE}

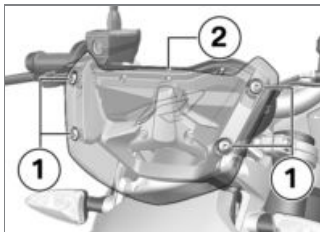


- Remove screws **1**. Make sure that the shouldered bushings from the grommets are not mislaid.
- Remove windscreen **2**.

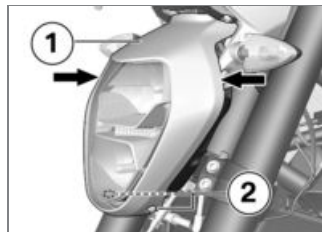

- Remove screws **2** and remove cover **1**.



- Slacken screw **1** through 2 turns.

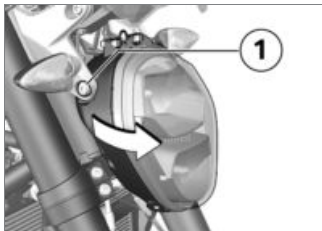

- Remove screw **1** and swivel the headlight aside.



- Remove cover **1** by pulling retaining hooks **2**.



- Pull socket **1** out of the headlight housing.
- Use a clean, dry cloth to hold the bulb in order to keep the glass free of dirt and foreign matter.



- Remove bulb **1** from the socket.
- Replace the defective bulb.



Bulb for parking light


W5W / 12 V / 5 W

– with Pro Headlight^{OE}

LED<




- Insert bulb **1** into the socket.

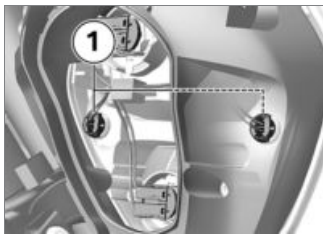

- Insert socket **1** into the headlight housing.



- Hold the cover in position at the bottom on connector **2** and secure retaining hooks **1** at the top.

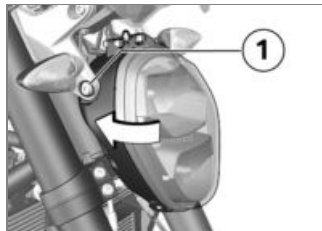

- Swing the headlight back to its original position and install screw **1**.



Headlight to front panel carrier

19 Nm




- Tighten screw **1**.




Adjuster to headlight

8 Nm

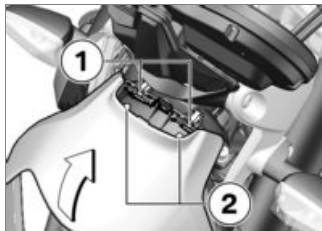


- Clip both retaining hooks **2** into holders **1**.

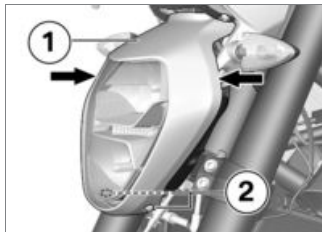

- Engage cover **1** at the bottom and install screws **2**.

– with windscreen, Pure^{OE}

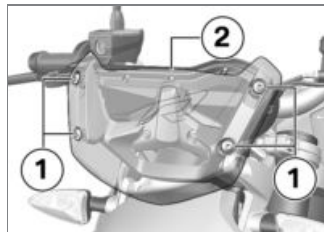

- Place windscreen **2** in position.
- Install screws **1**.



Windscreen to holder

4 Nm<

Replacing bulbs for front and rear turn indicators


- Make sure the ground is level and firm and place the motor-cycle on its stand.
- Switch off the ignition.



- Remove screw **1**.



- Pull the glass out of the light housing at the threaded-fastener side.

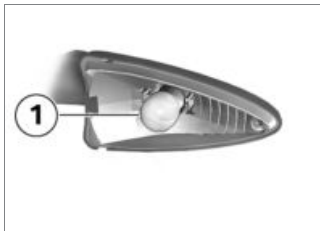

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.
- Turn bulb **1** counter-clockwise and remove it from the light housing.
- Replace the defective bulb.



Bulbs for flashing turn indicators, front

RY10W / 12 V / 10 W

– with LED turn indicators^{OE}

LED<




Bulbs for flashing turn indicators, rear

RY10W / 12 V / 10 W

– with LED turn indicators^{OE}

LED<

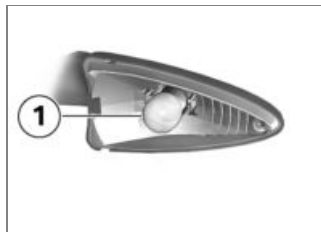

- Turn bulb **1** clockwise to install it in the light housing.




- Working from the inboard side, insert the glass into the light housing and close the housing.



- Install screw **1**.

Replacing bulb for number-plate light

- Removing front seat (→ 85).
- Make sure the ground is level and firm and place the motorcycle on its centre stand.

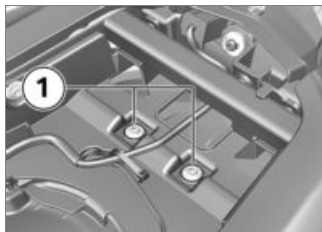


- Remove screws **1**.



- Remove screws **2** and remove cover for number-plate carrier **3**.



- Pull number-plate light bulb **4** out of the light housing.

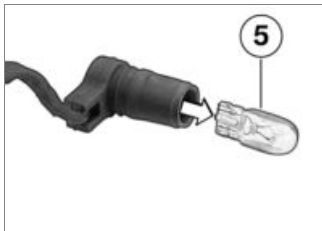


- Remove bulb **5** from the socket.
- Replace the defective bulb.

 Bulb for number-plate light

W5W / 12 V / 5 W

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.

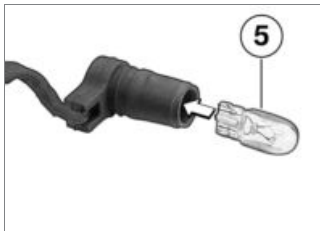


- Press bulb **5** into the socket.



- Press number-plate light bulb **4** into the light housing.



- Place cover for number-plate carrier **3** in position and install screws **2**.

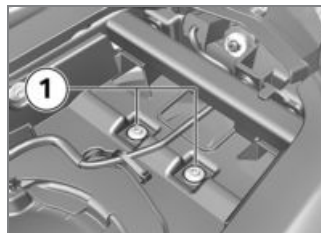

- Install screws **1**.
- Installing front seat (→ 85).

Replacing LED rear light

The LED rear light can be replaced only as a complete unit.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Replacing LED turn indicators

- with LED turn indicators^{OE}

LED turn indicators can be replaced only as a complete unit.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Replacing LED daytime riding light

- with daytime running light^{OE}

The LED daytime riding light can only be replaced as a unit with the headlight; it is not possible to replace individual LEDs.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Replacing LED auxiliary headlights

- with LED auxiliary headlights^{OA}

LED auxiliary headlights can be replaced only as a complete unit.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Jump-starting



ATTENTION

Excessive current flowing when the motorcycle is jump-started

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the en-

gine by connecting leads to the on-board socket.◀



ATTENTION

Contact between crocodile clips of jump leads and vehicle.

Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.◀




ATTENTION

Jump-starting with a voltage greater than 12 V.

Damage to the on-board electronics.

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V.◀
- Make sure the ground is level and firm and place the motorcycle on its stand.

- Removing battery cover (► 151).
- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.

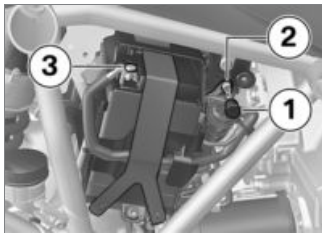

- Remove protective cap **1**.
- Use the red jumper cable to connect the positive terminal **2** of the discharged battery to the positive terminal of the donor battery.



NOTICE

If the 12 V battery is not correctly installed or if the polar-

ity of the terminals is reversed (e.g. in an attempt to jump-start the vehicle), this can cause the fuse for the alternator regulator to blow.◀

- Then connect one end of the black jump lead to the negative terminal of the donor battery and the other end to negative terminal **3** of the discharged battery.
- Run the engine of the donor vehicle during jump-starting.
- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.
- Allow both engines to idle for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminals first,

then disconnect the second lead from the positive terminals.



NOTICE

Do not use proprietary start-assist sprays or other products to start the engine.◀

- Install the protective cap.
- Fitting battery cover (► 153).

Battery

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.

- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.
- Do not turn the battery upside down.



ATTENTION

On-board electronics (e.g. clock) draining connected battery.

Battery is deep-discharged; this voids the guarantee.

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.◀



NOTICE

BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Us-

ing this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.◀

Charge battery when connected



ATTENTION

Charging connected battery via the battery terminals.

Damage to the on-board electronics.

- Disconnect the battery at the battery terminals before charging.◀



ATTENTION

Charging a fully discharged battery via the on-board socket or the extra socket.

Damage to the on-board electronics.

- If a battery has discharged to the extent that it is completely flat (battery voltage less than 9 V, status-indicator lights and multifunction display remain off when the ignition is switched on) **it has to be disconnected from the on-board circuits** and re-charged with the charger connected directly to the battery posts.◀



ATTENTION

Unsuitable battery chargers connected to an on-board socket.

Damage to charger and to frame and suspension electronics.

- Use suitable BMW chargers. The suitable charger is available from your authorised BMW Motorrad dealer.◀

- Charge via the charging socket, with the battery connected to the motorcycle's on-board electrical system.



NOTICE

The motorcycle's on-board electronics know when the battery is fully charged. The on-board socket is switched off when this happens.◀

- Comply with the operating instructions of the charger.



NOTICE

If you are unable to charge the battery through the on-board socket, you may be using a charger that is not compatible with your motorcycle's electronics. If this happens, disconnect the battery from the on-board systems and connect the charger directly to the battery.◀

Charge battery when disconnected


- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.




NOTICE

The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.◀


Removing battery

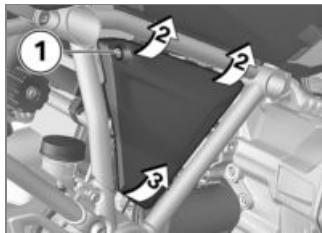

- Switch off the ignition.
 - Remove screw **1**.
 - Each battery cover slightly forward at the top at positions **2**.
 - In order not to damage the battery cover or the mount, work the battery cover up at position **3** to remove.
- with alarm system (DWA)^{OE}
- If applicable, switch off the anti-theft alarm.◀

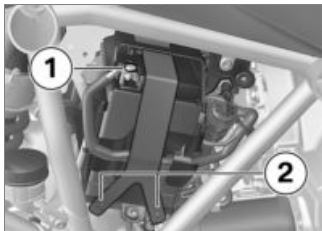

- Disconnect battery negative lead **1** and disengage rubber strap **2**.

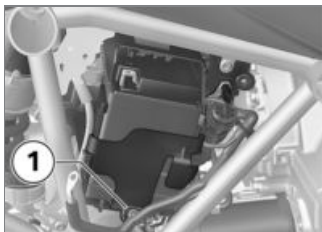

- Pull retaining plate in position **1** outwards and remove in an upward direction.

- Slightly lift the battery and ease it clear of the holder until the battery positive terminal is accessible.



- Disconnect battery negative lead **1** and remove the battery.

Installing battery



NOTICE

If the 12 V battery is not correctly installed or if the polarity of the terminals is reversed (e.g. in an attempt to jump-start the vehicle), this can cause the


fuse for the alternator regulator to blow.◀




- Secure battery positive lead **1**.
- Push battery into the mounting.




- First insert retaining plate into the mountings **1** and then push under the battery in position **2**.

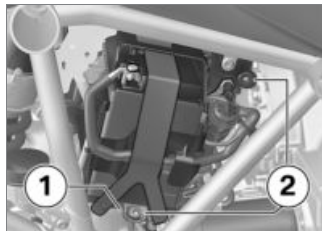

- Place battery cover into the mounting **1** and press into the mountings **2**.

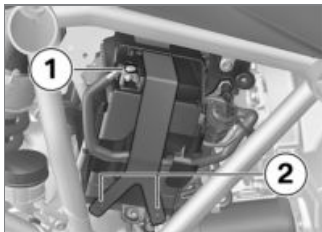


- Secure battery negative lead **1**.
- Secure the battery with rubber strap **2**.

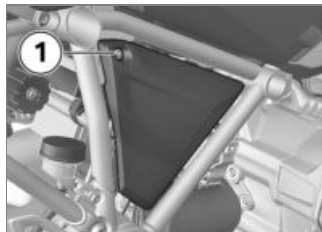

- Install screw **1**.
- Setting the clock (►► 63).
- Setting the date (►► 64).

Fuses

Replace fuses

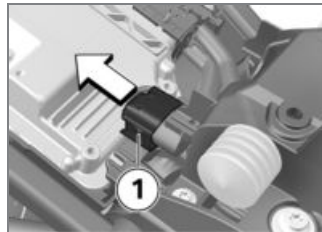

- Switch off the ignition.
- Removing front seat (►► 85).
- Disconnect plug **1**.



ATTENTION

Jumping of blown fuses.

Risk of short-circuit and fire.

- Always replace a defective fuse with a new fuse of the same amperage. ◀
- Replace faulty fuse in accordance with the fuse allocation diagram.




NOTICE

If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

- Install plug **1**.
- Installing front seat (➡ 85).


Fuse assignment

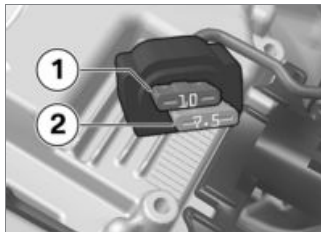

Fuse carrier 1

10 A (Slot 1: instrument cluster, alarm system (DWA), ignition lock, main relay, diagnostic socket)

7.5 A (Slot 2: multifunction switch left, tyre pressure control (RDC), angular rate sensor)

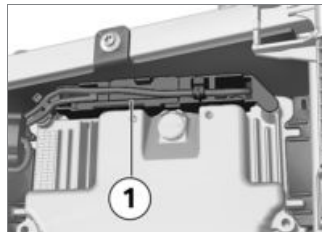

Fuse holder

50 A (Fuse 1: Voltage regulator)

Accessories

General instructions.....	156
Power sockets	156
Cases.....	157
Topcase	160
Navigation system	163

General instructions



CAUTION

Use of other-make products.

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle. ◀

BMW has conducted extensive testing of the parts and ac-

cessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts product liability. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

Whenever you are planning modifications, comply with all the legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country. Your BMW Motorrad dealer can offer expert advice on the choice of genuine BMW parts, accessories and other products. To find out more about accessories go to:

**[bmw-motorrad.com/
accessories](http://bmw-motorrad.com/accessories)**

Power sockets

Connection of electrical devices

- You can start using electrical devices connected to the motorcycle's sockets only when the ignition is switched on.

Cable routing

- The cables from the power sockets to the auxiliary devices must be routed in such a way that they do not impede the rider.
- The cable routing should not restrict the steering angle or obstruct handling.
- The cables must not be trapped.

Automatic shutdown


- The sockets will be automatically switched off during the start procedure.

- The power supply to the sockets is switched off no more than 15 minutes after the ignition is switched off, in order to prevent overloading of the on-board electrics. Low-wattage electrical accessories might not be recognised by the vehicle's electronics. In such cases, power sockets are switched off very shortly after the ignition is turned off.
- If the battery charge state is too low to maintain the motorcycle's start capability, the power sockets are switched off.
- The power sockets are also switched off when the maximum load capability as stated in the technical data is exceeded.

Cases

Open cases


- with touring cases^{OA}

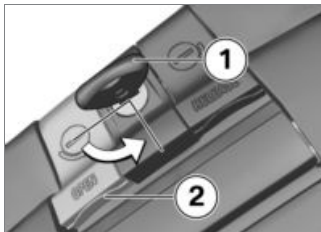

- Turn the key **1** to position OPEN.
- Pull the grey release lever **2** (OPEN) all the way up and simultaneously open the case lid.

Closing cases


- with touring cases^{OA}

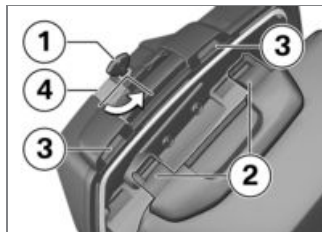

- Turn the key **1** to position OPEN.
- Press catches **2** of the case lid into retainers **3**. Check that nothing is trapped between the lid and the case.
- Pull the grey release lever **4** (OPEN) all the way up and simultaneously open the case lid.
 - » The lid engages with an audible click.
- Turn the key **1** in the case lock so that it is parallel with the direction of travel and remove.

Removing cases

– with touring cases^{OA}

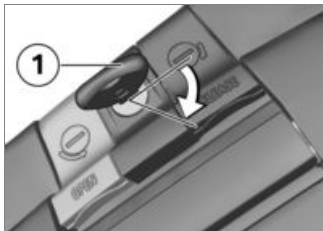


- Turn the key **1** to position RELEASE.




- Pull the black release lever **1** (RELEASE) up and simultaneously pull the case out.
- Then lift the case out of the bottom holder.

Install cases

– with touring cases^{OA}

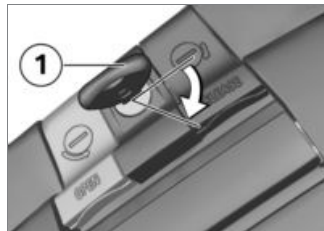

- Turn the key **1** to position RELEASE.

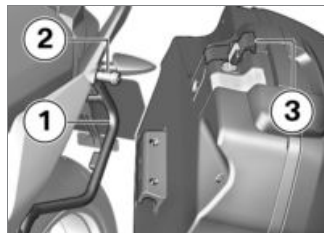

- Position the case in case holder **1**, then pivot it until it is seated at mount **2**.
- Pull the black release lever **3** (RELEASE) up and simultan-

eously push the case into the upper holder **2**.

- Push black release lever **3** (RELEASE) down until it engages.
- Turn the key in the case lock so that it is parallel with the direction of travel and remove.

Maximum payload and maximum permissible speed

Note the maximum permissible payload and the speed limit for riding with cases fitted, as stated on the label inside the case. Contact your authorised BMW Motorrad dealer if you cannot find your combination of vehicle and cases on the label. The values for the combination described here are as follows:

	Maximum permissible speed for riding with cases fitted to the motorcycle
max 180 km/h	
	Payload per case
max 10 kg	

Secure attachment

– with touring cases^{OA}



If a case wobbles or is difficult to fit, it has to be adapted to the

gap between the top and bottom holders.



WARNING

Case installation not in compliance with correct procedure.

Impairment of road safety.

- Cases may not wobble and must be secured free from play. Re-adjust the retainer if play develops over the course of time.◀



Screws **1** inside the case allow you to make this adjustment.

Topcase

Opening topcase

– with topcase^{OA}



- Turn the key in the topcase lock to position **1**.



- Push lock barrel **1** forward.
» Lever **2** pops up.
- Pull the release lever all the way up.

» The lid of the topcase opens.

Closing topcase

– with topcase^{OA}



- Pull release lever **1** all the way up.
- Close the lid of the topcase and hold it down. Check that nothing is trapped between the lid and the case.



NOTICE

The topcase can also be locked by turning the lock to the LOCK position. In this case, ensure that

the vehicle key is not left in the topcase.◀



- Push release lever **1** down until it engages.
- Turn the key in the topcase lock to the LOCK position and remove the key from the lock.

Removing the topcase

– with topcase^{OA}



- Turn the key in the topcase lock to position **1**.
» The handle pops out.



- Pull handle **1** up as far as it will go.

- Lift the topcase at the rear and remove it from the luggage carrier.

Installing topcase

– with topcase^{OA}

WARNING

Topcase securing not in compliance with correct procedure.

Impairment of road safety.

- The topcase may not wobble and must be secured free from play.◀
- Pull the handle up as far as it will go.



- Hook the topcase into position on the luggage carrier. Make sure that hooks **1** are securely seated in the corresponding keepers **2**.



- Push handle **1** down until it engages.



- Turn the key in the topcase lock to position **1** and remove the key from the lock.

Maximum payload and maximum permissible speed

Note the maximum permissible payload and the speed limit for riding with topcase fitted, as stated on the label inside the topcase.

Contact your authorised BMW Motorrad dealer if you cannot find your combination of vehicle and topcase on the label.

The values for the combination described here are as follows:



Maximum permissible speed for riding with Vario topcase fitted to the motorcycle

max 180 km/h



Payload of Vario topcase

max 5 kg

Navigation system

Securing navigation system

- with preparation for navigation system^{OE}
- with navigation system^{OA}




NOTICE

The navigation preparation option is compatible with the BMW Motorrad Navigator IV and the BMW Motorrad Navigator V. ◀




NOTICE

The latching system of the Mount Cradle is not designed to protect against theft. Always remove the navigation system and stow it away safely as soon as you finish your ride. ◀

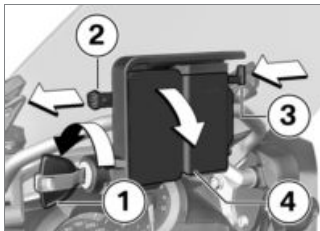

- Turn ignition key **1** counter-clockwise.
- Pull retainer **2** to the **left**.
- Press in lock **3**.
 - » The Mount Cradle is released and cover **4** can be pivoted forward and removed.

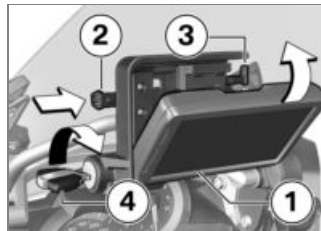

- Insert navigation system **1** at bottom and pivot it toward the rear.
 - » The navigation system engages with an audible click.
- Push retainer **2** fully to the **right**.
 - » Lock **3** is engaged.
- Turn ignition key **4** clockwise.
 - » The navigation system is secured and the ignition key can be removed.

Removing navigation system and installing cover

- with preparation for navigation system^{OE}
- with navigation system^{OA}




ATTENTION

Dust and dirt on contacts of the Mount Cradle.


Damage to the contacts.

- Always reinstall the cover as soon as you finish your ride.◀

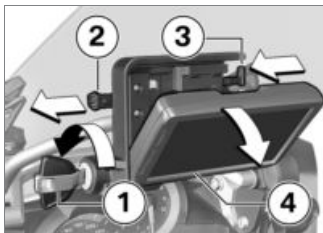

- Turn vehicle key **1** counter-clockwise.

- Pull retainer **2** fully to the **left**.
» Lock **3** is disengaged.
- Push lock **3** fully to the **left**.
» Navigation system **4** is unlocked.
- Tilt navigation system **4** and work it downward to remove.

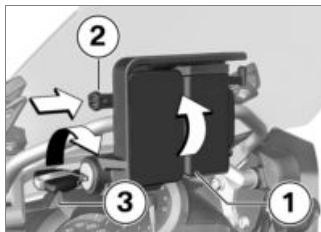

- Insert cover **1** at bottom and pivot it up.
» The cover engages with an audible click.
- Push retainer **2** to the **right**.
- Turn vehicle key **3** clockwise.
» Cover **1** is secured.

Operating navigation system

- with preparation for navigation system^{OE}
- with navigation system^{OA}



NOTICE

The description below is based on the Navigator V. The Navigator IV does not support all the possibilities described here.◀



NOTICE

Only the latest version of the BMW Motorrad communication system is supported. A software update of the BMW Motorrad communication system may be necessary. If this is the case, consult your authorised BMW Motorrad dealer.◀

If the BMW Motorrad Navigator is fitted, some of its functions

can be controlled directly from the handlebars using the Multi-Controller.



The Multi-Controller is operated by means of six movements:

- Turning upwards and downwards.
- Short operation to the left and right.
- Extended operation to the left and right.

Turning the Multi-Controller with the Compass or Mediaplayer page open increases or decreases the volume of a

BMW Motorrad communication system connected via Bluetooth. In the BMW special menu, the menu items are selected by turning the Multi-Controller.

Short operation of the Multi-Controller to the left or right changes between the main pages of the Navigator:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My Motorcycle page

Long-pushing the Multi-Controller corresponds to activating certain functions on the Navigator display. An arrow to the right or to the left above the corresponding button area on the display indicates a function that can be activated in this way.

 Long-push to the right to activate this function.

 Long-push to the left to activate this function.

In detail, the following functions can be controlled:

Map view

- Turn up: Zoom in.
- Turn down: Zoom out.

Compass page

- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

BMW special menu

- Speak: Repeat most recent navigation announcement.
- Waypoint: Save current location as a favourite.

- Home: Starts navigation to home address (greyed if no home address has been defined).
- Mute: Switch automatic navigation announcements off or on (off: a crossed-out lips symbol appears in the top line of the display). "Speak" will still activate navigation announcements. All other acoustic outputs remain switched on.
- Switch off display: Deactivate the display.
- Dial home number: Dials the home phone number saved in the Navigator (not shown unless a telephone is connected).
- Diversion: Activates the diversion function (not shown unless a route is active).
- Skip: Skips the next waypoint (not shown unless the route has waypoints).

My Motorcycle

- Turn: Changes the number of data shown.
- Touch a data field on the display to open the menu for selecting data.
- The values available for selection depend on the optional extras installed on the vehicle.



NOTICE

The MediaPlayer function is available only with a Bluetooth device supporting the A2DP standard, for example a BMW Motorrad communication system.◀


MediaPlayer

- Long-push to the left: Play preceding track.
- Long-push to the right: Play next track.
- Turning increases or decreases the volume of a BMW Motorrad communication

system connected via Bluetooth.

Warnings and status messages

- with navigation system^{OA}

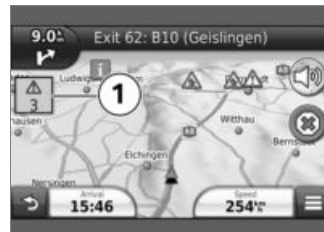

Warning and status messages from the motorcycle are indicated by a symbol **1** appearing at the top left in the map view.



NOTICE

If a BMW Motorrad communication system is connected, warnings are accompanied by an acoustic signal.◀

If there are two or more active warnings the number appears below the warning triangle. Touching the warning triangle when more than one warning is active opens a list of all the warnings. Additional information appears as soon as a message is selected.



NOTICE

Detailed information cannot be displayed for all warnings. ◀

Special functions

– with navigation system^{OA}

Integration of the BMW Motorrad Navigator has produced a number of deviations from the descriptions in the operating instructions for the Navigator.

Reserve fuel level warning

The settings for the fuel gauge are not available, because the reserve fuel level warning is sent by the vehicle to the Navigator. Touch the message when it is active to view the locations of the nearest filling stations.

Time and date

The Navigator sends the time and date to the motorcycle. The transfer of these data into the instrument cluster must be activated in the **SETUP** menu of the instrument cluster.

Security settings

The BMW Motorrad Navigator V can be secured against unauthorised use with a four-digit PIN (Garmin Lock). If this function is activated, while the Navigator is cradled on the motorcycle and the ignition is switched on you are prompted to add the mo-

torcycle to the list of secured vehicles. If you answer "Yes" at the prompt, the Navigator saves the VIN of this vehicle in its internal memory.

A maximum of five VINs can be saved in this way.

Subsequently, the PIN does not have to be entered when the Navigator is switched on by ignition ON while cradled in any of these vehicles.

If the Navigator is removed from the vehicle while switched on, a security prompt asking for the PIN to be entered is issued.

Screen brightness

Screen brightness is adjusted by the motorcycle while the unit is cradled. No manual input is necessary.

If you prefer, you can switch off automatic adjustment in the Navigator display settings.

Care

Care products	170
Washing the vehicle	170
Cleaning easily damaged components.....	171
Paint care	171
Laying up the motorcycle	172
Protective wax coating	172
Restoring motorcycle to use	172

Care products

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad dealer.

The substances in BMW CareProducts have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



ATTENTION

Use of unsuitable cleaning and care products.

Damage to vehicle parts.

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol.◀

Washing the vehicle

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after every trip.



WARNING

Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions.

Diminished braking effect.

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads.◀



ATTENTION

Effect of road salt intensified by warm water.

Corrosion

- Use only cold water to wash off road salt.◀



ATTENTION

Damage due to high water pressure from high pressure cleaners or steam cleaners.

Corrosion or short-circuit, damage to seals, to the hydraulic brake system, to the electrics and the seat.

- Exercise restraint when using a steam jet or high-pressure cleaning equipment.◀

Cleaning easily damaged components

Plastics

ATTENTION

Use of unsuitable cleaning agents.

Damage to plastic surfaces.

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.◀

Body panels

Clean the trim panels with water and BMW plastic care emulsion.

Windscreens and lenses made of plastic and metal cover on centre trim panel

Clean off dirt and insects with a soft sponge and plenty of water.

NOTICE

Soften stubborn dirt and insects by covering the affected areas with a wet cloth.◀



Clean with water and sponge only.



Do not use any chemical cleaning agents.

Chrome

Use plenty of water and BMW shampoo to clean chrome, particularly if it has been exposed to road salt. Use chrome polish for additional treatment.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.

ATTENTION

Radiator fins easily bent.

Damage to radiator fins.

- Take care not to bend the radiator fins when cleaning.◀

Rubber components

Treat rubber components with water or BMW rubber-care products.

ATTENTION

Application of silicone sprays to rubber seals.

Damage to the rubber seals.

- Do not use silicone sprays or care products that contain silicon.◀

Paint care

Washing the vehicle regularly will help counteract the long-term effects of substances that damage the paint, especially if

your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen.

However, particularly aggressive substances (e.g. spilt fuel, oil, grease, brake fluid and bird droppings) must be removed immediately, as the paint could otherwise be affected or become discoloured. BMW Motorrad recommends using BMW vehicle polish or BMW paint cleaner for this purpose.

Marks on the paintwork are particularly easy to see after the vehicle has been washed. Remove stains of this kind immediately, using cleaning-grade benzene or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Remember to wax the parts treated in this way.

Laying up the motorcycle

- Clean the motorcycle.
- Fill the motorcycle's fuel tank.
- Removing battery (➡ 151).
- Spray the brake and clutch lever pivots and the main and side stand pivots with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel (preferably using the front-wheel and rear-wheel stands from BMW Motorrad).

Protective wax coating

If water is no longer forming beads on the paint surface, it must be waxed.

BMW Motorrad recommends applying only BMW car wax or products containing carnauba wax or synthetic wax.

Restoring motorcycle to use

- Remove the protective wax coating.
- Clean the motorcycle.
- Installing battery (➡ 152).
- Comply with checklist (➡ 92).

Technical data

Troubleshooting chart	174
Threaded fasteners	175
Engine	177
Fuel.....	178
Engine oil	179
Clutch	179
Transmission	180
Rear-wheel drive.....	180
Running gear	181
Brakes	182
Wheels and tyres	182
Electrics	183
Frame	185
Anti-theft alarm	185
Dimensions	186

Weights.....	187
Riding specifications	187

Troubleshooting chart

Engine does not start or is difficult to start.

Possible cause	Rectification
Side stand extended and gear engaged	Retract the side stand.
Gear engaged and clutch not disengaged	Select neutral or pull the clutch lever.
No fuel in tank	Refuelling (▮▮▮▮➔ 99).
Battery flat	Charge battery when connected (▮▮▮▮➔ 150).

Threaded fasteners

Front wheel	FR	Valid
Brake caliper on telescopic fork		
M10 x 65	38 Nm	
Quick-release axle in telescopic forks		
M20 x 1.5	50 Nm	
Clamping screws in axle holder		
M8 x 35	Tighten screws six times in alternate sequence	
	19 Nm	
Rear wheel	FR	Valid
Rear wheel to wheel flange		
M10 x 1.25 x 40	tighten in diagonally opposite sequence	
	60 Nm	
Mirror arm	FR	Valid
Mirror (lock nut) to adapter		
Left-hand thread, M10 x 1.25	22 Nm	

Mirror arm**FR****Valid****Adapter to clamping block**

M10 x 14 - 4.8

25 Nm

Handlebars**FR****Valid****Clamping block (handlebar clamp) to fork bridge**

M8 x 35

**in the forward direction of travel,
tighten until seated**

19 Nm

M8 x 30

**in the forward direction of travel,
tighten until seated**

19 Nm

– with preparation for navigation system^{OE}

Engine

Location of engine number	Crankcase, bottom right, below starter motor
Engine design	Air-/liquid-cooled two-cylinder four-stroke opposed-twin engine with two overhead spur-gear-driven camshafts and one balancing shaft
Displacement	1170 cm ³
Cylinder bore	101 mm
Piston stroke	73 mm
Compression ratio	12.5:1
Nominal output	92 kW, at engine speed: 7750 min ⁻¹
– with power reduction ^{OE}	79 kW, at engine speed: 7750 min ⁻¹
Torque	125 Nm, at engine speed: 6500 min ⁻¹
– with power reduction ^{OE}	122 Nm, at engine speed: 5250 min ⁻¹
Maximum engine speed	max 9000 min ⁻¹
Idle speed	1150 min ⁻¹ , Engine at regular operating temperature

Fuel

Recommended fuel grade	Super unleaded (max. 10 % ethanol, E10) 95 ROZ/RON 89 AKI
Alternative fuel grade	Regular unleaded (Power- and consumption-related restrictions. If e.g. the engine is to be operated in countries with low fuel grades at 91 research octane number, then the motorcycle must first be programmed appropriately at your authorised BMW motorcycle dealer.) 91 ROZ/RON 87 AKI
Usable fuel capacity	approx. 18 l
Reserve fuel	approx. 4 l
Exhaust emissions standard	EU3

Engine oil

Engine oil, capacity	max 4 l, with filter change
Specification	SAE 5W-40, API SL / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil
Engine oil, quantity for topping up	max 0.95 l, Difference between MIN and MAX

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

Clutch

Clutch type	Multiplate oil-bath clutch, anti-hopping
-------------	--

Transmission

Gearbox type	Dog-shifted six-speed gearbox with bevel gearing
Gearbox transmission ratios	1.000 (60:60 teeth), Primary transmission ratio 1.650 (33:20 teeth), Transmission input ratio 2.438 (39:16 teeth), 1st gear 1.714 (36:21 teeth), 2nd gear 1.296 (35:27 teeth), 3rd gear 1.059 (36:34 teeth), 4th gear 0.943 (33:35 teeth), 5th gear 0.848 (28:33 teeth), 6th gear 1.061 (35:33 teeth), Transmission output ratio

Rear-wheel drive

Type of final drive	Shaft drive with bevel gears
Type of rear suspension	Cast aluminium single swinging arm with BMW Motorrad paralever
Gear ratio of final drive	2.818 (31/11 teeth)

Running gear

Front wheel

Type of front suspension	Upside-down telescopic fork
Spring travel, front	140 mm, at front wheel

Rear wheel

Type of rear suspension	Cast aluminium single swinging arm with BMW Motorrad paralever
Type of rear suspension	Central shock absorber complete with torsion spring, adjustable rebound-stage damping and spring preload
– with Dynamic ESA ^{OE}	Central spring strut with coil spring, electrically adjustable damping and spring preload
Spring travel at rear wheel	140 mm

Brakes

Type of front brake	Hydraulically operated twin disc brake with 4-piston radial brake calipers and floating brake discs
Brake-pad material, front	Sintered metal
Type of rear brake	Hydraulically operated disc brake with 2-piston floating caliper and fixed disc
Brake-pad material, rear	Organic material

Wheels and tyres

Recommended tyre sets	Your authorised BMW Motorrad dealer will be happy to supply an up-to-date list of the approved wheel/tyre combinations, or you can check the information posted on the bmw-motorrad.com website.
Speed category, front/rear tyres	W, required at least: 270 km/h

Front wheel

Front wheel type	Aluminium cast wheel
Front wheel rim size	3.5" x 17"
Tyre designation, front	120/70 - ZR 17
Load index, front tyre	min 49
Permissible front-wheel imbalance	max 5 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
Rear wheel rim size	5.5" x 17"
Tyre designation, rear	180/55 - ZR 17
Load index, rear tyre	min 67
Permissible rear-wheel imbalance	max 45 g

Tyre pressures

Tyre pressure, front	2.5 bar, tyre cold
Tyre pressure, rear	2.9 bar, tyre cold

Electrics

Electrical rating of on-board sockets	max 5 A, total for all sockets
Fuse carrier 1	10 A, Slot 1: instrument cluster, alarm system (DWA), ignition lock, main relay, diagnostic socket 7.5 A, Slot 2: multifunction switch left, tyre pressure control (RDC), angular rate sensor
Fuse holder	50 A, Fuse 1: Voltage regulator

Battery

Battery type	AGM (Absorbent Glass Mat) battery
Battery rated voltage	12 V
Battery rated capacity	12 Ah

Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR8D-J
Electrode gap of spark plug	0.8±0.1 mm, when new 1.0 mm, Wear limit

Lighting

Bulb for high-beam headlight	H7 / 12 V / 55 W
Bulbs for the low-beam headlight	H7 / 12 V / 55 W
Bulb for parking light	W5W / 12 V / 5 W
– with Pro Headlight ^{OE}	LED
Bulb for tail light/brake light	LED
Bulbs for flashing turn indicators, front	RY10W / 12 V / 10 W
– with LED turn indicators ^{OE}	LED
Bulbs for flashing turn indicators, rear	RY10W / 12 V / 10 W
– with LED turn indicators ^{OE}	LED

Frame

Frame type	Tubular steel frame with supporting drive unit, steel pipe rear frames
Type plate location	Frame, front left, on steering head
Position of the Vehicle Identification Number	Frame, front right, on steering head

Anti-theft alarm

Activation time on arming	approx. 30 s
Alarm duration	approx. 26 s
Battery type	CR 123 A

Dimensions

Length of motorcycle	2165 mm, measured over number-plate carrier
Height of motorcycle	1300 mm, measured across mirrors at DIN unladen weight
Width of motorcycle	880 mm, with mirrors
Front-seat height	790 mm, without rider at DIN unladen weight
– with front seat, low ^{OE}	760 mm, without rider at DIN unladen weight
– with front seat, high ^{OE}	820 mm, without rider at DIN unladen weight
Rider's inside-leg arc, heel to heel	1780 mm, without rider at unladen weight
– with front seat, low ^{OE}	1720 mm, without rider at unladen weight
– with front seat, high ^{OE}	1835 mm, without rider at unladen weight

Weights

Unladen weight	231 kg, DIN unladen weight, ready for road 90 % load of fuel, without OE
Permissible gross weight	450 kg
Maximum payload	219 kg

Riding specifications

Starting capability on uphill gradients (at permissible gross weight)	20 %
Top speed	>200 km/h

Service

BMW Motorrad Service	190
BMW Motorrad Mobility services	190
Maintenance work	190
Maintenance schedule	193
Standard BMW service	194
Confirmation of maintenance work	195
Confirmation of service	200

BMW Motorrad Service

BMW Motorrad has an extensive network of dealerships in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad dealerships have the technical information and the technical know-how to carry out reliably all maintenance and repair work on your BMW.

You can locate your nearest authorised BMW Motorrad dealership by visiting our website:

bmw-motorrad.com



WARNING

Maintenance and repair work not in compliance with correct procedure.

Risk of accident due to subsequent damage.

- BMW Motorrad recommends you to have all the associated work on your motorcycle car-

ried out by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle. Have all maintenance and repair work that is carried out confirmed in the "Service" chapter in this manual. For generous treatment of claims submitted after the warranty period has expired, evidence of regular maintenance is essential.

Your authorised BMW Motorrad dealer can provide information on BMW services and the work undertaken as part of each service.

BMW Motorrad Mobility services

As owner of a new BMW vehicle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile Service, breakdown service, vehicle recovery service). Your authorised BMW Motorrad dealer will be happy provide information about the mobility services available to you.

Maintenance work

BMW pre-delivery check

Your authorised BMW Motorrad dealer conducts the BMW pre-delivery check before handing over the vehicle to you.

BMW Running-in check



First running-in check

500...1200 km

BMW Service

The BMW Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad dealer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odo-

meter reading is reached before the next scheduled date for the service.

The service-due indicator in the multifunction display reminds you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:

bmw-motorrad.com/service

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below:

[illegible]

Maintenance schedule

- 1** BMW Running-in check
- 2** Standard BMW service
( 194)
- 3** Engine-oil change, with filter
- 4** Oil change in bevel gears
- 5** Check valve clearance
- 6** Replace all spark plugs
- 7** Replace air-filter element
- 8** Oil change in the telescopic forks
- 9** Change brake fluid, entire system
 - a** annually or every 10,000 km (whichever comes first)
 - b** every 2 years or every 20,000 km (whichever comes first)
 - c** for the first time after one year, then every two years

Standard BMW service

A standard BMW service consists of the following maintenance work:

- Perform vehicle test with the BMW Motorrad diagnosis system.
- Visually inspect the hydraulic clutch system.
- Visually inspect the brake pipes, brake hoses and connections.
- Check the front and rear brake pads and brake discs for wear.
- Check the front and rear brake-fluid levels.
- Check the steering-head bearing.
- Check the coolant level.
- Check the ease of movement of the side stand.
- Check the ease of movement of the centre stand (if vehicle fitted with the "centre stand" optional extra).
- Check the tyre pressures and tread depth.
- Check the lights and signalling equipment.
- Check that the engine start suppression system is in working order.
- Perform final inspection and check of roadworthiness.
- Set the service-due date and service countdown distance.
- Check the battery charge state.
- Confirm BMW service in the on-board documentation.

Confirmation of maintenance work

BMW Pre-delivery Check

Completed

on _____

Stamp, signature

BMW Running-in Check

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature**BMW Service**

Completed

on _____

Odometer reading _____

Next service
at the latest

on _____

or, if logged beforehand,

Odometer reading _____

Stamp, signature

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, special campaign (recall) work.

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, special campaign (recall) work.

[illegible]

Item	Odometer reading	Date

Appendix

Certificate for electronic immobiliser	204
Certificate for Keyless Ride	206
Certificate for tyre pressure monitoring (Reifendruck-Control, RDC)	208

FCC Approval

Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀

Approbation de la FCC

Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des

informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

Certifications

BMW Keyless Ride ID Device



USA, Canada

Product name: BMW Keyless Ride ID Device
FCC ID: YGOHUF5750
IC: 4008C-HUF5750

Canada:

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

USA:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration Of Conformity

We declare under our responsibility that the product

BMW Keyless Ride ID Device (Model: HUF5750)

complies with the appropriate essential requirements of the article 3 of the R&TIE and the other relevant provisions, when used for its intended purpose. Applied Standards:

1. Health and safety requirements contained in article 3 (1) a)
 - EN 60950-1:2006+A11:2009+A1:2010+A12:2011; Information technology equipment- Safety
2. Protection requirements with respect to electromagnetic compatibility article 3 (1) b)
 - EN 301 489-1 (V1.9.2, 09/2011), Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements
 - EN 301 489-3 (V1.4.1, 08/2002) Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for short range devices (SRD) operating on frequencies between 9 kHz and 40 GHz
3. Means of the efficient use of the radio frequency spectrum article 3 (2)
 - EN 300 220-1 & -2 (V2.4.1, 05/2012), electromagnetic compatibility and radio spectrum matters (ERM); Short range devices (SRD); Radio equipment to be used in the 25 MHz to 1000 MHz frequency range with power levels ranging up to 500 mW;
Part 1: Technical characteristics and test methods.
Part 2: Harmonized EN covering essential requirements under article 3.2 of the R&TIE directive

The product is labeled with the CE marking: **CE**

Velbert, October 15th, 2013



Benjamin A. Müller
Product Development Systems
Car Access and Immobilization – Electronics
Huf Hülsbeck & Fürst GmbH & Co. KG
Steeger Straße 17, D-42551 Velbert

Certification Tire Pressure Control (TPC)

FCC ID: MRXBC54MA4
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

A

Abbreviations and symbols, 6

ABS

Control, 15

Engineering details, 106

Operation, 69

Self-diagnosis, 94

Warnings, 39

Accessories

General instructions, 156

Actuality, 7**Air filter**

Position on the motorcycle, 13

Ambient temperature

Outside temperature

warning, 31

Reading, 43

Anti-theft alarm

Operation, 67

Warning, 39

ASC

Control, 15

Engineering details, 108

Operation, 70

Self-diagnosis, 95

Average values

Resetting, 62

B**Battery**

Charging battery when
connected, 150

Charging battery when
disconnected, 151

Indicator light for battery
charge voltage, 38

Installation, 152

Maintenance instructions, 149

Removal, 151

Technical data, 184

Warning for battery voltage
low, 37

Brake fluid

Checking fluid level, front, 124

Checking fluid level, rear, 125

Reservoir, front, 13

Reservoir, rear, 13

Brake pads

Checking front, 122

Checking rear, 123

Running in, 96

Brakes

Adjusting handlebar lever, 84

Checking function, 122

Safety instructions, 97

Technical data, 182

C

Cases, 157

Checklist, 92

Clock

adjusting, 63

Clutch

Adjusting handlebar lever, 83

Checking operation, 126

Technical data, 179

Confirmation of maintenance

work, 195

Coolant

Checking fill level, 126

Warning for overtemperat-
ure, 32

Cruise-control system
Operation, 76

D

Damping

Adjuster, rear, 11
adjusting, 86

Daytime riding lights

automatic daytime riding
light, 58
Manual daytime riding light, 57
Position on the vehicle, 11

Dimensions

Technical data, 186

DTC

Engineering details, 110

DWA

Technical data, 185
Telltale light, 18

E

Electrics

Technical data, 183

Emergency off switch (kill
switch), 17

Operation, 55

Engine

Indicator light for engine control
unit, 33

starting, 92

Technical data, 177

Warning light for engine
electronics, 33

Engine oil

Checking fill level, 120

Filler neck, 13

Fill-level indicator, 13

Oil level, 43

Technical data, 179

Topping up, 121

Warning for engine oil level, 34

Engine temperature

Warning for overtemperat-
ure, 32

Equipment, 7

ESA

Control, 15

Engineering details, 112

Operation, 72

F

Frame

Technical data, 185

Front-wheel stand

Installing, 118

Fuel

Filler neck, 11

Fuel grade, 99

Refuelling, 99, 101

refuelling with Keyless

Ride, 101

Reserve volume, 42

Technical data, 178

Fuel reserve

Warning, 41

Fuses

Replacing, 153

Technical data, 183

G

General views

Instrument panel, 18

Left multifunction switch, 15

Left side of vehicle, 11

Multifunction display, 22, 24,
25

Right multifunction switch, 17
Right side of vehicle, 13
Underneath the seat, 14
Warning and telltale lights, 20

H

Hazard warning flashers
Control, 15, 17
Operation, 59

Headlight

Beam throw, 82
Headlight beam-throw
adjustment, 11

Headlight courtesy delay
feature, 48

Heated handlebar grips

Control, 17
Operation, 78

Horn, 15

I**Ignition**

Switching off, 49
Switching on, 48

Immobiliser
Emergency key, 52
Reserve key, 49
Warning, 31

Instrument panel

Ambient-light brightness
sensor, 18
Overview, 18

J

Jump-start, 148

K**Keyless Ride**

Battery of radio-operated key
flat, 53
Electronic immobiliser EWS, 52
Fuel filler cap, unlocking, 101
Lock the handlebars, 50
Loss of the radio-operated
key, 53
Switching off ignition, 52
Switching on ignition, 51
Warning, 31, 32

Keys, 48, 50

L**Lighting**

LED daytime riding light,
replacing, 148
Replacing bulb for high-beam
headlight, 137
Replacing bulb for low-beam
headlight, 137
Replacing bulb for number-
plate light, 146
Replacing bulb for parking
light, 141
Replacing bulbs for front and
rear turn indicators, 144
Replacing LED auxiliary
headlights, 148
Replacing LED rear light, 148
Technical data, 184
Warning for defective bulb, 37

Lights

automatic daytime riding
light, 58
Control, 15
Headlight flasher, operating, 56

- High-beam headlight, operating, 56
- Low-beam headlight, 55
- Manual daytime riding light, 57
- Operating LED auxiliary headlights, 56
- Parking lights, 56
- Side light, 55
- Luggage
 - Instructions for loading, 90

M

- Maintenance
 - General instructions, 118
 - Maintenance schedule, 193
- Maintenance intervals, 190
- Mirrors
 - adjusting, 82
- Mobility services, 190
- Motorcycle
 - Care, 169
 - Cleaning, 169
 - Lashing, 102
 - Laying up, 172
 - Parking, 98

- Multifunction display, 18
 - Control, 15
 - Operation, 60
 - Overview, 22, 24, 25
 - Select display, 60
 - Selecting multifunction display view, 60
- Multifunction switch
 - General view, left side , 15
 - General view, right side, 17

O

- Odometer
 - Resetting, 62

P

- Parking, 98
- Parking light, 56
- Power socket
 - Notes on use, 156
 - Position on the vehicle, 13
- Pre-Ride-Check, 93

R

- RDC
 - Adhesive label for rim, 129
 - Engineering details, 113
- Rear-wheel drive
 - Technical data, 180
- Rear-wheel stand
 - Installing, 120
- Refuelling, 99, 101
 - with Keyless Ride, 101
- Remote control
 - Replacing battery, 54
- Rev. counter, 18
- Rider's Manual
 - Position on the vehicle, 14
- Riding mode
 - adjusting, 73
 - Control, 17
 - Engineering details, 112
- Running gear
 - Technical data, 181
- Running in, 95

S

- Safety instructions
 - for brakes, 97
 - For riding, 90
- Seat
 - Position of the height adjustment, 14
- Seats
 - Lock, 11
 - Removing and installing, 84
- Service, 190
 - Warning, 39
- Service-due indicator, 42
- Shift assistant, 96, 115
- Shifting gear
 - Recommendation to upshift, 45
- Silencer
 - Securing silencer, 136
 - Silencer, swivelling, 135
- Spark plugs
 - Technical data, 184
- Speedometer, 18
- Spring preload
 - Adjuster, rear, 13
 - adjusting, 85

- Starting, 92
 - Control, 17
- Steering lock
 - Locking, 48

T

- Technical data
 - Anti-theft alarm, 185
 - Battery, 184
 - Brakes, 182
 - Clutch, 179
 - Dimensions, 186
 - Electrics, 183
 - Engine, 177
 - Engine oil, 179
 - Frame, 185
 - Fuel, 178
 - Lighting, 184
 - Rear-wheel drive, 180
 - Running gear, 181
 - Spark plugs, 184
 - Standards, 7
 - Transmission, 180
 - Weights, 187
 - Wheels and tyres, 182
- Telltale lights, 18
 - Overview, 20
- Toolkit
 - Contents, 118
 - Position on the vehicle, 14
- Topcase
 - Operation, 160
- Torques, 175
- Transmission
 - Technical data, 180
- Troubleshooting chart, 174
- Turn indicators
 - Control, 15
 - Operation, 59
- Type plate
 - Position on the vehicle, 13
- Tyre pressure monitoring RDC
 - Reading, 44
- Tyres
 - Checking tread depth, 128
 - Pressures, 183
 - Recommendation, 128
 - Running in, 96
 - Table of tyre pressures, 14

Technical data, 182
Top speed, 91

V

Vehicle
 Restoring to use, 172
Vehicle Identification Number
 Position on the vehicle, 13

W

Warning lights, 18
 Overview, 20
Warnings
 ABS, 39
 Anti-theft alarm, 39
 Battery charge voltage, 38
 Bulb faulty, 37
 Coolant temperature, 32
 Engine control unit, 33
 Engine electronics, 33
 Engine oil level, 34
 Engine temperature, 32
 Fuel reserve, 41
 Immobiliser, 31
 Mode of presentation, 26

 Outside temperature
 warning, 31
 Service, 39
 Undervoltage, 37
Warnings, overview, 27
Weights
 Payload table, 14
 Technical data, 187
Wheels
 Change of size, 129
 Checking rims, 128
 Installing front wheel, 131
 Installing the rear wheel, 134
 Removing front wheel, 129
 Technical data, 182

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

Original rider's manual, printed in Germany.

© 2015 Bayerische Motoren
Werke Aktiengesellschaft
80788 Munich, Germany
Not to be reproduced by any
means whatsoever, wholly or
in part, without the written permission of BMW Motorrad, After Sales.

Fuel

Tyre pressures

BMW recommends ADVANTEC
ORIGINAL BMW ENGINE OIL

