


BMW Motorrad

Workshop installation guide

Adapter plate for topcaseLight

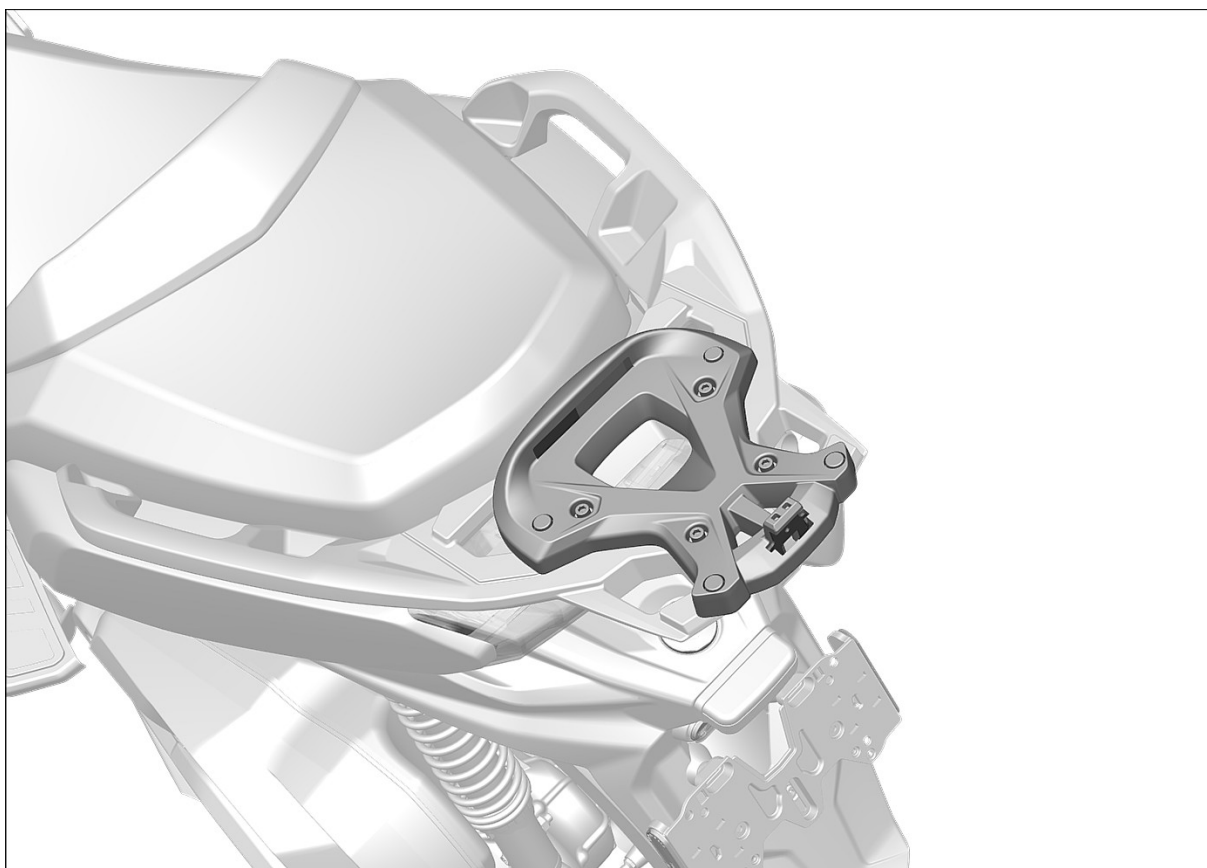

Before commencing work, you must read these installation instructions through carefully and make sure you understand them fully.

BMW Motorrad recommends having this installation kit installed by a specialist workshop with the requisite special tools, preferably an authorised BMW Motorrad dealer.

Incorrect installation and incorrect handling give rise to considerable safety risks.

The symbols used to draw attention to precautionary statements in this manual are as follows:



CAUTION

Low-risk hazard. Non-avoidance can lead to slight or moderate injury.



WARNING

Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.



DANGER

High-risk hazard. Non-avoidance leads to fatal or severe injury.



ATTENTION

Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.



NOTICE

Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.



Tightening torque

Screws, bolts and nuts are tightened in accordance with the applicable DIN/ISO standards. Tightening torques that deviate from the standards are stated. Non-compliance can result in damage to the vehicle or accessories or can endanger the driver.

- Start of the main activity
- ▷ Start of the secondary activity
- Instruction

- ◄ End of the main activity
- ◁ End of the secondary activity
- ◇ End of validity designation CS (construction status), OE (optional extra) or OA (optional accessory)

© 2019 Bayerische Motoren Werke Aktiengesellschaft
80788 Munich, Germany

Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Printed in Germany.


Subject to change without notice. Errors and omissions excepted.

All rights reserved.

Adapter plate for topcaseLight

Requisite tools

- Set of hexagon socket wrenches
- Torque wrench

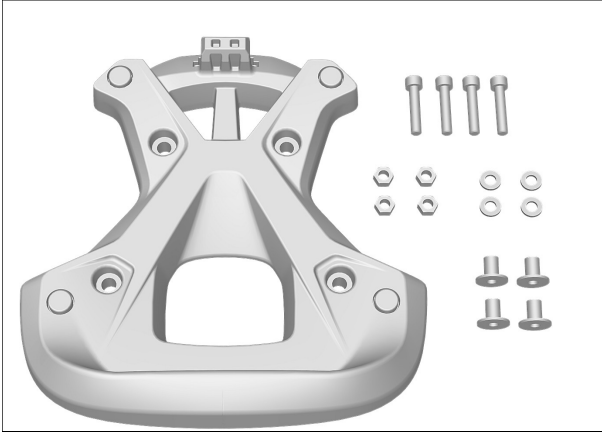

Delivery specification

- | | |
|----------------------------------|----------|
| – Adapter plate for topcaseLight | 4 pieces |
| – Cylinder head bolt, M6 X 30 | 4 pieces |
| – Hexagon nut, M6 | 4 pieces |
| – Washer | 4 pieces |
| – Shouldered bushing | 4 pieces |

General instructions

ATTENTION

Vehicle not securely propped

Risk of damage to parts if vehicle topples

- Prop the vehicle securely.

77 44 064 Fit adapter plate for topcase light


– with luggage carrier^{OA}



NOTICE

Fitting the adapter plate for topcase Light is possible only in conjunction with luggage rack.◇

1

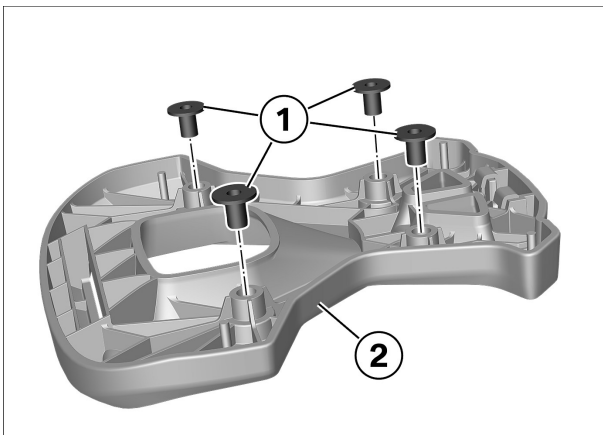


► Install shouldered bushings in adapter plate for topcase Light

- Insert shouldered bushings (1) in adapter plate (2).




2

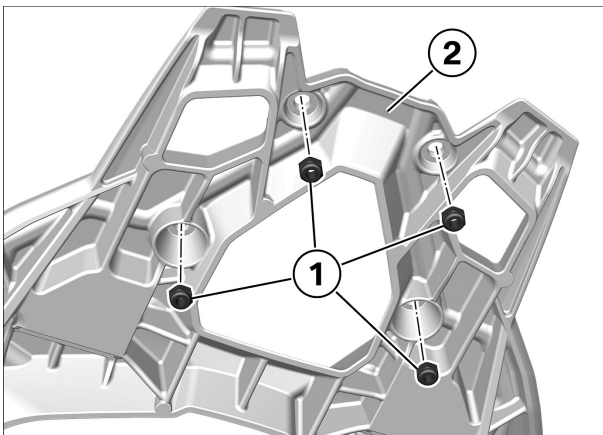

► Install adapter plate for topcase Light

- Insert nuts (1) in luggage carrier (2).

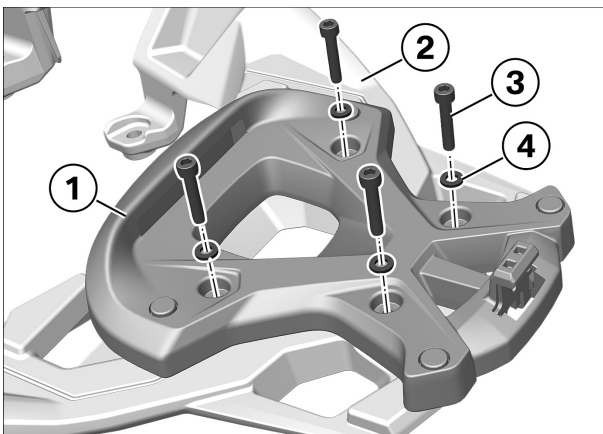

- Position adapter plate (1) for topcase Light on luggage carrier (2) and install screws (3) with washers (4).



Tightening torques

Adapter plate for topcase Light on luggage rack

M6 x 30

8 Nm

► **Final check of work performed**

- Check the following:
 - The work as performed achieved the intended purpose.
 - All reservoirs and containers have been filled and all fluids and lubricants are at their correct levels.
 - All threaded fasteners released beforehand have been correctly retightened.
 - The fuel system is free of leaks.
 - The lights and signalling equipment are fully operational and the vehicle is roadworthy.
 - The brake pads of the front and rear brakes are bedded against the brake discs.

▷ **Function test, engine start suppression**

Check

- Switch on the ignition.
- Set kill switch to operating position (run).
- Extend the side stand.
- Press the starter button.
 - » Starter does **not** operate.
- Retract the side stand.
- Press the starter button.
 - » Starter does **not** operate.
- With the brakes applied, press the starter button.
 - » Starter operates.
- Open the **rear** stowage compartment.
- With the brakes applied, press the starter button.
 - » Starter does **not** operate.

Result

Not all test steps completed successfully.

Measure

- Check the appropriate parts with the BMW Motorrad diagnostic system.◇



Always comply with the regulations regarding approval in the country of use.