



Installation instructions

CONNECTION, TANK BAG

S 1000 XR

MAKE LIFE A RIDE

BEFORE COMMENCING WORK, YOU MUST READ THESE INSTALLATION INSTRUCTIONS THROUGH CAREFULLY AND MAKE SURE YOU UNDERSTAND THEM FULLY.

We congratulate you on your choice of optional accessories from BMW Motorrad that will enable you to customise your motorcycle in accordance with your personal preferences.

Safety is invariably an essential prerequisite for extracting full benefit and enjoyment from new accessories. Some work calls for special tools and possibly a thorough knowledge of motorcycle technology. If you are in doubt consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Since we provide you with a multitude of accessories and optional equipment, we cannot cover all equipment specifications in these installation instructions. Therefore we restrict ourselves to the basic version of the corresponding model. The removal and installation of other possibly installed accessories is described in the corresponding installation instructions. Consult your authorised BMW Motorrad dealer if you no longer have access to the sets of instructions you need.

If you have questions concerning your motorcycle or any of the accessories from our range, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We at BMW Motorrad hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe.

THE SYMBOLS USED TO DRAW ATTENTION TO PRECAUTIONARY STATEMENTS IN THIS MANUAL **ARE AS FOLLOWS:**



Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

∕!\ DANGER

High-risk hazard. Non-avoidance leads to fatal or severe injury.

NOTICE

Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.

- Start of the main activity
- Start of the secondary activity
- Instruction

∕!\ WARNING

Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

ATTENTION

Special notes and precautionary measures. Non -compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

ិ Tightening torque

Screws, bolts and nuts are tightened in accordance with the applicable DIN/ISO standards. Tightening torques that deviate from the standards are stated. Noncompliance can result in damage to the vehicle or accessories or can endanger the driver.

- End of the main activity
- End of the secondary activity
- End of validity designation CS (construction) status), OE (optional extra) or OA (optional accessory)

© 2021 Bayerische Motoren Werke Aktiengesellschaft 80788 Munich, Germany

Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Printed in Germany.

Subject to change without notice. Errors and omissions excepted.

All rights reserved.

Connection, tank bag

Requisite tools

- Set of Torx bits
- Torque wrench



Delivery specification

- Set for connection, tank bag

General instructions



Vehicle not securely propped

Risk of damage to parts if vehicle topples

• Prop the vehicle securely.

WARNING

Children and pets in the working area

Injury to persons

• Keep children and pets away from the working area.

A CAUTION

Wearing jewellery during work

Risk of injury by snagging or electrical short circuit

· Remove all items of personal jewellery (rings, chains, wristwatch, etc.) before starting work.


NOTICE

Once the retrofit kit has been installed by the workshop, these installation instructions must be handed over to the customer.

Make sure that these installation instructions accompany the retrofit kit when it is passed on to a third party.

77 45 006 Installing attachment for tank rucksack


1

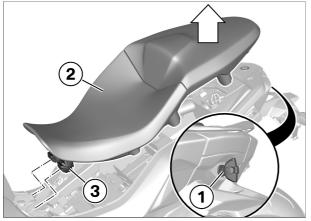

► Removing seat


• Unlock seat lock (1) with ignition key, lift seat (2) at rear and remove with buffers (3) from holder.

2

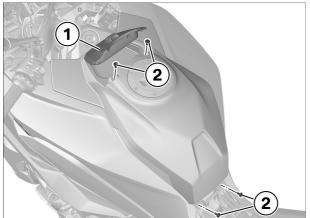

► Removing the centre cover of fuel tank


- Open storage compartment lid (1).
- Remove screws (2).

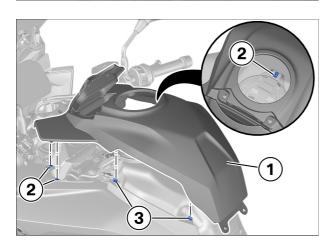

• Remove cover (1) to the top, detaching it from the retaining clips (2) and from the retaining lugs (3) on the left and right.


4

3

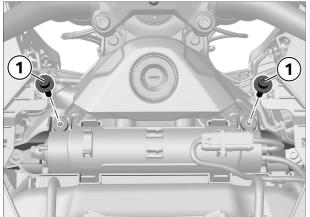

► Installing retaining bracket for tank bag

Remove screws (1) and lay them safely aside (will be reused).

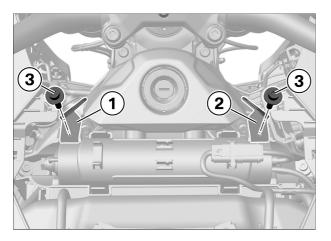


• Fit retaining plate on left (1) and right (2) and install bolts (3).

Tightening torques		
Bracket for adjuster to frame		
M6x30	8 Nm	

» Retaining plates remain permanently installed on the motorcycle.


◂



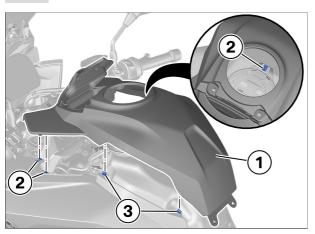


► Installing centre cover of fuel tank

• Install cover (1) securing it on left and right in retaining clips (2) and on retaining lugs (3).

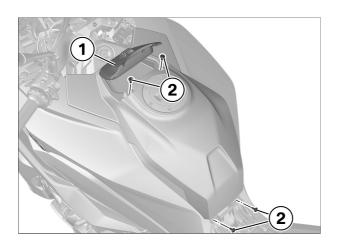


- Install screws (2).
- Close storage compartment cover (1).

5

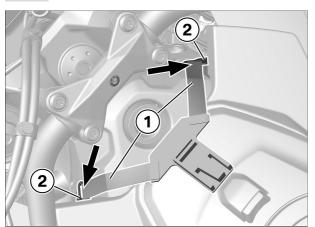

► Installing connections for tank bag


• Work straps (1) into retaining brackets on left (2) and right (3) and close hook and loop fasteners (arrows).

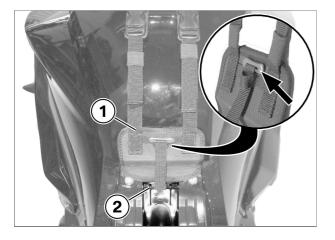

• Work strap from rear attachment element (1) through standard provided holder (2) and close closure (arrow).

•



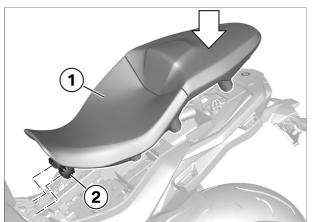

Installing seat

- Insert seat (1) with buffers (2) in holder and install.
- » Seat (1) engages with audible click.

◂

7

► Final check of work performed

- Check the following:
- The work as performed achieved the intended purpose.
- All reservoirs and containers have been filled and all fluids and lubricants are at their correct levels.
- All threaded fasteners released beforehand have been correctly retightened.
- The fuel system is free of leaks.
- The lights and signalling equipment are fully operational and the vehicle is roadworthy.
- The brake pads of the front and rear brakes are bedded against the brake discs.

▶ Function test, engine start suppression

Check

- Set kill switch to "ON" position.
- Select neutral.
- Switch on the ignition.
- » Neutral indicator light "N" lights up.
- Select a gear.
- » Neutral indicator light "N" goes out.
- Press the starter button.
- » Starter does not operate.
- Extend the side stand.
- Pull the clutch lever.
- Press the starter button.
- » Starter does not operate.
- Retract the side stand.
- Press the starter button without releasing the clutch lever.
- » Starter operates.

Result

Not all test steps completed successfully.

Measure

• Check the appropriate parts with the BMW Motorrad diagnostic system.

