



BMW Motorrad



Rider's manual

**C 400 GT**

## Vehicle data/dealership details

### Vehicle data

---

Model

---

Vehicle Identification Number

---

Colour code

---

Date of first registration

---

Registration number

### Dealership details

---

Person to contact in Service department

---

Ms/Mr

---

Phone number

---

Dealership address/phone number (company stamp)

## Welcome to BMW

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

### About this Rider's Manual

Please read this Rider's Manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features. In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

This record of the maintenance work you have had performed on

your vehicle is a precondition for generous treatment of goodwill claims.

If the time comes to sell your BMW, please remember to hand over this Rider's Manual to the new owner. It is an important part of the vehicle.

### Suggestions and criticism

If you have questions concerning your vehicle, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 40 8 403 491



# Table of Contents

<b>1 General instructions ....</b>	<b>5</b>	<b>3 Status indicators .....</b>	<b>25</b>	Turn indicators .....	74
Overview .....	6	Indicator and warning		Reading .....	74
Abbreviations and		lights .....	26	SETUP .....	76
symbols .....	6	Multifunction display .....	27	Automatic Stability Control	
Equipment .....	7	Warnings .....	28	(ASC) .....	77
Technical data .....	7	Service-due indicator .....	39	Date and time .....	81
Currentness .....	8	Oil level .....	39	Heated handlebar grips .....	83
Additional sources of informa-		Ambient temperature .....	40	Seat heating .....	84
tion .....	8	Indicator and warning lights		Seat .....	85
Certificates and operating li-		with Connectivity .....	41	Stowage compartments .....	86
cences .....	8	TFT display in Pure view ....	42	<b>5 TFT display .....</b>	<b>89</b>
Data memory .....	8	TFT display in the View		General instructions .....	90
<b>2 General views .....</b>	<b>13</b>	menu .....	43	Principle .....	91
General view, left side .....	15	Indicator lights with Con-		Pure and Urban views .....	97
General view, right side .....	17	nectivity .....	44	General settings .....	98
Underneath the seat .....	18	<b>4 Operation .....</b>	<b>63</b>	On-board computer with	
Multifunction switch, left ....	19	Ignition with Key-		Connectivity .....	99
Multifunction switch,		less Ride .....	64	Bluetooth .....	100
right .....	20	Emergency off switch (kill		My vehicle .....	104
Operating area .....	21	switch) .....	68	Navigation .....	107
Instrument panel .....	22	Lights .....	68	Media .....	109
Instrument cluster with Con-		Day run lights .....	69	Phone .....	109
nectivity .....	23	Hazard warning lights sys-		Display software	
		tem .....	73	version .....	110

Display licence information .....	110
<b>6 Anti-theft alarm.....</b>	<b>111</b>
Overview .....	112
Activation .....	112
Alarm function.....	114
Deactivation .....	116
Programming.....	116
<b>7 Adjustment.....</b>	<b>119</b>
Mirrors .....	120
Headlight.....	120
Spring preload .....	120
<b>8 Riding.....</b>	<b>123</b>
Safety information.....	124
Comply with checklist .....	125
Starting.....	126
Riding .....	128
Running in .....	129
Brakes .....	129
Park Scooter .....	130
Refuelling .....	131
Securing vehicle for transport .....	133

<b>9 Engineering details .....</b>	<b>135</b>
General instructions .....	136
Anti-lock brake system (ABS).....	136
Automatic Stability Control (ASC) .....	138
<b>10 Maintenance.....</b>	<b>141</b>
General instructions .....	142
Standard tool kit.....	142
Front-wheel stand.....	142
Engine oil .....	144
Brake system .....	145
Coolant.....	149
Tyres.....	150
Rims and tyres .....	150
Wheels .....	151
Fuses .....	162
Lighting .....	164
Battery .....	164
Body panels.....	170
Diagnostic connector.....	172

<b>11 Accessories .....</b>	<b>175</b>
General instructions .....	176
Power socket .....	176
Topcase.....	177
Navigation system.....	179
<b>12 Care .....</b>	<b>183</b>
Care products.....	184
Washing the vehicle.....	184
Cleaning easily damaged components.....	185
Care of paintwork .....	186
Vehicle preservation.....	186
Lay up the Scooter.....	186
Put Scooter into operation .....	186
<b>13 Technical data .....</b>	<b>187</b>
Troubleshooting chart.....	188
Screw connections .....	192
Fuel .....	194
Engine oil .....	194
Engine .....	195
Clutch .....	196
Transmission.....	196
Rear-wheel drive .....	196
Frame .....	196

Chassis and suspension .....	197
Brakes .....	197
Wheels and tyres.....	198
Electrical system .....	200
Anti-theft alarm.....	202
Keyless Ride .....	202
Dimensions .....	203
Weights .....	203
Riding specifications .....	204

## **14 Service ..... 205**

BMW Motorrad Service ...	206
BMW Motorrad Service history.....	206
BMW Motorrad mobility services .....	207
Maintenance work.....	207
Maintenance schedule ....	209
Maintenance confirmations.....	210
Service confirmations .....	227

## **15 Appendix..... 229**

Certificate for electronic immobiliser .....	230
Certificate for Keyless Ride .....	232
Certificate for TFT instrument cluster.....	234

## **16 Index ..... 237**

## General instructions

Overview .....	6
Abbreviations and symbols .....	6
Equipment .....	7
Technical data .....	7
Currentness .....	8
Additional sources of information ....	8
Certificates and operating licences .....	8
Data memory .....	8

## Overview

Chapter 2 of this Rider's Manual contains an initial overview of your Scooter. Chapter 12 documents all the service and maintenance tasks that have been carried out. This record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims.

If you sell your Scooter some day, please also remember to hand over the Rider's Manual; it is an important element of your vehicle.

## Abbreviations and symbols



**CAUTION** Low-risk hazard. Non-avoidance can lead to slight or moderate injury.



**WARNING** Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.



**DANGER** High-risk hazard. Non-avoidance leads to fatal or severe injury.



**ATTENTION** Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.



**NOTICE** Specific instructions on how to operate, control, adjust or look after items of equipment on the vehicle.



Indicates the end of an item of information.



Instruction.



Result of an activity.



Reference to a page with more detailed information.



Indicates the end of a passage relating to specific accessories or items of equipment.



Tightening torque.



Technical data.

NV

National-market version.

OE

Optional extras.

The vehicles are assembled complete with all the BMW Motorrad optional extras originally ordered.



OA	Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
EWS	Electronic immobiliser.
DWA	Anti-theft alarm (Diebstahlwarnanlage).
ABS	Anti-lock brake system.
ASC	Automatic Stability Control.
CVT	Continuously Variable Transmission. Transmission with continuously variable ratio

## Equipment

When purchasing your Scooter, you chose a model with individual equipment. This rider's manual describes optional equipment (OE) and selected optional accessories (OA) provided by BMW. Please make allowance for the fact that some equipment specifications may be described that you have not selected. Please note, too, that your vehicle might not be exactly as illustrated in this manual on account of country-specific differences.

If your Scooter contains equipment that is not described in this rider's manual, this equipment will be described in a separate manual.

## Technical data

All dimensions, weights and power outputs in the rider's manual refer to the German standard DIN (Deutsches Institut für Normung e. V.) and comply with its specified tolerances. Technical data and specifications in this rider's manual serve as reference points. The vehicle-specific data may deviate from these, for example as a result of selected optional equipment, the national-market version or country-specific measuring procedures. Detailed values can be taken from the vehicle registration documents and signs on the vehicle, or can be obtained from your authorised BMW Motorrad Retailer or another qualified service partner or specialist workshop. The specifications in the vehicle documents always have priority

over the information provided in this rider's manual.

## Currentness

The high safety and quality level of BMW Scooters is ensured by constant further development in the areas of design, equipment and accessories. Because of this, your vehicle may differ from the information supplied in the rider's manual. Also, mistakes cannot be completely excluded by BMW Motorrad. Please therefore understand that we do not accept any liability for claims arising from incorrect information, drawings and descriptions.

## Additional sources of information

### BMW Motorrad Retailer

Your BMW Motorrad Retailer will be happy to answer any questions you may have.

## Internet

The rider's manual for your vehicle, operating and installation instructions for any accessories and general information on BMW Motorrad, for example relating to technology, are available at **[www.bmw-motorrad.com/service](http://www.bmw-motorrad.com/service)**.

## Certificates and operating licences

The certificates for the vehicle and the official operating licences for any accessories are available at **[www.bmw-motorrad.com/certification](http://www.bmw-motorrad.com/certification)**.

## Data memory

### General

Control units are installed in the vehicle. Control units process data that they receive, for example, from vehicle sensors, or that they generate themselves or

exchange between each other. Some control units are required for the vehicle to function safely or provide assistance during riding, for example assistance systems. In addition, control units enable comfort or infotainment functions.

Information on data that has been stored or exchanged can be obtained from the manufacturer of the vehicle, for example via a separate booklet.

### Personal reference

Each vehicle is identified with a clear vehicle identification number. Depending on the country, the vehicle identification number, the number plate and the corresponding authorities can be referenced to ascertain the vehicle owner. There are also other ways to use data obtained from the vehicle to trace the rider or vehicle owner, for example

using the ConnectedDrive user account.

## Data protection rights

In accordance with applicable data protection laws, vehicle users have certain rights in relation to the manufacturer of the vehicle or in relation to companies which collect or process personal data.

Vehicle users have the right to obtain full information at no cost from persons or entities storing personal data of the vehicle user.

These entities may include:

- Manufacturer of the vehicle
- Qualified service partners
- Specialist workshops
- Service providers

Vehicle users have the right to request information on what personal data has been stored, for what purpose the data is used, and where the data comes from.

To obtain this information, proof of ownership or use is required.

The right to information also includes information about data that has been shared with other companies or entities.

The website of the vehicle manufacturer contains the applicable data protection information. This data protection information includes information on the right to have data deleted or corrected.

The manufacturer of the vehicle also provides their contact details and those of the data protection officer on their website.

The vehicle owner can also request that a BMW Motorrad Retailer or another qualified service partner or specialist workshop read out the data that is stored in the vehicle for a charge.

The vehicle data is read out using the legally prescribed socket for on-board diagnosis (OBD) in the vehicle.

## Legal requirements for the disclosure of data

As part of its legal responsibilities, the manufacturer of the vehicle is obligated to make its stored data available to the relevant authorities. This data is provided in the required scope in individual cases, for example to clarify a criminal offence.

In the context of applicable laws, public agencies are entitled in individual cases to read out data from the vehicle themselves.

## Operating data in the vehicle

Control units process data to operate the vehicle.

This includes, for example:

- Status reports of the vehicle and its individual components, for example wheel revolutions, wheel speed, deceleration

- Environmental conditions, for example temperature

The data is only processed in the vehicle itself and is generally non-permanent. The data is not stored beyond the operating period.

Electronic components, for example control units, contain components for storing technical information. Information can be temporarily or permanently stored on the vehicle condition, component loads, incidents or errors. This information is generally used to document the condition of a component, a module, a system or the surrounding area, for example:

- Operating conditions of system components, for example filling levels, tyre pressure
- Malfunctions and faults in important system components, for example light and brakes

- Response of the vehicle in special riding situations, for example engagement of the driving dynamics systems
- Information on incidents resulting in damage to the vehicle

The data is necessary for the provision of control unit functions. Furthermore, the data is used to detect and rectify malfunctions and to enable the vehicle manufacturer to optimise vehicle functions.

The vast majority of this data is non-permanent and is only processed in the vehicle itself. Only a small amount of the data is stored in incident or fault memories as required by events.

If services are accessed, for example repairs, service processes, warranty cases and quality assurance measures, this technical information can be read out of the

vehicle together with the vehicle identification number.

The information can be read out by a BMW Motorrad Retailer or another qualified service partner or specialist workshop. The legally stipulated socket for on-board diagnosis (OBD) in the vehicle is used to read out the data.

The data is obtained, processed and used by the relevant parts of the retailer network. The data is used to document the technical conditions of the vehicle, to help with error localization, to comply with warranty obligations and to improve quality.

In addition, the manufacturer has various product monitoring obligations arising from product liability legislation. To meet these obligations, the vehicle manufacturer requires technical data from the vehicle. The data from the vehicle can also be used to

check warranty claims from the customer.

Error and incident memories in the vehicle can be reset during servicing or repair work by a BMW Motorrad Retailer or another qualified service partner or specialist workshop.

## **Data input and data transfer in the vehicle**

### **General**

Depending on the equipment, comfort and customised settings can be stored in the vehicle and can be changed or reset at any time.

This includes, for example:

- Settings of the windscreen position
- Chassis and suspension settings

If required, data can be entered in the entertainment and commu-

nication system of the vehicle, for example using a smartphone.

Depending on the individual equipment, this includes:

- Multimedia data, such as music for playback
- Contacts data for use in connection with a communication system or an integrated navigation system
- Entered destinations
- Data on the use of internet services. This data can be stored locally in the vehicle or is located on a device that is connected to the vehicle, for example smartphone, USB stick, MP3 player. If this data is stored in the vehicle, the data can be deleted at any time.

This data is transferred to third parties only if personally requested within the context of using online services. This depends on

the selected settings when using the services.

### **Incorporation of mobile end devices**

Depending on the equipment, mobile end devices connected to the vehicle, for example smartphones, can be controlled using the operating elements of the vehicle.

The image and sound of the mobile end device can then be output via the multimedia system. At the same time, specific information is transferred to the mobile end device. Depending on the type of integration, this includes, for example, position data and additional general vehicle information. This enables optimal use of the selected apps, for example navigation or music playback.

The type of additional data processing is determined by the provider of the respective app.

The scope of the possible settings depends on the corresponding app and the operating system of the mobile end device.

## **Services**

### **General**

If the vehicle has a wireless connection, this enables the exchange of data between the vehicle and other systems. The wireless connection is enabled by the vehicle's own transmitter and receiver unit or using personally integrated mobile end devices, for example smartphones. Online functions can be used using this wireless connection. These include online services and apps that are provided by the vehicle manufacturer or by other providers.

### **Services of the vehicle manufacturer**

For online services of the vehicle manufacturer, the individual

functions are described at suitable points, for example rider's manual, website of the manufacturer. At the same time, information is also provided on the relevant data protection law. Personal data may be used to provide online services. Data is exchanged using a secure connection, for example with the IT systems provided by the vehicle manufacturer.

Obtaining, processing and using personal data outside of the normal provision of services requires legal permission, contractual agreement or consent. It is also possible to have the entire data connection activated or deactivated. Statutory functions are excluded from this.


### **Services from other providers**

When using online services from other providers, these services are subject to the responsibility and the data protection and

operating conditions of the individual provider. The vehicle manufacturer has no influence on the content that is exchanged in this instance. Information on the type, scope and purpose of the data capture and use of personal data as part of the services of third parties can be ascertained from the individual provider.





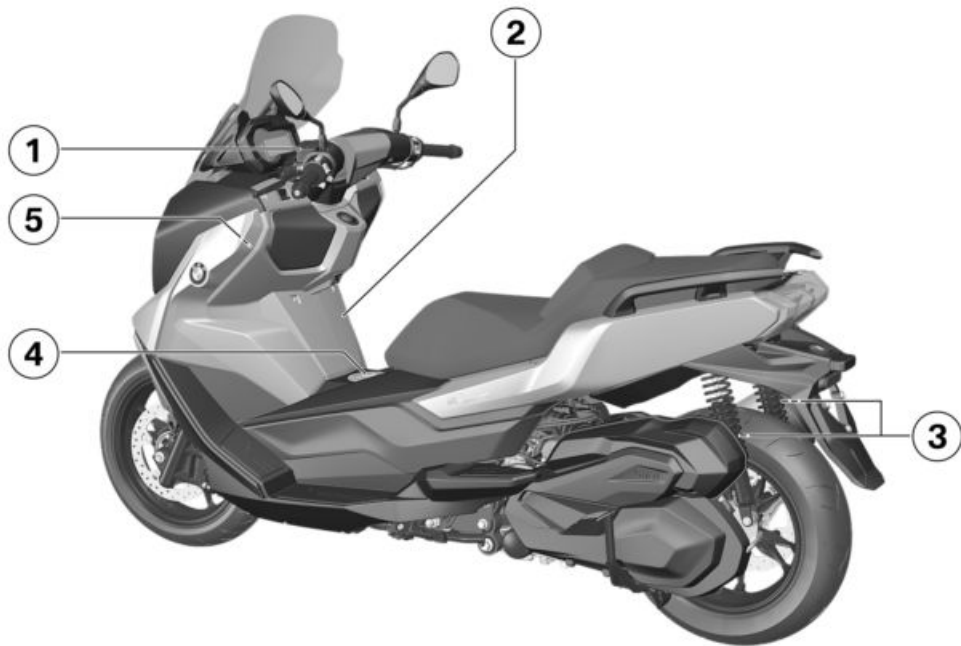


**General views**

General view, left side .....	15
General view, right side .....	17
Underneath the seat .....	18
Multifunction switch, left .....	19
Multifunction switch, right .....	20
Operating area .....	21
Instrument panel .....	22
Instrument cluster with Connectivity .....	23





## General view, left side

- 1** Brake fluid expansion tank  
for the rear wheel brake  
( 148)
- 2** Under the battery cover:  
Battery ( 164)  
Fuses ( 162)  
Diagnostic connector  
( 172)
- 3** Setting the spring preload  
( 120)
- 4** Fuel filler neck ( 131)
- 5** Coolant expansion tank  
(under left fairing side  
panel) ( 149)





## General view, right side

- 1** Brake fluid expansion tank for the front wheel brake (▮▮▮ 147)
- 2** Coolant-level indicator (▮▮▮ 149)
- 3** Type plate (on the right frame tube)  
Vehicle identification number (on right frame tube)
- 4** Oil filler neck and oil dipstick (▮▮▮ 144)
- 5** Emergency release for motorcycle seat  
Operate motorcycle seat (▮▮▮ 85).

## Underneath the seat

- 1 Rider's manual
- 2 Toolkit (➡ 142)
- 3 Payload table  
Table of tyre pressures  
Note: calibrate ASC
- 4 Unlocking of the rear  
storage compartment  
(BMW flexcase) (➡ 86)

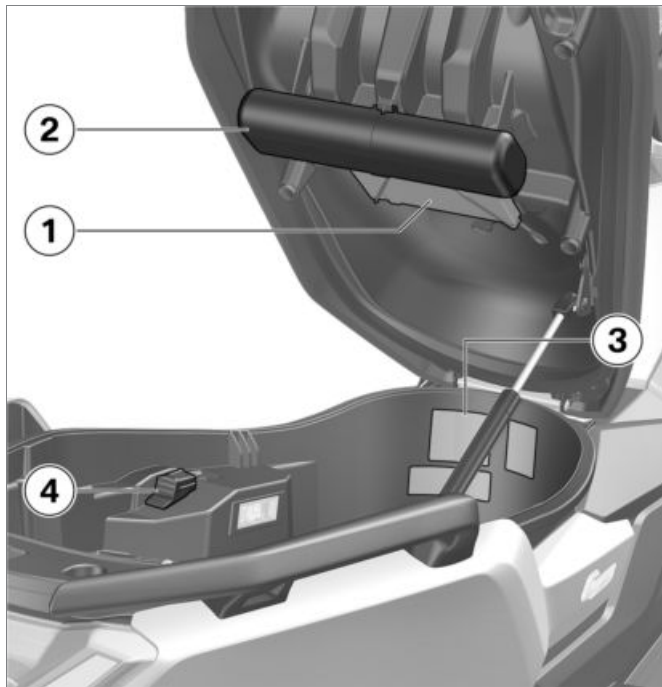

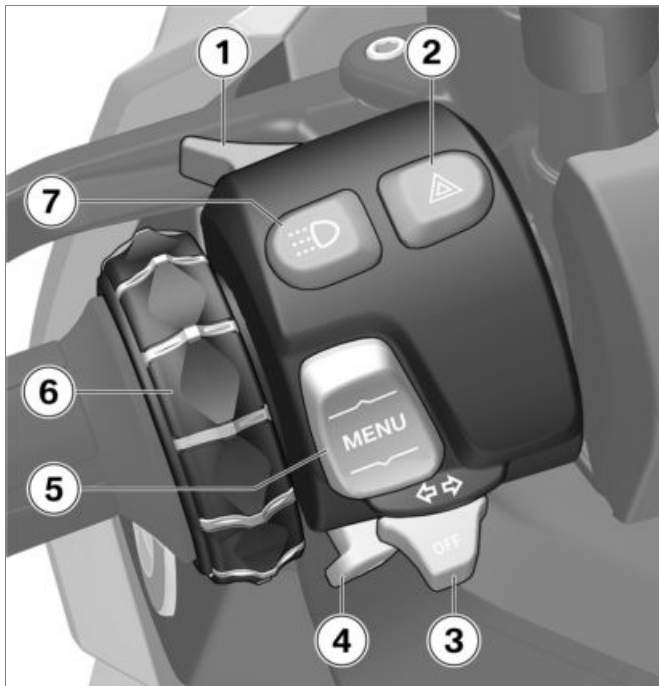



## Multifunction switch, left

- 1** High-beam headlight and headlight flasher (➡ 69)
- 2** Hazard warning lights system (➡ 73)
- 3** Turn indicators (➡ 74)
- 4** Horn
- 5** MENU rocker switch  
Select readings. (➡ 74)  
Open SETUP. (➡ 76)  
Operate TFT display. (➡ 91)
- 6** Multi-Controller Controls (➡ 91)
- 7** Day run lights  
– with daytime riding light<sup>OE</sup>  
Automatic daytime riding light (➡ 70).

## Multifunction switch, right

- 1 – with heated grips<sup>OE</sup>  
Operating the heated handlebar grips (➡ 83).  
Heated handlebar grips
- 2 – with seat heating<sup>OE</sup>  
Using the rider's seat heating (➡ 84).  
Seat heating
- 3 Emergency off switch (kill switch) (➡ 68)
- 4 Starter button (➡ 126)

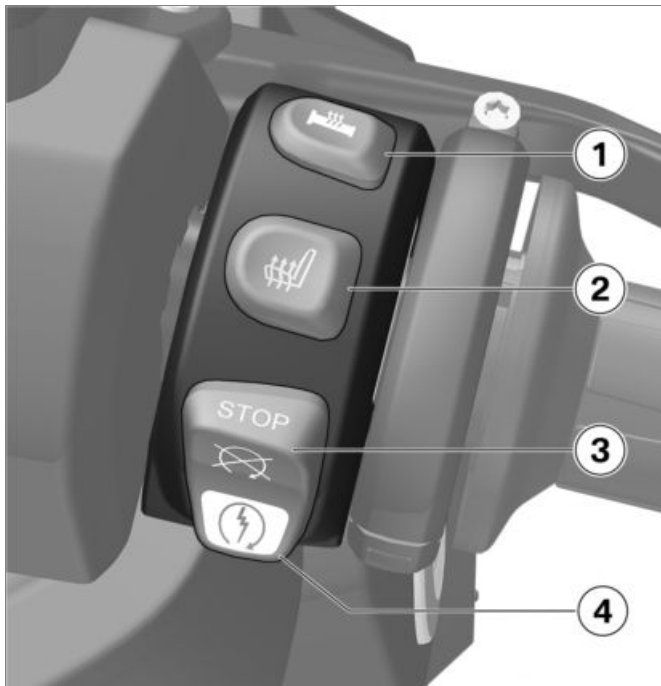

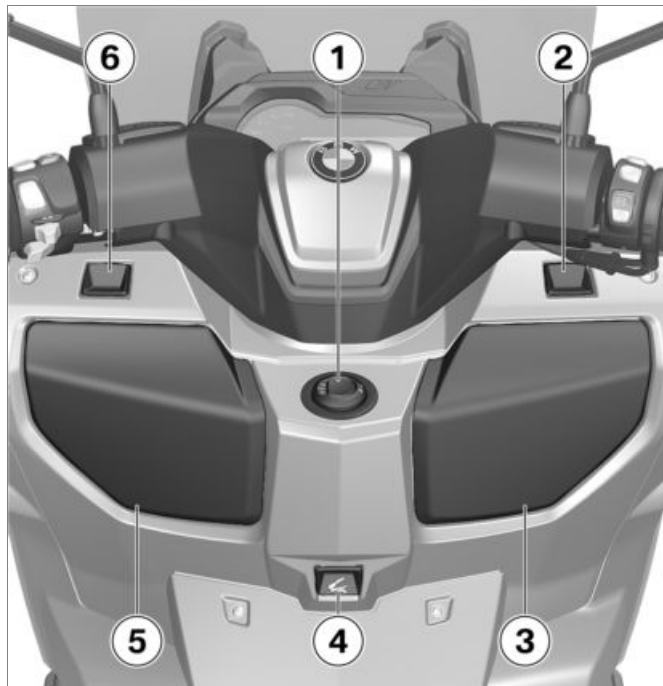

## Operating area

- 1** Control module for Keyless Ride (➡ 64)
- 2** Unlocking of the storage compartment, right (➡ 86)
- 3** Storage compartment, right (➡ 86)  
Socket (in the storage compartment) (➡ 176)
- 4** Unlocking of the motorcycle seat (➡ 85)
- 5** Storage compartment, left (➡ 86)
- 6** Unlocking of the storage compartment, left (➡ 86)

## Instrument panel

– without Connectivity<sup>OE</sup>


- 1 Speedometer
- 2 Indicator and warning lights
- 3 Multifunction display





## Instrument cluster with Connectivity

– with Connectivity<sup>OE</sup>

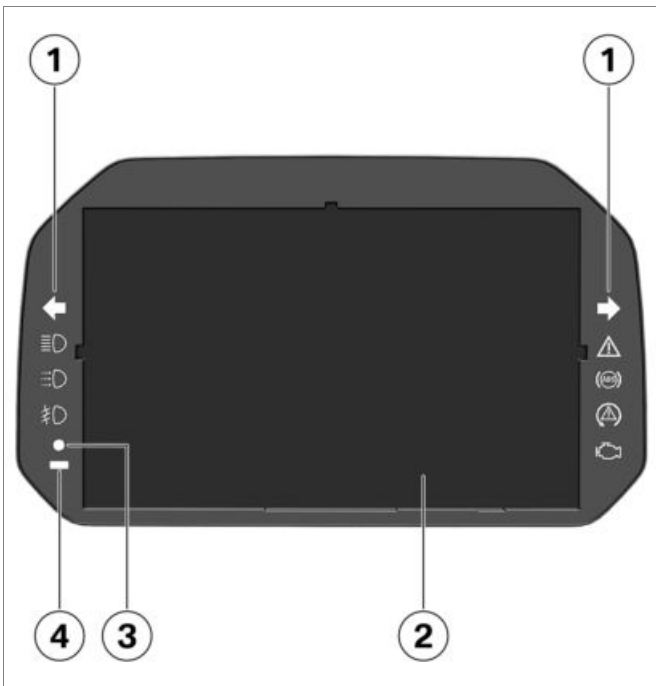

- 1** Indicator and warning lights with Connectivity (➡ 41)
- 2** TFT display (➡ 42) (➡ 43)
- 3** Alarm system LED  
– with anti-theft alarm (DWA)<sup>OE</sup>  
Alarm signal (➡ 114)
- 4** Photosensor (for adapting the brightness of the instrument lighting)





## Status indicators

Indicator and warning lights .....	26
Multifunction display .....	27
Warnings .....	28
Service-due indicator .....	39
Oil level .....	39
Ambient temperature .....	40
Indicator and warning lights with Connectivity .....	41
TFT display in Pure view.....	42
TFT display in the View menu .....	43
Indicator lights with Connectivity .....	44

## Indicator and warning lights

- 1** Turn indicators, left
- 2** Fuel reserve (►► 38)
- 3** High-beam
- 4** General warning light (►► 28)
- 5** Turn indicators, right
- 6** Alarm system LED (►► 114)
- 7** Additional headlight
- 8** ASC (►► 36)
- 9** Day run lights (►► 69)
- 10** ABS (►► 36)
- 11** Malfunction indicator lamp

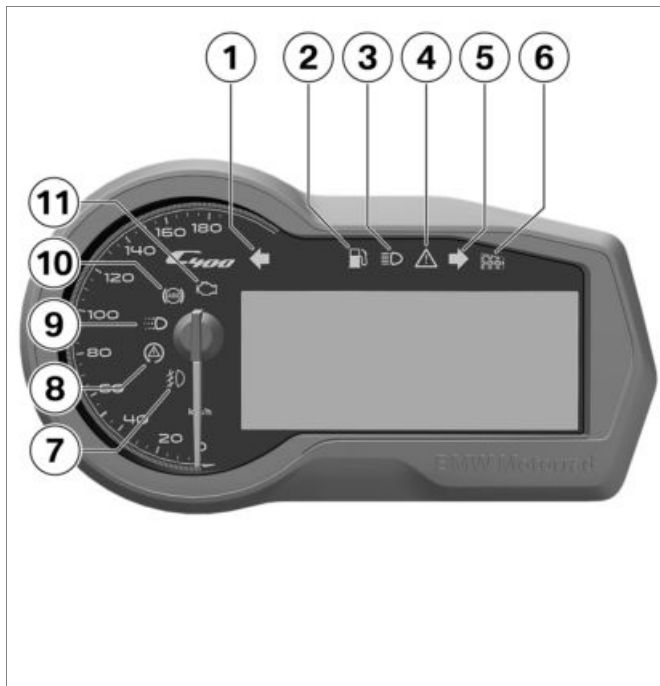

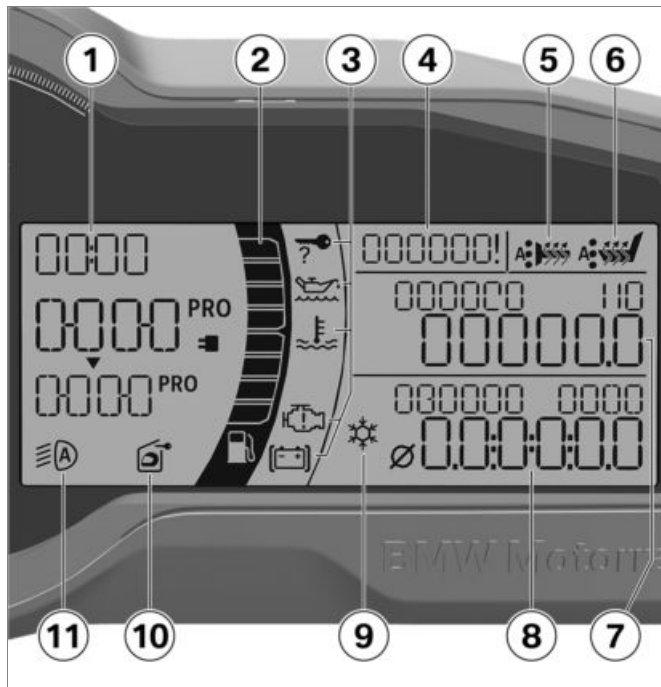


## Multifunction display

- 1 Clock (➡ 81)
- 2 Fuel-gauge reading
- 3 Warning symbols (➡ 28)
- 4 Text field for warnings (➡ 28)
- 5 Selected heating stage (➡ 83)
- 6 Selected heating stage (➡ 84)
- 7 Trip distance recorder (➡ 75)
- 8 Service display (➡ 39)
- 9 On-board computer displays (➡ 74)
- 10 Outside temperature warning (➡ 40)
- 11 BMW flexcase (➡ 86)
- Automatic for daytime riding light (➡ 71)

## Warnings

### Mode of presentation

Warnings are indicated by the corresponding warning lights.

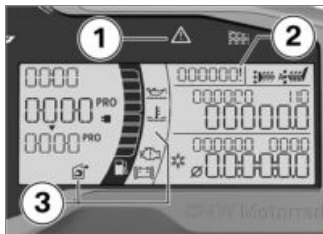













Warnings that do not have warning lights of their own are indicated by 'general' warning light **1** showing in combination with a text warning at position **2**, such as **LAMPF!** or a warning symbol **3** in the multifunction display. The 'general' warning light shows red or yellow, depending on the urgency of the warning.

If two or more warnings occur at the same time, all the appropriate warning lights and warning symbols appear, text warnings are alternated.

The possible warnings are listed on the following pages.


















## Warnings, overview

Indicator and warning lights	Display text	Meaning
	 is displayed	Outside temperature warning (►► 32)
 lights up yellow	 EWS warning symbol is displayed	EWS activated (►► 32)
 lights up yellow	 appears on the display	Radio-operated key outside of reception area (►► 32)
 lights up red	 is displayed	Coolant temperature too high (►► 33)
 lights up yellow	 is displayed	Engine-oil level too low (►► 33)
	OIL CHECK is displayed	
 lights up yellow	 is displayed	Engine in emergency-operation mode (►► 33)
 lights up yellow		Emissions warning (►► 34)

## Indicator and warning lights

## Display text

## Meaning

	lights up yellow	 flashes	Severe fault in the engine control (  34)
	lights up yellow	LAMPR ! is displayed	Rear light or rear turn indicator faulty (  35)
	lights up yellow	LAMPF ! is displayed	Headlight, additional headlight or turn indicator at front faulty (  35)
	lights up yellow	LAMPS ! is displayed	Several front and rear lights faulty (  35)
	flashes		ABS self-diagnosis not completed (  36)
	lights up		ABS fault (  36)
	quick-flashes		ASC intervention (  36)
	slow-flashes		ASC self-diagnosis not completed (  36)



## Indicator and warning lights

## Display text

## Meaning



lights up

ASC switched off (→ 36)



lights up

ASC fault (→ 37)



lights up

CAL flashes

ASC calibration not yet completed  
(→ 37)



lights up yellow



is displayed

BMW flexcase opened (→ 37)

DWALO! appears on  
the display

Anti-theft alarm battery weak (→ 37)



lights up yellow

DWALO! appears on  
the display

Anti-theft alarm battery flat (→ 38)



lights up red



is displayed

Insufficient battery charge current  
(→ 38)



lights up

Fuel down to reserve (→ 38)

## Outside temperature warning



Ice crystal symbol is displayed.

Possible cause:

The air temperature measured at the vehicle is lower than 3 °C.



### WARNING

#### Risk of black ice also applicable at over 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.◀
- Ride carefully and think well ahead.

## EWS activated



General warning light shows yellow.



EWS warning symbol is displayed.

Possible cause:

The ignition key being used is not authorised for starting, or communication between ignition key and engine electronics is disrupted.

- Remove any other ignition keys on the keyring.
- Use second ignition key.
- Have the defective ignition key replaced, preferably by an authorised BMW Motorrad dealer.

## Radio-operated key outside of reception area



General warning light shows yellow.



appears on the display.

Possible cause:

Communication between R/C key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- Replacing battery of remote key (▮▮▮ 67).
- Use the reserve key to continue your journey.
- Battery of radio-operated key is discharged radio-operated key is lost (▮▮▮ 66).
- Remain calm if the warning symbol appears while you are riding. You can continue your journey; the engine will not switch off.
- Have the defective radio-operated key replaced by an authorised BMW Motorrad Retailer.

## Coolant temperature too high



General warning light shows red.



Temperature symbol is displayed.



### ATTENTION

## Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential. ◀

Possible cause:

The coolant level is too low.

- Checking coolant level (111 ➔ 149).

If the coolant level is too low:

- Have the cooling system checked by a specialist workshop, preferably an

authorised BMW Motorrad Retailer.

Possible cause:

The coolant or engine oil temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- If the coolant or engine oil temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## Engine-oil level too low



General warning light shows yellow.



Oil level symbol is displayed.

OIL CHECK is displayed.

Possible cause:

The electronic oil-level sensor has registered an excessively low oil level. Check the engine oil level using the oil dipstick at the next refuelling stop:

- Checking engine oil level (111 ➔ 144).

If the oil level is too low:

- Topping up the engine oil.

## Engine in emergency-operation mode



General warning light shows yellow.



Engine symbol is displayed.

**WARNING****Unusual ride characteristics when engine running in emergency-operation mode**

Risk of accident

- Avoid accelerating sharply and overtaking.◀

Possible cause:

The engine control unit has diagnosed a fault. The engine is in emergency-operation mode.

- You can continue to ride, but bear in mind that the usual engine performance might not be available.
- » The malfunction indicator lamp lights up as well if pollutant emissions exceed the threshold values.
- » In exceptional cases, the engine stops and refuses to start.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad Retailer.

**Emissions warning**

The malfunction indicator lamp lights up yellow.

Possible cause:

The engine control unit has diagnosed a fault.

- Have the fault rectified by a specialist workshop at the next opportunity, preferably an authorised BMW Motorrad Retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

**Severe fault in the engine control**

General warning light shows yellow.



The engine symbol flashes.

**WARNING****Engine damage when running in emergency-operation mode**

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.◀

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults (e.g. overheating). The engine is in emergency-operation mode.

- Avoid high load and rpm ranges if possible.
- » We recommend that you stop riding.
- » The malfunction indicator lamp lights up as well if pollutant

emissions exceed the threshold values.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Rear light or rear turn indicator faulty



General warning light shows yellow.

LAMPR! is displayed.

Possible cause:

LED rear light faulty.

- The LED rear light must be replaced. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

Rear turn indicator faulty.

- The LED turn indicator must be replaced. Consult a specialist workshop, preferably an

authorised BMW Motorrad Retailer.

### Headlight, additional headlight or turn indicator at front faulty



General warning light shows yellow.

LAMPF! is displayed.

Possible cause:

LED headlight faulty.

- The LED headlight must be replaced. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

– without daytime riding light<sup>OE</sup>

LED side light faulty.

- The LED side light must be replaced. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

– with daytime riding light<sup>OE</sup>  
LED side light/daytime riding light faulty.

- The LED side light/daytime riding light must be replaced. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Several front and rear lights faulty



General warning light shows yellow.

LAMPS! is displayed.

Possible cause:

Several lights front and rear faulty.

- Please read the fault descriptions listed earlier.

## ABS self-diagnosis not completed



ABS indicator and warning light flashes.

Possible cause:

Self-diagnosis did not complete, so the ABS function is not available. The Scooter must be ridden at a speed of at least 5 km/h in order for ABS self-diagnosis to complete.

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

## ABS fault



ABS indicator and warning light shows.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available.

- Further riding is possible, although allowance must be made for the lack of the ABS function. Take note of the more detailed information on situations that can lead to an ABS fault (► 137).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## ASC intervention



ASC indicator and warning light flashing quickly.

The ASC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The ASC warning light flashes for longer than the ASC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

## ASC self-diagnosis not completed



ASC indicator and warning light flashing slowly.

Possible cause:



ASC self-diagnosis not completed

The Scooter has to reach a defined minimum speed with the engine running for the wheel speed sensors to be checked:

min 5 km/h

- Pull away slowly. Bear in mind that the ASC is not available until self-diagnosis has completed.

## ASC switched off



ASC indicator and warning light shows.

Possible cause:

The rider has switched off the ASC.

- ASC Switching on (▮▮▮▮➔ 78).

## ASC fault



ASC indicator and warning light shows.

Possible cause:

The ASC control unit has detected a fault.

- You can continue to ride. Bear in mind that the ASC is not available. Take note of the more detailed information on situations that can lead to an ASC fault (▮▮▮▮➔ 138).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## ASC calibration not yet completed



ASC indicator and warning light shows.

CAL flashes.

Possible cause:

The ASC calibration has not yet been completed

- Complete the ASC calibration or repeat.
- Calibrate ASC (▮▮▮▮➔ 79).
- Cancel ASC calibration: switch ignition off and on.

## BMW flexcase opened



General warning light shows yellow.



The storage compartment symbol is displayed.

Possible cause:

The BMW flexcase is opened.

- Close BMW flexcase.
- Close rear storage compartment (BMW flexcase) (▮▮▮▮➔ 86).

## Anti-theft alarm battery weak

– with anti-theft alarm (DWA)<sup>OE</sup>

DWALO! appears on the display.



### NOTICE

This error message shows briefly only after the Pre-Ride-Check completes.◀

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## Anti-theft alarm battery flat

– with anti-theft alarm (DWA)<sup>OE</sup>



General warning light shows yellow.

DWA!O! appears on the display.



### NOTICE

This error message shows briefly only after the Pre-Ride-Check completes.◀

Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the vehicle battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## Insufficient battery charge current



General warning light shows red.



Battery symbol is displayed.



### WARNING

## Failure of the vehicle systems

Risk of accident

- Do not continue your journey.◀

The battery will not be charged. By continuing to drive on, the vehicle electronics discharge the battery.

Possible cause:

Alternator or alternator drive faulty.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## Fuel down to reserve



The fuel reserve symbol lights up.



### WARNING

## Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.◀

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Reserve volume

approx. 4 l

- Refuelling (131).



## Service-due indicator



The **SERV T! 1** message and the service date **2** are displayed if the service is due within the month. This reading appears briefly after the Pre-Ride-Check completes.



The **SERV D! 3** message and the remaining distance **4** are shown and counted down in intervals of 100 kilometres (US model, 100 miles) if the service is due within 1000 kilometres (US model, 700 miles). This reading appears briefly after the Pre-Ride-Check completes.



If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow. The **SERV D!** or **SERV T!** messages are displayed permanently.



## NOTICE

If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected.◀

## Oil level



The oil-level indicator **1** gives you an indication of the engine oil level. You can call up this reading only when the vehicle is at a standstill.

The preconditions for the oil level check are as follows:

- Engine at operating temperature.
- Engine idling for at least ten seconds.
- Side stand retracted.
- Scooter standing upright.

The possible displays on items **1** and **2** signify:

OILLVL OK: oil level is correct.

OILLVL CHECK: check the oil level the next time you stop for fuel.

OILLVL -- -- --: oil level cannot be measured (conditions as stated above not satisfied).



If the oil level is too low, the corresponding warning symbol is displayed.


## Ambient temperature



The temperature display flashes as a warning of potential black ice if the ambient temperature drops to below 3 °C. Regardless of the display settings the display automatically switches over to the temperature display when the ambient temperature drops below this threshold for the first time.

## Indicator and warning lights with Connectivity

– with Connectivity<sup>OE</sup>

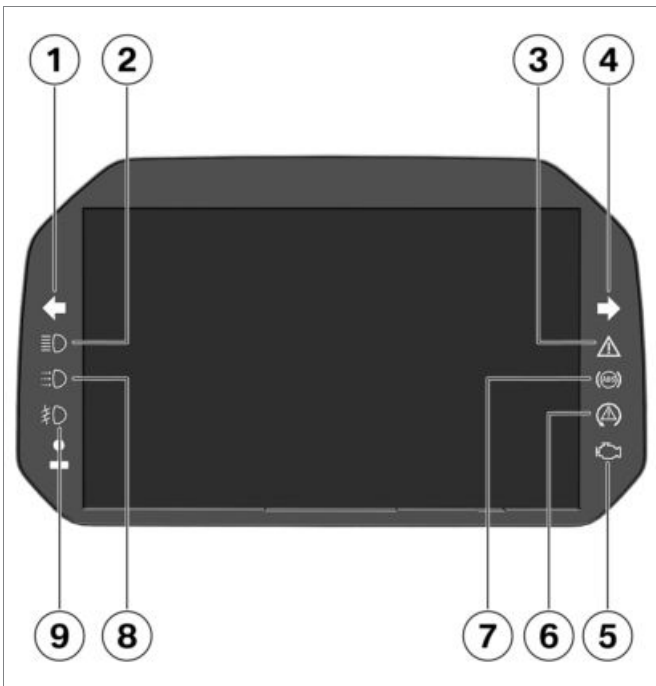



- 1** Turn indicators, left  
Operating the turn indicators (➡ 74).
- 2** High-beam headlight  
(➡ 69)
- 3** General warning light  
(➡ 44)
- 4** Turn indicators, right
- 5** - with export to EU markets<sup>NV</sup>  
Malfunction indicator lamp  
Emissions warning (➡ 55)
- 6** ASC (➡ 36)
- 7** ABS (➡ 36)
- 8** - with daytime riding light<sup>OE</sup>  
Manual daytime riding light  
(➡ 72).
- 9** - with additional headlight<sup>SA</sup>  
Auxiliary headlights

## TFT display in Pure view

– with Connectivity<sup>OE</sup>

- 1 Change of operating focus (➡ 95)
- 2 Speedometer
- 3 Rider info status line (➡ 95)
- 4 Speed Limit Info (➡ 97)
- 5 Clock (➡ 98)
- 6 Connection status (➡ 101)
- 7 Muting (➡ 98)
- 8 Operating help
- 9 Selected heating stage for heated grips (➡ 83)
- 10 Selected heating stage for seat heating (➡ 84)
- 11 Outside temperature warning (➡ 51)
- 12 Ambient temperature

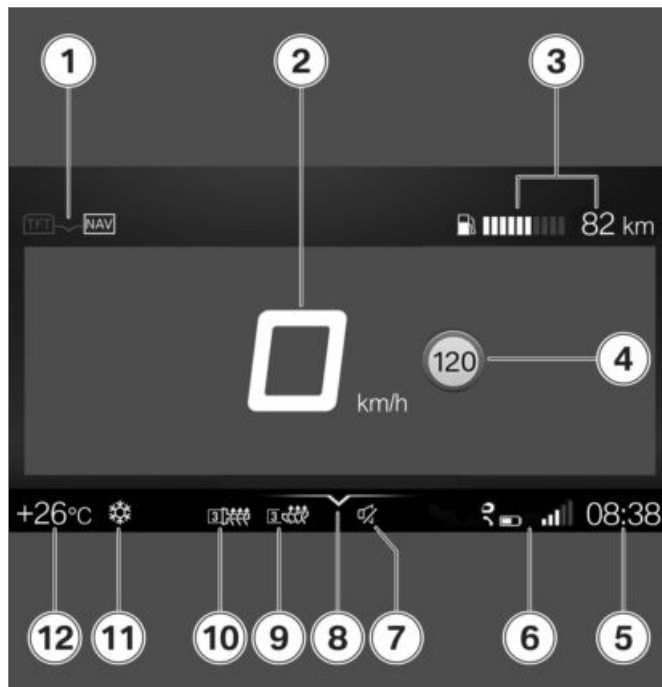

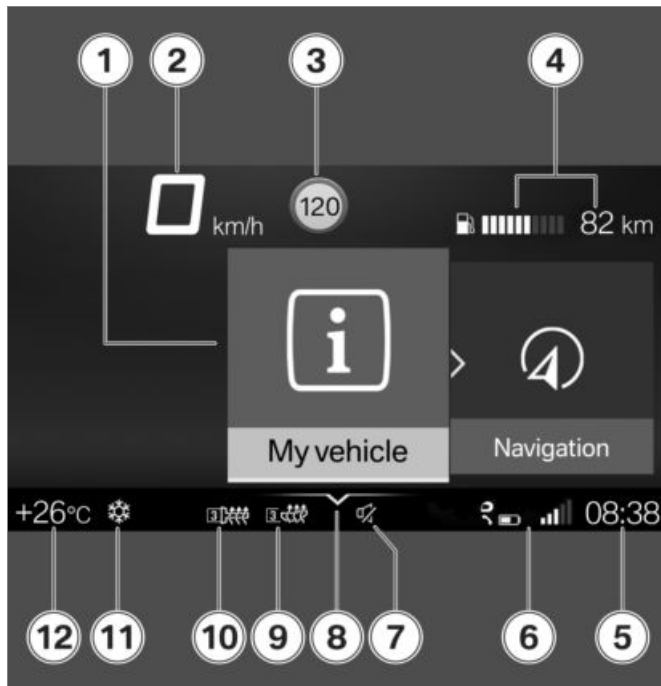

## TFT display in the View menu

– with Connectivity<sup>OE</sup>

- 1 Menu area
- 2 Speedometer
- 3 Speed Limit Info (➡ 97)
- 4 Rider info status line (➡ 95)
- 5 Clock  
Setting the clock (➡ 98).
- 6 Connection status  
Perform Bluetooth pairing (➡ 101).
- 7 Muting (➡ 98)
- 8 Operating help
- 9 Selected heating stage for heated grips (➡ 83)
- 10 Selected heating stage for seat heating (➡ 84)
- 11 Outside temperature warning (➡ 51)
- 12 Ambient temperature

## Indicator lights with Connectivity

### Mode of presentation

Warnings are indicated by the corresponding warning lights. Warnings are displayed by the general warning lights in conjunction with a dialogue box on the TFT display. The 'general' warning light shows yellow or red, depending on the urgency of the warning.



The status of the 'General' warning light matches the most urgent warning.


The possible warnings are listed on the following pages.



### Check control display

The messages on the display are shown in different ways. Different colours and symbols are used depending on priority:

- Green CHECK OK **1**: no message, optimum value.
- White circle with small "i" **2**: information.
- Yellow warning triangle **3**: warning message, value not ideal.
- Red warning triangle **3**: warning message, critical value

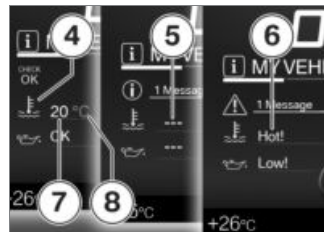

### Value display

The symbols **4** are shown in different ways. Depending on the evaluation, different colours are used. Instead of numerical values **8** with units **7**, text **6** is always used on the display:

### Colour of the symbol

- Green: (OK) Current value is ideal.
- Blue: (Cold!) Current temperature is too low.
- Yellow: (Low! /High!) Current value is too low or too high.

- Red: (Hot! /High!) Current temperature or value is too high.
- White: (---) There is no valid value. Dashes **5** are displayed instead of the value.



## NOTICE

The assessment of some values is only possible from a certain journey duration or speed. If a measured value is still not being displayed because the conditions for measurement have not been met, dashes are displayed instead as a placeholder. If there are no valid measured values, there will be no assessment in the form of a coloured symbol.◀



### Check control dialogue box

Messages are given in the form of a check control dialogue box **1**.

- If there are multiple check control messages of equal priority, the messages alternate in the order in which they occurred until they are acknowledged.
- If symbol **2** is actively displayed, it can be acknowledged by tilting the multi-controller to the left.
- Check Control messages are attached dynamically to the pages in the Vehicle menu as additional tabs (▶▶ 93). As













long as the problem persists, the message can be called up again.

## Warnings, overview

### Indicator and warning lights

### Display text

### Meaning















		is displayed	Outside temperature warning (►► 51)
	lights up yellow	 Remote key not in range.	Radio-operated key outside of reception area (►► 51)
	lights up yellow	 Remote key battery at 50%.	Replace the battery of the radio-operated key (►► 52)
		Remote key battery weak.	
	lights up yellow	 is displayed in yellow	Vehicle voltage too low (►► 52)
		Vehicle voltage low.	
	lights up red	 is displayed in red	Vehicle voltage critical (►► 52)
		Vehicle voltage critical!	



## Indicator and warning lights

## Display text













## Meaning

 lights up yellow	 The faulty light source is displayed.	Light source faulty (→ 53)
	 Alarm system battery weak.	Anti-theft alarm battery weak (→ 54)
 lights up yellow	 Alarm system battery empty.	Anti-theft alarm battery flat (→ 54)
	 Oil level too low! Check oil level.	Engine-oil level too low (→ 55)
 lights up red	 Coolant temperature too high!	Coolant temperature too high (→ 55)
 lights up yellow	 Engine!	Emissions warning (→ 55)
 lights up yellow	 No communication with engine control.	Engine control failed (→ 56)
 lights up yellow	 Fault in the engine control.	Engine in emergency-operation mode (→ 56)

## Indicator and warning lights

## Display text

## Meaning

	General warning light flashes yellow.		Serious fault in the engine control!	Severe fault in the engine control (➡ 56)
			Side stand monitoring faulty.	Side stand monitoring is faulty (➡ 57)
	flashes			ABS self-diagnosis not completed (➡ 36)
	ABS indicator and warning light shows.		Limited ABS availability!	ABS fault (➡ 57)
	ABS indicator and warning light shows.		ABS failure!	ABS failed (➡ 58)
	quick-flashes			ASC intervention (➡ 36)
	slow-flashes			ASC self-diagnosis not completed (➡ 36)
	lights up		Off!	ASC switched off (➡ 59)

## Indicator and warning lights

## Display text

## Meaning



Traction control deactivated.

ASC switched off (►► 59)



lights up



Traction control failure!

ASC fault (►► 59)



Engine st.  
not poss. BMW  
flexcase open.  
Close BMW  
flexcase.

BMW flexcase opened (►► 59)



Tank reserve  
level reached.  
Ride to the next  
filling station.

Fuel down to reserve (►► 59)



Turn signal indicator light flashes green.

Hazard warning lights system is switched on (►► 60)



Turn signal indicator light flashes green.

**Indicator and warning lights****Display text****Meaning**

is displayed in white

Service due (||||▶ 60)

Service due!



lights up yellow



is displayed in yellow

Service-due date has passed (||||▶ 60)

Service over-due!

## Ambient temperature

The ambient temperature is displayed status line of the TFT display.

When the motorcycle is at a standstill, the heat of the engine can falsify the ambient-temperature reading. If the heat of the engine is affecting it too much, dashes are temporarily shown in place of the value.



If the outside temperature falls below the following limit value, there is a risk of black ice.



Limit value for the ambient temperature

approx. 3 °C

Once the temperature has fallen below that value, the ambient temperature display along with a snowflake symbol flashes in the status line on the TFT display.

## Outside temperature warning



Ice crystal symbol is displayed.

Possible cause:

The air temperature measured at the vehicle is lower than 3 °C.



**WARNING**

### Risk of black ice also applicable at over 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.◀
- Ride carefully and think well ahead.

## Radio-operated key outside of reception area



General warning light shows yellow.



Remote key not in range. Do not stop engine. Not possible to restart the engine.

Possible cause:

Communication between R/C key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- Replacing battery of remote key (➡ 67).
- Use the reserve key to continue your journey.
- Battery of radio-operated key is discharged radio-operated key is lost (➡ 66).
- If a check control dialogue box appears during the journey, remain calm. You can continue

your journey; the engine will not switch off.

- Have the defective radio-operated key replaced by an authorised BMW Motorrad Retailer.

## Replace the battery of the radio-operated key



General warning light shows yellow.



Remote key battery at 50%. No functional impairment.



Remote key battery weak. Limited central locking function. Change battery.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the R/C key can remain operational.

- Replacing battery of remote key (→ 67).

## Vehicle voltage too low



General warning light shows yellow.



is displayed in yellow.



Vehicle voltage low. Switch off unnecessary consumers.



## WARNING

### Failure of the vehicle systems

Risk of accident

- Do not continue your journey.◀

The battery will not be charged.

By continuing to drive on, the vehicle electronics discharge the battery.



## NOTICE

The fuse for the alternator regulator can blow if the 12 V battery is installed incorrectly or if the terminals are swapped (e.g. when using a starting aid).◀

Possible cause:

Alternator or alternator drive faulty.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## Vehicle voltage critical



General warning light shows red.



is displayed in red.



Vehicle voltage critical! Consumers have

been switched off. Check battery condition.

## **WARNING**

### **Failure of the vehicle systems**

Risk of accident

- Do not continue your journey.◀

The battery will not be charged. By continuing to drive on, the vehicle electronics discharge the battery.

## **NOTICE**

The fuse for the alternator regulator can blow if the 12 V battery is installed incorrectly or if the terminals are swapped (e.g. when using a starting aid).◀


Possible cause:


Alternator or alternator drive faulty.


- Have the fault rectified as quickly as possible by a


specialist workshop, preferably an authorised BMW Motorrad Retailer.


### **Light source faulty**


 General warning light shows yellow.

 The faulty light source is displayed:


 High beam faulty!


 Front left turn indicator faulty! or  
Front right turn indicator faulty!


 Low-beam headlight faulty!


 Front side light faulty!

– with daytime riding light<sup>OE</sup>

 Daytime riding light faulty!◀

 Tail light faulty!

 Brake light faulty!

 Rear left turn indicator faulty! or  
Rear right turn indicator faulty!

– Have it checked by a specialist workshop.

## **WARNING**

### **Vehicle overlooked in traffic due to failure of the lights on the vehicle**

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Several lights front and rear faulty.

- Please read the fault descriptions listed earlier.

## Anti-theft alarm battery weak

– with anti-theft alarm (DWA)<sup>OE</sup>



Alarm system battery weak. No restrictions. Make an appointment at a specialist workshop.



### NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of

how long the anti-theft alarm can remain operational if the vehicle battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## Anti-theft alarm battery flat

– with anti-theft alarm (DWA)<sup>OE</sup>



General warning light shows yellow.



Alarm system battery empty. No independent alarm. Make an appointment at a specialist workshop.



### NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## Electronic oil-level check



The electronic oil-level check assesses the oil level in the engine with OK or Low!

The preconditions for the electronic oil-level check are as follows:

- Engine at operating temperature.
- Engine idling for at least ten seconds.
- Side stand folded in.



- Motorcycle standing upright on a smooth, level surface.

If these conditions are not met, it is not possible to measure the oil level. Dashes will appear on the display instead of a reading.

### Engine-oil level too low



Oil level too low!  
Check oil level.

Possible cause:

The electronic oil-level sensor has registered an excessively low oil level. Check the engine oil level using the oil dipstick at the next refuelling stop:

- Checking engine oil level (144).

If the oil level is too low:

- Topping up the engine oil.

### Coolant temperature too high



General warning light shows red.



Coolant temperature too high! Check coolant level. Continue under part. load to cool down.



### ATTENTION

### Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential. ◀

Possible cause:

The coolant level is too low.

- Checking coolant level (149).

If the coolant level is too low:

- Have the cooling system checked by a specialist

workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

The coolant or engine oil temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- If the coolant or engine oil temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Emissions warning



The malfunction indicator lamp lights up yellow.



Engine! Have it checked by a specialist workshop.

Possible cause:

The engine control unit has diagnosed a fault.

- Have the fault rectified by a specialist workshop at the next opportunity, preferably an authorised BMW Motorrad Retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

### Engine control failed



General warning light shows yellow.



No communication with engine control. Multiple sys. affected. Ride carefully to the next specialist workshop.

### Engine in emergency-operation mode



General warning light shows yellow.



Fault in the engine control. Riding at mod. speed pos. Ride carefully to next specialist workshop.



### WARNING

#### Unusual ride characteristics when engine running in emergency-operation mode

Risk of accident

- Avoid accelerating sharply and overtaking. ◀

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine performance might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Severe fault in the engine control



General warning light flashes yellow.



Serious fault in the engine control!

Riding at mod. speed pos. Engine damage possible. Have checked by workshop.

## **WARNING**

### **Engine damage when running in emergency-operation mode**

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer. ◀

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults (e.g. overheating). The engine is in emergency-operation mode.

- Avoid high load and rpm ranges if possible.
- » We recommend that you stop riding.
- » The malfunction indicator lamp lights up as well if pollutant

emissions exceed the threshold values.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### **Side stand monitoring is faulty**



Side stand monitoring faulty. To avoid breakdown do not stop engine. Have checked by spec. workshop.

Possible cause:

The side-stand switch or its wiring are damaged.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### **ABS self-diagnosis not completed**



ABS indicator and warning light flashes.

Possible cause:

Self-diagnosis did not complete, so the ABS function is not available. The Scooter must be ridden at a speed of at least 5 km/h in order for ABS self-diagnosis to complete.

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

### **ABS fault**



ABS indicator and warning light shows.



Limited ABS availability! Riding at mod. speed pos. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The ABS function is restricted.

- You can continue to ride. Take note of the more detailed information on certain situations that can lead to an ABS fault message (► 137).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## ABS failed



ABS indicator and warning light shows.



ABS failure! Riding at mod. speed pos.

Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available.

- Further riding is possible, although allowance must be made for the lack of the ABS function. Take note of the more detailed information on situations that can lead to an ABS fault (► 137).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## ASC intervention



ASC indicator and warning light flashing quickly.

The ASC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The ASC warning light flashes for longer than the ASC intervention lasts. This affords

the rider visual feedback on control intervention even after the critical situation has been dealt with.

## ASC self-diagnosis not completed



ASC indicator and warning light flashing slowly.

Possible cause:



ASC self-diagnosis not completed

The Scooter has to reach a defined minimum speed with the engine running for the wheel speed sensors to be checked:

min 5 km/h

- Pull away slowly. Bear in mind that the ASC is not available until self-diagnosis has completed.

## ASC switched off



ASC indicator and warning light shows.

– with Connectivity<sup>OE</sup>



Off!

– with Connectivity<sup>OE</sup>



Traction control de-activated.

Possible cause:

The rider has switched off the ASC system.

- ASC Switching on (► 78).

## ASC fault



ASC indicator and warning light shows.



Traction control failure! Riding at mod. speed pos. Ride carefully to next specialist workshop.

Possible cause:

The ASC control unit has detected a fault.

- You can continue to ride. Bear in mind that the ASC is not available. Take note of the more detailed information on situations that can lead to an ASC fault (► 138).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## BMW flexcase opened



Engine st. not poss.  
BMW flexcase open.

Close BMW flexcase.

Possible cause:

The BMW flexcase is opened.

- Close BMW flexcase.
- Close rear storage compartment (BMW flexcase) (► 86).

## Fuel down to reserve



Tank reserve level reached. Ride to the next filling station.



### WARNING


## Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry. ◀

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.

	<p>Reserve volume</p> <p>approx. 4 l</p>
--	--

- Refuelling (► 131).

## Hazard warning lights system is switched on



Turn signal indicator light flashes green.



Turn signal indicator light flashes green.

Possible cause:

The driver has switched on the hazard warning lights system.

- Operating hazard warning flashers (see 73).

## Service-due indicator



If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow.

If the service is overdue, a yellow CC message is displayed. Exclamation marks also draw attention to the displays for service, service appointment and remaining distance in the MY VEHICLE

and SERVICE REQUIREMENTS menu screens.



## NOTICE

If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected. ◀

## Service due



is displayed in white.

Service due! Have service carried out by authorised BMW Motorrad Retailer.

Possible cause:

Service is due because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad Retailer.

- » The operational and road safety of the motorcycle remain intact.
- » The motorcycle's value is maintained as best as possible.

## Service-due date has passed



General warning light shows yellow.



is displayed in yellow.

Service overdue! Have service carried out by authorised BMW Motorrad Retailer.

Possible cause:

Service is overdue because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad Retailer.

- » The operational and road safety of the motorcycle remain intact.
- » The motorcycle's value is maintained as best as possible.





## Operation

Ignition with Keyless Ride .....	64
Emergency off switch (kill switch) .....	68
Lights .....	68
Day run lights .....	69
Hazard warning lights system .....	73
Turn indicators .....	74
Reading .....	74
SETUP .....	76
Automatic Stability Control (ASC) .....	77
Date and time .....	81
Heated handlebar grips .....	83
Seat heating .....	84
Seat .....	85
Stowage compartments .....	86

## Ignition with Keyless Ride

### Keys



#### NOTICE

The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.

The telltale light goes out as soon as the radio-operated key or the emergency key is found. The telltale light goes out briefly if the search times out without the radio-operated key or the emergency key being found.◀

You receive one radio-operated key and one emergency key. Please consult the information on the electronic immobiliser (EWS) if a key is lost or mislaid (► 66). Ignition, fuel filler cap and anti-theft alarm system all work with the radio-operated key. The seat

lock and topcase can be locked and unlocked manually.



#### NOTICE

If the range of the radio-operated key is exceeded (e.g. in the topcase) the vehicle cannot be started.

If the radio-operated key is still missing, the ignition is switched off after approx. 1.5 minutes in order to save the battery.

Do not store the radio-operated key in the luggage compartment. In some circumstances, the signal of the radio-operated key cannot be received by the aerial, and the seat can no longer be opened.

It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket) and to have the emergency key with you as an alternative.◀



Range of the Keyless Ride radio-operated key

approx. 1 m

### Lock the handlebars Requirement

Handlebars are turned to the left. Radio-operated key is within range.



- Press and hold down button **1**.
  - » The steering lock engages with an audible click.
  - » Ignition, lights and all function circuits switched off.

- Short-press button **1** to disengage the steering lock.

## Switching on ignition Requirement

Radio-operated key is within range.



- There are **two** ways of activating the ignition.

### Version 1:

- Briefly press button **1**.
- » Side lights and all function circuits are switched on.

- with daytime riding light<sup>OE</sup>
  - » Daytime riding light is switched on.◁
  - » Pre-Ride-Check is performed. (▮▮▮ 126)
  - » ABS self-diagnosis is in progress. (▮▮▮ 127)
  - » ASC self-diagnosis is in progress. (▮▮▮ 127)

### Version 2:

- Steering lock is engaged; press and hold down button **1**.
- » The steering lock disengages.
- » Parking lights and all function circuits switched on.
- with daytime riding light<sup>OE</sup>
  - » Daytime riding light is switched on.◁
  - » Pre-Ride-Check is performed. (▮▮▮ 126)
  - » ABS self-diagnosis is in progress. (▮▮▮ 127)
  - » ASC self-diagnosis is in progress. (▮▮▮ 127)

## Switching off ignition Requirement

Radio-operated key is within range.



- There are **two** ways of deactivating the ignition.

### Version 1:

- Briefly press button **1**.
- » Light is switched off.
- » Handlebars (steering lock) are not locked.

### Version 2:

- Turn the handlebars all the way to left.

- Press and hold down button **1**.
  - » Light is switched off.
  - » The steering lock engages.

## Electronic immobiliser EWS

The on-board electronics access the data saved in the radio-operated key via a ring aerial. The ignition is not enabled for starting until the engine control unit has recognised the radio-operated key as "authorised" for your motorcycle.



### NOTICE

A spare key attached to the same ring as the radio-operated key used to start the engine could impair the electronics function, in which case the enabling signal for starting is not issued. The warning is displayed on the multifunction display with the key symbol.


Always keep the spare key separate from the radio-operated key. ◀

If you mislay a radio-operated key you can have the key in question barred by your authorised BMW Motorrad dealer. In order to have a key barred you must bring along all the other keys belonging to the motorcycle.

The engine cannot be started by a barred radio-operated key, but a radio-operated key that has been barred can subsequently be reactivated.

You can obtain emergency/extra keys only through an authorised BMW Motorrad dealer. The radio-operated keys are part of an integrated security system, so the dealer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

## Battery of radio-operated key is discharged radio- operated key is lost

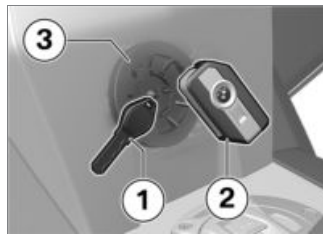

- Please consult the information on the electronic immobiliser (**EWS**) if a key is lost or mislaid.
- If you happen to lose or mislay the radio-operated key while on a journey, you can start the vehicle with the emergency key.
- If the battery of the radio-operated key is flat, the vehicle can be started by touching the

battery cover with the radio-operated key.

- Hold emergency key **1** or the flat radio-operated key **2** next to the rear-wheel cover at the height of the aerial **3**.



## NOTICE

The emergency key or the radio-operated key with the empty battery must be **in contact with** the rear-wheel cover.◀



Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.


30 s

- » Pre-Ride-Check is performed.
  - Key has been recognised.
  - Engine can be started.
- Starting the engine (➡ 126).

## Replacing battery of remote key

If the radio-operated key does not react to a short or long key-stroke:

- Battery of the radio-operated key is not at full capacity.
- » Change the battery.

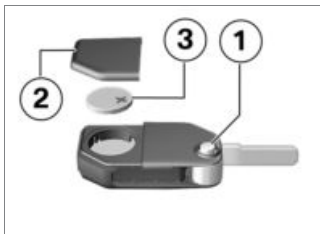

- Press button **1**.
  - » Key bit folds out.
- Push battery cover **2** up.
- Remove battery **3**.
- Dispose of the used battery in line with statutory require-

ments, do not dispose of the battery in household waste.



## ATTENTION

### Unsuitable or incorrectly inserted batteries

Component damage

- Use a battery compliant with the manufacturer's specifications.
- When inserting the battery, always make sure polarity is correct.◀
- Insert new battery with the positive terminal to the top.



Battery type

For Keyless Ride-radio-operated key

CR 2032

- Install battery cover **2**.
  - » Red LED in the instrument cluster flashes.

» The radio-operated key is now operational again.

## Emergency off switch (kill switch)



- 1** Emergency off switch (kill switch)



### WARNING

#### Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding. ◀

The emergency off switch is a kill switch for switching off the engine quickly and easily.



- a** Engine switched off  
**b** Normal operating position (run)

## Lights

### Low-beam headlight and sidelights

The side lights switch on automatically when the ignition is switched on.

After the ignition is switched off, the side light remains on for a short time.



### NOTICE

The side lights place a strain on the battery. Do not switch the ignition on for longer than absolutely necessary. ◀

The low-beam headlight switches on automatically when the engine is switched on.

– with daytime riding light<sup>OE</sup>

In daytime, the daytime riding light can be switched on as an alternative to the low-beam headlight. (➡ 69)

## High-beam headlight and headlight flasher



- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

## Parking lights

- Switch off the ignition.



- Immediately after switching off the ignition, push button **1** to the left and hold it in that position until the parking lights come on.
- Switch the ignition on and off again to switch off the parking lights.

## Day run lights

- with daytime riding light<sup>OE</sup>

## Automatic or manual daytime riding light

The daytime riding light is switched on and off either automatically or manually. You can switch the automatic function for the daytime riding light on or off in **SETUP**.

### Recommended setting:

- **SETUP A DRL ON** (A DRL: automatic daytime riding light)

You can switch the automatic function for the daytime riding light off temporarily by pressing the button. Pressing the button for the daytime riding light has no effect on the setting in **SETUP**.

- with Connectivity<sup>OE</sup>

The daytime riding light is switched on and off either automatically or manually. You can switch the automatic function for the daytime riding

light on or off in the vehicle settings menu.

### Recommended setting:

- Auto. dayt. rid. light is switched on.

You can switch the automatic function for the daytime riding light off temporarily by pressing the button. Pressing the button for the daytime riding light has no effect on the setting in the vehicle settings menu.

## Automatic daytime riding light



### WARNING

**The automatic daytime riding light does not replace the personal assessment of the light conditions**

Risk of accident

- Switch off the automatic daytime riding light in poor light conditions.◀

- Starting the engine (▶▶▶ 126).



### NOTICE

The changeover between daytime riding light and low-beam headlight including front side lights can be effected automatically.◀



The symbol for automatic daytime riding light is displayed.

- » If the symbol for automatic daytime riding light is not displayed, the **SETUP A DRL OFF** setting is selected.
- Proceed as follows in order to switch the daytime riding light to automatic:



- Briefly press the top part **1** of the MENU rocker button repeatedly until **SETUP ENTER 3** appears on the display.
- Press and hold the top part **1** of the MENU rocker button to start **SETUP**.
- » **SETUP ASC** appears on the display.





- Briefly press the top part **1** of the MENU rocker button repeatedly until the SETUP A DRL **3** menu item appears on the display.
- Press the bottom part **2** of the MENU rocker button briefly to toggle between **ON** and **OFF**.
  - » SETUP A DRL **ON** appears on the display.
- Press and hold the top part **1** of the MENU rocker button.
  - » SETUP ENTER appears on the display.



The symbol for automatic daytime riding light is displayed.

– with Connectivity<sup>OE</sup>

- In the Settings, Vehicle settings, Lights menu, switch on the Auto. dayt. rid. light function.



The indicator light for the automatic daytime riding light lights up.

- » If the ambient brightness decreases below a certain value, the low beam headlight is automatically switched on (e. B. in a tunnel). When sufficient ambient brightness is detected, the daytime riding light is switched back on.

## Manual operation of the light when the automatic system is switched on Requirement

Automatic daytime riding light is switched on.



- Press button **1** (e.g. when riding into a tunnel, if the automatic daytime riding light reacts slowly due to the ambient brightness).
  - » Automatic daytime riding light is switched off.

- » The low-beam headlight and the front side light are switched on.
- Press button **1** again.
- » Automatic daytime riding light is reactivated.
- » The daytime riding light is switched on again once the required ambient brightness is reached.
- » The low-beam headlight and the backlighting of the instrument cluster are switched off.



The indicator light for the daytime riding light shows if the daytime riding light is active.

## Manual daytime riding light

### Requirement

Automatic for daytime riding light must be switched off.



## WARNING

### Switching on the daytime riding light in the dark.

Risk of accident

- Do not use the daytime riding light in the dark.◀
- Starting the engine (▶▶ 126).



- Briefly press the top part **1** of the MENU rocker button repeatedly until **SETUP ENTER 3** appears on the display.
- Press and hold the top part **1** of the MENU rocker button to start **SETUP**.

- » **SETUP ASC** appears on the display.



- Briefly press the top part **1** of the MENU rocker button repeatedly until the **SETUP A DRL 3** menu item appears on the display.
- Press the bottom part **2** of the MENU rocker button briefly to toggle between **ON** and **OFF**.
- » **SETUP A DRL OFF** appears on the display.
- Press and hold the top part **1** of the MENU rocker button.

– with Connectivity<sup>OE</sup>

- In the Settings, Vehicle settings, Lights menu, switch off the Auto. dayt. rid. light function.◀



- Press button **1** to switch on the daytime riding light.

#### **NOTICE**

By comparison with the low-beam headlight, the daytime running light makes the vehicle more visible to oncoming traffic. This improves daytime visibility.◀

» The low-beam headlight and the front side lights are switched off.



The indicator light for the daytime riding light shows if the daytime riding light is active.

- In the dark or in tunnels: Press button **1** again to switch off the daytime riding light and switch on the low-beam headlight and front side light.



#### **NOTICE**

If the high-beam headlight is switched on while the daytime riding light is on, the daytime riding light is switched off after approx. 2 seconds and the high-beam headlight, low-beam headlight and front side light are switched on.

If the high beam headlight is switched off again, the daytime running light is not automatically reactivated, but must be switched on again if required.◀

## Hazard warning lights system

### Operating hazard warning flashers

- Switch on the ignition.




#### **NOTICE**

The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary.◀



#### **NOTICE**

The indicator function replaces the hazard warning lights function while the indicator button is pressed once operating readiness is switched on. The hazard warning lights function becomes active again once the indicator button is released.◀

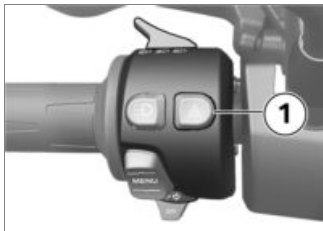

- Press button **1** to switch on the hazard warning lights system.
- » Ignition can be switched off.
- To switch off the hazard warning lights system, switch on the ignition and press button **1** again.

## Turn indicators

### Operating the turn indicators

- Switch on the ignition.



- Press button **1** to the left to switch on the left turn indicator.
- Press button **1** to the right to switch on the right turn indicator.
- Operate button **1** in the centre position to switch off the turn indicator.



### NOTICE

The turn indicators are cancelled automatically after the defined riding time and distance. The defined time and distance can be set by an authorised BMW Motorrad dealer. ◀


» Factory setting:

- Riding time = 10 s
- Distance travelled = 200 m

## Reading

### Select the display at the top

- Switch on the ignition.

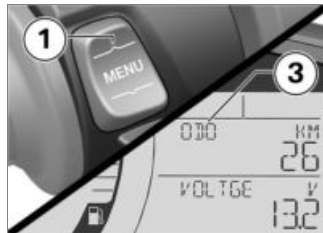

- Press the top part **1** of the MENU rocker button briefly to select the display in area **3**. The following values can be displayed:
  - Odometer ODO
  - Trip distance 1 TRIP 1

- Trip distance 2 TRIP 2
- Automatic trip distance: TRIP A, is automatically reset if a minimum of five hours have passed or the date has changed since the ignition was switched off.
- Call up the settings menu: SETUP ENTER (is only displayed when the Scooter is stationary)

## Select on-board computer display

- Switch on the ignition.



- Press the bottom part **2** of the MENU rocker button briefly to select the on-board computer display in area **4**.



### NOTICE

If the fuel reserve has been reached, the RANGE display always appears after the ignition is switched on.◀

The following values can be displayed:

- Range RANGE
- Average consumption CONS 1
- Average consumption CONS 2
- Current consumption CONS C

- Oil level OILLVL
- Outside temperature EXTEMP
- Coolant temperature ENG TMP
- Average speed SPEED Ø
- Battery voltage VOLTGE
- Riding time RD TIME
- Date DATE

## Resetting trip distance recorder

- Switch on the ignition.
- Select the trip recorder.
- » The trip recorder desired is displayed.



- Press and hold the top part **1** of the MENU rocker button un-

til the trip distance recorder **3** is reset.

» Trip recorder reading = 0.0

## Resetting the average values

- Switch on the ignition.
- Press the bottom part of the MENU rocker button repeatedly until the desired average consumption or the average speed is displayed.



- Press the bottom part **2** of the MENU rocker button until the average value **4** displayed has been reset.

» Average value = - - - -

## Resetting the riding time

- Switch on the ignition.
- Briefly press the bottom part of the MENU rocker button repeatedly until the riding time RDTIME is displayed.



- Press and hold the bottom part **2** of the MENU rocker button until the riding time RDTIME **3** has been reset.
- » Riding time starts at 00:00:00

## SETUP

### Selecting SETUP Requirement

The Scooter is at a standstill.




- Briefly press the top part **1** of the MENU rocker button repeatedly until SETUP ENTER **3** is displayed.
  - Press and hold the top part **1** of the MENU rocker button to start SETUP.
- » SETUP ASC is displayed.
- Press the top part **1** of the MENU rocker button briefly to

select the following parameters in the **SETUP**:

- Switch ASC on or off **ASC OFF/ASC ON** or calibrate ASC **ASC CAL**
- with anti-theft alarm (DWA)<sup>OE</sup>
- Automatically activate anti-theft alarm function when the ignition is switched off **DWA ON** or leave the automatic function switched off **DWA OFF**.◀
- Set the time **CLOCK**.
- Set the date **DATE**.
- Adjust the brightness of the backlighting in the instrument cluster **BRIGHT**.
- with daytime riding light<sup>OE</sup>
- Activate automatic daytime riding light **A DRL ON** or manual daytime riding light **A DRL OFF**.◀
- Adjusting the units **UNIT**.
- Reset displays **RESET**.
- Exit **SETUP EXIT**.


## Quitting **SETUP** Requirement

There are four options for quitting **SETUP**.

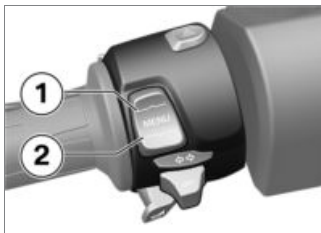

- Press and hold the top part **1** of the **MENU** rocker button.
  - » **SETUP ENTER** is displayed.
- Alternatively, briefly press the top part **1** of the **MENU** rocker button repeatedly until **SETUP EXIT** is displayed.
- Press and hold the bottom part **2** of the **MENU** rocker button.
  - » **SETUP ENTER** is displayed.

- Alternatively: switch the ignition off and on again.
  - » **SETUP ENTER** is displayed.
- Alternatively, ride away.

 Speed for operation in **SETUP** mode

max 10 km/h

- » **SETUP** will be quit when the permissible speed for operation is exceeded.
- » **ODO** is displayed.
- » All settings will be saved whatever method is used to quit **SETUP**.


## Automatic Stability Control (ASC)

### ASC Switching off Requirement

The Scooter is at a standstill.

- Switch on the ignition.
- Selecting **SETUP** (▶ 76).

» SETUP ASC is displayed.

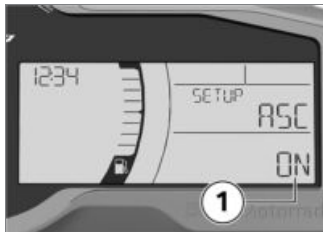

- Press the bottom part of the MENU rocker button briefly to toggle between ASC ON **1** and ASC OFF.

» SETUP ASC OFF is displayed.



ASC indicator and warning light shows.

» ASC is switched off.

- Press and hold the top part of the MENU rocker button to quit SETUP.

» SETUP ENTER is displayed.

## ASC Switching off

– with Connectivity<sup>OE</sup>

### Requirement

The Scooter is stationary.

- Switch on the ignition.
- Call up menu item Settings, Vehicle settings, ASC, Activate ASC.



- Switch off ASC.



ASC indicator and warning light shows.

» ASC is switched off.

- Press and hold the top part of the MENU rocker button to quit Settings.

» Pure view appears on the display.

## ASC Switching on

### Requirement

The Scooter is at a standstill.

- Switch on the ignition.
  - Selecting SETUP (→ 76).
- » SETUP ASC is displayed.




- Press the bottom part of the MENU rocker button briefly to



toggle between ASC ON and ASC OFF **1**.

» SETUP ASC ON is displayed.

 ASC indicator and warning light remains off or flashes until self-diagnosis is completed.

» ASC is switched on.


- Press and hold the top part of the MENU rocker button to quit SETUP.

» SETUP ENTER is displayed.


- Alternatively: switch the ignition off and on again.

» If the ASC indicator and warning light lights up after the ignition has been switched off and on again, there is an ASC fault.

- Call up menu item Settings, Vehicle settings, ASC, Activate ASC.

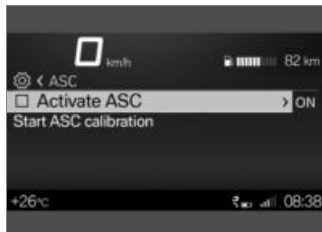

- Switch on ASC.

 ASC indicator and warning light remains off or flashes until self-diagnosis is completed.

» ASC is switched on.

- Press and hold the top part of the MENU rocker button to quit Settings.
- » Pure view appears on the display.

## Calibrate ASC

### Requirement

Reduced stability reserves of the ASC control after tyre change.




### NOTICE

Calibration means that the control is adapted to the effective tyre radii of the front and rear wheel.

The effective tyre radius depends on the tyre make, tread depth, tyre pressure and load.

After each tyre change, calibrate the ASC control to adjust to the changed tyre radii.

As tyre wear increases, regularly calibrate the ASC control to maintain an optimum function.◀

- **Before calibration, the ignition must be switched off for at least one minute.**
- ASC Switching on ( 78).

## ASC Switching on

– with Connectivity<sup>OE</sup>

### Requirement

The Scooter is stationary.

- Switch on the ignition.

» SETUP ASC ON is displayed.



- Press and hold the bottom part of the MENU rocker button **2** to start calibration.

» CAL **3** flashes.



ASC indicator and warning light lights up.

- » Rocker buttons MENU **1** and **2** have no function.
- » You must switch the ignition off and on again to quit the menu point.
- » Calibration is started and expects the Scooter to be ridden.



## ATTENTION

### ASC is not available until calibration is completed

Risk of falling

- Use a smooth and level stretch of straight road with good grip for the calibration procedure.◀
- Ride straight ahead and at a steady speed in the following speed range for six seconds.



Speed range for ASC calibration

The Scooter must be ridden straight ahead in a specific speed range:

30...50 km/h

» ASC is being calibrated.



ASC indicator and warning light goes out.

» ODO is displayed.

» ASC calibration is completed.

» The journey can now be continued.

## Calibrate ASC

– with Connectivity<sup>OE</sup>

### Requirement

Reduced stability reserves of the ASC control after a tyre change.



## NOTICE

Calibration means that the control is adapted to the effective tyre radii of the front and rear wheel.

The effective tyre radius depends on the tyre make, tread depth, tyre pressure and load.

After each tyre change, calibrate the ASC control to adjust to the changed tyre radii.

As tyre wear increases, regularly calibrate the ASC control to maintain an optimum function.◀


- **Before calibration, the ignition must be switched off for at least 1 minute.**

– with Connectivity<sup>OE</sup>

- ASC Switching on (🔋➡ 79).
- » ASC is activated.



- Call up Start ASC calibration and start calibration.
- » The calibration has been started and expects the Scooter to be driven.

 ASC indicator and warning light lights up.

- » It is only possible to exit the menu item by switching the ignition off and on.



## ATTENTION

### ASC is not available until calibration is completed

Risk of falling

- Use a smooth and level stretch of straight road with good grip for the calibration procedure.◀
- Ride straight ahead and stay within the following speed range for 6 seconds, riding as smoothly as possible.



Speed range for ASC calibration

The Scooter must be ridden straight ahead in a specific speed range:

30...50 km/h

- » ASC is being calibrated.



ASC indicator and warning light goes out.


- » ASC calibration is complete.
- » The journey can now be continued.

## Date and time

### Setting the clock Requirement

The Scooter is at a standstill.

- Switch on the ignition.
- Selecting SETUP (🔋➡ 76).
- » SETUP CLOCK is displayed.

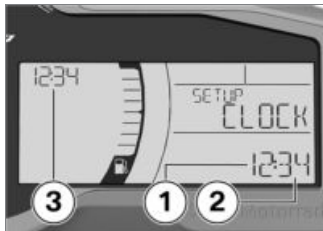

- Press and hold the bottom part of the MENU rocker button to set the hours.
  - » The hours **1** flash.
- Press the top part of the MENU rocker button briefly to advance the hours.
- Press the bottom part of the MENU rocker button briefly to go back an hour.
- Press and hold the bottom part of the MENU rocker button once the desired hour has been set.
  - » The minutes **2** flash.


- Press the top part of the MENU rocker button briefly to advance the minutes.
- Press the bottom part of the MENU rocker button briefly to go back a minute.
- Press and hold the bottom part of the MENU rocker button once the desired minute has been set.
  - » The minutes **2** stop flashing.
- Checking the setting on the time display **3**.
  - » This completes the process.
- Press and hold the top part of the MENU rocker button.
  - » **SETUP ENTER** is displayed.

## Setting the date

### Requirement

The Scooter is at a standstill.

- Switch on the ignition.
- Selecting **SETUP** (76).
- » **SETUP DATE** is displayed.

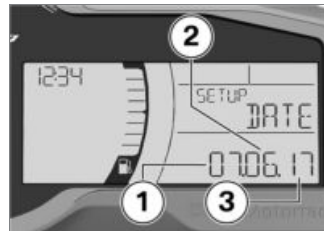

- Press and hold the bottom part of the MENU rocker button.
  - » Day **1** flashes.
- Press the top part of the MENU rocker button briefly to advance the day.
- Press the bottom part of the MENU rocker button briefly to go back one day.
- Press the bottom part of the MENU rocker button and hold once the desired day has been set.
  - » Month **2** flashes.

- Press the top part of the MENU rocker button briefly to advance the month.
- Press the bottom part of the MENU rocker button briefly to go back one month.
- Press the bottom part of the MENU rocker button and hold once the desired month has been set.
- » Year **3** flashes.
- Press the top part of the MENU rocker button briefly to advance the year.
- Press the bottom part of the MENU rocker button briefly to go back one year.
- Press the bottom part of the MENU rocker button and hold once the desired year has been set.
- » Year **3** no longer flashes.
- » This completes the process.
- Press and hold the top part of the MENU rocker button.
- » SETUP ENTER is displayed.

## Heated handlebar grips

– with heated grips<sup>OE</sup>

### Operating the heated handlebar grips

- Start the engine.



#### NOTICE

The heating in the heated handlebar grips can be activated only when the engine is running. ◀



- Repeatedly press button **1** until the heating stage you want to use is displayed.

The grips can be heated to three levels. Stage three is for heating the grips quickly: it is advisable to switch back to stage one or two as soon as the grips are warm. The following displays are available:



100% heating power



approx. 60% heating power



approx. 30% heating power

– with Connectivity<sup>OE</sup>



- Repeatedly press button **1** until the heating stage you want to use is displayed.

The grips can be heated to three levels. Stage three is for heating the grips quickly: it is advisable to switch back to stage one or two as soon as the grips are warm. The following displays are available:



100% heating power



approx. 60% heating power



approx. 30% heating power

## Seat heating

– with seat heating<sup>OE</sup>

### Using the rider's seat heating

- Start the engine.



#### NOTICE

Seat heating can be activated only when the engine is running.◀



- Repeatedly press button **1** until the heating stage you want to use is displayed.

The rider's seat can be heated in three stages. Stage three is intended to quickly heat up the seat, subsequently switch to the second or first stage. The following displays are available:



100% heating power



approx. 60% heating power





– with Connectivity<sup>OE</sup>



- Repeatedly press button **1** until the heating stage you want to use is displayed.

The rider's seat can be heated in three stages. Stage three is intended to quickly heat up the seat, subsequently switch to the second or first stage. The following displays are available:




## Seat

### Operate motorcycle seat


- Switch on the ignition.




- Press button **1**.
- » The seat is unlocked.

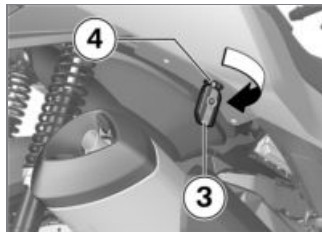

- The seat can also be unlocked without switching the ignition on. Do this by inserting the unfolded radio-operated key **3** into the lock **4** on the right-hand side trim panel and turning it clockwise.
- » The seat is unlocked.

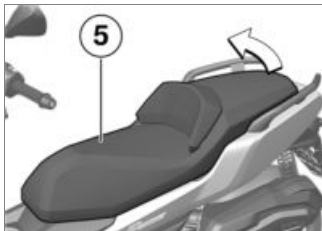

- Lift the seat **5** at the rear and fold up.

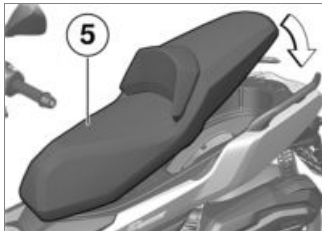

- To close, push the motorcycle seat **5** into the lock at the rear.


## Stowage compartments

### Using the front storage compartments

- Switch on the ignition.



- To open a storage compartment, press the corresponding button **1**.
- To close a storage compartment, push the corresponding flap into the lock.
- Once the ignition is switched off, both storage compartments are locked following an after-running period.


 After-running period  
 for opening the storage  
 compartments

10 s

## Operate rear storage compartment (BMW flexcase)

- Open the motorcycle seat.
- Operate motorcycle seat (→ 85).



### NOTICE


The stowage compartment light switches on when switching on the ignition.

After switching off the ignition the stowage compartment light remains illuminated briefly. ◀






- Pull release lever **1** forwards to increase the size of the storage compartment, for example to accommodate a motorcycle helmet.
- » The floor **2** will lower.
- » The vehicle cannot be started while the floor is lowered.

 When the ignition is switched on, the storage compartment symbol is displayed.


» – with Connectivity

 When the ignition is switched on, Engine st. not poss. BMW flexcase


open. Close BMW flexcase. appears on the display.




- The BMW flexcase provides space for an integral helmet.
- Close seat.

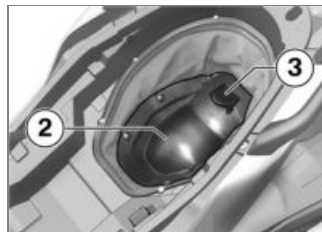

- To continue the journey, open the seat.
- Empty the storage compartment
- Pull the lever **3** up to raise the floor **2** until it engages in the locked position.

 When the ignition is switched on, the storage compartment symbol goes out.

» – with Connectivity

 When the ignition is switched on, Engine st. not poss. BMW flexcase open. Close BMW flexcase. disappears from the display.

- Close seat.
  - » The journey can now be continued.

**TFT display**

General instructions.....	90
Principle .....	91
Pure and Urban views .....	97
General settings .....	98
On-board computer with Connectivity.....	99
Bluetooth .....	100
My vehicle .....	104
Navigation .....	107
Media.....	109
Phone .....	109
Display software version .....	110
Display licence information.....	110

## General instructions

### Warnings



#### WARNING

#### Using a smartphone during the journey or while the engine is running

Risk of accident

- Always observe the relevant road traffic regulations.
- Do not use the smartphone during the journey (apart from applications that do not require operation, e.g. making telephone calls with the hands-free system).◀



#### WARNING

#### Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.◀

### Connectivity functions

Connectivity functions include media, telephony and navigation. Connectivity functions can be used if the TFT display is connected to a mobile end device and helmet (► 101). For more information on the Connectivity functions go to **bmw-motorrad.com**



#### NOTICE

If the fuel tank is between the mobile device and the TFT display, the Bluetooth connection may be restricted. BMW Motorrad recommends

storing the device above the fuel tank (e.g. in your jacket pocket).◀



#### NOTICE

Depending on the mobile device, the scope of the Connectivity functions may be restricted.◀

### BMW Motorrad Connected App

The BMW Motorrad Connected App contains usage and vehicle information. For some functions, such as navigation, the app must be installed on the mobile end device and connected to the TFT display. The app is used to start route guidance and adjust the navigation.



#### NOTICE


On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Con-

nected App must be opened before use. ◀

## Actuality

The TFT display may be updated after the publication date. Because of this, your Scooter may differ from the information supplied in the Rider's Manual. Up-to-date information is available at: **bmw-motorrad.com**

## Principle Controls

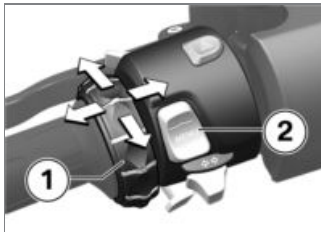

All contents of the display are operated using the multi-controller **1** and the MENU **2** rocker button.

Depending on the context, the following functions are possible.

### Multi-controller functions

#### Turn the multi-controller upwards:

- Move the cursor upwards in lists.
- Adjust settings.
- Increase volume.

#### Turn the multi-controller downwards:

- Move the cursor downwards in lists.
- Adjust settings.
- Decrease volume.

#### Tilt the multi-controller to the left:

- Activate the function in accordance with the operation feedback.
- Activate the function to the left or back.
- Go back to the View menu after settings.
- In the View menu, change up a level.
- In the My Vehicle menu: advance one menu screen.

#### Tilt the multi-controller to the right:

- Activate the function in accordance with the operation feedback.

- Confirm selection.
- Confirm settings.
- Advance a menu step.
- Scroll to the right in lists.
- In the My Vehicle menu: advance one menu screen.

### MENU rocker button functions



#### NOTICE

Instructions given by the navigation system are displayed in a dialogue box if the **Navigation** menu has not been called up. Operation of the MENU rocker button is temporarily restricted. ◀

#### Briefly push MENU up:

- In the View menu, change up a level.
- In the Pure view: change the display for rider info status line.

#### Press and hold the top part of the MENU rocker button:

- In the View menu: call up Pure view.
- In Pure view: change operating focus to the Navigator.


#### Briefly push MENU down:

- Change down a level.
- No function if the lowest hierarchical level has been reached.

#### Hold MENU down:

- Change back to the last menu after a previous menu change by holding up the MENU rocker button.

### Operating instructions in the main menu

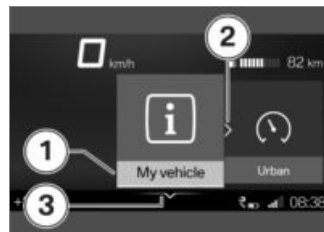

Operating instructions show whether interactions are possible, and which ones.



## Operating instructions in submenus

In addition to the operating instructions in the main menu, there are additional operating instructions in the submenus.



## Meaning of the operating instructions:

- Operating instruction **1**: The current display is located in a hierarchical menu. A submenu level is shown with a symbol. Two symbols indicate two or more submenu levels. The colour of the symbol changes de-

pending on whether you can return to a higher level.

- Operating instruction **2**: An additional submenu level can be called up.
- Operating instruction **3**: There are more entries than can be displayed.

## Display Pure view

- Press and hold the top part of the MENU rocker button.

## What the operating instructions mean:

- Operating instruction **1**: the left end has been reached.
- Operating instruction **2**: it is possible to scroll to the right.
- Operating instruction **3**: it is possible to scroll down.
- Operating instruction **4**: it is possible to scroll to the left.
- Operating instruction **5**: the right end has been reached.

## Switching functions on and off



Some menu items have a check box in front of them. The check box shows whether the function is on or off. Action symbols after the menu items show what will be switched by tilting the multi-controller briefly to the right.

### Examples for switching on and off:

- Symbol **1** shows that the function is switched on.
- Symbol **2** shows that the function is switched off.

- Symbol **3** shows that the function can be switched off.
- Symbol **4** shows that the function can be switched on.

## Call up the menu



- Display Pure view (▮▮▮ 93).
- Briefly push button **2** down.

The following menus can be called up:

- My vehicle
- Navigation
- Media
- Telephone
- Settings

- Repeatedly press the multi-controller **1** briefly to the right until the desired menu item is highlighted.
- Briefly push button **2** down.



## NOTICE

The Settings menu can only be called up when the vehicle is stationary. ◀

## Move the cursor in lists



- Call up the menu (▮▮▮ 94).
- To move the cursor down in lists, turn the multi-controller **1**



down until the desired entry is highlighted.

- To move the cursor up in lists, turn the multi-controller **1** up until the desired entry is highlighted.

## Confirm selection



- Select the desired entry.
- Briefly press the multi-controller **1** to the right.

## Call up the last menu used

- In Pure view: press and hold the MENU rocker button.

- » The last menu used is called up. The last entry highlighted is selected.

## Change of operating focus

If the Navigator is connected, it is possible to switch between operation of the Navigator and the TFT display.

## Change the operating focus

- with navigation system<sup>OA</sup>
- Installing navigation device (➡ 179).
- Display Pure view (➡ 93).
- Press and hold the top part of the MENU rocker button.
  - » Operating focus switches to the Navigator or TFT display. The active device is marked on the left-hand side of the top status line. Operating actions relate to the active device until the operating focus is changed again.

- » Using the navigation system. (➡ 180)

## Switches the display for driver info. status line

### Requirement

The vehicle is at a standstill. The Pure view appears on the display.

- Switching on ignition (➡ 65).
- » All the information necessary for riding on public roads is presented in the TFT display by the on-board computer. The information can be displayed in the top status line.
- Select content of the rider info. status line (➡ 96).



- Press and hold the button **1** to display the Pure view.
- Briefly press button **1** to select the value in the top status line **2**.

The following values can be displayed:

- Odometer Total
- Trip distance 1 Current
- Trip distance 2 Current
- Current consumption Consumption



Average consumption 1



Average consumption 2



Riding time 1



Riding time 2



Break 1



Break 2



Average speed 1



Average speed 2



Fuel gauge.



Range

## Select content of the rider info. status line

- Call up the Settings, Display, Status line content menu.
- Switch on the desired displays.
- » It is possible to switch between the selected displays in the rider info. status line. If no displays are selected, only the range will be displayed.

## Adjust settings



- Select and confirm the desired settings menu.

- Turn the multi-controller **1** downwards until the desired setting is highlighted.
  - If there are operating instructions, tilt the multi-controller **1** to the right.
  - If there are no operating instructions, tilt the multi-controller **1** to the left.
- » The setting is saved.

## Switching Speed Limit Info on or off

### Requirement


Vehicle is connected to the Navigator or a compatible mobile end device. The BMW Motorrad Connected App is installed on the mobile end device.

- Speed Limit Info displays the maximum speed currently permitted.
- Call up the Settings, Display menu.

- Switch Speed Limit Info on or off.

## Pure and Urban views

### Pure view

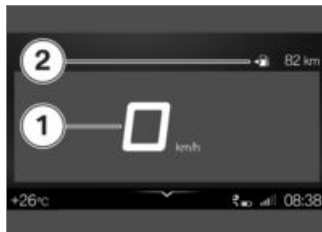

In the Pure view, all important information for riding on public roads is provided.

The speed indicator **1** displays the current driving speed.

Press the top of the rocker button MENU briefly to display the range instead of the fuel gauge **2**.

The range readout **2** indicates how far you can ride with the fuel

remaining in the tank. This distance is calculated on the basis of average consumption and the quantity of fuel on board.

- When the motorcycle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly. This is the reason why the range is recalculated only when the side stand is in the retracted position.
- The range is shown together with a warning once the fuel reserve has been reached.
- After a refuelling stop, range is recalculated if the amount of fuel in the tank is greater than the reserve quantity.
- The calculated range is only an approximate figure.

## Urban view



The Urban view also displays the engine speed with a numerical display **1** and a bar display **2** as additional information. This can be called up via the main menu.

## General settings

### Adjust the volume

- Connect rider's and passenger's helmet (➡ 102).
- Increase volume: turn the multi-controller upwards.

- Decrease volume: turn the multi-controller downwards.
- Mute: turn the multi-controller all the way down.

### Setting the date

- Switching on ignition (➡ 65).
- Call up the Settings, System settings, Date and time, Set date menu.
- Adjust Day, Month and Year.
- Confirm setting.

### Set date format

- Call up the Settings, System settings, Date and time, Date format menu.
- Select the desired setting.
- Confirm setting.

### Setting the clock

- Switching on ignition (➡ 65).



**WARNING**

**Adjusting the clock while riding**

Risk of accident

- Set the clock only when the motorcycle is stationary. ◀
- Call up the Settings, System settings, Date and time, Set time menu.
- Adjust Hour and Minute.

### Setting time format



**WARNING**

**Adjusting the clock while riding**

Risk of accident

- Set the clock only when the motorcycle is stationary. ◀
- Call up the Settings, System settings, Date and time, Time format menu.
- Select the desired setting.
- Confirm setting.

## Switching GPS synchronisation on or off

- Call up the Settings, System settings, Date and time menu.
- Switch GPS synchronisation on or off.
- » When the respective option is activated in the Navigator, the time from the Navigator is applied.

## Setting units of measurement

- Call up the Settings, System settings, Units menu.
- The following units of measurement can be set:
- Distance covered
  - Pressure
  - Temperature
  - Speed
  - Consumption

## Setting the language

- Call up the Settings, System settings, Language menu.

The following languages can be set:

- Chinese
- German
- English
- Spanish
- French
- Italian
- Dutch
- Portuguese
- Russian
- Ukrainian

## Adjusting brightness

- Call up the Settings, Display, Brightness menu.
- Adjusting display brightness.

## Resetting all settings

- All the settings in the Settings menu can be reset to the factory settings.
- Call up the Settings menu.
- Select Reset all and confirm.

The settings in the following menus are reset:

- Vehicle settings
- System settings
- Connections
- Display
- Information

- » Existing Bluetooth connections are not deleted.

## On-board computer with Connectivity

- with Connectivity<sup>OE</sup>

## Calling up the on-board computer

- Call up the My vehicle menu.

- Scroll to the right until the ON-BOARD COMPUTER menu screen is displayed.

## Resetting on-board computer

- Calling up the on-board computer (►► 99).
- Press down the MENU rocker button.
- Select Reset all values or Reset individual val. and confirm.

The following values can be reset:

- Break
- Journey
- Current (TRIP 1)
- Av. spee.
- Av. consump.

## Calling up the trip computer

- Calling up the on-board computer (►► 99).

- Scroll to the right until the TRIP COMPUT. menu screen is displayed.

## Resetting trip computer

- Calling up the trip computer (►► 100).
- Press down the MENU rocker button.
- Select Reset automatically or Reset all and confirm.
- » If Reset automatically is selected, the journey computer is automatically reset if a minimum of six hours have passed and the date has changed since the ignition was switched off.

## Bluetooth

### Short-range wireless technology

The Bluetooth function might not be available in certain countries.

Bluetooth is a short-range wireless technology. Bluetooth devices are short-range devices transmitting on the license-free ISM band (Industrial, Scientific, Medical) between 2.402 GHz and 2.480 GHz. They can be operated anywhere in the world without a licence being required. Although Bluetooth is designed to establish and sustain robust connections over short distances, as with every other wireless technology disruptions are possible. Interference can affect connections or connections can sometimes fail. Particularly when multiple devices operate in a Bluetooth network, with wireless technology of this nature it is

not possible to ensure fault-free communications in every situation.

### **Possible sources of interference:**

- Interference zones due to transmission masts and similar
- Devices with non-compliant Bluetooth implementations
- Proximity of other Bluetooth-compatible devices

### **Bluetooth coupling**

Two Bluetooth devices must detect each other before they can create a connection with each other. This process of mutual detection is known as "coupling". When two devices have coupled they remember each other, so the Bluetooth coupling process is conducted only once, on initial contact.



### **NOTICE**

On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.◀

During the Bluetooth coupling process, the TFT display searches for other Bluetooth-capable devices within its reception area. The conditions that have to be satisfied before the audio system can recognise another device are as follows:

- The Bluetooth function of the device must be activated
- The device must be "visible" to others
- The device must support the A2DP profile
- Other Bluetooth-compatible devices must be OFF (e.g.

mobile phones and navigation systems).

Please consult the operating instructions for your communication system.

### **Perform Bluetooth pairing**

- Call up the **Settings, Connections** menu.
    - » Bluetooth connections can be established, managed and deleted in the **CONNECTIONS** menu. The following Bluetooth connections are displayed:
      - Mobile device
      - Rider's helmet
      - Passenger helm.
- The connection status for mobile end devices is displayed.


### **Connect mobile end device**

- Perform Bluetooth pairing (101).

- Activate the mobile end device's Bluetooth function (see mobile end device's operating instructions).
- Select **Mobile device** and confirm.
- Select **PAIRING NEW MOB. DEVICES** and confirm.

Mobile end devices are being searched for.



 The Bluetooth symbol flashes in the bottom status line during Bluetooth coupling.

Mobile end devices found are displayed.

- Select and confirm mobile end device.
  - Follow the instructions on the mobile end device.
  - Confirm that the code matches.
- » The connection is established and the connection status updated.

- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (▣▣▣▣► 189)
- » Depending on the mobile end device, telephone data is transferred to the vehicle automatically.
- » Telephone data (▣▣▣▣► 110)
- » If the telephone book is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (▣▣▣▣► 190)
- » If the Bluetooth connection is not working as expected, consult the troubleshooting chart in the section entitled "Technical data". (▣▣▣▣► 189)


## Connect rider's and passenger's helmet

- Perform Bluetooth pairing (101).

- Select Rider's helmet or Passenger helm. and confirm.
- Make the helmet's communication system visible.
- Select PAIRING NEW HELMETS or PAIRING NEW PASS. HELM. and confirm.

Helmets are searched for.



 The Bluetooth symbol flashes in the bottom status line during Bluetooth coupling.

Helmets found are displayed.

- Select and confirm helmet.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (189)
- » If the Bluetooth connection is not working as expected, con-



sult the troubleshooting chart in the section entitled "Technical data". (➡ 189)


## Deleting connections

- Call up the Settings, Connections menu.
- Select Delete connections.
- To delete an individual connection, select the connection and confirm.
- To delete all connections, select Delete all connections and confirm.


## My vehicle

### Start screen

- 1 Check Control display  
Mode of presentation  
( 44)
- 2 Coolant temperature  
( 55)
- 3 Range ( 97)
- 4 Service-due indicator  
( 60)
- 5 Vehicle mileage/km
- 6 On-board voltage ( 164)
- 7 Oil-level check ( 54)

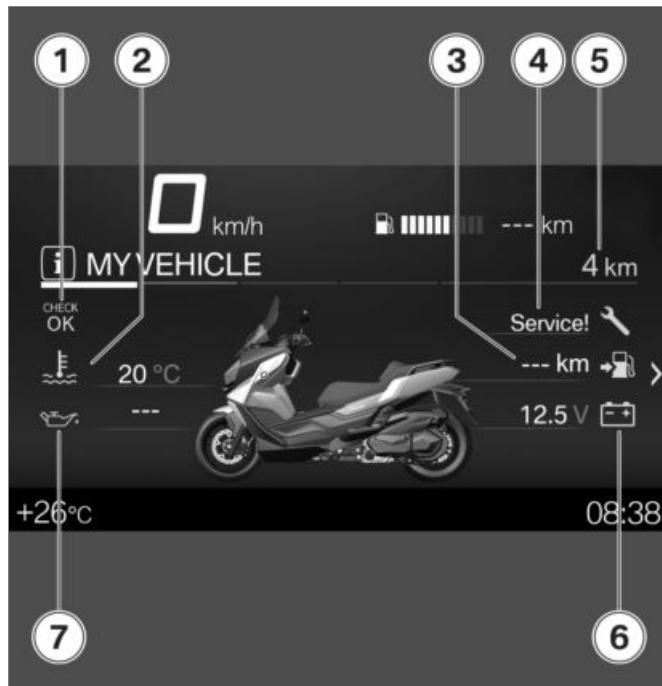

## Operating instructions

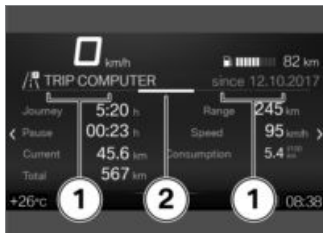

- Operating instruction **1**: tabs which show how far to the left or right can be scrolled.
- Operating instruction **2**: tab which shows the position of the current menu screen.

## Scrolling through menu screens



- Call up the *My vehicle* menu.
- To scroll to the right, briefly press Multi-Controller **1** to the right.
- To scroll to the left, briefly press Multi-Controller **1** to the left.

The *My Vehicle* menu contains the following screens:

- MY VEHICLE
- Check Control messages (if any)
- ON-BOARD COMPUTER
- TRIP COMPUTER.

– SERVICE REQUIREMENTS

- For more information on tyre pressure and Check Control messages, see the "Displays" section.




### NOTICE

Check control messages are attached dynamically to the *My Vehicle* menu screen as additional tabs. ◀

## On-board computer and trip computer

The ON-BOARD COMPUTER and TRIP COMPUTER menu screens display vehicle and trip data, such as average values.

## Service requirements

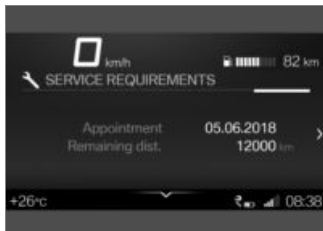

If the time remaining to the next service is less than a month or if the next service is due within 1000 km, a white CC message is displayed.

## Navigation

### Warnings



#### WARNING

#### Using a smartphone during the journey or while the engine is running

Risk of accident

- Always observe the relevant road traffic regulations.
- Do not use the smartphone during the journey (apart from applications that do not require operation, e.g. making telephone calls with the hands-free system).◀



#### WARNING

#### Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.◀

### Precondition

The vehicle is connected to a compatible mobile end device.

### Precondition

The BMW Motorrad Connected App is installed on the connected mobile end device.



#### NOTICE

On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.◀

## Entering destination address

- Connect mobile end device (101).
- Call up the BMW Motorrad Connected App and start the route guidance.
- Call up the Navigation menu in the TFT display.
  - » Active route guidance is displayed.
  - » If the active route guidance is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (190)

## Selecting destination from recent destinations

- Call up the Navigation, Recent destinations menu.
- Select and confirm destination.
- Select Start route guidance.

## Selecting destination from favourites

- The FAVOURITES menu displays all destinations which have been saved as favourites in the BMW Motorrad Connected app. No new favourites can be added using the TFT display.
- Call up the Navigation, Favourites menu.
- Select and confirm destination.
- Select Start guidance.

## Entering special destinations

- Special destinations, such as points of interest, can be displayed on the map.
- Call up the Navigation, POIs menu.

The following locations can be selected:

- At current location
- At destination

- Along the route
- Select where the special destinations should be looked for. e.g. the following special destination can be selected:
  - Filling station
  - Select and confirm the special destination.
  - Select Start route guidance and confirm.

## Setting route criteria

- Call up the Navigation, Route criteria menu.
- The following criteria can be selected:
- Route type
  - Avoid
  - Select desired Route type.
  - Switch desired Avoid on or off.

The number of avoidances activated is displayed in brackets.

## Ending route guidance

- Call up the Navigation, Active route guidance menu.
- Select End route guidance and confirm.

## Switching spoken instructions on or off

- Connect rider's and passenger's helmet (102).
- The navigation can be read out by a computer voice. For this purpose, Spoken instructions must be switched on.
- Call up the Navigation, Active route guidance menu.
- Switch Spoken instructions on or off.

## Repeating last spoken instruction

- Call up the Navigation, Active route guidance menu.

- Select **Current instruction** and confirm.

## Media

### Precondition

The vehicle is connected to a compatible mobile end device and helmet.

### Control music playback



- Call up the **Media** menu.

#### **NOTICE**

BMW Motorrad recommends setting the volume on the mobile

end device for media and calls to maximum before setting off. ◀

- Adjust the volume (▮▮▮ 98).
- Next track: briefly tilt Multi-Controller **1** to the right.
- Last track or start of the current track: briefly tilt Multi-Controller **1** to the left.
- Fast forward: hold Multi-Controller **1** to the right.
- Rewind: hold Multi-Controller **1** to the left.
- Call up the context menu: press the bottom part of the button **2**.



#### **NOTICE**

Depending on the mobile device, the scope of the Connectivity functions may be restricted. ◀

- » The following functions can be used in the context menu:
  - Start playback or Pause playback.

- Select the **Now playing**, **All artists**, **All albums** or **All tracks** category for search and playback.
- Select **Playlists**.

You can adjust the following settings in the **Audio options** submenu:

- Switch **Shuffle** on or off.
- Select **Repeat**: **Off**, **One** (current track) or **All**.

## Phone

### Precondition

The vehicle is connected to a compatible mobile end device and helmet.

## Telephone calls



- Call up the Telephone menu.
- Accept call: tilt Multi-Controller **1** to the right.
- Reject call: tilt Multi-Controller **1** to the left.
- End the call: tilt Multi-Controller **1** to the left.

## Muting

During active phone calls, the microphone in the helmet can be muted.

## Phone calls with multiple participants

A second call can be accepted while you are on a call. The first phone call is put on hold. The number of active telephone calls is shown in the Telephone menu. It is possible to switch between two phone calls.

## Telephone data

Depending on the mobile end device, telephone data may be transmitted to the vehicle automatically once the Bluetooth connection has been established (101).

Phone book: list of contacts

Call list: list of calls with the mobile end device

Favourites: list of favourites saved on the mobile end device

## Display software version

- Call up the Settings, Information, Software version menu.

## Display licence information

- Call up the Settings, Information, Licences menu.



## Anti-theft alarm

Overview .....	112
Activation .....	112
Alarm function .....	114
Deactivation .....	116
Programming .....	116

## Overview

- with anti-theft alarm (DWA)<sup>OE</sup>

### General information about the anti-theft alarm (DWA)

Any attempt to move the vehicle, change its position, disconnect the vehicle battery or unauthorised starts will activate the alarm. The sensitivity of the system is parameterised so that slight vibrations will not trigger the alarm. Once the system has been activated, any attempt to tamper with the vehicle is indicated acoustically by the siren and visually by all four turn indicators flashing in unison.

You can change some of your DWA alarm system's parameters to suit your personal preferences.

### Conserving power in the vehicle's starter battery

In order to conserve the power of the starter battery and ensure that the vehicle will start, the DWA anti-theft alarm automatically switches off the alarm function a few days after being activated. In most cases, however, the system will remain active for at least 10 days.

### Radio interference

Radio systems or devices transmitting on the same frequency as the remote control of the DWA anti-theft alarm can interfere with operation of the system. If problems of this nature occur, point the remote control toward the vehicle from another direction.


## Activation

- with anti-theft alarm (DWA)<sup>OE</sup>

### DWA Activating

- Switching on ignition (➡ 65).
- DWA adjusting (➡ 114).
- Switch off the ignition.
- » If the alarm system (DWA) is activated, the DWA will be armed automatically when the ignition is switched off.
- » Activation takes approximately 30 seconds to complete.
- Turn indicators flash twice.
- Confirmation tone sounds twice (if programmed).

## Activation with Keyless Ride

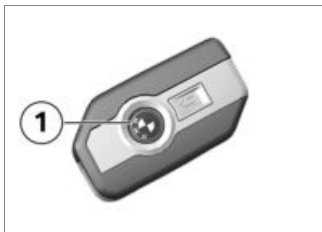


- Switch off the ignition.
- Press button **1** on the radio-operated key.
  - » Activation takes approximately 30 seconds to complete.
  - » Turn indicators flash twice.
  - » Confirmation tone sounds twice (if programmed).
  - » Anti-theft alarm is active.

## Motion sensor when motorcycle is to be transported

If you want to transport your motorcycle by train or on a trailer, for example, it is advisable to switch off the motion sensor. If the motion sensor is not switched off the severe movements occurring in transit could trigger the alarm.

## Deactivating the motion sensor

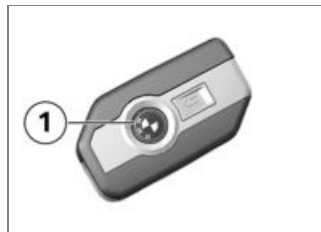

- Press button **1** on the radio-operated key again during the activation phase.
  - » Turn indicators flash three times.
  - » Confirmation tone sounds three times (if programmed).
  - » Motion sensor has been deactivated.

## DWA adjusting Requirement

The Scooter is stationary.

- Switch on the ignition.
- Selecting SETUP (🔑➡ 76).
- Briefly press the top part of the MENU rocker button repeatedly until SETUP DWA appears on the display.



- Press the bottom part **2** of the MENU rocker button briefly to toggle between DWA ON **3** and DWA OFF.

The following settings are available:

- DWA ON: The DWA anti-theft alarm is active and will be armed automatically when the ignition is switched off.
- DWA OFF: The DWA anti-theft alarm is deactivated.
- Press and hold the top part **1** of the MENU rocker button to quit SETUP.
  - » SETUP ENTER appears on the display.
- with Connectivity<sup>OE</sup>
- Switch on the ignition.
- Call up the Settings, Vehicle settings, Alarm system menu.
  - » The following settings are available:
    - Adapt Warning signal
    - Switch Tilt alarm sensor on or off
    - Switch Arming tone on or off
    - Switch Arm automatically on or off
    - » Programming options (🔑➡ 116)

## Alarm function

- with anti-theft alarm (DWA)<sup>OE</sup>

### Alarm activation

A DWA alarm can be triggered by:

- motion sensor
- an attempt to use an unauthorised vehicle key to switch on the ignition
- disconnection of the DWA from the vehicle battery (DWA battery takes over power supply)

### Alarm signal


A DWA alarm can be triggered by:

- motion sensor
- an attempt to use an unauthorised vehicle key to switch on the ignition
- disconnection of the DWA anti-theft alarm from the motor-cycle's battery (DWA internal battery in the anti-theft alarm provides power - alarm tone)

only, the turn indicators do not flash)

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of alarm tone can be set by an authorised BMW Motorrad dealer.

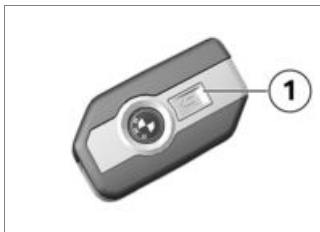

The activated alarm can be aborted at any time by pressing the **1** button on the radio-operated key, without deactivating the anti-theft alarm.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the alarm for one minute.

### **Light signals issued by the DWA LED:**

- Flashes 1x: motion sensor 1
- Flashes 2x: motion sensor 2
- Flashes 3x: ignition switched on with unauthorised vehicle key
- Flashes 4x: disconnection of the anti-theft alarm from the motorcycle's battery
- Flashes 5x: motion sensor 3

### **Reason for an alarm**

Once you have deactivated the alarm function, the DWA LED indicates the reason for potential alarm activation for one minute:

- Flashes once: motion sensor: motorcycle was tilted towards the front/rear.
- Flashes twice: motion sensor: motorcycle was tilted towards the side.


- Flashes three times: the ignition was switched on using an authorised remote key.
- Flashes four times: the alarm system was disconnected from the vehicle battery.

## Deactivation

- with anti-theft alarm (DWA)<sup>OE</sup>

### Deactivating the alarm function

- Switch on the ignition using an authorised ignition key.

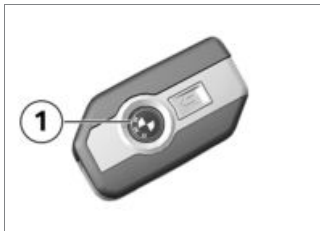

- Press button **1** on the radio-operated key once.



### NOTICE

The alarm function is reactivated after 30 seconds if "activation after ignition off" has been selected if the alarm function is deactivated using the radio-operated key and the ignition is not then switched on. ◀

- » Turn indicators flash once.
- » Alarm tone sounds once (if programmed).
- » Alarm function is deactivated.

## Programming

- with anti-theft alarm (DWA)<sup>OE</sup>

### Programming options

The alarm system can be adapted to your particular needs in the following respects by your authorised BMW Motorrad Retailer:

- Confirmation alarm tone after having activated/deactivated the DWA in addition to flashing turn indicators.
- Rising and falling or intermittent alarm tone.

- with Connectivity<sup>OE</sup>

The DWA can be adjusted in the **Settings, Vehicle settings, Alarm system** menu.

### Default settings

The anti-theft alarm ships with the following default settings:

- Confirmation alarm tone after having activated/deactivated the DWA: no.
- Alarm tone: intermittent.





## Adjustment

Mirrors .....	120
Headlight .....	120
Spring preload .....	120

## Mirrors

### Adjusting mirrors



- Pivot the mirror to the correct position by pressing gently at the edge.

## Headlight

### Headlight adjustment for right- or left-hand traffic

This vehicle is equipped with a symmetrical low-beam headlight. When riding in countries which drive on the other side of the road to that of the Scooter's

country of registration, no further measures are required.

### Headlight beam throw and spring preload

The headlight beam throw generally remains constant by adjustment of the spring preload to the load status.


If you are in doubt as to the correct headlight beam throw setting, consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Spring preload Adjustment

It is essential to set spring preload of the rear wheel to suit the load carried by the Scooter. Increase spring preload when the vehicle is heavily loaded and reduce spring preload accordingly when the vehicle is lightly loaded.

### Adjusting spring preload for rear wheel

- Place the Scooter on its stand on firm, even ground.

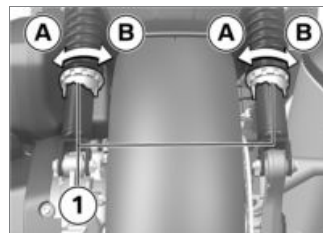

- To increase the spring preload, rotate the adjustment rings **1** using the toolkit in the direction of arrow **A**.
- To reduce the spring preload, rotate the adjustment rings **1** using the toolkit in the direction of arrow **B**.



Basic setting of the rear  
spring preload

Level 1 (filled up, with driver's  
weight 85 kg)

Level 1 (One-up without lug-  
gage)

Level 3 (One-up with luggage)

Level 5 (Two-up with luggage)

- Make sure that the same values are set on both spring struts.



## **Riding**

Safety information .....	124
Comply with checklist.....	125
Starting .....	126
Riding.....	128
Running in .....	129
Brakes .....	129
Park Scooter.....	130
Refuelling .....	131
Securing vehicle for transport .....	133

## Safety information

### Rider's equipment

Do not ride without the correct clothing:

- Helmet
- Suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad Retailer will be glad to advise you on the correct clothing for every purpose.

### Loading



#### **WARNING**

#### **Handling adversely affected by overloading and imbalanced loads**

Risk of falling

- Do not exceed the permissible gross weight and be sure to

comply with the instructions on loading.◀

- Adjust the setting of the spring preload to the total weight.
- Note the maximum permissible payload of the luggage carrier.



Payload of luggage carrier

max 9 kg

- Note the maximum permissible payload of the topcase.



Payload of topcase

max 5 kg

### Speed

If you ride at high speed, always bear in mind that various marginal conditions can adversely affect the handling of your Scooter:

- Setting the spring system
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread

### Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



#### **WARNING**

#### **Exhaust gases adversely affecting health**

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.◀

## Risk of burn injury



### CAUTION

#### Engine and exhaust system become very hot when the vehicle is in use

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.◀

## Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry.
- Do not operate the engine over a longer period of time with the speed limiter activated.

- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.



### ATTENTION

#### Unburned fuel in catalytic converter

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.◀

## Risk of overheating



### ATTENTION

#### Engine running for prolonged period with vehicle at stand-still

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.◀

## Tampering



### ATTENTION

#### Tampering with the Scooter (e.g. engine control unit, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions. Damage due to tampering is not covered by the warranty.

- Do not tamper with the vehicle in any way that could result in tuned performance.◀

## Comply with checklist

- At regular intervals, use the checklist below to check your motorcycle.

## Requirement

### Always before riding off:

- Check operation of the brake system.
- Check operation of the lights and signalling equipment.
- Checking tyre tread depth (111 151).
- Check that topcase and luggage are securely fastened.

## Requirement

### Every 3rd refuelling stop:

- Adjusting spring preload for rear wheel (111 120).
- Checking engine oil level (111 144).
- Checking front brake pad thickness (111 145).
- Checking rear brake pad thickness (111 146).
- Checking brake-fluid level, front brakes (111 147).

- Checking brake-fluid level, rear brakes (111 148).
- Checking coolant level (111 149).

## Starting

### Starting the engine

- Switch on the ignition.
  - » Pre-Ride-Check is performed. (111 126)
  - » ABS self-diagnosis is in progress. (111 127)
  - » ASC self-diagnosis is in progress. (111 127)
- Actuate the brake.



### NOTICE

The vehicle cannot be started while the side stand is extended. Extending the side stand while the engine is running kills the engine.◀



- Press the starter button **1**.
  - » The engine starts.
  - » Consult the troubleshooting chart below if the engine refuses to start. (111 188)

## Pre-Ride-Check

The instrument cluster runs a test of the instrument dials and the warning and indicator lights when the ignition is switched on: this is the so-called "Pre-Ride-Check". The test is aborted if you start the engine before it completes.



## Phase 1

The needle of the speed indicator is moved to the end stop. The warning and indicator lights are switched on.

## Phase 2

The needle of the speed indicator is returned to the starting position. The activated warning and indicator lights are switched off.

If the needle did not move or if a warning light or indicator light did not show:



### WARNING

## Faulty warning lights

No indication of malfunctions

- Check all the telltale and warning lights. ◀
- Have the fault rectified as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad Retailer.

## ABS self-diagnosis

BMW Motorrad ABS performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition. The Scooter has to move forward a few metres for the wheel speed sensors to be tested.

### Phase 1

- » Test of the diagnosis-compatible system components with the vehicle at a standstill.



ABS indicator and warning light flashes.

### Phase 2

- » Test of the wheel-speed sensors as the vehicle pulls away from rest.



ABS indicator and warning light flashes.

## ABS self-diagnosis completed

- » The ABS indicator and warning light goes out.

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride. Bear in mind that the ABS function is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## ASC self-diagnosis

BMW Motorrad ASC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

## Phase 1

- » Test of the diagnosis-compatible system components with the vehicle at a standstill.



ASC indicator and warning light flashing slowly.

## Phase 2

- » Drive off test of the system components with diagnostic capability.



ASC indicator and warning light flashing slowly.

## ASC self-diagnosis completed

- » The ASC symbol no longer shows.
- Check all the warning and indicator lights.



ASC self-diagnosis not completed

The Scooter has to reach a defined minimum speed with the engine running for the wheel speed sensors to be checked:

min 5 km/h

If an indicator showing an ASC fault appears when ASC self-diagnosis completes:

- You can continue to ride. Bear in mind that the ASC is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.
- » If the ASC is making adjustments where not required, too often or too early, the troubleshooting chart can help further. (191)

## Riding

At engine speeds below approx. 1500 rpm, the centrifugal clutch remains open; the Scooter is in idle. If the engine speed is increased, the clutch closes and the Scooter drives off.

In the speed range between approx. 50 km/h and approx. 120 km/h the engine accelerates, with the throttle valve fully opened, with gently increasing speed in the range of the maximum torque. The change in speed is achieved by the CVT. There is therefore minimal change in the engine noise in this speed range. Speeds above approx. 120 km/h are achieved by increasing the engine speed.

## Running in Engine

- Up to the running-in check, ride in frequently changing load ranges.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads, avoiding high-speed main roads and highways if possible.
- Have the running-in check carried out after 500 - 1200 km.

### Brake pads

New brake pads have to be run in before they can achieve their optimum friction levels. The reduced braking effect can be compensated for by greater pressure on the brake lever.



### New brake pads

Longer stopping distance, risk of accident

- Apply the brakes in good time. ◀

### Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



### New tyres losing grip on wet roads and at extreme bank angles

Risk of accident

- Ride carefully and avoid extremely sharp inclines. ◀

## Brakes

### How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the vehicle decelerates, the more load is shifted to the front wheel. The higher the wheel load, the more braking force can be transmitted without the wheel locking.

To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. In the "panic braking situations" that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers;

under these circumstances, the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road. Under these circumstances, the front wheel would lock up.

BMW Motorrad ABS prevents the front wheels from locking.

## Descending mountain passes



### WARNING

### Braking only with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.◀

## Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- When riding on dirty roadways.



### WARNING

### Wetness and dirt result in diminished braking efficiency

Risk of accident

- Apply the brakes lightly while riding to remove wetness and

dirt, or dismount and clean the brakes.

- Think ahead and brake in good time until full braking efficiency is restored.◀

## Park Scooter

### Side stand

- Switch off the engine.



### ATTENTION

### Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.◀
- Extend the side stand and prop the Scooter on the stand.



### ATTENTION

### Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.◀
- If the camber of the roadway permits, turn the handlebars all the way to the left.

### Centre stand

- Switch off the engine.



### ATTENTION

### Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.◀



### ATTENTION

**Centre stand folds in due to sharp movements**

Risk of damage to parts if vehicle topples

- Do not lean or sit on the vehicle with the centre stand extended.◀
- Extend the centre stand and lift the Scooter on to the stand.

## Refuelling

### Fuel grade

#### Requirement

To ensure optimal fuel consumption, fuel should be sulphur-free or as low-sulphur as possible.



### ATTENTION

### Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron).◀

- Observe the maximum ethanol content of the fuel.



Recommended fuel grade



Regular, unleaded (maximum 15 % ethanol, E15)



91 ROZ/RON  
min 87 AKI

- » Pay attention to the following symbols in the fuel filler cap and on the fuel pump:



## Refuelling

### Requirement

The steering lock is disengaged.

## ⚠ WARNING

### Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank. ◀

## ⚠ WARNING

### Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank. ◀

## 🔑 ATTENTION

### Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel. ◀

- Make sure the ground is level and firm and place the Scooter on its centre stand.
- Switching off ignition (➡ 65).

## 🔑 NOTICE

The fuel filler cap can be opened within the defined waiting time after the ignition has been switched off, without the radio-operated key being within range. ◀



Waiting time for opening fuel filler cap


2 min

- » There are **two variant ways** of opening the fuel filler cap:
- Within the after-running period.
  - After the after-running period has expired.

## Version 1

### Requirement

Within the waiting time

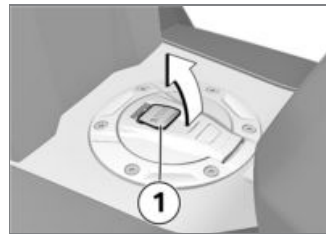

- Slowly pull tab **1** on the fuel filler cap up.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.


## Version 2

### Requirement

After the waiting time has expired

- Bring the radio-operated key into range.

- Slowly pull the tab **1** upwards and then release again.
  - » The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.
- Slowly pull tab **1** on the fuel filler cap up again.
  - » Fuel filler cap unlocks.
- Fully open the fuel filler cap.

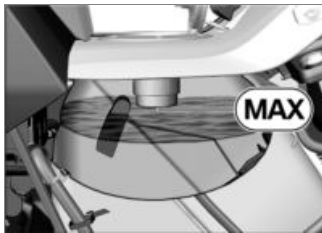

- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.



## NOTICE

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and the fuel reserve indicator light is switched off.◀



## NOTICE

The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.◀



Fuel level

approx. 12.8 l



Reserve volume

approx. 4 l

- Pull tab on the fuel filler cap up.
- Push fuel filler cap down firmly.
  - » The fuel filler cap engages with an audible click.
  - » The fuel filler cap locks automatically when the waiting time expires.
  - » The engaged fuel filler cap locks immediately when you secure the steering lock or switch on the ignition.

## Securing vehicle for transport

- Make sure that all components that might come into contact with tensioning straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.




## ATTENTION

### Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.◀
- Push the vehicle onto the transportation area; do not place it on the side stand or centre stand.

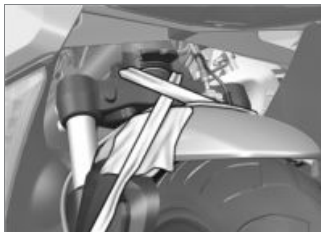

## ATTENTION

### Trapping of components

Component damage

- Do not trap components such as brake lines or cable legs.◀
- At the front, loop a tensioning strap crosswise around the fork bridge on each side and tighten.
- Make sure that no pressure is applied to the brake lines.
- Protect the front-wheel cover with a soft cloth.



- At the rear, place the tensioning straps around the rear grab handle and tighten.
- Tighten all the straps uniformly; the vehicle's suspension should be compressed as tightly as possible front and rear.



## **Engineering details**

General instructions.....	136
Anti-lock brake system (ABS) .....	136
Automatic Stability Control (ASC) .....	138

## General instructions

To find out more about engineering, go to:

**[bmw-motorrad.com/technology](http://bmw-motorrad.com/technology)**

## Anti-lock brake system (ABS)

### How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean, dry asphalt surface. The lower the coefficient of friction, the longer the braking distance.

If the rider increases brake pressure to the extent that brake force exceeds the maximum transferable limit, the wheels start to lock and the Scooter loses

its riding stability. A fall is imminent. Before this situation can occur, ABS intervenes and adapts brake pressure to the maximum transferable brake force, so the wheels continue to turn and riding stability is maintained irrespective of the condition of the road surface.

### What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS reduces braking force to ensure that riding stability is maintained when the wheels regain road contact. At this instant the BMW Motorrad ABS assumes an extremely low coefficient of

friction (gravel, ice, snow), so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring riding stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

### Rear wheel lift

Where there is a high level of adhesion between the tyres and road, the front wheel is only blocked very late or not at all even when the brakes are applied forcefully. Accordingly, the ABS control must be applied very late or not at all. In this case, the rear wheel can lift off the ground, which can cause the Scooter to roll over.

## **WARNING**

### **Rear wheel lift due to severe braking**

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.◀

### **How is the BMW Motorrad ABS designed?**

BMW Motorrad ABS ensures driving stability on any surface within the possibilities of the physics of riding. The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the track.

### **Special situations**

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued.

In addition to problems with the BMW Motorrad ABS, exceptional riding conditions can lead to a fault message being issued.

#### **Exceptional riding conditions**

- Rear wheel rotating with the vehicle held stationary by applying the front brake (burn-out).
- Sustained slipping of the rear wheel on a slippery surface, e.g. when slowing down with

the braking effect of the engine.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

### **What is the role of regular servicing?**

## **WARNING**

### **Brake system not regularly serviced**

Risk of accident

- In order to ensure that the BMW Motorrad ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.◀

## Safety reserves

BMW Motorrad ABS may not mislead the rider into a careless riding style because they can rely on shorter stopping distances. It is primarily there to provide a safety reserve for emergency situations.

Take care in bends! Braking in bends is subject to particular laws relating to the physics of riding which even BMW Motorrad ABS cannot evade.

## Automatic Stability Control (ASC)

### How does ASC work?

BMW Motorrad ASC compares the wheel speeds at the front and rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine management system inter-

venes and adapts engine torque accordingly.

## Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared as one means of detecting the rear wheel's incipient tendency to spin or slip sideways. If the system registers implausible values for a lengthy period the ASC function is deactivated for safety reasons and an ASC fault message is issued. Self-diagnosis has to complete before fault messages can be issued.

If the front wheel lifts clear of the ground under severe acceleration, the ASC reduces engine torque until the front wheel regains contact with the ground. Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

Never turn the throttle grip all the way back suddenly when on slippery road surfaces. Engine braking torque can cause the rear wheel to lock, with a corresponding loss of stability. The BMW Motorrad ASC is unable to control a situation of this nature.

## Slippery roadway

On very loose surfaces (e.g. sand or snow) ASC control interventions may reduce the driving power at the rear wheel to an extent where the rear wheel no

longer rotates sufficiently. In this case, BMW Motorrad recommends to temporarily switch off ASC.

Please note that the rear wheel will spin on loose surfaces and remember to release the throttle grip in due time before reaching firm surfaces.

Then reactivate ASC.



## Maintenance

General instructions.....	142
Standard tool kit .....	142
Front-wheel stand .....	142
Engine oil .....	144
Brake system .....	145
Coolant .....	149
Tyres .....	150
Rims and tyres.....	150
Wheels .....	151
Fuses.....	162
Lighting.....	164
Battery.....	164
Body panels .....	170
Diagnostic connector .....	172

## General instructions


The "Maintenance" chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

You will find information on more extensive maintenance and repair tasks in the Repair Manual on DVD for your vehicle, which is available from your authorised BMW Motorrad Retailer.

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad Retailer.

## Standard tool kit

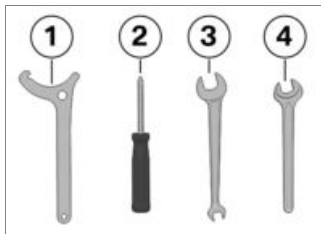

- 1** Hook wrench
  - Adjusting spring preload for rear wheel (➡ 120).
- 2** Reversible screwdriver blade  
Phillips PH1 and Torx T25
  - Removing body panels.
  - Removing battery cover (➡ 170).
- 3** Open-ended spanner  
Width across flats 10/16
  - Removing battery (➡ 168).

- 4** Open-ended spanner  
Width across flats 14
  - Loosen/secure the mirror.

## Front-wheel stand

### Installing the front-wheel stand

#### Requirement


The basic stand and its accessory parts are available from your BMW Motorrad dealer.

- Make sure the ground is level and firm and place the Scooter on its centre stand.
- Use basic stand with front-wheel adapter.






- Install the spacer buffers **1** on the left and right in the lower position.

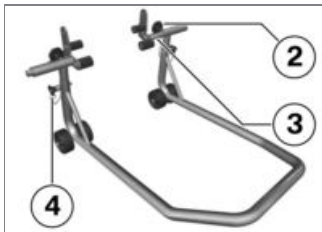

- Unscrew the mounting bolt **2** on the left and right.
- Push the mountings **3** on the left and right apart until the

front suspension fits between them.

- Use retaining pins **4** on the left and right to set the front-wheel stand to the desired height.
- Centre the front-wheel stand relative to the front wheel and push it against the front axle.

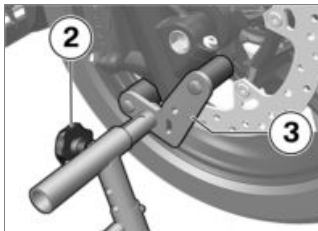

- Align the mountings **3** on the left and right so that the front suspension is securely seated.
- Tighten the mounting bolt **2** on the left and right.



### ATTENTION

#### **Centre stand retracts if the vehicle lifted too high**

Risk of damage to parts if vehicle topples

- When raising the vehicle, make sure that the centre stand remains on the ground.
- If necessary, adjust the height of the front-wheel stand. ◀
- Apply uniform pressure to push the front-wheel stand down and raise the Scooter.
- Make sure the Scooter is standing firmly.

## Engine oil

### Checking engine oil level




#### ATTENTION


**Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)**

Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature. ◀
- After switching off the engine, wait for 1 minute until the oil level can be observed.
- Make sure the ground is level and firm and place the Scooter, still at operating temperature, on its centre stand.
- Wipe the area around the oil filler opening clean.

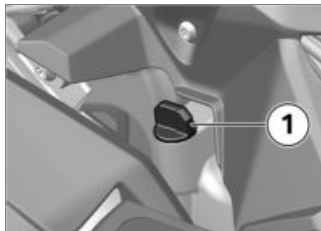


- Remove the oil dipstick **1**.

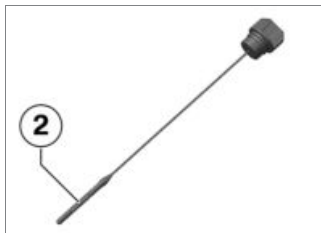

- Clean measuring range **2** of the oil dipstick with a dry cloth.
- Seat the oil dipstick on the oil filler opening, but do not engage the threads.

- Remove the oil dipstick and check the oil level.

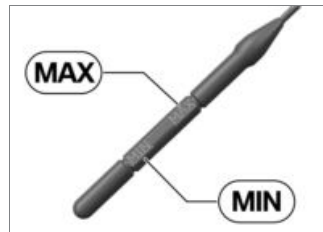

Engine oil, specified level

Between **MIN** and **MAX** marks (Engine at operating temperature, only place the oil dipstick in position, **do not screw in place.**)

If the oil level is below the **MIN** mark:

- Top up the engine oil to the specified level.



Engine oil, quantity for topping up

max 0.4 l (Difference between **MIN** and **MAX**)

If the oil level is above the **MAX** mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- Insert the oil dipstick and tighten by hand.

## Brake system

### Checking function of brakes


- Operate right brake lever.
  - » The pressure point must be clearly perceptible.
- Operate left brake lever.
  - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:

- Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad Retailer.


### Checking front brake pad thickness

- Make sure the ground is level and firm and place the Scooter on its stand.

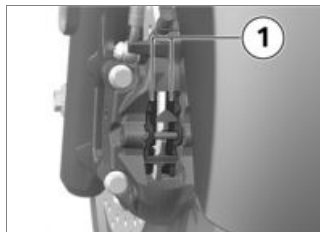

- Visually inspect the brake pads to ascertain their thickness. Turn the handlebars to the right.

- Viewing direction: from the rear toward brake pads **1**.
- Turn the handlebars to the left and check the brake pad thickness on the right-hand side in the same way.

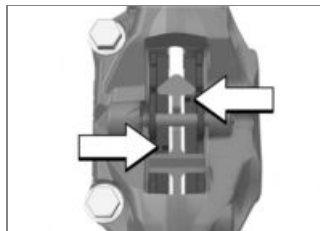

Brake-pad wear limit, front

≥1 mm (Friction pad only, without backing plate. Wear marks (grooves) must be clearly visible.)

If the wear indicating marks are no longer clearly visible:



## WARNING


### Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes


- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness. ◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad Retailer.
- BMW Motorrad recommends that only genuine brake pads from BMW Motorrad are installed.

### Checking rear brake pad thickness

- Make sure the ground is level and firm and place the Scooter on its stand.

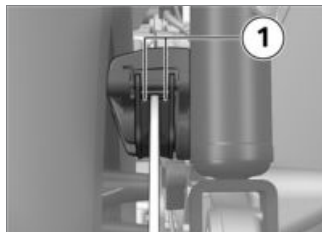

- Visually inspect the brake pads to ascertain their thickness. Viewing direction: from the rear toward brake pads **1**.

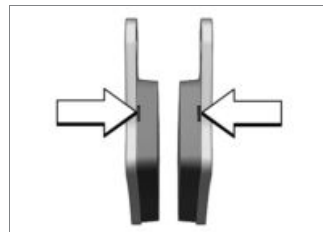

Brake-pad wear limit,  
rear

min 1 mm (Friction pad only, without backing plate. Groove in the pad material marks the wear limit.)

If the wear marks have been reached:

### **WARNING**

#### **Brake-pad thickness less than permissible minimum**

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad Retailer.
- BMW Motorrad recommends that only genuine brake pads from BMW Motorrad are installed.


#### **Checking brake-fluid level, front brakes**

### **WARNING**

#### **Not enough brake fluid in brake fluid tank**

Considerably reduced braking power due to air in the brake system

- Adjust the riding mode immediately until the fault is rectified.
- Check the brake-fluid level at regular intervals.◀
- Make sure the ground is level and firm and place the Scooter on its centre stand.
- Align the handlebars to a position in which the brake fluid tank is horizontal.

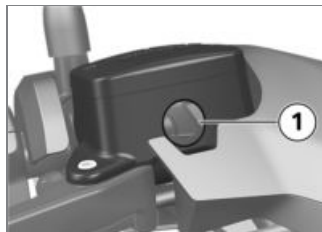

- Check the brake fluid level in sight glass **1** of the right brake-fluid tank.

### **NOTICE**

Wear of the brake pads causes the brake fluid level in the reservoir to sink.◀



Brake fluid level, front

Brake fluid, DOT4

The brake fluid level must not drop below the **MIN** mark. (Brake-fluid reservoir, horizontal)

If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

## Checking brake-fluid level, rear brakes



### WARNING

#### Not enough brake fluid in brake fluid tank

Considerably reduced braking power due to air in the brake system

- Adjust the riding mode immediately until the fault is rectified.
- Check the brake-fluid level at regular intervals. ◀
- Make sure the ground is level and firm and place the Scooter on its centre stand.
- Align the handlebars to a position in which the brake fluid tank is horizontal.



- Check the brake fluid level in sight glass **1** of the left brake-fluid tank.



### NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink. ◀



Brake fluid level, rear

Brake fluid, DOT4

The brake fluid level must not drop below the **MIN** mark.  
(Brake-fluid reservoir, horizontal)


If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.


## Coolant

### Checking coolant level

- Make sure the ground is level and firm and place the Scooter on its centre stand.

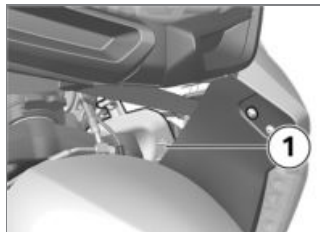

- Viewing direction: from the front under the front panel. Check the coolant level in the coolant expansion tank **1**.

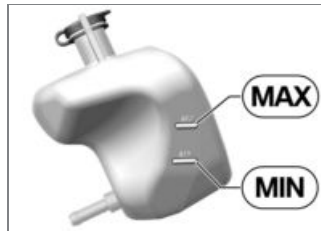

Desired coolant level in the expansion tank


Between **MIN** and **MAX** marks (With cold engine)

If the coolant drops below the permitted level:

- Top up the coolant.

### Topping up coolant

- Remove the side panel (➡ 170).

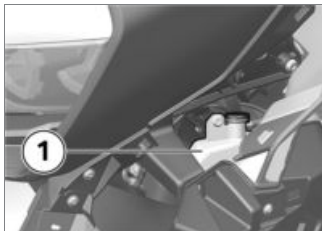

- Open cap **1** of the coolant expansion tank and top up the coolant to the specified level.
- Checking coolant level (➡ 149).
- Close cap **1** of the coolant expansion tank.
- Installing side panel (➡ 171).

## Tyres

### Checking tyre pressure



#### WARNING

#### Incorrect tyre pressure.

Impaired handling characteristics of the Scooter. Impaired control

response of the ASC and more rapid tyre wear.

- Always check that the tyre pressures are correct.◀



#### WARNING

#### Tendency of valve inserts installed vertically to open by themselves at high riding speeds

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly.◀
- Make sure the ground is level and firm and place the Scooter on its stand.
- Check tyre pressures against the data below.



Tyre pressure, front

2.2 bar (One-up, tyre cold)



Tyre pressure, front

2.4 bar (Two-up mode with loading; tyre cold)



Tyre pressure, rear

2.4 bar (One-up, tyre cold)

2.6 bar (Two-up mode with loading; tyre cold)

If tyre pressure is too low:

- Correct tyre pressure.

## Rims and tyres

### Checking rims

- Make sure the ground is level and firm and place the Scooter on its stand.
- Visually inspect the rims for defects.
- Have damaged rims inspected by a specialist workshop and replaced if necessary,



preferably by an authorised BMW Motorrad Retailer.

## Checking tyre tread depth



### WARNING

#### Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law. ◀
- Make sure the ground is level and firm and place the Scooter on its stand.
- Measure the tyre tread depth in the main tread grooves with wear marks.



### NOTICE

Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down

to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow. ◀

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

## Wheels

### Tyre recommendation

For each size of tyre, BMW Motorrad tests and classifies as roadworthy certain makes. BMW Motorrad cannot assess the suitability or provide any guarantee of road safety for other tyres.

BMW Motorrad recommends using only tyres tested by BMW Motorrad.

Detailed information is available from your authorised

BMW Motorrad Retailer or in the internet at:

**bmw-motorrad.com**

## Effect of the wheel sizes on the ABS

The wheel sizes play an essential role with the ABS system. In particular, the diameter and the width of the vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control system.

The sensor rings are essential for correct wheel speed detection; they too must match the Scooter's control system and consequently cannot be replaced. If you decide that you would like to fit non-standard wheels to

your Scooter, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad Retailer. In some cases, the data programmed into the control unit can be changed to suit the new wheel sizes.

## Effect of wheel size on the ASC

The wheel sizes play an essential role with the suspension control system ASC. In particular, the radii of the wheels are stored in the control unit as a basis for all required calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.



### ATTENTION

#### Faults of the ASC due to changing tyre radii

ASC intervenes despite good grip

- Check both tyres for wear and check the tyre pressures.
- Always calibrate the ASC after changing a tyre or tyres.
- If ASC interventions are unexpectedly frequent: Re-calibrate the ASC.◀




### ATTENTION

#### Loss of the adaptation values for the tyre radii in the Digital Motor Electronics

Risk of falling

- Always re-calibrate the ASC after every software update.◀

## Removing front wheel

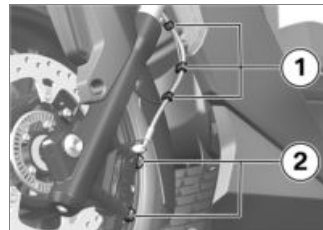

- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.
- Release the brake line from the holders 1.




### ATTENTION

#### Unwanted inward movement of the brake pads


Component damage on attempt to install the brake caliper or because brake pads have to be forced apart

- Do not operate the brakes with a brake caliper not correctly secured.◀
- Remove bolts **2** of the brake caliper on the left and right.

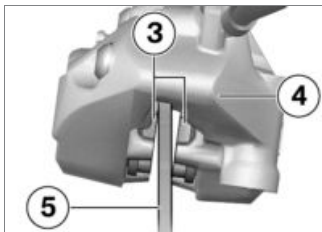


- Force the brake pads **3** slightly apart with rotational movements of the brake caliper **4** against the brake disc **5**.
- Carefully pull the brake calipers back and out until clear of the brake discs.

- Make sure the ground is level and firm and place the Scooter on its centre stand.
- Lift the front of the Scooter until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Installing the front-wheel stand (► 142).

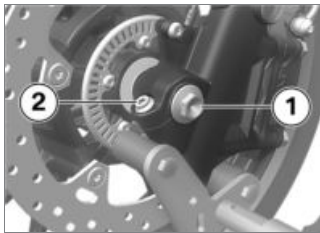

- Remove the bolt **1**.
- Loosen clamping bolt **2**.

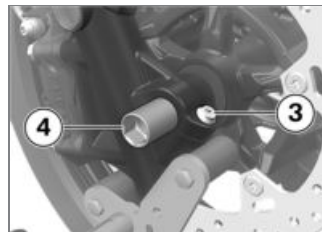

- Slacken clamping bolt **3**.
- Press quick-release axle **4** on the left-hand side slightly toward the inside, so as to be better able to grip it on the right-hand side.
- Remove quick-release axle **4**, while supporting the wheel.
- Roll the front wheel forward to remove.

## Installing the front wheel



### WARNING

#### Use of a non-standard wheel

Malfunctions in control attempts made by the ABS and ASC

- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter. ◀




### ATTENTION

#### Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

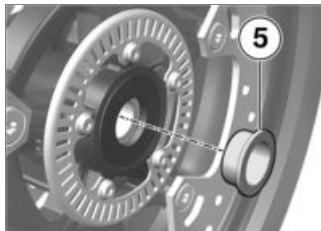

- Insert spacer bush **5** into the wheel hub on the left-hand side.




### ATTENTION


#### Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim. ◀
- Roll the front wheel into position between the front suspension.

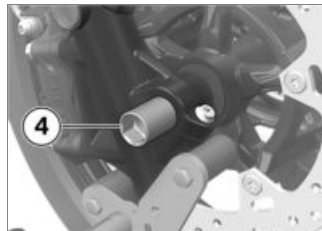


- Lift front wheel and install quick-release axle **4**.

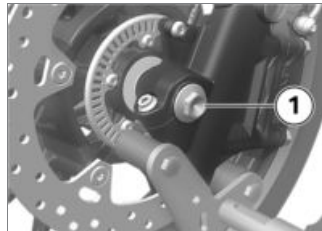


- Install bolt **1** and tighten to specified torque. Counter-hold quick-release axle on the right-hand side.

 Bolt in quick-release axle at front

32 Nm

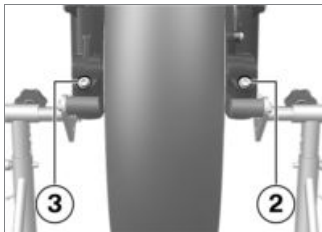


- Tighten clamping bolts **3** and **2** to the specified torque.


 Clamping bolts (quick-release axle) in telescopic forks

19 Nm

- Remove the adhesive tape from the wheel rim.
- Remove the front-wheel stand.

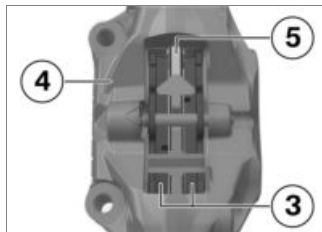

- Position the brake caliper **4** on the brake disc, ensuring that the brake disc **5** is installed between the brake pads **3**.
- Install brake caliper on the other side in the same way.

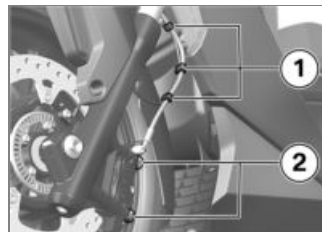

- Insert bolts **2** on the left and right until the screw head is touching, but **do not tighten**.
- Operate the brake several times until the brake pads are bedded, **fix brake lever with rubber band**.
- Tighten bolts **2** on the left and right to the specified torque.

 Brake caliper on fork leg

32 Nm

- Secure brake line in the holders **1**.
- Release the brake lever.

- Retighten bolts **2** on the left and right to the specified torque.



Brake caliper on fork leg

32 Nm

- Remove the adhesive tape from the wheel rim.

## Removing rear wheel



### CAUTION


#### Hot engine and/or hot exhaust system

Risk of burn injury


- Allow engine and exhaust system to cool before starting work. ◀
- Make sure the ground is level and firm and place the Scooter on its centre stand.




- Remove the bolt **1**.
- Raise the trim for the silencer **2** slightly and remove insulating disc.

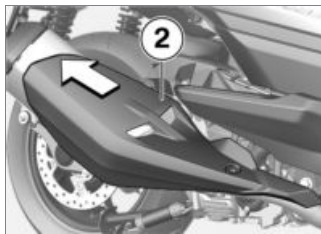


- Push trim for silencer **2** to the rear and remove.

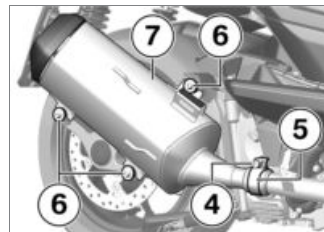

- Unscrew bolt **4** of the clamp **5**.
- Remove bolts **6** with the washers.
- Pull off and remove the silencer **7** from the exhaust manifold.

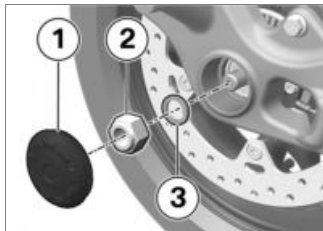

- Block the rear wheel brake with a rubber band.  
» The rear wheel cannot turn.
- Carefully lever up lid **1** and remove.
- Remove nut **2** and spacer bush **3**.
- Remove rubber band from rear wheel brake.

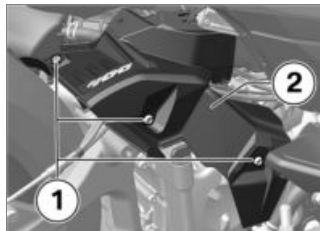


- Remove screws **1**.
- Lift rear-wheel cover **2**.




- Release brake line from holders **3**.
- Remove bolt **4** and release holder for brake line **5**.


- Press the brake caliper **6** against the brake disc.  
» The brake piston is pressed back.
- Remove screws **7**.
- Pull brake caliper **6** up and off the brake disc and hang to the side.

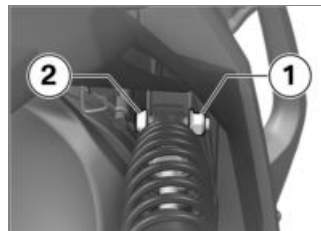


- Loosen the nut **1** of the upper spring strut bolted connection while holding bolt **2** in place with an offset screwdriver.

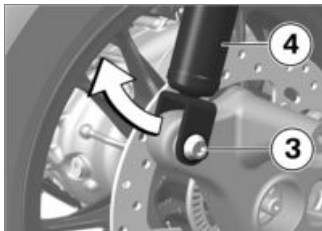


- Remove bolt **3**.
- Swivel spring strut **4** backwards.

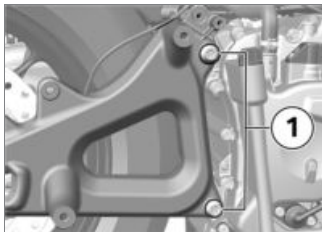

- Remove the bolts **1**.

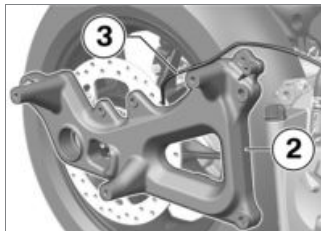

- Loosen rear wheel swinging arm **2**, making sure that cable **3** for wheel speed sensor is not damaged.

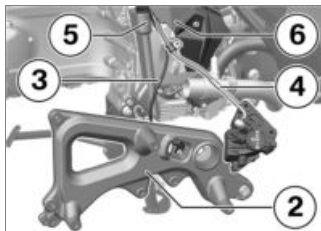

- Guide cable **3** for wheel speed sensor and brake hose **4**

between oil filler neck **5** and rear-wheel cover **6**.

- » Cable **3** is not tensioned.
- Take off rear wheel swinging arm **2**.



- Remove the spacer bush **1**.
- Pull the rear wheel **2** off the output shaft and remove.

## Installing the rear wheel



### ATTENTION

**Tightening threaded fasteners to incorrect tightening torque**



Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀



- Lubricate the gearing of the output shaft.




Lubricant

Staburags NBU 30 PTM

- » Do not apply lubricant to the thread of the output shaft.


- Push rear wheel **2** onto the output shaft and rotate until it engages with the gearing.
- Install spacer bush **1**.

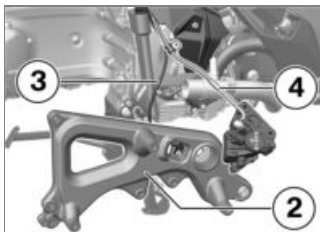

- Thread rear wheel swinging arm **2** with cable **3** for wheel speed sensor and brake hose **4** back into position.



- Position the rear wheel swinging arm **2**, making sure that the cable **3** for the wheel speed sensor is routed correctly.

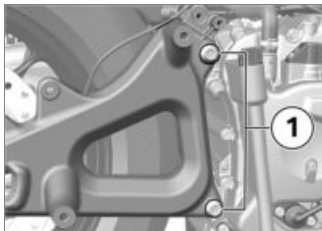

- Install bolts **1** and tighten to the specified torque.



Right swinging arm on drivetrain swinging arm

38 Nm




- Swivel the spring strut **4** forwards and place in position.
- Install bolt **3** and tighten to the specified torque.



Spring strut on swinging arm

38 Nm

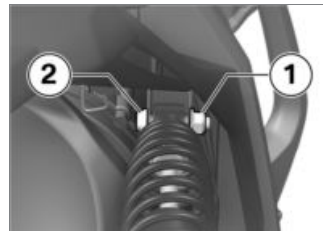


- Hold bolt **2** in place with an offset screwdriver and tighten nut **1** to specified torque.



Spring strut to frame

38 Nm

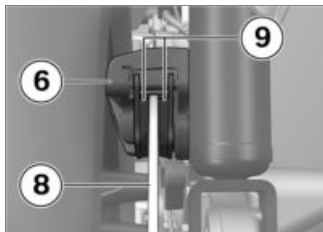

- Position the brake caliper **6** on the brake disc, ensuring that the brake disc **8** is installed between the brake pads **9**.



- Position the brake caliper **6**, install screws **7** and tighten to the specified torque.




Rear brake caliper on rear wheel swinging arm


Thread-locking compound:  
Micro-encapsulated

32 Nm

- Fit the holder for the brake line **5**, install bolt **4** and tighten to the specified torque.
- Secure brake line in holder **3**.

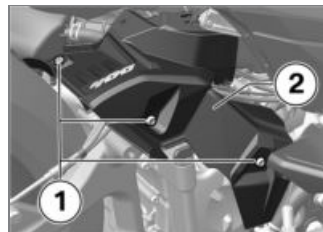

- Position rear-wheel cover **2**.
- Install screws **1**.

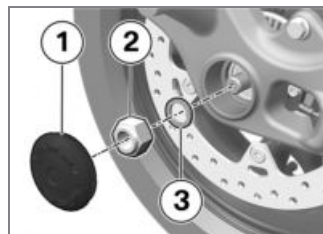

- Operate rear wheel brake several times so that the brake pads are bedded and block using a rubber band.

- » The rear wheel cannot turn.
- Install spacer bush **3**.
- Install nut **2** and tighten to torque.




Rear wheel on output shaft

Thread-locking compound:  
mechanical

115 Nm

- Install lid **1**.
- Remove rubber band from rear wheel brake.

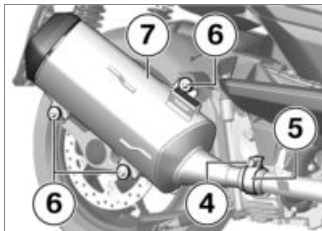

- Insert and position the silencer **7** on the exhaust manifold.

- Install bolts **6** with washers and tighten to the specified torque.



Silencer on swinging arm


21 Nm

- Tighten the bolt **4** of the clamp **5** to the specified torque.



Rear silencer on exhaust manifold

25 Nm

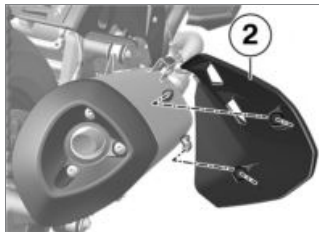

- Hook in the trim for the silencer **2** on the holders.



- Raise the trim for the silencer **2** slightly and insert insulating disc.
- Install bolt **1**.

## Fuses

### Removing the fuse

#### Requirement

The fuses are located under the battery compartment cover on the legshield.



#### ATTENTION


### Jumping of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
- Always replace a defective fuse with a new fuse of the same amperage.◀
- Switch off the ignition.
- Removing battery cover (►► 170).



- To remove the main fuse, pull the fuse **1** out of the fuse carrier.

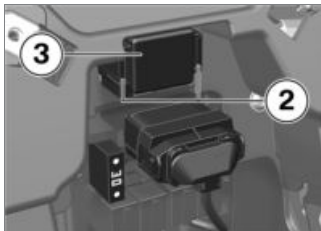


- To remove the fuses from slots 2 to 7, press locks **2** and remove lid **3** from the fuse box.



- Pull the affected fuse out of the fuse box.

## Installing a fuse

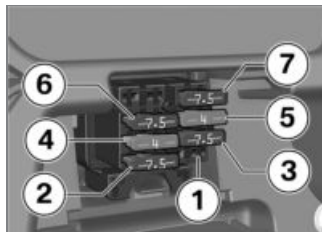

- Replace faulty fuses from the fuse box with a fuse with the required current level.




### NOTICE

The fuse assignments and fuse amperage ratings specified for your motorcycle are listed in the section entitled "Technical data". The figures in the graphic correspond to the fuse numbers.◀




## NOTICE

If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

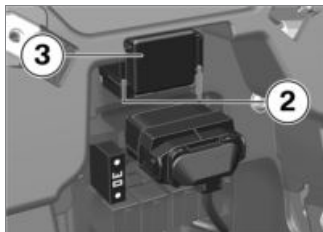

- Install lid **3**.
- » The locks **2** engage audibly.

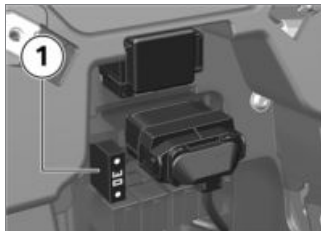

- Replace faulty main fuse **1** with a fuse with the required current level.



Main fuse

30 A (Voltage regulator)

- Install the battery cover (▮▮▮ 170).

## Lighting

### LED light source

As all lights on the Scooter are equipped with LED technology, no light sources can be renewed individually.

- Consult an authorised BMW Motorrad Retailer.

## Battery

### Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry
- Be sure to read and comply with the instructions for char-

ging the battery on the following pages

- Do not turn the battery upside down



## ATTENTION

### On-board electronics (e.g. clock) draining connected battery

Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.◀

### Jump-starting



## ATTENTION

### Excessive current when jump-starting the Scooter

Cable fire or damage to the vehicle electronics

- Do not jump-start the Scooter using the socket; only use the battery terminals.◀



## ATTENTION

### Contact between crocodile clips of jump leads and vehicle

Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.◀



## ATTENTION

### Jump-starting with a voltage greater than 12 V

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V.◀
- Make sure the ground is level and firm and place the Scooter on its stand.

- Removing battery cover (➡ 170).
- Removing the battery holder (➡ 168).
- Begin by connecting one end of the red jump lead to the positive terminal of your own vehicle and the other end to the positive terminal of the second vehicle.
- Connect one end of the black jump lead to the negative terminal of your own vehicle and the other end to the ground point or the negative terminal of the second vehicle.
- Run the engine of the donor vehicle during jump-starting.



## NOTICE

Do not use proprietary start-assist sprays or other products to start the engine.◀

- Start the engine of the vehicle with the discharged battery

in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.

- Allow both engines to run for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminal first, then from the positive terminal.
- Installing the battery holder (▣▣▣ 169).
- Install the battery cover (▣▣▣ 170).

## Recharging connected battery



### ATTENTION

**Charging the battery that is connected to the vehicle via the battery terminals**

Damage to the on-board electronics

- Disconnect the battery at the battery terminals before charging.◀



### ATTENTION

**Recharging a fully discharged battery via the power socket or extra socket**

Damage to the vehicle electronics

- If a battery has discharged to the extent that it is completely flat (battery voltage less than 12 V, indicator lights and multifunction display remain off when the ignition is switched on) always charge the **disconnected** battery with the charger connected directly to the battery terminals.◀
- Use only the socket in the right-hand storage compart-

ment to charge the connected battery.



### ATTENTION

**Commercially available battery chargers connected to the on-board power socket**


Damage to charger and to frame and suspension electronics

- Use only chargers approved by BMW Motorrad.◀
- Comply with the operating instructions of the charger.

## Recharging disconnected battery

- Removing battery cover (▣▣▣ 170).
- Removing the battery holder (▣▣▣ 168).

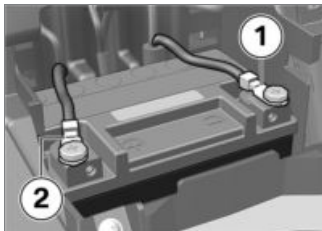

**ATTENTION****Battery not disconnected in accordance with correct procedure**


Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.◀
- First, disconnect the negative battery cable **2**.
- Then, disconnect the positive battery cable **1**.
- Charge the battery using a suitable charger.

- Comply with the operating instructions of the charger.
- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.

**NOTICE**

The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.◀

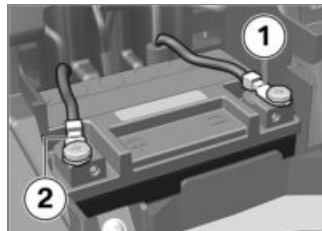
**ATTENTION****Battery not connected in accordance with correct procedure**

Risk of short-circuit


- Always proceed in compliance with specified installation sequence.◀
- First connect the positive battery cable **2**.
- Then connect the negative battery cable **1**.
- Installing the battery holder (▶▶▶ 169).

- Install the battery cover (168).

## Removing the battery holder

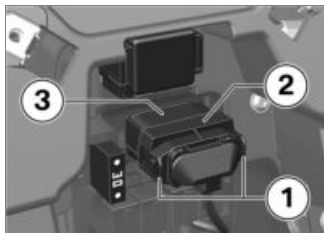

- Push in locks **1**.
- Loosen diagnostic connector **2** from holder **3** and allow it to hang to one side.

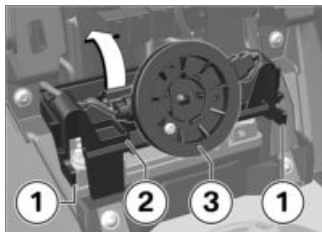


- Press locks **1** on left and right and fold the battery holder **2** up.
- Unhook battery holder **1** from the rear of the battery compartment, pull out with audio frequency aerial **3** and lay to the side.

## Removing battery

- Switch off the ignition.
- If applicable, switch off the anti-theft alarm.
- Removing battery cover (168).

- Removing the battery holder (168).

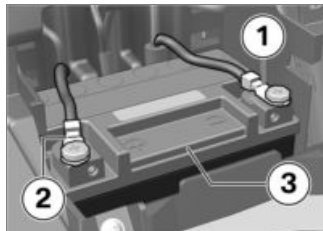

## ATTENTION


### Battery not disconnected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence. ◀
- First disconnect battery negative lead **1**.
- Then disconnect the battery positive lead **2**.

- Remove the battery **3** from the battery compartment.

## Installing battery

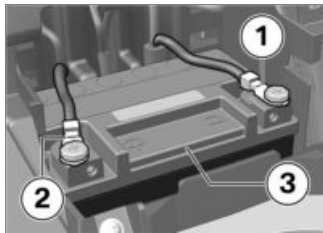

- Place the battery **3** in the battery compartment, positive terminal on the left side.



### ATTENTION


#### Battery not connected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with specified installation sequence. ◀

- First install the positive battery cable **2**.
- Then install the negative battery cable **1**.
- Installing the battery holder (➡ 169).
- Install the battery cover (➡ 170).
- Setting the clock (➡ 81).
- Setting the date (➡ 82).


## Installing the battery holder

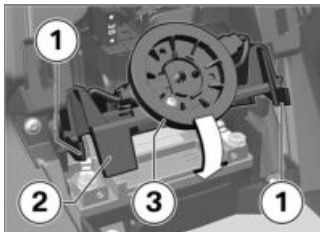

- Place the battery holder **2** with the audio frequency aerial **3** in position and hook in place at

the rear of the battery compartment.

- Fold down the battery holder **2** while pressing locks **1** until it engages.

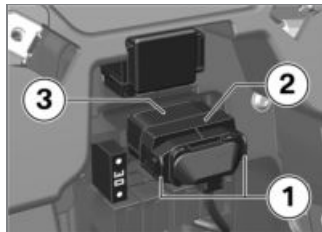


- Insert the diagnostic connector **2** into the bracket **3**.  
» The locks **1** engage.

## Body panels

### Removing battery cover




- Remove screws **1**.

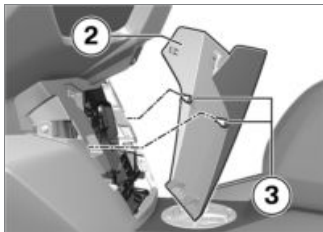

- Slightly lift battery cover **2** at the edges.

- Pull mounting clips **3** of the battery cover **2** out of the mountings.

### Install the battery cover

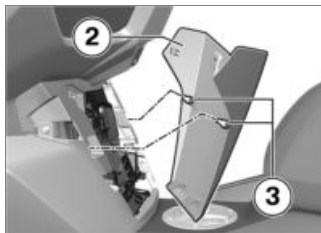


- Check, if all mounting clips **3** on the battery cover **2** fit.
- Hook battery cover **2** in at the bottom and press mounting clips **3** evenly into the mountings.



- Install screws **1**.

### Remove the side panel

- Removing battery cover (→ 170).
- Open the left storage compartment.

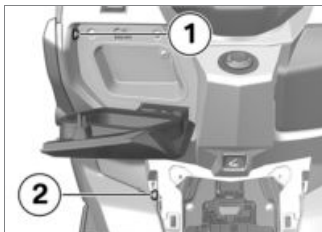

- Remove screws **1** and **2** for fairing side panel.




### NOTICE

The steps described here for the left fairing side panel also apply for the right-hand side.◀




- Remove bolt **3**.

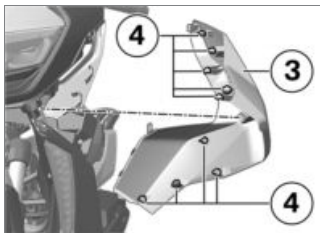

- Raise the fairing side panel **3** slightly at the edges.
- Pull mounting clips **4** of the fairing side panel **2** as evenly

as possibly from the mountings.

### Installing side panel

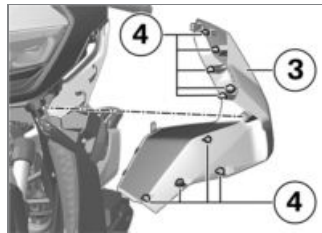

- Check that all mounting clips **4** are installed on the fairing side panel **3**.
- Fit fairing side panel **3** and push mounting clips **4** evenly into the mountings.




### NOTICE

The steps described here for the left fairing side panel also apply for the right-hand side.◀



- Fit the screw **3**.

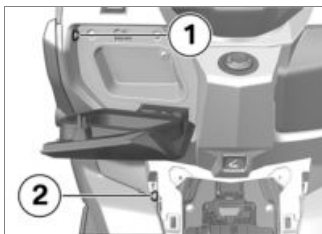

- Fit screws **1** and **2** for fairing side panel.
- Close left storage compartment.


- Install the battery cover (→ 170).

## Diagnostic connector Disengaging diagnostic connector

### Requirement

The diagnostic connector is located under the battery compartment cover on the legshield.

- Removing battery cover (→ 170).

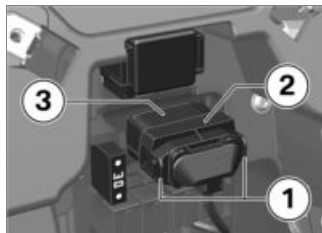


- Push in the locks **1**.

- Remove diagnostic connector **2** from bracket **3**.  
» The interface to the diagnosis and information system can be connected to the diagnostic connector **2**.

## Installing the diagnostic connector

- Disconnect the interface for the diagnosis and information system.

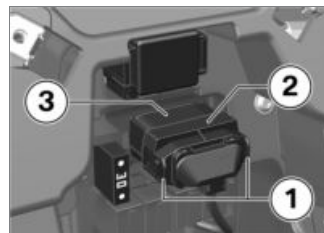

- Insert diagnostic connector **2** in bracket **3**.  
» The locks **1** engage.

- Install the battery cover (→ 170).





## Accessories

General instructions.....	176
Power socket .....	176
Topcase .....	177
Navigation system .....	179

## General instructions



### CAUTION

#### Use of other-make products

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle. ◀

Parts and accessory products of BMW have been thoroughly

tested to establish that they are safe, functional and suitable. Consequently, BMW accepts product liability. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

Whenever you are planning modifications, comply with all the legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country. Your BMW Motorrad Retailer can offer expert advice on the choice of genuine BMW parts, accessories and other products. To find out more about accessories go to:

**[bmw-motorrad.com/  
accessories](http://bmw-motorrad.com/accessories)**

## Power socket

Information on using the socket:

### Connection of electrical devices

- Electrical devices connected to the motorcycle's socket can only be used when the ignition is switched on.

### Cable routing

Note the following with regard to the routing of cables from sockets to items of electrical equipment:

- Make sure that cables do not impede the rider.
- Make sure that cables do not restrict the steering angle or obstruct handling.
- Make sure that cables cannot be trapped.

## Automatic switch-off

- The socket is automatically switched off during the starting operation.
- The power supply to the sockets is switched off no more than 15 minutes after the ignition is switched off, in order to prevent overloading of the on-board electronics. Low-wattage electrical accessories might not be recognised by the vehicle's electronics. In such cases, power sockets are switched off very shortly after the ignition is turned off.
- The power socket is switched off if the battery voltage is too low to maintain the vehicle's starting capability.
- The power socket is also switched off when the maximum load capability as stated in the technical data is exceeded.


## Topcase

- with topcase Light<sup>OA</sup>

### Opening topcase



- Turn the key in the topcase lock **1** to the OPEN position.

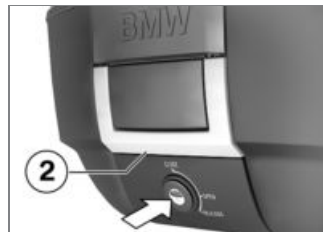

- Push topcase lock forwards.  
» Topcase handle **2** springs open.



- Pull the release lever behind the cover **3** backwards.  
» The lid of the topcase opens.

- Open the topcase lid.

## Closing topcase




- Make sure that the topcase handle **2** is folded out.
- Close the topcase lid and push into the lock. Check that nothing is trapped between the lid and the case.
- Close the topcase handle **2**.
- If necessary, turn the key in the topcase lock to the CLOSE position and remove the key from the lock.

## Removing the topcase



- Turn the key in the topcase lock **1** to position OPEN.

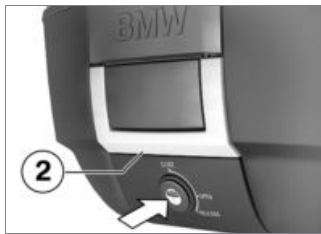

- Push topcase lock forwards.  
» Topcase handle **2** springs open.



- Turn the key in the topcase lock to position RELEASE.
- Pull release lever **4** backwards, at the same time lift the topcase by the carry handle.
- Lift the topcase to the rear from the topcase carrier.

## Installing topcase




- Make sure that the topcase handle **2** is folded out and that the key in the topcase lock is in the RELEASE position.
- Insert the topcase at the front in the topcase carrier.
- Pull release lever **4** backwards, at the same time insert the topcase at the rear into the topcase carrier.
- Close the topcase handle **2**.
- If necessary, turn the key in the topcase lock to the CLOSE position and remove the key from the lock.

## Maximum payload

Note the maximum payload stated on the label inside the topcase.


Contact your authorised BMW Motorrad Retailer if you cannot find your combination of vehicle and topcase on the label. The values for the combination described here are as follows:

	Payload of topcase
max 5 kg	

## Navigation system

### Installing navigation device

– with navigation system<sup>OA</sup>

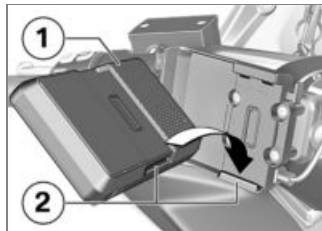

- Place navigation device **1** in mounting **2**.




- Swivel navigation device **1** forwards and press the top edge into latch mechanism **3**.  
» Navigation device engages.

- Check that the navigation device is secure in the cradle.
  - » The red marking for unlocking is not visible.

## Removing navigation device

- with navigation system<sup>OA</sup>

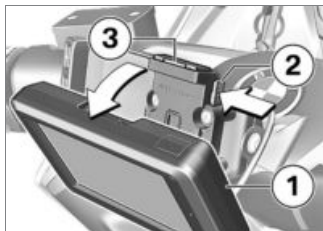

- Press unlocking **2**.
  - » The red mark **3** indicates unlocking.
- Remove navigation device **1**.

## Using the navigation system.



### NOTICE

The description below is based on the BMW Motorrad Navigator V and the BMW Motorrad Navigator VI. The BMW Motorrad Navigator IV does not support all the options described here.◀



### NOTICE

Only the latest version of the BMW Motorrad communication system is supported. A software update of the BMW Motorrad communication system may be necessary. If this is the case, consult your authorised BMW Motorrad dealer.◀

If the BMW Motorrad Navigator is installed and the operating focus is switched to the Navigator (► 95), some of its functions

can be operated directly from the handlebars.



The navigation system is operated via the multi-controller **1** and the MENU rocker button **2**.

## Turn the multi-controller 1 up and down

On the compass and Mediaplayer page: increase or decrease the volume of a BMW Motorrad communication system connected via Bluetooth. In the BMW special menu: select menu items.

## **Briefly tilt the multi-controller 1 to the left and right**

Switch between the Navigator's main pages:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My Motorcycle page

## **Hold the multi-controller 1 to the left and right**

Activate certain functions on the Navigator display. An arrow to the right or to the left above the corresponding button area on the display indicates a function that can be activated in this way.



Long-push to the right to activate this function.



Long-push to the left to activate this function.

## **Press down MENU rocker button 2**

Switch the operating focus to Pure view.

In detail, the following functions can be controlled:

### **Map view**

- Turn up: Enlarge map section (Zoom in).
- Turn down: Reduce map section (Zoom out).

### **Compass page**

- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

### **BMW special menu**

- Speak: Repeat most recent navigation announcement.

- Waypoint: Save current location as a favourite.
- Home: Starts navigation to home address (greyed if no home address has been defined).
- Mute: Switch automatic navigation announcements off or on (off: a crossed-out lips symbol appears in the top line of the display). "Speak" will still activate navigation announcements. All other acoustic outputs remain switched on.
- Switch off display: Deactivate the display.
- Dial home number: Dials the home phone number saved in the Navigator (not shown unless a telephone is connected).
- Diversion: Activates the diversion function (not shown unless a route is active).
- Skip: Skips the next waypoint (not shown unless the route has waypoints).

## My Motorcycle

- Turn: Changes the number of data shown.
- Touch a data field on the display to open the menu for selecting data.
- The values available for selection depend on the optional extras installed on the vehicle.



### NOTICE

The Mediaplayer function is only available when a Bluetooth device complying with the A2DP standard is used, for example a BMW Motorrad communication system. ◀

## Mediaplayer

- Long-push to the left: Play preceding track.
- Long-push to the right: Play next track.
- Turning increases or decreases the volume of a

BMW Motorrad communication system connected via Bluetooth.



## Care

Care products .....	184
Washing the vehicle .....	184
Cleaning easily damaged components.....	185
Care of paintwork .....	186
Vehicle preservation .....	186
Lay up the Scooter .....	186
Put Scooter into operation .....	186

## Care products

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad Retailer. The substances in BMW CareProducts have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



### ATTENTION

#### Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol. ◀

## Washing the vehicle

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the motorcycle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the Scooter with cold water immediately after the end of the journey.



### WARNING

**Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions**

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads. ◀



### ATTENTION

#### Effect of road salt intensified by warm water

Corrosion

- Use only cold water to wash off road salt. ◀



### ATTENTION

#### Damage due to high water pressure from high pressure cleaners or steam cleaners

Corrosion or short circuit, damage to labels, seals, hydraulic brake system, electrical system and the motorcycle seat

- Exercise restraint when using a steam jet or high pressure cleaning equipment.◀

## Cleaning easily damaged components

### Plastics



#### ATTENTION

### Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.◀

### Body panels

Clean trim panel components with water and BMW Motorrad solvent cleaner.

### Plastic windscreens and headlight lens

Remove dirt and insects with a soft sponge and generous amounts of water.



#### NOTICE

Soften stubborn dirt and insects by covering the affected areas with a wet cloth.◀

### Chrome

Carefully clean chrome sections with a generous amount of water and motorcycle cleaner from the care series BMW Motorrad Care Products. This applies especially where road salt has been in use. For an additional treatment, use BMW Motorrad metal polish.

### Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



#### ATTENTION

### Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.◀

### Rubber

Treat rubber components with water or BMW rubber-care products.



#### ATTENTION

### Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.◀

## Care of paintwork

The long-term effects of materials that are damaging to paint can be prevented by regular vehicle washes, particularly if your vehicle is ridden in areas susceptible to high levels of air pollution or natural contamination, for example tree resin or pollen. Particularly aggressive materials, however, should be removed immediately, otherwise changes to or discolouration of the paint can result. These include, for example, spilled fuel, oil, grease, brake fluid or bird excrement. For this, we recommend BMW Motorrad solvent cleaner followed by BMW Motorrad gloss polish for preservation. Contamination of the paint surface can be seen particularly clearly after a vehicle wash. These areas should be cleaned immediately using benzine or spirit, applied with a clean cloth

or cotton pad. BMW Motorrad recommends that tar spots be removed using BMW tar remover. The paint should then be preserved in these areas.

## Vehicle preservation

If water no longer rolls off the paint, the paint must be preserved.

For paint preservation, BMW Motorrad recommends the use of BMW Motorrad gloss polish or agents containing carnauba wax or synthetic wax.

## Lay up the Scooter

- Clean the Scooter.
- Fully refuel the Scooter.
- Removing battery (➡ 168).
- Spray the brake-lever, centre-stand and side-stand pivot mounts with a suitable lubricant.

- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the Scooter in a dry room in such a way that there is no load on either wheel.

## Put Scooter into operation

- Remove the protective wax coating.
- Clean the Scooter.
- Installing battery (➡ 169).
- Comply with checklist (➡ 125).

**Technical data**

Troubleshooting chart .....	188
Screw connections .....	192
Fuel.....	194
Engine oil .....	194
Engine .....	195
Clutch .....	196
Transmission .....	196
Rear-wheel drive.....	196
Frame .....	196
Chassis and suspension .....	197
Brakes .....	197
Wheels and tyres .....	198
Electrical system.....	200
Anti-theft alarm .....	202
Keyless Ride.....	202

Dimensions .....	203
Weights.....	203
Riding specifications .....	204

## Troubleshooting chart

Engine does not start or is difficult to start.

Possible cause	Rectification
Side stand extended	Retract the side stand.
Starting without operating the brakes	When starting, operate a brake lever.
BMW flexcase open	Close BMW flexcase.
No fuel in tank	Refuelling (▮▮▮▶ 131).
Battery flat	Recharging battery (▮▮▮▶ 166).

The Bluetooth connection is not established.

### Possible cause

### Rectification

Necessary steps for Bluetooth coupling have not been carried out.

Check the necessary steps for Bluetooth coupling in the operating instructions for the communication system.

Communication system is not automatically connected, even though Bluetooth coupling has taken place.

Switch off the helmet's communication system and reconnect it after a minute or two.

Too many Bluetooth devices are saved on the helmet.

All Bluetooth coupling entries on the helmet are deleted (see the communication system operating instructions).

There are other vehicles with Bluetooth-capable devices in the vicinity.

Avoid simultaneous Bluetooth coupling with several vehicles.

Bluetooth connection is interrupted.

### Possible cause

### Rectification

The Bluetooth connection to the mobile end device is interrupted.

Switch off energy saving mode.

The Bluetooth connection to the helmet is interrupted.

Switch off the helmet's communication system and reconnect it after a minute or two.

The volume in the helmet cannot be adjusted.

Switch off the helmet's communication system and reconnect it after a minute or two.

The telephone book is not displayed in the TFT display.

**Possible cause****Rectification**

The phone book was not transmitted to the vehicle.

Confirm transmission of the phone data (☎➡ 110) when Bluetooth coupling with the mobile end device.

Active route guidance is not displayed in the TFT display.

**Possible cause****Rectification**

Navigation from the BMW Motorrad Connected App was not transmitted.

The BMW Motorrad Connected App is opened on the connected mobile end device prior to departure.

The route guidance cannot be started.

Secure the mobile device's data connection and check the map data on the mobile end device.





ASC is making adjustments where not required, too often, or too early.

Possible cause	Rectification
Tyres changed and tyre radii changed	Calibrate ASC (➡ 79).
Insufficient tyre pressure front or rear; tyre pressure or load has changed	Checking tyre pressure (➡ 150).
No drive on very loose surfaces (e.g. sand or snow)	Switch off ASC to overcome extremely poor surface conditions (➡ 77).
Loss of adaptation values for the tyre radii in the Digital Motor Electronics after software update	Calibrate ASC (➡ 79).

## Screw connections

Brakes	Value	Valid
<b>Brake caliper on fork leg</b>		
M8 x 50 - 10.9	32 Nm	
<b>Rear brake caliper on rear wheel swinging arm</b>		
M8 x 30 - 10.9, Replace screw Micro-encapsulated	32 Nm	
<b>Brake hose bracket on swinging arm</b>		
M6 x 12	8 Nm	
<b>Front wheel</b>	<b>Value</b>	<b>Valid</b>
<b>Bolt in quick-release axle at front</b>		
M12 x 20	32 Nm	
<b>Clamping bolts (quick-release axle) in telescopic forks</b>		
M8 x 30	19 Nm	

Rear wheel	Value	Valid
<b>Rear wheel on output shaft</b>		
M16, Replace nut mechanical	115 Nm	
<b>Right swinging arm on drivetrain swinging arm</b>		
M10 x 50	38 Nm	
<b>Spring strut on swinging arm</b>		
M10 x 50	38 Nm	
<b>Spring strut to frame</b>		
M10 x 50	38 Nm	
<b>Exhaust system</b>	<b>Value</b>	<b>Valid</b>
<b>Silencer on swinging arm</b>		
M8 x 50	21 Nm	
<b>Rear silencer on exhaust mani- fold</b>		
Clamp, M8 x 40	25 Nm	

Recommended fuel grade	 Regular, unleaded (maximum 15 % ethanol, E15)  91 ROZ/RON min 87 AKI
Fuel level	approx. 12.8 l
Reserve volume	approx. 4 l
Fuel consumption	3.51 l/100 km, following world-wide harmonised motorcycle test cycle (WMTC)

## Engine oil

Engine oil, capacity	approx. 1.8 l, with filter change
Specification	SAE 5W-40, API SJ / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.
Engine oil, quantity for topping up	max 0.4 l, Difference between <b>MIN</b> and <b>MAX</b>

**BMW recommends ADVANTEC**  
ORIGINAL BMW ENGINE OIL

## Engine

Location of engine number	Crankcase, left next to the oil filter
Engine type	A85A03M0
Engine design	One cylinder, four-stroke
Displacement	350 cm <sup>3</sup>
Cylinder bore	80 mm
Piston stroke	69.6 mm
Compression ratio	11.5 : 1
Nominal output	25 kW, at engine speed: 7500 min <sup>-1</sup>
Torque	35 Nm, at engine speed: 6000 min <sup>-1</sup>
Maximum engine speed	max 9400 min <sup>-1</sup>
Idle speed	1450 $\pm$ 50 min <sup>-1</sup> , Engine at regular operating temperature
Exhaust emissions standard	Euro 4

## Clutch

Clutch type	Centrifugal clutch
-------------	--------------------

## Transmission

Gearbox type	CVT (Continuously Variable Transmission)
--------------	--

## Rear-wheel drive

Type of final drive	Spur gear unit
Gear ratio of the final drive	8.71

## Frame

Frame type	Bridge-type steel frame
Position of the Vehicle Identification Number	Frame, front right on steering head
Type plate location	Frame at front, steering head

## Chassis and suspension

Type of front suspension	Telescopic forks
Spring travel, front	110 mm, at front wheel
Type of rear suspension	Drivetrain swinging arm with screwed on auxiliary swinging arm
Design of the rear-wheel suspension	Directly steered spring strut with adjustable spring preload
Spring travel at rear wheel	112 mm, at rear wheel

## Brakes

### Front wheel

Type of front brake	Twin disc brake, rigid, diameter 265 mm, 4-piston fixed caliper
Brake-pad material, front	Organic material
Brake disc thickness, front	5.0 mm, when new 4.5 mm, Wear limit

**Rear wheel**

Type of rear brake	Single-disc brake, diameter 265 mm, 1-piston floating calliper
Brake-pad material, rear	Sintered metal
Brake disc thickness, rear	5.0 mm, when new 4.5 mm, Wear limit

**Wheels and tyres**

Recommended tyre sets	An overview of currently approved tyres is available from your authorised BMW Motorrad Retailer or on the Internet at <a href="http://bmw-motorrad.com">bmw-motorrad.com</a> .
Speed category, front/rear tyres	S, required at least: 180 km/h

**Front wheel**

Front wheel type	Aluminium cast wheel
Front wheel rim size	3.50" x 15"
Tyre designation, front	120/70-15
Load index, front tyre	56
Permissible front-wheel imbalance	max 5 g



**Rear wheel**

Rear-wheel type	Aluminium cast wheel
Rear wheel rim size	4.25" x 14"
Tyre designation, rear	150/70-14
Load index, rear tyre	66
Permissible rear-wheel imbalance	max 5 g

**Tyre pressure**

Tyre pressure, front	2.2 bar, One-up, tyre cold 2.4 bar, Two-up mode with loading; tyre cold
Tyre pressure, rear	2.4 bar, One-up, tyre cold 2.6 bar, Two-up mode with loading; tyre cold

## Electrical system

Electrical rating of on-board socket	max 5 A, Socket in storage compartment, front right
<b>Battery</b>	
Battery type	AGM
Battery rated voltage	12 V
Battery rated capacity	9 Ah
<b>Spark plugs</b>	
Spark plugs, manufacturer and designation	NGK LMAR8J-9E
<b>Light source</b>	
Bulbs for the low-beam headlight	LED
Bulb for high-beam headlight	LED
Bulb for parking light	LED
– with daytime riding light <sup>OE</sup>	LED ring light
Bulbs for flashing turn indicators, front	LED
Bulbs for flashing turn indicators, rear	LED
Bulb for tail light/brake light	LED
Light source for the number plate light	integrated in rear light

**Fuses**

Main fuse	30 A, Voltage regulator
Fuse 1	Not used
Fuse 2	7.5 A, Diagnostic socket, ignition lock, Keyless Ride, anti-theft alarm
Fuse 3	7.5 A, Multifunction switch, left, tail light, helmet compartment lighting, storage compartment lock
Fuse 4	4 A, Brake light switch
Fuse 5	4 A, Fuel pump relay
Fuse 6	7.5 A, Fan relay
Fuse 7	7.5 A, Ignition coil, fuel injector, tank vent valve

## Anti-theft alarm

– with anti-theft alarm (DWA)<sup>OE</sup>

Activation time on arming	approx. 30 s
Alarm duration	approx. 26 s
Activation time between two alarms	15 s
Battery type (for control unit)	CR 123 A

## Keyless Ride

Range of the Keyless Ride radio-operated key	approx. 1 m
Battery type (For Keyless Ride-radio-operated key)	CR 2032

## Dimensions

Length of motorcycle	2210 mm, over number-plate carrier
Height of motorcycle	min 1437 mm, over windscreen at DIN unladen weight
Width of motorcycle	835 mm, with mirrors
Front-seat height	775 <sub>-13</sub> mm, Without rider, at DIN unladen weight
Rider's inside-leg arc, heel to heel	1760 <sub>-26</sub> mm, Without rider, at DIN unladen weight

## Weights

Vehicle kerb weight	213 kg, DIN unladen weight, ready for road, 90 % load of fuel, without optional extras
Permissible wheel load, front	max 160 kg
Permissible wheel load, rear	max 280 kg
Permissible gross weight	415 kg
Maximum payload	202 kg

## Riding specifications

Starting capability on uphill gradients (at permissible gross weight)	max 32 %
Top speed	139 km/h

## Service

BMW Motorrad Service .....	206
BMW Motorrad Service history ....	206
BMW Motorrad mobility services .....	207
Maintenance work .....	207
Maintenance schedule .....	209
Maintenance confirmations .....	210
Service confirmations .....	227

## BMW Motorrad Service

BMW Motorrad has an extensive network of dealerships in place to look after you and your Scooter in more than 100 countries. Authorised BMW Motorrad Retailers have the technical information and the technical know-how to carry out reliably all maintenance and repair work on your BMW Scooter.

You can locate your nearest authorised BMW Motorrad Retailer by visiting our website:

**bmw-motorrad.com**



### WARNING

#### Maintenance and repair work not in compliance with correct procedure

Risk of accident due to subsequent damage

- BMW Motorrad recommends you have all the associated work on your Scooter car-

ried out by a specialist workshop, preferably an authorised BMW Motorrad Retailer. ◀

In order to help ensure that your BMW Scooter is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your Scooter.

Have all maintenance and repair work that is carried out confirmed in the "Service" chapter in this manual. For generous treatment of claims submitted after the warranty period has expired, evidence of regular maintenance is essential.

Your authorised BMW Motorrad Retailer can provide information on BMW services and the work undertaken as part of each service.

## BMW Motorrad Service history

### Entries

Maintenance work that has been carried out is entered in the proof of maintenance. The entries are like a Service Booklet and provide proof of regular maintenance.

If an entry is made in the electronic service booklet of the vehicle, service-relevant data is saved in the central IT systems of BMW AG, Munich.

If there is a change in vehicle owner, the data saved in the electronic service booklet can also be viewed by the new vehicle owner. A BMW Motorrad Retailer or a specialist workshop can also view data that is stored in the electronic service booklet.



## Objection

The vehicle owner can object to entries being made by the BMW Motorrad Retailer or a specialist workshop in the electronic service booklet along with the corresponding storage of data in the vehicle and transfer of data to the vehicle manufacturer for the period of time that they are the vehicle owner. In this instance, no entry is made in the electronic service booklet of the vehicle.

## BMW Motorrad mobility services

If you have a new BMW motorcycle, you are protected by various of the BMW Motorrad mobility services in the event of a breakdown (e.g. BMW breakdown assistance, breakdown recovery, vehicle transport).

Find out from your authorised BMW Motorrad Retailer which mobility services are offered.

## Maintenance work

### BMW pre-delivery check

Your authorised BMW Motorrad Retailer conducts the BMW pre-delivery check before handing over the vehicle to you.

### BMW Running-in Check

The BMW running-in check must be carried out between 500 km and 1200 km.

### BMW Service

The BMW Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad dealer confirms that the service work has been carried out and enters

the date when the next service will be due.

For riders with a high mileage it may be necessary to have a service before the specified deadline. In this case, a corresponding maximum mileage is entered in the service confirmation. If this mileage is reached before the next service deadline, the service must be brought forward.

The scope of maintenance work required for your vehicle can be found in the following maintenance schedule:

	500-1 200 km 300-750 mls	10 000 km 6 000 mls	20 000 km 12 000 mls	30 000 km 18 000 mls	40 000 km 24 000 mls	50 000 km 30 000 mls	60 000 km 36 000 mls	70 000 km 42 000 mls	80 000 km 48 000 mls	90 000 km 54 000 mls	100 000 km 60 000 mls	12 months	24 months
①	X												
②		X	X	X	X	X	X	X	X	X	X	X <sup>a</sup>	
③		X	X	X	X	X	X	X	X	X	X	X <sup>a</sup>	
④		X	X	X	X	X	X	X	X	X	X		
⑤		X	X	X	X	X	X	X	X	X	X		
⑥			X		X		X		X		X		
⑦			X		X		X		X		X		
⑧			X		X		X		X		X		
⑨			X		X		X		X		X		
⑩			X		X		X		X		X		
⑪					X				X				
⑫												X <sup>b</sup>	X <sup>b</sup>

## Maintenance schedule

- 1** BMW running-in check (including oil change)
  - 2** BMW Service standard scope
  - 3** Engine-oil change, with filter
  - 4** Clean/check filter for CVT
  - 5** Replace air filter element
  - 6** Replace CVT belt with rollers, check sliding block and replace if necessary
  - 7** Replace all spark plugs
  - 8** Check valve clearance
  - 9** Replace mounting for rubber mounts
  - 10** Oil change in the telescopic forks
  - 11** Check the clutch (clutch removed)
  - 12** Change brake fluid, entire system
- <sup>a</sup> annually or every 10000 km (whichever comes first)

<sup>b</sup> for the first time after one year, then every two years

## Maintenance confirmations

### BMW Service standard scope

The repair tasks in the BMW Service standard scope are listed below. The actual scope of maintenance work applicable for your vehicle may vary.

- Check state of charge of the battery
- Performing vehicle test with BMW Motorrad diagnostic system
- Visual inspection of the brake lines, brake hoses and connections
- Checking the brake fluid level, front and rear
- Check front brake pads and brake discs for wear
- Check rear brake pads and brake disc for wear
- Check steering-head bearing
- Check coolant level
- Check throttle cable for play
- Check tyre pressure and tread depth
- Check lights and signalling system
- Function test, engine start suppression
- Final inspection and check for road safety
- Set service date and remaining distance
- Confirm BMW service in on-board literature

## **BMW pre-delivery check**

carried out

at \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

## **BMW Running-in Check**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

Notes

-----

-----

-----

-----

-----

-----

-----

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

## Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

## Notes

-----

-----

-----

-----

-----

-----

-----

-----

\_\_\_\_\_  
Stamp, signature

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

Notes

-----

-----

-----

-----

-----

-----

-----



## BMW Service

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

## Work performed

BMW Service

Yes

No

☐
☐

Oil change, engine, with filter

☐
☐

Renewing air cleaner insert

☐
☐

Replacing CVT belt

☐
☐

Renewing all spark plugs

☐
☐

Checking valve clearance

☐
☐

Replacing fixture for rubber mount

☐
☐

Check clutch (clutch removed)

☐
☐

Change brake fluid in entire system

☐
☐

## Notes

-----

-----

-----

-----

-----

-----

-----

-----

Stamp, signature

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

Notes

-----

-----

-----

-----

-----

-----

-----

-----

## BMW Service

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

Work performed

BMW Service

Yes

No

☐
☐

Oil change, engine, with filter

☐
☐

Renewing air cleaner insert

☐
☐

Replacing CVT belt

☐
☐

Renewing all spark plugs

☐
☐

Checking valve clearance

☐
☐

Replacing fixture for rubber mount

☐
☐

Check clutch (clutch removed)

☐
☐

Change brake fluid in entire system

☐
☐

Notes

-----

-----

-----

-----

-----

-----

-----

-----

Stamp, signature

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

Notes

-----

-----

-----

-----

-----

-----

-----

-----

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

## Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

## Notes

-----

-----

-----

-----

-----

-----

-----

-----

\_\_\_\_\_  
Stamp, signature

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

Notes

-----

-----

-----

-----

-----

-----

-----

# BMW Service

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

Work performed

BMW Service

Yes

No

☐
☐

Oil change, engine, with filter

☐
☐

Renewing air cleaner insert

☐
☐

Replacing CVT belt

☐
☐

Renewing all spark plugs

☐
☐

Checking valve clearance

☐
☐

Replacing fixture for rubber mount

☐
☐

Check clutch (clutch removed)

☐
☐

Change brake fluid in entire system

☐
☐

Notes

-----

-----

-----

-----

-----

-----

-----

-----

Stamp, signature

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

Notes

-----

-----

-----

-----

-----

-----

-----

-----



## BMW Service

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

## Work performed

BMW Service

Yes

No

☐
☐

Oil change, engine, with filter

☐
☐

Renewing air cleaner insert

☐
☐

Replacing CVT belt

☐
☐

Renewing all spark plugs

☐
☐

Checking valve clearance

☐
☐

Replacing fixture for rubber mount

☐
☐

Check clutch (clutch removed)

☐
☐

Change brake fluid in entire system

☐
☐

## Notes

-----

-----

-----

-----

-----

-----

-----

-----

Stamp, signature

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

Notes

-----

-----

-----

-----

-----

-----

-----

## BMW Service

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

Work performed

BMW Service

Yes

No

☐
☐

Oil change, engine, with filter

☐
☐

Renewing air cleaner insert

☐
☐

Replacing CVT belt

☐
☐

Renewing all spark plugs

☐
☐

Checking valve clearance

☐
☐

Replacing fixture for rubber mount

☐
☐

Check clutch (clutch removed)

☐
☐

Change brake fluid in entire system

☐
☐

Notes

-----

-----

-----

-----

-----

-----

-----

-----

Stamp, signature

**BMW Service**

carried out

at \_\_\_\_\_

at km \_\_\_\_\_

Next service

at the latest

at \_\_\_\_\_

or, when reached earlier

at km \_\_\_\_\_

\_\_\_\_\_  
Stamp, signature

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Renewing air cleaner insert

☐☐

Replacing CVT belt

☐☐

Renewing all spark plugs

☐☐

Checking valve clearance

☐☐

Replacing fixture for rubber mount

☐☐

Check clutch (clutch removed)

☐☐

Change brake fluid in entire system

☐☐

Notes

-----

-----

-----

-----

-----

-----

-----

-----

## Service confirmations

The table is used to verify maintenance and repair work as well as installed optional accessories and purchased special promotions.

Work performed	at km	Date

[illegible]

## Appendix

Certificate for electronic immobiliser .....	230
Certificate for Keyless Ride .....	232
Certificate for TFT instrument cluster .....	234

## FCC Approval

### Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀



## Approbation de la FCC

### Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des

informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

## Certifications

---

### BMW Keyless Ride ID Device



#### USA, Canada

Product name: BMW Keyless Ride ID Device  
FCC ID: YGOHUF5750  
IC: 4008C-HUF5750

#### Canada:

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### USA:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Declaration Of Conformity

---

We declare under our responsibility that the product

## **BMW Keyless Ride ID Device (Model: HUF5750)**

complies with the appropriate essential requirements of the article 3 of the R&TIE and the other relevant provisions, when used for its intended purpose. Applied Standards:

1. Health and safety requirements contained in article 3 (1) a)
  - EN 60950-1:2006+A11:2009+A1:2010+A12:2011; Information technology equipment- Safety
2. Protection requirements with respect to electromagnetic compatibility article 3 (1) b)
  - EN 301 489-1 (V1.9.2, 09/2011), Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements
  - EN 301 489-3 (V1.4.1, 08/2002) Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for short range devices (SRD) operating on frequencies between 9 kHz and 40 GHz
3. Means of the efficient use of the radio frequency spectrum article 3 (2)
  - EN 300 220-1 & -2 (V2.4.1, 05/2012), electromagnetic compatibility and radio spectrum matters (ERM); Short range devices (SRD); Radio equipment to be used in the 25 MHz to 1000 MHz frequency range with power levels ranging up to 500 mW;  
Part 1: Technical characteristics and test methods.  
Part 2: Harmonized EN covering essential requirements under article 3.2 of the R&TIE directive

The product is labeled with the CE marking: **CE**

Velbert, October 15<sup>th</sup>, 2013

---



---

Benjamin A. Müller  
Product Development Systems  
Car Access and Immobilization – Electronics  
Huf Hülbeck & Fürst GmbH & Co. KG  
Steeger Straße 17, D-42551 Velbert

# Declaration of Conformity

## Radio equipment TFT instrument cluster

For all Countries without EU

### Technical information

BT operating freq. Range: 2402 – 2480 MHz

BT version: 4.2 (no BTLE)

BT output power: < 4 dBm

WLAN operating freq. Range: 2412 – 2462 MHz

WLAN standards: IEEE 802.11 b/g/n

WLAN output power: < 20 dBm

### Manufacturer and Address

Manufacturer:

Robert Bosch Car Multimedia GmbH

Address: Robert Bosch Str. 200,

31139 Hildesheim, GERMANY

### Turkey

Robert Bosch Car Multimedia GmbH, ICC6.5in

tipi telsiz sisteminin 2014/53/EU

nolu yönetmeliğe uygun olduğunu beyan eder.

AB Uygunluk Beyanı'nın tam metni, aşağıdaki

internet adresinden görülebilir: [http://cert.bosch-](http://cert.bosch-carmultimedia.net)

[carmultimedia.net](http://cert.bosch-carmultimedia.net)

### Brazil

Este equipamento opera em caráter secundário,

isto é, não tem direito a proteção contra

interferência prejudicial, mesmo de estações do

mesmo tipo, e não pode causar interferência a

sistemas operando em caráter primário.

## **Canada**

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## **Mexico**

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

## **Taiwan, Republic of**

根據 NCC 低功率電波輻射性電機管理辦法 規定：  
第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

### **第十四條**

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，

指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

## **Thailand**

เครื่องโทรคมนาคมและอุปกรณ์

มีความสอดคล้องตามข้อกำหนดของ กทช.

(This telecommunication equipments is in compliance with NTC requirements)

## **United States (USA)**

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and  
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**A**

- Abbreviations and symbols, 6
- ABS
  - Engineering details, 136
  - Indicator and warning light, 36, 57
  - Self-diagnosis, 127
- Accessories
  - Extra socket, 166
  - General instructions, 176
  - Power socket, 176
  - Topcase, 177
- Actuality, 8
- Alarm
  - triggering, 114
- Alarm function
  - Deactivating, 116
- Ambient temperature
  - Outside temperature warning, 32, 51
  - Reading, 40, 51
- Anti-lock brake system ABS, 129

## Anti-theft alarm, 111

- Activating, 112
- Adjusting, 114
- Indicator light, 23, 26
- Technical data, 202
- Warning, 38, 54

## ASC

- calibrate, 79, 80
- Engineering details, 138
- Indicator and warning light, 36, 58
- Loss of adaptation values for tyre radii, 152
- operate, 77
- Self-diagnosis, 127
- switching off, 77, 78
- switching on, 78, 79

## Automatic Stability Control

- ASC, 138

## Average values

- reset, 76

**B**

## Battery

- Charging battery when connected, 166
  - Indicator light for battery charge current, 38
  - Indicator light for vehicle voltage, 52
  - install, 169
  - Install the battery cover, 170
  - Maintenance instructions, 164
  - Position on the vehicle, 15
  - recharging disconnected battery, 166
  - remove, 168
  - Removing battery cover, 170
  - Technical data, 200
- Beam throw
    - Adjusting, 120
  - Bluetooth, 100
    - Bluetooth coupling, 101
  - Bluetooth coupling, 101

Brake fluid  
  Checking fill level, front  
  brake, 147  
  Checking fill level, rear  
  brake, 148  
  Front wheel brake tank, 17  
  Rear wheel brake tank, 15

Brake pads  
  Checking front, 145  
  checking rear, 146  
  Running in, 129

Brakes  
  Checking function, 145  
  Safety information, 129  
  Safety instructions, 129  
  Technical data, 197

## C

Care  
  Body panels, 185  
  Care products, 184  
  Chrome, 185  
  Paintwork preservation, 186  
  Plastics, 185  
  Radiator, 185

  Rubber, 185  
  Washing the vehicle, 184  
  Windscreen, 185  
Check control  
  Dialogue box, 44  
  Reading, 44  
Checklist, 125  
Clock  
  adjust, 81, 98  
Clutch  
  Centrifugal clutch, 128  
  Technical data, 196  
Continuously Variable  
  Transmission CVT  
  CVT, 128  
Coolant  
  Checking fill level, 149  
  Filler neck, 15  
  Fill-level indicator, 17  
  Indicator light for excess  
  temperature, 33, 55  
  Topping up, 149  
CVT  
  Riding, 128  
  Technical data, 196

## D

Date  
  adjust, 81  
Daytime riding lights  
  automatic, 70  
  automatic or manual, 69  
  manual, 72  
  Manually if automatic is  
  switched on, 71  
Deactivating  
  Alarm function, 116  
  motion sensor, 113  
Default settings, 116  
Diagnostic connector  
  install, 172  
  Loosen, 172  
Dimensions  
  Technical data, 203

## E

Electrics  
  Technical data, 200  
Emergency off switch (kill switch)  
  operate, 68  
  Position on the vehicle, 20  
Emissions warning light, 34, 55



**Engine**

- Indicator light for engine control, 56
- Indicator light for engine electronics, 33, 56
- Malfunction indicator lamp, 34, 55
- overheated, 33
- parking, 68
- Severe fault, 34
- starting, 126
- Technical data, 195

**Engine oil**

- Checking fill level, 144
- Electronic oil-level check, 54
- Indicator light for engine oil level, 33, 55
- Oil dipstick, 17
- Oil filler opening, 17
- Oil level, 39
- Technical data, 194
- Topping up, 144

**Equipment, 7****EWS**

- Electronic immobiliser, 32

**F****Frame**

- Technical data, 196

**Front-wheel stand**

- install, 142

**Fuel**

- Filler neck, 15
- Fuel grade, 131
- Fuel reserve, 38
- refuelling with Keyless Ride, 131, 132
- Technical data, 194

**Fuel reserve**

- Range, 97
- Warning, 38, 59

**Fuses**

- Position on the vehicle, 15
- Replacing, 162
- Technical data, 201

**G****General views, 21**

- Indicator and warning lights, 26, 41
- Instrument panel, 22, 23
- Left multifunction switch, 19

**Left side of vehicle, 15****Multifunction display, 27****My vehicle, 104****Operating area, 21****Right multifunction switch, 20****Right side of vehicle, 17****SETUP, 76****TFT display, 42, 43****Underneath the seat, 18****H****Hazard warning flashers**

- Control, 19
- operate, 73

**Headlight**

- Adjusting, 120
- Adjusting headlight beam throw, 120
- Setting for right-hand/left-hand traffic, 120

**Heated handlebar grips**

- Control, 20
- operate, 83

**Horn, 19**

**I**

- Immobiliser
  - emergency key, 66
  - EWS indicator light, 32
- Instrument panel
  - Overview, 22, 23
  - Photosensor, 23, 26

**J**

- Jump-start, 165

**K**

- Keyless Ride
  - Battery of radio-operated key is discharged radio-operated key is lost, 66
  - Electronic immobiliser EWS, 66
  - Fuel filler cap, unlocking, 131, 132
  - Lock the handlebars, 64
  - Switching off ignition, 65
  - Switching on ignition, 65
  - Technical data, 202
  - Warning, 32, 51, 52
- Keys, 64

**L**

- Lighting
  - Indicator light for faulty light source, 35
  - Technical data, 200
  - Warning for faulty light source, 53
- Lights
  - Adjusting the headlight, 120
  - Control, 19
  - Headlight flasher, operating, 69
  - High-beam headlight, operating, 69
  - operate, 68
  - Parking lights, operating, 69
  - Using daytime riding light, 69
  - Using the low-beam headlight, 68
  - Using the side light, 68
- Luggage
  - Instructions for loading, 124

**M**

- Maintenance
  - General instructions, 142
  - Maintenance schedule, 209
- Maintenance confirmations, 210
- Maintenance intervals, 207
- Media
  - operate, 109
- Menu
  - Call up, 94
- Mirrors
  - Adjusting, 120
- Mobility services, 207
- Motion sensor
  - Deactivating, 113
- Motorcycle
  - Laying up, 186
- Multifunction display
  - operate, 75
  - Overview, 27
  - Quitting SETUP, 77
  - Select display, 74
  - SETUP, 76
- Multifunction switch
  - General view, left side, 19
  - General view, right side, 20

**N**

- Navigation
  - operate, 107
- Navigation devices
  - install, 179
  - installing and removing, 179
  - remove, 180

**O**

- Odometer
  - display, 74
- Odometer and tripmeters
  - Display odometer, 74
  - Display trip recorder, 74
  - Resetting trip distance recorder, 75
- On-board computer
  - in the TFT display, 99
- On-board voltage
  - Warning, 52
- Operating focus
  - change, 95

**P**

- Parking, 130
- Parking light, 69

- Phone
  - operate, 109
- Power socket
  - Notes on use, 176
  - Position on the vehicle, 21
- Pre-Ride-Check, 126
- Pure
  - Overview, 42

**R**

- Rear-wheel drive
  - Technical data, 196
- Refuelling
  - Fuel grade, 131
  - with Keyless Ride, 131, 132
- Remote control
  - Replacing battery, 67
- Rev. counter
  - display, 98
- Rider info status line
  - adjust, 95
  - Adjusting, 96
- Rider's Manual
  - Position on the vehicle, 18
- Riding specifications
  - Technical data, 204
- Riding time
  - reset, 76
- Running gear
  - Technical data, 197
- Running in, 129

**S**

- Safety instructions
  - For brake, 129
  - for brakes, 129
  - For riding, 124
- Scooter
  - care, 183
  - cleaning, 183
  - Lashing, 133
  - Parking, 130
- Seat
  - operate, 85
  - Unlocking, 21
- Seat heating
  - Control, 20
  - for rider's seat, 84
  - operate, 84
- Seat lock
  - Position on the vehicle, 17

- Service, 206
  - Service history, 206
- Service-due indicator, 39, 60
- Settings
  - Headlight, 120
  - Mirrors, 120
  - Spring preload, 120
- SETUP
  - Quit, 77
  - select, 76
- Spark plugs
  - Technical data, 200
- Speed Limit Info
  - Switching on or off, 97
- Speedometer, 97, 98
- Spring preload
  - Adjusting, 120
  - Adjusting element, 15
- Starting, 126
  - Control, 20
- Status indicators
  - select, 74
- Stowage compartment
  - Front, 86
  - operate, 86
  - Position on the vehicle, 21
  - rear, BMW flexcase, 86
  - Unlocking, rear, 18
- T**
- Technical data
  - Anti-theft alarm, 202
  - Battery, 200
  - Brakes, 197
  - Clutch, 196
  - CVT, 196
  - Dimensions, 203
  - Electrics, 200
  - Engine, 195
  - Engine oil, 194
  - Frame, 196
  - Fuel, 194
  - General instructions, 7
  - Keyless Ride, 202
  - Light source, 200
  - Rear-wheel drive, 196
  - Riding specifications, 204
- Running gear, 197
- Spark plugs, 200
- Standards, 7
- Threaded fasteners, 192
- Transmission, 196
- Weights, 203
- Wheels and tyres, 198
- Telltale lights, 22, 23
  - Overview, 26, 41
- TFT display, 23
  - operate, 94, 95
  - Overview, 42, 43
  - Select display, 91
- Threaded fasteners, 192
- Toolkit
  - Contents, 142
  - Position on the vehicle, 18
- Topcase
  - operate, 177
- Torques, 192
- Traction control
  - ASC, 138
- Transmission
  - Technical data, 196

Trim panels  
   Installing side panel, 171  
   Remove the side panel, 170

Trip meter  
   display, 74  
   reset, 75

Troubleshooting chart, 188

Turn indicators  
   Control, 19  
   operate, 74

Tyres  
   Check tread depth, 150  
   Checking tread depth, 151  
   Checking tyre pressure, 150  
   Recommendation, 151  
   Running in, 129  
   Table of tyre pressures, 18  
   Technical data, 198  
   Tyre pressures, 199

## V

Value  
   Reading, 44

Vehicle  
   restoring to use, 186

Vehicle Identification Number  
   Position on the vehicle, 17

## W

Warning lights, 22, 23  
   Overview, 26, 41

Warnings  
   ABS, 36, 57  
   Anti-theft alarm, 38, 54  
   ASC, 36, 58  
   Battery charge current, 38  
   Coolant temperature, 33, 55  
   Electronic immobiliserEWS, 32  
   Engine control unit, 34, 56  
   Engine electronics, 33, 56  
   Engine oil level, 33, 55  
   EWS, 32  
   Fuel reserve, 38, 59  
   Headlight faulty, 35  
   Light source faulty, 35, 53  
   Malfunction indicator lamp, 34, 55  
   Mode of presentation, 28, 44  
   My vehicle, 104  
   On-board voltage, 52

Outside temperature  
   warning, 32, 51

Rear light faulty, 35

Rear turn indicator faulty, 35

Several front and rear lights  
   faulty, 35

Warnings, overview, 29, 46

## Weights

  Payload table, 18  
   Technical data, 203

## Wheels

  Change of size, 151, 152  
   Check wheel rims, 150  
   Checking rims, 150  
   Installing the front wheel, 154  
   Installing the rear wheel, 158  
   Removing front wheel, 152  
   Removing rear wheel, 156  
   Technical data, 198



Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

Original rider's manual, printed in Germany.

© 2018 Bayerische Motoren  
Werke Aktiengesellschaft  
80788 Munich, Germany  
Not to be reproduced by any  
means whatsoever, wholly or  
in part, without the written permission of BMW Motorrad, After Sales.

## Fuel

