

# Rider's Manual (US Model)

K 1300 GT



BMW Motorrad



The Ultimate  
Riding Machine

## Motorcycle/Retailer Data

### Motorcycle data

---

Model

---

Vehicle Identification Number

---

Color number

---

First registration

---

Registration number

### Retailer Data

---

Contact in Service

---

Ms./Mr.

---

Phone number

---

Retailer's address/phone number (company stamp)

## Welcome to BMW

We congratulate you on your choice of a motorcycle from BMW and welcome you to the community of BMW riders.

Familiarize yourself with your new motorcycle so that you can ride it safely and confidently in all traffic situations.

Please read this Rider's Manual carefully before starting to use your new BMW motorcycle. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features.

In addition, it contains information on maintenance and care to help you maintain your motorcycle's reliability and safety, as well as its value.

If you have any questions concerning your motorcycle, your authorized BMW Motorrad retailer

is always happy to provide advice and assistance.

We wish you many miles of safe and enjoyable riding

BMW Motorrad.

# Table of Contents

You can also use the index at the end of this Rider's Manual to find a specific topic.

## 1 General instructions .... 5

Overview ..... 6

Abbreviations and symbols ..... 6

Equipment ..... 7

Technical data ..... 7

Currentness of this manual ..... 7

## 2 Overviews ..... 9

General view, left side ..... 11

General view, right side ..... 13

Left handlebar fitting ..... 14

Handlebar fitting, right ..... 16

Underneath seat ..... 19

Instrument cluster ..... 20

Headlight ..... 21

## 3 Status indicators ..... 23

Standard displays ..... 24

Displays with onboard computer ..... 25

Displays with Tire Pressure Control TPC/RDC ..... 25

Displays with heated hand grips ..... 26

Displays with seat heater .... 26

Indicator light with cruise-control system ..... 27

Standard warning indicators ..... 27

Warning indicators of onboard computer ..... 34

ABS warning indicators ..... 36

ASC warning indicators ..... 39

TPC/RDC warning indicators ..... 41

Anti-theft alarm warning indicators ..... 47

## 4 Operation ..... 51

Ignition switch and steering lock ..... 52

Electronic immobilizer EWS ..... 53

Clock ..... 54

Odometer and tripmeters ..... 54

Multifunction display ..... 56

Onboard computer ..... 56

Tire Pressure Control TPC/RDC ..... 60

Lights ..... 60

Turn indicators ..... 62

Hazard warning flashers .... 62

Emergency ON/OFF switch ..... 63

Heated hand grips ..... 63

Seat heating ..... 64

Automatic Stability Control ASC ..... 66

Cruise control ..... 67

Seat height ..... 69

Windshield ..... 70

Clutch .....	70
Brakes .....	70
Handlebars .....	71
Mirrors .....	71
Spring preload .....	71
Damping .....	72
Electronic suspension adjustment ESA .....	73
Tires .....	75
Headlight .....	75
Storage compartment .....	77
Front and rear seats .....	77
Helmet holder .....	79
<b>5 Riding .....</b>	<b>81</b>
Safety instructions .....	82
Checklist .....	83
Starting .....	84
Running in .....	86
Brakes .....	87
Parking your motorcycle ....	89
Refueling .....	90
Securing motorcycle for transport .....	91

<b>6 Technology in detail .....</b>	<b>93</b>
Brake system with BMW Motorrad Integral ABS .....	94
Engine management with BMW Motorrad ASC .....	96
Tire Pressure Control TPC/RDC .....	97
Electronic Suspension Adjustment ESA II .....	99
<b>7 Accessories .....</b>	<b>101</b>
General instructions .....	102
Onboard socket .....	102
Luggage .....	103
Case .....	104
Topcase .....	106
<b>8 Maintenance .....</b>	<b>109</b>
General instructions .....	110
Onboard toolkit .....	110
Engine oil .....	111
Brake system .....	113
Brake pads .....	113
Brake fluid .....	115
Clutch .....	117
Tires .....	117

Rims .....	118
Wheels .....	118
Front wheel stand .....	126
Lamps .....	127
Jump-starting .....	134
Battery .....	135
<b>9 Care .....</b>	<b>139</b>
Care products .....	140
Washing your motorcycle .....	140
Cleaning sensitive motorcycle parts .....	140
Paint care .....	141
Protective wax coating ....	142
Storing motorcycle .....	142
Returning motorcycle to use .....	142
<b>10 Technical data .....</b>	<b>143</b>
Troubleshooting chart .....	144
Threaded fasteners .....	145
Engine .....	147
Fuel .....	148
Engine oil .....	148
Clutch .....	149
Transmission .....	149

Rear-wheel drive .....	150
Running gear .....	150
Brakes .....	152
Wheels and tires .....	152
Electrical system .....	154
Frame .....	155
Dimensions .....	156
Weights .....	156
Riding specifications .....	157
<b>11 Service .....</b>	<b>159</b>
Reporting safety	
defects .....	160
BMW Motorrad Service ...	161
BMW Motorrad Service	
Quality .....	161
BMW Motorrad Service	
Card - On-the-spot break-	
down assistance .....	161
BMW Motorrad Service	
Network .....	162
Maintenance work .....	162
Confirmation of mainte-	
nance work .....	163
Confirmation of service ....	168

## General instructions

Overview .....	6
Abbreviations and symbols .....	6
Equipment .....	7
Technical data .....	7
Currentness of this manual .....	7

## Overview

Chapter 2 of this Rider's Manual will provide you with an initial overview of your motorcycle. All maintenance and repair work carried out on your motorcycle will be documented in Chapter 11. Proof of the maintenance work performed is a prerequisite for generous treatment of claims. When the time comes to sell your BMW, please remember to hand over this Rider's Manual; it is an important part of the motorcycle.

## Abbreviations and symbols



Indicates warnings that you must comply with for reasons of your safety and the safety of others, and to protect your motorcycle against damage.



Special information on operating and inspecting your motorcycle as well as maintenance and adjustment procedures.



Indicates the end of an item of information.



Instruction.



Result of an activity.



Reference to a page with more detailed information.



Indicates the end of accessory or equipment-dependent information.



Tightening torque.



Technical data.

OE	Optional equipment The motorcycles are assembled complete with all the BMW optional extras originally ordered.
OA	Optional accessories BMW optional accessories can be purchased and installed at your authorized BMW Motorrad retailer.
EWS	Electronic immobilizer.
DWA	Anti-theft alarm.
ABS	Anti-Lock Brake System.
ASC	Automatic Stability Control.
ESA	Electronic Suspension Adjustment Electronic suspension adjustment.



RDC Tire Pressure Control (TPC).

## Equipment

When you ordered your BMW Motorrad, you chose various items of custom equipment. This Rider's Manual describes optional extras (OE) offered by BMW and selected optional accessories (OA). This explains why the manual may also contain descriptions of equipment which you have not ordered. Please note, too, that your motorcycle might not be exactly as illustrated in this manual on account of country-specific differences.

If your BMW is equipped with options or accessories not described in this Rider's Manual, then this equipment is described in a separate operating manual.

## Technical data

All dimensions, weights and outputs in the Rider's Manual refer to the Deutsche Institut für Normung e. V. (DIN) and comply with its tolerance regulations. Versions for individual countries may differ.


## Currentness of this manual

The high safety and quality standards of BMW motorcycles are maintained by constant development work on designs, equipment and accessories. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. In addition, BMW Motorrad cannot guarantee the total absence of errors. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in this manual.



## Overviews

General view, left side.....	11
General view, right side .....	13
Left handlebar fitting .....	14
Handlebar fitting, right .....	16
Underneath seat .....	19
Instrument cluster .....	20
Headlight .....	21

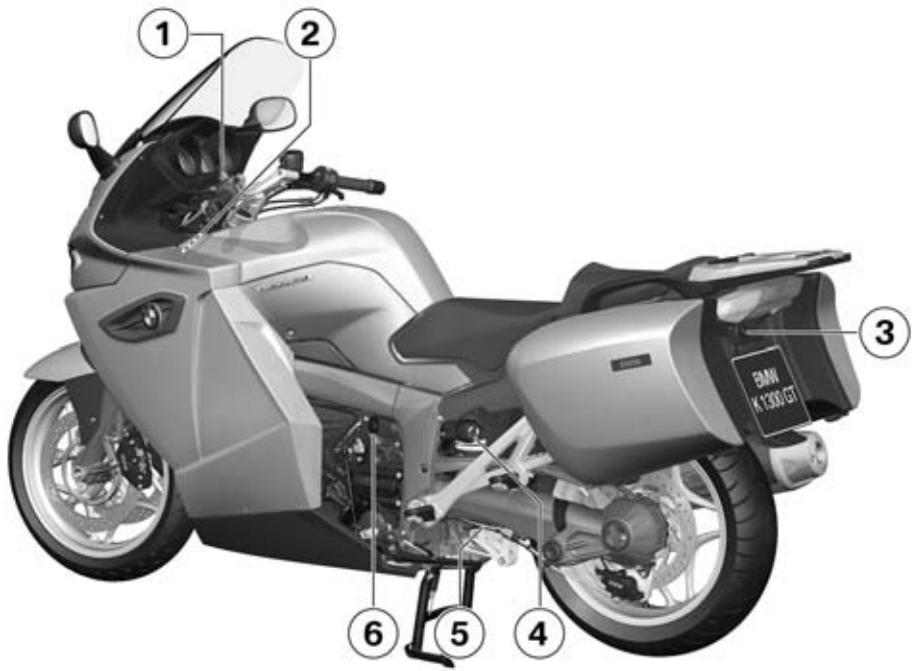

## General view, left side

- 1 Clutch fluid reservoir  
(➡ 117)
- 2 Headlight range adjustment (below instrument cluster) (➡ 76)
- 3 Seat lock (below tail light)  
(➡ 77)
- 4 Adjuster for spring preload, rear (➡ 72)
- 5 Adjustment of rear damping (➡ 72)
- 6 Onboard socket (➡ 102)




## General view, right side

- 1** Fuel filler opening (➡ 90)
- 2** Battery compartment  
(➡ 136)
- 3** Brake-fluid reservoir, front  
(➡ 113)
- 4** Storage compartment  
(➡ 77)
- 5** Vehicle identification number (on the upper front wheel control)
- 6** Type plate (on lower rear cross tube)

## Left handlebar fitting

- 1 High-beam headlight and headlight flasher (➔ 61)
- 2 – with cruise control<sup>OE</sup>  
Cruise control operation (➔ 67)
- 3 Hazard warning flashers (➔ 62)
- 4 Windshield operation (➔ 70)
- 5 Operating turn indicators (➔ 62)
- 6 Horn
- 7 – with Electronic Suspension Adjustment (ESA II)<sup>OE</sup>  
Operating ESA (➔ 73)
- 8 – with automatic Stability Control<sup>OE</sup>  
Operating ASC (➔ 66)

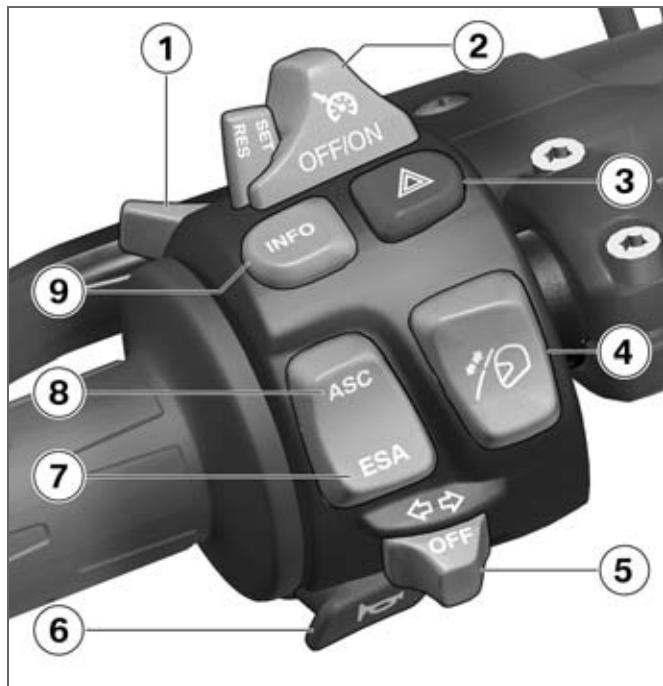




- 9** Operating odometer  
(➡ 54)  
– with onboard computer<sup>OE</sup>  
Operating onboard computer (➡ 56)

## Handlebar fitting, right

- 1 – with heated handlebar grips<sup>OE</sup>  
Heated hand grip operation (➔ 63)
- 2 – with seat heating<sup>OE</sup>  
Driver's seat heater operation (➔ 64)
- 3 Emergency ON/OFF switch (➔ 63)
- 4 Starter button (➔ 84)





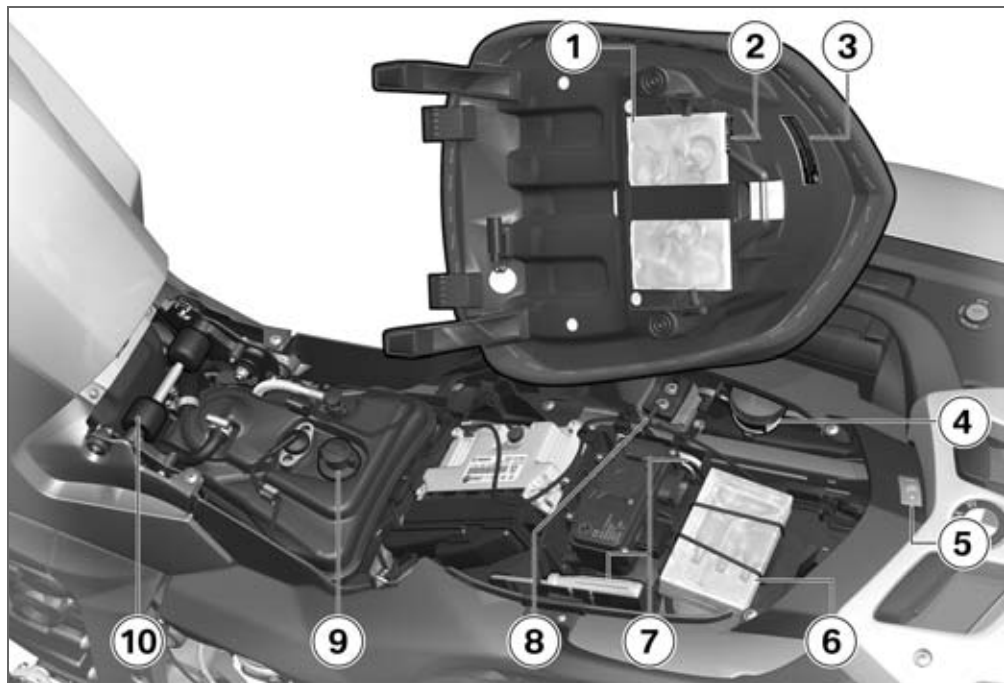


## Underneath seat


- 1** Rider's Manual (US Model)
- 2** Payload table (under Rider's Manual)
- 3** Tire inflation pressure table
- 4** Brake-fluid reservoir, rear (➡ 116)
- 5** – with seat heating<sup>OE</sup>  
Passenger seat heater operation (➡ 65)
- 6** Location of puncture kit (OA)
- 7** Onboard toolkit (➡ 110)
- 8** Helmet holder (➡ 79).
- 9** Engine oil fill location (➡ 112)  
Oil dipstick (➡ 111)
- 10** Driver's seat height adjustment (➡ 69)

## Instrument cluster

- 1 Speedometer
- 2 Indicator lights (➔ 24)
- 3 Tachometer
- 4 Anti-theft alarm indicator light (OE, see anti-theft alarm operating instructions)
- 5 Operating clock (➔ 54)
- 6 Adjusting dimming (➔ 56)
- 7 Multifunction display (➔ 24)
- 8 Operating odometer (➔ 54)
- 9 Ambient brightness sensor (for brightness adjustment of instrument lighting)
- with cruise control<sup>OE</sup>
- Indicator light of cruise-control system (➔ 67)

▶ The instrument-cluster lighting has automatic day and night switchover.◀

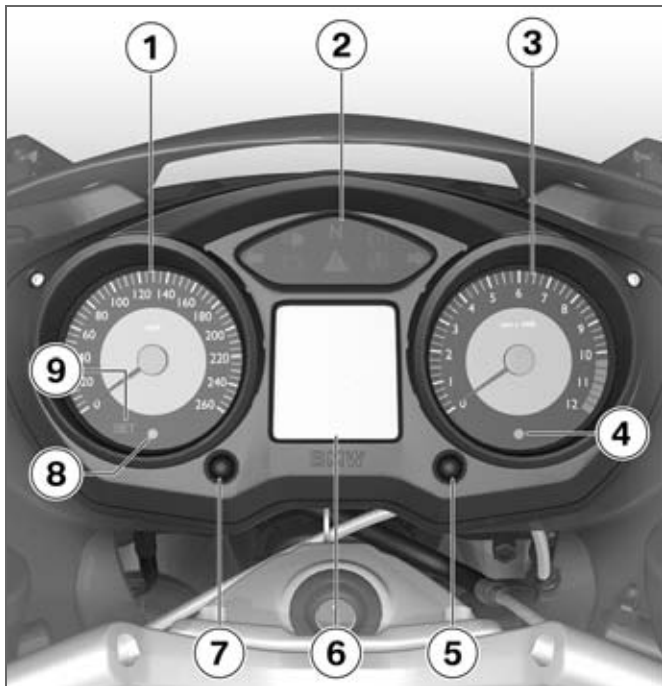

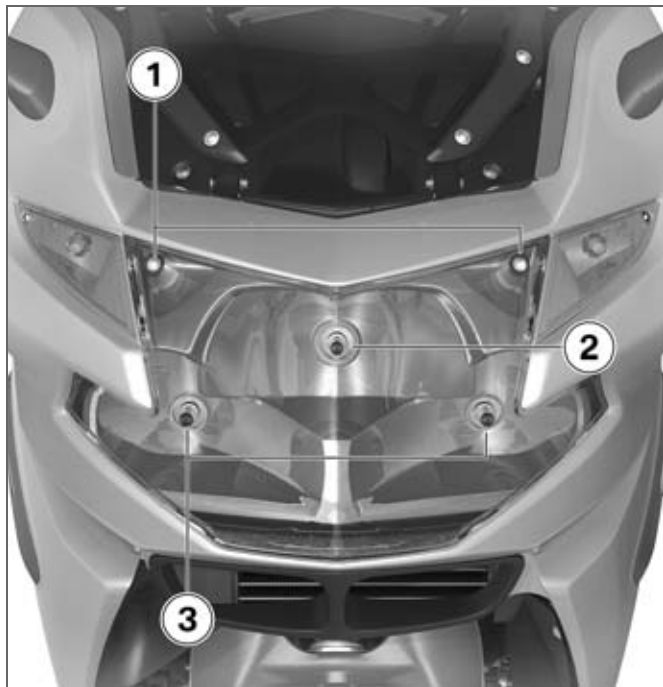

## Headlight

- 1 Side lights
- 2 Low-beam headlight
- 3 High-beam headlight






## Status indicators

Standard displays .....	24
Displays with onboard computer ....	25
Displays with Tire Pressure Control TPC/RDC .....	25
Displays with heated hand grips ....	26
Displays with seat heater .....	26
Indicator light with cruise-control system.....	27
Standard warning indicators .....	27
Warning indicators of onboard com- puter.....	34
ABS warning indicators .....	36
ASC warning indicators .....	39
TPC/RDC warning indicators.....	41
Anti-theft alarm warning indicators .....	47

## Standard displays

### Multifunction display

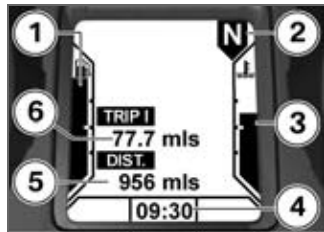


- 1 Fuel capacity (→ 24)
- 2 Gear indicator (→ 24)
- 3 Coolant temperature (→ 24)
- 4 Clock (→ 54)
- 5 Odometer
- 6 Trip meter (→ 54)

### Indicator lights





- 1 Flashing turn indicators, left
- 2 High-beam headlight
- 3 Idling
- 4 Flashing turn indicators, right

### Fuel capacity


 The vertical bar under the gas pump symbol indicates the remaining fuel quantity. When the fuel in the tank is topped up the gauge briefly shows the original level, before the reading is updated.

### Gear indicator

 The gear engaged or N for neutral appears on the display.

 If no gear is engaged, the 'neutral' indicator light also lights up.

### Coolant temperature

 The vertical bar under the temperature symbol shows the coolant temperature level.

### Service display



If the time remaining until the next service lies within a month,

the service date is briefly displayed following the pre-ride check. The month and year are shown with the SERVICE lettering; in this example the display means "March 2007."




If the motorcycle is driven long distances annually, it is possible that earlier service is required. If the odometer reading for the earlier service lies within 600 miles (1,000 km), the remaining miles (kilometers) are counted down in 60-mile (100-km) steps and briefly displayed following the pre-ride check.

If the service interval has been exceeded, the general warning light also lights up yellow in addition to the date or mileage display. The Service lettering is displayed continuously.

▶ If the service display appears more than a month before the service date, the stored date must be adjusted in the instrument cluster. This situation can occur if the battery has been disconnected for a longer time. Consult a certified workshop, preferably an authorized BMW Motorrad retailer, for setting of the date.◀

## Displays with onboard computer

– with onboard computer<sup>OE</sup>

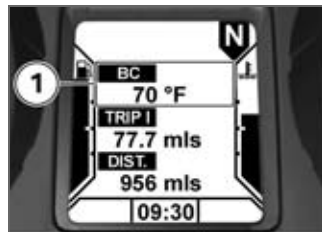

1 Onboard computer display area (→ 56)

## Displays with Tire Pressure Control TPC/RDC

### Display option 1

- with Tire Pressure Control (TPC/RDC)<sup>OE</sup>
- without onboard computer<sup>OE</sup>




- 1** – with Tire Pressure Control (TPC/RDC)<sup>OE</sup>  
 Display of tire inflation pressures (→ 60)

▶ The tire inflation pressures are shown temperature-compensated (see the chapter "Technology in Detail").◀

### Display option 2

- with Tire Pressure Control (TPC/RDC)<sup>OE</sup>
- with onboard computer<sup>OE</sup>

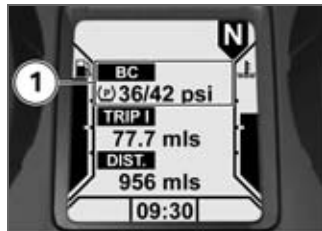


- 1** – with Tire Pressure Control (TPC/RDC)<sup>OE</sup>  
 Display of tire inflation pressures (→ 60)

▶ The tire inflation pressures are shown temperature-compensated (see the chapter "Technology in Detail").◀

### Displays with heated hand grips

- with heated handlebar grips<sup>OE</sup>

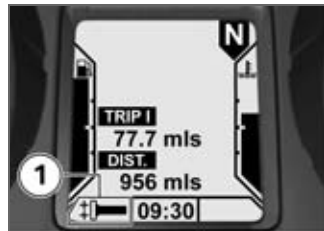

- 1** Display of heating levels (→ 63)

### Displays with seat heater

- with seat heating<sup>OE</sup>



- 1** Display of heating levels  
(→ 64)



- 1** Indicator light of cruise-control system

## Indicator light with cruise-control system

– with cruise control<sup>OE</sup>

## Standard warning indicators















### Display




Warnings are indicated with the general warning light **1** in combination with one of the warning symbols **2**. The 'General' warning light shows red or yellow, depending on the urgency of the warning. If several warnings are active, all corresponding warning lights and warning symbols are displayed. The general warning light is shown in accordance with the most urgent warning.

The possible warnings are listed on the next page.

## Overview of warning indicators

Indicator lights	Displays	Meaning
 Lights up yellow	EWS ! Is indicated	Electronic immobilizer is active (➡ 31)
 Lights up yellow	 Flashes	Fuel down to reserve (➡ 31)
 Lights up red	 Temperature display flashes	Coolant temperature too high (➡ 31)
 Lights up yellow	 Is indicated	Engine in emergency-operation mode (➡ 32)
 Flashes red	 Is indicated	Engine oil pressure insufficient (➡ 32)
 Lights up red	 Is indicated	Battery charge current insufficient (➡ 33)
 Lights up yellow	 Is indicated	Rear bulb defective (➡ 33)
	 Is indicated	Front bulb defective (➡ 33)

Indicator lights	Displays	Meaning
 Lights up yellow	 Is indicated	Bulbs defective (➡ 34)



## Electronic immobilizer is active



General warning light shows yellow.

EWS ! is indicated.

Possible cause:

The key being used is not authorized for starting, or communication between the key and engine electronics is disrupted.

- Remove other ignition keys located on the ignition key.
- Use the reserve key.
- Have the defective key replaced, preferably by an authorized BMW Motorrad retailer.

## Fuel down to reserve



General warning light shows yellow.



Fuel reserve symbol flashes




A fuel shortage can lead to misfiring and to the engine dying unexpectedly. Misfiring can damage the catalytic converter, and the engine dying unexpected can lead to accidents.

Do not drive until the fuel tank is completely empty.◀

Possible cause:

At the most, the fuel tank still contains the reserve fuel quantity.



- Refueling (→ 90).

## Coolant temperature too high



General warning light shows red.



Temperature display flashes.



Continued driving with an overheated engine can result in engine damage. Be sure to observe the measures listed below.◀

Possible cause:

The coolant temperature is too high.

- If possible, continue driving in the part-load range to cool down the engine.
- In traffic jams, switch off the engine, but keep the ignition switched on so that the radiator fan continues to operate.
- Should the coolant temperature frequently be too high, have the fault rectified as quickly as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

## Engine in emergency-operation mode



General warning light shows yellow.



Engine symbol appears on the display.



The engine is in the emergency operating mode. Only reduced engine performance may be available, which can lead to danger driving situations, especially during passing maneuvers.

Adapt your driving style to the possibly reduced engine performance. ◀

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and can no longer be started. Otherwise, the engine runs in the emergency operating mode.

- Continued driving is possible, however the accustomed engine performance may not be available.
- Have the malfunction corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

## Engine oil pressure insufficient



General warning light flashes red.



Oil-can symbol appears on the display.

The oil pressure in the lubricating oil circuit is too low. If the warning light lights up, stop immediately and switch off the engine.



The warning on insufficient engine oil pressure is no substitute for the function of an oil-level indicator. The correct engine oil level can on-

ly be checked on the oil level indicator. ◀

Possible cause:

The engine oil level is too low.

- Checking engine oil level (➡ 111).

If oil level is too low:

- Topping up engine oil (➡ 112).

Possible cause:

The engine oil pressure is insufficient.



Driving with insufficient engine oil pressure can result in engine damage.

Do not continue driving. ◀

- Have the malfunction corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

## Battery charge current insufficient



General warning light shows red.



Battery symbol appears on the display.



A discharged battery leads to the failure of various motorcycle systems, e.g. lighting, engine or ABS. This can result in dangerous driving situations. If possible, do not continue driving.◀

The battery is not being charged. If you continue driving, the vehicle electronics will discharge the battery.

Possible cause:

Alternator or alternator belt defective

- Have the malfunction corrected as soon as possible by a specialized workshop, preferably

an authorized BMW Motorrad retailer.

## Rear bulb defective



General warning light shows yellow.



Lamp symbol with arrow pointing to the rear is displayed.



A defective bulb places your safety at risk because it is easier for other users to oversee the motorcycle. Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Rear light or brake light bulb defective.

- Replacing brake light bulbs, tail light bulbs and rear turn indicator bulbs (➡ 132).

## Front bulb defective



Lamp symbol with arrow pointing to the front is displayed.



A defective bulb places your safety at risk because it is easier for other users to oversee the motorcycle. Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Low-beam, high-beam, parking or turn indicator bulb defective.

- Replacing low-beam and high-beam bulbs (➡ 128).
- Replacing parking light bulb (➡ 130).
- Replacing front turn indicator bulbs (➡ 131).
- Replacing brake light bulbs, tail light bulbs and rear turn indicator bulbs (➡ 132).

## Bulbs defective



General warning light shows yellow.



Lamp symbol with two arrows is displayed.



A defective bulb places your safety at risk because it is easier for other users to oversee the motorcycle. Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible. ◀

Possible cause:

A combination of several bulb defects is present.

- See the fault descriptions above.

## Warning indicators of onboard computer

### Display



– with onboard computer<sup>OE</sup>



Warnings of the onboard computer are shown in area **1**.

The possible warnings are listed on the next page.

## Overview of warning indicators

Indicator lights	Displays	Meaning
	Oil ! Is indicated	Engine oil level too low (→ 36)
	 Is indicated	
	Ambient temperature display flashes	Ice warning (→ 36)
	 Flashes	

## Engine oil level too low

Oil ! is indicated.



Oil level symbol appears on the display.

Possible cause:

The electronic oil level sensor has detected a low engine oil level. Check the engine oil level on the oil level indicator the next time you stop for refueling:

- Checking engine oil level (➡ 111).

If oil level is too low:

- Topping up engine oil (➡ 112).

Possible cause:

If "Check oil level" appears in the display, although a correct oil level has been measured on the oil level indicator, the oil level sensor may be defective.

- Contact a specialized workshop, preferably an authorized BMW Motorrad retailer.

## Ice warning

The ambient temperature display flashes.



Ice crystal symbol flashes.

Possible cause:

The air temperature measured at the motorcycle is lower than 37 °F (3 °C).



The ice warning does not mean that there is no risk of black ice forming at measured temperatures above 37 °F (3 °C). Always think well ahead when temperatures are low, especially on bridges and where the road is in the shade.◀

- Think well ahead when driving.

## ABS warning

### indicators

### Display



ABS warnings are indicated by the ABS warning light **1**.



In some countries an alternative display of the ABS warning light is possible.



Possible country-dependent versions.

Additional information on the BMW Motorrad Integral ABS is provided from page (➡ 94); an

overview of the possible warnings  
is provided on the following page.

Overview of warning indicators		
Indicator lights	Displays	Meaning
	Flashes	ABS self-diagnosis not completed (➡ 39)
	Lights up	ABS error (➡ 39)



## ABS self-diagnosis not completed



ABS warning light flashes.

Possible cause:

The ABS function is not available, because the self-diagnosis has not been completed. To check the wheel sensors, the motorcycle must be driven a few yards.

- Ride off slowly. It must be noted that the ABS function is not available until the self-diagnosis has been completed.

## ABS error



ABS warning light lights up.

Possible cause:

The ABS control unit has detected an error. The ABS function is not available.

- Continued driving is possible while taking the failed ABS function into account. Observe additional information on situations which can lead to an ABS error (→ 95).
- Have the malfunction corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

## ASC warning indicators





### Display

- with automatic Stability Control<sup>OE</sup>



ASC warnings are indicated by the ASC warning light **1**. Additional information on the BMW Motorrad ASC is provided from page (→ 96); an overview of the possible warnings is provided on the following page.

Overview of warning indicators

Indicator lights	Displays	Meaning
 Flashes rapidly		ASC intervention (➡ 41)
 Flashes slowly		Self-diagnosis not completed (➡ 41)
 Lights up		ASC deactivated (➡ 41)
 Lights up		ASC error (➡ 41)

## ASC intervention



ASC warning light flashes rapidly.

The ASC has detected instability at the rear wheel and has reduced the torque. The warning light flashes longer than the ASC intervention lasts. As a result, the driver is provided with optical feedback on the regulation carried out even after the critical driving situation.

## Self-diagnosis not completed



ASC warning light flashes slowly.

Possible cause:

The self-diagnosis was not completed; the ASC function is not available. So that the ASC self-diagnosis can be completed, the engine must be running and the motorcycle must be moved at a speed of at least 3 mph (5 km/h).

- Ride off slowly. It must be noted that the ASC function is not available until the self-diagnosis has been completed.

## ASC deactivated



ASC warning light lights up.

Possible cause:

The ASC system has been deactivated by the driver.

– with automatic Stability Control<sup>OE</sup>

- Activating ASC function (➡ 66).

## ASC error



ASC warning light lights up.

Possible cause:

The ASC control unit has detected an error. The ASC function is not available.

- Continue driving is possible. It must be noted that the ASC

function is not available. Observe additional information on situations which can lead to an ASC error (➡ 97).

- Have the malfunction corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

## TPC/RDC warning indicators

### Display

- with Tire Pressure Control (TPC/RDC)<sup>OE</sup>



The warning symbol **2** signals a critical tire pressure and the corresponding display flashes. If the critical value is at the limit of the permissible tolerance, the general warning light **1** also lights up in yellow. If the determined tire inflation pressure is outside the permissible tolerance, the general warning light **1** flashes in red.



The critical air pressure of the front wheel **3** or the rear wheel **4** flashes.








– with onboard computer<sup>OE</sup>



The critical air pressure of the front wheel **3** or the rear wheel **4** flashes.<

Additional information on the BMW Motorrad TPC/RDC is provided from page (→ 97); an overview of the possible warnings is provided on the following page.

## Overview of warning indicators

Indicator lights	Displays	Meaning
 Lights up yellow	 Is indicated	Tire inflation pressure in limit area of permissible tolerance (➡ 45)
	The critical tire inflation pressure flashes	
 Flashes red	 Is indicated	Tire inflation pressure outside permissible tolerance (➡ 45)
	The critical tire inflation pressure flashes	
	"--" or "-- --" is indicated	Transmission error (➡ 45)
 Lights up yellow	 Is indicated	Sensor defective or system fault (➡ 46)
	"--" or "-- --" is indicated	
 Lights up yellow	RDC Is indicated	Battery of tire-inflation pressure sensor weak (➡ 46)

Indicator lights	Displays	Meaning
	 Is indicated	Battery of tire-inflation pressure sensor weak (→ 46)

## Tire inflation pressure in limit area of permissible tolerance



General warning light shows yellow.



Tire symbol appears on the display.

The critical tire inflation pressure flashes.

Possible cause:

The measured tire inflation pressure is in the limit area of the permissible tolerance.

- Correct tire inflation pressure in accordance with instructions on back of cover of Rider's Manual.



Before adjusting the tire inflation pressure, observe the information on temperature compensation and on inflation pressure adjustment in the chapter "Technology in detail".◀

## Tire inflation pressure outside permissible tolerance



General warning light flashes red.



Tire symbol appears on the display.

The critical tire inflation pressure flashes.

Possible cause:

The measured tire inflation pressure is outside the permissible tolerance.

- Check tire for damage and drivability.

Is it still possible to drive with tire:



Incorrect tire inflation pressure result in poorer handling of the motorcycle.

Always adapt your driving style to the incorrect tire inflation pressure.◀

- Correct tire inflation pressure at next opportunity.



Before adjusting the tire inflation pressure, observe the information on temperature compensation and on inflation pressure adjustment in the chapter "Technology in detail".◀

- Have the tire checked for damage by a specialized workshop, preferably an authorized BMW Motorrad retailer.

If you are unsure about the drivability of the tire:

- Do not continue driving.
- Inform roadside service.

## Transmission error

"--" or "-- --" is indicated.

Possible cause:

The motorcycle's speed has not exceeded the threshold of approx. 20 mph (30 km/h). The TPC/RDC sensors do not send their signal until after this speed

has been exceeded for the first time (➡ 97).

- Watch RDC display at higher speed. A permanent fault has not occurred until the general warning light also lights up. In this case:
- Have fault eliminated by a specialized workshop, preferably an authorized BMW Motorrad retailer.

Possible cause:

There is a fault in the radio connection to the RDC sensors.

Possible causes are radio systems in the surrounding area, which interfere with the connection between the RDC control unit and the sensors.

- Watch the RDC display in another environment. A permanent fault has not occurred until the general warning light also lights up. In this case:

- Have fault eliminated by a specialized workshop, preferably an authorized BMW Motorrad retailer.

### Sensor defective or system fault



General warning light shows yellow.



Tire symbol appears on the display.

"--" or "-- --" is indicated.

Possible cause:

Wheels without installed RDC sensors are mounted.

- Retrofit wheel set with RDC sensors.

Possible cause:

One or two RDC sensors have failed.

- Have fault eliminated by a specialized workshop, preferably

an authorized BMW Motorrad retailer.

Possible cause:

A system fault has occurred.

- Have fault eliminated by a specialized workshop, preferably an authorized BMW Motorrad retailer.

### Battery of tire-inflation pressure sensor weak



General warning light shows yellow.

RDC is indicated.



Battery symbol appears on the display.

▶ This error message is only displayed for a short time following the pre-ride check.◀

Possible cause:

The battery of the tire inflation pressure sensor no longer has its full capacity. The operation of



the tire inflation pressure control is only ensured for a limited time.

- Contact a specialized workshop, preferably an authorized BMW Motorrad retailer.

capacity of the internal anti-theft alarm battery.

The possible warnings are listed on the next page.

## Anti-theft alarm warning indicators




### Display

– with anti-theft alarm<sup>OE</sup>



Anti-theft alarm warning are shown in the area **2** in conjunction with the general warning light **1** following the pre-ride check and refer to the

# Overview of warning indicators

Indicator lights	Displays	Meaning
	 Is indicated	Anti-theft alarm battery weak (➡ 49)
 Lights up yellow	 Is indicated	Anti-theft alarm battery drained (➡ 49)

## Anti-theft alarm battery weak

DWA is indicated.



Battery symbol appears on the display.



This error message is only displayed for a short time following the pre-ride check.◀

Possible cause:

The anti-theft alarm battery no longer has its full capacity. The operation of the anti-theft alarm is only ensured for a limited time with the motorcycle battery disconnected.

- Contact a specialized workshop, preferably an authorized BMW Motorrad retailer.

## Anti-theft alarm battery drained



General warning light shows yellow.



Battery symbol appears on the display

DWA is indicated.



This error message is only displayed for a short time following the pre-ride check.◀

Possible cause:

The anti-theft alarm battery has no capacity. The operation of the anti-theft alarm is no longer ensured with the motorcycle battery disconnected.

- Contact a specialized workshop, preferably an authorized BMW Motorrad retailer.



## Operation

Ignition switch and steering lock ....	52	Seat height .....	69
Electronic immobilizer EWS.....	53	Windshield.....	70
Clock .....	54	Clutch .....	70
Odometer and tripmeters .....	54	Brakes .....	70
Multifunction display .....	56	Handlebars .....	71
Onboard computer .....	56	Mirrors .....	71
Tire Pressure Control TPC/RDC ....	60	Spring preload .....	71
Lights.....	60	Damping.....	72
Turn indicators.....	62	Electronic suspension adjustment	
Hazard warning flashers.....	62	ESA .....	73
Emergency ON/OFF switch.....	63	Tires .....	75
Heated hand grips .....	63	Headlight .....	75
Seat heating .....	64	Storage compartment .....	77
Automatic Stability Control ASC ....	66	Front and rear seats .....	77
Cruise control.....	67	Helmet holder .....	79

## Ignition switch and steering lock

### Keys

You receive two master keys and one spare key. If a key is lost, please note the information on the electronic immobilizer (EWS) (➔ 53).

Ignition switch and steering lock, tank filler cap lock and the seat and case locks are all operated with the same key.

– with large Topcase<sup>OA</sup>  
or

– with small Topcase<sup>OA</sup>

A Topcase with a lock for the same key can be ordered on request. Please contact a specialized workshop for this purpose, preferably an authorized BMW Motorrad retailer.◁

### Switching on ignition



- Turn key to position **1**.
  - » Parking lights and all function circuits switched on.
  - » Engine can be started.
  - » Pre-ride check is performed. (➔ 85)
  - » ABS self-diagnosis is performed. (➔ 85)
- with automatic Stability Control<sup>OE</sup>
  - » ASC self-diagnosis is performed. (➔ 86)


### Switching off ignition



- Turn key to position **2**.
  - » Light switched off.
  - » Handlebars not locked.
  - » Key can be removed.
  - » Electrically powered accessories remain operational for a limited period of time.
  - » Battery can be recharged via onboard socket.

## Locking handlebars



 If the motorcycle is on the side stand, the surface of the ground will determine whether it is better to turn the handlebars to the left or right. However, the motorcycle is more stable on a level surface with the handlebars turned to the left than with the handlebars turned to the right.

On level ground, always turn the handlebars to the left to set the steering lock.◀

- Turn handlebars to full left or right lock position.

- Turn key to position **3** while moving handlebars slightly.
- » Ignition, lights and all function circuits switched off.
- » Handlebars locked.
- » Key can be removed.

## Electronic immobilizer EWS


### Theft protection

The electronic immobilizer helps protect your BMW motorcycle from theft, and this enhanced security is at your disposal without any need for you to set parameters or activate additional systems. The engine of a motorcycle fitted with this electronic immobilizer can be started only with the keys that belong to the motorcycle. You can also have your authorized BMW Motorrad retailer disable particular keys, for example in the event that you lose your keys. The engine can-

not be started with a key that has been barred.

## Electronics in key

The motorcycle's electronics exchange certain continuously changing signals with the electronics in the key; these signals are specific to your motorcycle and they are transmitted via the ring antenna in the ignition lock. The ignition is not enabled for starting until the key has been recognized as "authorized" for your motorcycle.

 A spare key attached to the same ring as the ignition key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued. The warning EWS is shown in the multifunction display. Always store the spare key separately from the ignition key.◀

## Replacement and extra keys

Replacement and spare keys are only available through an authorized BMW Motorrad retailer. The keys are part of an integrated security system, so the retailer is under an obligation to check the legitimacy of all applications for replacement/extra keys. If you want to have a lost key barred, you must bring along all other keys that belong to the motorcycle. A key that has been barred can subsequently be cleared and reactivated for use.

## Clock

### Setting clock



Attempting to set the clock while riding the motorcycle can lead to accidents. Adjust the clock only when the motorcycle is stationary. ◀

- Switch on ignition.




- Hold down button **1**.
  - » Hours **2** flash.
- Press button **1**.
  - » Hours increase by one each time button is pressed.
- Hold down button **1**.
  - » Minutes **3** flash.
- Press button **1**.
  - » Minutes increase by one each time button is pressed.
- Press and hold button **1** or no longer press.
  - » End setting; set time is displayed.

## Odometer and tripmeters

### Selecting odometer

- Switch on ignition.

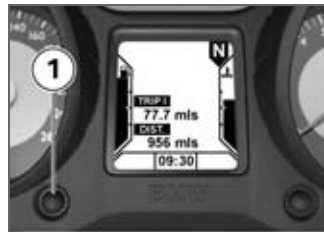

- Press button **1**.





– without onboard computer<sup>OE</sup>




- Press button **2** as an alternative.<

### Resetting tripmeter

- Switch on ignition.
- Select desired tripmeter.

Each time the button is pressed, the display shows values starting with the current value in the following order:

- Tripmeter 1 (Trip I)
- Tripmeter 2 (Trip II)
- Operating range (after reaching reserve level)
- with Tire Pressure Control (TPC/RDC)<sup>OE</sup>  
Tire inflation pressures

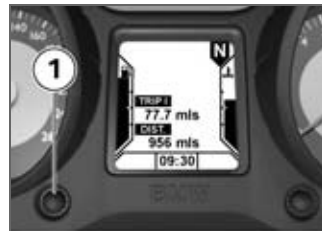

- Hold down button **1**.  
» Tripmeter is reset.

– without onboard computer<sup>OE</sup>



- Press button **2** as an alternative.<

## Residual range

– without onboard computer<sup>OE</sup>



The operating range **1** indicates what distance can still be driven with the remaining fuel. It is only displayed after the fuel reserve is reached. This distance is calculated on the basis of fuel level and average consumption.

When refueling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the sensor will not be able to register the new level. Otherwise neither the

fill level nor the operating range display can be updated.

▶ The determined residual range is an approximate reading. BMW Motorrad therefore recommends that you do not try to use the full remaining range before refueling.◀◀

## Multifunction display Adjusting dimming



⚠ Adjusting the dimming while driving can lead to accidents.

Only adjust the dimming when the motorcycle is stationary.◀

- Press button **1**.
- » The level of dimming appears in display field **2**.
- Press button **1** again.
- » The display lighting becomes brighter by one level each time the button is pressed. Each time the button is pressed after maximum brightness is reached, brightness is reduced by one level.

## Onboard computer

– with onboard computer<sup>OE</sup>

## Selecting readings

- Switch on ignition.




To calculate the range, a special average consumption is used, which does not always match the value that can be shown on the display.

If the motorcycle is standing on the side stand, the fuel level cannot be correctly determined due to the inclined position. For this reason the range is only calculated while driving.

▶ The determined range is an approximate reading. BMW Motorrad therefore recommends that you do not try to use the full range before refueling. ◀

## Average speed

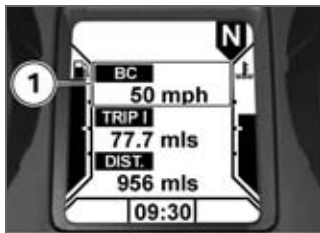

The average speed **1** is calculated based on the elapsed time since the last reset. Times during which the engine was stopped are excluded from the calculation.


## Resetting average speed

- Switch on ignition.
- Select average speed.



- Hold down button **1**.
- » Average speed is reset.

## Average consumption

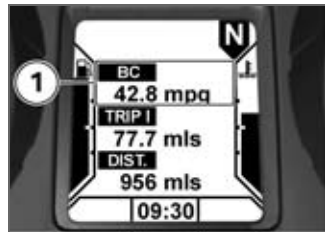

The average consumption **1** is calculated by dividing the distance covered since the last re-

set by the corresponding amount of fuel used.


## Resetting average consumption

- Switch on ignition.
- Select average speed.



- Hold down button **1**.  
» Average consumption is reset.

## Oil level indicator

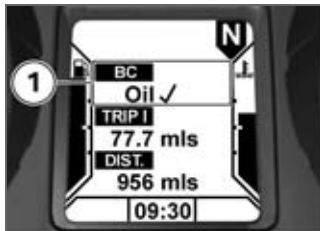

The oil level indicator **1** provides information on the oil level in the engine. It can only be displayed when the motorcycle is stopped.

The conditions for the oil level indicator are as follows:

- Engine at operating temperature.
- Engine idling for at least 10 seconds.
- Side-stand retracted.
- Motorcycle is vertical.

The readings mean:



Oil level is correct



Check oil level at next refueling stop. If other information of the onboard computer is displayed, this symbol continues to be shown until the oil level is detected as correct again.



Oil level cannot be measured (conditions as stated above not satisfied).

The most recently measured level is displayed for 5 sec. when you next switch on the ignition.



If, despite a correct oil level on the oil sight glass, "Check oil level!" appears on the display, the oil level sensor may be defective. In this case, please contact your authorized BMW Motorrad retailer. ◀

## Tire Pressure Control TPC/RDC

- with Tire Pressure Control (TPC/RDC)<sup>OE</sup>

### Displaying tire inflation pressure


- Switch on ignition.



- Press button **1** repeatedly until the tire inflation pressures appear on the odometer display.



The tire inflation pressures are displayed with the lettering RDC. The left-hand value indicates the inflation pressure of the front wheel, and the right-hand value the inflation pressure of the rear wheel. The displayed tire inflation pressures refer to a tire temperature of 68 °F (20 °C). Immediately after switching on the ignition, -- -- is displayed, as the transfer of the inflation pressure values does not begin until a speed of 20 mph (30 km/hr) is exceeded for the first time.

 Indicates the display of the tire inflation pressures.

- with onboard computer<sup>OE</sup>




The tire inflation pressures are displayed as an additional value of the onboard computer.

## Lights

### Parking lights

The side lights switch on automatically when the ignition is switched on.

 The parking lights are a strain on the battery. Do not leave the ignition switched

on longer than absolutely necessary.◀

## Low-beam headlight

The low-beam headlight switches on automatically when you start the engine.

▶ With the engine switched off, you can switch on the lights by switching on the high-beam headlight with the ignition switched on or by operating the headlight flasher.◀

## High-beam headlight



- Press high-beam headlight switch **1** forward.
  - » High-beam headlight is switched on.
- Move high-beam headlight switch **1** into initial position.
  - » High-beam headlight is switched off.
- Pull high-beam headlight switch **1** toward rear.
  - » High-beam headlight is switched on as long as switch is pressed (headlight flasher).

## Switching on parking lights

- Switch off ignition.



- Immediately after switching off the ignition, press and hold the turn indicator button **1** toward left.
  - » Parking light switches on.

## Switching off parking lights

- Switch ignition on and then off again.
  - » Parking light switched off.

## Turn indicators

### Operating turn indicators




- Press turn indicator button **1** toward left.
  - » Left-hand turn indicator is switched on.
  - » Indicator light for left-hand turn indicator flashes.
- Press turn indicator button toward right.
  - » Right-hand turn indicator is switched on.
  - » Indicator light for right-hand turn indicator flashes.

- Press turn indicator button in middle position.
  - » Turn indicator is switched off.
  - » Turn indicator lights in indicator light panel are off.

## Hazard warning flashers


### Switching on hazard warning flashers

- Switch on ignition.

 The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary.◀



- Press button **1** for hazard warning flashers.

 If a turn indicator button is pressed with the ignition switched on, the flashing function replaces the emergency flashing function as long as the button is pressed. If the turn indicator button is released, the emergency flasher function becomes active again.◀

- » Hazard warning flashers are switched on.
- » Indicator lights of left and right turn indicators flash.
- Switch off ignition.



- » Hazard warning flashers continue to operate.
- » Indicator lights of left and right turn indicator are off.

## Switching off hazard warning flashers




- Press button **1** for hazard warning flashers.
- » Hazard warning flashers are switched off.

## Emergency ON/OFF switch



**1** Emergency ON/OFF switch

 Operating the emergency ON/OFF switch when riding can cause the rear wheel to lock and thus cause a fall. Do not operate the emergency ON/OFF switch when riding.◀

The engine can be switched off easily and quickly using the emergency ON/OFF switch.




**a** Engine switched off  
**b** Operating position

## Heated hand grips

– with heated handlebar grips<sup>OE</sup>

### Operating heated hand grips

- Start engine.

 The heated hand grips option can only be activated when the engine is running. If the engine is switched off, the heated hand grips must be reactivated once the engine has been restarted.◀

▶ The increase in power consumption caused by the heated hand grips can drain the battery if you are riding at low engine speeds. If the battery is inadequately charged, the heated hand grips are switched off to ensure starting capability.◀



- Press button **1** to set the heating level.



The handlebar grips can be heated at two different levels. The second level is used for fast heat-up of the grips; then the switch should be switched back to the first level. The heated hand grips option can only be activated when the engine is running.

- Press button **1** repeatedly until desired heating level is shown.



50% heating output



100% heating output

» If no further changes are made, the selected heating level is set.

## Seat heating

– with seat heating<sup>OE</sup>

### Driver's seat heater



- 1** Switch for driver's seat heater

The driver's seat can be heated at two levels. The second level is used for fast heat-up of the seat; then the switch should be switched back to the first level.

▶ Seat heating can be activated only when the engine is running. If the engine is switched off, the seat heating must be re-activated once the engine has been restarted.◀

▶ The increase in power consumption caused by the heated seat can drain the battery if you are riding at low engine speeds. If the battery is inadequately charged, the heated seat is switched off to ensure starting capability.◀

## Passenger seat heater




**1** Switch for passenger seat heater

The passenger seat can be heated at two levels. The second level is used for fast heat-up of the seat; then the switch should be switched back to the first level.

▶ Seat heating can be activated only when the engine is running. If the engine is switched off, the seat heating must be re-activated once the engine has been restarted.◀

▶ The increase in power consumption caused by the heated seat can drain the battery if you are riding at low engine speeds. If the battery is inadequately charged, the heated seat is switched off to ensure starting capability.◀

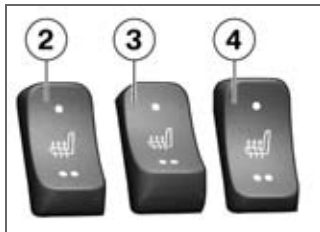

- 2** Switch in middle position: Heating off.
- 3** Switch in one-dot position: 50% heating output.
- 4** Switch in two-dot position: 100% heating output.

## Shown in multifunction display



The following symbols are shown in dependence on the selected heating level:



Driver's seat 50 % heating capacity



Driver's seat 100 % heating capacity



Passenger seat 50 % heating capacity



Passenger seat 100 % heating capacity

## Automatic Stability Control ASC

– with automatic Stability Control<sup>OE</sup>

### Switching off ASC function

- Switch on ignition.

▶ The ASC function can also be deactivated while driving. ◀



- Press and hold ASC button **1**.



ASC warning light begins to light up.



- Release ASC button within two seconds.



ASC warning lamp continues to light up.

» ASC function is deactivated.

### Activating ASC function



- Press and hold ASC button **1**.



ASC warning light goes out; if self-diagnosis is not completed, the ASC warning light begins to flash.

- Release ASC button within two seconds.



ASC warning light remains off or continues to flash.

- » ASC function is activated.
- As an alternative to pressing ASC button, ignition can also be switched off and then on again.



If the ASC warning light lights up after switching the ignition off and on and then continued driving over 5 mph (10 km/h), an ASC error has occurred.◀

## Cruise control

– with cruise control<sup>OE</sup>

## Switching on cruise control



- Push switch **1** to the right.
- » Button **2** is operational.

## Setting road speed



- Briefly press button **2** forward.



The cruise-control system can be used within a speed range of 30 mph to 112 mph (50 km/h to 180 km/h).◀



Indicator light for cruise-control system lights up.

- » The motorcycle maintains your current cruising speed and the setting is saved.

## Step-by-step acceleration



- Briefly press button **2** forward.
- » Speed is increased by 1 mph (2 km/h) each time button is pressed, and new setting is saved.

## Stepless acceleration



- Press button **2** forward and hold in position.
  - » The motorcycle accelerates steplessly.
- Release button **2**.
  - » The motorcycle maintains your current cruising speed and the setting is saved.

## Step-by-step deceleration



- Briefly press button **2** backward.
  - » The speed is decreased by approx. 1 mph (2 km/h) each time you push the button, and the new setting is saved.

## Stepless deceleration



- Press button **2** backward and hold in position.
  - » The motorcycle decelerates steplessly.
- Release button **2**.
  - » The motorcycle maintains your current cruising speed and the setting is saved.

## Deactivating cruise control

- Operate brakes or clutch or throttle twistgrip (reduce throttle beyond basic position).
  - » Cruise control is deactivated.

- » Cruise control indicator light goes out.

## Resuming former cruising speed



- Briefly press button **2** backward.

▶ Opening the throttle does not deactivate the cruise-control system. If you release the twistgrip the motorcycle will decelerate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed.◀

**SET** Indicator light for cruise-control system lights up.

- » Stored speed is resumed.

## Switching off cruise control



- Push switch **1** to the left.
- » The system is deactivated.
- » Button **2** is locked.


## Seat height

### Adjusting seat height

- Removing driver's seat (→ 78).



- Pull the seat height adjustment **1** into the end position.

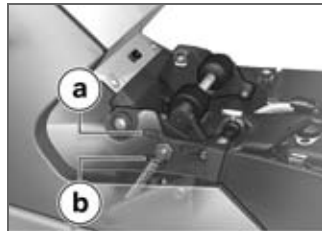

- Press the seat height adjustment forward as far as possible at the top or bottom.

- » End position **a**: high seat position.
- » End position **b**: low seat position.
- Installing driver's seat (→ 78).

## Windshield

### Adjusting windshield


- Switch on ignition.




- Press button **1** at top.
  - » Windshield is raised.
- Press button **1** at bottom.
  - » Windshield is lowered.

## Clutch

### Adjusting clutch lever


 If the position of the clutch fluid reservoir is changed, air can enter the clutch system. Do not reposition the handlebar controls on the handlebars or the handlebars in their mounts.◀

 Adjusting the clutch lever while driving can lead to accidents.

Only adjust the clutch lever when the motorcycle is stationary.◀




- Turn adjusting screw **1** clockwise.

 The adjusting screw can be turned more easily if you press the clutch lever forward when doing so.◀


- » Distance between handlebar grip and clutch lever increases.
- Turn adjusting screw **1** counterclockwise.
- » Distance between handlebar grip and clutch lever decreases.

## Brakes

### Adjusting handbrake lever


 Changing the position of the brake-fluid reservoir can allow air to penetrate the brake system.

Do not reposition the handlebar controls on the handlebars or the handlebars in their mounts.◀

 Adjusting the brake lever while driving can lead to accidents.



Only adjust the brake lever when the motorcycle is stationary.◀

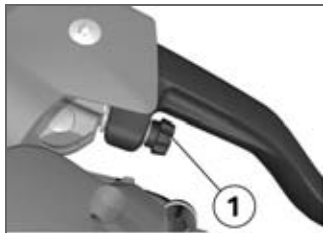

- Turn adjusting screw **1** clockwise.

▶ The adjusting screw can be turned more easily if you press the handbrake lever forward when doing so.◀

- » Distance between handlebar grip and handbrake lever increases.
- Turn adjusting screw **1** counterclockwise.
- » Distance between handlebar grip and handbrake lever decreases.

## Handlebars

### Adjustable handlebars



The height of the handlebars **1** is adjustable. Consult a certified workshop, preferably an authorized BMW Motorrad retailer, for adjustment of the handlebars.

## Mirrors

### Adjusting mirrors



- Move mirror into desired position by applying light pressure at edge.

## Spring preload

### Setting

It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring preload when the motorcycle is heavily loaded and reduce spring

preload accordingly when the motorcycle is lightly loaded.

## Adjusting spring preload for rear wheel

- Make sure ground is level and firm and park motorcycle.



**!** Your motorcycle's handling will suffer if you do not match the spring-preload and damping-characteristic settings. Adjust the damping characteristic to suit the spring preload.◀

**!** Adjusting the spring preload while the motorcycle is being ridden can lead to accidents. Adjust the spring preload only when the motorcycle is stationary.◀

- To increase spring preload, turn handwheel **1** in direction of arrow HIGH.
- To decrease spring preload, turn handwheel **1** in direction of arrow LOW.



Basic setting of spring preload, rear

- without Electronic Suspension Adjustment (ESA II)<sup>OE</sup>
- Turn upper adjustment wheel as far as possible in direction of arrow LOW, then turn 13 clicks in direction of arrow HIGH (Full tank of gas, with rider 187 lbs (85 kg))◀

## Damping Setting

The damping must be adjusted to the road conditions and the spring preload.


- A rough road surface requires softer damping than a smooth road surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

## Adjusting damping on rear wheel

- Make sure ground is level and firm and park motorcycle.



- Adjust damping with the toolkit using the adjusting screw **1**.

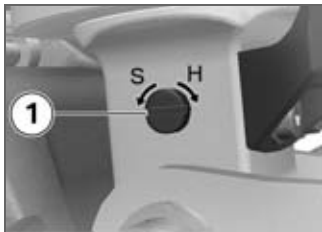

- To increase damping, turn adjusting screw **1** in arrow direction H.

- To decrease damping, turn adjusting screw **1** in arrow direction S.



Basic setting of rear wheel rear-wheel damping

– without Electronic Suspension Adjustment (ESA II)<sup>OE</sup>


– Turn adjusting screw as far as possible in direction of arrow H, then turn one and one-half turn in direction of arrow S (Full tank of gas, with rider 187 lbs (85 kg))◁

## Electronic suspension adjustment ESA

– with Electronic Suspension Adjustment (ESA II)<sup>OE</sup>

## Settings

Using the electronic suspension adjustment ESA you can conveniently adjust your motorcycle to its loading and the ground. To do this, the loading state must be set and the desired riding mode selected.

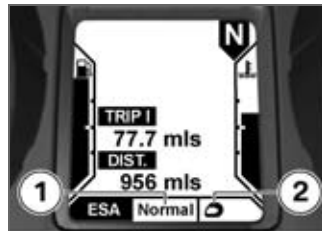

The selected riding mode is indicated in the multifunction display in area **1**, the loading state in area **2**. Three loading states can be set, and there are three riding modes available for each state.

The display of the clock is hidden for the duration of the ESA display.

Additional information on the electronic suspension adjustment ESA II is provided on page (➔ 99).

### Calling up settings

- Switch on ignition.



- Press button **1**.
  - » The current setting is displayed.
  - » Display goes out automatically after a few seconds.

### Setting riding mode

- Start engine.

▶ The driving mode can be set while driving.◀



- Press button **1**.
  - » Current setting is displayed.
- Press button **1** once in each case.

Starting from the current state, the display is in the following order:

- COMF: comfort mode
- NORM: normal mode
- SPORT: sport mode

» If no further changes are made, the riding mode is set as indicated. A short time after the adjustment is completed, the display is automatically hidden again.

### Setting loading state

- Start engine.

▶ The loading state cannot be set while driving.◀



- Press button **1**.
  - » Current setting is displayed.

- Press and hold button **1** until display changes each time. Starting from the current state, the display is in the following order:



One-up



One-up with luggage



Two-up (with luggage)

- » If no further changes are made, the loading state is set as indicated.

## Tires

### Checking tire pressure



Incorrect tire inflation pressure results in poorer handling characteristics of the motorcycle and reduces the life of the tires.

Ensure proper tire inflation pressure. ◀



At high road speeds, tire valves installed perpendicular to the wheel rim have a tendency to open as a result of centrifugal force.

In order to avoid a sudden loss of tire inflation pressure, fit a valve cap with rubber sealing ring to the rear tire and make sure that the cap is screwed on firmly. ◀

- Make sure ground is level and firm and park motorcycle.
- Check tire pressures against data below.



Tire pressure, front

- 36.3 psi (2.5 bar) (Single rider, with cold tire)
- 36.3 psi (2.5 bar) (Driver with passenger and/or load, with cold tire)



Tire pressure, rear

- 42.1 psi (2.9 bar) (Single rider, with cold tire)
- 42.1 psi (2.9 bar) (Driver with passenger and/or load, with cold tire)

If tire pressure is too low:

- Correct tire pressure.

## Headlight

### Adjusting headlight for RHD/LHD traffic

If the motorcycle is ridden in a country where the opposite rule of the road applies, its asymmetric low-beam headlight will tend to dazzle oncoming traffic.

Have the headlight adjusted to the relevant conditions by a specialized workshop, preferably an authorized BMW Motorrad retailer.



Ordinary adhesive tape damages the plastic lens.

To prevent damage to the plastic lens, consult a specialized workshop, preferably an authorized BMW Motorrad retailer.◀

## Headlight range and spring preload

The headlight range generally remains constant due to the adjustment of the spring preload to the loading state.

Spring preload adjustment may only be insufficient when the motorcycle is very heavily loaded. In this case, the headlight range must be adjusted to the weight.


▶ If you are unsure whether the basic headlight setting is correct, consult a specialized workshop, preferably an authorized BMW Motorrad retailer.◀

## Headlight range adjustment



**1** Headlight range adjustment

In the case of very high payloads, the available spring preload adjustment might not be adequate. To avoid dazzling oncoming traffic, the headlight adjustment can be corrected by adjusting the swivel lever.

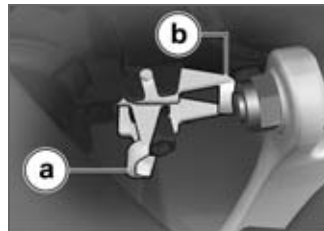

**a** Neutral position  
**b** Position with heavy payload

## Storage compartment

### Operating storage compartment



- Turn lock barrel **1** perpendicular to driving direction with ignition key.
  - » Lock of storage compartment is locked.
- Turn lock barrel **1** in driving direction with ignition key.
  - » Lock of storage compartment is unlocked.
- Push unlocked lock barrel downward to open the lid.
  - » Lid opens.

## Front and rear seats

### Removing passenger seat

- Make sure ground is level and firm and park motorcycle.




- Turn key counterclockwise in seat lock **1**.



- Lift the seat at the rear and release the key.

– with seat heating<sup>OE</sup>

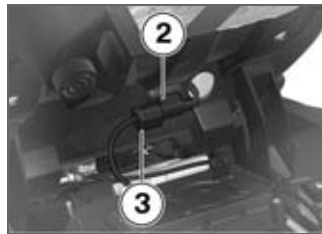


- Separate connector **2** to activate lock **3**.<

- Pull the seat to the rear to release it from its holders.
- Lay the seat on the cover side on a clean surface.


## Removing driver's seat

- Removing passenger seat (→ 77).

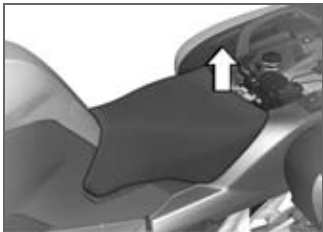

- Raise front seat at rear.

– with seat heating<sup>OE</sup>

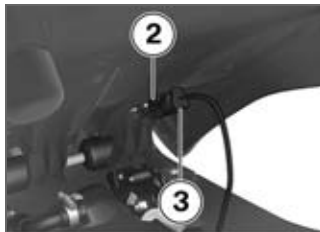


- Separate connector **2** to activate lock **3**.<
- Lift seat up to remove.
- Lay the seat on the cover side on a clean surface.

## Installing driver's seat

– with seat heating<sup>OE</sup>



- Close connector **2**.<

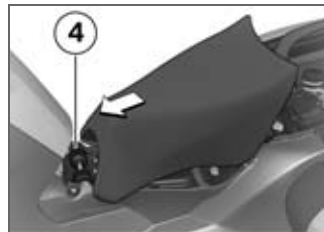

- Slide driver's seat forward to seat height adjustment **4**.




Check that the seat is correctly seated.


- Installing passenger seat (➡ 79).

## Installing passenger seat

- Installing driver's seat (➡ 78).  
– with seat heating<sup>OE</sup>

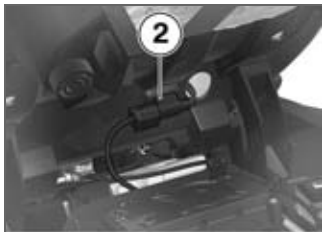

- Close connector **2**.◀

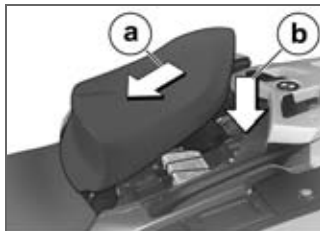


- Push passenger seat under driver's seat **a** and then press down firmly at the rear **b**.  
» Seat engages with an audible click.

## Helmet holder

- Removing passenger seat (➡ 77).



 The helmet catch can scratch the paneling. When hooking on the helmet, watch the position of the helmet lock.◀

- Hang helmet chin strap on helmet holder **1**.
- Installing passenger seat (➡ 79).



## Riding

Safety instructions .....	82
Checklist .....	83
Starting .....	84
Running in .....	86
Brakes .....	87
Parking your motorcycle .....	89
Refueling .....	90
Securing motorcycle for transport .....	91

## Safety instructions

### Rider's equipment

Do not ride without the correct clothing. Always wear:

- Helmet
- Rider's suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorized BMW Motorrad retailer will be happy to advise you and has the correct clothing for every purpose.

### Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Settings of spring-strut and shock absorber system
- Imbalanced load

- Loose clothing
- Insufficient tire inflation pressure
- Poor tire tread
- Etc.

### Correct loading



Overloading and imbalanced loads can adversely affect the motorcycle's handling. Do not exceed the gross weight limit and observe the loading information.◀

### Alcohol and drugs



Even small amounts of alcohol or drugs will adversely affect your perception and your ability to assess situations and make decisions, and slow down your reflexes. Medication can exacerbate these effects.

Do not ride your motorcycle after consuming alcohol, drugs and/or medication.◀

### Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colorless and odorless but highly toxic.



Inhaling exhaust fumes therefore represents a health hazard and can even cause loss of consciousness with fatal consequences.

Do not inhale exhaust fumes. Do not run the engine in closed rooms.◀

### High voltage



Touching live parts of the ignition system with the engine running can cause electric shock.

Do not touch parts of the ignition system when the engine is running.◀

## Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

For this reason, observe the following points:

- Do not run the fuel tank dry
- Do not run the engine with the spark-plug cap removed
- Stop the engine immediately if it misfires
- Use unleaded fuel only
- Comply with all specified maintenance intervals.



Unburned fuel will destroy the catalytic converter. Note the points listed for protection of the catalytic converter.◀

## Risk of fire

Temperatures at the exhaust are high.



Flammable materials (e.g. hay, leaves, grass, clothing and luggage, etc.) could ignite if allowed to come into contact with the hot exhaust pipe. Make sure that no highly flammable materials can come in contact with the hot exhaust system.◀



Cooling would be inadequate if the engine were allowed to idle for a lengthy period with the motorcycle at a standstill: overheating would result. In extreme cases, the motorcycle could catch fire. Do not allow the engine to idle unnecessarily. After starting, ride off immediately.◀

## Tampering with control unit of electronic engine-management system



Tampering with the engine control unit can damage the motorcycle and cause accidents.

Do not tamper with the engine control unit.◀



Tampering with the engine control unit can result in mechanical loads that the motorcycle's components are not designed to withstand. Damage caused in this way is not covered by the warranty.

Do not tamper with the engine control unit.◀

## Checklist

Use the following checklist to check important functions, settings and wear limits before you ride off:

- Brakes
- Front and rear brake fluid levels
- Clutch
- Clutch fluid level
- Shock absorber setting and spring preload
- Tread depth and tire inflation pressure
- Firm seating of cases and luggage

At regular intervals:

- Engine oil level (every time you refuel)
- Brake pad wear (during every third stop for refueling)

## Starting

### Side stand

You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the transmission in neutral

and then engage a gear before retracting the side stand.

## Transmission

You can start the engine when the transmission is in neutral or if you pull the clutch with a gear engaged. Do not engage the clutch until after switching on the ignition, as otherwise the engine cannot be started. When the transmission is in neutral, the green neutral indicator light is on and the gear indicator in the multifunction display shows N.

## Starting engine

- Switch on ignition.
- » Pre-ride check is performed. (➡ 85)
- » ABS self-diagnosis is performed. (➡ 85)
- with automatic Stability Control<sup>OE</sup>
- » ASC self-diagnosis is performed. (➡ 86)



- Press starter button 1.

▶ At extremely low temperatures it may be necessary to operate the throttle twist grip during starting. At ambient temperatures below 32 °F (0 °C), actuate the clutch after switching on the ignition.◀

▶ The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.◀

» Engine starts.

- » Consult the troubleshooting chart if the engine refuses to start. (➡ 144)

## Pre-ride check

The instrument cluster runs a test of the 'General' warning light when the ignition is switched on: this is the "Pre-Ride-Check". In the process, the warning lamp first lights up red and then yellow to test its function. The test is aborted if you start the engine before it completes.

To initialize, the exhaust flap is completely opened once then closed again.

### Phase 1



General warning light shows red.

- CHECK ! is indicated.

### Phase 2



General warning light shows yellow.

- CHECK ! is indicated.
- with cruise control<sup>OE</sup>



The SET light comes on.

If the 'General' warning light does not show:



Some malfunctions cannot be indicated if the 'General' warning light cannot be displayed.

Check that the 'General' warning light comes on, and that it shows red and yellow. ◀

- Have the malfunction corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

## ABS self-diagnosis

The readiness for operation of the BMW Motorrad Integral ABS is checked by the self-diagnosis. Self-diagnosis is performed automatically when you switch on the ignition. To check the wheel sensors, the motorcycle must drive faster than 3 mph (5 km/h).

### Phase 1

- » Checking the diagnosable system components while stopped.



ABS warning light flashes.



Possible country-specific version of ABS warning light.

### Phase 2

- » Checking the wheel sensors while starting off.



ABS warning light flashes.



Possible country-specific version of ABS warning light.

### ABS self-diagnosis completed

- » The ABS warning light goes out.

If an ABS fault is indicated after the ABS self-diagnosis is completed:

- Continue driving is possible. It must be noted that neither the ABS nor the integral function is available.
- Have the malfunction corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

### ASC self-diagnosis

– with automatic Stability Control<sup>OE</sup>

The readiness for operation of the BMW Motorrad ASC is checked by the self-diagnosis. Self-diagnosis is performed automatically when you switch on the ignition. So that the ASC self-diagnosis can be completed, the engine must be running and the motorcycle must drive at a speed of at least 3 mph (5 km/h).

#### Phase 1

- » Checking the diagnosable system components while stopped.



ASC warning light flashes slowly.

#### Phase 2

- » Checking diagnosable system components while driving.



ASC warning light flashes slowly.

### ASC self-diagnosis completed

- » The ASC symbol is no longer displayed.

If an ASC fault is indicated after ASC self-diagnosis is completed:

- Continue driving is possible. It must be noted that the ASC function is not available.
- Have the malfunction corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

### Running in


#### The first 600 miles (1,000 km)

- While running in the motorcycle, vary the throttle opening



and engine-speed range frequently.

- Try to do most of your riding during this initial period on twisting, fairly hilly roads, avoiding high-speed main roads and highways if possible.

 Exceeding the specified engine speeds while running in will lead to increased engine wear.

Adhere to the specified engine run-in speeds. ◀

- Do not exceed the engine run-in speeds.



Engine break-in speed


– <7000 min<sup>-1</sup>

- Do not accelerate at full throttle.
- Avoid low engine speeds at full load.

- After 300 - 750 miles (500 - 1,200 km), have the first inspection performed.


## Brake pads

New brake pads must "bed down" and therefore do not achieve their optimum friction levels during the first 300 miles (500 km). This initial reduction in braking efficiency can be compensated for by exerting greater pressure on the levers.

 New brake pads can extend stopping distance by a significant margin. Brake early. ◀

## Tires

New tires have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tires are run in. This running in procedure is essential if the tires are to achieve maximum grip.

 New tires have not yet achieved their full adhesion. There is a danger of accidents when driving at extreme angles.

Avoid extreme angles. ◀


## Brakes

### How is the shortest braking distance achieved?

The dynamic load distribution between the front and rear wheel changes during braking. The heavier you brake, the more the front wheel is loaded. The greater the wheel load, the more braking force can be transferred. To achieve the shortest possible braking distance, the front brake must be applied quickly and with increasing force. This optimally utilizes the dynamic load increase on the front wheel. At the same time, the clutch should al-

so be actuated. With the "forced braking" often practiced in which the brake pressure is generated as quickly as possible and with great force, the dynamic load distribution cannot follow the increased deceleration and the braking force cannot be completely transferred to the road surface. To prevent the front wheel from locking, the ABS system must intervene and reduce the brake pressure; the braking distance increases.


### **Descending mountain passes**

 There is a danger of the brakes fading if you use only the rear brakes when descending mountain passes. Under extreme conditions, the brakes could overheat and suffer severe damage.


The BMW integrated braking function ensures that the rear

wheel brake is also applied when the handbrake lever is actuated, thus providing protection against overheating. Simply apply the front wheel brake and use the engine brake.◀


### **Wet brakes**

 After washing the motorcycle, after driving through water or in the rain, braking can be delayed due to damp brake disks and brake pads. Brake early until the brakes are dry or braked until dry.◀


### **Salt on brakes**

 The full braking effect can be delayed if the motorcycle is ridden on salt-covered roads and the brakes are not applied for some time. Brake early until the salt layer of the brake disks and brake pads has been braked off.◀

### **Oil or grease on brakes**


 Oil and grease on the brake disks and pads considerably diminish braking efficiency. Especially after repair and maintenance tasks, make sure that the brake disks and brake pads are free of oil and grease.◀

### **Dirt or mud on brakes**

 When the motorcycle is ridden on loose surfaces or muddy roads, the brakes may fail to take effect immediately because of dirt or moisture on the disks or brake pads. Brake early until the brakes are braked clean.◀


## Parking your motorcycle

### Placing on side stand

 If the ground is soft or uneven, there is no guarantee that the motorcycle will rest firmly on the stand.

Always check that the ground under the stand is level and firm. ◀


- Switch off the engine.
- Pull handbrake lever.
- Hold motorcycle upright and balanced.
- Use your left foot to extend side stand fully.

 The side stand is designed to support only the weight of the motorcycle.

Do not lean or sit on the motorcycle with the side stand extended. ◀


- Slowly lean the motorcycle to the side until its weight is taken

by the stand and dismount to the left.

 If the motorcycle is on the side stand, the surface of the ground will determine whether it is better to turn the handlebars to the left or right. However, the motorcycle is more stable on a level surface with the handlebars turned to the left than with the handlebars turned to the right.

On level ground, always turn the handlebars to the left to set the steering lock. ◀


- Turn handlebars to full left or right lock position.
- Check that the motorcycle is standing firmly.

 On a grade, the motorcycle should always face uphill; select 1st gear. ◀

- Lock steering lock.

### Remove from side stand


- Unlock steering lock.
- From left, grip handlebars with both hands.
- Pull handbrake lever.
- Swing your right leg over the seat and lift motorcycle to upright position.
- Hold motorcycle upright and balanced.

 An extended side stand can catch on the ground when the motorcycle is moving and lead to a fall.

Retract the side stand before moving the vehicle. ◀

- Sit on motorcycle and use your left foot to retract side stand.


### Placing on center stand

 If the ground is soft or uneven, there is no guarantee that the motorcycle will rest firmly on the stand.

Always check that the ground

under the stand is level and firm. ◀

- Switch off the engine.
- Dismount and keep your left hand on left handlebar grip.
- Grasp passenger seat handle or rear frame with your right hand.
- Using your right foot, press center stand toward rear until feet rest on ground.
- Place full weight of body on center stand while pulling motorcycle toward rear.

 Excessive movements could result in the center stand retracting, and the motorcycle would topple as a result.


Do not sit on the motorcycle while it is resting on the center stand. ◀


- Check that the motorcycle is standing firmly.
- Lock steering lock.


## Pushing off center stand


- Unlock steering lock.
- Place your left hand on left handlebar grip.
- With your right hand, grip rear grab handle or rear frame.
- Push motorcycle forward off center stand.
- Make sure that center stand is fully retracted.


## Refueling

 Fuel is highly flammable. Fire at the fuel tank can result in fire and explosion. Do not smoke. Never bring a naked flame near the fuel tank. ◀

 Fuel expands when exposed to heat. When the tank is overfilled, fuel can escape and get onto the rear wheel. This results in a danger of falling. Do not fill the tank past the bottom edge of the filler neck. ◀

 Fuel attacks plastic surfaces, making them cloudy or unattractive. Wipe off any fuel that gets onto plastic parts immediately. ◀

 Fuel can attack the material of the windshield; it then becomes dull or unsightly. Wipe off any fuel that gets onto the windshield immediately. ◀

 Leaded fuel will destroy the catalytic converter. Use only unleaded fuel. ◀

- Make sure ground is level and firm and park motorcycle.
- Open protective cap.



- Open fuel tank cap with ignition key by turning it counter-clockwise.



- Refuel with quality listed below at most until lower edge of filler neck is reached.



Recommended fuel quality

- 98 ROZ/RON (Super Plus unleaded)
- 95 ROZ/RON (Super unleaded (fuel type can be used with reduced performance and consumption))



Usable fuel quantity

- Approx. 6.3 gal (Approx. 24 l)



Reserve fuel quantity

- $\geq 1.1$  gal ( $\geq 4$  l)
- Press fuel tank cap down firmly to close.
- Remove key and close protective cap.

## Securing motorcycle for transport

- Protect all components along which straps are routed against scratching. For example, use adhesive tape or soft cloths.



The motorcycle can tip away to the side and fall over.

Secure the motorcycle against tipping away to the side. ◀

- Push motorcycle onto transport surface, and do not place on side stand or center stand.



Components can be damaged.

Do not pinch components, e.g. brake lines or wiring harnesses. ◀

- Place front strap over the frame and route downward.
- Guide the strap through the wheel carrier toward the front and tension downward.



- Fasten straps at rear on both sides on passenger footrests and tension.
- Tension all straps evenly; motorcycle should be compressed as greatly as possible.

## Technology in detail

Brake system with BMW Motorrad Integral ABS .....	94
Engine management with BMW Motorrad ASC .....	96
Tire Pressure Control TPC/RDC ....	97
Electronic Suspension Adjustment ESA II .....	99

## Brake system with BMW Motorrad Integral ABS

### Partially integral brake

Your motorcycle is equipped with a partially integral brake configuration. Both front and rear brakes are applied simultaneously when you pull the handbrake lever.

The footbrake lever acts only on the rear brake.

The BMW Motorrad Integral ABS adapts the braking force distribution between the front and rear wheel brake to the loading of the motorcycle during braking.



Spinning of the rear wheel with the front brake pulled (burn out) is made considerably more difficult by the integral function. The result may be damage to the rear wheel brake and the clutch.

Avoid burn-outs.◀

### How does ABS work?

The maximum braking force that can be transferred to the road surface is partially dependent on the friction coefficient of the road surface. Gravel, ice, snow and wet roads offer a considerably poorer friction coefficient than a dry, clean asphalt surface. The poorer the friction coefficient of the road surface is, the longer the braking distance will be.

If the maximum transferrable braking force is exceeded when the driver increases the brake pressure, the wheels begin to block and driving stability is lost, and a fall can result. Before this situation occurs, ABS intervenes and adjusts the brake pressure to the maximum transferrable braking force. This enables the wheels to continue to turn and maintains driving stability regardless of the road surface condition.

### What happens when rough roads are encountered?

Bumpy or rough roads can briefly lead to a loss of contact between the tires and the road surface, until the transferrable braking force is reduced to zero. If braking is carried out in this situation, ABS must reduce the brake pressure to ensure driving stability when restoring contact to the road. At this point in time, the BMW Motorrad Integral ABS must assume extremely low friction coefficients (gravel, ice, snow) so that the running wheels turn in every imaginable case and the driving stability is ensured. After detecting the actual conditions, the system adjusts the optimum brake pressure.



## How is the BMW Motorrad Integral ABS noticeable to the rider?

If the ABS system must reduce the braking forces due to the conditions described above, then vibrations can be felt at the handbrake lever.

If the handbrake lever is pulled, then braking pressure is built up at the rear wheel with the integral function. If the footbrake pedal is first actuated after this, the brake pressure already built up can be felt earlier than the counter-pressure, than when the footbrake pedal is actuated before or together with the handbrake lever.

## Lifting off rear wheel

Even during severe braking, a high level of tire grip can mean that the front wheel does not lock up until very late, if at all. Consequently, ABS does not intervene until very late, if at all.

Under these circumstances the rear wheel can lift off the ground, and the outcome can be a high-siding situation in which the motorcycle can flip over.



Heavy braking can lead to the rear wheel lifting off the ground.

When braking, bear in mind that the ABS control cannot be relied on in all circumstances to prevent the rear wheel from lifting off the ground. ◀

## What are the design characteristics of the BMW Motorrad Integral ABS?

The BMW Motorrad Integral ABS ensures driving stability on any surface within the limits of driving physics. The system is not optimized for special requirements resulting under extreme weath-

er conditions offroad or on the racetrack.

## Special situations

To detect the tendency of the wheels to lock up, the speeds of the front and rear wheel are compared. If implausible values are detected over a longer period of time, the ABS function is deactivated for safety reasons and an ABS fault is indicated. The condition for a fault message is the completed self-diagnosis.

In addition to problems on the BMW Motorrad Integral ABS, unusual driving conditions can also lead to a fault message.

### Unusual driving conditions:

- Heating up on the main or auxiliary stand at idle or with gear engaged.
- Rear wheel locked-up for a longer period of time by en-

gine brake, e.g. when riding downhill offroad.

Should a fault message result due to one of the driving conditions described above, the ABS function can be reactivated by switching the ignition off and then on again.

### How important is regular maintenance?



Any technical system is always only as good as its maintenance condition.

To ensure that the BMW Motorrad ABS is in an optimally maintained condition, it is vital that the specified inspection intervals be complied with. ◀

### Reserves for safety

But remember: the potentially shorter braking distances which BMW Motorrad Integral ABS permits must not be used as an ex-

cuse for careless riding. ABS is primarily a means of ensuring a safety margin in genuine emergencies.

Take care when cornering. When you apply the brakes on a corner, the motorcycle's weight and momentum take over and even BMW Motorrad Integral ABS is unable to counteract their effects.

### Engine management with BMW Motorrad ASC

– with automatic Stability Control<sup>OE</sup>

### How does ASC work?

The BMW Motorrad ASC compares the wheel speeds of the front and rear wheel. From the speed difference the slip, and with it the stability reserves on the rear wheel are determined. When a slip limit is exceeded, the

engine torque is adapted by the engine management system.

### What are the design characteristics of the BMW Motorrad ASC?

The BMW Motorrad ASC is an assistance system for the driver and is designed for driving on public roads. Especially in at the limits of driving physics, the driver has a considerable influence on the control options of the ASC (shifting weight in curves, loose loads). The system is not optimized for special requirements resulting under extreme weather conditions offroad or on the racetrack. The BMW Motorrad ASC can be deactivated for these cases.



Even with ASC, physical laws cannot be overridden. The driver is always responsible for adapting his/her driving style. Do not reduce the additional

safety provided with risky driving.◀

## Special situations

At an increasing angle, the acceleration performance is increasingly limited in accordance with physical laws. This can result in delayed acceleration when coming out of very tight curves.

To detect spinning or slipping away of the rear wheel, the speeds of the front and rear wheel are compared. If implausible values are detected over a longer period of time, the ASC function is deactivated for safety reasons and an ASC fault is indicated. The condition for a fault message is the completed self-diagnosis.

In the following unusual driving states, the BMW Motorrad ASC can be automatically deactivated.

### Unusual driving conditions:

- Driving on the rear wheel (wheely) for a longer period with ASC deactivated.
- Rear wheel spinning in place with front brake pulled (burn out).
- Heating up on the main or auxiliary stand at idle or with gear engaged.

The ASC is reactivated by switching the ignition on and off and then driving at a speed above 5 mph (10 km/h).

If the front wheel loses contact to the ground during extreme acceleration, the ASC reduces the engine torque until the front wheel touches the ground again. In this case, BMW Motorrad recommends turning back the throttle twist grip somewhat to achieve a stable driving state again as quickly as possible.

On a slippery surface, the throttle twist grip should never be suddenly turned back completely without pull the clutch at the same time. The engine braking torque can cause the rear wheel to block, resulting in an unstable driving state. This case cannot be controlled by the BMW Motorrad ASC.

## Tire Pressure Control TPC/RDC

- with Tire Pressure Control (TPC/RDC)<sup>OE</sup>

### Function

A sensor is located in each tire, which measures the air temperature and the inflation pressure inside the tire and sends these values to the control unit.

The sensors are equipped with a centrifugal controller, which does not enable the transmission of the measured values un-

til a speed of approx. 20 mph (30 km/h) is reached. Before initial reception of the tire inflation pressure, -- is shown in the display for each tire. The sensors continue to transmit the measured values for approx. 15 minutes after the motorcycle comes to a stop.

The control unit can manage four sensors, and as a result two sets of wheels with RDC sensors can be driven. If a RDC control unit is installed, however the wheels have no sensors, then an error message is output.

### **Tire inflation pressure ranges**

The RDC control unit distinguishes between three tire inflation pressure ranges matched to the motorcycle:

- Inflation pressure within the permissible tolerance.
- Inflation pressure at the limits of the permissible tolerance.
- Inflation pressure outside the permissible tolerance.

### **Temperature compensation**

The tire inflation pressures are shown temperature-compensated in the multifunction display; they refer to a tire air temperature of 68 °F (20 °C). As the air-pressure testers at filling stations show a temperature-dependent tire inflation pressure, they do not match the values indicated in the multifunction display in most cases.

### **Adjusting inflation pressure**

Compare the TPC/RDC value in the multifunction display with the value on the back cover of the Rider's Manual. The difference between the two values must be compensated with the air pressure tester at the filling station.

Example: According to the Rider's Manual, the tire inflation pressure is to be 36.3 psi (2.5 bar), however 33.4 psi (2.3 bar) is shown in the multifunction display, i.e. it is low by 2.9 psi (0.2 bar). The tester at the filling station indicates 34.8 psi (2.4 bar). This value must be increased by 2.9 psi (0.2 bar) to 37.7 psi (2.6 bar) to produce the correct tire inflation pressure.

## Electronic Suspension Adjustment ESA II

- with Electronic Suspension Adjustment (ESA II)<sup>OE</sup>

### Chassis adjustments

The proper loading state must first be selected when the motorcycle is stationary according to the motorcycle's load. Depending on the riding mode selected, the dampings are set on both spring struts and the spring base and spring rate are set on the rear spring strut. If the selected riding mode is changed, the spring rate on the rear spring strut is also adjusted in addition to the damping of both spring struts. This enables very precise adjustment of the chassis to all riding conditions, including while riding.

- The combination of spring base, damping and spring rate ensures the chassis geometry is always appropriate.
- The static normal position is virtually maintained while riding.
- The different riding and loading conditions are offset so that the handling of the motorcycle remains constant.

It is possible to electrically change the spring rate through the combination of a conventional coil spring with a plastic element (Elastogran), the lateral expansion of which can be electrohydraulically limited using a displaceable sleeve. The more the sleeve surrounds the plastic element, the more its expansion is limited and the spring rate increases. The highest spring rate is achieved when the sleeve completely encloses the plastic element and sits on the steel

spring. Accordingly, the spring rate is lower, the less the sleeve limits the expansion of the plastic element.



## Accessories

General instructions.....	102
Onboard socket.....	102
Luggage .....	103
Case .....	104
Topcase .....	106

## General instructions

BMW Motorrad recommends the use of parts and accessories for your motorcycle that are approved by BMW for this purpose. Your authorized BMW Motorrad retailer is the right place to go for genuine BMW parts and accessories, other BMW-approved products, and expert advice on their installation and use.

These parts and products have been tested by BMW for safety, function and suitability. BMW accepts product liability for these products.

Conversely, BMW is unable to accept any liability whatsoever for parts and accessories which it has not approved.



BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW motorcycles without

constituting a safety hazard. Nor is this guarantee provided when the official approval of a specific country has been granted. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW motorcycles and, consequently, they are not sufficient in some circumstances.

Use only parts and accessories approved by BMW for your motorcycle. ◀

Whenever you are planning modifications, comply with all the legal requirements. The motorcycle must not infringe on national road-vehicle construction and use regulations.

## Onboard socket

### Ratings



The supply to the socket **1** is cut off automatically if battery voltage is too low or the load exceeds the maximum rating.

### Operating electrical accessories

You can start using electrical accessories only when the ignition is switched on. The accessory remains operational if the ignition is subsequently switched off. Approx. 15 minutes after switching off the ignition and/or during



starting, the onboard socket is switched off to take the load off the motorcycle electrical system.

## Cable routing

The cables from the onboard socket to the auxiliary device must be routed in such a way that they:

- Do not impede the rider
- Do not restrict or obstruct the steering angle and handling characteristics
- Cannot be trapped



Improperly routed cables can impede the rider.

Route the cables as described above. ◀

## Luggage

### Correct loading



Overloading and imbalanced loads can adversely affect the motorcycle's handling. Do not exceed the gross weight

limit and observe the loading information. ◀

- Adjust setting of spring preload, damping characteristic and tire inflation pressures to suit total weight.
- Ensure that case volumes on left and right are equal.
- Make sure that weight is uniformly distributed between right and left.
- Pack heavy items of luggage downwards and inwards.
- Observe maximum payload of case and corresponding top speed.



Payload of case

– ≤18 lbs (≤8 kg)



Speed limit for driving with case

– ≤112 mph (≤180 km/h)

- with large Topcase<sup>OA</sup> or
- with small Topcase<sup>OA</sup>
- Observe maximum payload of Topcase and corresponding top speed.



Payload of Topcase

– with small Topcase<sup>OA</sup>

– ≤11 lbs (≤5 kg) ◀

– with large Topcase<sup>OA</sup>

– ≤22 lbs (≤10 kg) ◀



Speed limit for driving with Topcase

– ≤112 mph (≤180 km/h) ◀

- with tank rucksack<sup>OA</sup>
- Observe maximum payload of tank rucksack.



Payload of tank rucksack


– max 11 lbs (max 5 kg)◁

## Case

### Opening case




- Turn key in case lock to OPEN position.
  - » Case is unlocked.

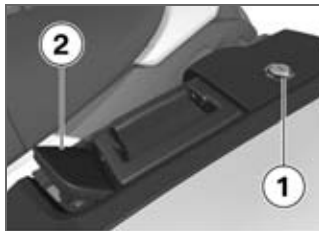


- Press lock barrel **1**.
  - » Unlocking lever **2** pops up.
- Pull release lever upward.
  - » Case lid opens.

### Closing case

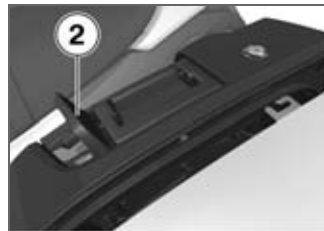

- Pull up red release lever **2** completely.
- Close case lid and press down. Check that nothing is trapped between lid and case.

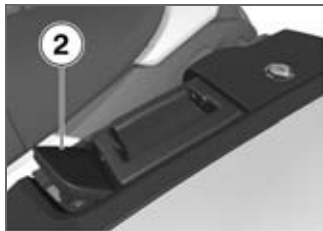


- Press release lever **2** down.
  - » Release lever engages.
- Turn key in case lock to LOCK position.
  - » Case is locked.

## Removing case



- Turn key in case lock to RE-LEASE position.
  - » Handle pops out.

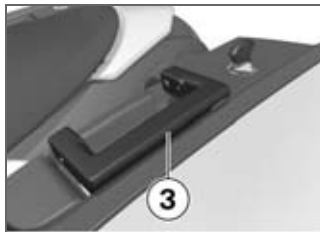

- First pull handle **3** out, then pull upward as far as possible.


» Case is released and can be removed.

## Mounting case

- Pull up handle as far as possible.



- Insert case in brackets **4**.

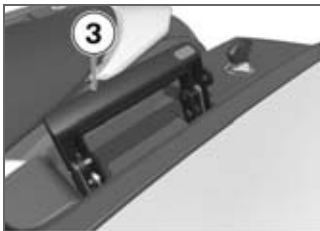

- Press handle **3** down until it engages.
- » The case is correctly engaged on its holders.
- Turn key in case lock to LOCK position.
- » Case is locked.
- Check case for firm seating.

## Topcase

- with large Topcase<sup>OA</sup>
- or
- with small Topcase<sup>OA</sup>

## Opening Topcase



- Turn key in Topcase lock to OPEN position.
- » Topcase is unlocked.



- Press lock barrel **1**.
- » Unlocking lever **2** pops up.

- Pull release lever upward.
- » Topcase lid opens.

## Closing Topcase



- Pull up red release lever **2** completely.
- Close Topcase lid and press down. Check that nothing is trapped between lid and case.



- Press release lever **2** down.  
» Release lever engages.
- Turn key in Topcase lock to LOCK position.  
» Topcase is locked.

### Removing Topcase

- Turn key in Topcase lock to RELEASE position.  
» Handle pops out.



- Pull up handle **3** completely.
- Lift Topcase at rear and pull off luggage rack.

### Mounting Topcase

- Pull up handle as far as possible.



- Hook Topcase into luggage rack. Make sure that hooks **4** are securely seated in corresponding mounts **5**.



- Press handle **3** down until it engages.

- » Topcase is locked.
- Turn key in Topcase lock to LOCK position.
- » Topcase is locked.
- Check Topcase for firm seating.

## Maintenance

General instructions.....	110
Onboard toolkit .....	110
Engine oil .....	111
Brake system .....	113
Brake pads .....	113
Brake fluid .....	115
Clutch .....	117
Tires .....	117
Rims .....	118
Wheels .....	118
Front wheel stand .....	126
Lamps .....	127
Jump-starting.....	134
Battery.....	135

## General instructions

The 'Maintenance' chapter describes work involving the checking and replacement of wear parts that can be performed with a minimum of effort.


If special tightening torques are to be taken into account for assembly, these are listed. An overview of all required tightening torques is contained in the chapter "Technical Data".

Information on additional maintenance and repair work is provided in the Repair Manual for your motorcycle on DVD, which you can obtain from your authorized BMW Motorrad retailer.

Special tools and thorough specialized knowledge are required to carry out some of the work described here. If you are in doubt, consult a certified workshop, preferably your authorized BMW Motorrad retailer.

## Onboard toolkit

### Onboard toolkit

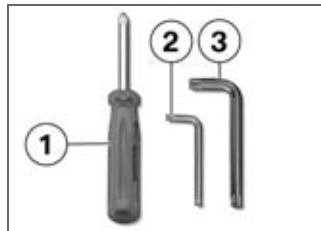


- 1** Reversible screwdriver with Phillips and straight blade
  - Adjusting damping on rear wheel (➔ 72).
  - Replacing front turn indicator bulbs (➔ 131).
  - Removing battery (➔ 136).

- 2** TORX wrench, T25
  - Replacing brake light bulbs, tail light bulbs and rear turn indicator bulbs (➔ 132).
  - Removing battery compartment cover (➔ 137).
- 3** Torx wrench, T45
  - Adjusting handlebar height

### Onboard-toolkit service set

- with service toolkit<sup>OA</sup>



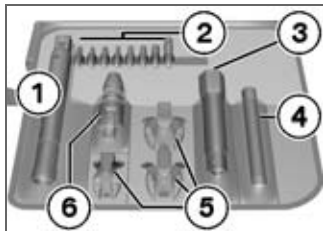

- 1** Pull-out tool holder for mounting all tools via adapters and for removing spark plug
- 2** 1/4" bits  
Bits of various sizes
- 3** 3/8" Allen key, 22 mm for removing quick-release axle on front wheel
- 4** Flashlight
- 5** Socket wrench  
Open-ended wrenches of various sizes

- 6** Adapter for holding 1/4" bits and 9x12 mm and 3/8" jointed adapter

## Engine oil


### Checking engine oil level

**!** The engine can seize if the oil level is low, and this can lead to accidents. Always make sure that the oil level is correct. ◀

**!** After longer motorcycle immobilization periods, engine oil can collect in the oil pan; this must be pumped into the oil tank before the reading is taken. Here, the engine oil must be at operating temperature. Checking the oil level with the engine cold or after a short trip leads to misinterpretations and therefore to incorrect oil fill quantities. To ensure that the display of the engine oil level is correct, only

check the oil level after a longer trip. ◀


- Make sure ground is level and firm and place motorcycle at operating temperature on its center stand.
- Let the engine run in neutral for one minute.
- Switching off ignition
- Removing driver's seat (→ 78).
- Wipe area around oil fill location clean.

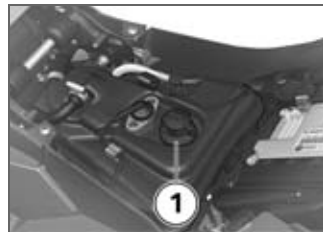

- Remove cap from oil fill location **1** by turning counterclockwise.



- Clean oil dipstick **2** with a dry cloth
- Place oil dipstick on oil fill location, but do not install.
- Remove oil dipstick and read off oil level.

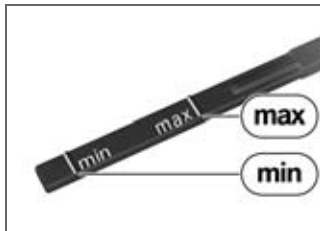

Specified level of engine oil

– between min and max markings (Place oil dipstick on oil fill location, but do not install)

If oil level is below MIN mark:

- Top up engine oil.

If oil level is above MAX mark:


- Have oil level corrected by a specialized workshop, preferably an authorized BMW Motorrad retailer.

- Install oil dipstick.

- Installing driver's seat (➔ 78).

## Topping up engine oil

- Removing driver's seat (➔ 78).
- Wipe area around fill location clean.

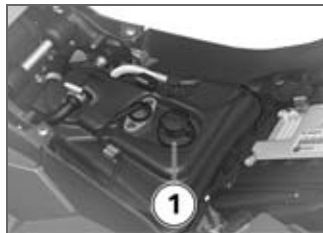

- Remove cap from oil fill location **1** by turning counterclockwise.



Both too little and too much engine oil can lead to engine damage. Always make sure that the oil level is correct. ◀

- Add engine oil up to specified level.
- Checking engine oil level (➡ 111).
- Install cap of oil fill location **1** by turning clockwise.
- Installing driver's seat (➡ 78).

## Brake system

### Operating safety

A fully functional brake system is a basic requirement for the road safety of your motorcycle.

Do not ride the motorcycle if you have any doubts about the dependability of the brake system. In this case, have the brake system checked by a specialized workshop, preferably by an authorized BMW Motorrad retailer.



Incorrect working practices endanger the reliability of the brakes.

Have all work on the brake system performed by a specialized

workshop, preferably by an authorized BMW Motorrad retailer.◀

### Checking brake operation

- Pull handbrake lever.
  - » Pressure point must be clearly perceptible.
- Press footbrake lever.
  - » Pressure point must be clearly perceptible.

### Brake pads

#### Checking front brake pad thickness



Dropping below the minimum pad thickness leads to reduced braking performance and may result in damage to the brakes.

In order to ensure the operating reliability of the brake system, make sure that the brake pads are not worn beyond their minimum thickness.◀

- Make sure ground is level and firm and park motorcycle.



- Visually inspect left and right brake pads to ascertain their thickness. Direction of view: between wheel and front wheel control to brake calipers **1**.



Front brake-pad wear  
limit

- min 0.04 in (min 1 mm) (Only friction material without carrier plate. Wear markings (grooves) must be clearly visible.)

If the wear indicating mark is no longer clearly visible:

- Have the brake pads replaced by a specialized workshop, preferably an authorized BMW Motorrad retailer.

## Checking rear brake pad thickness



Dropping below the minimum pad thickness leads to reduced braking performance and may result in damage to the brakes.

In order to ensure the operating reliability of the brake system, make sure that the brake pads are not worn beyond their minimum thickness. ◀

- Make sure ground is level and firm and park motorcycle.



- Check the brake pad thickness with visual inspection. Direction of view: from right to brake caliper **1**.



## Brake fluid

### Checking front brake fluid level

- Make sure ground is level and firm and place motorcycle on its center stand.
- Move handlebars into straight-ahead position.



Rear brake-pad wear limit

- min 0.04 in (min 1.0 mm)  
(Only friction material without carrier plate. Brake disk must not be visible through bore hole of inner brake pad.)

If brake disk is visible:

- Have the brake pads replaced by a specialized workshop, preferably an authorized BMW Motorrad retailer.



A low fluid level in the brake reservoir can allow air to penetrate the brake system. This significantly reduces braking efficiency. Check brake fluid level regularly. ◀

- Read off brake fluid level at brake-fluid reservoir **1**.



In the event of brake pad wear, the brake fluid level in the brake-fluid reservoir falls. ◀



Front brake fluid level

- Brake fluid DOT4
- The brake fluid level must not fall below the MIN mark. (Brake fluid reservoir horizontal, motorcycle standing upright and handlebars straight ahead)


If brake fluid level drops below permissible level:

- Have the defect corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.


## Checking rear brake fluid level

- Make sure ground is level and firm and place motorcycle on its center stand.
- Removing passenger seat (➔ 77).



 A low fluid level in the brake reservoir can allow air to penetrate the brake system. This significantly reduces braking efficiency. Check brake fluid level regularly.◀

- Read off brake fluid level at brake-fluid reservoir **1**.

 In the event of brake pad wear, the brake fluid level in the brake-fluid reservoir falls.◀



Rear brake fluid level

– Brake fluid DOT4

– The brake fluid level must not fall below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle standing upright)

If brake fluid level drops below permissible level:

- Have the defect corrected as soon as possible by a specialized workshop, preferably an

authorized BMW Motorrad retailer.

- Installing passenger seat (→ 79).

## Clutch

### Checking clutch operation

- Pull the clutch lever.
- » Pressure point must be clearly perceptible.

If no clear pressure point can be felt:

- Have the clutch checked by a specialized workshop, preferably an authorized BMW Motorrad retailer.

### Checking clutch fluid level

- Make sure ground is level and firm and place motorcycle on its center stand.
- Move handlebars into straight-ahead position.



- Read off clutch fluid level at clutch fluid reservoir 1.

▶ The fluid level in the clutch fluid reservoir rises due to clutch wear.◀



Clutch fluid level (visual check)

– Clutch fluid level must not drop.

If fluid level drops:



Unsuitable hydraulic fluids could cause damage to the clutch system.

No fluids may be poured in.◀

- Have the defect corrected as soon as possible by a specialized workshop, preferably an authorized BMW Motorrad retailer.

▶ The clutch system is filled with a special hydraulic fluid that does not require changing.◀

## Tires


### Checking tire tread depth



The handling of your motorcycle can already change for the worse before the legally prescribed minimum tread depth is reached.

Have tires replaced even before the minimum tread depth is reached.◀

- Make sure ground is level and firm and park motorcycle.
- Measure tire tread depth in main tread grooves with wear indicating marks.

 Tires have wear indicators integrated into the main tread grooves. If the tire tread has worn down to the level of the marks, the tire is completely worn. The locations of the marks are indicated on the edge of the tire, e.g. by the letters TI, TWI or by an arrow.◀

When the minimum tread depth is reached:

- Replace tires concerned.

## Rims

### Checking rims

- Make sure the ground is level and firm and park the motorcycle.
- Visually inspect rims for defects.
- Have damaged rims checked and, if necessary, replaced by a specialized workshop, preferably an authorized BMW Motorrad retailer.

## Wheels

### Tire recommendation

For every size of tire, BMW Motorrad has tested and approved certain makes as roadworthy. BMW Motorrad cannot evaluate the suitability of other tires, and can therefore take no responsibility for their driving safety.

BMW Motorrad recommends only using the tires tested and approved by BMW Motorrad. Extensive information is available at your authorized BMW Motorrad retailer or on the Internet at [www.bmw-motorrad.com](http://www.bmw-motorrad.com).

### Affect of wheel sizes on chassis control systems

The wheel sizes play a major role in the chassis control systems ABS and ASC. Especially the diameter and width of the wheels are stored in the control unit as

the basis for all necessary calculations. A change in these sizes due to conversion to others than the wheels installed as standard equipment can seriously affect the control comfort of these systems.

The sensor wheels required for wheel speed detection must also match the control systems installed and may not be replaced. If you want to equip your motorcycle with different wheels, please speak to a specialized workshop, and preferably a BMW Motorrad retailer. In some cases the data stored in the control units can be adapted to the new wheel sizes.

### TPC/RDC sticker

- with Tire Pressure Control (TPC/RDC)<sup>OE</sup>





or the specialized workshop of the TPC/RDC sensor.

### Removing front wheel

- Make sure ground is level and firm and place motorcycle on its center stand.



- Remove screws **1** on left and right.
- Pull out front wheel cover toward front.



- Unclip two retaining clips **1** of the ABS sensor cable on brake line.
- Mask off area of wheel rim that could be scratched in process of removing brake calipers.



The TPC sensors can be damaged by improper tire mounting.

Inform the BMW Motorrad retailer or the specialized workshop that the wheel is equipped with a TPC sensor.◀


On motorcycles equipped with TPC/RDC, a corresponding sticker is located on the wheel rim at the position of the TPC/RDC sensor. During a tire change it must be ensured that the TPC/RDC sensor is not damaged. Inform the BMW Motorrad retailer



**!** Once the calipers have been removed, there is a risk of the brake pads being pressed together to the extent that they cannot be slipped back over the brake disk on reassembly.

Do not operate the handbrake lever when the brake calipers have been removed. ◀


- Remove securing screws **2** of left and right brake calipers.

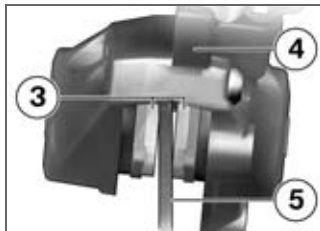


- Push brake pads **3** apart slightly by rocking the brake caliper **4** back and forth against the brake disk **5**.
- Carefully pull brake calipers back and out until clear of brake disks.
- When pulling off left brake caliper, make sure that ABS sensor cable is not damaged.



- Remove screw **1** and take ABS sensor out of hole.
- Raise front of motorcycle until the front wheel can turn freely. BMW Motorrad recommends the BMW Motorrad front-wheel stand for lifting the motorcycle.
- Mounting front wheel stand (➡ 126).

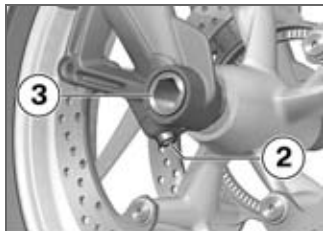


- Remove quick-release axle **3** while supporting wheel.
- Place the front wheel in the front wheel guide on the ground.

 The ABS sensor can be damaged when rolling out the front wheel.


Watch the ABS sensor when rolling out the front wheel.◀

- Roll front wheel forward to re-move.


## Installing front wheel


 Malfunctions may occur during control interventions by ABS and ASC if a wheel other than the standard wheel is installed.

Please see the information on the effect of wheel sizes on the chassis control systems ABS and ASC at the beginning of this chapter.◀


 The left axle clamping screw fixes the threaded bush in place in the front suspension. A poorly aligned threaded bush results in incorrect spacing between the ABS sensor ring and the ABS sensor, and therefore to ABS malfunctions or destruction of the ABS sensor. To ensure the proper alignment of the threaded bush, do not loosen or remove the left axle clamping screw.◀

- Remove right-hand axle clamping screw **2**.

 Threaded fasteners not tightened to the specified torque can work loose or their threads can suffer damage. Always have the tightening torques checked by a specialized workshop, preferably an authorized BMW Motorrad retailer.◀

 The front wheel must be installed right way round to rotate in the correct direction. Observe the direction of rotation arrows on the tires or on the rim.◀

- Roll front wheel into front wheel guide.

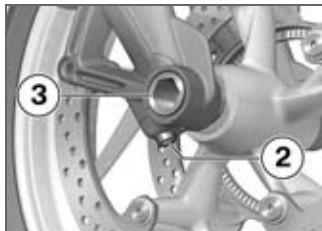

- Lift front wheel and install quick-release axle **3** with torque.



Quick-release axle in threaded bush

– 37 lb/ft (50 Nm)

- Tighten the right-hand axle clamping screw **2** with the specified torque.



Clamping bolt in wheel carrier

– 14 lb/ft (19 Nm)

- Remove front wheel stand.



- Insert ABS sensor into hole and install screw **1**.
- Ease brake calipers on to brake disks.



- Install securing screws **2** on left and right with specified torque.




Front brake caliper on wheel carrier

– 22 lb/ft (30 Nm)




- Clip in the two retaining clips **1** for the ABS sensor cable on the brake line.
- Remove adhesive tape from wheel rim.
- Press the handbrake lever firmly a number of times until the resistance point is noticeable.

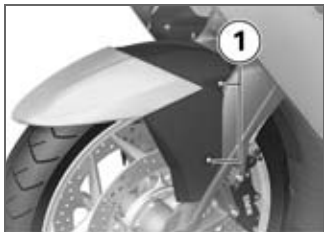


- Install front wheel cover and fit screws **1** on right and left.

## Removing rear wheel

- Make sure ground is level and firm and place motorcycle on its center stand.

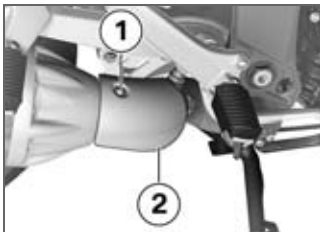

- Remove bolt **1** of muffler cover **2**.
- Extract cover from the rear.

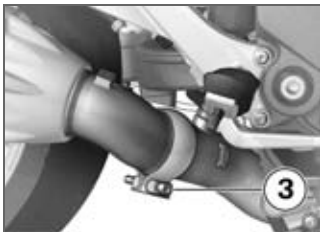


- Loosen screw **3** on clamp far enough that the clip can be twisted.

- Do not remove sealing grease from clamp.



- Remove screw **4** on the rear footrest while supporting the end muffler.

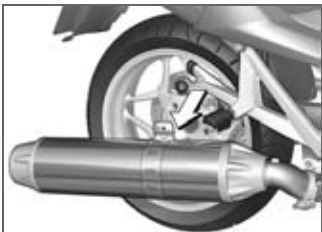


- First turn the end muffler downward slightly and then outward.
- Shift into first gear.




- Remove five screws **1** on rear wheel, holding wheel as you do so.
- Lower rear wheel to the ground and roll out toward rear.

### Installing rear wheel

 Malfunctions may occur during control interventions by ABS and ASC if a wheel other than the standard wheel is installed.

Please see the information on the effect of wheel sizes on the chassis control systems ABS and ASC at the beginning of this chapter.◀

 Threaded fasteners not tightened to the specified torque can work loose or their threads can suffer damage. Always have the tightening torques checked by a specialized workshop, preferably an authorized BMW Motorrad retailer.◀

- Roll and mount rear wheel onto rear wheel support.



- Fit five screws **1** and tighten diagonally with specified torque.




Tighten rear wheel on  
wheel flange

- Tightening sequence: diagonally
- 44 lb/ft (60 Nm)




Muffler on passenger  
footrest

- 16 lb/ft (22 Nm)

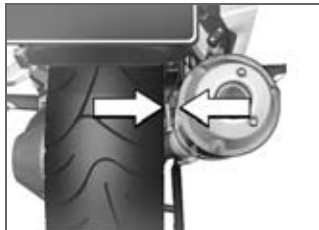

- Align end muffler in such a way that the grip of the plug-selectable screwdriver (toolkit) fits between the tires and end muffler.

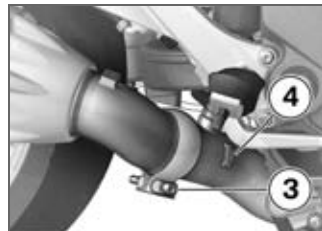

- Align clip as shown.
- Tighten screw **3** on the clamp with the appropriate torque.



Muffler with ball-joint  
clamp on manifold

- 26 lb/ft (35 Nm)

- Insert muffler cover into support **4**.



- Turn the end muffler to its initial position.

- Tighten screw **4** on the rear footrest with the appropriate torque.



- Install screw **1**.


## Front wheel stand

### Mounting front wheel stand



The BMW Motorrad front wheel stand is not designed for holding motorcycles without a center or other auxiliary stands. A motorcycle standing on the front wheel stand and the rear wheel alone can fall over. Place the motorcycle on the center stand or an auxiliary stand before lifting it with the BMW Motorrad front wheel stand.◀

- Use basic stand with tool number (0 402 241) in combination with front-wheel adapter (0 402 243).
- Make sure ground is level and firm and place motorcycle on its center stand.

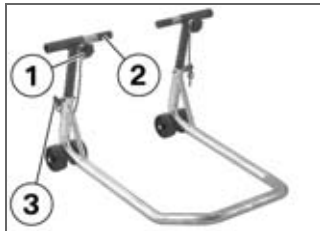

- Loosen adjusting screws **1**.
- Push two mounting pins **2** far enough apart that front suspension fits between them.
- Use locating pins **3** to set front wheel stand to desired height.
- Center front wheel stand relative to front wheel and push it against front axle.



The sensor ring of the BMW Motorrad Integral ABS can be damaged. Only push the left mounting pin so far inward that it does not touch the sensor ring.◀

Only push the left mounting pin so far inward that it does not touch the sensor ring.◀

- Push two mounting pins **2** through triangles of brake caliper support toward inside so that front wheel can still be rolled through.
- Tighten adjusting screws **1**.







## Lamps

### General instructions


A warning appears in the multi-function display if a bulb is defective. If the brake or rear light fails, the symbol is accompanied by the 'General' warning light, which lights up yellow.

 A defective bulb places your safety at risk because it is easier for other users to oversee the motorcycle. Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

 The bulb is pressurized and can cause injury if damaged. Wear eye and hand protection when replacing bulbs.◀


 An overview of the bulb types installed in your mo-


torcycle is provided in the chapter "Technical Data".◀

 Do not touch the glass of new bulbs with your fingers. For installation, use a clean, dry cloth. Dirt deposits, in particular oil and grease, interfere with heat radiation from the bulb. Overheating and therefore short service life of the bulbs are the consequence.◀

### Replacing xenon bulb

– with Xenon light <sup>OE</sup>

 Xenon light operates with high voltage. There is a danger to life and limb if work is not carried out properly. Have all work on the xenon light system including bulb replacements carried out by a specialist workshop, preferably an authorized BMW Motorrad retailer.◀

 If the motorcycle is resting on the center stand: The motorcycle is raised too far at the front, the center stand lifts off the ground and the motorcycle can tip over to the side.

When raising the motorcycle, make sure that the center stand remains on the ground.◀

- Apply uniform pressure to push front wheel stand down and raise motorcycle.

- Temporarily drive with high beams switched on.
- To avoid dazzling oncoming traffic, set the headlight range adjustment to maximum payload.
- Have lamp replaced by a specialized workshop as quickly as possible, preferably an authorized BMW Motorrad retailer.

## Replacing low-beam and high-beam bulbs

▶ The alignment of the connector may differ from the illustration depending on the bulb to be replaced.◀

- Make sure ground is level and firm and park motorcycle.
- Switch off ignition.




- Remove high-beam headlight covers **1** by turning counter-clockwise.

– without Xenon light <sup>OE</sup>



- Remove low-beam headlight cover **2** by pushing locking

lever **3** downwards, tilting cover back and removing it.◀

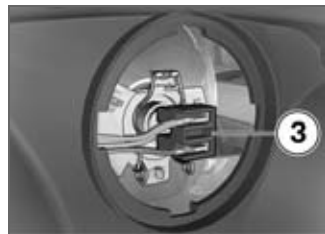

- Disconnect plug **3**.



- Remove spring wire brackets **4** from their detents on left and right and fold them up.


- Remove bulb **5**.
- Replace defective bulb.

 Bulbs for low-beam headlight


– H7 / 12 V / 55 W

– with Xenon light<sup>OE</sup>

– D1R / 35 W<

 Bulb for high-beam headlight


– H7 / 12 V / 55 W

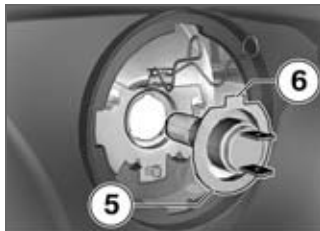


- Insert bulb **5** while ensuring correct position of lug **6**.



- Insert both sides of wire spring **4** into the locking device.

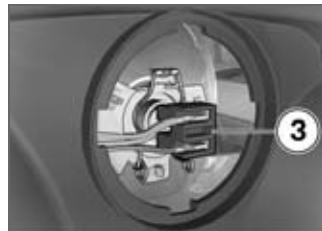

- Close connector **3**.

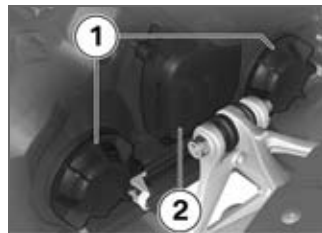

- Install covers **1** for the high-beam headlights or cover **2** for the low-beam headlight.

## Replacing parking light bulb


- Make sure ground is level and firm and park motorcycle.
- Switch off ignition.



- Remove bulb socket **1** for the left parking light by turning counterclockwise.



- Remove bulb socket **2** for the right parking light by turning counterclockwise.

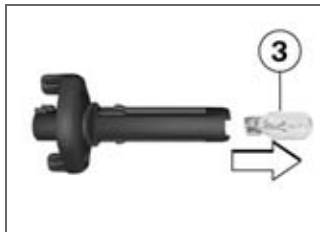


- Remove bulb **3** from bulb holder.

- Replace defective bulb.



Bulb for parking light

– W5W / 12 V / 5 W

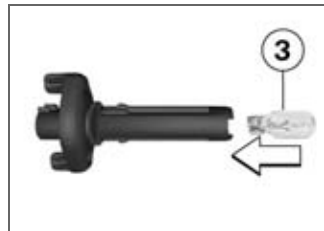

- Insert bulb **3** into bulb socket.
- Install bulb socket in the appropriate position by turning clockwise.

## Replacing front turn indicator bulbs


- Make sure ground is level and firm and park motorcycle.
- Switch off ignition.




- Remove screw **1**.
- Pull out lamp housing toward front




- Disconnect plug **2**.
- Turn bulb holder **3** counterclockwise to remove it from bulb housing.

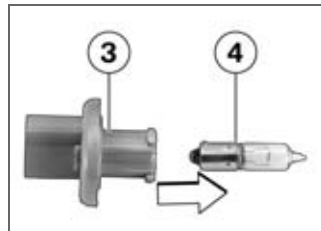

- Press bulb **4** into bulb socket **3** and remove it by turning it counterclockwise.
- Replacing defective bulb

 Bulbs for flashing turn indicators, front

– P21W / 12 V / 21 W

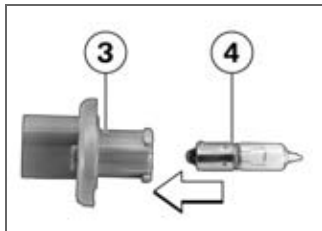

- Press bulb **4** into fitting **3** and install it by turning it clockwise.



- Install bulb socket **3** in lamp housing by turning clockwise.
- Close connector **2**.



- Insert lamp housing into trim.
- Install screw **1**.

### Replacing brake light bulbs, tail light bulbs and rear turn indicator bulbs

- Make sure ground is level and firm and park motorcycle.
- Switch off ignition.




- Remove screws **1**.
- Pull lamp housing toward rear out of brackets.



- Remove bulb socket **2** (turn indicator bulb) or bulb socket **3** (brake/tail light bulb) from lamp

housing by turning counter-clockwise.

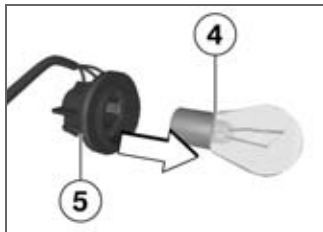

- Press bulb **4** into fitting **5** and remove it by turning it counter-clockwise.
- Replace defective bulb.




Bulb for taillight/brake light

– P21W / 12 V / 21 W



Bulbs for flashing turn indicators, rear

– P21W / 12 V / 21 W

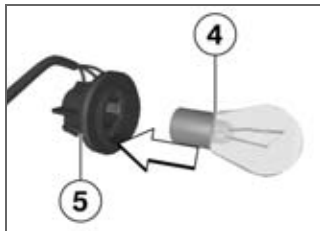

- Press bulb **4** into socket **5** and install by turning clockwise



- Install bulb socket **2** (turn indicator bulb) or bulb socket **3** (brake/tail light bulb) in lamp housing by turning clockwise.



- Insert lamp housing in brackets **6**. Make sure cables are not pinched.



- Install screws **1**.

## Jump-starting



The wires leading to the power socket do not have a load-capacity rating adequate for jump-starting the engine. Excessively high current can lead to a cable fire or damage to the motorcycle electronics.

Do not use the onboard socket to jump-start the engine of the motorcycle.◀



Touching live parts of the ignition system with the engine running can cause electric shock.

Do not touch parts of the ignition system when the engine is running.◀



A short-circuit can result if the crocodile clips of the jump leads are accidentally brought into contact with the motorcycle.

Use only jump leads fitted with

fully insulated crocodile clips at both ends.◀



Jump-starting with a donor-battery voltage higher than 12 V can damage the motorcycle electronics.

The battery of the donor vehicle must have a voltage of 12 V.◀

- When jump-starting the engine, do not disconnect the battery from the onboard electrical system.
- Removing battery compartment cover (➡ 137).
- Run engine of donor vehicle during jump-starting.
- Begin by connecting one end of red jump lead to positive terminal of discharged battery and other end to positive terminal of donor battery.
- Then connect one end of black jumper lead to negative terminal of donor battery, and other

end to negative terminal of discharged battery.

- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.
- Allow both engines to idle for a few minutes before disconnecting jump leads.
- Disconnect jump lead from negative terminals first, then disconnect second lead from positive terminals.
- Installing battery compartment cover (➡ 138).




## Battery

### Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.


Compliance with the points below is important in order to maximize battery life:

- Keep the surface of the battery clean and dry
- Do not open the battery
- Do not top up with water
- Be sure to read and comply with the instructions for charging the battery on the following pages
- Do not turn the battery upside down


 If the battery is not disconnected, the onboard electronics (clock etc.) will drain the battery. This can cause the battery to run flat. If this happens,

warranty claims will not be accepted.


During periods when the motorcycle is not being used, of more than four weeks, disconnect the battery from the motorcycle or connect a trickle charger to the battery.◀


 BMW Motorrad has developed a trickle-charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods when the motorcycle is not being used without having to disconnect the battery from the motorcycle's onboard systems. Additional information is available at your authorized BMW Motorrad retailer.◀

### Charging connected battery

 Charging the connected battery directly at the battery terminals can damage the motorcycle electronics.

To charge the battery via the battery terminals, disconnect the battery first.◀

 If you switch on the ignition and the multifunction display and indicator lights fail to light up, the battery is completely flat. Attempting to charge a completely flat battery via the onboard socket can cause damage to the motorcycle's electronics. Always charge a completely drained battery directly at the terminals of the disconnected battery.◀

 Charging the battery via the onboard socket is only possible with suitable chargers. Unsuitable chargers can result in

damage to the motorcycle electronics.

Use BMW chargers with the part numbers 71 60 7 688 864 (220 V) or, as applicable, 71 60 7 688 865 (110 V). If in doubt, charge the disconnected battery directly at the terminals.◀

- Charge disconnected battery via onboard socket.

▷ The motorcycle's onboard electronics know when the battery is fully charged. The onboard socket is switched off when this happens.◀

- Comply with operating instructions of charger.

▷ If you are unable to charge the battery via the onboard socket, you may be using a charger that is not compatible with your motorcycle's electronics. In this case, please charge the battery

directly at the terminals of the disconnected battery.◀


## Charging disconnected battery


- Charge battery using a suitable charger.
- Comply with operating instructions of charger.
- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.

▷ In the case of longer periods when the motorcycle is not being used, the battery must be recharged regularly. See the instructions for caring for your battery. Always fully recharge the battery before returning it to use.◀

## Removing battery

- Removing battery compartment cover (➡ 137).

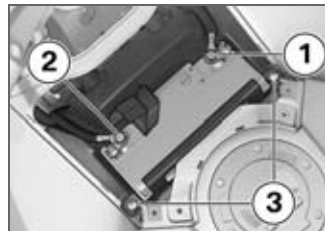


 An incorrect disconnection sequence increase the risk of short-circuiting. Always observe the proper sequence.◀

- Remove negative cable **1** first.
- Then remove positive cable **2**.
- Loosen screws **3** and push retaining strap back.
- Lift battery upwards; if it is difficult to move, moving it back and forth will help.

## Installing battery

- Place battery in battery compartment, positive terminal on right in direction of travel.

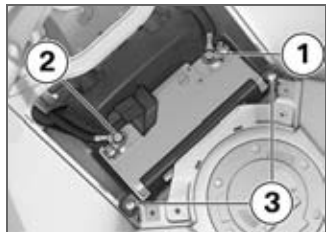

- Push retaining strap over battery and install screws **3**.



An incorrect installation sequence increases the risk of short-circuiting. Always observe the proper sequence.◀

- First install positive battery cable **2**.
- Then install negative battery cable **1**.



If the motorcycle was disconnected from the battery for a longer time, the current date must be entered in the instrument cluster to ensure the proper operation of the service display.

Consult a certified workshop, preferably an authorized BMW Motorrad retailer, for setting of the date.◀

- Installing battery compartment cover (➔ 138).
- Setting clock (➔ 54).

## Removing battery compartment cover

- Make sure ground is level and firm and park motorcycle.



- Remove screws **1**.
- Take out the battery compartment lid toward rear and upward.

## Installing battery compartment cover



- Insert battery compartment cover into slots **2** and close.



- Install screws **1**.

## Care

Care products .....	140
Washing your motorcycle .....	140
Cleaning sensitive motorcycle parts .....	140
Paint care .....	141
Protective wax coating .....	142
Storing motorcycle.....	142
Returning motorcycle to use .....	142

## Care products

BMW Motorrad recommends that you use cleaning and care products available at your authorized BMW Motorrad retailer. BMW CareProducts have been materials tested, laboratory tested, and field tested and provide optimum care and protection for the materials used in your motorcycle.



The use of unsuitable cleaning and care products can damage motorcycle components.

For cleaning, do not use any solvents such as nitro-thinners, cold cleaning agents, fuel or similar, and do not use cleaning agents that contain alcohol.◀

## Washing your motorcycle

BMW Motorrad recommends that you use BMW Insect Remover to soften and wash off insects and stubborn dirt from painted parts before washing the motorcycle.

To prevent stains, do not wash the motorcycle immediately after it has been exposed to bright sunlight and do not wash it in the sun.

Make sure that the motorcycle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after every trip.



After washing the motorcycle, after driving through water or in the rain, braking can be delayed due to damp brake disks and brake pads.

Brake early until the brakes are dry or braked until dry.◀



Warm water intensifies the effect of salt.

Only use cold water to remove road salt.◀



The high pressure of steam cleaners can damage seals, the hydraulic brake system, the electrical system and the seat. Do not use a steam jet or high-pressure cleaning equipment.◀


## Cleaning sensitive motorcycle parts

### Plastics


Clean plastic parts with water and BMW plastic care emulsion. This includes in particular:

- Windshields and wind deflectors
- Headlight lens made of plastic
- Covering glass of the instrument cluster

– Black, unpainted parts


 If plastic parts are cleaned using unsuitable cleaning agents, the surfaces can be damaged.

Do not use cleaning agents that contain alcohol, solvents or abrasives to clean plastic parts. 'Fly sponges' or sponges with hard surfaces can also lead to scratches.◀

 Soften stubborn dirt and dead insects by covering the affected areas with a wet cloth.◀

## Windshield

Clean off dirt and insects with a soft sponge and plenty of water.


 Fuel and chemical solvents attack the windshield material; the windshield becomes cloudy or dull. Do not use cleaning agents.◀

## Chrome

Especially in the case of road salt, carefully clean chrome parts with plenty of water and BMW auto shampoo. Use chrome polish for additional treatment.

## Radiator


Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.

 Cooling fins can be bent easily.

When cleaning the radiator, ensure that the fins are not bent.◀

## Rubber

Treat rubber components with water or BMW rubber protection coating agent.

 Using silicone sprays for the care of rubber seals can cause damage.

Do not use silicon sprays or other care products that contain silicon.◀

## Paint care

Washing the motorcycle regularly will help counteract the long-term effects of substances that damage the paint, especially if your motorcycle is ridden in areas with high air pollution or natural sources of dirt, e.g. tree resin or pollen.

However, remove particularly aggressive materials immediately; otherwise changes in the paint or discoloration can occur. These include spilled fuel, oil, grease, brake fluid as well as bird droppings. BMW Car Polish or BMW Paint Cleaner are recommended for this.

Contamination of the paint finish is particularly easy to see after the motorcycle has been washed. Remove this type of soiling with

cleaning naphtha or spirit on a clean cloth or cotton ball. BMW Motorrad recommends removing tar spots with BMW Tar Remover. Then add a protective wax coating to the paint at these locations.

## Protective wax coating

To preserve the finish of your motorcycle, BMW Motorrad recommends using BMW Car Wax or agents that contain carnauba or synthetic waxes.

A sure sign that the paint must be protected, is the fact that water no longer pearls up on it.

## Storing motorcycle

- Clean motorcycle.
- Remove battery.
- Spray brake and clutch lever, and main and side stand pivots with a suitable lubricant.

- Coat bare metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Park motorcycle in a dry room so that both wheels are unloaded.

▶ Before putting the motorcycle into storage, have the engine oil and the oil filter element changed by a specialist workshop, preferably an authorized BMW Motorrad retailer. Combine work for storing/returning to use with maintenance service or an inspection.◀

## Returning motorcycle to use

- Remove the protective wax coating.
- Clean the motorcycle.
- Install a charged battery.
- Before starting: Observe checklist.



**Technical data**

Troubleshooting chart .....	144
Threaded fasteners .....	145
Engine .....	147
Fuel.....	148
Engine oil .....	148
Clutch .....	149
Transmission .....	149
Rear-wheel drive.....	150
Running gear .....	150
Brakes .....	152
Wheels and tires .....	152
Electrical system.....	154
Frame .....	155
Dimensions .....	156
Weights.....	156

Riding specifications .....	157
-----------------------------	-----

## Troubleshooting chart

Engine does not start at all or is very difficult to start

Possible cause	Remedy
Side stand	Retract side stand (➡ 84).
Gear engaged and clutch not operated	Place transmission in neutral or disengage clutch (➡ 84).
Clutch disengaged before ignition on	Switch on ignition first, then disengage clutch.
No fuel in tank	Refueling (➡ 90).
Battery drained	Charging connected battery (➡ 135).

## Threaded fasteners

Front wheel	Value	Valid
<b>Front brake caliper on wheel carrier</b>		
M8 x 32 - 10.9	22 lb/ft (30 Nm)	
<b>Clamping bolt in wheel carrier</b>		
M8 x 30	14 lb/ft (19 Nm)	
<b>Quick-release axle in threaded bush</b>		
M24 x 1.5	37 lb/ft (50 Nm)	
<b>Rear wheel</b>	<b>Value</b>	<b>Valid</b>
<b>Muffler on passenger footrest</b>		
M8 x 30	16 lb/ft (22 Nm)	
<b>Muffler with ball-joint clamp on manifold</b>		
M8 x 60	26 lb/ft (35 Nm)	
<b>Cover on muffler</b>		
M5 x 8	2 lb/ft (3 Nm)	

Rear wheel		Value	Valid
Tighten rear wheel on wheel flange			
M10 x 1.25 x 40	diagonally	44 lb/ft (60 Nm)	
Handlebars		Value	Valid
Handlebar adjustment screws on threaded insert			
M8 x 45		15 lb/ft (20 Nm)	

## Engine

Engine design	Transverse-mounted four-cylinder, four-stroke in-line engine, angled 55° toward front. With four valves per cylinder, actuated by two overhead camshafts and trailing valve levers; liquid cooled, electronic fuel injection, integrated six-speed cassette transmission, dry-sump lubrication
Displacement	1293 cc (1293 cm <sup>3</sup> )
Cylinder bore	3.1 in (80 mm)
Piston stroke	2.5 in (64.3 mm)
Compression ratio	13:1
Rated output	160 hp (118 kW), at engine speed: 9000 min <sup>-1</sup>
– with power reduction 79 kW <sup>OE</sup>	107 hp (79 kW), at engine speed: 9000 min <sup>-1</sup>
Torque	100 lb/ft (135 Nm), at engine speed: 8000 min <sup>-1</sup>
– with power reduction 79 kW <sup>OE</sup>	87 lb/ft (118 Nm), At: 3750 min <sup>-1</sup>
Maximum engine speed	max 11000 min <sup>-1</sup>
Idle speed	1050±50 min <sup>-1</sup>

## Fuel

Recommended fuel quality	98 ROZ/RON, Super Plus unleaded 95 ROZ/RON, Super unleaded (fuel type can be used with reduced performance and consumption)
Usable fuel quantity	Approx. 6.3 gal (Approx. 24 l)
Reserve fuel quantity	≥1.1 gal (≥4 l)

## Engine oil

Engine oil, capacity	3.7 quarts (3.5 l), with filter change 0.5 quarts (0.5 l), Difference between Min and Max
Engine oils, products recommended by BMW Motorrad and generally permissible viscosity classes	
Castrol Power 1 Racing SAE 5W-40	≥-4 °F (≥-20 °C)
SAE 5W-40	≥-4 °F (≥-20 °C)
SAE 10W-50	≥-4 °F (≥-20 °C)
Oil grades	Engine oils of the API classification SJ or higher. Engine oils of the JASO classification MA or higher.

## Clutch

Clutch design	Multi-disk oil-bath clutch
---------------	----------------------------

## Transmission

Transmission design	Claw-shifted 6-speed transmission integrated in engine housing
Transmission gear ratios	1.559 (92:59 teeth), Primary gear ratio 2.294 (39:17 teeth), 1st gear 1.789 (34:19 teeth), 2nd gear 1.458 (35:24 teeth), 3rd gear 1.240 (31:25 teeth), 4th gear 1.094 (35:32 teeth), 5th gear 0.971 (33:34 teeth), 6th gear 1.045 (23:22 teeth), Angle drive

## Rear-wheel drive

Type of final drive	Shaft drive with bevel gears
Type of rear suspension	BMW EVO Paralever, single-arm light-alloy cast swinging arm with two joints and torque support
Number of teeth on rear-wheel drive (gear ratio)	2.82 (31:11)

## Running gear

### Front wheel

Type of front suspension	Double leading link
Design of front suspension strut	Central spring strut with coil pressure spring and single-tube gas-pressure shock absorber.
– with Electronic Suspension Adjustment (ESA II) <sup>OE</sup>	Central spring strut with single-tube gas-pressure shock absorber and electric adjustable rebound-stage damping.
Spring travel, front	4.9 in (125 mm), On wheel



<b>Rear wheel</b>	
Type of rear suspension	BMW EVO Paralever, single-arm light-alloy cast swinging arm with two joints and torque support
Type of rear suspension	Lever-system-coupled central spring strut with coil pressure spring and single-tube gas-filled shock absorber. Spring preload with stepless hydraulic adjustment; rebound-stage damping with stepless adjustment
– with Electronic Suspension Adjustment (ESA II) <sup>OE</sup>	via lever-system-coupled central spring strut with coil pressure spring and single-tube gas-filled shock absorber, electric adjustable rebound-stage damping and electrohydraulic adjustable spring preload
Spring travel, rear	5.3 in (135 mm), On wheel

## Brakes

Type of front brake	hydraulically operated twin disk brake with 4-piston fixed calipers and floating brake disks
Brake-pad material, front	Sintered metal
Type of rear brake	Hydraulic disk brake with 2-piston floating caliper and fixed brake disk
Brake-pad material, rear	Organic

## Wheels and tires

Recommended tire combinations	You can obtain an overview of the current tire approvals from your authorized BMW Motorrad retailer or on the Internet at <a href="http://www.bmw-motorrad.com">www.bmw-motorrad.com</a> .
-------------------------------	--

### Front wheel

Front wheel design	Cast aluminum, MT H2
Front-wheel rim size	3.50" x 17"
Front tire designation	120 / 70 ZR 17

**Rear wheel**

Rear wheel design	Cast aluminum, MT H2
Rear-wheel rim size	5.5" x 17"
Rear tire designation	180 / 55 ZR 17

**Tire inflation pressure**

Tire pressure, front	36.3 psi (2.5 bar), Single rider, with cold tire 36.3 psi (2.5 bar), Driver with passenger and/or load, with cold tire
Tire pressure, rear	42.1 psi (2.9 bar), Single rider, with cold tire 42.1 psi (2.9 bar), Driver with passenger and/or load, with cold tire

## Electrical system

Electrical rating of onboard socket	max 8 A
Fuses	All circuits are electronically protected, so plug-in fuses are no longer necessary. If an electronic fuse trips and de-energizes a circuit, the circuit is active as soon as the ignition is switched on after the fault has been rectified.

### Battery

Battery manufacturer and designation	19 Ah Gel-Exide
Battery design	Gel battery
Battery voltage	12 V
Battery capacity	19 Ah

### Technical data

Spark plugs, manufacturer and designation	NGK KR9CI
Electrode gap of spark plug	0.03 in (0.8 mm), New

**Bulbs**

Bulb for high-beam headlight	H7 / 12 V / 55 W
Bulbs for low-beam headlight	H7 / 12 V / 55 W
– with Xenon light <sup>OE</sup>	D1R / 35 W
Bulb for parking light	W5W / 12 V / 5 W
Bulb for taillight/brake light	P21W / 12 V / 21 W
Bulbs for flashing turn indicators, front	P21W / 12 V / 21 W
Bulbs for flashing turn indicators, rear	P21W / 12 V / 21 W

**Frame**

Frame design	Cast light allow - welded design with screwed-on tubular steel rear frame
Location of type plate	On right wheel carrier
Location of vehicle identification number	Front right side frame section

## Dimensions

Motorcycle length	91.3 in (2318 mm)
Motorcycle height	56.6 in (1438 mm), Across windshield at DIN unladen weight
Motorcycle width	38.7 in (982 mm), Across case
Driver's seat height	32.3...33.1 in (820...840 mm), Without driver
– with low driver's seat <sup>OE</sup>	31.5...32.3 in (800...820 mm), Without driver
Rider's inside-leg arc, heel to heel	70.9...72.4 in (1800...1840 mm), Without driver
– with low driver's seat <sup>OE</sup>	69.3...70.9 in (1760...1800 mm), Without driver

## Weights

Unladen weight	635 lbs (288 kg), DIN unladen weight, ready for road, 90 % full tank of gas, without OE
Permissible gross weight	1146 lbs (520 kg)
Maximum payload	511 lbs (232 kg)

## Riding specifications

Top speed	>124 mph (>200 km/h)
-----------	----------------------





**Service**

Reporting safety defects .....	160
BMW Motorrad Service .....	161
BMW Motorrad Service Quality ....	161
BMW Motorrad Service Card - On- the-spot breakdown assistance ....	161
BMW Motorrad Service Network .....	162
Maintenance work .....	162
Confirmation of maintenance work .....	163
Confirmation of service .....	168

## Reporting safety defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying BMW of North America, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or BMW of North America, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

## BMW Motorrad Service

Advanced technology requires specially adapted methods of maintenance and repair.



If this maintenance and repair work is performed inexpertly, there is a danger of damage and associated safety risks. BMW Motorrad recommends having corresponding work on your motorcycle carried out by a specialized workshop, preferably by an authorized BMW Motorrad retailer. ◀

You can obtain information on the contents of the BMW Services from your BMW Motorrad retailer.

Have all maintenance and repair work carried out confirmed in the "Service" chapter in this manual. Your authorized BMW Motorrad retailer is supplied with all the latest technical information and therefore possesses the neces-

sary technical know-how. BMW Motorrad recommends that you refer any questions about your motorcycle to your authorized BMW Motorrad retailer.

## BMW Motorrad Service Quality

BMW Motorrad means not only quality workmanship and high reliability, but also an outstanding quality of service.

To ensure that your BMW is always in optimum condition, BMW Motorrad recommends that you adhere to the regular maintenance schedule for your motorcycle, preferably having the work done by your authorized BMW Motorrad retailer. For generous treatment of claims submitted after the warranty period has expired, evidence of regular maintenance is essential.

Certain signs of wear, moreover, may otherwise not be noticed

until it is too late to correct them at moderate cost. The workshop personnel at BMW Motorrad retailers have thorough knowledge of your motorcycle and can take action before minor problems can turn into major trouble. By having the necessary repairs done properly and in good time, you save time and money in the long run.

## BMW Motorrad Service Card - On-the-spot breakdown assistance

With all new BMW motorcycles, the BMW Motorrad Service Card protects you in the event of a breakdown with an extensive range of services such as breakdown assistance, motorcycle transportation etc. (differing regulations are possible in individual countries). In the case of a breakdown, you contact the Mobile Service of BMW Motorrad. Here you will find our specialists

ready to help with both advice and action.

Important country-specific contact addresses and the relevant after-sales service organization phone numbers as well as information on Mobile Service and the retail network can be found in the "Service Kontakt/Service Contact" brochures.

## **BMW Motorrad Service Network**

With its worldwide service network, BMW Motorrad can attend to you and your motorcycle in over 100 countries around the globe. In Germany alone, there are approximately 200 authorized BMW Motorrad retailers ready to assist you.

All information concerning the international dealership network can be found in the brochure "Service Contact Europe" or

"Service Contact Africa, America, Asia, Australia, Oceania".

## **Maintenance work**

### **BMW Pre-Delivery Check**

The BMW pre-delivery check is carried out by your authorized BMW Motorrad retailer before it turns over the motorcycle to you.

### **BMW Running-in Check**

The BMW running-in check has to be performed when the motorcycle has covered between 300 miles (500 km) and 750 miles (1,200 km).

### **BMW Service**

BMW Service is carried out once a year. The scope of the services performed may be dependent on the vehicle owner and the mileage driven. Your BMW Motorrad retailer confirms that the service has been performed

and enters the date for the next service.

For drivers who drive long distances annually, it may be necessary to come in for service before the entered date. In this case a corresponding maximum odometer reading will also be entered in the confirmation of service. If this odometer reading is reached before the next service date, service must be performed sooner.

The service display in the multi-function display reminds you of the next service date approx. one month or 600 miles (1,000 km) before the entered values.

## Confirmation of maintenance work

### BMW Pre-Delivery Check

Conducted

on \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

### BMW Running-in Check

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature



**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature**BMW Service**

Conducted

on \_\_\_\_\_

Odometer reading \_\_\_\_\_

Next service  
at the latest

on \_\_\_\_\_

or, if reached sooner,

Odometer reading \_\_\_\_\_

\_\_\_\_\_  
Stamp, Signature

The table is intended as proof of maintenance and repair work, the installed optional accessories and any special campaign (recall) work carried out.

[illegible]

Work carried out	Odometer reading	Date

**A**

Abbreviations and symbols, 6

**ABS**

Self-diagnosis, 85

Technology in detail, 94

Warning indicators, 36

**Anti-theft alarm**

Indicator light, 20

Warning indicators, 47

**ASC**

Operating element, 14

Operation, 66

Self-diagnosis, 86

Switching off, 66

Switching on, 66

Technology in detail, 96

Warning indicator, 41

Warning indicators, 39

**B****Battery**

Charging connected  
battery, 135

Charging disconnected  
battery, 136

Closing battery

compartment, 138

Installing, 137

Location, 13

Opening battery

compartment, 137

Removing, 136

Technical data, 154

Warning for battery charge  
current, 33

**BMW Motorrad Service**

Card, 161

**Brake fluid**

Checking fluid levels, 115

Front reservoir, 13

Rear reservoir, 19

**Brake pads**

Checking brake pad  
thicknesses, 113

Running in, 87

**Brakes**

Adjusting brake lever, 70

Checking operation, 113

Safety instructions, 87

Technical data, 152

**C****Case**

Operation, 104

**Checklist, 83****Clock, 24**

Adjusting, 54

**Clutch**

Adjusting clutch lever, 70

Checking fluid level, 117

Checking operation, 117

Fluid reservoir, 11

Technical data, 149

Confirmation of maintenance  
work, 163

**Coolant**

Temperature display, 24

Warning indicator, 31

**Cruise control**

Indicator light, 20, 27

Operating element, 14

Operation, 67

Currentness of this manual, 7

**D**

- Damping
  - Adjusting, 72
  - Rear adjustment element, 11
- Dimensions
  - Technical data, 156
- Driver's seat
  - Height adjustment, 19

**E**

- Electrical system
  - Technical data, 154
- Electronic immobilizer EWS
  - Warning indicator, 31
- Emergency ON/OFF switch, 16, 63
- Engine
  - Operating element, 16
  - Starting, 84
  - Technical data, 147
  - Temperature display, 24
  - Warning for engine electronics, 32
- Engine oil
  - Check level, 111
  - Fill location, 19

- Oil dipstick, 19
- Technical data, 148
- Topping up, 112
- Warning for engine oil level, 36
- Warning for engine oil pressure, 32
- Equipment, 7
- ESA
  - Operating element, 14
  - Operation, 73
  - Technology in detail, 99

**F**

- Frame
  - Technical data, 155
- Front wheel stand
  - Mounting, 126
- Fuel
  - Fill level indicator, 24
  - Fill location, 13
  - Refueling, 90
  - Technical data, 148
  - Warning for fuel down to reserve, 31
- Fuses, 154

**G**

- Gear indicator, 24

**H**

- Handlebar fittings
  - General view, left, 14
  - General view, right, 16
- Handlebars
  - Adjusting, 71
- Hazard warning flashers
  - Operating element, 14
  - Operation, 62
- Headlight
  - Adjusting for RHD/LHD traffic, 75
  - Headlight range, 76
  - Headlight range adjustment, 11
  - Overview, 21
- Heated hand grips, 63
  - Operating element, 16
- Helmet holder, 19, 79
- High-beam headlight
  - Indicator light, 24
  - Switching on, 61
- Horn, 14

- I**
  - Idling
  - Indicator light, 24
  - Ignition
    - Switching off, 52
    - Switching on, 52
  - Immobilizer, 53
  - Warning indicator, 31
  - Indicator lights, 20
    - Overview, 24
  - Instrument cluster
    - Ambient brightness sensor, 20
    - Overview, 20
- J**
  - Jump-starting, 134
- K**
  - Keys, 52
- L**
  - Lamps
    - General instructions, 127
    - Headlight overview, 21
    - Replacing brake light bulb, 132
    - Replacing front turn indicator bulbs, 131
    - Replacing high-beam bulb, 128
    - Replacing low-beam bulb, 128
    - Replacing parking light bulb, 130
    - Replacing rear turn-indicator bulbs, 132
    - Replacing tail light bulb, 132
    - Replacing xenon bulb, 127
    - Technical data, 155
    - Warning for bulb failure, 33, 34
  - Lights
    - Headlight flasher, 14, 61
    - High-beam headlight, 14
    - Operating element, 14
    - Switch on low-beam headlight, 61
    - Switching on high-beam headlight, 61
    - Switching on parking lights, 61
    - Switching on side lights, 60
  - Luggage
    - Information on loading and securing, 103

- M**
  - Maintenance
    - General instructions, 110
  - Maintenance intervals, 162
  - Mirrors
    - Adjusting, 71
  - Motorcycle
    - Returning to use, 142
    - Storing, 142
    - Switching off, 89
  - Multifunction display, 20
    - Adjusting dimming, 56
    - Overview, 24
- O**
  - Odometer and tripmeters, 24
    - Operating element, 14
    - Operation, 54
    - Resetting, 55
    - Selecting readings, 54
  - Onboard computer
    - Ambient temperature, 57
    - Average consumption, 58
    - Average speed, 58
    - Oil level indicator, 59

- Operating element, 14
- Operation, 56
- Range, 57
- Warning indicators, 34
- Onboard socket, 11, 102
- Onboard toolkit
  - Contents, 110
  - Location, 19
- Overview of warning indicators, 29, 35, 38, 40, 43, 48
- Overviews
  - Headlight, 21
  - Instrument cluster, 20
  - Left side of motorcycle, 11
  - Left-hand handlebar fitting, 14
  - Multifunction display, 24
  - Right side of motorcycle, 13
  - Right-hand handlebar fitting, 16
  - Underneath seat, 19

**P**

- Parking light
  - Switching on, 61
- Pre-ride check, 85

**R**

- Rear-wheel drive
  - Technical data, 150
- Refueling, 90
- Reserve quantity
  - Warning indicator, 31
- Residual range, 56
- Returning to use, 142
- Rider's Manual
  - Location, 19
- Running gear
  - Technical data, 150
- Running in, 86

**S**

- Safety instructions
  - Brakes, 87
  - General information, 82
- Seat
  - Adjusting seat height, 69
  - Locking device, 11
- Seat heating, 64
  - Operating element, 16, 19

**Seats**

- Installing driver's seat, 78
- Installing passenger seat, 79
- Removing driver's seat, 78
- Removing passenger seat, 77
- Service, 161
- Service Card, 161
- Service display, 24
- Side stand
  - For starting, 84
- Spark plugs, 154
- Speedometer, 20
- Spring preload
  - Adjusting, 71
  - Rear adjustment element, 11
- Starting, 84
- Status indicators
  - Also see warning indicators, 24
  - Standard displays, 24
  - Warning indicators, 27
- Steering lock
  - Locking, 53
- Storage compartment, 13, 77
- Storing, 142
- Switching off, 89

**T**

- Tachometer, 20
- Technical data
  - Battery, 154
  - Brakes, 152
  - Bulbs, 155
  - Clutch, 149
  - Dimensions, 156
  - Electrical system, 154
  - Engine, 147
  - Engine oil, 148
  - Frame, 155
  - Fuel, 148
  - Rear-wheel drive, 150
  - Running gear, 150
  - Spark plugs, 154
  - Standards, 7
  - Transmission, 149
  - Weights, 156
  - Wheels and tires, 152
- Tire Pressure Control TPC/RDC
  - Operation, 60
  - Rim sticker, 118
  - Technology in detail, 97
  - Warning indicators, 41

**Tires**

- Checking inflation pressure, 75
- Checking tread depth, 117
- Inflation pressure table, 19
- Recommendation, 118
- Running in, 87
- Technical data, 152

**Topcase**

- Closing, 106
- Mounting, 107
- Opening, 106
- Operation, 106
- Removing, 107

**Torques, 145****Transmission**

- For starting, 84
- Technical data, 149

**Transport**

- Lashing down, 91
- Troubleshooting chart, 144

**Turn indicators**

- Indicator light, 24
- Operating element, 14
- Operation, 62

**Type plate, 13****V**

- Vehicle Identification Number, 13

**W****Warning indicators, 27**

- Display, 27
- With ABS, 36
- With anti-theft alarm, 47
- With ASC, 39
- With onboard computer, 34
- With TPC/RDC, 41

**Warning lights, 20****Weights**

- Payload table, 19
- Technical data, 156

**Wheels**

- Checking rims, 118
- Installing front wheel, 121
- Installing rear wheel, 124
- Removing front wheel, 119
- Removing rear wheel, 123
- Size change, 118
- Technical data, 152



Windshield  
  Adjusting, 70  
  Operating element, 14

Details described or illustrated in this booklet may differ from the motorcycle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2008 BMW Motorrad

Not to be reproduced either wholly or in part without written permission from BMW Motorrad, After Sales.

Printed in Germany.

The most important data for a filling station stop can be found in the following chart.

<b>Fuel</b>	
Recommended fuel quality	98 ROZ/RON, Super Plus unleaded 95 ROZ/RON, Super unleaded (fuel type can be used with reduced performance and consumption)
Usable fuel quantity	Approx. 6.3 gal (Approx. 24 l)
Reserve fuel quantity	≥1.1 gal (≥4 l)
<b>Tire inflation pressure</b>	
Tire pressure, front	36.3 psi (2.5 bar), Single rider, with cold tire 36.3 psi (2.5 bar), Driver with passenger and/or load, with cold tire
Tire pressure, rear	42.1 psi (2.9 bar), Single rider, with cold tire 42.1 psi (2.9 bar), Driver with passenger and/or load, with cold tire

**BMW recommends** 

Order No.: 01 41 7 714 567  
10.2008, 1st Edition



## K 1300 S, K 1300 R, K 1300 GT



(D)



Möglicher Bremsleistungsverlust an der Vorderradbremse.

Nach allen Arbeiten, die Einfluss auf den Flüssigkeitsstand im vorderen Bremskreislauf haben (z. B. Bremsbeläge erneuern oder Bremsflüssigkeit wechseln), muss der Gittereinsatz **1** im vorderen Ausgleichsbehälter für Bremsflüssigkeit erneuert werden. Wenden Sie sich dazu an eine Fachwerkstatt, am besten an einen BMW Motorrad Partner.

(GB)



Possible loss of stopping power at front brake.

Screen insert **1** in the front brake-fluid reservoir always has to be replaced on completion of work that affects the level of fluid in the front braking circuit (for example replacing brake pads or changing brake fluid). Please contact a specialized workshop for this purpose, preferably an authorized BMW Motorrad retailer.

(USA)

(F)



Perte possible d'efficacité du frein avant. Après des travaux qui influent sur le niveau de liquide de frein dans le circuit de frein avant (p. ex. remplacement des plaquettes ou renouvellement du liquide de frein), il est impératif de remplacer la grille **1** à l'intérieur du réservoir de liquide de frein avant. Adressez-vous pour cela à un atelier spécialisé, de préférence à un concessionnaire BMW Motorrad.



Posible pérdida de la capacidad de frenado en el freno de la rueda delantera. Una vez finalizados todos los trabajos que influyen en el nivel de líquido del circuito de freno delantero (p. ej., cambio de las pastillas de freno o del líquido de frenos), se tiene que sustituir la rejilla **1** del depósito de compensación delantero para el líquido de frenos. Para ello, póngase en contacto con un taller especializado, preferentemente un concesionario de motocicletas BMW.











Possibile diminuzione dell'effetto frenante del freno della ruota anteriore. Dopo aver eseguito tutti i lavori che comportano delle variazioni nel livello del liquido nel circuito freni anteriore (ad es. sostituzione delle pastiglie o del liquido freni), occorre sostituire l'inserto **1** nel serbatoio di espansione del liquido freni. Rivolgersi a tal fine ad un'officina autorizzata, preferibilmente ad un Concessionario BMW Motorrad.



Framhjulsbromsens bromseffekt kan försämras. Efter alla arbeten som påverkar vätskenivån i den främre bromskretsen (t.ex. byte av bromsbelägg eller hydraulvätska) måste gallerinsats **1** i det främre expansionskärlet för hydraulvätska bytas ut. Kontakta en fackverkstad för detta, företrädesvis en BMW Motorrad-partner.



Mogelijk verlies van remvermogen van de voorrem. Na alle reparaties, die invloed kunnen hebben op het remvloeistofpeil in het voorremcircuit (bijv. remblokken vervangen of remvloeistof verversen), moet het rasterelement **1** in het voorste remvloeistofreservoir worden vervangen. Hiervoor contact opnemen met een specialist, bij voorkeur een BMW Motorrad dealer.

	 Possível perda de eficácia de travagem no travão dianteiro. Depois de se efectuarem todos os trabalhos que têm influência sobre o nível do líquido no circuito de travão dianteiro (p. ex., substituir pastilhas de travão ou mudar o óleo dos travões), é necessário substituir a grelha <b>1</b> no depósito de compensação dianteiro para o óleo dos travões. Para o efeito, dirija-se a uma oficina especializada, de preferência a um concessionário BMW Motorrad.
	 Etujarrun jarrutusteho saattaa olla heikentynyt. Aina sellaisten töiden jälkeen, joilla on vaikutusta etujarrupiiriin jarrunestemäärään (esimerkiksi jarrupalojen tai jarrunesteen vaihto), täytyy jarrunesteen etumaisen tasaussäiliön ritilä <b>1</b> vaihtaa. Käännä tässä asiassa ammattitaitoisen huoltopisteen, mieluiten BMW Motorrad huoltopisteen puoleen.
	 Πιθανή απώλεια ιζ σύορ θπένων ζ ηρ θπένο μππαζ ηνού ηησοού. Μερά ηην ππαγμαηρποίηζ η επγαζ ίών, οι οποίοερ επηηπαύζοςν ηη ζ ήάθυη ηρς ζγπού ζ ηρ μππαζ ηνό κύκλωμα θπένων (π.σ. ανηκαηράζ ηαζ η ηρκακιών θπένων ή αλλαγή ζγπού θπένων), ππέπει να ανηκαηαζ ηαθεί ηρ ζ ηραιοείο πλέγμαηρρ <b>1</b> ζ ηρ μππαζ ηνό δοοσειο ζγπών θπένων. Απεςθςνθείρε για ηρ ζ κοπό αςήρ ζ ε ένα εξειδικεςμένο ζςνεπηγείο ή ακόθυη καλύηρεπα ζ ε έναν Επίζ ημο Επίζ κεςαζ ήη BMW Motorrad.
	 フロントブレーキの制動力損失のおそれ。 フロントブレーキに対して、パッド交換やフルード交換など、サーキット内のフルードレベルに影響する作業を行った場合には、必ずフロントブレーキフルードリザーバータンク内のスクリーンインサート 1 を交換してください。交換の詳細については専門の整備工場が、可能な限り BMW Motorrad 正規ディーラーにお問い合わせください。



Možna izguba zavorne moči na zavori za sprednje kolo. Po vseh delih, ki vplivajo na nivo zavorne količine v sprednjem zavornem krogotoku (npr. menjava zavornih ploščic ali menjava zavorne tekočine), je treba zamenjati mrežasti vložek **1** v sprednji izenačevalni posodi za zavorno tekočino. V zvezi s tem se obrnite na specializirano servisno delavnico, najbolje na partnerja BMW Motorrad.



Možná strata brzdného výkonu na brzde predného kolesa. Po skončení všetkých prác, ktoré majú vliv na stav kapaliny v predním brzdovém okruhu (např. výměna brzdového obložení nebo brzdové kapaliny), musí být vyměněna mřížková vložka 1 v přední expanzní nádobce brzdové kapaliny. V této souvislosti sa obrátte na odbornou dílnu, najlepšie na niektorého partnera BMW Motorrad.



Možná ztráta brzdného účinku brzdy předního kola. Po skončení všech prací, které mají vliv na stav kapaliny v předním brzdovém okruhu (např. výměna brzdového obložení nebo brzdové kapaliny), musí být vyměněna mřížková vložka 1 v přední expanzní nádobce brzdové kapaliny. Obrátte se na odborný servis, nejlépe na partnera BMW Motorrad.

