



**BMW  
MOTORRAD**

# **RIDER'S MANUAL**

R 18 Classic



**MAKE LIFE A RIDE**

---

---

**Vehicle data**

Model

---

Vehicle Identification Number

---

Colour code

---

Date of first registration

---

Registration number

---

---

**Dealership details**

Person to contact in Service department

---

Ms/Mr

---

Phone number

---

Dealership address/phone number (company stamp)

---

# YOUR BMW.

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

## **About this rider's manual**

Read this rider's manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features.

In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

If the time comes to sell your BMW, please remember to hand over this rider's manual to the new owner. It is an important part of the vehicle.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

|                                     |           |                                    |           |
|-------------------------------------|-----------|------------------------------------|-----------|
| <b>01 GENERAL INSTRUCTIONS</b>      | <b>2</b>  | <b>04 OPERATION</b>                | <b>42</b> |
| Quick & easy reference              | 4         | Steering lock                      | 44        |
| Abbreviations and symbols           | 4         | Ignition                           | 45        |
| Equipment                           | 5         | Lighting                           | 49        |
| Technical data                      | 5         | Multifunction display              | 54        |
| Currency                            | 6         | Settings in the instrument cluster | 57        |
| Additional sources of information   | 6         | Anti-theft alarm (DWA)             | 63        |
| Certificates and operating licences | 6         | Automatic Stability Control (ASC)  | 66        |
| Data memory                         | 6         | Riding mode                        | 67        |
|                                     |           | Cruise control                     | 68        |
|                                     |           | Hill Start Control                 | 70        |
|                                     |           | Reverser                           | 71        |
|                                     |           | Heated grips                       | 73        |
|                                     |           | Seats                              | 74        |
|                                     |           | Windscreen                         | 75        |
|                                     |           | Softbags                           | 77        |
| <b>02 GENERAL VIEWS</b>             | <b>12</b> | <b>05 ADJUSTMENT</b>               | <b>80</b> |
| General view, left side             | 14        | Mirrors                            | 82        |
| General view, right side            | 15        | Headlight                          | 82        |
| Behind the side trim panel, right   | 16        | Clutch                             | 84        |
| Multifunction switch, left          | 17        | Brakes                             | 84        |
| Multifunction switch, right         | 18        | Spring preload                     | 85        |
| Instrument cluster                  | 19        | Gearshift lever                    | 86        |
| <b>03 STATUS INDICATORS</b>         | <b>20</b> | <b>06 RIDING</b>                   | <b>90</b> |
| Indicator and warning lights        | 22        | Safety information                 | 92        |
| Multifunction display               | 23        | Regular check                      | 94        |
| Warning indicators                  | 24        | Starting                           | 95        |
| Service display                     | 39        | Running in                         | 98        |
|                                     |           | Brakes                             | 99        |
|                                     |           | Shifting with shift rocker         | 101       |

|                                        |            |                                    |            |
|----------------------------------------|------------|------------------------------------|------------|
| Parking your motorcycle                | 101        | Tyres                              | 134        |
| Refuelling                             | 102        | Wheel rims                         | 136        |
| Securing motorcycle for transportation | 104        | Wheels                             | 136        |
|                                        |            | Silencer                           | 146        |
|                                        |            | Lighting                           | 147        |
|                                        |            | Jump-starting                      | 147        |
|                                        |            | Battery                            | 149        |
|                                        |            | Fuses                              | 154        |
|                                        |            | Diagnostic connector               | 155        |
| <b>07 ENGINEERING DETAILS</b>          | <b>108</b> |                                    |            |
| General notes                          | 110        | <b>09 ACCESSORIES</b>              | <b>158</b> |
| General drive functions                | 110        | General notes                      | 160        |
| Antilock Brake System (ABS)            | 110        | Power sockets                      | 160        |
| Automatic Stability Control (ASC)      | 114        | Luggage                            | 161        |
| Riding mode                            | 115        | Optional accessories               | 162        |
| Dynamic engine brake control           | 116        |                                    |            |
| Dynamic Brake Control                  | 117        | <b>10 CARE</b>                     | <b>164</b> |
| Tyre pressure control (RDC)            | 118        | Care products                      | 166        |
| Hill Start Control                     | 119        | Washing the vehicle                | 166        |
| Adaptive headlight                     | 120        | Cleaning easily damaged components | 167        |
|                                        |            | Care of paintwork                  | 168        |
|                                        |            | Paint preservation                 | 169        |
|                                        |            | Laying up motorcycle               | 169        |
|                                        |            | Restoring motorcycle to use        | 169        |
| <b>08 MAINTENANCE</b>                  | <b>122</b> |                                    |            |
| General notes                          | 124        | <b>11 TECHNICAL DATA</b>           | <b>172</b> |
| Toolkit                                | 124        | Troubleshooting chart              | 174        |
| Side panel                             | 125        | Threaded fasteners                 | 175        |
| fairing bracket                        | 125        | Fuel                               | 177        |
| Front-wheel stand                      | 127        | Engine oil                         | 177        |
| Rear-wheel stand                       | 127        | Engine                             | 178        |
| Engine oil                             | 127        | Clutch                             | 178        |
| Brake system                           | 130        | Transmission                       | 179        |
| Clutch                                 | 134        |                                    |            |

|                        |     |
|------------------------|-----|
| Final drive            | 179 |
| Frame                  | 179 |
| Chassis and suspension | 180 |
| Brakes                 | 181 |
| Wheels and tyres       | 181 |
| Electrical system      | 182 |
| Anti-theft alarm       | 183 |
| Dimensions             | 183 |
| Weights                | 184 |
| Performance figures    | 184 |

---

|                   |            |
|-------------------|------------|
| <b>12 SERVICE</b> | <b>186</b> |
|-------------------|------------|

|                                   |     |
|-----------------------------------|-----|
| Reporting safety-relevant defects | 188 |
| Recycling                         | 189 |
| BMW Motorrad                      |     |
| Service                           | 189 |
| BMW Motorrad                      |     |
| Service history                   | 190 |
| BMW Motorrad mobility services    | 190 |
| Maintenance work                  | 191 |
| Maintenance schedule              | 192 |
| BMW Motorrad running-in check     | 193 |
| Maintenance confirmations         | 194 |
| Service confirmations             | 206 |

---

|                                        |            |
|----------------------------------------|------------|
| <b>APPENDIX</b>                        | <b>208</b> |
| Declaration of Conformity              | 209        |
| Certificate for electronic immobiliser | 212        |
| Certificate for Keyless Ride           | 215        |
| Certificate for Keyless Ride           | 217        |
| Certificate for Keyless Ride           | 219        |
| Certificate for Keyless Ride           | 221        |

---

|              |            |
|--------------|------------|
| <b>INDEX</b> | <b>224</b> |
|--------------|------------|



# **GENERAL INSTRUCTIONS**

**01**

---

|                                            |          |
|--------------------------------------------|----------|
| <b>QUICK &amp; EASY REFERENCE</b>          | <b>4</b> |
| <b>ABBREVIATIONS AND SYMBOLS</b>           | <b>4</b> |
| <b>EQUIPMENT</b>                           | <b>5</b> |
| <b>TECHNICAL DATA</b>                      | <b>5</b> |
| <b>CURRENCY</b>                            | <b>6</b> |
| <b>ADDITIONAL SOURCES OF INFORMATION</b>   | <b>6</b> |
| <b>CERTIFICATES AND OPERATING LICENCES</b> | <b>6</b> |
| <b>DATA MEMORY</b>                         | <b>6</b> |

## 4 GENERAL INSTRUCTIONS

### QUICK & EASY REFERENCE

An important aspect of this rider's manual is that it can be used for quick and easy reference. Consulting the extensive index at the end of this rider's manual is the fastest way to find information on a particular topic or item. To first read an overview of your vehicle, please go to Chapter 2. All maintenance and servicing work on the vehicle is documented in the "Service" section. The record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims.

### ABBREVIATIONS AND SYMBOLS

 **CAUTION** Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

 **WARNING** Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

 **DANGER** High-risk hazard. Non-avoidance leads to fatal or severe injury.

 **ATTENTION** Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

 Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.

• Instruction.

» Result of an activity.

▮▮▮▮▮▮ Reference to a page with more detailed information.

◁ Indicates the end of a passage relating to specific accessories or items of equipment.

 Tightening torque.

 Technical data.

OE Optional equipment. The vehicles are assembled complete with all the BMW Motorrad optional equipment originally ordered.

|     |                                                                                                                                                                                 |
|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OA  | Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle. |
| ABS | Anti-lock brake system.                                                                                                                                                         |
| ASC | Automatic Stability Control.                                                                                                                                                    |
| DWA | Anti-theft alarm.                                                                                                                                                               |
| EWS | Electronic immobiliser.                                                                                                                                                         |

---

## EQUIPMENT

When you ordered your BMW Motorrad, you chose various items of custom equipment. This rider's manual describes optional equipment (OE) and selected optional accessories (OA) provided by BMW. This explains why the manual may also contain descriptions of equipment that you might not have selected. Please note, too, that on account of country-specific differences, your motorcycle might not be exactly as illustrated.

If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

---

## TECHNICAL DATA

All dimensions, weights and power ratings stated in the rider's manual are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e. V. (DIN).

Technical data and specifications in this rider's manual are guide values. The vehicle-specific data may deviate from these, for example as a result of selected optional equipment, the national-market version or country-specific measuring procedures. Detailed values can be taken from the vehicle registration documents, or can be obtained from your authorised BMW Motorrad retailer or another qualified service partner or specialist workshop. The specifications in the vehicle documents always have priority over the information provided in this rider's manual.

## 6 GENERAL INSTRUCTIONS

---

### CURRENCY

The high safety and quality standards of BMW motorcycles are maintained by constant development work on designs, equipment and accessories. Because of this, your vehicle may differ from the information supplied in the rider's manual. Nor can BMW Motorrad entirely rule out errors and omissions. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in these operating instructions.

---

### ADDITIONAL SOURCES OF INFORMATION

#### Authorised BMW Motorrad retailer

Your authorised BMW Motorrad retailer will be happy to answer any questions you may have.

#### Internet

The rider's manual for your vehicle, operating and installation instructions for accessories and general information about BMW Motorrad, in relation to technology, for example, are available for download from **[bmw-motorrad.com/manuals](http://bmw-motorrad.com/manuals)**.

---

### CERTIFICATES AND OPERATING LICENCES

The certificates for the vehicle and the official operating licences for accessories can be downloaded from **[bmw-motorrad.com/certification](http://bmw-motorrad.com/certification)**.

---

### DATA MEMORY

#### General

Control units are installed in the vehicle. Control units process data that they receive, for example, from vehicle sensors, or that they generate themselves or exchange between each other. Some control units are required for the vehicle to function safely or provide assistance during riding, for example assistance systems. In addition, control units enable comfort or infotainment functions.

Information on data that has been stored or exchanged can be obtained from the manufacturer of the vehicle, for example via a separate booklet.

## Personal reference

Each vehicle is identified with a clear vehicle identification number. Depending on the country, the vehicle identification number, the number plate and the corresponding authorities can be referenced to ascertain the vehicle owner. There are also other ways to use data obtained from the vehicle to trace the rider or vehicle owner, for example using the Connected-Drive user account.

## Data protection rights

In accordance with applicable data protection laws, vehicle users have certain rights in relation to the manufacturer of the vehicle or in relation to companies which collect or process personal data.

Vehicle users have the right to obtain full information at no cost from persons or entities storing personal data of the vehicle user.

These entities may include:

- Manufacturer of the vehicle
- Qualified service partners
- Specialist workshops
- Service providers

Vehicle users have the right to request information on what personal data has been stored,

for what purpose the data is used, and where the data comes from. To obtain this information, proof of ownership or use is required.

The right to information also includes information about data that has been shared with other companies or entities. The website of the vehicle manufacturer contains the applicable data protection information. This data protection information includes information on the right to have data deleted or corrected. The manufacturer of the vehicle also provides their contact details and those of the data protection officer on their website.

The vehicle owner can also request that a BMW Motorrad retailer or another qualified service partner or specialist workshop read out the data that is stored in the vehicle for a charge.

The vehicle data is read out using the legally prescribed socket for on-board diagnosis (OBD) in the vehicle.

## 8 GENERAL INSTRUCTIONS

### **Legal requirements for the disclosure of data**

As part of its legal responsibilities, the manufacturer of the vehicle is obligated to make its stored data available to the relevant authorities. This data is provided in the required scope in individual cases, for example to clarify a criminal offence. In the context of applicable laws, public agencies are entitled in individual cases to read out data from the vehicle themselves.

### **Operating data in the vehicle**

Control units process data to operate the vehicle.

This includes, for example:

- Status reports of the vehicle and its individual components, for example wheel speed, wheel circumferential velocity, deceleration
- Environmental conditions, for example temperature

The data is only processed in the vehicle itself and is generally non-permanent. The data is not stored beyond the operating period.

Electronic components, for example control units, contain components for storing technical information. Information

can be temporarily or permanently stored on the vehicle condition, component loads, incidents or errors.

This information is generally used to document the condition of a component, a module, a system or the surrounding area, for example:

- Operating conditions of system components, for example filling levels, tyre pressure
- Malfunctions and faults in important system components, for example light and brakes
- Response of the vehicle in special riding situations, for example engagement of the driving dynamics systems
- Information on incidents resulting in damage to the vehicle

The data is necessary for the provision of control unit functions. Furthermore, the data is used to detect and rectify malfunctions and to enable the vehicle manufacturer to optimise vehicle functions.

The vast majority of this data is non-permanent and is only processed in the vehicle itself. Only a small amount of the data is stored in incident or

fault memories as required by events.

If services are accessed, for example repairs, service processes, warranty cases and quality assurance measures, this technical information can be read out of the vehicle together with the vehicle identification number.

The information can be read out by a BMW Motorrad retailer or another qualified service partner or specialist workshop. The legally stipulated socket for on-board diagnosis (OBD) in the vehicle is used to read out the data.

The data is obtained, processed and used by the relevant parts of the retailer network. The data is used to document the technical conditions of the vehicle, to help with error localization, to comply with warranty obligations and to improve quality.

In addition, the manufacturer has various product monitoring obligations arising from product liability legislation. To meet these obligations, the vehicle manufacturer requires technical data from the vehicle. The data from the vehicle can

also be used to check warranty claims from the customer.

Error and incident memories in the vehicle can be reset during servicing or repair work by a BMW Motorrad retailer or another qualified service partner or specialist workshop.

## **Data input and data transfer in the vehicle**

### **General**

Depending on the equipment, comfort and customised settings can be stored in the vehicle and can be changed or reset at any time.

If required, data can be entered in the entertainment and communication system of the vehicle, for example using a smartphone.

Depending on the individual equipment, this includes:

- Multimedia data, such as music for playback
- Contacts data for use in connection with a communication system or an integrated navigation system
- Entered destinations
- Data on the use of internet services. This data can be stored locally in the vehicle or is located on a device that is connected to the vehicle,

## 10 GENERAL INSTRUCTIONS

for example smartphone, USB stick, MP3 player. If this data is stored in the vehicle, the data can be deleted at any time.

This data is transferred to third parties only if personally requested within the context of using online services. This depends on the selected settings when using the services.

### **Incorporation of mobile devices**

Depending on the equipment, mobile devices connected to the vehicle, for example smartphones, can be controlled using the operating elements of the vehicle.

The image and sound of the mobile device can then be output via the multimedia system. At the same time, specific information is transferred to the mobile device. Depending on the type of integration, this includes, for example, position data and additional general vehicle information. This enables optimal use of the selected apps, for example navigation or music playback.

The type of additional data processing is determined by the provider of the respective app. The scope of the possible set-

tings depends on the corresponding app and the operating system of the mobile device.

### **Services**

#### **General**

If the vehicle has a wireless connection, this enables the exchange of data between the vehicle and other systems. The wireless connection is enabled by the vehicle's own transceiver unit or using personally integrated mobile devices, for example smartphones. Online functions can be accessed through this wireless connection. These include online services and apps that are provided by the vehicle manufacturer or by other providers.

#### **Services of the vehicle manufacturer**

For online services of the vehicle manufacturer, the individual functions are described at suitable points, for example rider's manual, website of the manufacturer. At the same time, information is also provided on the relevant data protection law. Personal data may be used to provide online services. Data is exchanged using a secure connection, for example with

the IT systems provided by the vehicle manufacturer.

Obtaining, processing and using personal data outside of the normal provision of services requires legal permission, contractual agreement or consent. It is also possible to have the entire data connection activated or deactivated. Statutory functions are excluded from this.

### **Services from other providers**

When using online services from other providers, these services are subject to the responsibility and the data protection and operating conditions of the individual provider. The vehicle manufacturer has no influence on the content that is exchanged in this instance. Information on the type, scope and purpose of the data capture and use of personal data as part of the services of third parties can be ascertained from the individual provider.

# GENERAL VIEWS


02

---

|                                          |           |
|------------------------------------------|-----------|
| <b>GENERAL VIEW, LEFT SIDE</b>           | <b>14</b> |
| <b>GENERAL VIEW, RIGHT SIDE</b>          | <b>15</b> |
| <b>BEHIND THE SIDE TRIM PANEL, RIGHT</b> | <b>16</b> |
| <b>MULTIFUNCTION SWITCH, LEFT</b>        | <b>17</b> |
| <b>MULTIFUNCTION SWITCH, RIGHT</b>       | <b>18</b> |
| <b>INSTRUMENT CLUSTER</b>                | <b>19</b> |


## 14 GENERAL VIEWS

### GENERAL VIEW, LEFT SIDE

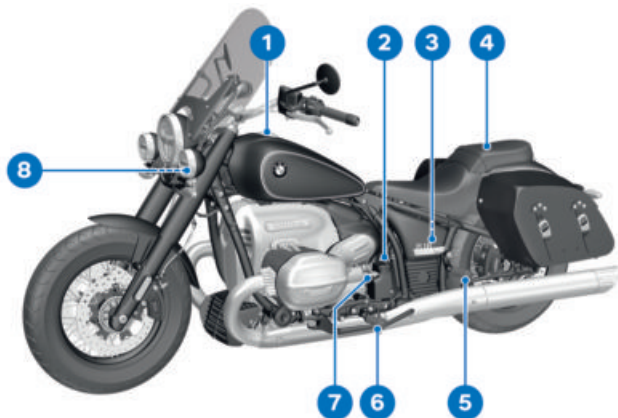

- 1 Fuel filler neck (➡ 102)
- 2 Power socket (➡ 160)
- 3 Tyre pressure table (behind the side trim panel) (➡ 125)  
Disengage diagnostic socket (behind fairing bracket) (➡ 155)
- 4 Retaining strap
- 5 Rear footrest
- 6 Rider footrest
- 7 Reverser (➡ 72)
- 8 Type plate (on steering head)


---

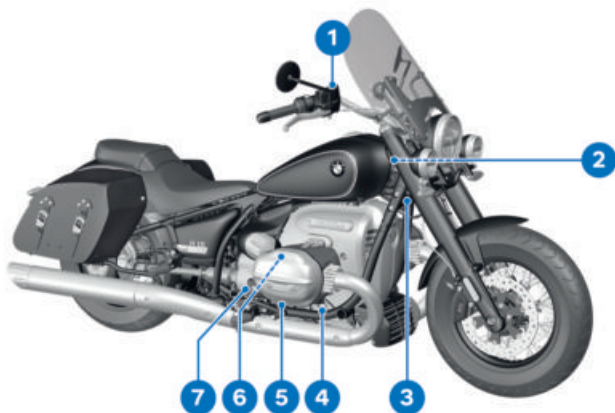**GENERAL VIEW, RIGHT SIDE**

- 1** Brake-fluid reservoir, front  
( 132)
- 2** Steering lock ( 44)
- 3** Vehicle Identification  
Number
- 4** Engine oil level indicator  
( 127)
- 5** Remote ground terminal  
( 147)
- 6** Oil filler opening (under  
the cylinder head cover)  
( 128)
- 7** Brake-fluid reservoir, rear  
( 133)

## 16 GENERAL VIEWS

### BEHIND THE SIDE TRIM PANEL, RIGHT

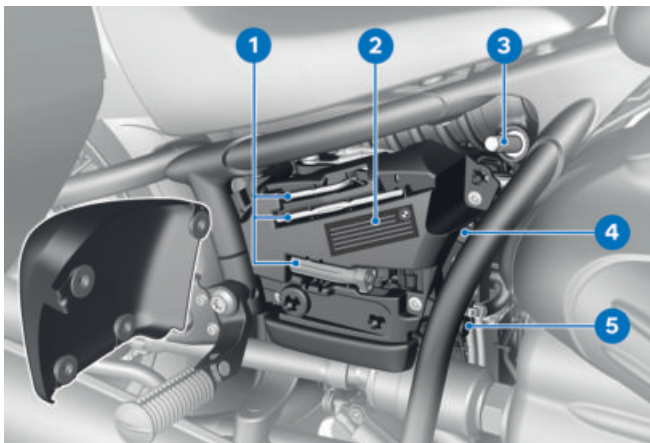

- 1** Toolkit (▮▮▮➔ 124)
- 2** Payload table
- 3** Adjusting spring preload  
for rear wheel (▮▮▮➔ 85)
- 4** Replacing fuses (▮▮▮➔ 154)
- 5** Remote positive terminal  
(▮▮➔ 147)

**MULTIFUNCTION SWITCH, LEFT**

- 1 High-beam headlight and headlight flasher (➡ 50)
- 2 Adaptive cruise control (➡ 68)
- 3 Hazard warning lights (➡ 52)
- 4 Riding mode (➡ 67)
- 5 Auxiliary headlights (➡ 51)
- 6 Turn indicators (➡ 53)
- 7 Horn
- 8 MENU rocker button (➡ 54)
- 9 ASC (➡ 66)

## 18 GENERAL VIEWS

### MULTIFUNCTION SWITCH, RIGHT



- 1 Heated grips (➡ 73)
- 2 Ignition (➡ 45)
- 3 Emergency-off switch (kill switch) (➡ 49)
- 4 Starter button (➡ 95)  
—with reverser<sup>OE</sup>  
Reverser (➡ 72)

**INSTRUMENT CLUSTER**

- 1 Speedometer
- 2 Indicator and warning lights (➡ 22)
- 3 Photosensor (for adapting the brightness of the instrument lighting)  
Indicator light  
DWA (➡ 63)  
Keyless Ride (➡ 45)
- 4 Multifunction display (➡ 23)

# STATUS INDICATORS


03

---

|                                     |           |
|-------------------------------------|-----------|
| <b>INDICATOR AND WARNING LIGHTS</b> | <b>22</b> |
| <b>MULTIFUNCTION DISPLAY</b>        | <b>23</b> |
| <b>WARNING INDICATORS</b>           | <b>24</b> |
| <b>SERVICE DISPLAY</b>              | <b>39</b> |

## 22 STATUS INDICATORS

### INDICATOR AND WARNING LIGHTS

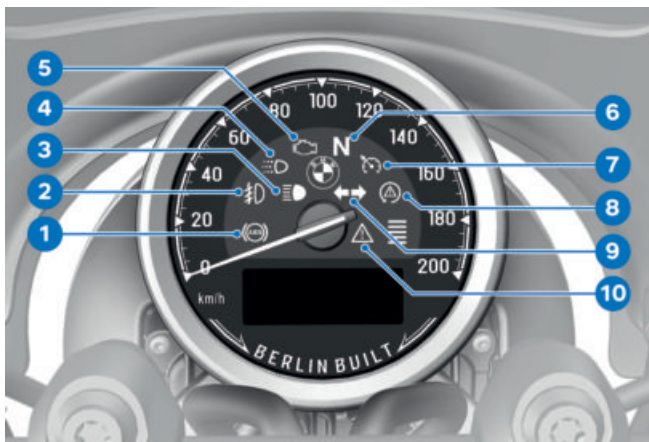

- 1 ABS (➡ 33)
- 2 Auxiliary headlights (➡ 51)
- 3 High-beam headlight (➡ 50)
- 4 Daytime riding light (➡ 51)
- 5 Warning light, drive malfunction (➡ 31)
- 6 Neutral indicator light
- 7 Adaptive cruise control (➡ 68)
- 8 ASC (➡ 33)
- 9 Turn indicators (➡ 53)
- 10 General warning light  
Displayed in combination with warning symbols in the multifunction display (➡ 24)

## MULTIFUNCTION DISPLAY



- 1 Value
- 2 Riding mode (►► 67)
- 3 Unit  
On-board computer  
(►► 54)
- 4 Gear indicator  
Status  
Warning symbol  
Displayed in combination  
with the 'General' warning  
light (►► 24)

## 24 STATUS INDICATORS

### WARNING INDICATORS

#### Mode of presentation

Warnings are indicated by the corresponding warning lights. If two or more warnings occur at the same time, all the appropriate warning lights and warning symbols appear.

The possible warnings are listed on the next pages.



Warnings that do not have warning lights of their own are indicated by a warning symbol **1** appearing in the multifunction display in combination with 'General' warning light **2**. The 'General' warning light either shows steadily or flashes, depending on the urgency of the warning.



#### Acknowledging warnings

Warnings **2** have to be acknowledged by pressing the top or bottom section of button **1**.

The display that was active beforehand does not reappear until warning **2** has been acknowledged.

If two or more warnings are present, button **1** has to be pressed to proceed to and acknowledge each warning **2** in turn.



### Calling up active warnings

Repeatedly short-press button **1** until **WARN** is displayed. Along with the warning **4**, the number of warnings **3** is displayed as well.

Press button **1** to call up the next warning **4** in the sequence.

Press button **2** to go back to preceding warning **4**.

## 26 STATUS INDICATORS

### Warnings, overview

| Indicator and warning lights                                                                  | Display text                                                                                      | Meaning                                                      |
|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
|  lights up.   |  is displayed.   | Electronic immobiliser active (▮▮▮▮▶ 29)                     |
|  lights up.   |  is displayed.   | Radio-operated key out of range (▮▮▮▮▶ 29)                   |
|  lights up.   |  is displayed.   | Replace battery of radio-operated key (▮▮▮▮▶ 29)             |
|  flashes.     |  is displayed.   | Engine temperature too high (▮▮▮▮▶ 29)                       |
|  lights up.   |  is displayed.   | Engine in emergency-operation mode (▮▮▮▮▶ 30)                |
|  flashes.     |  is displayed.   | Engine warning (▮▮▮▮▶ 31)                                    |
|  lights up.   |                                                                                                   | Drive malfunction (▮▮▮▮▶ 31)                                 |
|  flashes.    |  is displayed.  | Serious drive malfunction (▮▮▮▮▶ 31)                         |
|  flashes.   |                                                                                                   |                                                              |
|  lights up. |  is displayed. | Voltage of the vehicle electrical system too low (▮▮▮▮▶ 32)  |
|  lights up. |  is displayed. | Voltage of the vehicle electrical system critical (▮▮▮▮▶ 32) |

| Indicator and warning lights                                                                     | Display text                                                                                                                          | Meaning                                                      |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
|  lights up.     |  is displayed.                                       | Bulb faulty (▮▮▮ 32)                                         |
|  flashes.       |                                                                                                                                       | ABS self-diagnosis not completed (▮▮▮ 33)                    |
|  lights up.     |                                                                                                                                       | ABS fault (▮▮▮ 33)                                           |
|  quick-flashes. |                                                                                                                                       | ASC intervention (▮▮▮ 33)                                    |
|  flashes.       |                                                                                                                                       | ASC self-diagnosis not completed (▮▮▮ 34)                    |
|  lights up.     |                                                                                                                                       | ASC switched off (▮▮▮ 34)                                    |
|  lights up.     |                                                                                                                                       | ASC fault (▮▮▮ 34)                                           |
|                                                                                                  |  is displayed.                                       | Anti-theft alarm battery flat (▮▮▮ 34)                       |
|  lights up.     |  is displayed. The critical tyre pressure flashes.   | Tyre pressure close to limit of permitted tolerance (▮▮▮ 36) |
|  flashes.     |  is displayed. The critical tyre pressure flashes. | Tyre pressure outside permitted tolerance (▮▮▮ 36)           |
|  lights up.   |  is displayed.                                     | Battery for tyre pressure sensor weak (▮▮▮ 37)               |

## 28 STATUS INDICATORS

| Indicator and warning lights                                                                | Display text                                                                                                                                                                       | Meaning                                               |
|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|
|  lights up. |  is displayed in combination with distance counter for reserve fuel KM R or, as applicable, MI R. | Fuel down to reserve (▮▮▮ 37)                         |
|                                                                                             |  is displayed.                                                                                    | Hill Start Control active (▮▮▮ 38)                    |
|  lights up. |  flashes.                                                                                         | Hill Start Control automatically deactivated (▮▮▮ 38) |
|                                                                                             |  flashes.                                                                                         | Hill Start Control cannot be activated (▮▮▮ 38)       |
|                                                                                             |  is displayed.                                                                                    | Service due (▮▮▮ 38)                                  |
|  lights up. |  is displayed.                                                                                    | Service overdue (▮▮▮ 39)                              |

**Electronic immobiliser active**

lights up.



is displayed.

Possible cause:

The ignition key being used is not authorised for starting, or communication between key and engine electronics is disrupted.

- Remove all other vehicle keys from the same ring as the vehicle key being used.
- Have the fault ignition key replaced, preferably by an authorised BMW Motorrad retailer.

**Radio-operated key out of range**

lights up.



is displayed.

Possible cause:

Communication between radio-operated key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- Replace the battery of the radio-operated key (▮▮▮▮ 47).
- Use the spare key to continue your journey.

- Battery of the radio-operated key is empty or loss of the radio-operated key (▮▮▮▮ 46).
- Remain calm if the warning symbol appears while you are riding. You can continue your journey, the engine will not switch off.
- Have the faulty radio-operated key replaced by an authorised BMW Motorrad retailer.

**Replace battery of radio-operated key**

lights up.



is displayed.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the radio-operated key can remain operational.
- Replace the battery of the radio-operated key (▮▮▮▮ 47).

**Engine temperature too high**

flashes.



is displayed.

## 30 STATUS INDICATORS



### ATTENTION

#### **Riding with overheated engine**

Engine damage

- Compliance with the information set out below is essential.

Possible cause:

The temperature sensor has detected a high temperature in the engine.

- If possible, ride in the part-load range to cool down the engine.
- » Available engine output is reduced.
- » If engine temperature is very high when the vehicle is at a standstill, after approximately five minutes the engine shuts down automatically to prevent overheating. The engine can be restarted after the automatic shutdown. The engine is shut down under the following preconditions:
  - Side stand is extended.
  - Brake is not applied.
  - Throttle grip is in idle position.
- If the engine oil temperature is frequently too high, have the fault rectified as soon as possible by a specialist work-

shop, preferably an authorised BMW Motorrad Retailer.

#### **Engine in emergency-operation mode**



lights up.



is displayed.



### WARNING

#### **Unusual ride characteristics when engine running in emergency-operation mode**

Risk of accident

- Avoid accelerating sharply and overtaking.

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine performance might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

**Engine warning**

flashes.



is displayed.

**WARNING****Engine damage when running in emergency-operation mode**

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- Avoid high load and rpm ranges if possible.
  - Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » It is possible to continue to ride but not recommended.

**Drive malfunction**

lights up.

Possible cause:

The engine control unit has diagnosed a fault that affects pollutant emissions and/or reduces power.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

**Serious drive malfunction**

flashes.



flashes.



is displayed.

Possible cause:

The engine control unit has diagnosed a fault that can lead to damage to the exhaust system.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » It is possible to continue to ride but not recommended.

## 32 STATUS INDICATORS

### Voltage of the vehicle electrical system too low



lights up.



is displayed.

Generator power is no longer sufficient to supply all consumers and charge the battery. In order to ensure that the engine can be started and the motorcycle ridden, the on-board electronics switch off the electricity supply to individual consumers.

Possible cause:

Too many consumers are switched on. On-board system voltage tends to drop particularly at low engine rpm and when the engine is idling.

- When riding at low engine rpm, switch off all consumers that are not necessary for road safety (e.g. heated body warmers).

### Voltage of the vehicle electrical system critical



lights up.



is displayed.



### WARNING

#### Failure of the vehicle systems

Risk of accident

- Do not continue your journey.

Possible cause:

Alternator faulty, battery faulty or fuse for alternator regulator has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

#### Bulb faulty



lights up.



is displayed.



### WARNING

#### Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

One or more bulbs faulty.

- Visually inspect to ascertain which bulb is defective.
- Have LED light sources replaced as complete units; consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

### **ABS self-diagnosis not completed**



flashes.

Possible cause:



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

### **ABS fault**



lights up.

Possible cause:

The ABS control unit has detected a fault. The partially integral function and the Dynamic Brake Control function have failed. The ABS function is not available.

- You can continue to ride the vehicle, but make due provision for the fact that the affected functions are not available. Bear in mind the more detailed information on situations that can lead to an ABS fault (► 112).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### **ASC intervention**



quick-flashes.

The ASC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The ASC indicator and warning light flashes longer than the duration of the ASC intervention. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

## 34 STATUS INDICATORS

### ASC self-diagnosis not completed



flashes.

Possible cause:



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the ASC is not available until self-diagnosis has completed.

### ASC switched off



lights up.

Possible cause:

The rider has switched off the ASC.

- Switch on ASC (►► 66).

### ASC fault



lights up.

Possible cause:

The ASC control unit has detected a fault. The ASC function is not available.

- You can continue to ride. Bear in mind that the ASC function and dynamic engine brake control are not available. Bear in mind the more detailed information on situations that can lead to an ASC fault (►► 114).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### Anti-theft alarm battery flat

—with anti-theft alarm (DWA)<sup>OE</sup>



is displayed.



This error message shows briefly only after the Pre-Ride-Check completes.

Possible cause:

The integral battery in the anti-theft alarm (DWA) has lost its entire original capacity. There is no assurance that the DWA anti-theft alarm will be operational if the vehicle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

### Tyre pressure

—with tyre pressure control (RDC)<sup>OE</sup>



F values **2** refer to the front wheel, R values **2** refer to the rear wheel.

Tyre symbol **3** and ! **1** are displayed to indicate that tyre pressure has dropped below the permissible limit. Tyre pressure reading **2** flashes. Immediately after the ignition is switched on, only dashes are displayed. The sensors do not start transmitting tyre pressure signals until the first time the vehicle accelerates to more than the minimum speed stated below:



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)



The tyre pressures are shown in the TFT display as temperature compensated and always refer to the following tyre air temperature:

20 °C



If the value in question is close to the limit of the permissible tolerance range, the reading is accompanied by the 'General' warning light. If the tyre pressure registered by the sensor is outside the permissible tolerance range, the 'General' warning light flashes.

For further information about the BMW Motorrad RDC, see the section entitled "Engineering details" from page (118) onward.

## 36 STATUS INDICATORS

### **Tyre pressure close to limit of permitted tolerance**

—with tyre pressure control (RDC)<sup>OE</sup>



lights up.



is displayed. The critical tyre pressure flashes.

Possible cause:

Measured tyre pressure is close to the limit of permitted tolerance.

- Correct the tyre pressure as stated on the inside cover of the Rider's Manual.



Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details".

» Temperature compensation  
( 119)

### **Tyre pressure outside permitted tolerance**

—with tyre pressure control (RDC)<sup>OE</sup>



flashes.



is displayed. The critical tyre pressure flashes.



### **WARNING**

#### **Tyre pressure outside the permitted tolerance.**

Risk of accident, degradation of the vehicle's driving characteristics.

- Adapt your style of riding accordingly.

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.



Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details".

» Temperature compensation  
( 119)

- Have the tyre checked for damage by a specialist workshop, preferably an authorised BMW Motorrad retailer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

### **Battery for tyre pressure sensor weak**

—with tyre pressure control (RDC)<sup>OE</sup>



lights up.



is displayed.

Possible cause:

The integral battery in the tyre-pressure sensor has lost a significant proportion of its original capacity. There is no assurance of how long the tyre pressure monitoring system can remain operational.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

### **Fuel reserve**

The amount of fuel remaining in the fuel tank when the low-fuel warning light comes on depends on riding dynamics. The more the fuel moves inside the fuel tank (due to frequent changes in angle of lean, frequent braking and acceleration), the more difficult it

becomes to determine the reserve volume of fuel remaining in the tank. For this reason, the reserve volume of fuel cannot be displayed exactly.



As soon as the low-fuel warning light comes on, the **KM R** or, as applicable, the **MI R** reading for the distance that can potentially be covered with the fuel still on board appears and counts down. The distance that can still be travelled using the reserve volume of fuel depends on the style of riding (fuel consumption) and the amount of fuel left in the tank.

After a refuelling stop, the distance counter for reserve fuel is reset if the amount of fuel in the tank is greater than the reserve quantity.

### **Fuel down to reserve**



lights up.



is displayed in combination with distance counter for reserve fuel **KM R** or, as applicable, **MI R**.

## 38 STATUS INDICATORS



### WARNING

#### **Irregular engine operation or engine shutdown due to lack of fuel**

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Fuel reserve

approx. 4 l

- Refuel (► 102).

#### **Hill Start Control active**



is displayed.

Possible cause:

Hill Start Control (► 120) has been activated by the rider.

- Switch off Hill Start Control.

#### **Hill Start Control automatically deactivated**



lights up.



flashes.

Possible cause:

Hill Start Control has been automatically deactivated.

- Side stand has been extended.
  - » Hill Start Control is deactivated when the side stand is extended.
- Engine has been switched off.
  - » Hill Start Control is deactivated when the engine is switched off.

#### **Hill Start Control cannot be activated**



flashes.

Possible cause:

Hill Start Control cannot be activated.

- Retract the side stand.
  - » Hill Start Control is operational only with the side stand retracted.
- Start the engine.
  - » Hill Start Control is operational only while the engine is running.

#### **Service due**



is displayed.

Possible cause:

Service is due, because of either distance covered or time expired.

- Have your motorcycle serviced regularly by a specialist workshop, preferably an authorised BMW Motorrad retailer.

» The vehicle remains operationally reliable and road-worthy.

» The vehicle retains its value.

### Service overdue



lights up.



is displayed.

Possible cause:

Service is overdue because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably an authorised BMW Motorrad retailer.

» The vehicle remains operationally reliable and road-worthy.

» The vehicle retains its value.

### SERVICE DISPLAY



When a service is due within one month, symbol for service due **4** and service due date **3** are displayed. The **SERV** display **2** has to be acknowledged by pressing button **1**.



When a service is due within 1000 km, symbol for service due **4** and countdown distance **3** are displayed and the countdown proceeds in steps of 100 km. The **SERV** display **2** has to be acknowledged by pressing button **1**.

## 40 STATUS INDICATORS



The date saved in the instrument cluster must be adjusted if the service display appears more than one month prior to the service date. This situation may occur if the battery has been disconnected from the vehicle.



**OPERATION**

**04**

---

|                                           |           |
|-------------------------------------------|-----------|
| <b>STEERING LOCK</b>                      | <b>44</b> |
| <b>IGNITION</b>                           | <b>45</b> |
| <b>LIGHTING</b>                           | <b>49</b> |
| <b>MULTIFUNCTION DISPLAY</b>              | <b>54</b> |
| <b>SETTINGS IN THE INSTRUMENT CLUSTER</b> | <b>57</b> |
| <b>ANTI-THEFT ALARM (DWA)</b>             | <b>63</b> |
| <b>AUTOMATIC STABILITY CONTROL (ASC)</b>  | <b>66</b> |
| <b>RIDING MODE</b>                        | <b>67</b> |
| <b>CRUISE CONTROL</b>                     | <b>68</b> |
| <b>HILL START CONTROL</b>                 | <b>70</b> |
| <b>REVERSER</b>                           | <b>71</b> |
| <b>HEATED GRIPS</b>                       | <b>73</b> |
| <b>SEATS</b>                              | <b>74</b> |
| <b>WINDSCREEN</b>                         | <b>75</b> |
| <b>SOFTBAGS</b>                           | <b>77</b> |

## 44 OPERATION

### STEERING LOCK

#### Locking the steering lock




#### WARNING


#### Restricted steering angle when steering lock engaged

Risk of falling

- Unlock the steering lock before attempting to pull away.
- Before pulling away, remove the key from the steering lock.

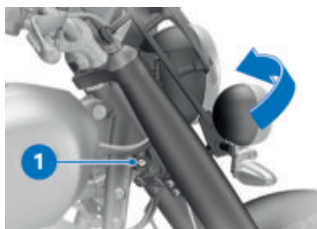


- Turn the handlebars all the way to the left and insert the ignition key into steering lock 1.

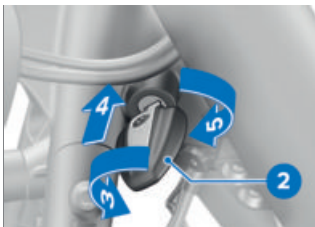

- Turn ignition key 2 counter-clockwise 3 in the steering lock.
- Use ignition key 2 to push the steering lock in 4 and hold it in this position.
- Turn ignition key 2 clockwise 5.
- » Steering lock is engaged.
- Remove ignition key 2.

#### Unlocking steering lock

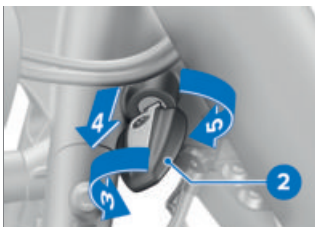

- Turn ignition key 2 counter-clockwise 3 in the steering lock.
- » The steering lock is disengaged 4.
- Turn ignition key 2 clockwise 5.

- Remove ignition key **2**.

## IGNITION

### Radio-operated key

 The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress. The light goes out as soon as the radio-operated key or the emergency key is found. The light goes out briefly if the search times out without the radio-operated key or the emergency key being found.

You receive one radio-operated key and one spare key. If a key is lost or mislaid, consult the information on the electronic immobiliser (EWS) ( 48). Ignition and anti-theft alarm system, if fitted, work with the radio-operated key. Steering lock and fuel filler cap are locked and unlocked manually.

 The vehicle cannot be started while the radio-operated key is out of range. If the radio-operated key remains out of range the ignition is switched off after about 1.5 minutes to protect the battery. It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket)

and to have the emergency key with you as an alternative.



Range of the Keyless Ride radio-operated key

approx. 1 m

### Switching on ignition Requirement

Radio-operated key is within range.



- Press button **1**.
  - » Side lights and all function circuits are switched on.
  - » Engine can be started.
    - with daytime riding light<sup>OE</sup>
  - » Daytime riding light is switched on. 
  - » Pre-Ride-Check is performed. ( 96)
  - » ABS self-diagnosis is in progress. ( 96)
  - » ASC self-diagnosis is performed. ( 97)

## 46 OPERATION

### Switching off ignition Requirement

Radio-operated key is within range.



- Press button 1.  
» Lights and all function circuits are switched off.

### Battery of the radio-operated key is empty or loss of the radio-operated key



- If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS).
- If you happen to lose or mislay the radio-operated key while on a journey, you

can start the vehicle with the spare key.

- If the battery of the radio-operated key is empty, the vehicle can be started by simply inserting the folded radio-operated key into the ring aerial under the seat.
- Removing rider's seat (► 74).
- Insert the spare key or folded-in radio-operated key with the empty battery 1 into ring aerial 2.

 The spare key or the closed radio-operated key with the empty battery **must be inserted into** the opening in the ring aerial.



Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

- » Pre-Ride-Check is performed.
- Key has been recognised.
- Engine can be started.
- Installing rider's seat (► 74).
- Start the engine (► 95).

## Replacing battery of radio-operated key

### Requirement

The radio-operated key does not react because the battery is weak.



is displayed.



### DANGER

#### Swallowing a battery

Risk of injury or death

- An ignition key contains a button cell as its battery. Batteries or button cells, if swallowed, can cause serious or fatal injury within two hours, for example resulting from internal burns or caustic action.
- Keep ignition keys and batteries out of reach of children.
- If there is any suspicion that a battery or button cell has been swallowed or is inside a part of the body, seek medical assistance immediately.

- Change the battery.



- Press button **1**.  
» Key bit flips out.
- Push battery cover **2** up.
- Remove battery **3**.
- Dispose of the old battery in accordance with all applicable laws and regulations; do not attempt to dispose of batteries as domestic waste.



### ATTENTION

#### Unsuitable or incorrectly inserted batteries

Component damage

- Use a battery compliant with the manufacturer's specifications.
- When inserting the battery, always make sure polarity is correct.
- Insert the new battery with the positive terminal up.

## 48 OPERATION



Battery type

For Keyless Ride radio-operated key

CR 2032

- Install battery cover **2**.

- » Red LED in the instrument cluster flashes.
- » The radio-operated key is again ready for use.

### **Electronic immobiliser (EWS)**

The on-board electronics access the data saved in the ignition key via a ring aerial. The engine control unit will not permit the engine to be started unless the key is identified as "authorised".



Another vehicle key attached to the same ring as the vehicle key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued. The warning with the key symbol appears in the multifunction display.

Always keep other vehicle keys separate from the vehicle key used to start the engine.

If you lose an ignition key, you can have it barred by your authorised BMW Motorrad retailer.

If you wish to do this, you will need to bring all other keys for the motorcycle with you. The engine cannot be started by a barred key, but a key that has been barred can subsequently be reactivated.

You can obtain spare keys only through an authorised BMW Motorrad retailer. The keys are part of an integrated security system, so the retailer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

## Emergency-off switch (kill switch)



- 1** Emergency-off switch (kill switch)



### WARNING

#### Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding.

The emergency off switch is a kill switch for switching off the engine quickly and easily.



- A** Engine switched off  
**B** Normal operating position (run)



You cannot start the engine unless the kill switch is in the run position.

## LIGHTING

### Low-beam headlight

- Switch on the ignition (➡ 45).
- Start the engine (➡ 95).



- Alternatively: pull switch **1** when ignition switched on.
- » The low-beam headlight is switched on.

## 50 OPERATION

### Side light

The side lights switch on automatically when the ignition is switched on.

 The side lights place a strain on the battery; leave the ignition switched on for a limited time only.

### High-beam headlight and headlight flasher

- Switch on the ignition ( 45).



- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

### Headlight courtesy delay feature

- Switch off the ignition ( 46).



- Immediately after switching off the ignition, pull switch **1** back and hold it in that position until the headlight courtesy delay feature comes on.
  - » The vehicle's lights come on for one minute and then switch off automatically.
  - This can be used to light up the path to the house door after the vehicle has been parked, for example.

### Parking lights

- Switch off the ignition ( 46).



- Immediately after switching off the ignition, push but-

ton **1** to the left and hold it in that position until the parking lights come on.

- Switch the ignition on and off again to switch off the parking lights.

## Auxiliary headlights

### Requirement

The low-beam headlight must be switched on.

 The auxiliary headlights have approval as fog lights and their use is permissible in bad weather conditions only. Always comply with the road traffic regulations in force in the country in which the vehicle is used.

- Start the engine (▮▮▮ 95).



- Press button **1** to switch on the additional headlight.



lights up.

- Press button **1** again to switch off the additional headlight.

## Automatic daytime riding light

—with daytime riding light<sup>OE</sup>

 The changeover between daytime riding light and low-beam headlight including front side lights can be effected automatically.



### WARNING

**The automatic daytime riding light is not a substitute for the rider's personal judgement of the light conditions**

Risk of accident

- Switch off the automatic daytime riding light in poor light conditions.

- Switch on the ignition (▮▮▮ 45).

## 52 OPERATION



- Repeatedly short-press button **1** or **2** until **SETUP ENTER** is displayed.
- Long-press button **2** to call up **SETUP**.
  - » **SET DRL A** is displayed.
- Long-press button **2** to call up **SET DRL A**.
  - » The setting currently selected flashes.



- Short-press button **1** or **2** to change the setting.
- The following settings are available:
- **DRL A ON**: automatic daytime riding light is activated.

– **DRL A OFF**: automatic daytime riding light is deactivated.

- » If the ambient brightness decreases below a certain value (e.g. in a tunnel) while the daytime riding light function is active, the low-beam headlight is automatically switched on. When sufficient ambient brightness is detected, the daytime riding light is switched back on.
- Long-press button **2** to confirm the setting.
- Alternatively: Long-press button **1** to exit without saving the setting.
- Exit **SETUP** (➡ 57).

### Hazard warning lights

-  The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary.
- Switch on the ignition (➡ 45).



- Alternatively: Press button **1** to cancel the turn indicators.

- Press button **1** to switch on the hazard warning lights system.
- » Ignition can be switched off.
- To switch off the hazard warning flashers, switch on the ignition and press button **1** again.

### Turn indicators

- Switch on the ignition (▮▮▮▮▶ 45).



- Push button **1** to the left or right, as appropriate, to switch on the turn indicators.
- » The turn indicators are cancelled automatically when the speed-dependent distance is covered.

## 54 OPERATION

### MULTIFUNCTION DISPLAY SELECTING DISPLAY



#### Requirement

The vehicle is at a standstill.

- Switch on the ignition (🔑 45).  
» The on-board computer readings appear on the display.
- Repeatedly short-press button **1** until the desired value is displayed.

Possible displays:

- Odometer reading: KM
- Trip distance recorder 1: KM 1
- Automatic trip distance: KM A  
is reset automatically 6 hours

after the ignition is switched off and the date has changed.

- Distance ridden after fuel down to reserve: KM R selectable only when fuel level is down to reserve.
- Average speed: ØKM/H
- Vehicle voltage: VOLT
- Date: DD.MM.
- Average fuel consumption: ØL/100
- Current fuel consumption: L/100, vehicle at standstill: L/H
- Clock: H:M
- Engine speed: RPM

- with tyre pressure control (RDC) <sup>OE</sup>
- Tyre pressure reading, rear wheel: R BAR<
- with tyre pressure control (RDC) <sup>OE</sup>
- Tyre pressure reading, front wheel: F BAR<
- Countdown distance to service: SERV, selectable only when next service is due within 1000 km or service is overdue.
- Service due date: SERV, selectable only when next service is due within one month or service is overdue.
- Active warnings: WARN, selectable only when warnings are active.
- Call up the menu for settings: SETUP ENTER
- Configure displays (➡ 62).

## 56 OPERATION

### Resetting trip distance recorder

- Switch on the ignition (▮▮▮▮ 45).

- Press and hold down button **2** until the average value you want **3** is reset.



- Repeatedly short-press button **1** until the trip distance recorder you want to reset **3** is displayed.
- Press and hold down button **2** until trip distance recorder **3** is reset.

### Resetting average values

- Switch on the ignition (▮▮▮▮ 45).



- Repeatedly short-press button **1** until the average value you want **3** is displayed.

## SETTINGS IN THE INSTRUMENT CLUSTER

### Select SETUP Requirement

The vehicle is at a standstill.




- Repeatedly short-press button **1** or **2** until **SETUP ENTER 3** is displayed.
- Long-press button **2** to start **SETUP**.
- Short-press button **1** to proceed to the next parameter in the sequence.
- Short-press button **2** to go back to the preceding parameter in the sequence.
- The following parameters in **SETUP** can be selected:
  - with daytime riding light<sup>OE</sup>
  - Activate **DRL A ON** or deactivate **DRL A OFF** automatic daytime riding light.◀
  - Adjust the brightness of the backlighting in the instrument cluster **BRIGHT**.

- with Hill Start Control<sup>OE</sup>
- Activate Hill Start Control **HSC ON** or deactivate it **HSC OFF**.◀
- with anti-theft alarm (DWA)<sup>OE</sup>
- Automatically activate anti-theft alarm function when the ignition is switched off **DWA ON** or leave the automatic function switched off **DWA OFF**.◀
- Set the time **CLOCK**.
- Set the date **DATE**.
- Configure displays **SET DISPLAY**.
- Set units **UNIT**.
- Reset displays **RESET**.
- Exit **SETUP** menu **SETUP EXIT**.
- Long-press button **2** to call up the desired parameter.

### Exit SETUP Requirement

There are three options for exiting **SETUP**.

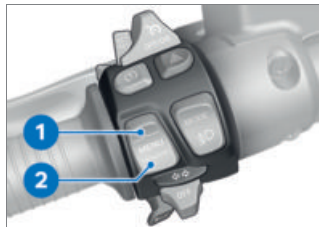

- Long-press button **1**.

## 58 OPERATION

- » SETUP ENTER is displayed.
- Alternatively: Repeatedly short-press button **1** or **2** until SETUP EXIT is displayed.
- Long-press button **2**.
- » SETUP ENTER is displayed.
- Alternatively: Ride off.



Speed for operation in  
SETUP mode

max 10 km/h

- » SETUP is exited automatically if the permissible maximum vehicle speed for menu operation is exceeded.
- » KM is displayed.

### Resetting SETUP

- Switch on the ignition.
- Select SETUP (➡ 57).



- Repeatedly short-press button **1** until SETUP RESET is displayed.
- Press and hold down button **2** until RESET **3** flashes.



Date and time can also be reset to a default value by using the SETUP RESET function.

- » SETUP EXIT is displayed.
- Exit SETUP (➡ 57).

### Setting clock



#### WARNING

#### Adjusting the clock when riding

Risk of accident

- Set the clock only when the motorcycle is stationary.

- Switch on the ignition (➡ 45).



- Repeatedly short-press button **1** until SETUP ENTER is displayed.
- Long-press button **2** to open SETUP.
- Repeatedly short-press button **1** until SET CLOCK is displayed.



- Press and hold down button **2** until hours number **3** flashes.
- Short-press button **1** to increase the hours number by one.
- Short-press button **2** to reduce the hours number by one.
- » The hours are set.
- Press and hold down button **2** until minutes number **4** flashes.
- Short-press button **1** to increase the minutes number by one.
- Short-press button **2** to reduce the minutes number by one.
- » The minutes are set.
- Press and hold down button **2** until the minutes number stops flashing.
- » The clock is set.
- Long-press button **1** to exit SET CLOCK.
- » SETUP ENTER is displayed.

## Setting date

- Switch on the ignition (➡ 45).



- Repeatedly short-press button **1** until SETUP ENTER is displayed.
- Long-press button **2** to open SETUP.
- Repeatedly short-press **1** until SET DATE is displayed.



- Press and hold down button **2** until day number **3** flashes.
- Short-press button **1** to increase the day number by one.
- Short-press button **2** to reduce the day number by one.
- » The day is set.

## 60 OPERATION

- Press and hold down button **2** until month number **4** flashes.
- Short-press button **1** to increase the month number by one.
- Short-press button **2** to reduce the month number by one.
- » The month is set.
- Press and hold down button **2** until SET YEAR is displayed.



- Short-press button **1** to increase year number **5** by one.
- Short-press button **2** to reduce year number **5** by one.
- Press and hold down button **2** until the year stops flashing.
- » The year is set.
- Long-press button **1** to exit SET YEAR.
- » The date is set.
- » SETUP ENTER is displayed.

### Adjusting the brightness of the backlighting Requirement

The vehicle is at a standstill.

- Switch on the ignition (➡ 45).
- Select SETUP (➡ 57).



- Repeatedly short-press button **1** or **2** until SET BRIGHT **3** is displayed.
- Long-press button **2** to call up SET BRIGHT.
- » The setting currently selected flashes.
- Repeatedly short-press button **1** or **2** until the desired brightness of the backlighting is set.
- Long-press button **2** to confirm the setting.
- Alternatively: Long-press button **1** to exit without saving the setting.
- Exit SETUP (➡ 57).

## Set the units Requirement

The vehicle is at a standstill.

- Switch on the ignition (➡ 45).
- Select SETUP (➡ 57).



- Repeatedly short-press button **1** or **2** until SET UNIT ENTER is displayed.
- Long-press button **2** to call up SET UNIT.
- Short press button **1** or **2** to select the following parameters in SET UNIT:
  - without Canada export<sup>NV</sup>
  - Change speedometer unit between KM/H and MPH◀
  - without Canada export<sup>NV</sup>
  - Change distance recorder unit between KM and MI◀
  - Change fuel consumption display between L/100, MPG and KM/L

- with tyre pressure control (RDC)<sup>OE</sup>
- Change tyre pressure control (RDC) unit between BAR, PSI and KPA◀
- Change clock display between 24H and 12H
- Change date format between DMY and MDY



- Long-press button **2** to call up the parameters you want to view.
  - » The setting currently selected flashes.
- Repeatedly short-press button **1** or **2** until the unit you want to use **3** is set.
- Long-press button **2** to confirm set unit **3**.
- Alternatively: Long-press button **1** to exit without saving the setting.
- If you want to exit setup, repeatedly short-press button **1** until SET UNIT EXIT is displayed.

## 62 OPERATION

- Long-press button **2** to exit SET UNIT.
- » SETUP RESET is displayed.



- If you want to restore the factory defaults, repeatedly short-press button **1** until SET UNIT RESET is displayed.
- Long-press button **2** until RESET **3** flashes.
- » Units have been reset to the factory setting.
- » SET UNIT EXIT is displayed.
- Long-press button **2** to exit SET UNIT.
- » SETUP RESET is displayed.

### Configure displays Requirement

The vehicle is at a standstill.

- Switch on the ignition (▮▮▮▮ 45).
- Select SETUP (▮▮▮▮ 57).



- Repeatedly short-press button **1** or **2** until SET DISPLAY ENTER is displayed.
- Long-press button **2** to call up SET DISPLAY.



- Press button **1** or **2** to select display **3**.
- » The following displays can be deactivated:
  - Trip distance recorder reading
  - Automatic trip distance
  - Average speed
  - On-board voltage
  - Date
  - Average consumption
  - Current consumption

- Clock
- Engine speed
- with tyre pressure control (RDC)<sup>OE</sup>
  - » Depending on vehicle equipment, additionally:
- Tyre pressure reading◀
  - Long-press button **2** to call up the reading you want to view.
  - » The setting currently selected flashes.
  - Press button **1** or **2** so that reading **3** is either deactivated OFF or activated ON.
  - Long-press button **2** to confirm the setting.
  - Alternatively: Long-press button **1** to exit without saving the setting.
  - Long-press button **2** to exit SET DISPLAY.
  - » SET UNIT ENTER is displayed.



- If you want to restore the factory defaults, repeatedly short-press button **1** until

SET DISPLAY RESET is displayed.

- Long-press button **2** until RESET **3** flashes.
- » Displays have been reset to the factory default.
- » SET DISPLAY EXIT is displayed.
- Long-press button **2** to exit SET DISPLAY.
- » SET UNIT ENTER is displayed.

---

## ANTI-THEFT ALARM (DWA)

-with anti-theft alarm (DWA)<sup>OE</sup>

### Activating DWA

- Switch on the ignition (▶▶▶▶▶ 45).
- Adjust the DWA (▶▶▶▶▶ 65).
- Switch off the ignition.
- » If the alarm system (DWA) is activated, the DWA will be armed automatically when you switch off the ignition.
- » Activation takes approximately 30 seconds to complete.
- Turn indicators flash twice.
- » Anti-theft alarm (DWA) is active.

## 64 OPERATION



- Switch off the ignition.
- Press button **1** on the radio-operated key twice.
  - » Activation takes approximately 30 seconds to complete.
  - » Turn indicators flash twice.
  - » Anti-theft alarm is active.



- To deactivate the motion sensor (for example if you are about to transport the motorcycle on a train and the swaying movement of the moving train could trip the alarm), press button **1** on the radio-operated key again during the activation phase.
  - » Turn indicators flash three times.

» Motion sensor has been deactivated.

### Alarm signal

A DWA alarm can be triggered by:

- Motion sensor
- An attempt to use an unauthorised ignition key to switch on the ignition.
- Disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - acoustic alarm only, the turn indicators do not flash).

 When the radio-operated key is within range, an alarm triggered by the tilt sensor is suppressed.

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

The alarm signal continues for approx. 26 seconds. While a DWA alarm is in progress an acoustic alarm sounds and the turn indicators flash. The type of acoustic alarm can be set by

an authorised BMW Motorrad retailer.



You can cancel an alarm at any time by pressing button **1** on the radio-operated key; this does not deactivate the alarm system.

If a DWA alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the DWA alarm for one minute.

### Light signals issued by the indicator light:

- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised vehicle key

- Flashes 4x: Disconnection of the DWA anti-theft alarm from the motorcycle's battery
- Flashes 5x: Motion sensor 3

### Deactivating DWA

- Switch on the ignition (➡ 45).



- Short-press button **1**.
  - » Turn indicators flash once.
  - » DWA is switched off.

### Adjust the DWA

- Switch on the ignition (➡ 45).
- Select SETUP (➡ 57).



- Repeatedly short-press button **1** or **2** until SET DWA is displayed.

## 66 OPERATION

- Long-press button **2** to call up SET DWA.

» The setting currently selected flashes.

- Short-press button **1** or **2** to change the setting.

The following settings are available:

–DWA ON: The DWA anti-theft alarm is active and will be armed automatically when the ignition is switched off.

–DWA OFF: The DWA anti-theft alarm is deactivated.


- Long-press button **2** to confirm the setting.
- Alternatively: Long-press button **1** to exit without saving the setting.
- Exit SETUP (➡ 57).

### AUTOMATIC STABILITY CONTROL (ASC)

#### Switching off ASC

- Switch on the ignition (➡ 45).


 You have the option of deactivating the ASC function while the motorcycle is on the move.

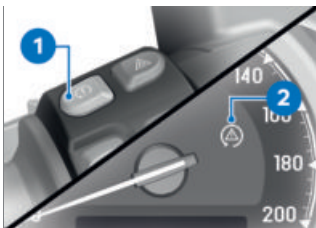

- Press and hold down button **1** until ASC indicator and warning light **2** changes its status.  starts to show.

» ASC is switched off.

#### Switching on ASC

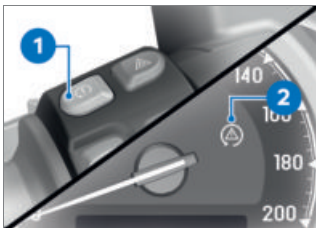

- Press and hold down button **1** until ASC indicator and warning light **2** changes its status.  goes out; if self-diagnosis has not completed it starts flashing.

» ASC is switched on.

- You also have the option of switching the ignition off and then on again.



If the ASC indicator and warning light remains on even though the vehicle has accelerated past the minimum speed stated below after the ignition was switched off and then on again, an ASC fault has occurred.

min 5 km/h

## RIDING MODE

### Using riding modes

BMW Motorrad has developed operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

- RAIN: Riding on rain-wet roads.
- ROLL: Riding on dry roads.
- ROCK: Dynamic riding on dry roads.

The optimum interplay of engine characteristic, ASC control and dynamic engine brake control is provided for each of these scenarios.

For more information on the riding modes, see the section entitled "Engineering details" (115).

### Selecting riding mode

- Switch on the ignition (45).



- Press button **1**.
  - » The current riding mode **2** is displayed.



- Repeatedly press button **1** until the riding mode you want **2** is displayed.
  - » With the vehicle at a standstill, the selected mode is activated after approximately 2 seconds.
  - » The following conditions must be satisfied for activation of a new riding mode while riding:
    - Throttle grip is in idle position.

## 68 OPERATION

- Brake is not applied.
- » Additionally on vehicles with cruise control:
- The cruise-control system is deactivated.
- » The riding mode selected in this way is retained, with the engine-characteristic and ASC adaptation settings, even after the ignition has been switched off.

### CRUISE CONTROL

#### Switching on adaptive cruise control



- Slide switch **1** to the right.
- » Button **2** is enabled for operation.

#### Setting road speed



- Short-push button **1** forward.



Adjustment range for cruise control (gear-dependent)

20...180 km/h



lights up.

- » The motorcycle maintains your current cruising speed and the setting is saved.

#### Accelerating



- Short-push button **1** forward.
- » Speed is increased by approx. 1 km/h each time you push the button.

- Push button **1** forward and hold it in this position.
  - » The vehicle accelerates smoothly.
  - » The current speed is maintained and saved if button **1** is not pushed again.

### Decelerating



- Short-push button **1** back.
  - » Speed is reduced by approx. 1 km/h each time you push the button.
- Push button **1** back and hold it in this position.
  - » The vehicle decelerates smoothly.
  - » The current speed is maintained and saved if button **1** is not pushed again.

### Deactivating cruise control

- Brake, pull the clutch lever or turn the throttle grip (close the throttle by turning the grip back past the idle position) to deactivate cruise control.

 For safety reasons, cruise control is automatically deactivated when an ASC intervention occurs.

» Indicator light for cruise control goes out.

### Resuming former cruising speed




- Short-push button **1** back to return to the speed saved beforehand.

 Opening the throttle does not deactivate cruise control. When the twistgrip is released the motorcycle decelerates only to the speed saved in memory, even if the rider intended slowing to a lower speed.

 lights up.

## 70 OPERATION

### Switching off adaptive cruise control

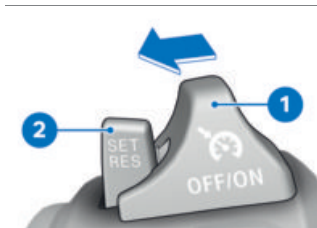

- Slide switch **1** to the left.
  - » The system is deactivated.
  - » Button **2** is disabled.

### HILL START CONTROL

—with Hill Start Control<sup>OE</sup>

#### Display



Symbol **1** for Hill Start Control shows in the status field.

### Switching Hill Start Control on or off

- Switch on the ignition (▮▮▮ 45).
- Select SETUP (▮▮▮ 57).



- Repeatedly short-press button **1** or **2** until SET HSC is displayed.
- Long-press button **2** to call up SET HSC.
  - » The setting currently selected flashes.

- Short-press button **1** or **2** to change the setting.

The following settings are available:

- HSC ON: Hill Start Control is activated.
- HSC OFF: Hill Start Control is deactivated.
- Long-press button **2** to confirm the setting.
- Alternatively: Long-press button **1** to exit without saving the setting.
- Exit SETUP (▮▮▮ 57).

## Operating Hill Start Control Requirement

Vehicle stationary and upright, engine running. Hill Start Control is switched on.



### ATTENTION


#### Failure of Hill Start Control

Risk of accident

- Apply the brakes manually to hold the vehicle.



Hill Start Control is purely a comfort system to facilitate holding the machine and pulling way on uphill gradients and should not be confused with a parking brake.

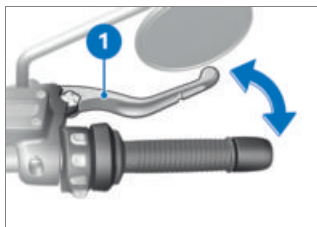

- Apply firm pressure to handbrake lever **1** or to the footbrake lever and then quickly release the lever.



is displayed.

» Hill Start Control is activated.

- To switch off Hill Start Control, operate handbrake lever **1** or the footbrake lever again.



disappears.

- Alternatively, ride off in 1st or 2nd gear.



On pullaway or when the reverser is activated, Hill Start Control is automatically deactivated.



disappears as soon as the brake is fully released.

- » Hill Start Control is deactivated.
- For more information on Hill Start Control, see the section entitled "Engineering details" (120).

## REVERSER

—with reverser<sup>OE</sup>

### General information

The following prerequisites must have been met to be able to use the reverser:

- Motorcycle at standstill.
- Engine running.
- Brake applied.
- Transmission in idle.
- Side stand has been retracted.
- Clutch is not disengaged.

## 72 OPERATION

Reverse without passenger.  
On uphill/downhill gradients the reverser cannot guarantee the vehicle is held, as would be the case if a gear were engaged.

The reverser cannot be used on gradients steeper than max 20 %.

### Activating the reverser



- Turn selector lever **1** to the **R** position.
  - » Gear indicator **2** switches from N to R.
  - » You can use the reverser as soon as the "R" indicator stops flashing.

### Using the reverser



- Release the brake.
- Press and hold starter button **1** to reverse.

### Automatic termination

Reversing is cancelled automatically:

- On excessive uphill/downhill gradients
  - In the event of obstructions
  - If the reversing motor has overheated
  - If the side stand has been extended
  - If the front brake is operated
- If reversing is cancelled, the "R" in the display flashes.

## Deactivating the reverser



- Turn selector lever **1** to the **F** position.

 Depending on the gradient of the roadway, tensions can build up in the drivetrain. The selector lever might be difficult to move.

- To relieve strain in the drivetrain, apply the front brake and compress the front suspension by pushing forward on the handlebars.
- Turn selector lever **1** to the **F** position.
- » Gear indicator **2** switches from R to N.

## HEATED GRIPS

—with heated grips<sup>OE</sup>

 The heating in the heated handlebar grips can be activated only when the engine is running.

 The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.

- Start the engine (➡ 95).



- Repeatedly press button **1** until desired heating stage **2** is displayed.

The following settings are available:



Heating off



Low heating power



Medium heating power




High heating power

## 74 OPERATION

- » High heating power is for heating the grips quickly: it is advisable to switch back to a lower heating power as soon as the grips are warm.
- » If you allow a certain length of time to pass without making further changes, the selected heating stage is saved and the grip-heating symbol disappears.

### SEATS


#### Removing passenger seat

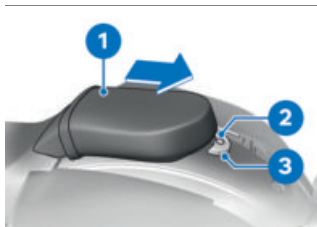

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Remove screw **2**.
- Remove holder **3**.
- Pull passenger seat **1** to the rear and remove.

#### Removing rider's seat

- Remove the passenger seat (➡ 74).

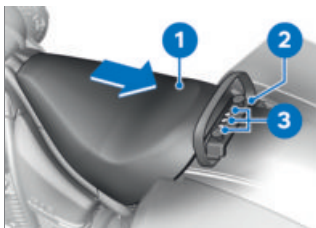


- Remove screws **3**.
- Remove retaining strap **2**.
- Pull rider's seat **1** to the rear and remove.

#### Installing rider's seat



- Insert rider's seat **1** into mount **4**.
- Manoeuvre rider's seat **1** into position at the rear and install grab strap **3** with screws **2**.
- Install the passenger seat (➡ 75).


## Installing passenger seat

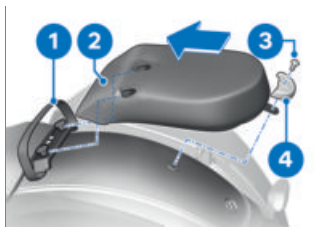


- Position passenger seat **2** in retainer **1**.
- Manoeuvre passenger seat **2** into position at rear and install holder **4** with screw **3**.

## WINDSCREEN

### Removing windscreen

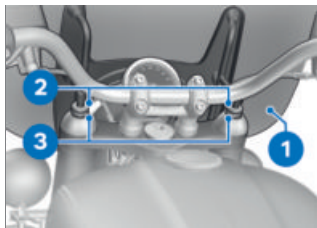


- Turn knurled nuts **2** on left and right counter-clockwise as far as they will go.
- Turn tapered nuts **3** on left and right counter-clockwise as far as they will go.
- » Windscreen **1** is loose.

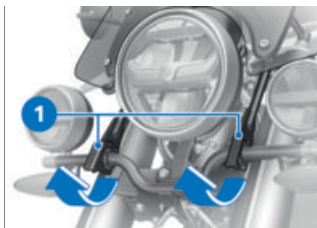

- Open retaining clips **1** on left and right.




- Tilt windscreen **1** forward and pull it out of retainers **2**.

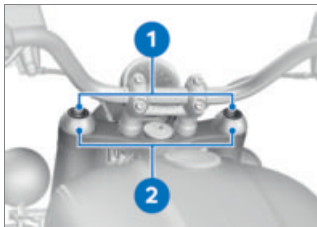

- Remove removable grommets **1** from spring forks **2** and put them in a safe place.

## 76 OPERATION


### Install the windscreen

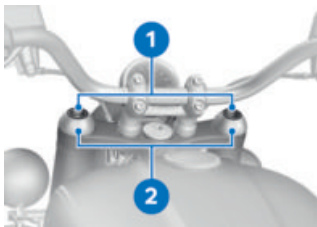


- Insert removable grommets **1** into spring forks **2**.



- Insert windscreen **1** with retaining clip **3** into retainer **2**.
- Tilt windscreen **1** to the rear.

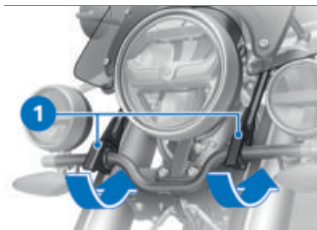

- Close retaining clips **1** on left and right.

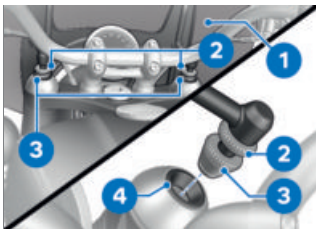

- Position windscreen **1** such that tapered nuts **3** on left and right are seated in removable grommets **4**.
- Turn tapered nuts **3** on left and right clockwise and check that windscreen **1** is correctly seated.

Windscreen **1** and retaining clips are loose in anchorage:

- Turn tapered nuts **3** on left and right farther clockwise.
  - » Windscreen **1** is fixed in position.
- » Retaining clips cannot be opened farther.
- Turn knurled nuts **2** on left and right clockwise as far as they will go.
  - » Windscreen is fully installed.

## SOFTBAGS

### Maximum payload

Note the maximum payload.




Payload per Softbag

max 7.5 kg

### Removing softbags

 Each softbag is secured to the rear frame with 4 bushes. The bushes have to be re-used for securing the rear wheel cover to the rear frame.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Comply with the notes on microencapsulated screws in the section on preventive maintenance (→ 124).

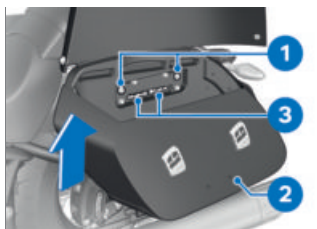

- Remove screws **1**.
- Lift softbag **2** up to remove.




### WARNING

**Installation is incorrect, screws are too long**

Risk of accident due to tyre damage

- After removal of the softbags use only the blanking screws, which are shorter, to secure the rear wheel cover to the rear frame.

- Remove blanking screws **3** from softbag **2**.

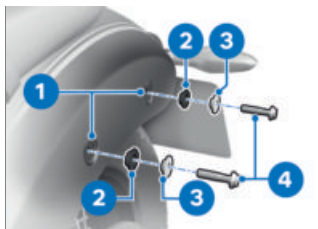

- Install blanking screws **4** with bushes **3** and **2** in rear frame **1**.



Threaded fastener left/right holder, softbag to main frame

M8 x 25


Thread-locking compound: micro-encapsulated

19 Nm


## 78 OPERATION

### Install the softbags

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Comply with the notes on microencapsulated screws in the section on preventive maintenance (► 124).

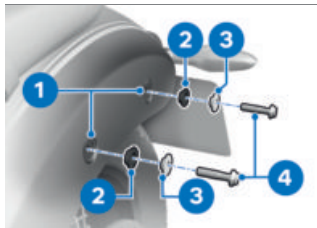

- Remove blanking screws **4** with bushes **3** and **2** from rear frame **1**.

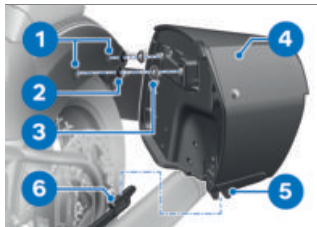

- From above, lower softbag **4** with retaining lug **5** into retainer **6**.
- Position softbag **4** with bushes **3** and **2** on rear frame **1**.



- Secure softbag **2** with screws **1**.



It is not permissible to use the short blanking screws to secure the softbags.



Screw connection  
socket soft bag holder  
to rear frame

M8 x 45

Thread-locking compound:  
micro-encapsulated

19 Nm

- Click the blanking screws into clips **3** to keep them safe for re-use.



# ADJUSTMENT

05

---

|                        |           |
|------------------------|-----------|
| <b>MIRRORS</b>         | <b>82</b> |
| <b>HEADLIGHT</b>       | <b>82</b> |
| <b>CLUTCH</b>          | <b>84</b> |
| <b>BRAKES</b>          | <b>84</b> |
| <b>SPRING PRELOAD</b>  | <b>85</b> |
| <b>GEARSHIFT LEVER</b> | <b>86</b> |

## 82 ADJUSTMENT

### MIRRORS


#### Adjusting mirrors



- Turn the mirror to the appropriate position.

 If the mirror's range of adjustment is not enough to permit correct alignment, the position of the mirror arm has to be changed accordingly.

#### Adjusting mirror arm

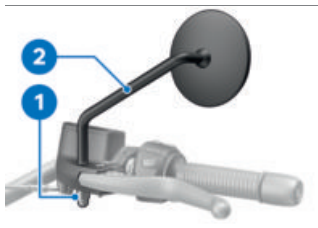

- Use the tool from the on-board toolkit to slacken nut **1**.
- Turn mirror arm **2** to the appropriate position.
- Tighten nut **1**, while holding mirror arm **2** to ensure that

it does not move out of position.



Mirror to handlebar fitting

M8

12 Nm

### HEADLIGHT

#### Headlight beam throw and spring preload

Headlight beam throw is generally kept constant when spring preload is adjusted to suit load.

However, a spring preload adjustment might not suffice if the motorcycle is very heavily loaded. Under these circumstances, headlight beam throw has to be adjusted to suit the weight carried by the motorcycle.


 If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

## Adjusting headlight beam throw



If, for a high load, the adjustment of the spring pre-load is no longer sufficient not to dazzle oncoming traffic:

- Loosen nut **3**.
- Loosen nut **2**.
- » Headlight **1** can be tilted through its range of adjustment.
- Adjust beam throw by tilting headlight **1** slightly about its horizontal axis.
- Secure the headlight in position by tightening nut **2**.
- Tighten nut **3**.

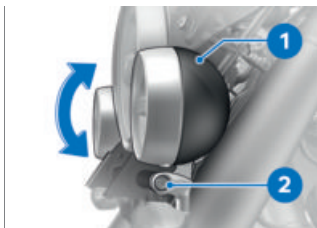

- Slacken screws **2** on left and right.

» Auxiliary headlights **1** can be tilted through their range of adjustment.

- Adjust beam throw by tilting auxiliary headlights **1** slightly about the horizontal axis.
- Tighten screws **2** on left and right.

When the motorcycle is again ridden with a lower load:

- Have the basic settings of the headlight restored by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## 84 ADJUSTMENT

### CLUTCH

#### Adjusting clutch lever



#### WARNING

#### Relocated clutch-fluid reservoir

Air in the clutch system

- Do not turn the handlebars or the handlebar fitting on the handlebar.

the clutch lever is pushed forward.

» Adjustment options:

- From position 1: Narrowest span between handlebar grip and clutch lever
- To position 5: Widest span between handlebar grip and clutch lever



#### WARNING

#### Adjusting the clutch lever while riding

Risk of accident

- Adjust the clutch lever only when the motorcycle is at a standstill.

### BRAKES

#### Adjusting handbrake lever



#### WARNING

#### Relocated brake fluid tank

Air in the brake system

- Do not turn the handlebars or the handlebar fitting on the handlebar.



#### WARNING

#### Adjusting the handbrake lever while riding

Risk of accident

- Do not attempt to adjust the handbrake lever unless the motorcycle is at a standstill.



- Applying light pressure from behind, turn adjuster knob **1** to the desired position.



The adjusting screw can be turned more easily if



- Applying light pressure from behind, turn adjuster knob **1** to the desired position.

 The adjusting screw is easier to turn when the handbrake lever is pushed forward.

» Adjustment options:

- From position 1: Narrowest span between handlebar grip and handbrake lever
- To position 5: Widest span between handlebar grip and handbrake lever


## SPRING PRELOAD

### Adjustment

It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring preload when the motorcycle is heavily loaded and reduce spring preload accordingly when the motorcycle is lightly loaded.

### Adjusting spring preload for rear wheel

- Remove the side trim panel ( 125).

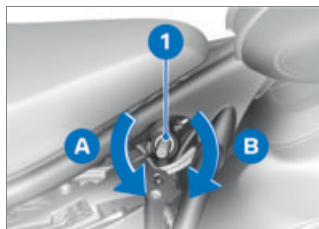

### ATTENTION

#### Incorrect setting

Damage to adjustment mechanism

- Do not exceed the adjustment range of max. 26 turns (to the stop).
- To increase spring preload, turn hexagon head **1** with the tool from the on-board toolkit clockwise in direction **B**.
- To reduce spring preload, turn hexagon head **1** with the tool from the on-board toolkit counter-clockwise in direction **A**.

## 86 ADJUSTMENT



Basic setting of the rear spring preload

Turn the hexagon head as far as it will go counter-clockwise, then back it off 8 turns clockwise (with full load of fuel, with rider weighing approx. 100 kg).

Turn the hexagon head as far as it will go counter-clockwise, then back it off 12 turns clockwise (One-up with luggage approx. 120 kg).

Turn the hexagon head as far as it will go counter-clockwise, then back it off 24 turns clockwise (Two-up with luggage approx. 180 kg).

–If the load differs from the base settings, increase spring preload 2 full turns for every 10 kg of extra weight.

- Install the side trim panel (125).

### GEARSHIFT LEVER

#### Adjusting gearshift lever




#### ATTENTION

##### Unintentional operation of the gearshift lever

Damage to the gearbox

- Check that the gearshift lever is in the correct position.
- Make sure that the gearshift lever is under no load except when gearshifting is in progress.

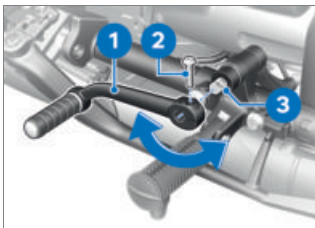

- Remove screw **2**.
- Disengage gearshift lever **1** from gearshift shaft **3**.
- Hold gearshift lever **1** in the desired position relative to the gearshift shaft and push it on to gearshift shaft **3**.
- Install screw **2**.



Gearshift lever to selector shaft

M6 x 25



Gearshift lever to selector shaft

8 Nm

## Adjusting shift rocker

—with footboard<sup>OE</sup>




### ATTENTION


#### Unintentional operation of the gearshift lever

Damage to the gearbox

- Check that the gearshift lever is in the correct position.
- Make sure that the gearshift lever is under no load except when gearshifting is in progress.

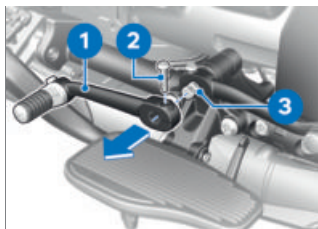

- Remove screw **2** and disengage front gearshift lever **1** from gearshift shaft **3**.

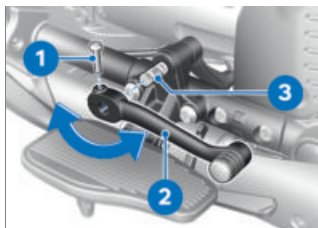

- Remove screw **1**.
- Disengage rear gearshift lever **2** from gearshift shaft **3**.
- Hold rear gearshift lever **2** in the desired position relative to the gearshift shaft and push it on to gearshift shaft **3**.
- Check the freedom of movement of the rear gearshift lever.

If the gearshift lever touches the exhaust cover when operated:

- Correct the setting of the rear gearshift lever.
- Install screw **1**.




Gearshift lever to selector shaft

M6 x 25

8 Nm

## 88 ADJUSTMENT

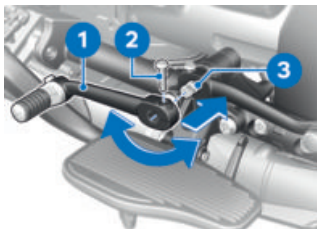


- Hold front gearshift lever **1** in the desired position relative to the gearshift shaft and push it on to gearshift shaft **3**.
- Install screw **2**.



Gearshift lever to selector shaft

M6 x 25

8 Nm

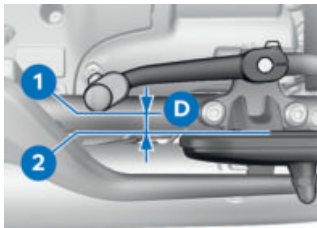

- Note minimum distance **D** between lower edge of peg **1** and upper edge of footboard **2** of min 25 mm.
- Adjust the peg (► 88).

### Adjusting peg

—with footboard<sup>OE</sup>




#### ATTENTION

#### Unintentional operation of the gearshift lever

Damage to the gearbox

- Check that the gearshift lever is in the correct position.
- Make sure that the gearshift lever is under no load except when gearshifting is in progress.

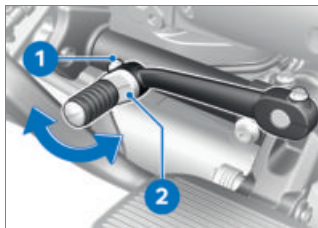


- Slacken screw **1**.
- Turn peg **2** to the desired position.
- Tighten screw **1**.



Foot plate eccentric to gearshift lever

M6 x 25

8 Nm

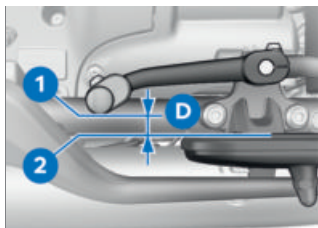

- Note minimum distance **D** between lower edge of peg **1** and upper edge of footboard **2** of min 25 mm.

**RIDING**

**06**

---

|                                               |            |
|-----------------------------------------------|------------|
| <b>SAFETY INFORMATION</b>                     | <b>92</b>  |
| <b>REGULAR CHECK</b>                          | <b>94</b>  |
| <b>STARTING</b>                               | <b>95</b>  |
| <b>RUNNING IN</b>                             | <b>98</b>  |
| <b>BRAKES</b>                                 | <b>99</b>  |
| <b>SHIFTING WITH SHIFT ROCKER</b>             | <b>101</b> |
| <b>PARKING YOUR MOTORCYCLE</b>                | <b>101</b> |
| <b>REFUELLING</b>                             | <b>102</b> |
| <b>SECURING MOTORCYCLE FOR TRANSPORTATION</b> | <b>104</b> |

## SAFETY INFORMATION

### Rider's equipment

Do not ride without the correct clothing! Always wear

- Helmet
- Suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad retailer will be happy to advise you on the correct clothing for every purpose.



### WARNING

**Loose textiles, items of luggage or straps snagged by open rotating parts of the vehicle (wheels, drive shaft)**

Risk of accident

- Make sure that loosely worn or carried textiles cannot be snagged by openly rotating parts of the vehicle.
- Keep all items of luggage and straps well clear of openly rotating parts of the vehicle.

## Loading correctly



### WARNING

**Handling adversely affected by overloading and imbalanced loads**

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.

- Adjust spring preload and tyre pressures to suit total weight.
- Pack heavy items at the bottom and toward the inboard side.



Payload per Softbag

max 7.5 kg

### Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle, e.g.:

- Spring-strut and shock-absorber system not set up correctly
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

### Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



#### WARNING

##### **Exhaust gases adversely affecting health**

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.



#### WARNING

##### **Inhalation of harmful vapours**

Health hazard

- Do not inhale vapours from operating fluid and plastics.
- Use the vehicle only outdoors.

### Risk of burning



#### CAUTION

##### **Engine and exhaust system become very hot when the vehicle is in use**

Risk of burning

- Always wear helmet, suit, gloves and boots.
- While riding and when you park the vehicle, make sure that no-one and no objects come into contact with the hot engine and exhaust system.

### Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry.
- Do not attempt to start or run the engine with a spark-plug cap disconnected.
- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.



### ATTENTION

#### Unburned fuel in catalytic converter

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.

### Risk of overheating



### ATTENTION

#### Engine running for prolonged period with vehicle at standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.

### Tampering



### ATTENTION

#### Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

- Do not tamper with the vehicle in any way that could result in tuned performance.

### REGULAR CHECK

#### Comply with checklist

At regular intervals, use the checklist below to check your motorcycle.

#### When load status changes:

- Adjust the spring preload for the rear wheel (► 85).

#### Always before riding off

- Unlock the steering lock (► 44).
- Check operation of the brake system (► 130).
- Check operation of the lights and signalling equipment.
- Check operation of the clutch (► 134).
- Check the tyre tread depth (► 135).

- Check the tyre pressures (▮▮▮ 134).
- Check security of luggage.

### Every 3rd refuelling stop

- Check the engine oil level (▮▮▮ 127).
- Check the brake pad thickness, front brakes (▮▮▮ 130).
- Check the brake pad thickness, rear brakes (▮▮▮ 131).
- Check the brake-fluid level, front brakes (▮▮▮ 132).
- Check the brake-fluid level, rear brakes (▮▮▮ 133).

## STARTING

### Starting engine

- Switch on the ignition (▮▮▮ 45).
  - » Pre-Ride-Check is performed. (▮▮▮ 96)
  - » ABS self-diagnosis is in progress. (▮▮▮ 96)
  - » ASC self-diagnosis is performed. (▮▮▮ 97)
- Pull the clutch lever.

 You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.

 To ensure rapid operational readiness of the catalytic converter, idle speed is increased for a short time after engine start.

 To ensure starting capability at high engine temperatures, idle speed after engine start is increased for a brief period.



- Press starter button 1.

 The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.

See the subsection on jump starting in "Maintenance" for more details.

- » The engine starts.
- » Consult the troubleshooting chart below if the engine refuses to start. (▮▮▮ 174)

## 96 RIDING

### Pre-Ride-Check

When the ignition is switched, on the instrument cluster carries out a test of the instruments, the indicator and warning lights and the display, the "Pre-Ride-Check". The test is aborted if you start the engine before it completes.

#### Phase 1



All indicator and warning lights **2** are switched on.

#### Phase 2

Speedometer needle **3** swings to the maximum-speed position.

The drive malfunction indicator lamp goes out.

#### Phase 3

Speedometer needle **3** moves to the zero position.

The indicator and warning lights **2** go out or assume operational status, as applicable.

Active warnings and service-due messages appear in the display **1**.

After active warnings and service-due messages have been acknowledged, the on-board computer appears in the display **1**.

If the needle did not move, an indicator or warning light did not show or segments in the display failed to light up:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### ABS self-diagnosis

BMW Motorrad Integral ABS performs self-diagnosis to ensure its operability. Self-diagnosis starts automatically when you switch on the ignition.

#### Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



flashes.

## Phase 2

- » Test of the wheel-speed sensors as the vehicle pulls away from rest.



flashes.

## ABS self-diagnosis completed

- » The ABS indicator and warning light goes out.



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride.  
Bear in mind that neither the ABS function nor the integral braking function is available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## ASC self-diagnosis

BMW Motorrad ASC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

## Phase 1

- » Test of the diagnosable system components with the vehicle at a standstill.



flashes.

## Phase 2

- » Pullaway test of the system components with diagnostic capability.



flashes.

## ASC self-diagnosis completed

- » The ASC indicator and warning light goes out.
- Observe all the indicator and warning lights.



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

## 98 RIDING

If an indicator showing an ASC fault appears when ASC self-diagnosis completes:

- You can continue to ride.  
Bear in mind that the ASC function and dynamic engine brake control are not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### RUNNING IN

#### Engine

- Until the running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads.
- Bear in mind the load condition when running in.



Load condition for running in

No full load (Odometer reading max. 1000 km)

- Comply with the running-in speeds.



Running-in speed

max 4000 min<sup>-1</sup> (Odometer reading max. 1000 km)

- Note the mileage after which the running-in check should be carried out.



Running-in check

500...1200 km

#### Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.



#### WARNING

##### New brake pads

Longer stopping distance, risk of accident

- Apply the brakes in good time.

#### Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. Only once the surface

has been roughened can the tyres achieve maximum grip.



### **WARNING**

#### **New tyres losing grip on wet roads and at extreme bank angles**

Risk of accident

- Ride carefully and avoid extremely sharp inclines.

## **BRAKES**

### **How can stopping distance be minimised?**

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The higher the wheel load, the more braking force can be transmitted without the wheel locking. To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time. In the extreme sudden-stop braking

situations that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road.

BMW Motorrad Integral ABS prevents the front wheel from locking up.



### **WARNING**

#### **Rear wheel lift due to severe braking**

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.

### **Emergency braking**

If you brake sharply from a speed in excess of >50 km/h, the brake light flashes rapidly as a warning for road users behind you.

If you brake until your speed is less than <15 km/h, the hazard warning lights start to flash

as well. The hazard warning lights switch off automatically as soon as you start to accelerate and vehicle speed reaches 20 km/h.

## Descending mountain passes



### WARNING

#### **Braking mostly with the rear brake on mountain descents**

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.



### DANGER

#### **Riding with overheated brakes**

Risk of accident due to failure of brakes

- Adapt your riding style accordingly.
- Avoid frequent braking by using the engine brake.



### WARNING

#### **Failure to observe service intervals**

Risk of accident

- Observe the valid service intervals for brakes.

## **Wet and dirty brakes**

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.

**WARNING**

**Wetness and dirt result in diminished braking efficiency**

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.


## SHIFTING WITH SHIFT ROCKER

—with footboard<sup>OE</sup>

### Operating shift rocker



With footboards installed, gearshifts are performed by means of a shift rocker.

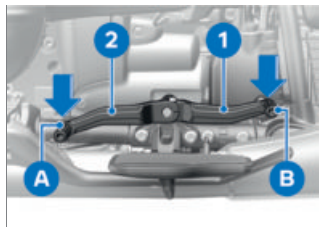

- Downshifting: Press gearshift lever **2** down at position **A**.

- Upshifting: Press gearshift lever **1** down at position **B**.

## PARKING YOUR MOTORCYCLE

### Side stand

- Switch off the engine.

**ATTENTION**

### Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.

**ATTENTION**

### Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.

- Extend the side stand and prop the motorcycle on the stand.
- If the camber of the roadway permits, turn the handlebars all the way to the left.

## 102 RIDING

- On a gradient, the motorcycle should always face uphill; select 1st gear.

### REFUELLING

#### Fuel grade

#### Requirement

For optimum fuel consumption, fuel should be sulphur-free or as low-sulphur as possible.



#### ATTENTION

#### Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron).

- Observe the maximum ethanol content of the fuel.



Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.



Recommended fuel grade



Super unleaded (max. 15% ethanol, E15)



95 ROZ/RON  
90 AKI



Alternative fuel grade



Regular, unleaded (max. 15% ethanol, E15)



91 ROZ/RON  
87 AKI

» Look for these symbols on the fuel filler cap and on the fuel pump:



### Refuelling



#### WARNING

#### Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.

## ! ATTENTION

### Component damage

Component damage caused by overfilled fuel tank


- Overfilling the fuel tank will cause excess fuel to penetrate the carbon canister and cause component damage.
- Fill the fuel tank up to the lower edge of the filler neck only.

## ! ATTENTION

### Wetting of plastic surfaces by fuel


Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.
- Make sure the ground is level and firm and place the motorcycle on its stand.

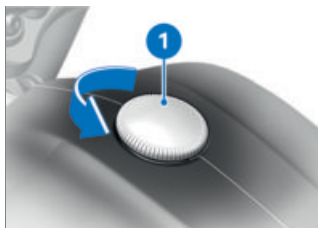


- Turn filler cap of fuel tank **1** counter-clockwise and remove.

—with lockable fuel filler cap<sup>OE</sup>

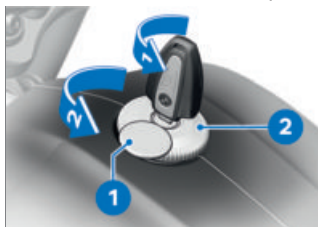

- Swivel protective cap **1** aside.
- Use the ignition key to unlock filler cap of fuel tank **2** by turning it counter-clockwise.
- Turn filler cap of fuel tank **2** counter-clockwise and remove.◁

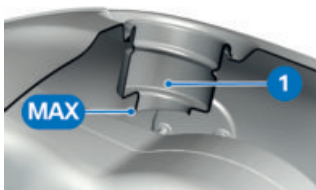

- Refuel with fuel of the grade stated; do not fill the tank past the bottom edge of filler neck **1**.

 When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and the fuel reserve indicator light is switched off.

 The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.



Usable fuel capacity

approx. 16 l



Fuel reserve

approx. 4 l

- Set the filler cap of the fuel tank in position and turn it clockwise to close.
- with lockable fuel filler cap<sup>OE</sup>
- Use the ignition key to lock the filler cap of the fuel tank by turning it clockwise.
- Remove the ignition key and pivot the protective cap closed over the fuel tank lock.



## SECURING MOTORCYCLE FOR TRANSPORTATION

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.



### ATTENTION

#### **Vehicle topples to side when being lifted on to stand**

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.
- Push the motorcycle onto the transportation flat and hold it in position: do not place it on the side stand.
- Have a helper hold the motorcycle to make sure that it cannot topple.




### ATTENTION

#### **Trapping of components**

Component damage

- Do not trap components such as brake lines or cable legs.
- Run the strap over the steering head and tighten it down.

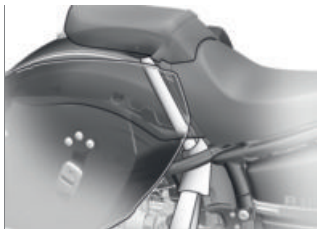

- Pass the straps on left and right through the rear wheel swinging arm first.
- Pass the straps on left and right up between rear-wheel cover and rear frame.
- Loop the straps on left and right round the rear frame

## 106 RIDING

and pass them down through the rear wheel swinging arm.

- Uniformly tighten all the straps.
- » The vehicle's springs are compressed.



# ENGINEERING DETAILS

07

---

|                                          |            |
|------------------------------------------|------------|
| <b>GENERAL NOTES</b>                     | <b>110</b> |
| <b>GENERAL DRIVE FUNCTIONS</b>           | <b>110</b> |
| <b>ANTILOCK BRAKE SYSTEM (ABS)</b>       | <b>110</b> |
| <b>AUTOMATIC STABILITY CONTROL (ASC)</b> | <b>114</b> |
| <b>RIDING MODE</b>                       | <b>115</b> |
| <b>DYNAMIC ENGINE BRAKE CONTROL</b>      | <b>116</b> |
| <b>DYNAMIC BRAKE CONTROL</b>             | <b>117</b> |
| <b>TYRE PRESSURE CONTROL (RDC)</b>       | <b>118</b> |
| <b>HILL START CONTROL</b>                | <b>119</b> |
| <b>ADAPTIVE HEADLIGHT</b>                | <b>120</b> |

---

## GENERAL NOTES

To find out more about engineering, go to

**[bmw-motorrad.com/technik](http://bmw-motorrad.com/technik)**.

---

## GENERAL DRIVE FUNCTIONS

### Gearshift speed control

When the clutch is disengaged and the throttle grip closed while the vehicle is on the move, engine speed does not immediately drop to idle speed. Gearshift speed control keeps engine speed above idle speed for several seconds, reducing the rpm difference between engine and transmission when the clutch re-engages. The tilting moment accompanying the gear shift is reduced and the shifting comfort experienced by the rider is increased.

Gearshift speed control is active in RAIN and ROLL riding modes.

### Maximum rpm limitation at standstill

To prevent unwanted forward crawl away from a standstill, under the following conditions engine speed is limited to a maximum of 3600 rpm:

- Gear engaged.
- Clutch lever pulled.
- Vehicle speed < 3 km/h.

### Speed increase when vehicle rolling forward in neutral

If the transmission is shifted into neutral when the vehicle is travelling at a speed in excess of 30 km/h, engine speed does not immediately drop to idle speed. Engine speed remains elevated above idle for a smoother rpm match when the transmission is shifted into first gear. This reduces the load on the rear-wheel drive when the gearshift takes place and increases the shifting comfort experienced by the rider.

---

## ANTILOCK BRAKE SYSTEM (ABS)

### Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The foot-brake lever acts only on the rear brake.

While the brakes are slowing the motorcycle, the BMW Motorrad Integral ABS adapts braking-force distribution between front and

rear brakes to suit the load on the motorcycle.



## ATTENTION

### **Attempted burn-out despite integral braking function**

Damage to rear brake and clutch

- Do not attempt a burn-out unless the vehicle is at a complete standstill. A burn-out is not use of the vehicle as intended by the manufacturer and can, therefore, lead to fault memory entries.

### **How does ABS work?**

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean and dry asphalt surface. The lower the coefficient of friction, the longer the stopping distance.

If the rider increases the brake pressure to the extent that the brake force exceeds the maximum transferable limit, the wheels start to lock and the vehicle loses its directional stability; a fall is imminent. Before

this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force. The wheels continue to turn and the driving stability is retained irrespective of the road condition.

### **What are the effects of surface irregularities?**

Surface irregularities can cause the wheels to lose contact temporarily with the road surface. If this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the ABS must assume an extremely low coefficient of friction, so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

## **What feedback does the rider receive from the BMW Motorrad Integral ABS?**

If the ABS system has to reduce braking force on account of the circumstances described above, vibration is perceptible through the handbrake lever. When the handbrake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the handbrake lever is pulled, the brake pressure built up beforehand is perceptible as counter-pressure sooner than is the case when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

### **Rear wheel lift**

Under very severe and sudden deceleration, however, it is possible that the BMW Motorrad ABS will be unable to prevent the rear wheel from lifting clear of the ground. If this happens the outcome can be a highsidings situation in which the motorcycle can flip over.



### **WARNING**

#### **Rear wheel lift due to severe braking**

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.

## **What is the design baseline for BMW Motorrad ABS?**

Within the limits imposed by physics, the BMW Motorrad ABS ensures directional stability on any surface.

At speeds above min 4 km/h, within the limits imposed by physics the BMW Motorrad ABS can ensure directional stability on any surface. Limitations inherent to the design principle mean that at lower speeds the BMW Motorrad ABS cannot provide optimum assistance on all surfaces.

### **Special situations**

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy

period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued. In addition to problems with the BMW Motorrad ABS, exceptional riding conditions can lead to a fault message being issued:

- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending on a loose or slippery surface.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

## How important is regular maintenance?



### WARNING

#### **Brake system not regularly serviced**

Risk of accident

- In order to ensure that the BMW Motorrad ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.

#### **Safety reserves**

The potentially shorter braking distances which BMW Motorrad ABS permits must not be used as an excuse for careless riding. The system is primarily a means of ensuring a safety margin in genuine emergencies.

**WARNING****Braking when cornering**

Risk of accident despite ABS

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional margin of safety offered by this system.

**AUTOMATIC STABILITY CONTROL (ASC)****How does ASC work?**

The BMW Motorrad ASC system compares the speed of rotation of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine management system intervenes and adapts engine torque accordingly.

**Special situations**

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a

perceptible lag in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared as one means of detecting the rear wheel's incipient tendency to spin or slip sideways. If the system registers implausible values for a lengthy period the ASC function is deactivated for safety reasons and an ASC fault message is issued. Self-diagnosis has to complete before fault messages can be issued. The BMW Motorrad ASC can switch off automatically under the exceptional riding conditions outlined below.

**Exceptional riding conditions:**

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie) with ASC deactivated
- Rear wheel rotating with the vehicle held stationary by application of the front brake (burn-out)
- Warming up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged

Accelerating the motorcycle to a speed in excess of 5 km/h after switching the ignition off and then on again reactivates the ASC.

If the front wheel lifts clear of the ground under severe acceleration, the ASC reduces engine torque until the front wheel regains contact with the ground.

Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

### **Slippery surface**

On very loose surfaces (for example sand or snow), the ASC's attempts to control propulsive power might reduce drive to the extent that the rear wheel no longer turns.

Under these circumstances, BMW Motorrad recommends temporarily switching off ASC.

Bear in mind that the rear wheel will spin on the loose surface and close the throttle in good time before you reach a firm surface.

Then reactivate ASC.

---

## **RIDING MODE**

### **Selection**

To adjust the motorcycle to the road condition and the desired driving experience, the following riding modes can be selected:

- RAIN
- ROLL
- ROCK

There are matched settings for the ASC, dynamic engine brake control and engine characteristic for each riding mode. In the ROCK riding mode, the engine has a very spirited idle that makes a clear statement about the potency of the opposed-twin engine even when the vehicle is just ticking over at a standstill. The direct throttle response ensures unfiltered power output and renders the engine's dynamism impressively perceptible.

### **Throttle response**

- In RAIN riding mode: Gentle throttle response.
- In ROLL riding mode: Optimum throttle response.
- In ROCK riding mode: Direct throttle response.

## **Automatic Stability Control (ASC)**

- In the RAIN riding mode: maximum stability on wet roads. There may be reduced acceleration on dry roads.
- In the ROLL riding mode: high performance on dry roads. In the event of poor road conditions, optimum stability cannot be guaranteed.
- In ROCK riding mode: Maximum performance. On a poor road surface or with unsuitable tyres, stability might be impaired.

## **Mode changes**

The riding mode can be selected while the vehicle is stationary with the ignition on. Under the following precondition, it is also possible to change modes while riding:

- No drive torque on the rear wheel.
- No brake pressure in the brake system.

The following steps must be taken to change the riding mode:

- Close the throttle twistgrip.
- Release the brake levers.
- Deactivate the cruise control.

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state. The selection menu does not disappear from the display until the mode change has taken place.

---

## **DYNAMIC ENGINE BRAKE CONTROL**

### **How does dynamic engine brake control work?**

The purpose of dynamic engine brake control is to prevent the unstable riding states that can be produced by excessive engine braking moment acting on the rear wheel. Depending on the road condition and riding dynamic, excessive braking torque can produce a sharp rise in rear-wheel slip and impair directional stability. Dynamic engine brake control limits this slip at the rear wheel to a safe, mode-dependent regulated slip.

### **Causes for excessive slip at the rear wheel:**

- Riding with engine overrun on a surface with a low coefficient of friction (e.g. wet leaves).
- Rear-wheel hop when rider downshifts.
- Sharp braking during sporty riding.

In the same way as BMW Motorrad ASC, dynamic engine brake control compares the wheel circumferential velocities of the front and rear wheels. Dynamic engine brake control uses this differential to compute slip as a measure of the reserve of stability available at the rear wheel.

If slip overshoots the applicable limit, the throttle valves are opened very slightly to increase engine torque. Slip is reduced and the vehicle is stabilised.

### **Effect of dynamic engine brake control**

- In the RAIN and ROLL riding modes: Maximum stability
- In the ROCK riding mode: Compared with the RAIN and ROLL riding modes, reduced intervention

---

## **DYNAMIC BRAKE CONTROL**

### **How Dynamic Brake Control works**

The Dynamic Brake Control function assists the rider in emergency braking situations.

### **Detection of emergency braking**

- Sudden, sharp application of the front brake is interpreted as emergency braking.

### **Behaviour in emergency braking**

- If emergency braking occurs at a speed in excess of 10 km/h, the ABS function is further assisted by Dynamic Brake Control.
- When partially integral braking at a high brake pressure gradient is initiated, Dynamic Brake Control increases the integral brake pressure at the rear wheel. The stopping distance shortens and controlled braking is possible.

### **Behaviour during accidental actuation of the throttle grip**

- If the throttle is accidentally opened (throttle grip position > 5 %) during emergency braking, Dynamic Brake Control ensures the desired braking effect by ignoring actu-

## 118 ENGINEERING DETAILS

ation of the throttle grip. The effectiveness of emergency braking is ensured.

- If the throttle is closed (throttle grip position < 5 %) while Dynamic Brake Control is in action, the engine torque requested by the ABS brake system is restored.
- If emergency braking ceases and the rider still has not changed the position of the throttle grip, Dynamic Brake Control steadily ramps engine torque back to the rider's requested level.

### TYRE PRESSURE CONTROL (RDC)

- with tyre pressure control (RDC)<sup>OE</sup>

#### Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit. Each sensor has a centrifugal-force tripswitch that does not enable transmission of the measured values until the motorcycle has accelerated to a defined minimum speed for the first time.



Minimum speed for transmission of the RDC measured values:

min 30 km/h

The display shows -- for each tyre until the tyre-pressure signal is received for the first time. The sensors continue to transmit the measured-value signals for some time after the vehicle comes to a stop.



Time for transmission of measured values after vehicle comes to a stop:

min 15 min

An error message is issued if wheels without sensors are fitted to a vehicle equipped with an RDC control unit.

#### Tyre pressure ranges

The RDC control unit distinguishes between three tyre pressure ranges matched to the vehicle:

- Tyre pressure within permitted tolerance.
- Tyre pressure close to limit of permitted tolerance.
- Tyre pressure outside permitted tolerance.

### Temperature compensation

Tyre pressure is a temperature-sensitive variable: pressure increases as tyre-air temperature rises and decreases as tyre-air temperature drops. Tyre air temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.



The tyre-pressure readings in the multifunction display are temperature-compensated and are always referenced to the following tyre-air temperature:

20 °C

The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre-air pressure. As a result, the values displayed there usually do not correspond to the values displayed in the display.

### Pressure adaptation

Compare the RDC value on the display with the value in the table on the back cover of the rider's manual. Then use the air-line gauge at a service station to compensate for the difference between the RDC reading and the value in the table.



Example

According to the operating instructions, the tyre pressure should be:

2.5 bar

The following value is shown in the display:

2.3 bar

So pressure is low by:

0.2 bar

The gauge on the air line shows:

2.4 bar

You must now increase tyre pressure until the value is:

2.6 bar

### HILL START CONTROL

—with Hill Start Control<sup>OE</sup>

## Hill Start Control function

Hill Start Control is a pullaway assistant that operates on the partially integral ABS system to prevent the vehicle from rolling back on a gradient, without the rider having to keep pressure applied to the brake lever. When Hill Start Control is activated, pressure is built up in the rear brake system to keep the machine at a standstill on a gradient.

### Behaviour when the motorcycle rolls or slips

- If the vehicle starts to roll while Hill Start Control is active, brake pressure is increased.
- If the rear wheel slips, the brake is released again after approx. 1 m. This prevents the vehicle slipping with a locked rear wheel, for example.

### Brake release when engine is stopped or after time-out

Hill Start Control is deactivated if the rider stops the engine by hitting the emergency-off switch (kill switch) or when the side stand is extended, or after time-out (10 minutes).

In addition to the indicator and warning lights, the rider should

be made aware that Hill Start Control has been deactivated by the following behaviour:

### Brake warning jolt

- The brake is released briefly and reactivated immediately.
- This creates a jolt which the rider feels.
- The ABS brake system with partially integral function sets a speed of approx. 1-2 km/h.
- The rider must brake the motorcycle manually.
- After two minutes, or when the brake is actuated, Hill Start Control is completely deactivated.



The holding pressure is released immediately without a brake warning jolt as soon as the ignition is switched off.

---

## ADAPTIVE HEADLIGHT

-with adaptive head light<sup>OE</sup>

### Function

In addition to the bulbs for low beam, high beam and daytime riding light, or side light, the headlight has two separate LED elements complete with their own reflectors. The LED elements are activated as a function of bank angle in addition to the low-beam headlight, en-

abling the headlight to illuminate the inside of the bend as the motorcycle banks for cornering. The adaptive cornering headlight is optimised for bank angles up to 25 °.

The adaptive cornering headlight is activated under the following conditions:

- Bank angle is more than 7 °.
- Speed is higher than 10 km/h.
- The low-beam headlight is switched on.

# MAINTENANCE

08

---

|                             |            |
|-----------------------------|------------|
| <b>GENERAL NOTES</b>        | <b>124</b> |
| <b>TOOLKIT</b>              | <b>124</b> |
| <b>SIDE PANEL</b>           | <b>125</b> |
| <b>FAIRING BRACKET</b>      | <b>125</b> |
| <b>FRONT-WHEEL STAND</b>    | <b>127</b> |
| <b>REAR-WHEEL STAND</b>     | <b>127</b> |
| <b>ENGINE OIL</b>           | <b>127</b> |
| <b>BRAKE SYSTEM</b>         | <b>130</b> |
| <b>CLUTCH</b>               | <b>134</b> |
| <b>TYRES</b>                | <b>134</b> |
| <b>WHEEL RIMS</b>           | <b>136</b> |
| <b>WHEELS</b>               | <b>136</b> |
| <b>SILENCER</b>             | <b>146</b> |
| <b>LIGHTING</b>             | <b>147</b> |
| <b>JUMP-STARTING</b>        | <b>147</b> |
| <b>BATTERY</b>              | <b>149</b> |
| <b>FUSES</b>                | <b>154</b> |
| <b>DIAGNOSTIC CONNECTOR</b> | <b>155</b> |

## 124 MAINTENANCE

### GENERAL NOTES

The Maintenance chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

### Microencapsulated screws


The microencapsulation is a chemical thread-locker. An adhesive compound creates a secure connection between bolt and nut or between screw and component. Consequently, microencapsulated screws are for once-only use and are not intended for re-installation after being slackened.

After removal of the screw, clean the internal thread to remove all traces of thread-locking compound. Always use new microencapsulated screws when re-assembling. Consequently, prior to disassembly make sure that you have suitable tools for cleaning the threads and a new replacement for each screw to be removed. If the job is not done correctly there is no guaran-

tee that the screw will remain secure, which means that you would be putting yourself at risk!

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad retailer.

### TOOLKIT

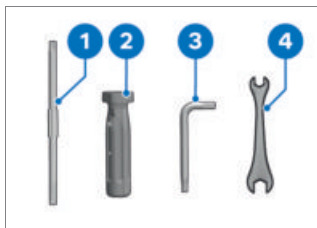

- 1** Reversible screwdriver blade  
Slotted bit and Torx T25  
–Replace the fuses  
(➡ 154).
- 2** Screwdriver handle  
–Top up the engine oil  
(➡ 128).  
–Use with screwdriver insert
- 3** Torx wrench, T30  
–Top up the engine oil  
(➡ 128).

- 3 -Removing rider's seat (117 74).  
-Remove the passenger seat (117 74).
- 4 Open-ended spanner  
Width across flats 10/  
13 mm  
-Adjust the spring  
preload for rear wheel  
(117 85).  
-Adjust the mirror arm  
(117 82).

## SIDE PANEL

### Removing side trim panel

- Make sure the ground is level and firm and place the motorcycle on its stand.

 The procedure described here for the right side panel applies by analogy to the left side as well.




- Disengage side trim panel 2 from retaining pins 1.

### Installing side trim panel

- Make sure the ground is level and firm and place the motorcycle on its stand.

 The procedure described here for the right side panel applies by analogy to the left side as well.

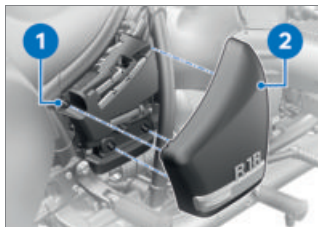


- Snap side trim panel 2 into retaining pins 1.

## FAIRING BRACKET

### Removing left fairing bracket

- Remove the side trim panel (117 125).

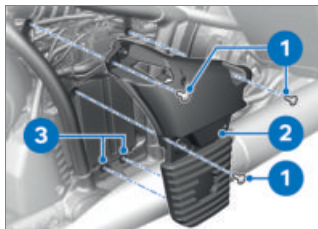


- Remove screws 1 from left fairing carrier 2.

## 126 MAINTENANCE

- Disengage left fairing carrier **2** from grommets **3** and remove.

### Installing left fairing bracket

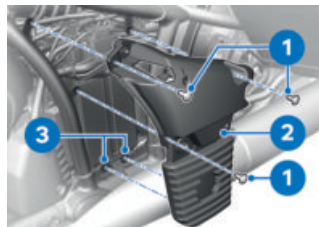

- Engage left fairing carrier **2** in grommets **3**.
- Install screws **1** in left fairing carrier **2**.



Carrier for side cover to frame

M5 x 14

Thread-locking compound:  
micro-encapsulated

5 Nm

- Install the side trim panel (111111 125).

### Removing right fairing bracket

- Remove the side trim panel (111111 125).



- Remove screws **3** from right fairing carrier **2**.
- Disengage right fairing carrier **2** from grommet **1** and remove.

### Installing right fairing bracket



- Engage right fairing carrier **2** in grommet **1**.
- Install screws **3** in right fairing carrier **2**.



Carrier for side cover to frame

M5 x 14

Thread-locking compound:  
micro-encapsulated

5 Nm

- Install the side trim panel (111 ➔ 125).

## FRONT-WHEEL STAND

### Installing front-wheel stand



#### ATTENTION

#### **Use of the front wheel stand without accompanying use of auxiliary stand**

Risk of damage to parts if vehicle topples

- Place the motorcycle on an auxiliary stand before lifting the front wheel with the front-wheel stand.
- Make sure the motorcycle is standing firmly.
- Place the motorcycle on an auxiliary stand.
- Install the rear-wheel stand (111 ➔ 127).
- See the instructions issued with the front-wheel stand for the details of the correct procedure for installation.
- Your authorised BMW Motorrad retailer will be happy to assist you in selecting a suitable assembly stand.

## REAR-WHEEL STAND

### Installing rear-wheel stand

- The description of how to fit the rear-wheel stand correctly will be found in the instructions for the stand.
- Your authorised BMW Motorrad retailer will be happy to assist you in selecting a suitable assembly stand.

## ENGINE OIL

### Checking engine oil level




#### ATTENTION

#### **Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)**

Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature.
- Switch off the engine when it is at operating temperature.
- Make sure the ground is level and firm and hold the motorcycle upright.
- Wait five minutes for the oil to drain into the oil pan.

## 128 MAINTENANCE

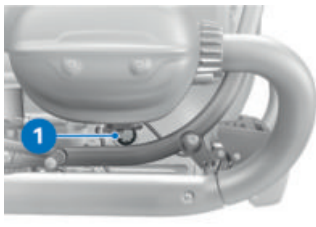


### ATTENTION

#### Vehicle toppling sideways

Risk of damage to parts if vehicle topples

- Secure the vehicle, preferably with the assistance of a second person, so that it cannot topple sideways.
- Check the oil level in the display **1**.

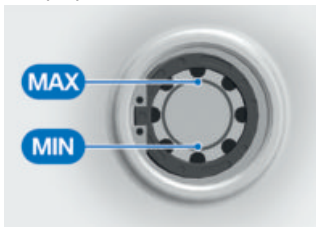

Engine oil, specified level

Between **MIN** and **MAX** mark

If the oil level is below the **MIN** mark:

- Top up the engine oil (128).

If the oil level is above the **MAX** mark:


- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad retailer.



As a contribution to reducing environmental impact, BMW Motorrad recommends checking the engine oil on occasion after a trip of min 50 km.


#### Topping up engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.

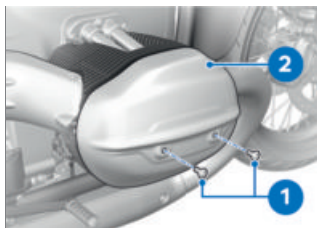


- Remove screws **1** with the tool from the on-board toolkit and remove cover **2**.

—with Option 719 design package Aero<sup>OE</sup>

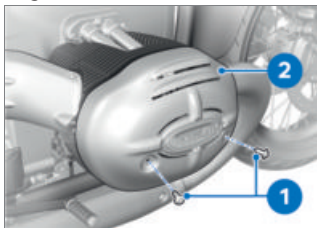

- Remove screws **1** with the tool from the on-board toolkit and remove cover **2**.◁

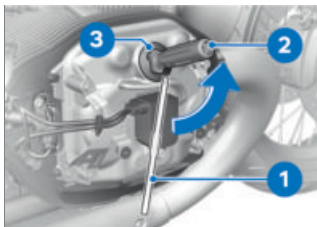

- Wipe the area around the oil filler opening clean.
- Insert cross-head end of reversible screwdriver insert **1** into screwdriver handle **2** (on-board toolkit).
- Engage the tool in cap **3** and turn the cap counter-clockwise.
- Remove cap **3** of the oil filler opening.



## ATTENTION

### Use of insufficient engine oil or too much engine oil

Engine damage


- Always make sure that the oil level is correct.
- Slowly and gradually top up the engine oil to the specified level.



Engine oil, quantity for topping up

max 0.5 l (Difference between **MIN** and **MAX**)

- Check the engine oil level (▮▮▮▮ 127).
- Install cap **3**.

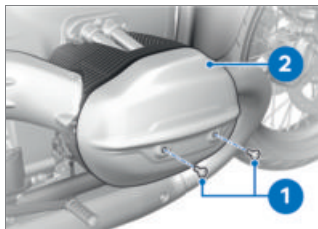

- Hold cover **2** in position and install screws **1**.



Cylinder head cover to cylinder head

M6

Joining compound: Oil rubber grommet


# 130 MAINTENANCE



Cylinder head cover to cylinder head

10 Nm

—with Option 719 design package Aero<sup>OE</sup>

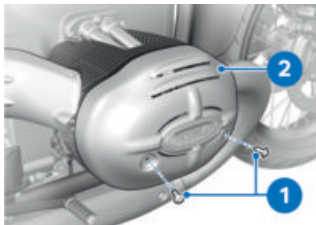

- Hold cover **2** in position and install screws **1**.



Cylinder head cover to cylinder head

M6

Joining compound: Oil rubber grommet

10 Nm

If pressure points are not clearly perceptible:



## ATTENTION

**Work on brake system not in compliance with correct procedure**


Risk to operational reliability of the brake system

- Have all work on the brake system undertaken by trained and qualified specialists.

- Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## Checking brake pad thickness, front brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.

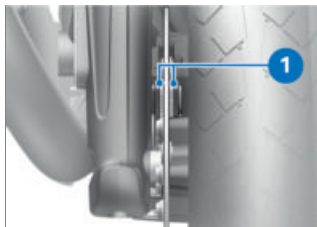


- Visually inspect the left and right brake pads to ascertain their thickness. View-

## BRAKE SYSTEM

### Checking operation of the brakes

- Pull the handbrake lever.
  - » There is a clearly perceptible pressure point.
- Press the footbrake lever.
  - » There is a clearly perceptible pressure point.

ing direction: Between wheel and front suspension toward brake pads **1**.

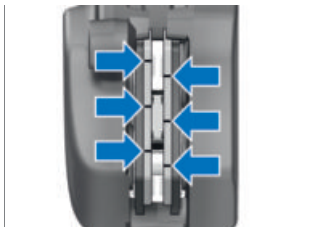

Brake-pad wear limit,  
front

min 1 mm (Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.)

If the wear indicating marks are no longer visible:



## WARNING

### Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.

preferably an authorised BMW Motorrad retailer.

## Checking brake pad thickness, rear brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Visually inspect the brake pads to ascertain their thickness. Viewing direction: between rear wheel and rear suspension toward brake pads **1**.

- Have the brake pads replaced by a specialist workshop,

## 132 MAINTENANCE



Brake-pad wear limit,  
rear

min 1 mm (Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.)

If the wear indicating marks are no longer visible:



### WARNING

#### **Brake-pad thickness less than permissible minimum**

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### Checking brake-fluid level, front brakes



### WARNING

#### **Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid**

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.
- Make sure the ground is level and firm and hold the motorcycle upright.



- Turn the handlebars to a position in which the brake fluid reservoir is horizontal.
- Check the brake fluid level in sight glass **1**.



Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, front

Brake fluid, DOT4

The brake fluid level may not drop below the **MIN** mark. (Brake-fluid reservoir horizontal.)

If the brake fluid level drops below the permitted level:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### Checking brake-fluid level, rear brakes



#### WARNING


#### Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.

## 134 MAINTENANCE

- Make sure the ground is level and firm and hold the motor-cycle upright.

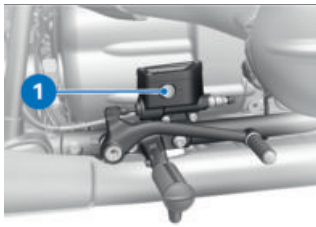

- Check the brake fluid level in brake fluid reservoir 1.



Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, rear

Brake fluid, DOT4

The brake fluid level may not drop below the **MIN** mark. (Brake-fluid reservoir horizontal)

If the brake fluid level drops below the permitted level:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

---

### CLUTCH

#### Checking operation of the clutch

- Pull the clutch lever.
  - » There is a clearly perceptible pressure point.

If the pressure point is not clearly perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

---

### TYRES

#### Check the tyre pressures



#### WARNING

##### Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct.

**WARNING**
**Tendency of valve inserts to open by themselves at high riding speeds**

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Check tyre pressures against the data below.



Tyre pressure, front

2.5 bar (Tyre cold)



Tyre pressure, rear

2.9 bar (One-up, tyre cold)

2.9 bar (Two-up mode with loading, with a cold tyre)

If tyre pressure is too low:

- Correct tyre pressure.

**Check the tyre tread depth**
**WARNING**
**Riding with badly worn tyres**

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Measure the tyre tread depth in the main tread grooves with wear marks.



Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow.

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

## WHEEL RIMS

### Check the rims

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Visually inspect the rims for defects.
- Have damaged rims checked and, if necessary, replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### Checking spokes

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Draw the handle of a screwdriver or a similar instrument across the spokes and listen to the sequence of sounds made by the individual spokes.

If there is a variation in the sequence of sounds:

- Have the spokes checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## WHEELS

### Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the running-gear control systems such as ABS, for example. In particular, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.

The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad retailer. In these cases, the data programmed into the control

units has to be changed to suit the new wheel sizes.

### Removing front wheel

- Place the motorcycle on an auxiliary stand.
- Install the rear-wheel stand (111 ➔ 127).




- Slacken clamping screws **1** on left and right.
- Raise front of motorcycle until the front wheel can turn freely.
- Install the front-wheel stand (111 ➔ 127).




- Remove cable tie **2**.
- Remove screws **3**.

- Loosen left brake caliper **1**.

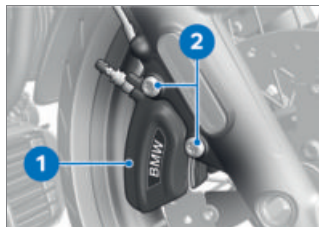

- Remove screws **2**.
- Loosen right brake caliper **1**.

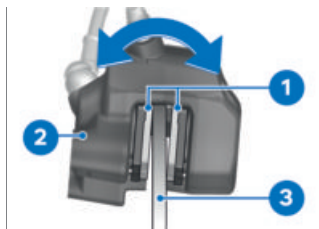

- Force brake pads **1** slightly apart by rocking brake caliper **2** back and forth against brake disc **3**.

### **ATTENTION**

#### **Unwanted inward movement of the brake pads**

Component damage on attempt to install the brake caliper or because brake pads have to be forced apart

- Do not operate the brakes with a brake caliper not correctly secured.

### **ATTENTION**


#### **Use of hard or sharp-edged objects in proximity to component**

Component damage

- Take care not to scratch components; cover or mask as necessary.
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.
- Carefully pull the brake calipers back and out until clear of the brake discs.



- Slacken screw **1**, but **do not remove it**.
- Press quick-release axle with screw **1** slightly toward the inside, so as to be better able to grip it on the right-hand side.
- Remove screw **1**.

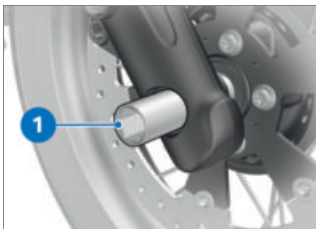

- Withdraw quick-release axle **1**, support the front wheel when doing this.

**ATTENTION****Removal of front wheel not in compliance with correct procedure**

Damage to wheel speed sensor

- Note the wheel-speed sensor when rolling out the front wheel.
- Set down front wheel and roll forwards out of the front suspension.



- Remove spacer bushing **1** from the wheel hub.

**Installing front wheel****WARNING****Use of a non-standard wheel**

Malfunctions in control attempts made by the ABS and ASC

- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter.

**ATTENTION****Tightening threaded fasteners to incorrect tightening torque**

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.



- Lubricate the friction face of spacer bushing **1**.

## 140 MAINTENANCE



Lubricant

Optimoly TA

- Insert spacer bushing **1**, turned with the collar facing out, into the wheel hub on the left-hand side.



### ATTENTION

#### Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim.




### ATTENTION

#### Installation of front wheel not in compliance with correct procedure

Damage to wheel speed sensor

- Note the wheel-speed sensor when rolling in the front wheel.
- Roll the front wheel into position between the forks of the front suspension.

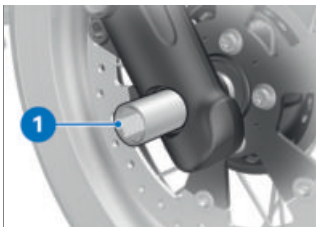

- Lubricate quick-release axle **1**.



Lubricant

Optimoly TA



### WARNING

#### Improper installation of the quick-release axle

Loosening of the front wheel

- After securing the brake calipers and relieving the front forks, tighten the quick-release axle and the axle clamping to the specified tightening torque.
- Lift the front wheel and insert quick-release axle **4**.
- Remove front-wheel stand and firmly compress front forks several times. Do not operate the handbrake lever in this process.
- Install the front-wheel stand (127).




- Install screw **1**. In this process, counter-hold the quick-release axle on the right side.



Bolt on quick-release axle

M20 x 1,5 - 8.8

50 Nm

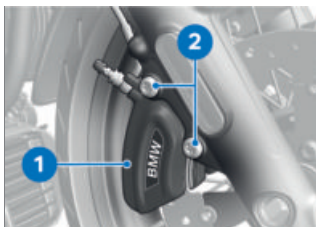

- Hold right brake caliper **1** in position and install screws **2**.



Brake calliper to telescopic fork

M10 x 40 - 10.9

56 Nm



- Hold left brake caliper **1** in position and install screws **3**.



Brake calliper to telescopic fork

M10 x 40 - 10.9

56 Nm

- Secure cable ties **2**.



## WARNING

### Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.

- Operate the brake several times until the brake pads are bedded.
- Remove the adhesive tape from the wheel rim.
- Remove the front-wheel stand.

## 142 MAINTENANCE



- Tighten clamping screws **1** on the left and right to the specified torque.



Clamping screws in axle holder

Tightening sequence: Tighten screws six times in alternate sequence


M8 x 35 - 8.8

19 Nm

- Extend the side stand.
- Remove the rear-wheel stand.
- Place the motorcycle on its side stand.

### Removing rear wheel

- Lift the motorcycle, preferably with a rear-wheel stand.
- Engage first gear.
- Remove the softbags (► 77).
- Install the rear-wheel stand (► 127).
- Remove the silencer (► 146).
- Remove the license plate.

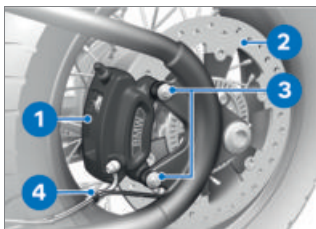

- Remove cable tie **4**
- Remove screws **3**.



### ATTENTION

**Operation of the front brake or rear brake with brake calipers and brake pads removed (the front brake also operates the rear brake (Integral brakes))**

Brake pistons pushed out

- Do not operate the brakes while a brake caliper has been removed.
- Install brake caliper with brake pads or insert the piston resetting device.

**ATTENTION**

**Use of hard or sharp-edged objects in proximity to component**


Component damage

- Take care not to scratch components; cover or mask as necessary.


- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.
- Disengage brake caliper **1** from brake disc **2** and lay it aside.



- Remove screw **1**.

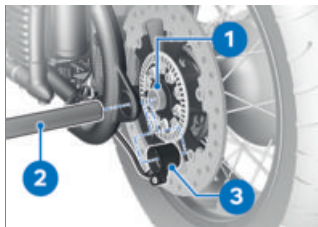

- Remove quick-release axle **2**, allow sensor holder **3** to dangle from the cable.
- Remove bush **1**.

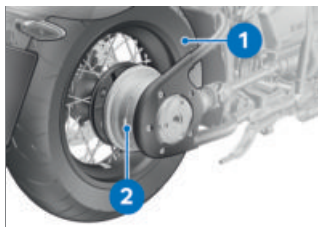

- Position a wooden block or similar underneath rear wheel **1** to take its weight.
- Separate rear wheel **1** from rear-wheel drive **2** and remove.

## 144 MAINTENANCE



- Check judder-damper rubber element **1**; replace if necessary.

### Installing rear wheel

#### **WARNING**

**Use of a non-standard wheel**  
Malfunctions in control attempts made by the ABS and ASC


- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter.

#### **ATTENTION**

**Tightening threaded fasteners to incorrect tightening torque**

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

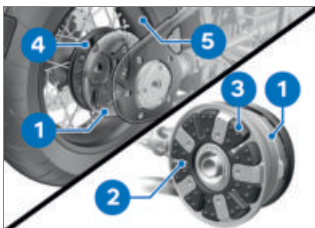

- Thinly lubricate judder-damper rubber element **3**.




Installation tool


Silicone spray

- Install judder-damper rubber element **3** in rear-wheel drive **1**.
- Hold rear wheel **5** in position and support it appropriately.
- Engage rear wheel **5** in rear-wheel drive **1**.

» Cast ribs **4** engage the recesses in judder-damper rubber element **2**.

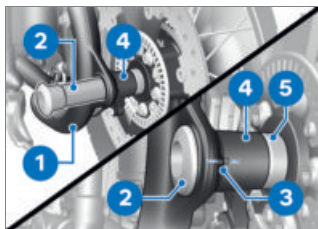

- Install bush **5**.
- Hold sensor holder **4** and quick-release axle **2** in position.
- Bring marks **3** on sensor holder **4** and rear wheel swinging arm **1** into alignment.
- Insert quick-release axle **2**.

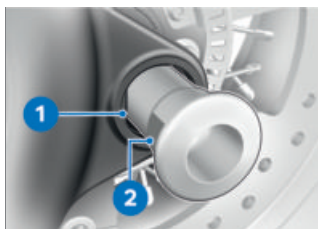

- Align flat on quick-release axle **2** with flat on rear frame **1**.
- » Quick-release axle can be inserted all the way.




- Install screw **1**.

 Bolt to rear wheel quick-release axle

M20 x 1,5 - 8.8

100 Nm

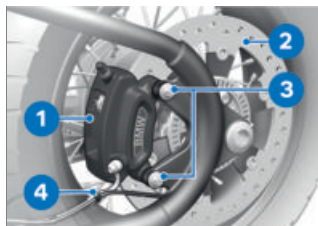

- Hold brake caliper **1** in position on brake disc **2**.
- Install screws **3**.

 Rear brake caliper on rear wheel swinging arm

M10 x 40 - 10.9

56 Nm

- Secure cable tie **4**.
- Remove the adhesive tape from the wheel rim.



## WARNING

### Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.
- Operate the brake several times until the brake pads are bedded.
- Install the license plate.
- Install the silencer (➡ 146).
- Install the softbags (➡ 78).
- Remove the rear-wheel stand.

## SILENCER

### Removing silencer




## CAUTION

### Hot exhaust system

Risk of burn injury

- Do not touch a hot exhaust system.
- The procedure described here for the right silencer applies by analogy to the left silencer as well.
- Allow the silencer to cool.
- Lift the motorcycle, preferably with a rear-wheel stand.

- Install the rear-wheel stand (➡ 127).

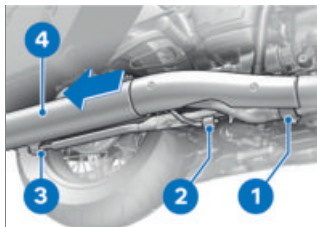


- Slacken clamp 1.
- Ease silencer 4 out of holders 2 and 3 and remove.


### Installing silencer



The procedure described here for the right silencer applies by analogy to the left silencer as well.

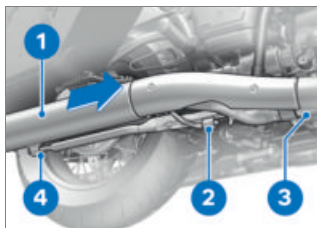

- Position silencer 1 at brackets 2 and 4.
- Push silencer 1 on to exhaust manifold 3.

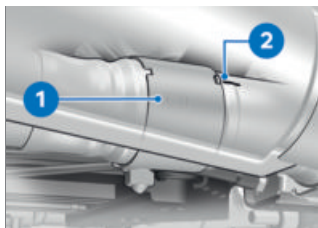

- Align the clamp with recess **1** on the retaining lug and mark **2**.
- » Retaining lug engages recess in the clamp.
- Tighten clamp **1**.



Clamp to silencer and  
exhaust manifold

24 Nm

## LIGHTING

### Replacing LED light sources



#### WARNING

**Vehicle overlooked in traffic due to failure of the lights on the vehicle**

Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

All light sources of the vehicle are LED light sources. The service life of the LED light sources is longer than the presumed vehicle service life. If an LED light source is faulty contact a specialist workshop, preferably an authorised BMW Motorrad retailer.

## JUMP-STARTING



#### CAUTION

**Touching live parts of the ignition system when the engine is running**

Electric shock

- Do not touch parts of the ignition system when the engine is running.



## ATTENTION

### Excessive current flowing when the motorcycle is jump-started

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the engine by connecting leads to the on-board socket.



## ATTENTION

### Contact between crocodile clips of jump leads and vehicle

Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.




## ATTENTION

### Jump-starting with a voltage greater than 12 V

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V.

- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.
- Make sure the ground is level and firm and place the motorcycle on its stand.

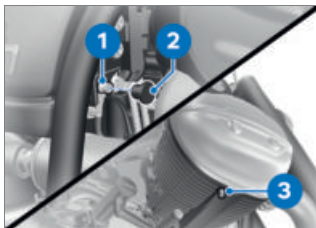

- Remove protective cap **2**.
- Begin by connecting one end of the red jump lead to remote positive terminal **1** and the other end to the positive terminal of the donor battery.
- Connect one end of the black jump lead to vehicle's remote ground terminal **3** and the other end to the negative terminal of the donor battery.
- Run the engine of the donor vehicle during jump-starting.
- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to

protect the starter motor and the donor battery.

 Do not use proprietary start-assist sprays or other products to start the engine.

- Allow both engines to run for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from remote ground terminal **3** first, then disconnect the second jump lead from remote positive terminal **1**.
- Install protective cap **2**.

## BATTERY

### Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Follow the loading instructions on the following pages.
- Do not turn the battery upside down.

 BMW Motorrad has developed a float charger specially designed for com-

patibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.

### Recharging connected battery



#### ATTENTION

#### Unsuitable chargers connected to a socket

Damage to charger and vehicle electronics

- Use suitable BMW chargers. The suitable charger is available from your authorised BMW Motorrad dealer.

- Disconnect devices plugged into the socket.
- Comply with the operating instructions of the charger.
- Charge the battery connected to the vehicle's on-board electrical system via the socket.

 The motorcycle's on-board electronics know when the battery is fully charged. The on-board socket is switched off when this happens.

 If you are unable to charge the battery through the on-board socket, you may be using a charger that is not compatible with your motorcycle's electronics. In this case, directly charge the battery at the terminals of the battery that has been disconnected from the vehicle.



## ATTENTION

### Recharging a fully discharged battery via the power socket or extra socket

Damage to the vehicle electronics

- If a battery has discharged to the extent that it is completely flat (battery voltage less than 12 V, indicator lights and multifunction display remain off when the ignition is switched on) always charge the **disconnected** battery with the charger connected directly to the battery terminals.



## ATTENTION

### Charging the battery that is connected to the vehicle via the battery terminals

Damage to the on-board electronics

- Disconnect the battery at the battery terminals before charging.

- Charge the disconnected battery directly at the terminals.

### Recharging disconnected battery

- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.




The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.

## Removing battery

—with anti-theft alarm (DWA)<sup>OE</sup>

- If applicable, switch off the anti-theft alarm.◀
- Switch off the ignition (▶▶ 46).
- Remove the left fairing bracket (▶▶ 125).

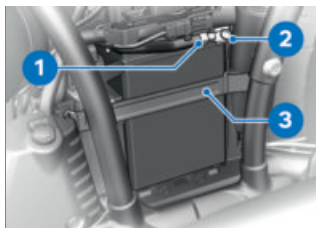


### ATTENTION


#### Battery not disconnected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.
- Remove negative battery cable **1** with screw **2**.
- Remove retaining strap **3**.

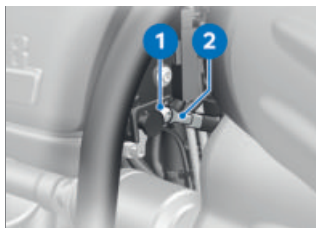

- On the right side of the vehicle, remove adapter cable for remote positive terminal **2** with screw **1**.

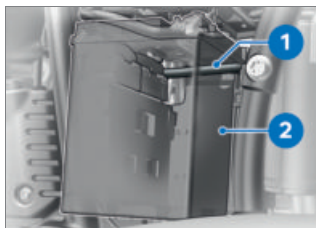

### ATTENTION

#### Battery comes into contact with the silencer during removal/installation


Component damage

- Use a piece of cardboard, for example, to protect the silencer against scratches.
- Remove battery **2** completely, noting adapter cable for remote positive terminal **1**.


## 152 MAINTENANCE

### Installing battery

 If the vehicle has been disconnected from the battery for a significant time, the current date will have to be entered in the instrument cluster to guarantee correct operation of the service display.

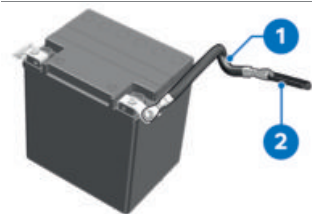

- To facilitate installation, secure cable tie **2** to adapter cable for remote positive terminal **1**.

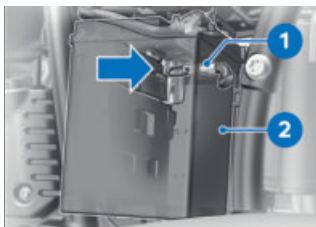


### ATTENTION

**Battery comes into contact with the silencer during removal/installation**

Component damage

- Use a piece of cardboard, for example, to protect the silencer against scratches.
- Slide battery **2** into position, adapter cable for remote positive terminal **1** first.
- Route adapter cable for remote positive terminal **1** as close as possible to the opening (**arrow**).

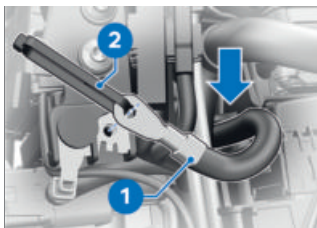


- On the right side of the vehicle, grip adapter cable for remote positive terminal **1** at the opening (**arrow**) by the cable tie and work it into position.
- Remove cable tie **2**.



- Push the battery all the way in, noting the routing of adapter cable for remote positive terminal **1**.
- Adapter cable for remote positive terminal **1** must be seated in recess **2** between the battery and the battery holder.
- Do not trap adapter cable for remote positive terminal **1**

between the battery and the battery holder.

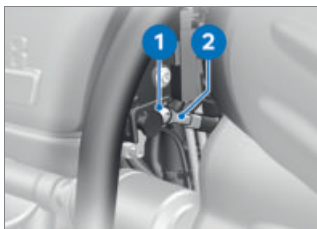


### **ATTENTION**

#### **Battery not connected in accordance with correct procedure**

Risk of short-circuit

- Always proceed in compliance with specified installation sequence.

- Install adapter cable for remote positive terminal **2** with screw **1**.

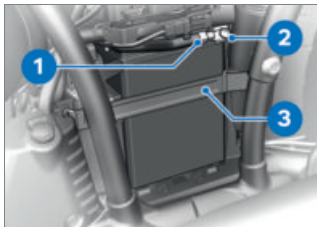

- Install negative battery cable **1** with screw **2**.

## 154 MAINTENANCE

- Install retaining strap **3**.
- Install the left fairing bracket (▮▮▮ 126).

—with anti-theft alarm (DWA)<sup>OE</sup>

- If applicable, switch on the anti-theft alarm.
- Set the clock (▮▮▮ 58).
- Set the date (▮▮▮ 59).◁

### FUSES

#### Replacing fuses




#### ATTENTION

##### Jumpering of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
  - Always replace a defective fuse with a new fuse of the same amperage.
- Switch off the ignition (▮▮▮ 46).
  - Make sure the ground is level and firm and place the motorcycle on its stand.
  - Remove the right fairing bracket (▮▮▮ 126).

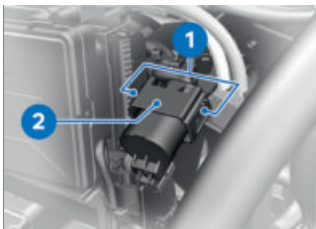


- Press locks **1** on both sides.
- Remove fuse box **2**.



If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

- Consult the fuse assignment diagram below and replace the defective fuse.
- » Fuse assignment (▮▮▮ 155)
- Insert fuse box **2**. Make sure that locks **1** engage on both sides.
  - Install the right fairing bracket (▮▮▮ 126).

## Fuse assignment

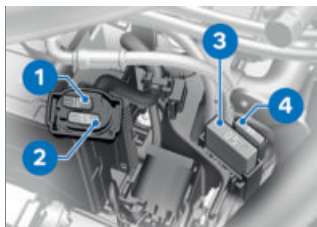

Fuse 1

10 A (Anti-theft alarm system, instrument cluster, OBD connector, isolating relay, ignition switch)



Fuse 2

7.5 A (Sensor box, round instrument, left multifunction switch)



Main fuse

50 A (Main fuse)



Fuse 4

15 A (Fuse carrier, OA connector)

## DIAGNOSTIC CONNECTOR

### Disengaging diagnostic socket




#### CAUTION

#### Incorrect disconnection of the diagnostic socket for on-board diagnosis

Malfunctions of the vehicle

- Do not disconnect the diagnostic socket or allow it to be disconnected except in the course of a BMW Motorrad service by a specialist workshop or by other authorised persons.
- Have the work carried out by appropriately trained personnel.
- Comply with the stipulations of the vehicle manufacturer.

- Remove the left fairing bracket (→ 125).

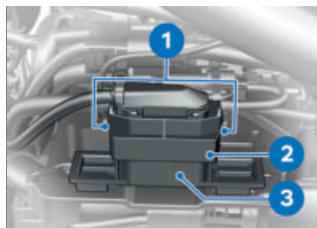


- Press locks 1.

## 156 MAINTENANCE

- Disengage diagnostic socket **2** from holder **3**.
  - » The interface to the diagnosis and information system can be connected to the diagnostic connector **2**.

### Securing diagnostic socket

- Disconnect the interface for the diagnosis and information system.

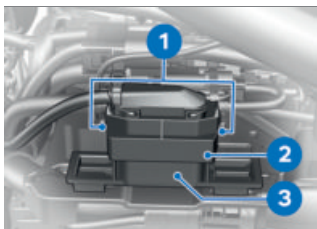

- Insert diagnostic socket **2** into holder **3**.
  - » The locks **1** engage.
- Install the left fairing bracket (111 ➔ 126).



# ACCESSORIES

09

---

|                             |            |
|-----------------------------|------------|
| <b>GENERAL NOTES</b>        | <b>160</b> |
| <b>POWER SOCKETS</b>        | <b>160</b> |
| <b>LUGGAGE</b>              | <b>161</b> |
| <b>OPTIONAL ACCESSORIES</b> | <b>162</b> |

## GENERAL NOTES



### CAUTION

#### Use of other-make products

##### Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle.

BMW has conducted extensive testing of the parts and accessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts responsibility for the products. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

All modifications must be in compliance with legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country.

Your authorised BMW Motorrad retailer can offer expert advice on the choice of genuine BMW parts, accessories and other products. To find out more about accessories go to:

**[bmw-motorrad.com/equipment](http://bmw-motorrad.com/equipment)**

## POWER SOCKETS

Notes on use of power sockets:

### Automatic shutdown

The power sockets are shut down automatically under the following circumstances:

- If the battery voltage is too low to maintain the vehicle's starting capability
- If the maximum load capacity as stated in the technical data is exceeded
- During the starting operation

## Connection of electrical devices

You can start using electrical devices connected to the motorcycle's sockets only when the ignition is switched on. The power supply to the sockets is switched off 60 seconds after the ignition is switched off, in order to prevent overloading of the on-board electrics.

## Cable routing

Note the following with regard to the routing of cables from sockets to items of electrical equipment:

- Make sure that cables do not impede the rider.
- Make sure that cables do not restrict the steering angle or obstruct handling.
- Make sure that cables cannot be trapped.

## LUGGAGE

### Securing luggage to motorcycle



#### WARNING

#### Handling adversely affected by overloading and imbalanced loads

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.

- Load correctly (►► 92).
  - Stow luggage in genuine BMW Motorrad accessories such as panniers, for example.
- » You can obtain additional information on luggage systems and how to secure them correctly from your authorised BMW Motorrad retailer.

# 162      ACCESSORIES

---

## OPTIONAL ACCESSORIES

Available optional accessories



Your authorised  
BMW Motorrad retailer  
can offer expert advice on  
the choice of genuine BMW  
parts, accessories and other  
produces, such as luggage  
systems or windscreens.  
You can examine all the  
optional accessories from  
BMW Motorrad by visiting:  
**[bmw-motorrad.com](http://bmw-motorrad.com).**



**CARE**

**10**

---

|                                           |            |
|-------------------------------------------|------------|
| <b>CARE PRODUCTS</b>                      | <b>166</b> |
| <b>WASHING THE VEHICLE</b>                | <b>166</b> |
| <b>CLEANING EASILY DAMAGED COMPONENTS</b> | <b>167</b> |
| <b>CARE OF PAINTWORK</b>                  | <b>168</b> |
| <b>PAINT PRESERVATION</b>                 | <b>169</b> |
| <b>LAYING UP MOTORCYCLE</b>               | <b>169</b> |
| <b>RESTORING MOTORCYCLE TO USE</b>        | <b>169</b> |

## CARE PRODUCTS

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad retailer. The substances in BMW Motorrad Care Products have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



### ATTENTION

#### **Use of unsuitable cleaning and care products**

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol.



### ATTENTION

#### **Use of strongly acidic or strongly alkaline cleaning agents**

Damage to vehicle parts

- Dilute in accordance with the dilution ratio stated on the packaging of the cleaning agent.
- Do not use strongly acidic or strongly alkaline cleaning agents.

## WASHING THE VEHICLE

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Remove dirt from the fork legs at regular intervals.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the vehicle and mounted parts, as applicable, with cold water immediately after every trip.

 After a ride in the rain, when humidity is high or after the vehicle has been washed, condensation might form inside the headlight. This can cause temporary fogging on the headlight lens. If moisture is constantly present inside the headlight consult a specialist workshop, preferably an authorised BMW Motorrad retailer.



### WARNING

**Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions**

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads.



### ATTENTION

**Effect of road salt intensified by warm water**

Corrosion

- Use only cold water to wash off road salt.



### ATTENTION

**Damage due to high water pressure from high pressure cleaners or steam cleaners**

Corrosion or short circuit, damage to labels, seals, hydraulic brake system, electrical system and the motorcycle seat

- Exercise restraint when using a steam jet or high pressure cleaning equipment.

## CLEANING EASILY DAMAGED COMPONENTS

### Plastics



### ATTENTION

**Use of unsuitable cleaning agents**

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.

Clean the plastic parts with water and BMW plastic care product. This includes in particular:

- Windscreen and slipstream deflectors
- Headlight lens made of plastic
- Glass cover of the instrument cluster
- Black, unpainted parts

 Soften stubborn dirt and insects by covering the affected areas with a wet cloth.

## Chrome

Carefully clean chrome parts with plenty of water and motorcycle cleaner from the BMW Motorrad Care Products range. This is particularly important to counter the effects of road salt.

For an additional treatment, use BMW Motorrad metal polish.

## Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



### ATTENTION

#### Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.

## Rubber

Treat rubber components with water or BMW rubber-care products.



### ATTENTION

#### Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.

## CARE OF PAINTWORK

Washing the vehicle regularly will help counteract the long-term effects of substances that can damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen. Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel, oil, grease, brake fluid and bird droppings. For this, we recommend BMW Motorrad solvent cleaner followed by BMW Motorrad gloss polish for preservation.

Marks on the paintwork are particularly easy to see after the motorcycle has been washed. Remove stains of this kind at the earliest possible opportunity, using benzine or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Then apply preserving agent to the areas treated in this way.



### ATTENTION

#### Damage to paintwork due to metal polish

Risk of damage

- Do not treat painted surfaces and chrome-painted surfaces with metal polish.

### PAINT PRESERVATION

If water no longer rolls off the paint, the paint must be preserved.

For paint preservation, BMW Motorrad recommends the use of BMW Motorrad gloss polish or agents containing carnauba wax or synthetic wax.



Do not use chrome polish to preserve chrome paints.

Use only the agents recommended by BMW Motorrad.

### LAYING UP MOTORCYCLE

- Fill the motorcycle's fuel tank.



Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.

- Clean the motorcycle.
- Remove the battery (▶ 151).
- Spray the brake and clutch lever pivots and the side stand pivot mounts with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel.

### RESTORING MOTORCYCLE TO USE

- Remove the protective wax coating.
- Clean the motorcycle.





# TECHNICAL DATA

11

---

|                               |            |
|-------------------------------|------------|
| <b>TROUBLESHOOTING CHART</b>  | <b>174</b> |
| <b>THREADED FASTENERS</b>     | <b>175</b> |
| <b>FUEL</b>                   | <b>177</b> |
| <b>ENGINE OIL</b>             | <b>177</b> |
| <b>ENGINE</b>                 | <b>178</b> |
| <b>CLUTCH</b>                 | <b>178</b> |
| <b>TRANSMISSION</b>           | <b>179</b> |
| <b>FINAL DRIVE</b>            | <b>179</b> |
| <b>FRAME</b>                  | <b>179</b> |
| <b>CHASSIS AND SUSPENSION</b> | <b>180</b> |
| <b>BRAKES</b>                 | <b>181</b> |
| <b>WHEELS AND TYRES</b>       | <b>181</b> |
| <b>ELECTRICAL SYSTEM</b>      | <b>182</b> |
| <b>ANTI-THEFT ALARM</b>       | <b>183</b> |
| <b>DIMENSIONS</b>             | <b>183</b> |
| <b>WEIGHTS</b>                | <b>184</b> |
| <b>PERFORMANCE FIGURES</b>    | <b>184</b> |

## 174 TECHNICAL DATA

---

### TROUBLESHOOTING CHART

The engine does not start.

| Possible cause                                                                                               | Rectification                                                                        |
|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Side stand is extended and gear is engaged.                                                                  | Retract the side stand.                                                              |
| Clutch lever not pulled.                                                                                     | In neutral or if a gear is engaged, pull the clutch lever.                           |
| Fuel tank is empty.                                                                                          | Fuel grade (➡ 102).                                                                  |
| Battery is flat.                                                                                             | Recharging connected battery (➡ 149).                                                |
| Starter motor overheating protection has tripped. The starter motor can be operated for a limited time only. | Allow the starter motor to cool down for approximately 1 minute before trying again. |

---

**THREADED FASTENERS**

| Front wheel                                          | Value                                                                                | Valid |
|------------------------------------------------------|--------------------------------------------------------------------------------------|-------|
| <b>Brake calliper to telescopic fork</b>             |                                                                                      |       |
| M10 x 40 - 10.9                                      | 56 Nm                                                                                |       |
| <b>Clamping screws in axle holder</b>                |                                                                                      |       |
| M8 x 35 - 8.8                                        | <b>Tightening sequence:</b><br><b>Tighten screws six times in alternate sequence</b> |       |
|                                                      | 19 Nm                                                                                |       |
| <b>Bolt on quick-release axle</b>                    |                                                                                      |       |
| M20 x 1,5 - 8.8                                      | 50 Nm                                                                                |       |
| Rear wheel                                           | Value                                                                                | Valid |
| <b>Bolt to rear wheel quick-release axle</b>         |                                                                                      |       |
| M20 x 1,5 - 8.8                                      | 100 Nm                                                                               |       |
| <b>Rear brake caliper on rear wheel swinging arm</b> |                                                                                      |       |
| M10 x 40 - 10.9                                      | 56 Nm                                                                                |       |
| Exhaust system                                       | Value                                                                                | Valid |
| <b>Clamp to silencer and exhaust manifold</b>        |                                                                                      |       |
|                                                      | 24 Nm                                                                                |       |

## 176 TECHNICAL DATA

| Mirror arm                         | Value | Valid |
|------------------------------------|-------|-------|
| <b>Mirror to handlebar fitting</b> |       |       |
| M8                                 | 12 Nm |       |

| Frame                                                              | Value | Valid |
|--------------------------------------------------------------------|-------|-------|
| <b>Threaded fastener left/right holder, soft-bag to main frame</b> |       |       |
| M8 x 25, Replace screw<br>micro-encapsulated                       | 19 Nm |       |
| <b>Screw connection socket soft bag holder to rear frame</b>       |       |       |
| M8 x 45, Renew screw<br>micro-encapsulated                         | 19 Nm |       |
| <b>Carrier for side cover to frame</b>                             |       |       |
| M5 x 14<br>micro-encapsulated                                      | 5 Nm  |       |

## FUEL

|                                   |                                                                                                                                                                                                                                       |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Recommended fuel grade            |  Super unleaded (max. 15% ethanol, E15)<br> 95 ROZ/RON<br>90 AKI    |
| Alternative fuel grade            |  Regular, unleaded (max. 15% ethanol, E15)<br> 91 ROZ/RON<br>87 AKI |
| Usable fuel capacity              | approx. 16 l                                                                                                                                                                                                                          |
| Fuel reserve                      | approx. 4 l                                                                                                                                                                                                                           |
| Fuel consumption                  | 5.6 l/100 km, in accordance with WMTC                                                                                                                                                                                                 |
| CO2 emission                      | 129 g/km, according to WMTC                                                                                                                                                                                                           |
| Exhaust emissions standard        | EU 5                                                                                                                                                                                                                                  |
| -with Canada export <sup>NV</sup> | TIER 2, measured to FTP75                                                                                                                                                                                                             |

## ENGINE OIL

|                                     |                                                                                   |
|-------------------------------------|-----------------------------------------------------------------------------------|
| Engine oil, capacity                | approx. 4.0 l, with filter change                                                 |
| Engine-oil specification            | SAE 15W-50, API SJ / JASO MA2, BMW Motorrad recommends BMW Motorrad ADVANTEC Pro. |
| Engine oil, quantity for topping up | max 0.5 l, Difference between <b>MIN</b> and <b>MAX</b>                           |

**BMW recommends** **ADVANTEC**  
ORIGINAL BMW ENGINE OIL

## 178 TECHNICAL DATA

### ENGINE

|                                              |                                                                                                                           |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Engine number location                       | Crankcase bottom section, left                                                                                            |
| Engine type                                  | A70B18A                                                                                                                   |
| Engine design                                | Air-cooled/oil-cooled 2-cylinder 4-cycle opposed-twin engine with two chain-driven camshafts located above the crankshaft |
| Displacement                                 | 1802 cm <sup>3</sup>                                                                                                      |
| Cylinder bore                                | 107.1 mm                                                                                                                  |
| Piston stroke                                | 100 mm                                                                                                                    |
| Compression ratio                            | 9.6:1                                                                                                                     |
| Nominal capacity                             | 67 kW, at engine speed: 4750 min <sup>-1</sup>                                                                            |
| —with power reduction to 35 kW <sup>OE</sup> | 35 kW, at engine speed: 4250 min <sup>-1</sup>                                                                            |
| Torque                                       | 158 Nm, at engine speed: 3000 min <sup>-1</sup>                                                                           |
| —with power reduction to 35 kW <sup>OE</sup> | 155 Nm, at engine speed: 2000 min <sup>-1</sup>                                                                           |
| Maximum engine speed                         | max 5750 min <sup>-1</sup>                                                                                                |
| Idle speed                                   | 950 <sup>±50</sup> min <sup>-1</sup> , Engine at regular operating temperature                                            |

### CLUTCH

|             |                         |
|-------------|-------------------------|
| Clutch type | Single-plate dry clutch |
|-------------|-------------------------|

---

**TRANSMISSION**

|                             |                                                                                                                                                                                                                                         |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Type of transmission        | Claw-switched 6-gear transmission with separate transmission housing                                                                                                                                                                    |
| Transmission oil            | FUCHS Titan EG 4218 SAE 70W-80                                                                                                                                                                                                          |
| Gearbox transmission ratios | 1.160, Primary transmission ratio<br>2.438 (39:16), 1st gear<br>1.696 (39:23), 2nd gear<br>1.296 (35:27), 3rd gear<br>1.065 (33:31), 4th gear<br>0.903 (28:31), 5th gear<br>0.784 (29:37), 6th gear<br>3.091, Transmission output ratio |

---

**FINAL DRIVE**

|                            |                                |
|----------------------------|--------------------------------|
| Type of final drive        | Shaft drive with bevel gears   |
| Rear axle differential oil | FUCHS Titan EG 4218 SAE 70W-80 |

---

**FRAME**

|                                               |                                                     |
|-----------------------------------------------|-----------------------------------------------------|
| Frame type                                    | Double-loop steel frame with bolt-on bottom trusses |
| Type plate location                           | Frame steering head, middle                         |
| Position of the vehicle identification number | Front frame under steering head                     |

---

# 180 TECHNICAL DATA

---

## CHASSIS AND SUSPENSION

---

### Front wheel

|                          |                        |
|--------------------------|------------------------|
| Type of front suspension | Telescopic forks       |
| Spring travel, front     | 120 mm, at front wheel |

### Rear wheel

|                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Type of rear suspension                  | Steel double armed swinging arm                                                                                                                                                                                                                                                                                                                                                                                                                |
| Design of the rear-wheel suspension      | Direct-pivot spring strut with adjustable spring preload                                                                                                                                                                                                                                                                                                                                                                                       |
| Spring travel at rear wheel              | 90 mm, at rear wheel                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Basic setting of the rear spring preload | Turn the hexagon head as far as it will go counter-clockwise, then back it off 8 turns clockwise, with full load of fuel, with rider weighing approx. 100 kg<br>Turn the hexagon head as far as it will go counter-clockwise, then back it off 12 turns clockwise, One-up with luggage approx. 120 kg<br>Turn the hexagon head as far as it will go counter-clockwise, then back it off 24 turns clockwise, Two-up with luggage approx. 180 kg |

---

## BRAKES

### Front wheel

|                             |                                                          |
|-----------------------------|----------------------------------------------------------|
| Type of front brake         | Twin disc brake, diameter 300 mm, 4-piston fixed caliper |
| Brake-pad material, front   | Sintered metal                                           |
| Brake disc thickness, front | 5 mm, When new<br>min 4.5 mm, Wear limit                 |

### Rear wheel

|                            |                                                            |
|----------------------------|------------------------------------------------------------|
| Type of rear brake         | Single-disc brake, diameter 300 mm, 4-piston fixed caliper |
| Brake-pad material, rear   | Sintered metal                                             |
| Brake disc thickness, rear | 7 mm, When new<br>min 6.5 mm, Wear limit                   |

## WHEELS AND TYRES

|                                  |                                                                                                                           |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Recommended tyre combinations    | Your authorised BMW Motorrad retailer will be happy to supply an up-to-date list of the approved wheel/tyre combinations. |
| Speed category, front/rear tyres | H, required at least: 210 km/h                                                                                            |

### Front wheel

|                                   |              |
|-----------------------------------|--------------|
| Front-wheel type                  | Spoked wheel |
| Front-wheel rim size              | 3.00" x 16"  |
| Tyre designation, front           | 130/90 B16   |
| Load index, front tyre            | min. 54      |
| Permissible front-wheel imbalance | max 5 g      |

## 182 TECHNICAL DATA

### Rear wheel

|                                  |              |
|----------------------------------|--------------|
| Rear-wheel type                  | Spoked wheel |
| Rear wheel rim size              | 5.0" x 16"   |
| Tyre designation, rear           | 180/65 B16   |
| Load index, rear tyre            | min. 73      |
| Permissible rear-wheel imbalance | max 45 g     |

### Tyre pressures

|                      |                                                                                   |
|----------------------|-----------------------------------------------------------------------------------|
| Tyre pressure, front | 2.5 bar, Tyre cold                                                                |
| Tyre pressure, rear  | 2.9 bar, One-up, tyre cold<br>2.9 bar, Two-up mode with loading, with a cold tyre |

## ELECTRICAL SYSTEM

### Fuses

|                                      |                                                                                                    |
|--------------------------------------|----------------------------------------------------------------------------------------------------|
| Fuse 1                               | 10 A, Anti-theft alarm system, instrument cluster, OBD connector, isolating relay, ignition switch |
| Fuse 2                               | 7.5 A, Sensor box, round instrument, left multifunction switch                                     |
| Main fuse                            | 50 A, Main fuse                                                                                    |
| Fuse 4                               | 15 A, Fuse carrier, OA connector                                                                   |
| Electrical rating of on-board socket | 5 A                                                                                                |

### Battery

|                        |       |
|------------------------|-------|
| Battery type           | AGM   |
| Battery rated voltage  | 12 V  |
| Battery rated capacity | 26 Ah |

**Spark plugs**

|                                           |                 |
|-------------------------------------------|-----------------|
| Spark plugs, manufacturer and designation | NGK MAR8AI-10DS |
|-------------------------------------------|-----------------|

**Lighting**

|                   |     |
|-------------------|-----|
| All light sources | LED |
|-------------------|-----|

**ANTI-THEFT ALARM**

|                                                    |              |
|----------------------------------------------------|--------------|
| Activation time on arming                          | approx. 30 s |
| Alarm duration                                     | approx. 26 s |
| Battery type (For Keyless Ride radio-operated key) | CR 2032      |

**DIMENSIONS**

|                                       |                                                        |
|---------------------------------------|--------------------------------------------------------|
| Length of motorcycle                  | 2440 mm, over number-plate carrier                     |
| Height of motorcycle                  | 1342 mm, Over windscreen, at DIN unladen weight        |
| Width of motorcycle                   | 964 mm, with mirrors                                   |
| Height of rider's seat                | 710 mm, measured without rider, at DIN unladen weight  |
| —with rider's seat, low <sup>OE</sup> | 690 mm, measured without rider, at DIN unladen weight  |
| Rider's inside-leg arc, heel to heel  | 1655 mm, measured without rider, at DIN unladen weight |
| —with rider's seat, low <sup>OE</sup> | 1630 mm, measured without rider, at DIN unladen weight |

# 184 TECHNICAL DATA

---

## WEIGHTS

|                                  |                                                                                             |
|----------------------------------|---------------------------------------------------------------------------------------------|
| Vehicle kerb weight              | 365 kg, DIN unladen weight, ready for road, 90 % load of fuel, without optional extras (OE) |
| Permissible gross vehicle weight | 560 kg                                                                                      |
| Maximum payload                  | 195 kg                                                                                      |
| Payload per Softbag              | max 7.5 kg                                                                                  |

---

## PERFORMANCE FIGURES

|                                              |          |
|----------------------------------------------|----------|
| Top speed                                    | 180 km/h |
| —with power reduction to 35 kW <sup>OE</sup> | 148 km/h |



**SERVICE**

**12**

---

|                                          |            |
|------------------------------------------|------------|
| <b>REPORTING SAFETY-RELEVANT DEFECTS</b> | <b>188</b> |
| <b>RECYCLING</b>                         | <b>189</b> |
| <b>BMW MOTORRAD SERVICE</b>              | <b>189</b> |
| <b>BMW MOTORRAD SERVICE HISTORY</b>      | <b>190</b> |
| <b>BMW MOTORRAD MOBILITY SERVICES</b>    | <b>190</b> |
| <b>MAINTENANCE WORK</b>                  | <b>191</b> |
| <b>MAINTENANCE SCHEDULE</b>              | <b>192</b> |
| <b>BMW MOTORRAD RUNNING-IN CHECK</b>     | <b>193</b> |
| <b>MAINTENANCE CONFIRMATIONS</b>         | <b>194</b> |
| <b>SERVICE CONFIRMATIONS</b>             | <b>206</b> |

---

### REPORTING SAFETY-RELEVANT DEFECTS

—with Canada export<sup>NV</sup>

If you think that your motorcycle has a fault which may cause an accident, injury or death, you must inform the NHTSA (National Highway Traffic Safety Administration) immediately and BMW of North America, LLC.

If the NHTSA receives other similar complaints, it may open an investigation. If it finds that a safety defect exists in a group of vehicles, the NHTSA may order the manufacturer to perform a recall and remedy campaign. However, the NHTSA cannot become involved in individual problems between you, your retailer, or BMW of North America, LLC.


You can contact the NHTSA by calling the Vehicle Safety hotline on 1-888-327-4236 (teletypewriter TTY for the hearing impaired: 1-800-424-9153) for free, by visiting the website at [http:// www.safercar.gov](http://www.safercar.gov) or by writing to Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. Further information on vehicle safety is available at [http:// www.safercar.gov](http://www.safercar.gov).

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls can call the toll-free hotline 1-800-333-0510. You can also obtain other information about motor vehicle safety from [http:// www.tc.gc.ca/roadsafety](http://www.tc.gc.ca/roadsafety).

## RECYCLING

—with France export<sup>NV</sup>

### Disposal of the rider's manual

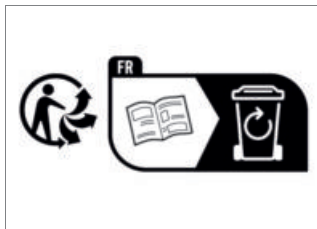

Dispose of this rider's manual by depositing it in the container provided for the purpose.

## BMW MOTORRAD SERVICE

BMW Motorrad has an extensive network of retailers in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad retailers have the technical information and the technical know-how to carry out reliably all preventive maintenance and repair work on your BMW.

You can locate the nearest authorised BMW Motorrad retailer by visiting our website:

**[bmw-motorrad.com](http://bmw-motorrad.com)**.



## WARNING

### Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a specialist workshop, preferably an authorised BMW Motorrad dealer.

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle.

Have all maintenance and repair work carried out confirmed in the "Service" chapter in this manual. Evidence of regular preventive maintenance is essential for generous treatment of claims submitted after the warranty period has expired.

## 190 SERVICE

Your authorised BMW Motorrad retailer can provide information on BMW Motorrad services and the work undertaken as part of each service.

---

### **BMW MOTORRAD SERVICE HISTORY**

#### **Entries**

Maintenance work that has been carried out is entered in the proof of maintenance. The entries are like a Service Booklet and provide proof of regular maintenance.

When an entry is made in the electronic service booklet of the vehicle, service-relevant data is saved in the central IT systems of BMW AG, Munich, Germany.

If there is a change in vehicle ownership, the data saved in the electronic service booklet can also be viewed by the new vehicle owner. A BMW Motorrad retailer or a specialist workshop can also view data that is stored in the electronic service booklet.

#### **Objection**

The vehicle owner can object to entries being made by the BMW Motorrad retailer or a specialist workshop in the electronic service booklet along with the corresponding storage of data in the vehicle and transfer of data to the vehicle manufacturer for the period of time that they are the vehicle owner. In this instance, no entry is made in the electronic service booklet of the vehicle.

---

### **BMW MOTORRAD MOBILITY SERVICES**

As the owner of a new BMW motorcycle, in the event of a breakdown you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. BMW Mobile Service, breakdown service, vehicle recovery service).

Your authorised BMW Motorrad retailer will be happy provide information about the mobility services available to you.

---

## **MAINTENANCE WORK**

### **BMW pre-delivery check**

Your authorised BMW Motorrad retailer conducts the BMW pre-delivery check before handing over the vehicle to you.

### **BMW Running-in check**

The BMW running-in check has to be performed when the vehicle has covered between 500 km and 1200 km.

### **BMW Motorrad Service**

The BMW Motorrad Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad retailer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odometer reading is reached be-

fore the next scheduled date for the service.

The service display in the multifunction display reminds you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:

**[bmw-motorrad.com/service](http://bmw-motorrad.com/service)**

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below.

## MAINTENANCE SCHEDULE

|   | 500 -1200 km<br>300 - 750 mls | 10 000 km<br>6 000 mls | 20 000 km<br>12 000 mls | 30 000 km<br>18 000 mls | 40 000 km<br>24 000 mls | 50 000 km<br>30 000 mls | 60 000 km<br>36 000 mls | 70 000 km<br>42 000 mls | 80 000 km<br>48 000 mls | 90 000 km<br>54 000 mls | 100 000 km<br>60 000 mls | 12 months      | 24 months      |
|---|-------------------------------|------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|--------------------------|----------------|----------------|
| 1 | X                             |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
| 2 |                               | X                      | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                        | X <sup>a</sup> |                |
| 3 |                               | X                      | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                        | X <sup>a</sup> |                |
| 4 |                               | X                      | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                        |                |                |
| 5 |                               | X                      | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                        |                |                |
| 6 |                               |                        | X                       |                         | X                       |                         | X                       |                         | X                       |                         | X                        |                |                |
| 7 |                               |                        | X                       |                         | X                       |                         | X                       |                         | X                       |                         | X                        |                | X <sup>b</sup> |
| 8 |                               |                        |                         |                         | X                       |                         |                         |                         | X                       |                         |                          | X <sup>c</sup> | X <sup>c</sup> |
| 9 |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          | X <sup>d</sup> | X <sup>d</sup> |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |

- 1 BMW Motorrad running-in check (including oil change and oil filter change)
- 2 BMW Motorrad Service, standard scope
- 3 Engine-oil change, with filter
- 4 Replace air-filter element
- 5 Check valve clearances
- 6 Replace all spark plugs
- 7 Oil change in bevel gears rear
- 8 Change transmission oil
- 9 Change brake fluid, entire system

- a annually or every 10000 km (whichever comes first)
- b every 2 years or every 20000 km (whichever comes first)
- c for the first time after one year, then every two years or 40000 km (whichever comes first)
- d for the first time after one year, then every two years

---

## **BMW MOTORRAD RUNNING-IN CHECK**

### **BMW Motorrad running-in check**

The tasks included in the BMW Motorrad running-in check are listed below. The actual scope of work applicable for your vehicle may vary.

- Performing vehicle test with BMW Motorrad diagnostic system
- Setting the service date and service for remaining distance with BMW Motorrad diagnosis system
- Engine-oil change, with filter
- Changing oil in bevel gears
- Checking brake-fluid level, front brakes
- Checking brake-fluid level, rear brakes
- Check the tyre pressures and tread depth
- Checking spoke tension, adjusting if necessary
- Check the lights and signalling equipment
- Recharging battery
- Function test, engine start suppression
- Final inspection and check of roadworthiness
- Confirming BMW Motorrad service in on-board literature

---

## MAINTENANCE CONFIRMATIONS

### **BMW Motorrad Service standard scope**

The tasks included in the BMW Motorrad Service standard scope are listed below. The actual scope of maintenance work applicable for your vehicle may vary.

- Performing vehicle test with BMW Motorrad diagnosis system
- Visual inspection of clutch system
- Checking steering-head bearing
- Visual inspection of the brake lines, brake hoses and connections
- Checking front brake pads and brake discs for wear
- Checking brake-fluid level, front wheel brake
- Checking rear brake pads and brake disc for wear
- Checking brake-fluid level, rear wheel brake
- Draining the condensate hose
- Checking tyre pressure and tread depth
- Check the side stand's ease of movement
- Checking spoke tension, adjusting if necessary
- Check lighting and signalling system
- Function test, engine start suppression
- Checking battery state of charge
- Final inspection and check for road safety
- Setting service-due date and countdown distance with BMW Motorrad diagnosis system
- Confirming BMW Motorrad service in on-board literature

**BMW Motorrad pre-delivery check**

carried out

on \_\_\_\_\_

Stamp, signature

**BMW Motorrad running-in check**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

Stamp, signature

## BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

## Work performed

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

## Work performed

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## 200 SERVICE

### BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

### Work performed

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## 202 SERVICE

### BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

### Work performed

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

## Work performed

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                    | Yes                      | No                       |
|------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service               | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element   | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance           | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs           | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox | <input type="checkbox"/> | <input type="checkbox"/> |
| Change gearbox oil                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the front brake fluid     | <input type="checkbox"/> | <input type="checkbox"/> |
| Replace rear brake fluid           | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## SERVICE CONFIRMATIONS

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, technical campaign work.

[illegible]



|                                               |            |
|-----------------------------------------------|------------|
| <b>DECLARATION OF CONFORMITY</b>              | <b>209</b> |
| <b>CERTIFICATE FOR ELECTRONIC IMMOBILISER</b> | <b>212</b> |
| <b>CERTIFICATE FOR KEYLESS RIDE</b>           | <b>215</b> |
| <b>CERTIFICATE FOR KEYLESS RIDE</b>           | <b>217</b> |
| <b>CERTIFICATE FOR KEYLESS RIDE</b>           | <b>219</b> |
| <b>CERTIFICATE FOR KEYLESS RIDE</b>           | <b>221</b> |

**DECLARATION OF CONFORMITY****Manufacturer**

Bayerische Motoren Werke Aktiengesellschaft  
Petuelring 130, 80809 Munich, Germany

Hereby, BMW AG declares that the radio equipment components listed below are in compliance with Directive 2014/53/EU and with Radio Equipment Regulations 2017 of the United Kingdom. The full text of the EU/UK declarations of conformity are available at the following internet address:  
**[bmw-motorrad.com/certification](http://bmw-motorrad.com/certification)**



**Simplified UK Declaration of Conformity according to Radio Equipment Regulations 2017 of the United Kingdom.**



**Simplified EU Declaration of Conformity according to EU RED (2014/53/EU).**

# 210 APPENDIX

## Technical information

| Radio equipment          | Component            | Frequency band                                              | Output/Transmission Power               |
|--------------------------|----------------------|-------------------------------------------------------------|-----------------------------------------|
| EWS4                     | EWS                  | 134 kHz                                                     | 50 dB $\mu$ V/m                         |
| HUF5750                  | Keyless Ride         | 434,42 MHz                                                  | 10 mW                                   |
| HUF8465                  | Keyless Ride         | 134,45 kHz                                                  | 42 dB $\mu$ V/m                         |
| HUF5794                  | Keyless Ride         | 433,92 MHz                                                  | 10 mW                                   |
| HUF8485                  | Keyless Ride         | 134,45 kHz                                                  | 42 dB $\mu$ V/m                         |
| ZB001                    | Keyless Ride         | 134.5 kHz                                                   | allowed<br>66 dB $\mu$ A/<br>m@ 10m     |
| ZB002                    | Keyless Ride         | 433.92 MHz                                                  | max.<br>10 dBm<br>e.r.p                 |
| TXBM-WMR                 | DWA                  | 433.05 MHz - 434.79 MHz                                     | 18,8 dBm                                |
| RDC3                     | RDC                  | 433.92 MHz                                                  | <13 mW                                  |
| Wus Moto gen 3           | RDC                  | 433,05 MHz - 434,79 MHz                                     | <10 mW<br>e.r.p.                        |
| MC24MA4                  | RDC                  |                                                             |                                         |
| WCA Motorrad-Ladestafach | Charging compartment | 110 kHz - 115 kHz                                           | < 6 W                                   |
| ICC6.5in                 | Instrument Cluster   | Bluetooth: 2402 MHz - 2480 MHz<br>WLAN: 2412 MHz - 2462 MHz | Bluetooth:<br>< 4 dBm<br>WLAN: < 20 dBm |

| <b>Radio equipment</b> | <b>Component</b>           | <b>Frequency band</b>                                                                                                                                         | <b>Output/Transmission Power</b>                         |
|------------------------|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| ICC10in                | Instrument Cluster         | Bluetooth: 2402 MHz - 2480 MHz<br>WLAN: 2402 MHz - 2472 MHz                                                                                                   | Bluetooth: < +4 dBm<br>WLAN: < +14 dBm                   |
| MRR e14FCR             | ACC                        | 76 - 77 GHz                                                                                                                                                   | Peak max. 32 dBm<br>Nom max. 27 dBm                      |
| TL1P22                 | Intelligent emergency call | 832 MHz - 862 MHz<br>880 MHz - 915 MHz<br>1710 MHz - 1785 MHz<br>1920 MHz - 1980 MHz<br>2500 MHz - 2570 MHz<br>2570 MHz - 2620 MHz<br>GNSS: 1559 MHz-1610 MHz | 23 dBm<br>33 dBm<br>30 dBm<br>24 dBm<br>23 dBm<br>23 dBm |
| MCR001                 | Audio system               |                                                                                                                                                               |                                                          |

# Declaration of Conformity

## Radio equipment electronic immobiliser (EWS4)

For all countries without EU

### Technical information

Frequency Band: 134 kHz  
(Transponder: TMS37145 /  
Type DST80, TMS3705  
Transponder Base Station IC)  
Output Power: 50 dBμV/m

### Manufacturer and Address

Manufacturer:  
BECOM Electronics GmbH  
Address: Technikerstraße 1,  
A-7442 Hochstraß

### Argentina

 **RAMATEL**  
H-25246

### Australia/New Zealand



R-NZ

### Brunei



TA No: DTA-007061

### United Arab Emirates

TRA  
REGISTERED No:  
ER89926/20

DEALER No:  
DA96133I20

### Philippiens



**NTC**

Type Approved  
No.: ESD-RCE-2023298

### South Africa



TA-2020/6131

APPROVED

### India

ETA-SD-20200905860

### Belarus



## Indonesia

72790/SDPPI/2021  
13349




Dilarang melakukan perubahan  
Spesifikasi yang dapat  
Menimbulkan gangguan fisik  
dan/atau elektromagnetik  
terhadap lingkungan sekitarnya

## Taiwan



低功 電波 射性電機管 辦法  
第十二條 經型式認證合格之低  
功率射頻電 機，非經許可，公  
司、商號或使用者均不得擅 自變  
更頻率、加大功率或變更原設計  
之特性及 功能。第十四條 低功  
率射頻電機之使用不 得影響飛航  
安全及干擾合法通信；經發現有  
干 擾現象時，應立即停用，並改  
善至無干擾時方 得繼續使用。前  
項合法通信，指依電信法規定作  
業之無線電 通信。

## Paraguay

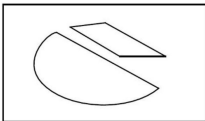

CONATEL

NR: 2020-11-I-0834

## Malaysia



RFCL/47A/0920/S(20-3358)

## Singapore

Complies with  
IMDA Standards  
N3504-20

## Israel

מספר אישור אלחוטי של משרד התקשורת הוא  
51-74908  
אסור להחליף את האנטנה המקורית של המכשיר  
ולא  
לעשות בו כל שינוי טכני אחר

## United States (USA)

Contains FCC ID:

ODE-MREWS5012

FCC § 15.19 Labelling requirements

This device complies with part 15 of the FCC Rules and Industry Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC § 15.21 Information to user

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Requirements

To comply with FCC RF exposure compliance requirements, the device must be installed to provide a separation distance of at least 20 cm from all persons.

## Serbia



P1620118300

## Canada

Contains IC:


10430A-MREWS5012

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Vietnam

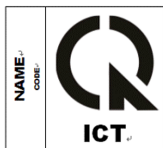

A1109091120AF04A3

# Declaration of Conformity

## Keyless Ride ECU

For all Countries without EU

**Model name: HUF8485**

## Technical information

Frequenzy band: 134,45 kHz  
Output/Transmission Power:  
42 dB $\mu$ V/m

## Manufacturer and Address

Huf H $\ddot{u}$ lsbeck &  
F $\ddot{u}$ rst GmbH & Co. KG  
Steeger Str. 17,  
42551 Velbert, Germany

## Argentina

**R** RAMATEL

H-27411

## Morocco

AGREE PAR L'ANRT MAROC  
Numéro d'agrément: MR00031290ANRT2022  
Date d'agrément: 06/01/2022

## Nigeria

Connection and use of this communications  
equipment is permitted by the Nigerian  
Communications Commission

## United Arab Emirates



TRA - United Arab Emirates

Dealer ID: DA36976/14  
TA RTTE: ER04912/22  
Model: HUF8485  
Type: BMW



## Malaysia



## Philippines



**NTC**

Type Approved  
No. ESD-RCE-2228692

## South Africa



TA-2022/0251

APPROVED

## Vietnam




## Indonesia

81597/SDPPI/2022



13349

## Paraguay

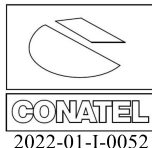

## Pakistan



## Oman

OMAN - TRA  
R/13020/22  
D100428

## Singapore

Complies with  
IMDA Standards  
DA105282

## Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

## Thailand



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



**nadb.** | โทรคมนาคม  
กำกับดูแลเพื่อประชาชน  
Call Center 1200 (Inswr)

# Declaration of Conformity

## Keyless Ride Key

For all Countries without EU

**Model name: HUF5794**

## Technical information

Frequenzy band: 433,92 MHz

Output/Transmission Power:

10 mW

## Manufacturer and Address

Huf Hülsbeck &

Fürst GmbH & Co. KG

Steeger Str. 17,

42551 Velbert, Germany

## Oman

OMAN - TRA

R/13021/22

D100428

## Morocco

AGREE PAR L'ANRT MAROC

Numéro d'agrément: MR00031289ANRT2022

Date d'agrément: 06/01/2022

## Nigeria

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission

## United Arab Emirates



TRA - United Arab Emirates

Dealer ID: DA36976/14

TA RTTE: ER04909/22

Model: HUF5794

Type: BMW



## Malaysia



## Philippines



NTC

Type Approved

No. ESD-RCE-2228693

## South Africa



TA-2022/0252

APPROVED

## Vietnam



## Indonesia

81598/SDPPI/2022



13349

## Paraguay



## Pakistan



## Belarus



## Serbia



## Singapore

Complies with  
IMDA Standards  
DA105282

## Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

## Thailand



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



**nadb.** | โทรคมนาคม  
กำกับดูแลเพื่อประชาชน  
Call Center 1200 (Inswr)

# Declaration of Conformity

## Keyless Ride ECU

For all Countries without EU

**Model name: HUF8465**

## Technical information

Frequenzy band: 134,45 kHz  
Output/Transmission Power:  
42 dBµV/m

## Manufacturer and Address

Huf Hülsbeck &  
Fürst GmbH & Co. KG  
Steeger Str. 17,  
42551 Velbert, Germany

## Argentina

**R. RAMATEL**

H-27885

## Morocco

AGREE PAR L'ANRT MAROC  
Numéro d'agrément: MR 9389 ANRT 2014  
Date d'agrément: 24/06/2014

## Nigeria

Connection and use of this communications  
equipment is permitted by the Nigerian  
Communications Commission


## United Arab Emirates



TRA – United Arab Emirates

Dealer ID: DA36976/14  
TA RTTE: ER59309/17  
Model: HUF8465  
Type: ELV incl. ECU

## Malaysia



**MCMC**  
HIDF17000037

## Philippines



**NTC**

Type Approved  
No. ESD-1409281C

## South Africa



TA-2014/886

APPROVED

## Vietnam




## Indonesia

81555/SDPPI/2022  
13349



## Paraguay



**CONATEL**

2020-05-I-0278

## Singapore

Complies with  
IMDA Standards  
DA101586

## Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

## Thailand



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มิ ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



**nadb.** | โทรคมนาคม  
กำกับดูแลเพื่อประชาชน  
Call Center 1200 (InsWร)

# Declaration of Conformity

## Keyless Ride Key

For all Countries without EU

**Model name: HUF5750**

## Technical information

Frequenzy band: 434,42 MHz

Output/Transmission Power:

10 mW

## Manufacturer and Address

Huf Hulsbeck &

Fürst GmbH & Co. KG

Steeger Str. 17,

42551 Velbert, Germany

## Argentina

**CNC** COMISIÓN NACIONAL  
DE COMUNICACIONES

H-17115

## Morocco

AGREE PAR L'ANRT MAROC

Numéro d'agrément: MR 8851 ANRT 2014

Date d'agrément: 17/01/2014

## Nigeria

Connection and use of this communications  
equipment is permitted by the Nigerian  
Communications Commission

## United Arab Emirates



**TRA – United Arab Emirates**

Dealer ID: DA36976/14


TA RTE: ER57698/17

Model: HUF5750

Type: RF transceiver for BMW Motorcycles



## Malaysia



**MCMC**

HIDF17000037

## Philippines



**NTC**

Type Approved

No. ESD-1408693C

## South Africa



TA-2013/1674

APPROVED

## Vietnam



THACO AUTO

C9000248

**ICT**


## Indonesia

81556/SDPPI/2022



13349

## Paraguay



**CONATEL**

2020-05-I-0277

## Belarus



## Singapore

Complies with  
IMDA Standards  
DA101586

## Serbia



M005 19

## Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

## Thailand



nabp.

เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มิ ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



**nabp.** | โทรคมนาคม  
กำกับดูแลเพื่อประชาชน  
Call Center 1200 (InsWRI)



## 224 INDEX

### A

Abbreviations and symbols, 4

#### ABS

Engineering details, 110

Indicator and warning  
light, 33

Self-diagnosis, 96

Adaptive Headlight, 120

Engineering details, 120

#### Anti-theft alarm

activating, 63

adjusting, 65

deactivating, 65

Indicator light, 19

operating, 63

Warning light, 34

#### ASC

Control, 17

Engineering details, 114

Indicator and warning  
light, 33

operating, 66

Self-diagnosis, 97

switching off, 66

switching on, 66

#### Automatic Stability Control

ASC, 114

#### Average values

resetting, 56

### B

#### Battery

installing, 152

Maintenance instructions, 149

Position on the vehicle, 16

recharging connected  
battery, 149

recharging disconnected

battery, 150

removing, 151

Technical data, 182

Voltage of the vehicle

electrical system critical, 32

#### Brake fluid

Checking fluid level,

front, 132

Checking fluid level, rear, 133

Reservoir, front, 15

Reservoir, rear, 15

#### Brake pads

checking front, 130

checking rear, 131

Running in, 98

#### Brakes

Adjusting handlebar levers, 84

Checking operation, 130

Safety information, 99

Technical data, 181

### C

#### Care

Care products, 166

Chrome, 168

Paintwork preservation, 169

Washing the vehicle, 166

#### Chassis and suspension

Technical data, 180

#### Checklist, 94

#### Clock

Display: CLOCK, 54

#### Clutch

Adjusting handlebar levers, 84

Checking operation, 134

Technical data, 178

- Cruise control
  - Control, 17
  - operating, 68

**D**

- Daytime riding lights
  - automatic daytime riding light, 51
- Diagnostic connector
  - disengaging, 155
  - Position on the vehicle, 14
  - securing, 156
- Dimensions
  - Technical data, 183
- Dynamic Brake Control, 117
  - Engineering details, 117
- Dynamic engine brake control, 116

**E**

- Electrical system
  - Technical data, 182
- Emergency off switch (kill switch), 18
  - operating, 49
- Engine, 31
  - Engine electronics indicator light, 30
  - severe fault, 31
  - starting, 95
  - Technical data, 178
- Engine oil
  - Checking fill level, 127
  - Filler neck, 15
  - Technical data, 177
  - topping up, 128

- Engine temperature
  - too high, 29
  - Warning light for overheating, 29

**F**

- Final drive
  - Technical data, 179
- Frame
  - Technical data, 179
- Front-wheel stand
  - installing, 127
- Fuel
  - Filler neck, 14
  - Fuel reserve, 37
  - Refuelling, 102
  - Technical data, 177
- Fuel reserve
  - Display distance: KM R, 54
  - Indicator light, 37
- Fuses
  - Fuse assignment, 155
  - Position on the vehicle, 16
  - replacing, 154
  - Technical data, 182

**G**

- General views
  - Behind the side trim panel, right, 16
  - Indicator and warning lights, 22
  - Instrument cluster, 19
  - Left multifunction switch, 17
  - left side of vehicle, 14
  - Multifunction display, 23
  - Right handlebar fitting, 18
  - right side of vehicle, 15

## 226 INDEX

### H

- Hazard warning flashers
  - Control, 17
  - operating, 49
- Headlight
  - Adjusting headlight beam throw, 83
  - Headlight beam throw, 82
- Headlight courtesy delay
  - feature, 50
- Heated handlebar grips
  - operating, 73
- Hill Start Control, 70, 120
  - cannot be activated, 38
  - Engineering details, 119
  - Indicator and warning lights, 38
  - operating, 71
  - switching on and off, 70
- Horn, 17

### I

- Ignition
  - Control, 18
  - Switching off ignition, 46
  - Switching on ignition, 45
- Immobiliser
  - Spare key, 48
  - Warning light, 29
- Indicator lights, 19
  - Overview, 22
- Instrument cluster
  - Adjusting the brightness of the backlighting, 60
  - Ambient-light brightness sensor, 19
  - Configure displays, 62
  - Overview, 19
  - Set the units, 61

### J

- Jump-starting, 147

### K

- Keyless Ride
  - Battery of the radio-operated key is empty or loss of the radio-operated key, 46
  - Replacing battery of radio-operated key, 47
  - Warning light, 29
- Keys, 45

### L

- Lighting
  - Indicator light for faulty bulb, 32
  - Replacing LED light sources, 147
  - Technical data, 183
- Lights
  - automatic daytime riding light, 51
  - Control, 17
  - Headlight courtesy delay feature, 50
  - Headlight flasher, operating, 50
  - High-beam headlight, operating, 50
  - Low-beam headlight, 49
  - Operating auxiliary headlights, 51
  - Parking lights, 50
  - Side light, 50
- Luggage, 77, 78
  - lashing, 161

**M****Maintenance**

- Maintenance schedule, 192

**Maintenance confirmations, 194****Maintenance intervals, 191****Mirrors**

- adjusting, 82

**Mobility services, 190****Motorcycle**

- care, 164

- cleaning, 164

- lashing, 104

- laying up, 169

- parking, 101

- restoring to use, 169

**Multifunction display, 19**

- Exit SETUP, 57

- Overview, 23

- Selecting display, 54

- SETUP, 57

**Multifunction switch**

- Overview, left side, 17

- Overview, right side, 18

**O****Odometer**

- Display: KM, 54

- resetting, 56

**P****Parking, 101****Parking light, 50****Passenger seat**

- installing, 74

- removing, 74

**Payload table**

- Position on the vehicle, 16

**Peg**

- adjusting, 88

**Performance figures**

- Technical data, 184

**Power socket**

- Notes on use, 160

- Position on the vehicle, 14

**Pre-Ride-Check, 96****R****RDC**

- Engineering details, 118

- Warning indicators, 35, 36

**Rear-wheel stand**

- installing, 127

**Recycling, 189****Refuelling, 102****reverser, 71****Rider's seat**

- installing, 74

- removing, 74

**Riding mode, 67**

- Control, 17

- Engineering details, 115

**Running in, 98****S****Safety instructions**

- for brakes, 99

- for riding, 92

**Screw connections, 175****Service, 189**

- Reporting safety-relevant defects, 188

- Service history, 190

**Service-due indicator, 39****Settings**

- Display: SETUP ENTER, 54

## 228 INDEX

### SETUP

- ending, 57
- resetting, 58
- selecting, 57

### Shift lever

- Adjusting gearshift lever, 86

### Silencer, 146

### Spark plugs

- Technical data, 183

### Speedometer, 19, 23

### Spring preload

- adjusting, 85

### Starting, 95

- Control, 18

### Steering lock

- Locking the steering lock, 44
- Unlocking steering lock, 44

## T

### Technical data

- Battery, 182
- Brakes, 181
- Chassis and suspension, 180
- Clutch, 178
- Dimensions, 183
- Electrical system, 182
- Engine, 178
- Engine oil, 177
- Final drive, 179
- Frame, 179
- Fuel, 177
- Fuses, 182
- Lighting, 183
- Performance figures, 184
- Spark plugs, 183
- Transmission, 179
- Weights, 184
- Wheels and tyres, 181

### Toolkit

- Contents, 124
- Position on the vehicle, 16

### Torques, 175

### Transmission

- Technical data, 179

### Trim panels, 125

### Tripmeter

- Display: KM 1 or KM A, 54

### Troubleshooting chart, 174

### Turn indicators

- Control, 17
- operating, 49

### Type plate

- Position on the vehicle, 14

### Tyre pressures

- Position on the vehicle, 14

### Tyres

- Checking tread depth, 134, 135
- Checking tyre pressure, 134
- Checking tyre pressures, 134
- Pressures, 182
- Running in, 98
- Technical data, 181

## W

### Warning indicator lights, 31

- ABS, 33
- Anti-theft alarm, 34
- ASC, 33
- Bulb faulty, 32
- Electronic immobiliser, 29
- Engine electronics, 30
- Engine temperature, 29
- Engine warning, 31
- Fuel reserve, 37
- Hill Start Control, 38
- Mode of presentation, 24

- Overtemperature, 29
- Overview, 22
- RDC, 35, 36
- Voltage of the vehicle
  - electrical system critical, 32
- Warning light, drive malfunction, 31
- Warning lights, 19
- Warnings, overview, 26
- Weights
  - Technical data, 184
- Wheels
  - Change of size, 136
  - Checking rims, 136
  - Checking spokes, 136
  - Installing rear wheel, 144
  - Removing rear wheel, 142
  - Technical data, 181
- Windscreen, 76
  - Removal, 75

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2022 Bayerische Motoren  
Werke Aktiengesellschaft  
80788 Munich, Germany

Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Original rider's manual, printed in Germany.

## Important data for refuelling:

### Fuel

|                        |                                                                                                                                                                                                                                    |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Recommended fuel grade |  Super unleaded (max. 15% ethanol, E15)<br> 95 ROZ/RON<br>90 AKI |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                        |                                                                                                                                                                                                                                       |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alternative fuel grade |  Regular, unleaded (max. 15% ethanol, E15)<br> 91 ROZ/RON<br>87 AKI |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                      |              |
|----------------------|--------------|
| Usable fuel capacity | approx. 16 l |
|----------------------|--------------|

|              |             |
|--------------|-------------|
| Fuel reserve | approx. 4 l |
|--------------|-------------|

### Tyre pressures

|                      |                    |
|----------------------|--------------------|
| Tyre pressure, front | 2.5 bar, Tyre cold |
|----------------------|--------------------|

|                     |                                                                                        |
|---------------------|----------------------------------------------------------------------------------------|
| Tyre pressure, rear | 2.9 bar, One-up, tyre cold<br>2.9 bar, Two-up mode with load-<br>ing, with a cold tyre |
|---------------------|----------------------------------------------------------------------------------------|

For further information on all aspects of your vehicle, visit: [bmw-motorrad.com](https://www.bmw-motorrad.com)

