



**BMW  
MOTORRAD**

# **RIDER'S MANUAL**

R 1250 R



**MAKE LIFE A RIDE**

---

---

**Vehicle data**

Model

---

Vehicle Identification Number

---

Colour code

---

Date of first registration

---

Registration number

---

---

**Dealership details**

Person to contact in Service department

---

Ms/Mr

---

Phone number

---

Dealership address/phone number (company stamp)

---

# YOUR BMW.

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

## **About this rider's manual**

Read this rider's manual carefully before starting your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features.

In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

If the time comes to sell your BMW, please remember to hand over this rider's manual to the new owner. It is an important part of the vehicle.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

|                                     |           |                                          |           |
|-------------------------------------|-----------|------------------------------------------|-----------|
| <b>01 GENERAL INSTRUCTIONS</b>      | <b>2</b>  | <b>03 STATUS INDICATORS</b>              | <b>26</b> |
| Quick & easy reference              | 4         | Indicator and warning lights             | 28        |
| Abbreviations and symbols           | 4         | TFT display in Pure Ride view            | 29        |
| Equipment                           | 5         | TFT display in Menu view                 | 30        |
| Technical data                      | 5         | Warning indicators                       | 31        |
| Currency                            | 6         |                                          |           |
| Additional sources of information   | 6         | <b>04 OPERATION</b>                      | <b>62</b> |
| Certificates and operating licences | 6         | Ignition switch/steering lock            | 64        |
| Data memory                         | 6         | Ignition with Keyless Ride               | 66        |
| Intelligent emergency call system   | 11        | Emergency-off switch (kill switch)       | 71        |
|                                     |           | Intelligent emergency call               | 71        |
| <b>02 GENERAL VIEWS</b>             | <b>16</b> | Lighting                                 | 74        |
| General view, left side             | 18        | Dynamic Traction Control (DTC)           | 78        |
| General view, right side            | 19        | Electronic Suspension Adjustment (D-ESA) | 80        |
| Underneath the seat                 | 20        | Riding mode                              | 82        |
| Multifunction switch, left          | 21        | Riding mode PRO                          | 85        |
| Multifunction switch, right         | 22        | Cruise control                           | 86        |
| Multifunction switch, right         | 23        | Hill Start Control (HSC)                 | 88        |
| Instrument cluster                  | 24        | Shift light                              | 91        |
|                                     |           | Anti-theft alarm (DWA)                   | 92        |
|                                     |           | Tyre pressure monitoring (RDC)           | 95        |
|                                     |           | Heating                                  | 95        |
|                                     |           | Seats                                    | 97        |

|                             |            |                                        |            |
|-----------------------------|------------|----------------------------------------|------------|
| <b>05 TFT DISPLAY</b>       | <b>102</b> | <b>Refuelling</b>                      | <b>154</b> |
| General notes               | 104        | Securing motorcycle for transportation | 159        |
| Principle                   | 105        |                                        |            |
| Pure Ride view              | 112        |                                        |            |
| General settings            | 113        | <b>08 ENGINEERING DETAILS</b>          | <b>162</b> |
| Bluetooth                   | 114        | General notes                          | 164        |
| My vehicle                  | 118        | Antilock Brake System (ABS)            | 164        |
| Sport                       | 121        | Dynamic Traction Control (DTC)         | 168        |
| Navigation                  | 123        | Dynamic engine brake control (MSR)     | 170        |
| Media                       | 125        | Dynamic ESA                            | 170        |
| Telephone                   | 126        | Riding mode                            | 171        |
| Display software version    | 127        | Dynamic Brake Control                  | 175        |
| Display licence information | 127        | Tyre pressure control (RDC)            | 175        |
|                             |            | Gear Shift Assistant                   | 177        |
| <b>06 ADJUSTMENT</b>        | <b>128</b> | Hill Start Control (HSC)               | 179        |
| Mirrors                     | 130        | ShiftCam                               | 180        |
| Headlight                   | 131        | Adaptive headlight                     | 181        |
| Clutch                      | 131        |                                        |            |
| Gearshift lever             | 133        | <b>09 MAINTENANCE</b>                  | <b>182</b> |
| Brakes                      | 133        | General notes                          | 184        |
| Footrests                   | 135        | Toolkit                                | 185        |
| Spring preload              | 136        | Front-wheel stand                      | 185        |
| Damping                     | 137        | Rear-wheel stand                       | 186        |
|                             |            | Engine oil                             | 186        |
| <b>07 RIDING</b>            | <b>140</b> | Brake system                           | 188        |
| Safety information          | 142        | Clutch                                 | 193        |
| Regular check               | 144        | Coolant                                | 193        |
| Starting                    | 145        | Tyres                                  | 194        |
| Running in                  | 148        |                                        |            |
| Shifting gear               | 149        |                                        |            |
| Brakes                      | 151        |                                        |            |
| Parking your motorcycle     | 153        |                                        |            |

|                                    |            |                                   |            |
|------------------------------------|------------|-----------------------------------|------------|
| Wheel rims                         | 195        | Engine                            | 250        |
| Wheels                             | 196        | Clutch                            | 251        |
| Silencer                           | 203        | Transmission                      | 251        |
| Air filter                         | 206        | Final drive                       | 252        |
| Lighting                           | 208        | Frame                             | 252        |
| Jump-starting                      | 208        | Chassis and suspension            | 252        |
| Battery                            | 210        | Brakes                            | 253        |
| Fuses                              | 214        | Wheels and tyres                  | 254        |
| Diagnostic connector               | 216        | Electrical system                 | 255        |
|                                    |            | Anti-theft alarm                  | 256        |
| <b>10 ACCESSORIES</b>              | <b>218</b> | Dimensions                        | 256        |
| General notes                      | 220        | Weights                           | 257        |
| Power sockets                      | 220        | Performance figures               | 257        |
| USB charging socket                | 221        |                                   |            |
| Cases                              | 222        | <b>13 SERVICE</b>                 | <b>258</b> |
| Topcase                            | 224        | Reporting safety-relevant defects | 260        |
| Navigation system                  | 227        | Recycling                         | 261        |
|                                    |            | BMW Motorrad                      |            |
| <b>11 CARE</b>                     | <b>234</b> | Service                           | 261        |
| Care products                      | 236        | BMW Motorrad service history      | 262        |
| Washing the vehicle                | 236        | BMW Motorrad Mobility services    | 262        |
| Cleaning easily damaged components | 238        | Maintenance work                  | 263        |
| Care of paintwork                  | 239        | BMW Motorrad                      |            |
| Paint preservation                 | 239        | Service                           | 263        |
| Laying up the motorcycle           | 239        | Maintenance schedule              | 264        |
| Restoring motorcycle to use        | 240        | BMW Motorrad running-in check     | 265        |
|                                    |            | Maintenance confirmations         | 266        |
| <b>12 TECHNICAL DATA</b>           | <b>242</b> | Service confirmations             | 278        |
| Troubleshooting chart              | 244        |                                   |            |
| Threaded fasteners                 | 246        |                                   |            |
| Fuel                               | 249        |                                   |            |
| Engine oil                         | 250        |                                   |            |

|                              |            |
|------------------------------|------------|
| <b>APPENDIX</b>              | <b>280</b> |
| <b>Declaration of Con-</b>   |            |
| <b>formity</b>               | <b>281</b> |
| <b>Certificate for elec-</b> |            |
| <b>tronic immobiliser</b>    | <b>284</b> |
| <b>Certificate for Key-</b>  |            |
| <b>less Ride HUF5750</b>     | <b>287</b> |
| <b>Certificate for tyre</b>  |            |
| <b>pressure control (Re-</b> |            |
| <b>ifendruck-Control,</b>    |            |
| <b>RDC)</b>                  | <b>289</b> |
| <b>Certificate for TFT</b>   |            |
| <b>instrument cluster</b>    | <b>290</b> |
| <b>INDEX</b>                 | <b>294</b> |

# **GENERAL INSTRUCTIONS**

**01**

---

|                                            |           |
|--------------------------------------------|-----------|
| <b>QUICK &amp; EASY REFERENCE</b>          | <b>4</b>  |
| <b>ABBREVIATIONS AND SYMBOLS</b>           | <b>4</b>  |
| <b>EQUIPMENT</b>                           | <b>5</b>  |
| <b>TECHNICAL DATA</b>                      | <b>5</b>  |
| <b>CURRENCY</b>                            | <b>6</b>  |
| <b>ADDITIONAL SOURCES OF INFORMATION</b>   | <b>6</b>  |
| <b>CERTIFICATES AND OPERATING LICENCES</b> | <b>6</b>  |
| <b>DATA MEMORY</b>                         | <b>6</b>  |
| <b>INTELLIGENT EMERGENCY CALL SYSTEM</b>   | <b>11</b> |

## 4 GENERAL INSTRUCTIONS

### QUICK & EASY REFERENCE

An important aspect of this rider's manual is that it can be used for quick and easy reference. Consulting the extensive index at the end of this rider's manual is the fastest way to find information on a particular topic or item. To first read an overview of your vehicle, please go to Chapter 2. All maintenance and servicing work on the vehicle is documented in the "Service" section. The record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims.

### ABBREVIATIONS AND SYMBOLS

 **CAUTION** Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

 **WARNING** Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

 **DANGER** High-risk hazard. Non-avoidance leads to fatal or severe injury.

 **ATTENTION** Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

 Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.

- Instruction.
- » Result of an activity.
- ➡ Reference to a page with more detailed information.
- ◁ Indicates the end of a passage relating to specific accessories or items of equipment.
-  Tightening torque.
-  Technical data.
- NV National-market version.

|       |                                                                                                                                                                                 |
|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OE    | Optional equipment. The vehicles are assembled complete with all the BMW Motorrad optional equipment originally ordered.                                                        |
| OA    | Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle. |
| ABS   | Anti-lock brake system.                                                                                                                                                         |
| EWS   | Electronic immobiliser.                                                                                                                                                         |
| D-ESA | Electronic chassis and suspension adjustment.                                                                                                                                   |
| DTC   | Dynamic Traction Control.                                                                                                                                                       |
| DWA   | Anti-theft alarm.                                                                                                                                                               |
| RDC   | Tyre pressure monitoring.                                                                                                                                                       |

---

## EQUIPMENT

When you ordered your BMW Motorrad, you chose various items of custom equipment. This rider's manual describes optional equipment (OE) and selected optional accessories (OA) provided by BMW. This explains why the manual may also contain descriptions of equipment that you might not have selected. Please note, too, that on account of country-specific differences, your motorcycle might not be exactly as illustrated.

If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

---

## TECHNICAL DATA

All dimensions, weights and power ratings stated in the rider's manual are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e. V. (DIN).

Technical data and specifications in this rider's manual are guide values. The vehicle-specific data may deviate from these, for example as a result

## 6 GENERAL INSTRUCTIONS

of selected optional equipment, the national-market version or country-specific measuring procedures. Detailed values can be taken from the vehicle registration documents, or can be obtained from your authorised BMW Motorrad retailer or another qualified service partner or specialist workshop. The specifications in the vehicle documents always have priority over the information provided in this rider's manual.

---

### CURRENCY

The high safety and quality standards of BMW motorcycles are maintained by constant development work on designs, equipment and accessories. Because of this, your vehicle may differ from the information supplied in the rider's manual. Nor can BMW Motorrad entirely rule out errors and omissions. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in these operating instructions.

Up-to-date information is available at

**[bmw-motorrad.com/service](http://bmw-motorrad.com/service)**.

---

### ADDITIONAL SOURCES OF INFORMATION

#### Authorised BMW Motorrad retailer

Your authorised BMW Motorrad retailer will be happy to answer any questions you may have.

#### Internet

The rider's manual for your vehicle, operating and installation instructions for accessories and general information about BMW Motorrad, in relation to technology, for example, are available for download from **[bmw-motorrad.com/manuals](http://bmw-motorrad.com/manuals)**.

---

### CERTIFICATES AND OPERATING LICENCES

The certificates for the vehicle and the official operating licences for accessories can be downloaded from **[bmw-motorrad.com/certification](http://bmw-motorrad.com/certification)**.

---

### DATA MEMORY

#### General

Control units are installed in the vehicle. Control units process data that they receive, for example, from vehicle sensors, or that they generate themselves or exchange between

each other. Some control units are required for the vehicle to function safely or provide assistance during riding, for example assistance systems. In addition, control units enable comfort or infotainment functions.

Information on data that has been stored or exchanged can be obtained from the manufacturer of the vehicle, for example via a separate booklet.

### **Personal reference**

Each vehicle is identified with a clear vehicle identification number. Depending on the country, the vehicle identification number, the number plate and the corresponding authorities can be referenced to ascertain the vehicle owner. There are also other ways to use data obtained from the vehicle to trace the rider or vehicle owner, for example using the Connected-Drive user account.

### **Data protection rights**

In accordance with applicable data protection laws, vehicle users have certain rights in relation to the manufacturer of the vehicle or in relation to companies which collect or process personal data.

Vehicle users have the right to obtain full information at no cost from persons or entities storing personal data of the vehicle user.

These entities may include:

- Manufacturer of the vehicle
- Qualified service partners
- Specialist workshops
- Service providers

Vehicle users have the right to request information on what personal data has been stored, for what purpose the data is used, and where the data comes from. To obtain this information, proof of ownership or use is required.

The right to information also includes information about data that has been shared with other companies or entities. The website of the vehicle manufacturer contains the applicable data protection information. This data protection information includes information on the right to have data deleted or corrected. The manufacturer of the vehicle also provides their contact details and those of the data protection officer on their website.

## 8 GENERAL INSTRUCTIONS

The vehicle owner can also request that a BMW Motorrad Retailer or another qualified service partner or specialist workshop read out the data that is stored in the vehicle for a charge.

The vehicle data is read out using the legally prescribed socket for on-board diagnosis (OBD) in the vehicle.

### **Legal requirements for the disclosure of data**

As part of its legal responsibilities, the manufacturer of the vehicle is obligated to make its stored data available to the relevant authorities. This data is provided in the required scope in individual cases, for example to clarify a criminal offence. In the context of applicable laws, public agencies are entitled in individual cases to read out data from the vehicle themselves.

### **Operating data in the vehicle**

Control units process data to operate the vehicle.

This includes, for example:

- Status reports of the vehicle and its individual components, for example wheel revolutions, wheel speed, deceleration
- Environmental conditions, for example temperature

The data is only processed in the vehicle itself and is generally non-permanent. The data is not stored beyond the operating period.

Electronic components, for example control units, contain components for storing technical information. Information can be temporarily or permanently stored on the vehicle condition, component loads, incidents or errors.

This information is generally used to document the condition of a component, a module, a system or the surrounding area, for example:

- Operating conditions of system components, for example filling levels, tyre pressure
- Malfunctions and faults in important system components, for example light and brakes
- Response of the vehicle in special riding situations, for example engagement of the driving dynamics systems

- Information on incidents resulting in damage to the vehicle

The data is necessary for the provision of control unit functions. Furthermore, the data is used to detect and rectify malfunctions and to enable the vehicle manufacturer to optimise vehicle functions.

The vast majority of this data is non-permanent and is only processed in the vehicle itself. Only a small amount of the data is stored in incident or fault memories as required by events.

If services are accessed, for example repairs, service processes, warranty cases and quality assurance measures, this technical information can be read out of the vehicle together with the vehicle identification number.

The information can be read out by a BMW Motorrad Retailer or another qualified service partner or specialist workshop. The legally stipulated socket for on-board diagnosis (OBD) in the vehicle is used to read out the data. The data is obtained, processed and used by the

relevant parts of the retailer network. The data is used to document the technical conditions of the vehicle, to help with error localization, to comply with warranty obligations and to improve quality.

In addition, the manufacturer has various product monitoring obligations arising from product liability legislation. To meet these obligations, the vehicle manufacturer requires technical data from the vehicle. The data from the vehicle can also be used to check warranty claims from the customer. Error and incident memories in the vehicle can be reset during servicing or repair work by a BMW Motorrad Retailer or another qualified service partner or specialist workshop.

## **Data input and data transfer in the vehicle**

### **General**

Depending on the equipment, comfort and customised settings can be stored in the vehicle and can be changed or reset at any time.

This includes, for example:

## 10 GENERAL INSTRUCTIONS

- Settings of the windscreen position
- Chassis and suspension settings

If required, data can be entered in the entertainment and communication system of the vehicle, for example using a smartphone.

Depending on the individual equipment, this includes:

- Multimedia data, such as music for playback
- Contacts data for use in connection with a communication system or an integrated navigation system
- Entered destinations
- Data on the use of internet services. This data can be stored locally in the vehicle or is located on a device that is connected to the vehicle, for example smartphone, USB stick, MP3 player. If this data is stored in the vehicle, the data can be deleted at any time.

This data is transferred to third parties only if personally requested within the context of using online services. This depends on the selected settings when using the services.

### **Incorporation of mobile end devices**

Depending on the equipment, mobile end devices connected to the vehicle, for example smartphones, can be controlled using the operating elements of the vehicle.

The image and sound of the mobile end device can then be output via the multimedia system. At the same time, specific information is transferred to the mobile end device. Depending on the type of integration, this includes, for example, position data and additional general vehicle information.

This enables optimal use of the selected apps, for example navigation or music playback.

The type of additional data processing is determined by the provider of the respective app. The scope of the possible settings depends on the corresponding app and the operating system of the mobile end device.

### **Services**

#### **General**

If the vehicle has a wireless connection, this enables the exchange of data between the vehicle and other systems. The

wireless connection is enabled by the vehicle's own transmitter and receiver unit or using personally integrated mobile end devices, for example smartphones. Online functions can be used using this wireless connection. These include online services and apps that are provided by the vehicle manufacturer or by other providers.

### **Services of the vehicle manufacturer**

For online services of the vehicle manufacturer, the individual functions are described at suitable points, for example rider's manual, website of the manufacturer. At the same time, information is also provided on the relevant data protection law. Personal data may be used to provide online services. Data is exchanged using a secure connection, for example with the IT systems provided by the vehicle manufacturer.

Obtaining, processing and using personal data outside of the normal provision of services requires legal permission, contractual agreement or consent. It is also possible to have the entire data connection activated or deactivated. Stat-

utory functions are excluded from this.

### **Services from other providers**

When using online services from other providers, these services are subject to the responsibility and the data protection and operating conditions of the individual provider. The vehicle manufacturer has no influence on the content that is exchanged in this instance. Information on the type, scope and purpose of the data capture and use of personal data as part of the services of third parties can be ascertained from the individual provider.

---

## **INTELLIGENT EMERGENCY CALL SYSTEM**

—with intelligent emergency call<sup>OE</sup>

### **Principle**

The intelligent emergency call system enables manual or automatic emergency calls, for example in the event of an accident.

The emergency calls are received by an emergency call centre that is commissioned by the vehicle manufacturer.

## 12 GENERAL INSTRUCTIONS

For information on operating the intelligent emergency call system and its functions see (▮▮▮ 71).

### Legal basis

Processing of personal data using the intelligent emergency call system is in line with the following regulations:

- Protection of personal data:  
Directive 95/46/EC of the European Parliament and of the Council.
- Protection of personal data:  
Directive 2002/58/EC of the European Parliament and of the Council.

The legal basis for the activation and function of the intelligent emergency call system is the concluded Connected-Ride contract for this function, as well as the corresponding laws, ordinances and directives of the European Parliament and of the European Council.

The relevant ordinances and directives regulate the protection of natural persons during the processing of personal data.

The processing of personal data by the intelligent emergency call system satisfies the

European directives for the protection of personal data. The intelligent emergency call system processes personal data only with the agreement of the vehicle owner.

The intelligent emergency call system and other services with additional benefits can process personal data only with the express permission of the person affected by the data processing, for example the vehicle owner.

### SIM card

The intelligent emergency call system operates via the mobile phone network using the SIM card installed in the vehicle. The SIM card is permanently logged into the mobile phone network to enable rapid connection setup. Data is sent to the vehicle manufacturer in the event of an emergency.

### Improving quality

The data that is transferred in an emergency is also used by the manufacturer of the vehicle to improve product and service quality.

### **Location determination**

The position of the vehicle can be determined exclusively by the mobile phone network provider based on the mobile phone site locations. It is not possible for the provider to trace a connection between the vehicle's VIN and the phone number of the installed SIM card. Only the manufacturer of the vehicle can link a VIN and the phone number of the SIM card installed in a particular vehicle.

### **Log data of emergency calls**

The log data of emergency calls is stored in a memory of the vehicle. The oldest log data is regularly deleted. The log data includes, for example, information on when and where an emergency call was made. In exceptional cases, the log data can be read out of the vehicle memory. As a rule, log data is only read out following a court order, and this is only possible if the corresponding devices are connected directly to the vehicle.

### **Automatic emergency call**

The system is designed so that, following a sufficiently serious accident, which is detected by sensors in the vehicle, an emergency call is automatically activated.

### **Sent information**

When making an emergency call using the intelligent emergency call system, the system forwards the same information to the designated emergency call centre as is forwarded to the public emergency operations centre by the statutory emergency call system eCall. In addition, the intelligent emergency call system sends the following additional information to an emergency call centre commissioned by the vehicle manufacturer and, if required, to the emergency services:

- Accident data, for example the direction of impact detected by the vehicle sensors, to assist the emergency services response.
- Contact details, for example the phone number of the installed SIM card and the phone number of the rider, if available, to enable rapid

## 14 GENERAL INSTRUCTIONS

contact with those involved in the accident if required.

### **Data storage**

The data for an activated emergency call is stored in the vehicle. The data contains information on the emergency call, for example the location and time of the emergency call.

The voice recordings of the emergency call are stored at the emergency call centre.

The voice recordings of the customer are stored for 24 hours in case details of the emergency call need to be analysed. After this, the voice recordings are deleted. The voice recordings of the employee of the emergency call centre are stored for 24 hours for quality assurance purposes.

### **Information on personal data**

The data that is processed as part of the intelligent emergency call is processed exclusively to carry out the emergency call. As part of its statutory obligation, the manufacturer of the vehicle provides information about the data that it has processed and any data that it still has stored.



# GENERAL VIEWS

02

---

|                                    |           |
|------------------------------------|-----------|
| <b>GENERAL VIEW, LEFT SIDE</b>     | <b>18</b> |
| <b>GENERAL VIEW, RIGHT SIDE</b>    | <b>19</b> |
| <b>UNDERNEATH THE SEAT</b>         | <b>20</b> |
| <b>MULTIFUNCTION SWITCH, LEFT</b>  | <b>21</b> |
| <b>MULTIFUNCTION SWITCH, RIGHT</b> | <b>22</b> |
| <b>MULTIFUNCTION SWITCH, RIGHT</b> | <b>23</b> |
| <b>INSTRUMENT CLUSTER</b>          | <b>24</b> |


## 18 GENERAL VIEWS

### GENERAL VIEW, LEFT SIDE



- 1 Clutch-fluid reservoir  
( 193)
- 2 Fuel filler neck ( 155)
- 3 Seat lock ( 97)
- 4 Passenger grab handle
- 5 Rear footrest
- 6 Setting the rear damping  
(down at the spring strut)  
( 137)  
rider footrest
- 7 USB charging socket  
( 221)


## GENERAL VIEW, RIGHT SIDE

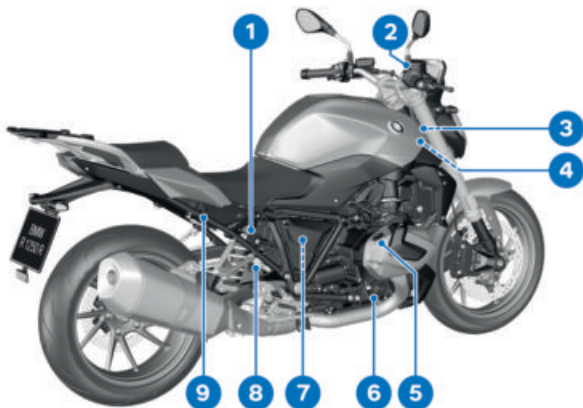


- |                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1</b> Adjustment of spring preload for rear wheel (➡ 136)</p> <p><b>2</b> Brake-fluid reservoir, front (➡ 191)</p> <p><b>3</b> Vehicle identification number (VIN) (on steering head, right)<br/>Type plate (on steering head, left)</p> <p><b>4</b> Coolant-level indicator (➡ 193)<br/>Coolant reservoir (➡ 194)</p> <p><b>5</b> Oil filler opening (➡ 187)</p> | <p><b>6</b> Engine oil level indicator (➡ 186)</p> <p><b>7</b> Behind the side trim panel:<br/>Battery (➡ 210)<br/>Remote positive terminal (➡ 208)<br/>Diagnostic connector (➡ 216)</p> <p><b>8</b> Brake-fluid reservoir, rear (➡ 192)</p> <p><b>9</b> Power socket (➡ 220)</p> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## 20 GENERAL VIEWS

### UNDERNEATH THE SEAT

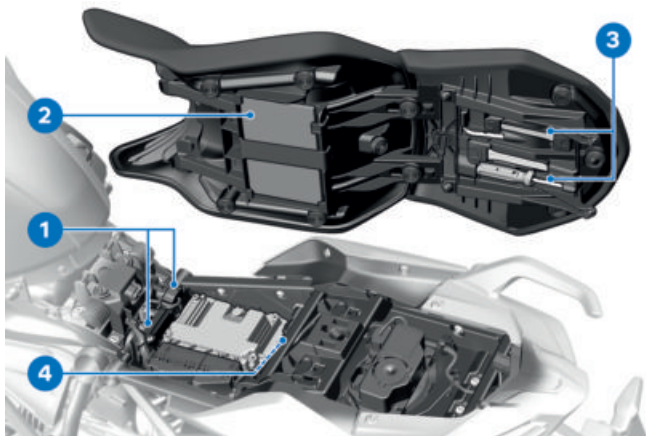

- 1 Fuses (→ 214)
- 2 Rider's manual
- 3 Toolkit (→ 185)
- 4 Payload table  
Tyre pressures table

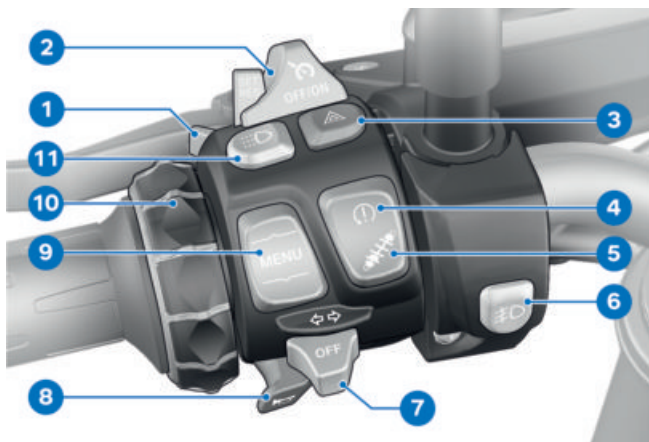**MULTIFUNCTION SWITCH, LEFT**

- |                                                           |                                       |
|-----------------------------------------------------------|---------------------------------------|
| <b>1</b> High-beam headlight and headlight flasher (➡ 74) | <b>11</b> Daytime riding light (➡ 76) |
| <b>2</b> Cruise control (➡ 86)                            |                                       |
| <b>3</b> Hazard warning lights (➡ 77)                     |                                       |
| <b>4</b> DTC (➡ 78)                                       |                                       |
| <b>5</b> Dynamic ESA (➡ 80)                               |                                       |
| <b>6</b> Auxiliary headlights (➡ 75)                      |                                       |
| <b>7</b> Turn indicators (➡ 78)                           |                                       |
| <b>8</b> Horn                                             |                                       |
| <b>9</b> MENU rocker button (➡ 105)                       |                                       |
| <b>10</b> Multi-Controller Controls (➡ 105)               |                                       |

## 22 GENERAL VIEWS

### MULTIFUNCTION SWITCH, RIGHT

—with intelligent emergency call<sup>OE</sup>



- 1** Heating (▮▮▮ 95)
- 2** Riding mode (▮▮▮ 82)
- 3** Emergency-off switch (kill switch) (▮▮▮ 71)
- 4** Starter button  
Start the engine.  
(▮▮▮ 145)
- 5** SOS button  
Intelligent emergency call  
(▮▮▮ 71)

## MULTIFUNCTION SWITCH, RIGHT


—without intelligent emergency call<sup>OE</sup>



- 1** Heating (➡ 95)
- 2** Riding mode (➡ 82)
- 3** Emergency-off switch (kill switch) (➡ 71)
- 4** Starter button  
Start the engine.  
(➡ 145)

## 24 GENERAL VIEWS

### INSTRUMENT CLUSTER

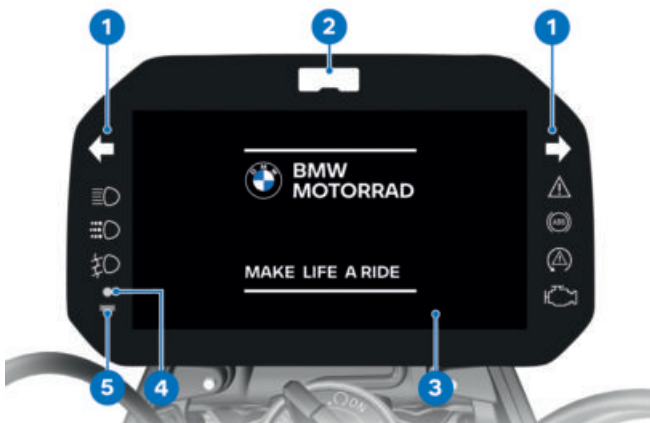

- 1 Indicator and warning lights (➡ 28)
- 2 Shift light (➡ 150)
- 3 TFT display (➡ 29)  
(➡ 30)
- 4 Indicator light  
DWA (➡ 93)  
Keyless Ride (➡ 67)
- 5 Photosensor (for adapting  
the brightness of the in-  
strument lighting)



# STATUS INDICATORS


03

---

|                                      |           |
|--------------------------------------|-----------|
| <b>INDICATOR AND WARNING LIGHTS</b>  | <b>28</b> |
| <b>TFT DISPLAY IN PURE RIDE VIEW</b> | <b>29</b> |
| <b>TFT DISPLAY IN MENU VIEW</b>      | <b>30</b> |
| <b>WARNING INDICATORS</b>            | <b>31</b> |


## 28 STATUS INDICATORS

### INDICATOR AND WARNING LIGHTS

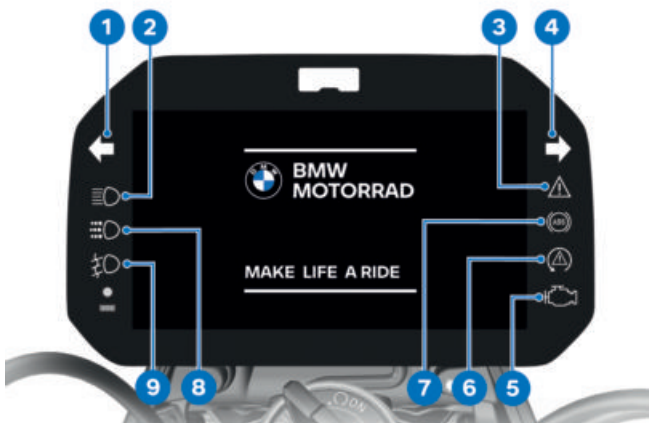

- 1 Turn indicators, left  
(➡ 78)
- 2 High-beam headlight  
(➡ 74)
- 3 General warning light  
(➡ 31)
- 4 Turn indicators, right  
(➡ 78)
- 5 Warning light, drive mal-  
function (➡ 47)
- 6 DTC (➡ 56)
- 7 ABS (➡ 55)
- 8 Daytime riding light  
(➡ 76)
- 9 Auxiliary headlights  
(➡ 75)


## TFT DISPLAY IN PURE RIDE VIEW

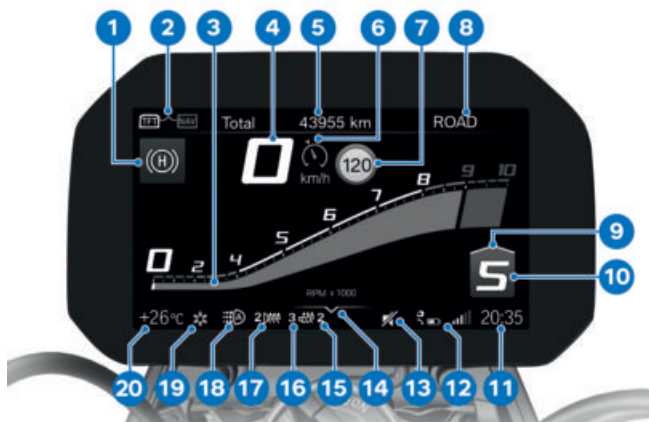

- |                                             |                                                 |
|---------------------------------------------|-------------------------------------------------|
| <b>1</b> Hill Start Control (➡ 58)          | <b>13</b> Muting (➡ 113)                        |
| <b>2</b> Change of operating focus (➡ 109)  | <b>14</b> Operating help                        |
| <b>3</b> Rev. counter (➡ 112)               | <b>15</b> Passenger seat heating (➡ 97)         |
| <b>4</b> Speedometer                        | <b>16</b> Rider's seat heating (➡ 96)           |
| <b>5</b> Status line (➡ 110)                | <b>17</b> Heated grips (➡ 95)                   |
| <b>6</b> Cruise control (➡ 86)              | <b>18</b> Automatic daytime riding light (➡ 77) |
| <b>7</b> Speed Limit Info (➡ 111)           | <b>19</b> Outside temperature warning (➡ 39)    |
| <b>8</b> Riding mode (➡ 82)                 | <b>20</b> Ambient temperature (➡ 39)            |
| <b>9</b> Recommendation to up-shift (➡ 113) |                                                 |
| <b>10</b> Gear indicator                    |                                                 |
| <b>11</b> Clock (➡ 113)                     |                                                 |
| <b>12</b> Connection status (➡ 115)         |                                                 |

## 30 STATUS INDICATORS

### TFT DISPLAY IN MENU VIEW

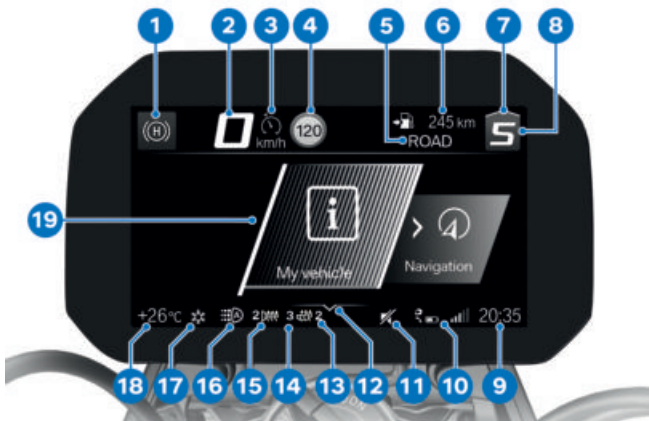

- |                                               |                                                   |
|-----------------------------------------------|---------------------------------------------------|
| <b>1</b> Hill Start Control (►►► 58)          | <b>14</b> Rider's seat heating (►►► 96)           |
| <b>2</b> Speedometer                          | <b>15</b> Heated grips (►►► 95)                   |
| <b>3</b> Cruise control (►►► 86)              | <b>16</b> Automatic daytime riding light (►►► 77) |
| <b>4</b> Speed Limit Info (►►► 111)           | <b>17</b> Outside temperature warning (►►► 39)    |
| <b>5</b> Riding mode (►►► 82)                 | <b>18</b> Ambient temperature (►►► 39)            |
| <b>6</b> Status line (►►► 110)                | <b>19</b> Menu section                            |
| <b>7</b> Recommendation to up-shift (►►► 113) |                                                   |
| <b>8</b> Gear indicator                       |                                                   |
| <b>9</b> Clock                                |                                                   |
| <b>10</b> Connection status                   |                                                   |
| <b>11</b> Muting (►►► 113)                    |                                                   |
| <b>12</b> Operating help                      |                                                   |
| <b>13</b> Passenger seat heating (►►► 97)     |                                                   |


## WARNING INDICATORS

### Mode of presentation

Warnings are indicated by the corresponding warning lights. Warnings are indicated by the 'General' warning light showing in combination with a dialogue in the instrument cluster. The 'General' warning light shows yellow or red, depending on the urgency of the warning.



The status of the 'General' warning light matches the most urgent warning. The possible warnings are listed on the next pages.

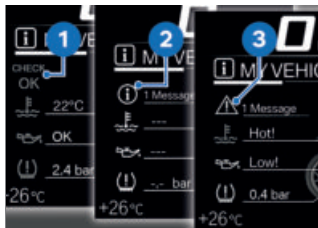

### Check Control display

The messages differ in how they show on the display. Different colours and symbols are used depending on priority:

- Green CHECK OK **1**: no message, optimum values.
- White circle with small "i" **2**: information.
- Yellow warning triangle **3**: warning, value not ideal.
- Red warning triangle **3**: warning, value critical



### Values display

Symbols **4** differ in how they show on the display. The colours used differ and reflect the urgency of the message. Along with numerical values **8** with units **7**, texts **6** are displayed as well:


### Colour of the symbol

- Green: (OK) Current value is ideal.
- Blue: (Cold!) Current temperature is low.
- Yellow: (Low!/High!) Current value is too low or too high.

## 32 STATUS INDICATORS

- Red: (Hot!/High!) Current temperature or value is too high.
- White: (---) No valid value available. Dashes **5** are displayed instead of a numerical value.

 To some extent, individual values can be processed only after the vehicle has covered a certain distance or has reached a certain speed. Dashes are displayed as placeholders for as long as a measured value cannot be displayed because the preconditions for measurement have still to be met. If there are no valid measured values, there will be no assessment in the form of a coloured symbol.

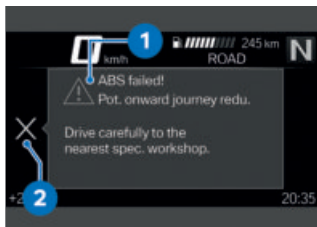

### Check Control dialogue

Messages are output as Check Control dialogues **1**.

- If there are two or more Check Control messages of equal priority, the messages keep changing in the order of their occurrence until they are acknowledged.
- If symbol **2** is actively displayed, it can be acknowledged by tilting the Multi-Controller to the left.
- Check Control messages are attached dynamically to the pages as additional tabs in the *My vehicle* menu ( 107). The message can be called up again as long as the fault persists.

## Warnings, overview

| Indicator and warning lights                                                                          | Display text                                                                                                      | Meaning                                                     |
|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
|                                                                                                       |  is displayed.                   | Outside temperature warning (▮▮▮▮ 39)                       |
|  lights up yellow.   |  Remote key not in range.        | Radio-operated key out of range (▮▮▮▮ 39)                   |
|  lights up yellow.   |  Keyless Ride failure.           | Keyless Ride failed (▮▮▮▮ 40)                               |
|  lights up yellow.   |  Remote key battery weak.        | Replacing battery of radio-operated key (▮▮▮▮ 40)           |
|                                                                                                       |  is displayed in yellow.         | Voltage of the vehicle electrical system too low (▮▮▮▮ 40)  |
|                                                                                                       |  Vehicle voltage low.            |                                                             |
|  lights up yellow.   |  is displayed in yellow.         | Voltage of the vehicle electrical system critical (▮▮▮▮ 41) |
|                                                                                                       |  Vehicle voltage critical!       |                                                             |
|  flashes yellow.    |  is displayed in yellow.        | Charging voltage critical (▮▮▮▮ 42)                         |
|                                                                                                       |  Battery voltage critical!     |                                                             |
|  lights up yellow. |  The faulty bulb is displayed. | Bulb faulty (▮▮▮▮ 42)                                       |
|  flashes yellow.   |  The faulty bulb is displayed. |                                                             |
|  lights up yellow. |  Light control failure!        | Light control failed (▮▮▮▮ 43)                              |

## 34 STATUS INDICATORS

| Indicator and warning lights                                                                         | Display text                                                                                                                | Meaning                                      |
|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|
|                                                                                                      |  Alarm system batt. capacity weak.         | Anti-theft alarm battery weak (▢▢▢▢ 43)      |
|                                                                                                      |  Alarm system battery empty.               | Anti-theft alarm battery flat (▢▢▢▢ 44)      |
|                                                                                                      |  Alarm system failure.                     | DWA failed (▢▢▢▢ 44)                         |
|  lights up yellow.   |  Engine oil level. Check engine oil level. | Engine-oil level too low (▢▢▢▢ 45)           |
|  lights up yellow.   |  Engine temp. high!                        | Engine temperature high (▢▢▢▢ 45)            |
|  lights up red.      |  Engine overheating!                       | Engine overheated (▢▢▢▢ 46)                  |
|  shows.              |  Engine!                                   | Drive malfunction (▢▢▢▢ 47)                  |
|  flashes red.        |  Serious fault in the engine control!      | Serious drive malfunction (▢▢▢▢ 47)          |
|  flashes.           |                                                                                                                             |                                              |
|  lights up yellow. |  No communication with engine control.   | Engine control failed (▢▢▢▢ 47)              |
|  lights up.        |                                                                                                                             |                                              |
|  lights up yellow. |  Fault in the engine control.            | Engine in emergency-operation mode (▢▢▢▢ 47) |

| Indicator and warning lights                                                                          | Display text                                                                                                             | Meaning                                                      |
|-------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
|  flashes red.        |  Serious fault in the engine control!   | Serious fault in engine control (▣▣▣ 48)                     |
|  lights up yellow.   |  is displayed in yellow.                | Tyre pressure close to limit of permitted tolerance (▣▣▣ 50) |
|                                                                                                       |  Tyre pressure does not match setpoint. |                                                              |
|  flashes red.        |  is displayed in red.                   | Tyre pressure outside permitted tolerance (▣▣▣ 50)           |
|                                                                                                       |  Tyre pressure does not match setpoint. |                                                              |
|                                                                                                       |  Tyre press. control. Loss of pressure. |                                                              |
|                                                                                                       |  "----"                                 | Transmission fault (▣▣▣ 51)                                  |
|  lights up yellow.   |  "----"                                 | Sensor faulty or system fault (▣▣▣ 52)                       |
|  lights up yellow.  |  Tyre pressure check failure!          | Tyre pressure monitoring (RDC) failed (▣▣▣ 52)               |
|  lights up yellow. |  RDC sensor battery weak.             | Battery for tyre pressure sensor weak (▣▣▣ 52)               |
|                                                                                                       |  Drop sensor faulty.                  | Drop sensor defective (▣▣▣ 53)                               |
|  lights up yellow. |  Emergency call system restricted.    | Emergency call function restricted (▣▣▣ 53)                  |

## 36 STATUS INDICATORS

| Indicator and warning lights                                                                           | Display text                                                                                                    | Meaning                                    |
|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|--------------------------------------------|
|  lights up yellow.     |  Emergency call system error.  | Emergency call function failed (▣▣▣▣ 53)   |
|  lights up yellow.     |  Side stand monitoring faulty. | Side stand monitoring is faulty (▣▣▣▣ 54)  |
|  flashes regularly.    |                                                                                                                 | ABS self-diagnosis not completed (▣▣▣▣ 54) |
|  lights up yellow.     |  Limited ABS availability!     | ABS fault (▣▣▣▣ 54)                        |
|  shows.                |                                                                                                                 |                                            |
|  lights up yellow.     |  ABS failure!                  | ABS failed (▣▣▣▣ 55)                       |
|  shows.                |                                                                                                                 |                                            |
|  lights up yellow.     |  ABS Pro failure!              | ABS Pro failed (▣▣▣▣ 55)                   |
|  shows.                |                                                                                                                 |                                            |
|  flashes irregularly. |                                                                                                                 | ABS control at front wheel only (▣▣▣▣ 56)  |
|  quick-flashes.      |                                                                                                                 | DTC intervention (▣▣▣▣ 56)                 |
|  slow-flashes.       |                                                                                                                 | DTC self-diagnosis not completed (▣▣▣▣ 56) |
|  lights up.          |  Off!                        | DTC switched off (▣▣▣▣ 56)                 |

| Indicator and warning lights                                                                        | Display text                                                                                                      | Meaning                                               |
|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|
|                                                                                                     |  Traction control deactivated.   | DTC switched off (►►► 56)                             |
|  lights up yellow. |  Traction control limited!       | DTC restricted (►►► 57)                               |
|  lights up.        |                                                                                                                   |                                                       |
|  lights up yellow. |  Traction control failure!       | DTC fault (►►► 57)                                    |
|  lights up.        |                                                                                                                   |                                                       |
|  lights up yellow. |  Spring strut adjustment faulty! | D-ESA fault (►►► 58)                                  |
|                                                                                                     |  Tank reserve level reached.     | Fuel down to reserve (►►► 58)                         |
|                                                                                                     |  shows green.                    | Hill Start Control active (►►► 58)                    |
|                                                                                                     |  flashes yellow.                 | Hill Start Control automatically deactivated (►►► 59) |
|                                                                                                     |  is displayed.                  | Hill Start Control cannot be activated (►►► 59)       |
|                                                                                                     | HSC not available. Engine not running.                                                                            |                                                       |
|                                                                                                     |  The gear indicator flashes.   | Gear not trained (►►► 59)                             |
|  flashes green.  |                                                                                                                   | Hazard warning lights system is switched on (►►► 60)  |
|  flashes green.  |                                                                                                                   |                                                       |

## 38 STATUS INDICATORS

| Indicator and warning lights                                                                       | Display text                                                                                              | Meaning                                   |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-------------------------------------------|
|                   | is displayed in white.                                                                                    | Service due<br>(    ▶ 60)                 |
|                                                                                                    | Service due!                                                                                              |                                           |
|  lights up yellow. |  is displayed in yellow. | Service-due date has passed<br>(    ▶ 60) |
|                                                                                                    | Service over-due!                                                                                         |                                           |

### Ambient temperature

The outside temperature is displayed in the status line of the TFT display.

When the vehicle is at a standstill, the heat of the electrical machine can falsify the ambient-temperature reading. If the heat of the electrical machine is affecting it too much, dashes are temporarily shown in place of the value.



There is a risk of black ice if the ambient temperature falls below the limit value of approx. 3 °C.

The first time the temperature drops below this value, the ambient-temperature reading and the ice crystal symbol flash in the status line of the TFT display.

### Outside temperature warning



is displayed.

Possible cause:



The air temperature measured at the vehicle is lower than:

approx. 3 °C



### WARNING

**Risk of black ice forming even when temperature is above approx. 3 °C**

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.

- Ride carefully and think well ahead.

### Radio-operated key out of range

—with Keyless Ride<sup>OE</sup>



lights up yellow.



Remote key not in range. Not possible to switch on ignition again.

Possible cause:

Communication between radio-operated key and engine electronics is disturbed.

- Check battery in the radio-operated key.
- with Keyless Ride<sup>OE</sup>
- Replace the battery of the radio-operated key. (► 69)

## 40 STATUS INDICATORS

- Use spare key for rest of journey.  
—with Keyless Ride<sup>OE</sup>
- Battery of the radio-operated key is empty or loss of the radio-operated key. (▣ 68)
- If the Check Control dialogue appears while riding, keep calm. You can continue riding, the engine will not switch off.
- Have the faulty radio-operated key replaced by an authorised BMW Motorrad Retailer.

### Keyless Ride failed

—with Keyless Ride<sup>OE</sup>



lights up yellow.



Keyless Ride failure. Do not stop the engine. It may not be poss. to restart the engine.

Possible cause:

The Keyless Ride control unit has diagnosed a communication fault.

- Do not switch off the engine. Proceed as directly as possible to an authorised workshop, preferably an authorised BMW Motorrad retailer.
- » Engine start with Keyless Ride no longer possible.

» DWA can no longer be activated.

### Replacing battery of radio-operated key

—with Keyless Ride<sup>OE</sup>



lights up yellow.



Remote key battery weak. Function limited. Change battery.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the radio-operated key can remain operational.
- Replace the battery of the radio-operated key. (▣ 69)

### Voltage of the vehicle electrical system too low



is displayed in yellow.



Vehicle voltage low. Switch off unnecessary consumers.

The voltage of the vehicle electrical system is too low. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:

Consumers with high power consumption are in operation (such as heated body warmers), too many consumers are in operation at one time, or battery faulty.

- Switch off non-essential consumers or disconnect them from the vehicle's electrical system.
- If the fault persists or occurs without consumers connected, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### **Voltage of the vehicle electrical system critical**



lights up yellow.



is displayed in yellow.



Vehicle voltage critical! Consumers were switched off. Check battery condition.



### **WARNING**

#### **Failure of the vehicle systems**

Risk of accident

- Do not continue your journey.

The voltage of the vehicle electrical system is critical. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:

Consumers with high power consumption are in operation (such as heated body warmers), too many consumers are in operation at one time, or battery faulty.

- Switch off non-essential consumers or disconnect them from the vehicle's electrical system.
- If the fault persists or occurs without consumers connected, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## 42 STATUS INDICATORS

### Charging voltage critical



flashes yellow.



is displayed in yellow.



Battery voltage critical! Accident risk. Stop driving.



### WARNING

#### Failure of the vehicle systems

Risk of accident

- Do not continue your journey.

Battery is not being charged. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:

The alternator or alternator drive is faulty, battery is faulty or the fuse for the alternator regulator has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Bulb faulty



lights up yellow.



The faulty bulb is displayed:



High beam faulty!



Front left turn indicator faulty! or. Front right turn indicator faulty!



Low-beam headlight faulty!



Front side light faulty!



Daytime riding light faulty!

—with LED additional headlight<sup>OA</sup>



Left additional headlight faulty! or. Right additional headlight faulty!<



Tail light faulty!



Brake light faulty!



Rear left turn indicator faulty! or. Rear right turn indicator faulty!



Number plate light faulty!

—Have it checked by a specialist workshop.



flashes yellow.



The faulty bulb is displayed:



Active headlight faulty.



### WARNING

#### **Vehicle overlooked in traffic due to failure of the lights on the vehicle**

Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

One or more bulbs faulty.

- Identify faulty bulb or bulbs by visual check.
- Have LED light sources replaced as complete units; consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

#### **Light control failed**



lights up yellow.



Light control failure! Have it checked

by a specialist workshop.



### WARNING

#### **Vehicle overlooked in traffic on account of failure of the vehicle lighting**

Safety risk

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

The vehicle lighting has partially or completely failed.

Possible cause:

Light control has diagnosed a communication fault.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

#### **Anti-theft alarm battery weak** —with anti-theft alarm (DWA) <sup>OE</sup>



Alarm system batt. capacity weak. No restrictions. Make an appointment at a specialist workshop.



This error message is displayed briefly only after the Pre-Ride-Check completes.

## 44 STATUS INDICATORS

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Anti-theft alarm battery flat

—with anti-theft alarm (DWA)<sup>OE</sup>

 Alarm system battery empty. No independent alarm. Make an appointment at a specialist workshop.

 This error message is displayed briefly only after the Pre-Ride-Check completes.

Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an

authorised BMW Motorrad Retailer.

### DWA failed

—with anti-theft alarm (DWA)<sup>OE</sup>

 Alarm system failure. Have it checked by a specialist workshop.

Possible cause:

The DWA control unit has diagnosed a communication fault.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.
  - » DWA can no longer be activated or deactivated.
  - » False alarm possible.

### Electronic oil-level check

 The electronic oil-level check assesses the oil level in the engine as OK or Low!

The following preconditions have to be satisfied for electronic oil-level checking, and several measurements might have to be taken:

- Rider is sitting on the vehicle and vehicle has just been ridden at a speed of at least min 10 km/h.
- Engine idling for at least 20 seconds.

- Engine is at operating temperature.
- Vehicle is standing upright on a smooth, level surface.
- Side stand is retracted and vehicle is not propped on its centre stand.
- The spring strut is appropriately set for the load status, or D-ESA is in Auto load mode.

If measurement is incomplete or if these conditions are not met, the oil level cannot be judged by the system. Dashes (---) appear on the display instead of a reading.

### Engine-oil level too low



lights up yellow.



Engine oil level.  
Check engine oil level.

Possible cause:

The electronic oil-level sensor has registered a low oil level. If the vehicle is not standing upright on a smooth, level surface, the message might appear even though the oil level is correct. The next time you stop for fuel:

- Check the engine oil level.  
( 186)

If the oil level in the sight glass is too low:

- Topping up the engine oil.  
( 187)

If the oil level is correct:

- Check whether the preconditions for the electronic oil-level check are met.

If the message appears repeatedly, even though the oil level is slightly below the maximum mark:

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

### Engine temperature high



lights up yellow.



Engine temp. high!  
Continue riding with restriction to allow cooling.



### ATTENTION

#### Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential.

## 46 STATUS INDICATORS

Possible cause:

The coolant level is too low.

- Check the coolant level.  
( 193)

If the coolant level is too low:

- Allow the engine to cool down.
- Top up coolant ( 194).
- Have the cooling system checked by a specialist workshop, preferably by a BMW Motorrad partner.

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.

If the coolant temperature is frequently too high:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

### Engine overheated



lights up red.



Engine overheating!  
Stop when it is safe to do so and switch off the engine.



### ATTENTION

#### Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential.

Possible cause:

The coolant level is too low.

- Check the coolant level.  
( 193)

If the coolant level is too low:

- Allow the engine to cool down.
- Top up coolant ( 194).
- Have the cooling system checked by a specialist workshop, preferably by a BMW Motorrad partner.

Possible cause:

Engine is overheated.

- Carefully bring the vehicle to a stop, switch off the engine and wait until the engine has cooled down.
- If engine overheating is a frequent occurrence, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

**Drive malfunction**

shows.



Engine! Have it checked by a specialist workshop.

Possible cause:

The engine control unit has diagnosed a fault which affects the pollutant emissions.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

**Serious drive malfunction**

flashes red.



flashes.



Serious fault in the engine control! Riding at mod. speed pos. Damage possible. Have checked by workshop.

Possible cause:

The engine control unit has diagnosed a fault that can lead to damage to the exhaust system.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an

authorised BMW Motorrad retailer.

- » It is possible to continue to ride but not recommended.

**Engine control failed**

lights up yellow.



lights up.



No communication with engine control. Multiple sys. affected. Ride carefully to the next specialist workshop.

Possible cause:

Communication with the engine control unit has failed.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

**Engine in emergency-operation mode**

lights up yellow.



Fault in the engine control. Onward journey possible. Ride carefully to next specialist workshop.

## 48 STATUS INDICATORS



### WARNING

#### **Unusual ride characteristics when engine running in emergency-operation mode**

Risk of accident

- Avoid accelerating sharply and overtaking.

Possible cause:

The engine control unit has diagnosed a fault which impairs the engine performance or throttle response. The engine is in emergency-operation mode. In exceptional cases, the engine stops and refuses to start.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

» It is possible to continue riding, however the engine performance and engine speed range may be impaired and not function as normal.

#### **Serious fault in engine control**



flashes red.



Serious fault in the engine control! Riding at mod. speed pos.

Damage possible. Have checked by workshop.



### WARNING

#### **Engine damage when running in emergency-operation mode**

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:


The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- It is possible to continue to ride but not recommended.
- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## Tyre pressure

—with tyre pressure control (RDC)<sup>OE</sup>

In addition to the MY VEHICLE menu screen and the Check Control messages, there is also the TYRE PRESSURE screen for showing the tyre pressures:

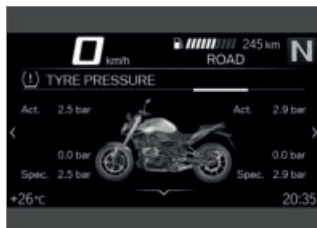

The values on the left are for the front wheel; those on the right are for the rear wheel. Actual and specified tyre pressures and the difference between them are displayed for each wheel.

Immediately after the ignition is switched on, only dashes are displayed. The sensors do not start transmitting tyre pressure signals until the first time the vehicle accelerates to more than the minimum speed stated below:



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)



The tyre pressures are shown in the TFT display as temperature compensated and always refer to the following tyre air temperature:

20 °C



If the tyre symbol appears as well, showing yellow or red, this is a warning. The pressure difference is highlighted with an exclamation point in the same colour.



If the value in question is close to the limit of the permissible tolerance range, the reading is accompanied by the 'General' warning light showing yellow.



The 'General' warning light flashes red if the tyre pressure registered by the sensor is outside the permissible tolerance range.

## 50 STATUS INDICATORS

For further information about the BMW Motorrad RDC, see the section entitled "Engineering details" from page (175) onward.

### **Tyre pressure close to limit of permitted tolerance**

 lights up yellow.

 is displayed in yellow.

 Tyre pressure does not match setpoint.

Check tyre pressure.

Possible cause:

Measured tyre pressure is close to the limit of permitted tolerance.

- Correct tyre pressure.
- Before adjusting the tyre pressure, observe the information on temperature compensation and pressure adaptation in the section entitled "Engineering details":

–with tyre pressure control (RDC) <sup>OE</sup>

» Temperature compensation (176) ◀

–with tyre pressure control (RDC) <sup>OE</sup>

» Pressure adaptation (177)



» Find the correct tyre pressures in the following places:

–On the back cover of the rider's manual

–Display in the TYRE PRESSURE view

–Sign under the seat

### **Tyre pressure outside permitted tolerance**

 flashes red.

 is displayed in red.

 Tyre pressure does not match setpoint. Stop immediately! Check tyre pressure.

 Tyre press. control. Loss of pressure. Stop immediately! Check tyre pressure.



### **WARNING**

#### **Tyre pressure outside the permitted tolerance.**

Risk of accident, degradation of the vehicle's driving characteristics.

- Adapt your style of riding accordingly.

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.
- Before adjusting the tyre pressure, observe the information on temperature compensation and pressure adaptation in the section entitled "Engineering details":

–with tyre pressure control (RDC)<sup>OE</sup>

» Temperature compensation (176)◁

–with tyre pressure control (RDC)<sup>OE</sup>

» Pressure adaptation (177)◁

» Find the correct tyre pressures in the following places:

–On the back cover of the rider's manual

–Display in the TYRE PRES-SURE view

–Sign under the seat

- Have the tyre checked for damage by a specialist work-

shop, preferably an authorised BMW Motorrad Retailer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

## Transmission fault



"---"

Possible cause:

The vehicle has not reached the minimum speed (175).



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

- Observe the RDC display at higher speeds.



Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

## 52 STATUS INDICATORS

Possible cause:

The radio link to the RDC sensors is faulty. Radio systems are located in the surrounding area which are interfering with the transmission between the RDC control unit and the sensors.

- Observe the RDC displays in other surrounding areas.

 Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Sensor faulty or system fault

 lights up yellow.

 "----"

Possible cause:

Wheels not equipped with RDC sensors have been fitted.

- Fit wheels and tyres equipped with RDC sensors.

Possible cause:

One or two RDC sensors have failed or there is a system fault.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Tyre pressure monitoring (RDC) failed

 lights up yellow.

 Tyre pressure check failure! Function limited. Have it checked by a specialist workshop.

Possible cause:

The tyre pressure control (RDC) control unit has diagnosed a communication fault.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

» Tyre pressure warnings not available.

### Battery for tyre pressure sensor weak

 lights up yellow.

 RDC sensor battery weak. Function limited. Have it checked by a specialist workshop.

 This error message is displayed briefly only after the Pre-Ride-Check completes.

Possible cause:

The tyre pressure sensor battery no longer provides its full capacity. The tyre pressure monitoring function will be available for a limit time only.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Drop sensor defective

 Drop sensor faulty. Have it checked by a specialist workshop.

Possible cause:

The drop sensor is not available.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Emergency call function restricted

—with intelligent emergency call<sup>OE</sup>

 lights up yellow.

 Emergency call system restricted. If this occurs again, have

the vehicle checked by a specialist workshop.

Possible cause:

The emergency call cannot be made automatically or via BMW.

- Observe the information on operating the intelligent emergency call from page (➡ 71).
- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Emergency call function failed

—with intelligent emergency call<sup>OE</sup>

 lights up yellow.

 Emergency call system error. Make an appointment at a specialist workshop.

Possible cause:

The control unit of the emergency call system has diagnosed a fault. The emergency call function has failed.

- Bear in mind that an emergency call cannot be made.
- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

## 54 STATUS INDICATORS

### Side stand monitoring is faulty



lights up yellow.



Side stand monitoring faulty. Onward journey possible. Engine will stop if stationary! Have checked by workshop.

Possible cause:



Side-stand switch or wiring damaged

The engine will switch off when speed drops below the minimum threshold. You cannot resume your journey.

min 5 km/h

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

### ABS self-diagnosis not completed



flashes.

Possible cause:



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

### ABS fault



lights up yellow.



shows.



Limited ABS availability! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The partially integral function and the Dynamic Brake Control function have failed. The ABS function has limited availability.

- You can continue to ride. Take note of the more detailed information on

certain situations that can lead to an ABS fault message (▮▮▮▮ 166).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### ABS failed



lights up yellow.



shows.



ABS failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available.

- You can continue to ride. Bear in mind the more detailed information on situations that can lead to an ABS fault message (▮▮▮▮ 166).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### ABS Pro failed



lights up yellow.



shows.



ABS Pro failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

Monitoring of the ABS Pro function has detected a fault. The ABS Pro function is not available. The ABS function is still available. ABS provides support only for braking in straight-ahead driving.

- You can continue to ride. Bear in mind the more detailed information on certain situations that can lead to an ABS Pro fault message (▮▮▮▮ 166).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## 56 STATUS INDICATORS

### **ABS control at front wheel only**

—with riding modes Pro<sup>OE</sup>



flashes irregularly.

Possible cause:

ABS control for the rear wheel is switched off in the currently selected riding mode. The rear wheel brake can lock the rear wheel.

- Check the settings of the riding mode.
- For more information on setting up the riding modes, see the section entitled "Engineering details" (171).

### **DTC intervention**



quick-flashes.

Possible cause:

The DTC has detected a degree of instability at the rear wheel and has intervened to reduce torque.

The indicator and warning light flashes longer than the duration of the DTC. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

- You can continue to ride.  
Ride carefully and think well ahead.

### **DTC self-diagnosis not completed**



slow-flashes.

Possible cause:



DTC+ self-diagnosis not completed

The DTC+ function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the DTC function is not available until self-diagnosis has completed.

### **DTC switched off**



lights up.



Off!



Traction control deactivated.

Possible cause:

The rider has switched off the DTC system.

- Switch on DTC. (➡ 79)

### DTC restricted



lights up yellow.



lights up.



Traction control limited! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The DTC control unit has detected a fault.



### ATTENTION

#### Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
- Secure the toolkit.

- Do not damage the angular rate sensor.
- Bear in mind that the DTC function is restricted.
- You can continue to ride. Bear in mind the more detailed information on

situations that can lead to a DTC fault (➡ 168).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### DTC fault



lights up yellow.



lights up.



Traction control failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The DTC control unit has detected a fault.



### ATTENTION

#### Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
- Secure the toolkit.

- Do not damage the angular rate sensor.
- Bear in mind that the DTC function is not available or

## 58 STATUS INDICATORS

the functionality is subject to certain restrictions.

- You can continue to ride. Take note of the more detailed information on situations that can lead to an DTC fault (168).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### D-ESA fault

—with Dynamic ESA<sup>OE</sup>



lights up yellow.



Spring strut adjustment faulty! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The D-ESA control unit has detected a fault. The damping and/or spring adjuster may be the cause. In Auto the cause may also be a fault in the riding position equaliser. In this condition, the motorcycle may have too much damping and is uncomfortable to drive, especially on roads in poor condition. Alternatively, the spring setting may be set incorrectly.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.
- » Dynamic ESA possible settings (80)

### Fuel down to reserve



Tank reserve level reached. Ride to the next filling station.



### WARNING

#### Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Reserve fuel

approx. 4 l

- Refuel. (155)

### Hill Start Control active



shows green.

Possible cause:

The driver has activated Hill Start Control (179).

- Switch Hill Start Control on or off. (89)

### **Hill Start Control automatically deactivated**



flashes yellow.

Possible cause:

Hill Start Control has been automatically deactivated.

- Side stand has been folded out.
- » Hill Start Control is deactivated when the side stand is folded out.
- Engine has been switched off.
- » Hill Start Control is deactivated when the engine is switched off.
- Operate Hill Start Control. (89)

### **Hill Start Control cannot be activated**



is displayed.

HSC not available. Engine not running.

Possible cause:

Hill Start Control cannot be activated.

- Fold in side stand.
- » Hill Start Control functions only when the side stands are folded in.
- Start the engine.
- » Hill Start Control functions only when the engine is running.

### **Gear not trained**

—with shift assistant Pro<sup>OE</sup>



The gear indicator flashes.

Possible cause:

—with shift assistant Pro<sup>OE</sup>

The gearbox sensor is not fully trained.

- Engage neutral gear N and, with the vehicle at a standstill, let the engine run for at least 10 seconds to train the idle gear.
- Engage all gears with clutch actuation and ride at least 10 seconds with the engaged gear.
- » The gear indicator starts to flash when the gearbox sensor has been trained successfully.
- Shift assistant Pro will operate as described (177) once

## 60 STATUS INDICATORS

the transmission sensor has been completely taught-in.

- If the training process was not successful, have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

### Hazard warning lights system is switched on



flashes green.



flashes green.

Possible cause:

The driver has switched on the hazard warning lights system.

- Operate the hazard warning flashers. (► 77)

### Service-due indicator



If service is overdue, the due date or the odometer reading at which service was due is accompanied by the general warning light showing yellow.

If the service is overdue, a yellow CC message is displayed. Exclamation marks also draw your attention to the displays for service, service appointment and countdown distance in the MY VEHICLE and SERVICE REQUIREMENTS menu screens.



If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected.

### Service due



is displayed in white.

Service due! Have service performed by a specialist workshop.

Possible cause:

Service is due because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad Retailer.
- » The operational and road safety of the motorcycle remain intact.
- » The motorcycle's value is maintained as best as possible.

### Service-due date has passed



lights up yellow.



is displayed in yellow.

Service overdue! Have service performed by a specialist workshop.

Possible cause:

Service is overdue because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad Retailer.
- » The operational and road safety of the motorcycle remain intact.
- » The motorcycle's value is maintained as best as possible.

**OPERATION**

**04**

---

|                                                 |           |
|-------------------------------------------------|-----------|
| <b>IGNITION SWITCH/STEERING LOCK</b>            | <b>64</b> |
| <b>IGNITION WITH KEYLESS RIDE</b>               | <b>66</b> |
| <b>EMERGENCY-OFF SWITCH (KILL SWITCH)</b>       | <b>71</b> |
| <b>INTELLIGENT EMERGENCY CALL</b>               | <b>71</b> |
| <b>LIGHTING</b>                                 | <b>74</b> |
| <b>DYNAMIC TRACTION CONTROL (DTC)</b>           | <b>78</b> |
| <b>ELECTRONIC SUSPENSION ADJUSTMENT (D-ESA)</b> | <b>80</b> |
| <b>RIDING MODE</b>                              | <b>82</b> |
| <b>RIDING MODE PRO</b>                          | <b>85</b> |
| <b>CRUISE CONTROL</b>                           | <b>86</b> |
| <b>HILL START CONTROL (HSC)</b>                 | <b>88</b> |
| <b>SHIFT LIGHT</b>                              | <b>91</b> |
| <b>ANTI-THEFT ALARM (DWA)</b>                   | <b>92</b> |
| <b>TYRE PRESSURE MONITORING (RDC)</b>           | <b>95</b> |
| <b>HEATING</b>                                  | <b>95</b> |
| <b>SEATS</b>                                    | <b>97</b> |

## 64 OPERATION

### IGNITION SWITCH/STEERING LOCK

#### Keys


You receive 2 vehicle keys.

If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (➡ 65). Ignition switch/steering lock, fuel filler cap lock and seat lock are all operated with the same ignition key.

If you wish you can arrange to have the cases and the topcase fitted with locks that can be opened with the ignition key as well. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

#### Engaging steering lock


- Turn the handlebars all the way to the left.

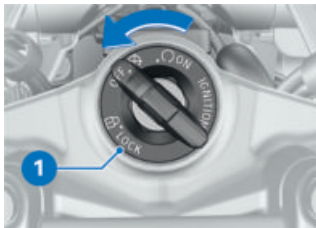

- Turn the vehicle key to position **1**, while moving the handlebars slightly.

- » Ignition, lights and all function circuits switched off.
- » Handlebars are locked.
- » Vehicle key can be removed.


#### Switching on ignition

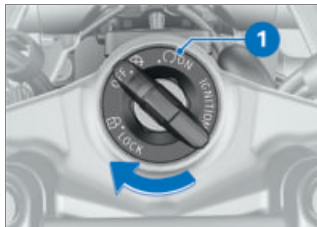

- Insert the vehicle key into the ignition switch and turn it to position **1**.

- » Side lights and all function circuits are switched on.
- with LED additional headlight<sup>OA</sup>
- » LED auxiliary headlights are switched on.◁
- » Pre-Ride-Check is performed. (➡ 146)
- » ABS self-diagnosis is in progress. (➡ 147)
- » DTC self-diagnosis is performed. (➡ 148)

## Switching off ignition

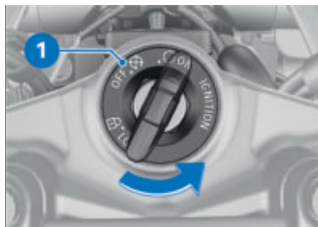

- Turn the ignition key to position **1**.
  - » When the ignition is switched off, the instrument cluster remains switched on for a short time and displays any existing fault messages.
  - » Handlebars not locked.
  - » Electrically powered accessories remain operational for a limited period of time.
  - » The battery can be recharged via the socket.
  - » Vehicle key can be removed.
- The daytime riding light goes out soon after the ignition is switched off.
- with LED additional headlight<sup>OA</sup>
- The LED auxiliary headlights go out soon after the ignition is switched off.◀

## Electronic immobiliser (EWS)

The on-board electronics access the data saved in the ignition key via a ring aerial in the ignition lock. The ignition is not enabled for starting until the engine control unit has recognised this ignition key as "authorised" for your motorcycle.

 A second ignition key attached to the same ring as the ignition key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued.

Always keep the ignition keys separate from each other.

If you lose an ignition key, you can have it barred by your authorised BMW Motorrad retailer.

If you wish to do this, you will need to bring all other keys for the motorcycle with you. The engine cannot be started by a barred ignition key, but an ignition key that has been barred can subsequently be reactivated.

You can obtain extra keys only through an authorised BMW Motorrad retailer. The ignition keys are part of an

## 66 OPERATION

integrated security system, so the retailer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

### IGNITION WITH KEYLESS RIDE

—with Keyless Ride<sup>OE</sup>

#### Keys

 The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress. The light goes out as soon as the radio-operated key or the emergency key is found. The light goes out briefly if the search times out without the radio-operated key or the emergency key being found.

You receive one radio-operated key and one spare key. If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (➡ 65). Ignition, fuel filler cap and anti-theft alarm system all work with the radio-operated key. Seat lock, topcase and cases can be locked and unlocked manually.

 The vehicle cannot be started if the radio control key is not within range (e.g.

key inside one of the cases or the topcase).

If the radio-operated key remains out of range the ignition is switched off after about 90 seconds to protect the battery.

It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket) and to have the emergency key with you as an alternative.



Range of the Keyless Ride radio-operated key

approx. 1 m

### Locking the steering lock Requirement

The handlebars are turned towards the left. Radio-operated key is within range.



- Press and hold down button **1**.
- » The steering lock engages with an audible click.

- » Ignition, lights and all function circuits switched off.
- To unlock the steering lock, briefly press button **1**.

### Switching on ignition Requirement

Radio-operated key is within range.



- There are **two** ways of activating the ignition.

#### Version 1:

- Short-press button **1**.
  - » Side lights and all function circuits are switched on.
  - » Daytime riding light is switched on.
  - with LED additional headlight<sup>OA</sup>
  - » LED auxiliary headlights are switched on.◁
  - » Pre-Ride-Check is performed. (▮▮▮ 146)
  - » ABS self-diagnosis is in progress. (▮▮▮ 147)
  - » DTC self-diagnosis is performed. (▮▮▮ 148)

#### Version 2:

- Press and hold down button **1**.
  - » The steering lock disengages.
  - » Side lights and all function circuits are switched on.
  - » Daytime riding light is switched on.
  - with LED additional headlight<sup>OA</sup>
  - » LED auxiliary headlights are switched on.◁
  - » Pre-Ride-Check is performed. (▮▮▮ 146)
  - » ABS self-diagnosis is in progress. (▮▮▮ 147)
  - » DTC self-diagnosis is performed. (▮▮▮ 148)

### Switching off ignition Requirement

Radio-operated key is within range.



- There are **two** ways of deactivating the ignition.

## 68 OPERATION

### Version 1:

- Short-press button 1.
  - » Light is switched off.
  - » The steering lock does not engage.
- Lock the steering lock.  
( 66)

### Version 2:

- Turn the handlebars all the way to the left.
- Press and hold down button 1.
  - » Light is switched off.
  - » The steering lock engages.

### Electronic immobiliser EWS

The on-board electronics access the data saved in the radio-operated key via a ring aerial in the R/C ignition lock. The ignition is not enabled for starting until the engine control unit has recognised the radio-operated key as "authorised" for your motorcycle.


 A second radio-operated key attached to the same ring as the radio-operated key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued. Always keep the radio-operated keys separate from each other.

If you lose a radio-operated key, you can have it barred by your authorised BMW Motorrad retailer. If you wish to do this, you will need to bring all other keys for the motorcycle with you.

The engine cannot be started by a barred radio-operated key, but a radio-operated key that has been barred can subsequently be reactivated. You can obtain extra keys only through an authorised BMW Motorrad retailer. The radio-operated keys are part of an integrated security system, so the retailer is under an obligation to check the legitimacy of all applications for replacement/extra keys.


### Battery of the radio-operated key is empty or loss of the radio-operated key

- If a key is lost or mislaid, consult the notes on the electronic immobiliser (**EWS**).
- If the radio-operated key is lost or mislaid while you are on a journey, you can start the vehicle with the spare key.

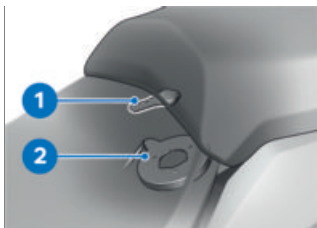

- If the battery of the radio-operated key is empty, the engine can be started by touching the radio-operated key against the passenger seat.

—with single seater<sup>OE</sup>

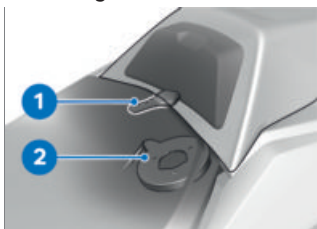

- If the battery of the radio-operated key is empty, the engine can be started by touching the radio-operated key against the tail-hump cover.◁
- Insert spare key **1** into the slot between the rider's seat and the tail-hump cover and the passenger seat, in such a way that the spare key is positioned above aerial **2**.



Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

» Pre-Ride-Check is performed.

—Spare key has been recognised.

—Engine can be started.

—Spare key can be removed.

- Start the engine. (III ▶ 145)

### Replacing battery of radio-operated key

If the radio-operated key does not react when you short-press or long-press a button:

- Battery of the radio-operated key is not at full capacity.



Remote key battery weak. Function limited. Change battery.

## 70 OPERATION


### DANGER

#### Swallowing a battery

Risk of injury or death

- An ignition key contains a button cell as its battery. Batteries or button cells, if swallowed, can cause serious or fatal injury within two hours, for example resulting from internal burns or caustic action.
- Keep ignition keys and batteries out of reach of children.
- If there is any suspicion that a battery or button cell has been swallowed or is inside a part of the body, seek medical assistance immediately.

- Change the battery.

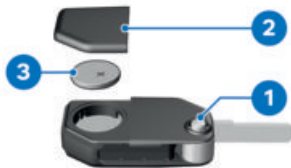

- Press button **1**.
  - » Key bit flips out.
- Push battery cover **2** up.

- Remove battery **3**.
- Dispose of the old battery in accordance with all applicable laws and regulations; do not attempt to dispose of batteries as domestic waste.

### ATTENTION

#### Unsuitable or incorrectly inserted batteries

Component damage

- Use a battery compliant with the manufacturer's specifications.
  - When inserting the battery, always make sure polarity is correct.
- Insert the new battery with the positive terminal up.



Battery type

For Keyless Ride radio-operated key

CR 2032

- Install battery cover **2**.
  - » Red LED in the instrument cluster flashes.
  - » The radio-operated key is again ready for use.

## EMERGENCY-OFF SWITCH (KILL SWITCH)



- 1** Emergency-off switch (kill switch)



### WARNING

#### Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding.

The emergency off switch is a kill switch for switching off the engine quickly and easily.



- A** Engine switched off  
**B** Normal operating position (run)

## INTELLIGENT EMERGENCY CALL

—with intelligent emergency call<sup>OE</sup>

### Emergency call via BMW

Press the SOS button in an emergency only.

The emergency call is not able to be ensured because of technical reasons due to unfavourable conditions, e.g. in areas where there is no mobile phone reception.

During an emergency call, the location of the vehicle, the choice of language and, if applicable, accident-related data are transmitted to BMW (11). Under unfavourable conditions, data transfer can be restricted or delayed. This can

## 72 OPERATION

lead to delayed processing of the emergency call. Even if an emergency call using BMW is not possible, the system may make an emergency call to a public emergency call number. This depends on the respective mobile phone network and the national regulations.

### Language for emergency call

Each vehicle has a language assigned to it depending on the market for which it is intended. The BMW Call Center answers in this language.


 The language for the emergency call can only be changed by the BMW Motorrad partner. The language assigned to the vehicle differs from the display languages that can be selected by the rider in the TFT display.

### Manual emergency call Requirement

An emergency has occurred. The vehicle is at a standstill. The ignition is switched on.




- Open cover **1**.
- Short-press SOS button **2**.

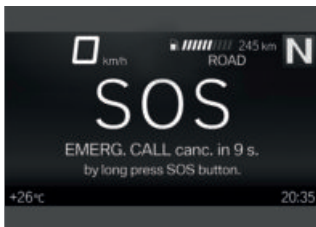

The time until transmission of the emergency call is displayed. During this time, the emergency call can be cancelled by pressing and holding the SOS button.

- To cancel an emergency call: Press SOS button **2** and hold it down for two seconds.
  - Operate the emergency-off switch to stop the engine.
  - Remove helmet.
- » After expiry of the timer, a voice contact to the BMW Call Center is established.

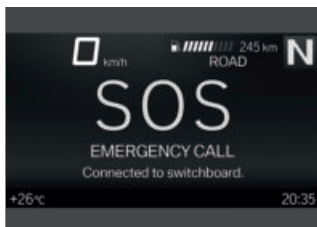

The connection was established.




- Provide information to the emergency services using the microphone **3** and speaker **4**.

### **Automatic emergency call**

The intelligent emergency call is active after the ignition is switched on and reacts if a fall or crash occurs.


### **Emergency call in the event of a light fall**

- A minor fall or a crash is detected.
- » An acoustic signal is sounded.

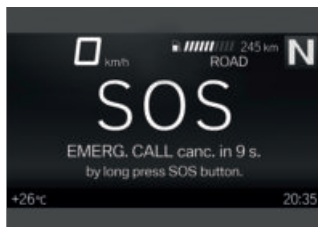

The time until transmission of the emergency call is displayed. During this time, the emergency call can be cancelled by pressing and holding the SOS button.

- To cancel an emergency call:  
Press the SOS button and hold it down for two seconds.
- If possible, remove helmet and stop engine.
- » A voice contact connection to the BMW Call Center is established.

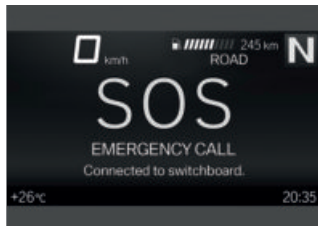

The connection was established.

## 74 OPERATION



- Open cover **1**.
- Provide information to the emergency services using the microphone **3** and speaker **4**.

### Emergency call in the event of a severe fall

- A severe fall or a crash is detected.
- » The emergency call is placed automatically without delay.

## LIGHTING

### Low-beam headlight and sidelights

The side lights switch on automatically when the ignition is switched on.

 The side lights place a strain on the battery; leave the ignition switched on for a limited time only.

The low-beam headlight switches on automatically when the engine is started.

In daytime the daytime riding light can be switched on as an alternative to the low-beam headlight.

### High-beam headlight and headlight flasher

- Switch on the ignition.  
( 64)



- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

### Headlight courtesy delay feature

- Switch off the ignition.



- Immediately after switching off the ignition, pull switch **1** back and hold it in that position until the headlight courtesy delay feature comes on.
  - » The vehicle's lights come on for one minute and then switch off automatically.
  - This can be used to light up the path to the house door after the vehicle has been parked, for example.

### Parking lights

- Switch off the ignition. (▶▶▶ 65)



- Immediately after switching off the ignition, push but-

ton **1** to the left and hold it in that position until the parking lights come on.

- Switch the ignition on and off again to switch off the parking lights.

### Auxiliary headlights

– with LED additional headlight<sup>OA</sup>

### Requirement

The low-beam headlight must be switched on.

 The auxiliary headlights have approval as fog lights and their use is permissible in bad weather conditions only. Always comply with the road traffic regulations in force in the country in which the vehicle is used.

- Start the engine. (▶▶▶ 145)



- Press button **1** to switch on the additional headlight.

## 76 OPERATION



The indicator light for the additional headlight illuminates.

- Press button **1** again to switch off the additional headlight.

### Manual daytime riding light Requirement

Automatic daytime riding light is switched off.



#### WARNING

#### Switching on the daytime riding light in the dark.

Risk of accident

- Do not use the daytime riding light in the dark.



By comparison with the low-beam headlight, the daytime running light makes the vehicle more visible to on-coming traffic. This improves daytime visibility.

- Start the engine. (145)
- Navigate to Settings, Vehicle settings, Lights and switch off the Auto. daytime light function.



- Press button **1** to switch on the daytime riding light.



The indicator light for the daytime riding light lights up.

» The low-beam headlight and the front side lights are switched off.

- In the dark or in tunnels: Press button **1** again to switch off the daytime riding light and switch on the low-beam headlight and the front side lights.



If the high-beam headlight is switched on while the daytime riding light is on, the daytime riding light is switched off after approx. two seconds and the high-beam headlight, low-beam headlight and front side light are switched on. If the high beam headlight is switched off again, the daytime running light is not automat-

ically reactivated, but must be switched on again if required.

### Automatic daytime riding light

 The changeover between daytime riding light and low-beam headlight including front side lights can be effected automatically.



#### WARNING

**The automatic daytime riding light is not a substitute for the rider's personal judgement of the light conditions**

Risk of accident

- Switch off the automatic daytime riding light in poor light conditions.

- Navigate to Settings, Vehicle settings, Lights and switch on the Auto. daytime light function.



The indicator light for the automatic daytime riding light lights up.

- » If ambient brightness drops below a certain value, the low-beam headlight is automatically switched on (e.g. in a tunnel). When sufficient ambient brightness is detected,

the daytime riding light is switched back on.



The indicator light for the daytime riding light shows if the daytime riding light is active.

### Manual operation of the light when the automatic system is switched on

- If you press the button for the daytime riding light, the automatic daytime riding light is switched off and the low-beam headlight and front side lights are switched on (e.g. when you ride into a tunnel and the response of the automatic daytime riding light to the change in ambient brightness is delayed).
- Pressing the daytime riding light button again reactivates the automatic daytime riding light, in other words, the daytime riding light is switched on again when ambient brightness is adequate.

### Operating hazard warning flashers

- Switch on the ignition.  
( 64)



The hazard warning flashers place a strain on the battery. Do not use the haz-

## 78 OPERATION

ard warning flashers for longer than absolutely necessary.



- Press button **1** to switch on the hazard warning flashers.
  - » Ignition can be switched off.
- To switch off the hazard warning lights, switch on the ignition, if necessary, and press button **1** again.

### Operate the turn indicators

- Switch on the ignition.  
( 64)
- Navigate to Settings, Vehicle settings and select Lights.
- Switch Comfort turn indicator on or off.



- Push button **1** to the left or right, as appropriate, to switch on the turn indicators.
  - » If the comfort turn indicators function is switched on, the turn indicators are cancelled automatically when the speed-dependent distance is covered.
- Alternatively: Press button **1** to cancel the turn indicators.

---

### DYNAMIC TRACTION CONTROL (DTC)

#### Switching off DTC

- Switch on the ignition.  
( 64)

You have the option of deactivating Dynamic Traction Control (DTC) while the motorcycle is on the move.



- Press and hold down button **1** until the DTC indicator light changes status.

Immediately after button **1** is pressed, DTC system status **ON** is displayed.



shows.

Possible DTC system status **OFF!** is displayed.

- Release button **1** after the DTC system status changes. The new DTC system status **OFF!** is displayed briefly.



remains lit.

» The DTC function is switched off.

## Switch on DTC



- Press and hold down button **1** until the DTC indicator light changes status.

Immediately after button **1** is pressed, DTC system status **OFF!** is displayed.



goes out; if self-diagnosis has not completed it starts flashing.

Possible DTC system status **ON** is displayed.

- Release button **1** once the status has changed.



remains off or continues to flash.

Possible DTC system status **ON** is displayed.

» The DTC function is switched on.

- For more information on Dynamic Traction Control (DTC) see the section entitled "Engineering details" (168).

## 80 OPERATION

### ELECTRONIC SUSPENSION ADJUSTMENT (D-ESA)

#### Dynamic ESA possible settings

—with Dynamic ESA<sup>OE</sup>

The electronic chassis and suspension setting Dynamic ESA is able to adjust your motorcycle automatically to the load. If the spring setting is set to *Auto*, the rider does not have to change the load setting.

See the "Engineering details" section for more information on Dynamic ESA (► 170).

#### Available damping modes

—For on-road mode: Road and Dynamic

#### Available load settings

—Predefined minimum spring setting: Min

—Active riding position equaliser with automatic spring setting: Auto

—Predefined maximum spring setting: Max

 BMW Motorrad recommends the *Auto* chassis and suspension setting.


#### Viewing suspension settings

—with Dynamic ESA<sup>OE</sup>

- Switch on the ignition.  
(► 64)



- Short-press button **1** to view the current setting.

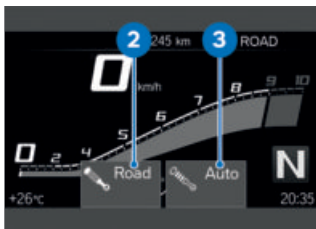

Immediately after pressing the button **1**, the chassis and suspension adjustments for damping action **2** and spring setting **3** are displayed.

» The setting shows briefly, then disappears automatically.

## Adjusting suspension damping

—with Dynamic ESA<sup>OE</sup>

- Switch on the ignition.  
( 64)




- Short-press button **1** to view the current setting.

To adjust damping:

- Repeatedly short-press button **1** until the setting you want to use is displayed.

You can adjust the damping characteristic while the motorcycle is on the move.

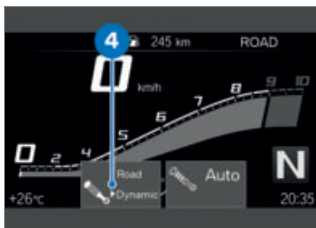

Selection arrow **4** is displayed.

» The selection arrow **4** disappears after the status is changed.

The following settings are available:

- Road: Damping for comfortable on-road riding
- Dynamic: Damping for dynamic on-road riding

## Adjusting spring preload




To adjust spring preload:

- Start the engine. ( 145)
- Repeatedly long-press button **1** until the setting you want to use is displayed.

The spring setting cannot be changed while riding.

The following message is displayed if no setting is possible: Load adjustment only avail. stopped.

## 82 OPERATION

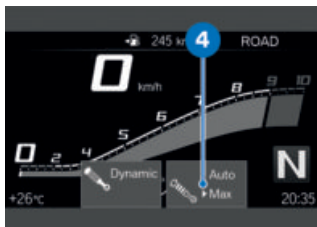

Selection arrow **4** is displayed.

» The selection arrow **4** disappears after the status is changed.


The following settings are available:

-Min: Minimum spring setting (only suitable for one-up mode)

-Auto: Automatic spring setting (recommended chassis and suspension setting)

-Max: Maximum spring setting (only suitable for two-up mode)

» The settings for damping and spring preload shown on the display are automatically accepted if you allow a certain length of time to pass without pressing button **1**.

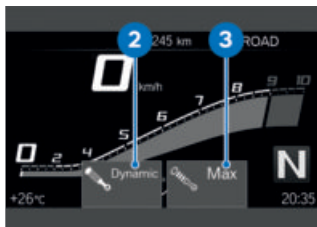

The new chassis and suspension adjustments for damping action **2** and spring setting **3** are briefly displayed.

• If the temperature is very low, take the weight off the motorcycle before increasing spring preload; if applicable, have your passenger dismount.

» The chassis and suspension settings disappear once adjustment is complete.

» In Auto loading mode, the spring preload is adjusted only once the motorcycle is driven off.

---

### RIDING MODE

#### Using riding modes

BMW Motorrad has developed operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

## Standard

- ECO: Range-optimised riding
- RAIN: Riding on rain-wet roads.
- ROAD: Riding on dry roads.

## -with riding modes Pro<sup>OE</sup> with riding modes Pro

- DYNAMIC: Dynamic riding on dry roads.
- DYNAMIC PRO: For dynamic riding on dry roadways while taking into account the settings made by the rider.

The optimum interplay of engine characteristic, ABS, DTC and MSR is provided for each of these scenarios.

## -with Dynamic ESA<sup>OE</sup>

The chassis and suspension adjustment can also be adjusted in the scenario selected.

For more information on the riding modes, see the section entitled "Engineering details" (▮▮▮▮ 171).

## Riding-mode preselection

You can preselect riding modes so that you can switch from one to the other while on the move. Between two and four riding modes can be preselected at any given time.

Factory setting:

ECO, RAIN and ROAD

-with riding modes Pro

Additionally: DYNAMIC and DYNAMIC PRO

## Preselect a riding mode

- Switch on the ignition.  
(▮▮▮▮ 64)
- Navigate to Settings, Vehicle settings, Driving mode preselection.
- Select riding modes.

The following riding modes can be selected:

- ECO: For range-optimised riding.
- RAIN: For riding on rain-wet roads.
- ROAD: For riding on dry roads.

## -with riding modes Pro<sup>OE</sup>

The following riding mode can be selected:

- DYNAMIC: For dynamic riding on dry roads.
- DYNAMIC PRO: For dynamic riding on dry roads with provision for the rider's custom settings.◁

## Select the riding mode

- Switch on the ignition.  
(▮▮▮▮ 64)
- Preselect a riding mode.  
(▮▮▮▮ 83)

## 84 OPERATION



- Press button **1**.



- Repeatedly press button **1** until the riding mode you want is displayed.

The following riding modes can be selected:

- ECO: For range-optimised riding.
- RAIN: For riding on rain-wet roads.
- ROAD: For riding on dry roads.

–with riding modes Pro<sup>OE</sup>

The following riding mode can be selected:

- DYNAMIC: For dynamic riding on dry roads.
- DYNAMIC PRO: For dynamic riding on dry roads with provision for the rider's custom settings.◁

» With the vehicle at a standstill, the selected mode is activated after approximately 2 seconds.

» The following conditions must be satisfied for activation of a new riding mode while riding:



The riding mode currently active **2** is sent to the back and is displayed in the pop-up **3**. The guide **4** indicates how many riding modes are available.

- Throttle grip is in idle position.
- Brake is not applied.
- Adaptive cruise control is not active.
- » The selected riding mode is retained with the engine-characteristic, DTC, ABS and MSR adaptation settings even after the ignition has been switched off.

## RIDING MODE PRO

- with riding modes Pro<sup>OE</sup>

### Adjustment option


The PRO riding modes can be set up individually only after being selected in riding mode preselection.

### Selecting PRO riding mode

- Switch on the ignition.  
( 64)
- Navigate to Settings, Vehicle settings, Driving mode preselection.
- Select DYNAMIC PRO riding mode.
- Call up Configuration.

### Setting up Dynamic Pro

- with riding modes Pro<sup>OE</sup>
- Select PRO riding mode.  
( 85)

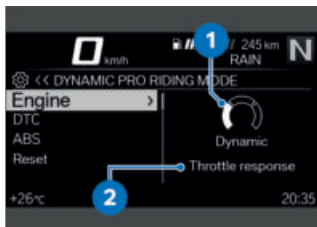

The Engine system has been selected. The current setting is displayed as a diagram **1** with explanatory texts relating to the system **2**.

- Select system and confirm.



You can browse through the available settings **3** and the corresponding explanations **4**.

- Set up the system.
- » The Engine, DTC and ABS systems can be set up in the same way. See the "Engineering details" section for more information on all these systems:
- » Selection ( 171)

## 86 OPERATION

- The settings can be reset to the factory settings:
- Reset the riding mode settings. (▶▶ 86)

### Resetting riding mode settings

- Select PRO riding mode. (▶▶ 85)
- Select Reset and confirm.
  - » The following factory settings apply for DYNAMIC PRO RIDING MODE:
    - DTC: Dyna Pro
    - ENGINE: Dynamic
    - ABS: Dynamic

### CRUISE CONTROL

-with cruise control<sup>OE</sup>

#### Display when adjusting settings (Speed Limit Info not active)



Symbol **1** for cruise control is displayed in the Pure Ride view and in the top status line.

#### Display when adjusting settings (Speed Limit Info active)



Symbol **1** for cruise control is displayed in the Pure Ride view and in the top status line.

#### Switching on cruise control



- Slide switch **1** to the right.
  - » Button **2** is enabled for operation.

## Setting road speed



- Short-push button **1** forward.

 Adjustment range for cruise control (gear-dependent)

20...210 km/h



is displayed.

- » The motorcycle maintains your current cruising speed and the setting is saved.

## Accelerating



- Short-push button **1** forward.
- » Speed is increased by approx. 1 km/h each time you push the button.

- Push button **1** forward and hold it in this position.
- » The vehicle accelerates smoothly.
- » The current speed is maintained and saved if button **1** is not pushed again.

## Decelerating



- Short-push button **1** back.
- » Speed is reduced by approx. 1 km/h each time you push the button.
- Push button **1** back and hold it in this position.
- » The vehicle decelerates smoothly.
- » The current speed is maintained and saved if button **1** is not pushed again.

## Deactivating cruise control

- Brake, pull the clutch lever or turn the throttle grip (close the throttle by turning the grip back past the idle position) to deactivate adaptive cruise control.

## 88 OPERATION

 For safety reasons, cruise control is automatically deactivated when Gear Shift Assistant Pro downshifts.

 For safety reasons, cruise control is automatically deactivated whenever ABS or DTC intervention occurs. If DTC is deactivated by the rider, cruise control is deactivated as well.

 disappears.

### Resuming former cruising speed




- Short-push button **1** back to return to the speed saved beforehand.

 Opening the throttle does not deactivate cruise control. If you release the twistgrip the motorcycle will decelerate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed.

 is displayed.

### Switching off cruise control

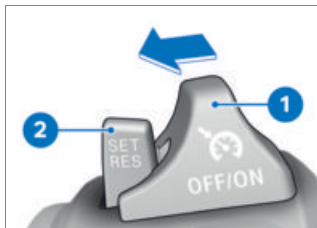


- Slide switch **1** to the left.  
» The system is deactivated.

 disappears.

» Button **2** is disabled.

### HILL START CONTROL (HSC)

#### Display

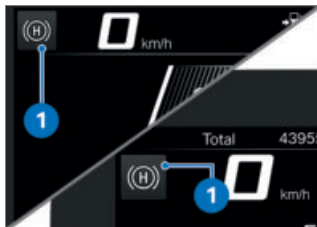

Symbol **1** for Hill Start Control is displayed in the Pure Ride view and in the top status line.

### Switch Hill Start Control on or off

- Switch on the ignition.  
( 64)
- Navigate to Settings,  
Vehicle settings.
- Switch Hill Start Control on or off.

### Operating Hill Start Control Requirement

Vehicle stationary and upright, engine running. Hill Start Control is switched on.



#### ATTENTION

#### Failure of Hill Start Control

Risk of accident

- Apply the brakes manually to hold the vehicle.



Hill Start Control is purely a comfort system to facilitate holding the machine and pulling way on uphill gradients and should not be confused with a parking brake.



- Apply firm pressure to handbrake lever **1** or to the footbrake lever and then quickly release the lever.



shows green.

» Hill Start Control is activated.

- To switch off Hill Start Control, operate handbrake lever **1** or the footbrake lever again.



disappears.

- Alternatively, ride off in 1st or 2nd gear.



In order for the motorcycle to pull away from rest with Hill Start Control, the throttle grip has to be turned to open the throttle for pullaway.



disappears.

» Hill Start Control is deactivated.

## 90 OPERATION

- For more information on Hill Start Control see the section entitled "Engineering details":

» Hill Start Control function  
( 179)

### Adjust Hill Start Control Pro

—with riding modes Pro<sup>OE</sup>

- Switch on the ignition.  
( 64)
- Navigate to Settings, Vehicle settings.
- Select HSC Pro.
- To switch off Hill Start Control Pro, select Off.  
» Hill Start Control Pro is deactivated.
- To switch on manual Hill Start Control Pro, select Manual.  
» Hill Start Control Pro can be activated by forcefully operating the handbrake or foot-brake lever.
- To switch on automatic Hill Start Control Pro, select Auto.  
» Hill Start Control Pro can be activated by forcefully operating the handbrake or foot-brake lever.
- » If the brake is actuated for approximately one second after the vehicle has come to a standstill and the motorcycle is on a gradient of at least 3%, Hill Start Control Pro is automatically activated.

» The selected setting remains stored even after the ignition is switched off.

### Operating

#### Hill Start Control Pro

—with riding modes Pro<sup>OE</sup>

### Requirement

Vehicle stationary and upright, engine running.



### ATTENTION

#### Failure of Hill Start Control

Risk of accident

- Apply the brakes manually to hold the vehicle.



Hill Start Control Pro is purely a comfort system that facilitates hill starts and is not to be confused with a parking brake.



Hill Start Control Pro should not be used on gradients steeper than 40 %.



- Apply firm pressure to handbrake lever **1** or to the footbrake lever and then quickly release the lever.
- Alternatively, apply the brake for about one second beyond the vehicle reaching a standstill on an incline of at least 3 %.



shows green.

- » Hill Start Control Pro is activated.
- To switch off Hill Start Control Pro, operate handbrake lever **1** or the footbrake lever again.



If Hill Start Control Pro has been deactivated by means of the handbrake lever, automatic Hill Start Control is deactivated for the next 4 m.



disappears.

- Alternatively, ride off in 1st or 2nd gear.



In order for the motor-cycle to pull away from rest with Hill Start Control Pro, the throttle grip has to be turned to open the throttle for pullaway.



disappears.

- » Hill Start Control Pro is deactivated.
- For more information on Hill Start Control Pro see the section entitled "Engineering details":
- » Hill Start Control function (179)

## SHIFT LIGHT

### Switch the shift light on and off

- Navigate to Settings, Vehicle settings.
- Switch Shift light on or off.

### Set the shift light

- Switch on the Shift light function.
- Navigate to Settings, Vehicle settings, Configuration (under Shift light).
- » The following settings are available:
  - Start RPM

## 92 OPERATION

- End RPM
- Brightness
- Frequency. A flashing frequency of 0 Hz corresponds to steady light.
  - » Changes to brightness and flashing frequency are demonstrated by the shift light lighting up or flashing.

### ANTI-THEFT ALARM (DWA)

- with anti-theft alarm (DWA)<sup>OE</sup>

#### Activation

- Switch on the ignition.  
( 64)
- Customise the anti-theft alarm settings. ( 95)
- Switch off the ignition.
  - » If the alarm system is activated, then the alarm system will be automatically activated when the ignition is switched off.
  - » Activation takes approximately 30 seconds to complete.
  - » Turn indicators flash twice.
  - » Confirmation tone sounds twice (if programmed).
  - » Anti-theft alarm is active.

- with Keyless Ride<sup>OE</sup>



- Switch off the ignition.
- Press button **1** on the radio-operated key twice.
  - » Activation takes approximately 30 seconds to complete.
  - » Turn indicators flash twice.
  - » Confirmation tone sounds twice (if programmed).
  - » Anti-theft alarm is active.



- To deactivate the tilt sensor (for example if you are about to transport the motorcycle on a train and the swaying movement of the moving train could trip the alarm), press button **1** on the radio-oper-

ated key again during the activation phase.

- » Turn indicators flash three times.
- » Confirmation tone sounds three times (if programmed).
- » Motion sensor has been deactivated.◁

### Alarm signal

A DWA alarm can be triggered by:


- Motion sensor
- Switch-on attempt with an unauthorised vehicle key.
- Disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - acoustic alarm only, the turn indicators do not flash)

 When the radio-operated key is within range, an alarm triggered by the tilt sensor is suppressed.

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of acoustic alarm tone can be set by an authorised BMW Motorrad retailer.

-with Keyless Ride<sup>OE</sup>

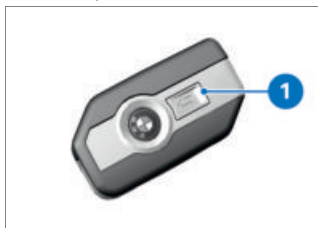

The activated alarm can be aborted at any time by pressing the **1** button on the radio-operated key, without deactivating the anti-theft alarm.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the alarm for one minute.

## 94 OPERATION

### Light signals issued by the indicator light:

- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised vehicle key
- Flashes 4x: Disconnection of the anti-theft alarm from the vehicle's battery
- Flashes 5x: Motion sensor 3

### Deactivating anti-theft alarm system (DWA)

- Kill switch in operating position (run).
- Switch on the ignition.  
( 64)
- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » DWA has been switched off.
- with Keyless Ride<sup>OE</sup>



- Short-press button 1.
- Switch on the ignition.  
( 64)
- Short-press button 1.

 If the alarm function is deactivated by the radio-operated key and the ignition is not subsequently switched on, the alarm function is automatically reactivated after approx. 30 seconds if Arm automatically is switched on.

- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » DWA is switched off.◀

### Possibilities for adjustment

Warning signal: Set the rising and falling or intermittent alarm tone.

Tilt sensor: Activate tilt sensor to monitor the inclination of the vehicle. The anti-theft alarm is tripped if any attempt is made to steal a wheel or lift the vehicle for towing, for example.

 When the vehicle is going to be transported, deactivate the tilt sensor to prevent the anti-theft alarm (DWA) from being triggered.

Arming tone: In addition to turn indicators flashing, alarm tone sounds as confirmation of activation/deactivation of the DWA.

Arm automatically: Automatic activation of the alarm

function after the ignition is switched off.

### Customise the anti-theft alarm settings

- Switch on the ignition.  
( 64)
- Navigate to Settings, Vehicle settings, Alarm system.
- » The following adaptation settings are available:
  - Adapting Warning signal
  - Switch Tilt sensor on or off
  - Switch Arming tone on or off
  - Switch Arm automatically on or off

### TYRE PRESSURE MONITORING (RDC)

- with riding modes Pro<sup>OE</sup>
- with tyre pressure control (RDC)<sup>OE</sup>

### Switch the target-pressure warning on or off

- The system can be set to issue a target-pressure warning if tyre pressure drops to the defined minimum.
- Navigate to Settings, Vehicle settings, RDC.
- Switch Target pressure warn. on or off.

## HEATING

### Operating heated handlebar grips

- with heated grips<sup>OE</sup>
- without seat heating<sup>OE</sup>

The heating in the heated handlebar grips can be activated only when the engine is running.

The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.

- Start the engine. ( 145)



- Repeatedly press button **1** until desired heating stage **2** appears in front of heated grip symbol **3**.

## 96 OPERATION

The handlebar grips have two-stage heating.

 medium heating power

 high heating power

» The high stage is for heating the grips quickly: it is advisable to switch back to stage 1 as soon as the grips are warm.

» The selected heating stage will be saved if you allow a certain length of time to pass without making further changes.

• To switch off the heated grips, repeatedly press button **1** until heated grip symbol **3** disappears.

### Operate the heating

—with heated grips<sup>OE</sup>

—with seat heating<sup>OE</sup>

 The heating in the heated handlebar grips and the seat heating can be activated only when the engine is running.

• Start the engine. (➡ 145)



• Press button **1**.

» HEATING menu opens.

• Select Grip heating or Seat heating.

• Select the desired heating stage and confirm your choice.

» The selected heating stage appears on the left beside heating symbol **2**.

• Press button **1** to close the HEATING menu.

• To switch the heating off, or on again with the heating stage selected beforehand, long-press button **1**.

 The selected heating-stage settings are retained in memory when the ignition is switched off.

## Operating passenger-seat heating

—with seat heating<sup>OE</sup>

- Start the engine. (➡ 145)

 Seat heating can be activated only when the engine is running.




- Set switch **1** to the desired heating stage.



The rear seat has two-stage heating. Stage two is for heating the seat quickly: it is advisable to switch back to stage one as soon as the seat is warm.

- 2** Switch centred: Heating off.

- 3** Switch pressed at one dot: low heating power.
- 4** Switch pressed at two dots: high heating power.

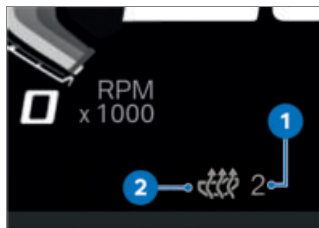


Selected heating stage **1** and seat-heating symbol **2** are displayed.

## SEATS

### Removing passenger seat

- Make sure the ground is level and firm and place the motorcycle on its stand.

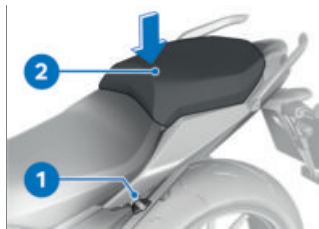


- Press down on the front part of passenger seat **2** and at the same time turn seat lock **1** to the left with the

## 98 OPERATION

vehicle key and hold it in this position.

- Slightly raise passenger seat **2** at the front and release the vehicle key.

—with seat heating<sup>OE</sup>

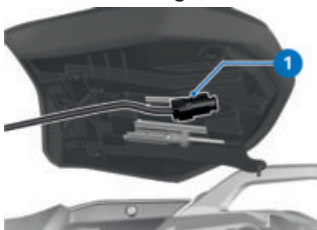

- Disconnect plug connection **1** of the seat heating.◁
- Remove passenger seat **2** and place it, upholstered side down, on a clean surface.

### Installing passenger seat




#### ATTENTION

#### Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
- Secure the toolkit.

—with seat heating<sup>OE</sup>

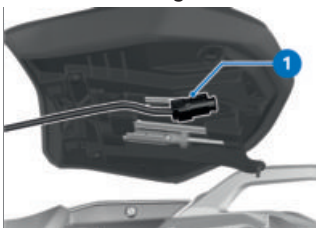

- Connect plug connection **1** of the seat heating.◁




- Begin by pushing the rear of passenger seat **1** into the mounts.
- Press down firmly on passenger seat **1** at the front.
  - » The passenger seat engages with an audible click.

### Removing rider's seat

- Remove the rear seat. (▶ 97) Front seat is unlocked.
- Lift the rear of the front seat.


—with seat heating<sup>OE</sup>

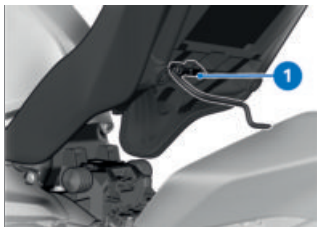

- Disconnect plug connection **1** for the seat heating.<
- Work the front seat to the rear to remove and place it, upholstered side down, on a clean surface.

### Installing rider's seat

- Remove the rear seat. (→ 97)
- with seat heating<sup>OE</sup>

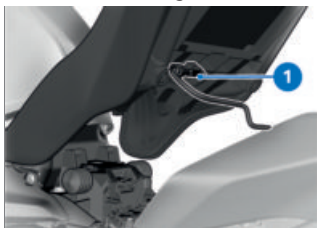

- Connect plug connection **1** for the seat heating.<



- Push the rider's seat all the way into front mounts **1** and then lower it into position at the back.
- Install the passenger seat. (→ 98)

### Remove the tail-hump cover

—with single seater<sup>OE</sup>

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Use vehicle key **1** to unlock lock for tail-hump cover **2**.
- Remove tail-hump cover **2**; to do so, unhook fixing **3**.

# 100 OPERATION

## Install the tail-hump cover

—with single seater<sup>OE</sup>



- Position tail-hump cover **1**; hook in fixing **2** while doing so.
- Press tail-hump cover **1** downwards and lock.



# **TFT DISPLAY**

# **05**

---

|                                    |            |
|------------------------------------|------------|
| <b>GENERAL NOTES</b>               | <b>104</b> |
| <b>PRINCIPLE</b>                   | <b>105</b> |
| <b>PURE RIDE VIEW</b>              | <b>112</b> |
| <b>GENERAL SETTINGS</b>            | <b>113</b> |
| <b>BLUETOOTH</b>                   | <b>114</b> |
| <b>MY VEHICLE</b>                  | <b>118</b> |
| <b>SPORT</b>                       | <b>121</b> |
| <b>NAVIGATION</b>                  | <b>123</b> |
| <b>MEDIA</b>                       | <b>125</b> |
| <b>TELEPHONE</b>                   | <b>126</b> |
| <b>DISPLAY SOFTWARE VERSION</b>    | <b>127</b> |
| <b>DISPLAY LICENCE INFORMATION</b> | <b>127</b> |

## GENERAL NOTES

### Warnings



#### WARNING

##### **Operation of a smartphone while riding the vehicle**

Risk of accident

- Always comply with the road traffic regulations in force where you are riding.
- Do not use a smartphone while riding. This applies with the exception of applications without operation, such as hands-free telephony.



#### WARNING

##### **Distraction from the road and loss of control**

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.

### Connectivity functions

Connectivity functions include media, telephony and navigation. Connectivity functions can be used when the instrument cluster is connected to a mobile device and a helmet (115). For more information on the Connectivity functions go to:

**[bmw-motorrad.com/connectivity](http://bmw-motorrad.com/connectivity)**



Depending on the mobile end device, the scope of Connectivity functions might be restricted.

### **BMW Motorrad Connected app**

The BMW Motorrad Connected app enables the user to call up usage data and vehicle status information. For some functions such as navigation, for example, the app has to be installed on the mobile device and paired to the instrument cluster. The app is used to start route guidance and adjust the navigation.



On some mobile devices, e.g. those with the iOS operating system, the BMW Motorrad Connected app has to be opened prior to use.

## BMW Motorrad Connected app


The BMW Motorrad Connected app enables the user to call up usage data and vehicle status information. For some functions such as navigation, for example, the app has to be installed on the mobile device and paired to the TFT display. The app is used to start route guidance and adjust the navigation.

## Currency

Updates of the TFT display subsequent to the date of publication are possible. Because of this, your vehicle may differ from the information supplied in the rider's manual. Up-to-date information is available at [bmw-motorrad.com/service](http://bmw-motorrad.com/service).

## PRINCIPLE

### Controls

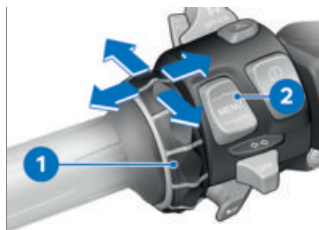

All display content is controlled by means of Multi-Controller **1** and MENU rocker button **2**. Depending on the context, the following functions are possible.

### Functions of the Multi-Controller

#### Turn the Multi-Controller up:

- Move the cursor up in lists.
- Adjust settings.
- Increase volume.

#### Turn the Multi-Controller down:

- Move the cursor down in lists.
- Adjust settings.
- Decrease volume.

#### Tilt the Multi-Controller to the left:

- Activate the function in accordance with the operation feedback.

## 106 TFT DISPLAY

- Activate the function to the left or back.
- Go back to the Menu view after making the settings.
- In Menu view: Change up one level.
- In the *My vehicle* menu: Advance one menu screen.

### **Tilt the Multi-Controller to the right:**

- Activate the function in accordance with the operation feedback.
- Confirm selection.
- Confirm settings.
- Advance a menu step.
- Scroll to the right in lists.
- In the *My vehicle* menu: Advance one menu screen.

### **MENU rocker button functions**

 Instructions given by the navigation system are displayed as a dialogue if the *Navigation* menu has not been called up. Operation of the MENU rocker button is temporarily restricted.

### **Short-press the top section of the MENU button:**

- In Menu view: Change up one level.
- In Pure Ride view: Change the display for the status line.

### **Long-press the top section of the MENU button:**

- In Menu view: Open the Pure Ride view.
- In Pure Ride view: Switch the operating focus to the Navigator.


### **Short-press the bottom section of the MENU button:**

- Change down a level.
- No function if the lowest hierarchical level has been reached.


### **Long-press the bottom section of the MENU button:**

- Change back to the last menu after a previous menu change effected by long-pressing the top section of the MENU rocker button.

## Operating pointers in the main menu

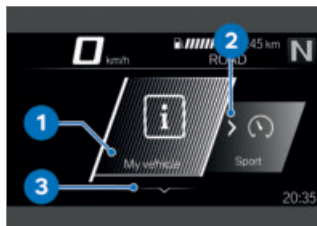

Operating pointers show whether interactions are possible, and which ones.

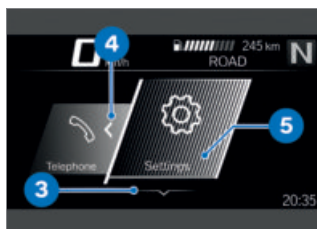


## Meaning of the operating pointers:

- Operating pointer **1**: Left end reached.
- Operating pointer **2**: You can scroll to the right.
- Operating pointer **3**: You can scroll down.
- Operating pointer **4**: You can scroll to the left.
- Operating pointer **5**: Right end reached.

## Operating pointers in submenus

In addition to the operating pointers in the main menu, there are additional operating pointers in the submenus.

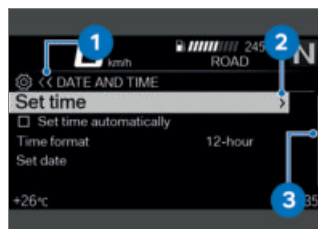

## Meaning of the operating pointers:


- Operating pointer **1**: The current display is in a hierarchical menu. One symbol represents one submenu level. Two symbols represent two or more submenu levels. The colour of the symbol changes, depending on whether you can return to a higher level.
- Operating pointer **2**: One more submenu level can be accessed.
- Operating pointer **3**: There are more entries than can be displayed.

# 108 TFT DISPLAY

## Display Pure Ride view

- Long-press the top section of the MENU rocker button.

## Switching functions on and off

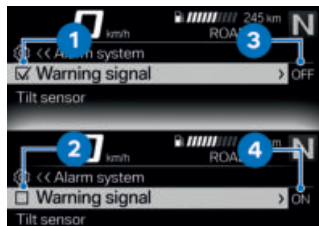


Some menu items have a check box in front of them. The check box shows whether the function is on or off. Action symbols after the menu items indicate what action you can trigger by short-tilting the Multi-Controller to the right.

## Examples for switching on and off:

- Symbol 1 shows that the function is switched on.
- Symbol 2 shows that the function is switched off.
- Symbol 3 shows that the function can be switched off.
- Symbol 4 shows that the function can be switched on.

## Calling up menu

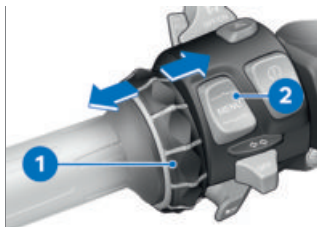

- Display the Pure Ride view. (108)
- Short-press the bottom section of button 2.

The following menus can be called up:

- My vehicle
- Navigation
- Media
- Telephone
- Settings

-with riding modes Pro<sup>OE</sup>


Additionally:

-Sport<

- Repeatedly short-push Multi-Controller 1 to the right until the menu item you want is highlighted.
- Short-press the bottom section of button 2.


 The Settings menu can only be called up when the vehicle is stationary.

## Moving cursor in lists

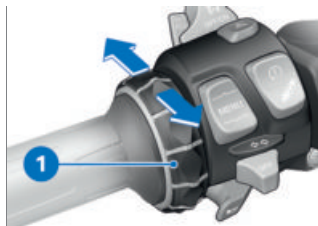

- Call up a menu. (▮▮▮▮▶ 108)
- To move the cursor down in a list, turn Multi-Controller **1** down until the entry you want is highlighted.
- To move the cursor up in a list, turn Multi-Controller **1** up until the entry you want is highlighted.

## Confirming selection

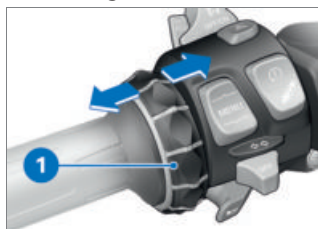

- Select the desired entry.
- Short-push Multi-Controller **1** to the right.

## Call up the last menu used

- In Pure Ride view: Long-press the bottom section of the MENU rocker button.
- » The last menu used is called up. The last entry highlighted is selected.

## Change of operating focus

—with preparation for navigation system<sup>OE</sup>

If the Navigator is connected, you can toggle between operation of the Navigator and operation of the TFT display.

## Change the operating focus

—with preparation for navigation system<sup>OE</sup>

—with navigation system<sup>OA</sup>


- Secure the navigation system. (▮▮▮▮▶ 227)
- Display the Pure Ride view. (▮▮▮▮▶ 108)
- Long-press the top section of the MENU rocker button.
- » Operating focus switches to the Navigator or the TFT display, as applicable. The active device is highlighted on the left in the top status line. Operator actions affect the currently active device until the operating focus is changed again.

## 110 TFT DISPLAY

- with preparation for navigation system<sup>OE</sup>
- with navigation system<sup>OA</sup>
- » Operating navigation system (▮ 229)◀

### System status displays

The system status is displayed in the lower area of the menu if a function is switched on or off.

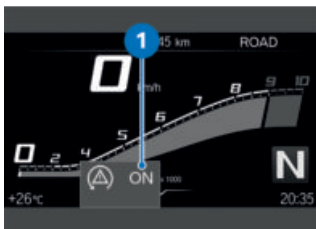

### Examples of what the system statuses mean:

- System status 1: DTC function is switched on.

### Change the display for the status line

#### Requirement

The vehicle is at a standstill.  
The Pure Ride view is displayed.

- Switch on the ignition. (▮ 64)
- » The TFT display shows all the information necessary for riding on public roads from the on-board computer

(e.g. TRIP 1) and the trip computer (e.g. TRIP 2). The information can be displayed in the top status line.

- with tyre pressure control (RDC)<sup>OE</sup>

» Information from the tyre pressure monitoring can also be displayed.◀

- Select the content of the status line. (▮ 111)



- Long-press button 1 to obtain the Pure Ride view.
- Repeatedly short-press button 1 to select the value in the top status line 2.

The following values can be displayed:



Total distance



Current distance 1



Current distance 2

 Consumption 1 (Average)

 Consumption 2 (Average)

 Riding time 1

 Riding time 2

 Break 1

 Break 2

 Speed 1 (Average)

 Speed 2 (Average)

—with tyre pressure control (RDC) <sup>OE</sup>

 Tyre pressure◀

 Range


 Fuel tank level

### Selecting content of status line

- Navigate to Settings, Display, Status line content.
- Switch on the desired displays.
- » You can switch between the selected displays in the status

line. If no displays are selected, only the range will be displayed.

### Adjusting settings

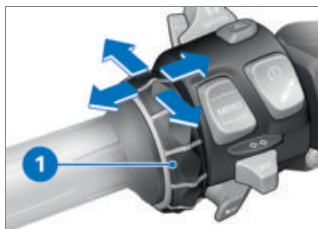

- Select and confirm the desired settings menu.
- Turn Multi-Controller 1 down until the setting you want is highlighted.
- If an operating pointer shows, tilt Multi-Controller 1 to the right.
- If no operating pointer shows, tilt Multi-Controller 1 to the left.
- » The setting is saved.

### Switch Speed Limit Info on or off Requirement


Vehicle is connected to a compatible mobile device. The BMW Motorrad Connected app is installed on the mobile device.

## 112 TFT DISPLAY

- Speed Limit Info displays the maximum speed currently permitted.
- Navigate to Settings, Display.
- Switch Speed Limit Info on or off.

### PURE RIDE VIEW

#### Rev. counter

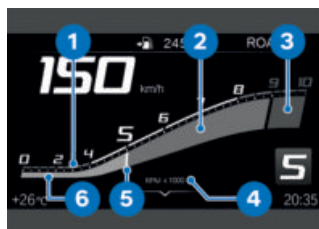

- 1 Scale
- 2 Low engine speed range
- 3 Upper/red engine speed range
- 4 Unit for engine speed display:  
1000 revolutions per minute
- 5 Needle
- 6 Secondary indicator

 The red engine speed range changes depending on the coolant temperature: The colder the engine, the lower the engine speed at

which the red engine speed range starts.

The warmer the engine, the higher the speed at which the red engine speed range starts. When operating temperature is reached, the display of the red engine speed range no longer changes.

#### Range



The range readout **1** indicates how far you can ride with the fuel remaining in the tank. This distance is calculated on the basis of average consumption and the quantity of fuel on board.

—When the vehicle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly. This is the reason why the range is recalculated only when the side stand is in the retracted position.

- The range is shown together with a warning once the fuel reserve has been reached.
- After a refuelling stop, range is recalculated if the amount of fuel in the tank is greater than the reserve quantity.
- The calculated range is only an approximate figure.

### Recommendation to upshift



The recommendation to upshift in **1** view **2** or in status line indicates the best time to upshift to conserve fuel.

## GENERAL SETTINGS

### Adjusting volume

- Connect the rider's and passenger's helmets. (➡ 116)
- Increase volume: Turn the Multi-Controller up.
- Reduce volume: Turn the Multi-Controller down.
- Mute: Turn the Multi-Controller all the way down.

### Set the date

- Switch on the ignition. (➡ 64)
- Navigate to Settings, System settings, Date and time, Set date.
- Set Day, Month and Year.
- Confirm setting.

### Set date format

- Navigate to Settings, System settings, Date and time, Date format.
- Select the desired setting.
- Confirm setting.

### Set the clock

- Switch on the ignition. (➡ 64)
- Navigate to Settings, System settings, Date and time, Set time.
- Set Hour and Minute.

### Set the time format

- Navigate to Settings, System settings, Date and time, Time format.
- Select the desired setting.
- Confirm setting.

### Set units of measurement

- Navigate to Settings, System settings, Units.

The following units of measurement can be set:

## 114 TFT DISPLAY

- with tyre pressure control (RDC)<sup>OE</sup>
- Pressure◀
- Temperature
- Speed
- Consumption

### Set the language

- Navigate to Settings, System settings, Language.

The following languages can be set:

- German
- English (UK)
- English (US)
- Spanish
- French
- Italian
- Dutch
- Polish
- Portuguese (Brazil)
- Portuguese (Portugal)
- Turkish
- Romanian
- Russian
- Ukrainian
- Thai
- Chinese
- Japanese
- Korean

### Adjusting brightness

- Navigate to Settings, Display, Brightness.
- Adjust display brightness.
- » When ambient brightness drops below a defined

threshold, the display is dimmed to the brightness set here.

### Reset all settings

- All the settings in the Settings menu can be reset to the factory settings.
- Call up the Settings menu.
- Select Reset all and confirm.

The settings in the following menus are reset:

- Vehicle settings
- System settings
- Connections
- Display
- Information

» Existing Bluetooth connections are not deleted.

---

## BLUETOOTH

### Bluetooth

Bluetooth is a short-range wireless technology. Bluetooth devices are short-range devices transmitting on the license-free ISM band (Industrial, Scientific, Medical) between 2.402...2.480 GHz. They can be operated anywhere in the world without a licence being required.

Although Bluetooth is designed to establish and sustain robust connections over short

distances, as with every other wireless technology disruptions are possible. Interference can affect connections or connections can sometimes fail. Particularly when multiple devices operate in a Bluetooth network, with wireless technology of this nature it is not possible to ensure fault-free communications in every situation.

### **Possible sources of interference:**

- interference zones due to transmission masts and similar.
- devices with non-compliant Bluetooth implementations.
- proximity of other Bluetooth-compatible devices.
- shielding by metal objects or bodies.

### **Pairing**

Two Bluetooth devices have to recognise each other before they can communicate. This process of mutual recognition is known as pairing. When two devices have paired they remember each other, so the pairing process is conducted only once, on initial contact.



On some mobile devices, e.g. those with the iOS operating system, the

BMW Motorrad Connected app has to be opened prior to use.

During the pairing process, the instrument cluster searches for other Bluetooth-compatible devices within its reception range. The conditions that have to be satisfied before the audio system can recognise another device are as follows:

- The device's Bluetooth function must be active
- The device must be "visible" to others
- Other Bluetooth-compatible devices must be OFF (e.g. mobile phones and navigation systems).

Please consult the operating instructions for your communication system.

### **Pairing**

- Navigate to **Settings, Connections**.
- » Bluetooth connections can be established, managed and deleted in the **CONNECTIONS** menu. The following Bluetooth connections are displayed:
  - Mobile device
  - Rider's helmet

## 116 TFT DISPLAY

– Passenger helm.

The connection status for mobile devices is displayed.

### Connect mobile device

- Perform pairing. (➡ 115)
- Activate the mobile device's Bluetooth function (see mobile device's operating instructions).
- Select **Mobile device** and confirm.
- Select **Pair new mobile device** and confirm.

Mobile devices are being searched for.



flashes in the bottom status line during pairing.

Mobile devices found are displayed.

- Select and confirm mobile device.



If the fuel tank is between the mobile device and the instrument cluster, the Bluetooth connection may be restricted. BMW Motorrad recommends keeping the mobile device above the fuel tank (e.g. carried in a jacket pocket).

- Follow the instructions on the mobile device.

- Confirm that the code matches.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (➡ 244)
- » Depending on the mobile device, telephone data is transferred to the vehicle automatically.
- » Telephone data (➡ 127)
- » If the telephone book is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (➡ 245)
- » If the Bluetooth connection is not working as expected, consult the troubleshooting chart in the section entitled "Technical data". (➡ 245)

### Connect rider's and passenger's helmet

- Perform pairing. (➡ 115)
- Select **Rider's helmet** or **Passenger helm.** and confirm.
- Make the helmet's communication system visible.

- Select Pair new rider's helmet or Pair new passenger helmet and confirm. Helmets are searched for.



flashes in the bottom status line during pairing.

Helmets found are displayed.

- Select and confirm helmet.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (▮▮▮▮ 244)
- » If the Bluetooth connection is not working as expected, consult the troubleshooting chart in the section entitled "Technical data". (▮▮▮▮ 245)


### Delete connections

- Navigate to Settings, Connections.
- Select Delete connections.
- To delete an individual connection, select the connection and confirm.
- To delete all connections, select Delete all connections and confirm.

# 118 TFT DISPLAY


## MY VEHICLE

### START SCREEN

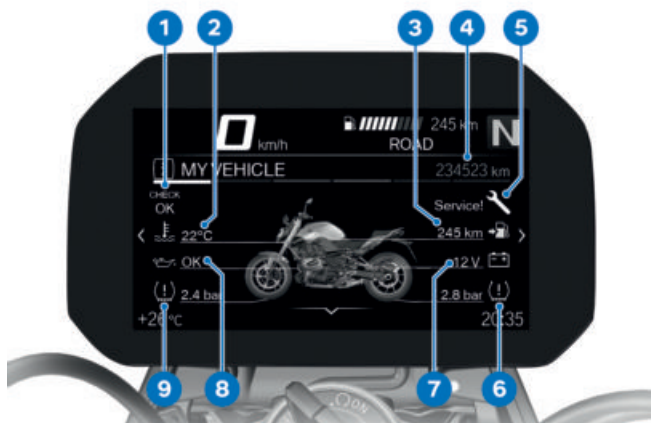


- 1 Check Control display  
Mode of presentation  
(⇒ 31)
- 2 Coolant temperature  
(⇒ 45)
- 3 Range (⇒ 112)
- 4 Odometer
- 5 Service display (⇒ 60)
- 6 Tyre pressure, rear  
(⇒ 49)
- 7 On-board voltage  
(⇒ 211)
- 8 Engine oil level (⇒ 45)
- 9 Tyre pressure, front  
(⇒ 49)

## Operating pointers

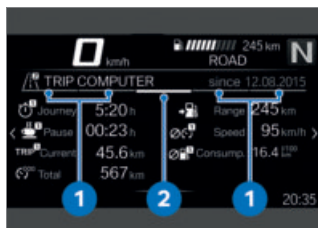

- Operating pointer 1:  
Indicators showing how far you can scroll to the left or right.
- Operating pointer 2: Indicator showing the position of the current menu screen.

## Scrolling through menu screens

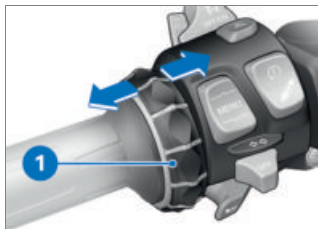

- Call up the My vehicle menu.
- To scroll to the right, short-press Multi-Controller 1 to the right.

- To scroll to the left, short-press Multi-Controller 1 to the left.

The My Vehicle menu contains the following screens:

- MY VEHICLE
- Check Control messages (if any)
- ON-BOARD COMPUTER
- TRIP COMPUTER
- with tyre pressure control (RDC) OE
- TYRE PRESSURE
- SERVICE REQUIREMENTS
- For more information on tyre pressures and Check Control messages, see the section on displays (31).

 Check Control messages are attached dynamically to the menu screens as additional tabs in the My vehicle menu.

## On-board computer and trip computer

The ON-BOARD COMPUTER and TRIP COMPUTER menu screens display vehicle and trip data, such as average values.

## Call up the on-board computer

- Call up the My vehicle menu.

## 120 TFT DISPLAY

- Scroll to the right until the ON-BOARD COMPUTER menu screen is displayed.

### Reset the on-board computer

- Call up the on-board computer. (►► 119)
- Press down the MENU rocker button.
- Select Reset all values or Reset individual values and confirm.

The following values can be reset:



Break



Journey



Current (TRIP 1)



Speed



Consump.

### Call up the trip computer


- Call up the on-board computer. (►► 119)
- Scroll to the right until the TRIP COMPUTER menu screen is displayed.

### Reset the trip computer


- Call up the trip computer. (►► 120)

- Press down the MENU rocker button.
- Select Autom. reset or Reset all values and confirm.
  - » If Autom. reset is selected, the trip computer is automatically reset when a minimum of 6 hours have passed and the date has changed since the ignition was switched off.

### Service requirements

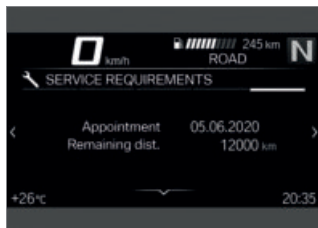

When the next service is due within less than a month or within 1000 km, a white Check Control message is displayed.

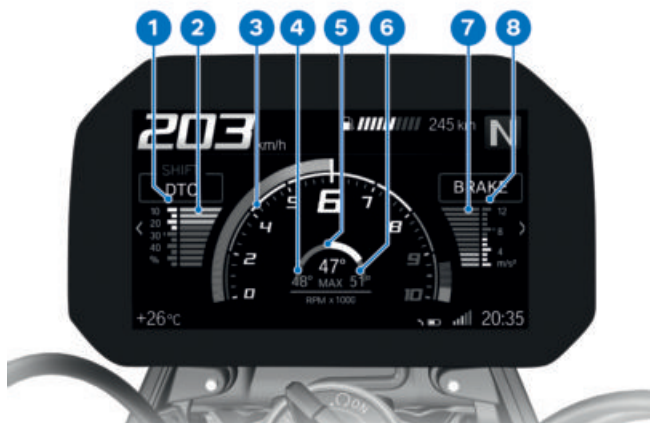**SPORT****SPORT OVERVIEW**

- 1** Maximum DTC torque reduction
- 2** Actual DTC torque reduction
- 3** Rev. counter
- 4** Maximum heel angle, left
- 5** Actual heel angle in corners for left and right
- 6** Maximum heel angle, right
- 7** Current retardation rate during braking
- 8** Maximum retardation rate

## 122     TFT DISPLAY

### **Resetting the maximum values**

The maximum values for DTC torque reduction, lean angle and deceleration are automatically reset after the ignition has been switched off.

## NAVIGATION

### Warnings



#### WARNING

##### Operation of a smartphone while riding the vehicle

Risk of accident

- Always comply with the road traffic regulations in force where you are riding.
- Do not use a smartphone while riding. This applies with the exception of applications without operation, such as hands-free telephone.



#### WARNING

##### Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.

### Precondition

The vehicle is connected via Bluetooth to a compatible mobile device.

The BMW Motorrad Connected app is installed on the connected mobile device.



On some mobile devices, e.g. those with the iOS operating system, the BMW Motorrad Connected app has to be opened prior to use.

### Enter the destination address

- Connect a mobile device. (116)
- Call up the BMW Motorrad Connected app and start the route guidance.
- In the instrument cluster, call up the **Navigation** menu.
  - » Active route guidance is displayed.
  - » If the active route guidance is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (245)

### Select destination from recent destinations

- Navigate to **Navigation**, **Recent destinations**.
- Select and confirm destination.

## 124 TFT DISPLAY

- Select Start route guidance.

### Select destination from favourites

- The FAVOURITES menu shows all the destinations saved as favourites in the BMW Motorrad Connected app. You cannot use the instrument cluster to add favourites to the list.
- Navigate to Navigation, Favourites.
- Select and confirm destination.
- Select Start guidance.

### Enter special destinations

- Special destinations, such as points of interest, can be displayed on the map.
- Navigate to Navigation, POIs.

The following locations can be selected:

- At current location
- At destination
- Along the route

- Select where the special destinations should be looked for.

For example, the following special destination can be selected:

- Filling station
- Select and confirm the special destination.

- Select Start route guidance and confirm.

### Set route criteria

- Navigate to Navigation, Route criteria.

The following criteria can be selected:

-Route type

-Avoid

- Select desired Route type.
- Switch desired Avoid on or off.

The number of avoidances activated is displayed in brackets.

### View the route information

- Navigate to Navigation, Settings and select Route info.

You can choose between the following options:

-Dest.

-Waypoint

- Select the desired option.

» Countdown distance and time are displayed.

### Edit route guidance

- Navigate to Navigation, New destination.

You can choose from the following destinations:

-Recent destinations

-Favourites

-POIs

- Select a destination from one of the three destination categories.
- Select **Change route guidance** in the destination entry.
- Select **Add as waypoint** to add the selected destination as a waypoint.
- Select **Start guidance** to overwrite the current destination.

### End route guidance

- Navigate to **Navigation, Active route guidance**.
- Select **End route guidance** and confirm, or tilt the Multi-Controller to the left.

### Switch spoken instructions on or off

- Connect the rider's and passenger's helmets. (► 116)
- The navigation can be read out by a computer voice. For this purpose, **Spoken instruction** must be switched on.
- Navigate to **Navigation, Active route guidance**.
- Switch **Spoken instruction** on or off.

### Repeat last spoken instruction

- Navigate to **Navigation, Active route guidance**.
- Select **Current instruction** and confirm.


---

## MEDIA

### Precondition

The vehicle is connected to a compatible mobile device and helmet.

### Controlling music playback

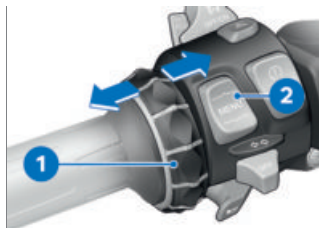

- Call up the **Media** menu.

 BMW Motorrad recommends setting the volume for media and phone calls on the mobile device to maximum before riding off.

- Adjust volume. (► 113)
- Next track: Short-tilt Multi-Controller **1** to the right.
- Preceding track or start of current track: Short-tilt Multi-Controller **1** to the left.
- Fast forward: Long-tilt Multi-Controller **1** to the right.

## 126 TFT DISPLAY

- Rewind: Long-tilt Multi-Controller **1** to the left.
- Call up context menu: Press bottom section of button **2**.

 Depending on the mobile end device, the scope of Connectivity functions might be restricted.

- » The following functions can be used in the context menu:
- Playback or Pause.
  - Select the Now playing, All artists, All albums or All tracks category for search and playback.
  - Select Playlists.

You can make the following adjustments in the Audio settings submenu:

- Switch Shuffle on or off.
- Select Repeat: Off, One (current track) or All.


---

### TELEPHONE

#### Precondition

The vehicle is connected to a compatible mobile device and helmet.

#### Telephone calls

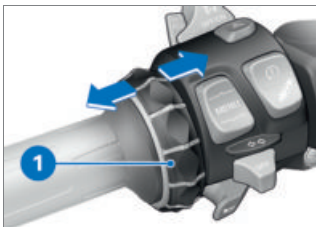

- Call up the Telephone menu.
- Accept call: Tilt Multi-Controller **1** to the right.
- Reject call: Tilt Multi-Controller **1** to the left.
- End call: Tilt Multi-Controller **1** to the left.

#### Muting

During active phone calls, the microphone in the helmet can be muted.

#### Phone calls with multiple participants

While a phone call is in progress, a second call can be accepted. The first phone call is put on hold. The number of active calls is shown in the Telephone menu. It is possible to switch between two phone calls.

## Telephone data

Depending on the mobile device, when pairing (115) completes telephone data are automatically sent to the vehicle.

Phone book: List of contacts saved on the mobile device

Call list: List of calls with the mobile device

Favourites: List of favourites saved on the mobile device

## DISPLAY SOFTWARE VERSION

- **Navigate to Settings, Information, Software version.**

## DISPLAY LICENCE INFORMATION

- **Navigate to Settings, Information, Licences.**

# ADJUSTMENT

06

---

|                        |            |
|------------------------|------------|
| <b>MIRRORS</b>         | <b>130</b> |
| <b>HEADLIGHT</b>       | <b>131</b> |
| <b>CLUTCH</b>          | <b>131</b> |
| <b>GEARSHIFT LEVER</b> | <b>133</b> |
| <b>BRAKES</b>          | <b>133</b> |
| <b>FOOTRESTS</b>       | <b>135</b> |
| <b>SPRING PRELOAD</b>  | <b>136</b> |
| <b>DAMPING</b>         | <b>137</b> |

# 130 ADJUSTMENT


## MIRRORS

### Adjusting mirrors



- Turn the mirror to the appropriate position.

### Adjusting mirror arm

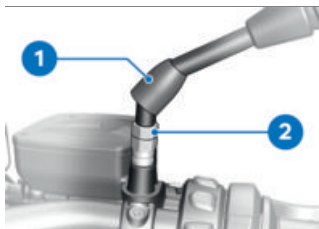

- Push protective cap **1** over the threaded fastener of the mirror arm up to expose the threaded fastener.
- Slacken nut **2**.
- Turn the mirror arm to the appropriate position.
- Tighten the nut to the specified torque, while holding the mirror arm to ensure that it does not move out of position.



Mirror (locknut) to adapter

M10 x 1.25

22 Nm (Left-hand thread)

- Push protective cap **1** over the threaded fastener.

### Adjusting mirrors

—with Option 719 Billet Pack Classic II<sup>OE</sup>

or

—with Option 719 Billet Pack Storm II<sup>OE</sup>

or

—with Option 719 Billet Pack Shadow II<sup>OE</sup>



- Turn the mirror **1** to the correct position.

### Adjusting mirror arm

—with Option 719 Billet Pack  
Classic II<sup>OE</sup>


or

—with Option 719 Billet Pack  
Storm II<sup>OE</sup>

or

—with Option 719 Billet Pack  
Shadow II<sup>OE</sup>

 A small and a large angle screwdriver is supplied with the vehicle for adjusting the mirror arm.

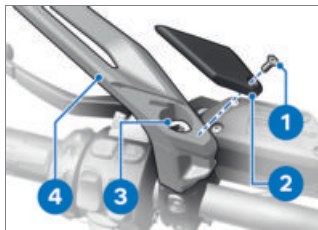

- Remove bolt **1** and cover **2**.
- Loosen adjusting screw **3** and turn the mirror arm **4** to the desired position.
- Tighten adjusting screw **3**, while holding the mirror arm.
- Attach cover **2** and fit bolt **1**.



Mirror on handlebars

M10 x 30

25 Nm

## HEADLIGHT

### Headlight beam throw and spring setting

The headlight beam throw generally remains constant by adjustment of the spring setting to the load status.

Adjustment of the spring setting may only be inadequate if the load is very high. In this case, the headlight beam throw must be adjusted to the weight.

 If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## CLUTCH

### Adjusting clutch lever




### WARNING

#### Adjusting the clutch lever while riding

Risk of accident

- Adjust the clutch lever only when the motorcycle is at a standstill.

## 132 ADJUSTMENT

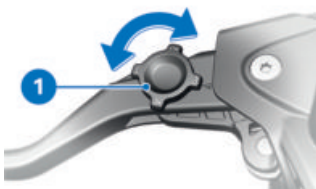

- Turn adjuster knob **1** to the desired position.

 The adjuster knob is easier to turn when the clutch lever is pushed slightly forward.

» Adjustment options:

- Position 1: Narrowest span between handlebar grip and clutch lever
- Position 4: Widest span between handlebar grip and clutch lever


–with Option 719 Billet Pack Classic II<sup>OE</sup>

or

–with Option 719 Billet Pack Storm II<sup>OE</sup>

or

–with Option 719 Billet Pack Shadow II<sup>OE</sup>

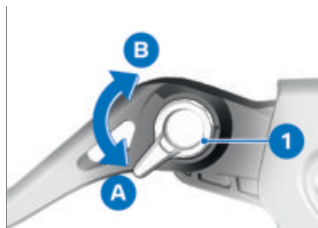

- Turn adjustment lever **1** to the desired position.

» Adjustment options:

- From position **A**: Narrowest span between handlebar grip and clutch lever.
- In 5 steps toward position **B** to increase the span between handlebar grip and clutch lever.◀

## GEARSHIFT LEVER

—with Option 719 Billet Pack  
Classic II<sup>OE</sup>


or

—with Option 719 Billet Pack  
Storm II<sup>OE</sup>


or

—with Option 719 Billet Pack  
Shadow II<sup>OE</sup>

### Adjusting gearshift lever peg

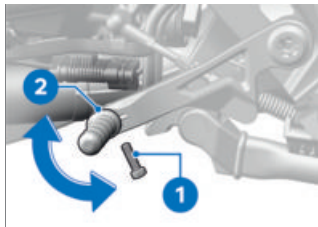

- Foot clearance and height relative to peg **2** can be adjusted by turning to different positions.
- Remove screw **1**.

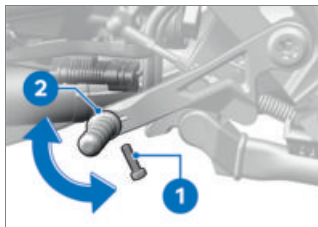

- Clean the threads.

- Turn peg **2** to the desired position.
- Install **new** screw **1**.



Peg to gearshift lever

M6 x 20

Thread-locking compound:  
micro-encapsulated

10 Nm

## BRAKES

### Adjusting handbrake lever



**WARNING**

#### Adjusting the handbrake lever while riding

Risk of accident

- Do not attempt to adjust the handbrake lever unless the motorcycle is at a standstill.



- Turn adjuster knob **1** to the desired position.

## 134 ADJUSTMENT

 The adjuster knob is easier to turn when the handbrake lever is pushed slightly forward.

» Adjustment options:

– Position 1: Narrowest span between handlebar grip and handbrake lever

– Position 4: Widest span between handlebar grip and handbrake lever


– with Option 719 Billet Pack Classic II<sup>OE</sup>

or

– with Option 719 Billet Pack Storm II<sup>OE</sup>

or

– with Option 719 Billet Pack Shadow II<sup>OE</sup>

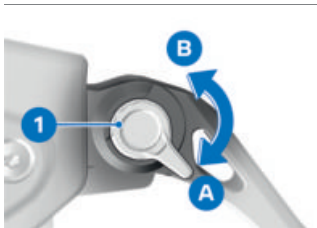

• Turn adjustment lever **1** to the desired position.

» Adjustment options:

– From position **A**: Narrowest span between handlebar grip and handbrake lever.

– In 5 steps toward position **B** to increase the span between handlebar grip and handbrake lever. ◀

### Adjust the footbrake lever peg


– with Option 719 Billet Pack Classic II<sup>OE</sup>

or


– with Option 719 Billet Pack Storm II<sup>OE</sup>

or

– with Option 719 Billet Pack Shadow II<sup>OE</sup>

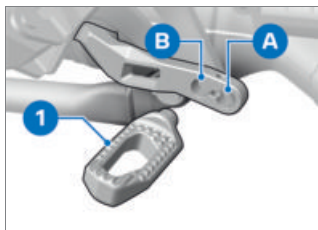

• Foot distance and height to peg **1** can be adjusted by turning through 180° and installation in position **A** or **B**.

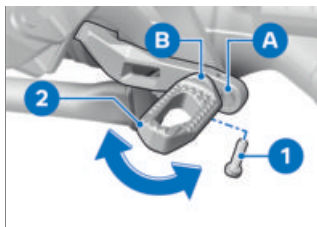

- Remove screw **1**.
- Clean the threads.
- Install peg **2** in desired position **A** or **B**.
- Turn peg **2** to the desired position.
- Install **new** screw **1**.



Peg to footbrake lever

M6 x 20

Thread-locking compound:  
micro-encapsulated

10 Nm

## FOOTRESTS

—with Option 719 Billet Pack  
Classic II<sup>OE</sup>

or


—with Option 719 Billet Pack  
Storm II<sup>OE</sup>

or


—with Option 719 Billet Pack  
Shadow II<sup>OE</sup>

## Adjusting footrests

- The footrest is adjusted on the right and left in the same way.
- The position of the footrest must be set identically on the right and on the left.

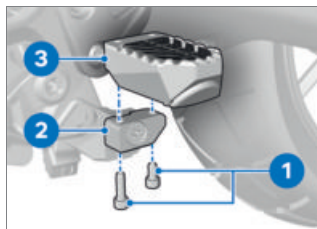


- Remove screws **1**.
- Remove footrest **3** from clamping block **2**.

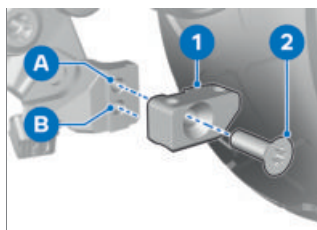

- Remove screw **2**.
- Remove clamping block **1** from position **A** or **B**.

## 136 ADJUSTMENT

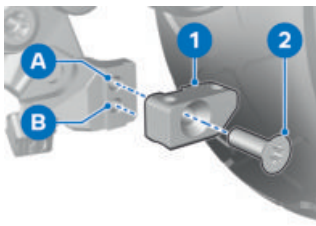


- Install clamping block **1** in required position **A** or **B** and tighten bolt **2**.

 Clamping block on footrest hinge

M8 x 25

20 Nm

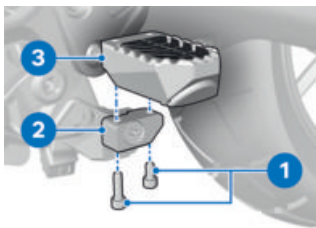

- Position footrest **3** on clamping block **2**.
- Install screws **1**.

 Footrest on clamping block

M6 x 20 / M6 x 12

10 Nm

- Remove and refit the footrest on the other side in the same way.

### SPRING PRELOAD

#### Adjustment

It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring preload when the vehicle is heavily loaded and reduce spring preload accordingly when the vehicle is lightly loaded.

#### Adjusting spring preload for rear wheel

—without Dynamic ESA<sup>OE</sup>



#### WARNING

#### Adjusting spring preload while riding.

Risk of accident

- Do not attempt to adjust spring preload unless the motorcycle is at a standstill.
- Make sure the ground is level and firm and place the motorcycle on its stand.◁

**WARNING****Spring preload setting and spring-strut damping setting not matched.**

Impaired handling.

- Adjust spring-strut damping to suit spring preload.

**WARNING****Adjusting spring preload while riding.**

Risk of accident

- Do not attempt to adjust spring preload unless the motorcycle is at a standstill.
- To reduce spring preload, turn adjuster knob **1** in the direction indicated by the **LOW** arrow.
- To increase spring preload, turn adjuster knob **1** in the direction indicated by the **HIGH** arrow.



Basic setting of spring preload, rear

—without Dynamic ESA<sup>OE</sup>

Turn the adjuster knob as far as it will go in the **LOW** direction. (One-up riding without luggage)

Turn the adjuster knob as far as it will go in the **LOW** direction, then turn it 15 turns in the **HIGH** direction. (One-up with luggage)

Turn the adjuster knob as far as it will go in the **HIGH** direction. (Two-up with luggage) ◀

**DAMPING**

—without Dynamic ESA<sup>OE</sup>

**Adjustment**

Damping must be adapted to suit the surface on which the motorcycle is ridden and to suit spring preload.

- An uneven surface requires softer damping than a smooth surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

## 138 ADJUSTMENT

### Adjusting damping for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Set the damping from the left-hand vehicle side.



Basic setting of rear-suspension damping characteristic

Turn the knob clockwise as far as it will go. (Two-up with luggage)



- To increase damping, turn adjuster knob **1** clockwise.
- To reduce damping, turn adjuster knob **1** counter-clockwise.



Basic setting of rear-suspension damping characteristic

Turn the knob clockwise as far as it will go, then back it off 6 clicks in the counter-clockwise direction. (One-up riding without luggage)

Turn the knob clockwise as far as it will go, then back it off 4 clicks in the counter-clockwise direction. (One-up with luggage)



**RIDING**

**07**

---

|                                               |            |
|-----------------------------------------------|------------|
| <b>SAFETY INFORMATION</b>                     | <b>142</b> |
| <b>REGULAR CHECK</b>                          | <b>144</b> |
| <b>STARTING</b>                               | <b>145</b> |
| <b>RUNNING IN</b>                             | <b>148</b> |
| <b>SHIFTING GEAR</b>                          | <b>149</b> |
| <b>BRAKES</b>                                 | <b>151</b> |
| <b>PARKING YOUR MOTORCYCLE</b>                | <b>153</b> |
| <b>REFUELLING</b>                             | <b>154</b> |
| <b>SECURING MOTORCYCLE FOR TRANSPORTATION</b> | <b>159</b> |

## SAFETY INFORMATION

### Rider's equipment

Do not ride without the correct clothing! Always wear:

- Helmet
- Motorcycling jacket and trousers
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad dealer will be glad to advise you on the correct clothing for every purpose.

### Load



### WARNING

#### Handling adversely affected by overloading and imbalanced loads

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.
- Adapt spring setting and damping adjustment to the total weight.
- with case<sup>OA</sup>
- Ensure that the case volumes on the left and right are equal.

- Make sure that the weight is uniformly distributed between right and left.
- Pack heavy items at the bottom and toward the inboard side.
- Note the maximum permissible payload and maximum permissible speed (see also the section entitled "Accessories").◁

-with topcase<sup>OA</sup>

- Note the maximum permissible payload and maximum permissible speed (see also the section entitled "Accessories").◁

-with tank bag, small<sup>OA</sup>

- Note the maximum permissible payload and the speed limit for riding with the small tank rucksack fitted.



Payload of the tank rucksack, small

max 5 kg



Speed limit for riding with tank rucksack, small, fitted to the vehicle

max 180 km/h◁

-with tank bag<sup>OA</sup>

- Note the maximum permissible payload and maximum

speed for riding with the large tank bag.

|                                                                                                |                                                                   |
|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|
|               | Payload of tank rucksack                                          |
| max 5 kg                                                                                       |                                                                   |
|               | Speed limit for riding with tankbag, large, fitted to the vehicle |
| max 130 km/h  |                                                                   |

### Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Spring-strut and shock-absorber system not set up correctly
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

### Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



### WARNING

#### Exhaust gases adversely affecting health

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.



### WARNING

#### Inhalation of harmful vapours

Health hazard

- Do not inhale vapours from operating fluid and plastics.
- Use the vehicle only out-doors.

### Risk of burning



### CAUTION

#### Engine and exhaust system become very hot when the vehicle is in use

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.



## WARNING

### Opening radiator cap

Risk of burning

- Do not open the radiator cap when the system is hot.
- Check and, if necessary, top up the coolant in the expansion tank only.

### Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry.
- Do not attempt to start or run the engine with a spark-plug cap disconnected.
- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.



## ATTENTION

### Unburned fuel in catalytic converter

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.

## Risk of overheating



## ATTENTION

### Engine running for prolonged period with vehicle at standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.

## Tampering



## ATTENTION

### Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

- Do not tamper with the vehicle in any way that could result in tuned performance.

## REGULAR CHECK

### Comply with checklist

- At regular intervals, use the checklist below to check your motorcycle.

**Always before riding off**

- Check operation of the brake system.
- Check operation of the lights and signalling equipment.
- Check operation of the clutch. (▮▮▮ 193)
- Check the tyre tread depth. (▮▮▮ 195)
- Check the tyre pressures. (▮▮▮ 194)
- without Dynamic ESA<sup>OE</sup>
- Adjust the spring preload for the rear wheel. (▮▮ 136)
- Adjust the damping for the rear wheel. (▮▮ 138)◁
- with Dynamic ESA<sup>OE</sup>
- Adjust the spring preload. (▮▮▮ 81)
- Adjust the damping. (▮▮▮ 81)◁
- Check security of cases and luggage.

**Every 3rd refuelling stop**

- Check the engine oil level. (▮▮▮ 186)
- Check the brake pad thickness, front brakes. (▮▮▮ 188)
- Check the brake pad thickness, rear brakes. (▮▮▮ 189)
- Check the brake-fluid level, front brakes. (▮▮▮ 191)
- Check the brake-fluid level, rear brakes. (▮▮▮ 192)

- Check the coolant level. (▮▮▮ 193)

**STARTING****Starting engine**

- Switch on the ignition.
  - » Pre-Ride-Check is performed. (▮▮▮ 146)
  - » ABS self-diagnosis is in progress. (▮▮▮ 147)
  - » DTC self-diagnosis is performed. (▮▮▮ 148)
- Select neutral or, if a gear is engaged, pull the clutch lever.

 You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.

- Cold starts and low temperatures: Pull the clutch lever.
  - » Low temperatures can impact on the starting response. Repeated, brief application of load on the battery causes battery temperature to rise, so more battery power is available for starting the engine.



- Press the starter button **1**.

 The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.

See the subsection on jump starting in "Maintenance" for more details.

- » The engine starts.
- » If the engine refuses to start, consult the troubleshooting chart in the section entitled "Technical data". (➡ 244)

Recharge the battery before you try again to start the engine, or use jump leads and a donor battery to start:

- Charge the battery when connected. (➡ 211)
- Jump-start. (➡ 208)

## Pre-Ride-Check

The instrument cluster runs a test of the instruments and the indicator and warning lights when the ignition is switched on. This test is known as the Pre-Ride-Check. The test is aborted if you start the engine before it completes.

### Phase 1

All indicator and warning lights are switched on. After a longer vehicle standstill period, an animation is displayed when the system starts up.

### Phase 2

The 'General' warning light changes from red to yellow.

### Phase 3

All the indicator and warning lights switched on in the initial phase are switched off in reverse sequence.

The malfunction indicator lamp goes out after 15 seconds.

If the needle of the speedometer did not move or if an indicator or warning light was not switched on:



## WARNING

### Faulty warning lights

No indication of malfunctions

- Check all the telltale and warning lights.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

—with riding modes Pro<sup>OE</sup>



The intervention of riding dynamics control systems can be restricted, depending on which riding mode is selected and how the selected mode is configured.

Possible restrictions are indicated by a pop-up message, for example **Warning! ABS setting..**

The ABS indicator light flashes irregularly.

See the section entitled "Engineering details" for more information on riding dynamics control systems such as ABS.◀

### ABS self-diagnosis

BMW Motorrad Integral ABS performs self-diagnosis to ensure its operability. Self-diagnosis is performed automati-

cally when you switch on the ignition

### Phase 1

- » Test of the diagnosable system components with the vehicle at a standstill.



flashes.

### Phase 2

- » Test of the wheel-speed sensors as the vehicle pulls away from rest.



flashes.

### ABS self-diagnosis completed

- » The ABS telltale and warning light goes out.

- Check all the indicator and warning lights.



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride. Bear in mind that neither the

## 148 RIDING

ABS function nor the integral braking function is available.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

### DTC self-diagnosis

BMW Motorrad DTC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

#### Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



slow-flashes.

#### Phase 2

» Pullaway test of the diagnosis-compatible system components.



slow-flashes.

### DTC self-diagnosis completed

- » The DTC symbol no longer shows.
- Observe all the indicator and warning lights.



DTC+ self-diagnosis not completed

The DTC+ function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

If an indicator showing an DTC fault is displayed after DTC self-diagnosis completes:

- You can continue to ride. Bear in mind that the DTC function is not available or the functionality might be subject to certain restrictions.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

---

## RUNNING IN

### Engine

- Until the first running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads.

- Comply with the running-in speeds.

|                                                                                   |                   |
|-----------------------------------------------------------------------------------|-------------------|
|  | Running-in speeds |
| <5000 min <sup>-1</sup> (Odometer reading 0...1000 km)                            |                   |
| No full load (Odometer reading 0...1000 km)                                       |                   |

- Note the mileage after which the running-in check should be carried out.

|                                                                                   |                                    |
|-----------------------------------------------------------------------------------|------------------------------------|
|  | Mileage until the running-in check |
| 500...1200 km                                                                     |                                    |

### Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.

#### **WARNING**

#### **New brake pads**

Longer stopping distance, risk of accident

- Apply the brakes in good time.

### Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



#### **WARNING**

#### **New tyres losing grip on wet roads and at extreme bank angles**

Risk of accident

- Ride carefully and avoid extremely sharp inclines.

### SHIFTING GEAR

#### **Shift Assistant Pro**


—with shift assistant Pro<sup>OE</sup>



See the section entitled "Engineering details" for more information on Gear Shift Assistant Pro.



For safety reasons, cruise control is automatically deactivated when Gear Shift Assistant Pro downshifts.

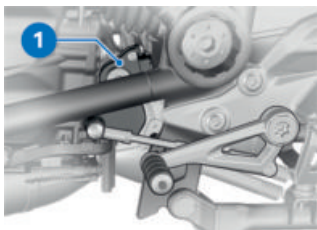


- You select the gear in the usual way by means of the foot-operated shift lever.
- » The shift assistant assists upshifts and downshifts without the rider having to pull the clutch or close the throttle.
- This is not an automatic-shift system.
- The rider is the most important part of the system and decides when to shift gears.
- The sensor **1** on the gearshift shaft registers the gearshift request and triggers shift assistance.
- » When riding at a steady speed in a low gear at high engine rpm, an attempt to shift gear without pulling the clutch can cause a severe load-change reaction.
- BMW Motorrad recommends disengaging the clutch for shifts in these circumstances.
- It is advisable to avoid using Gear Shift Assistant Pro at

engine speeds close to the limits at which the governor cuts in to limit engine rpm.

- » Shift assistance is not available in the following situations:
  - With clutch lever pulled.
  - Gearshift lever not in its initial position
  - Upshifts with the throttle valve closed (engine overrun) and when slowing.
  - Downshifts with throttle valve open and when accelerating.
- Once the gearshift has completed, the gearshift lever must be fully released before another gearshift with the Shift Assistant Pro can take place.

## Shift light

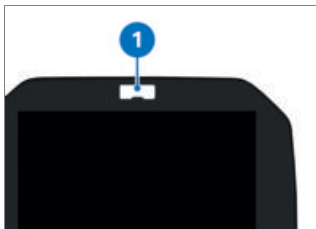

Shift light **1** indicates that the engine speed at which the rider should upshift is approaching.

- Shift light flashes at preset frequency: Approaching up-shift rpm
- Shift light goes out: Engine revving at upshift rpm

The engine-speed thresholds and the way in which the shift light indicates the various states can be customised by navigating to **Settings**, **Vehicle settings**; also see the (▣ 91) section.

---

## BRAKES

### How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The higher the wheel load, the more braking force can be transmitted without the wheel locking.

To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the

clutch at the same time. In the extreme sudden-stop braking situations that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road.

BMW Motorrad Integral ABS Pro prevents the front wheel from locking up.

### Emergency braking

If you brake sharply from a speed in excess of >50 km/h, the brake light flashes rapidly as a warning for road users behind you.

If you brake until your speed is less than <15 km/h, the hazard warning lights start to flash as well. The hazard warning lights switch off automatically as soon as you start to accelerate and vehicle speed reaches 20 km/h.

## Descending mountain passes



### WARNING

#### Braking mostly with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.

#### Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirty surfaces.



### WARNING

#### Wetness and dirt result in diminished braking efficiency

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.

## ABS Pro

### Physical limits applicable to motorcycling



### WARNING

#### Braking when cornering

Risk of crash despite ABS Pro

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.

ABS Pro is available in all riding modes.

### **Possibility of a fall not precluded**

Although ABS Pro and Dynamic Brake Control provide the rider with valuable assistance and constitute a huge advance in safety for braking with the motorcycle banked for cornering, they cannot under any circumstances be considered as re-defining the physical limits that apply to motorcycling. It is still possible for these limits to be overshoot due to misjudgement or rider error. In extreme cases this can result in a crash.

### **Use on public roads**

ABS Pro and Dynamic Brake Control help make the motorcycle even safer for riding on public roads. When the brakes are applied because of an unforeseen hazard when the motorcycle is banked for cornering, within the physical limits that apply to motorcycling the system prevents the wheels from locking and skidding away. In emergency braking, Dynamic Brake Control increases the braking effect and intervenes if the throttle grip is accidentally turned during braking.



ABS Pro was not developed to enhance individual braking performance with the motorcycle banked into corners.

## **PARKING YOUR MOTORCYCLE**

### **Side stand**

- Switch off the ignition.  
( 65)



### **ATTENTION**

#### **Poor ground underneath the stand**

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.



### **ATTENTION**

#### **Additional weight placing strain on the side stand**

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.
- Extend the side stand and prop the motorcycle on the stand.

- Turn the handlebars all the way to left.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

## Centre stand

—with centre stand<sup>OE</sup>

- Switch off the ignition.  
( 65)



### ATTENTION

#### Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.



### ATTENTION

#### Centre stand retracts due to severe movements

Risk of damage to parts if vehicle topples

- Do not lean or sit on the vehicle with the centre stand extended.
- Extend the centre stand and lift the motorcycle on to the stand.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

## REFUELLING

### Fuel grade

#### Requirement

For optimum fuel consumption, fuel should be sulphur-free or as low-sulphur as possible.



### ATTENTION

#### Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron).
  - Observe the maximum ethanol content of the fuel.
-  Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.

|                                                                                   |                                                                |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------|
|  | Recommended fuel grade                                         |
|  | Premium unleaded (maximum 15 % ethanol, E15)                   |
|  | 95 ROZ/RON<br>90 AKI                                           |
|  | Alternative fuel grade                                         |
|  | Regular unleaded (power- and consumption-related restrictions) |
|  | (maximum 15 % ethanol, E15)<br>91 ROZ/RON<br>87 AKI            |

» Pay attention to the following symbols in the fuel filler cap and on the fuel pump:



» After refuelling with fuels of poor-quality, sporadic knock-noises may be perceptible.

## Refuelling



### WARNING

#### Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.



### WARNING

#### Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank.



### ATTENTION

#### Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.

- Make sure the ground is level and firm and place the motorcycle on its side stand.  
—with centre stand<sup>OE</sup>
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁



- Open the protective cap **2**.
- Unlock the cap of the fuel tank by turning vehicle key **1** clockwise in the lock and pop the cap open.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.

 When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and the fuel reserve indicator light is switched off.

 The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.



Usable fuel capacity

approx. 18 l



Reserve fuel

approx. 4 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

## Refuelling

—with Keyless Ride<sup>OE</sup>

## Requirement

The steering lock is disengaged.



## WARNING

### Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.

**WARNING**

**Escape of fuel due to heat-induced expansion if fuel tank is overfilled**

Risk of falling

- Do not overfill the fuel tank.

**ATTENTION**

**Wetting of plastic surfaces by fuel**

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.
- Make sure the ground is level and firm and place the motorcycle on its side stand.  
—with centre stand<sup>OE</sup>
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁
- Switch off the ignition.  
( 65)



The fuel filler cap can be opened within the defined waiting time after the ignition has been switched off, without the radio-operated key being within range.



Waiting time for opening the fuel filler cap

2 min


- » There are **two variant ways** of opening the fuel filler cap:
- Within the waiting time.
  - After the waiting time has expired.

**Variant 1**

—with Keyless Ride<sup>OE</sup>

**Requirement**

Within the waiting time:

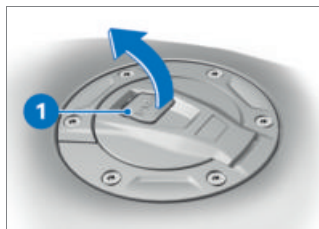

- Slowly pull tab **1** on the fuel filler cap up.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.

**Variant 2**

—with Keyless Ride<sup>OE</sup>

**Requirement**

After the waiting time has expired:

- Bring the radio-operated key into range.

- Slowly pull tab **1** up.
- » The indicator light for the radio-operated key flashes while the search for the radio-operated key is in progress.
- Slowly pull tab **1** on the fuel filler cap up again.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.

 When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and the fuel reserve indicator light is switched off.

 The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and

the engine had cut out due to a lack of fuel.

|                                                                                   |                      |
|-----------------------------------------------------------------------------------|----------------------|
|  | Usable fuel capacity |
| approx. 18 l                                                                      |                      |
|  | Reserve fuel         |
| approx. 4 l                                                                       |                      |


- Press down firmly on the filler cap of the fuel tank.
- » The fuel filler cap engages with an audible click.
- » The fuel filler cap locks automatically when the waiting time expires.
- » The engaged fuel filler cap locks immediately when you secure the steering lock or switch on the ignition.

## Opening fuel filler cap emergency release

—with Keyless Ride<sup>OE</sup>

Fuel filler cap cannot be opened.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

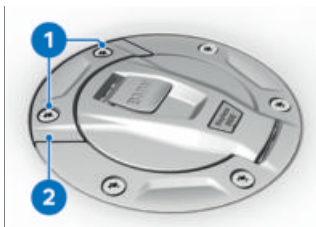


- Remove screws **1**.
- Remove emergency release **2**.  
» Fuel filler cap unlocks.
- Fully open the fuel filler cap.
- Refuel. (156)

### Closing fuel filler cap emergency release

—with Keyless Ride<sup>OE</sup>

### Requirement

Fuel filler cap is in closed position.

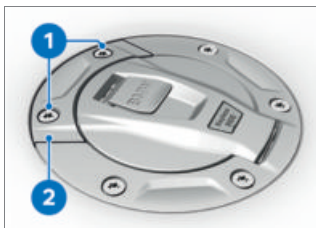

- Hold emergency release **2** in position.
- Install screws **1**.

## SECURING MOTORCYCLE FOR TRANSPORTATION

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.



### ATTENTION

#### Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.
- Push the motorcycle on to the transportation flat and hold it in position: do not place it on the side stand or centre stand.

## 160 RIDING

—with single seater<sup>OE</sup>



- Pass the straps on left and right through the frame and strap the motorcycle down.◁




### ATTENTION

#### Trapping of components

Component damage

- Do not trap components such as brake lines or cable legs.
- Pass the straps on left and right through the fork bridge and strap the motorcycle down.

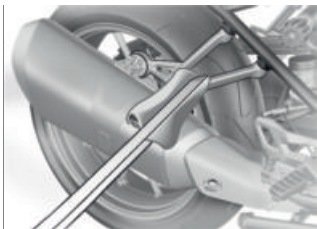

- At the rear, secure the straps to the holders for the passenger footrests on both sides and tighten the straps.

—with single seater<sup>OE</sup>



- Pass the straps on left and right through the frame and strap the motorcycle down.◁
- Tension all the straps uniformly to hold the vehicle securely.



# ENGINEERING DETAILS

08

---

|                                           |            |
|-------------------------------------------|------------|
| <b>GENERAL NOTES</b>                      | <b>164</b> |
| <b>ANTILOCK BRAKE SYSTEM (ABS)</b>        | <b>164</b> |
| <b>DYNAMIC TRACTION CONTROL (DTC)</b>     | <b>168</b> |
| <b>DYNAMIC ENGINE BRAKE CONTROL (MSR)</b> | <b>170</b> |
| <b>DYNAMIC ESA</b>                        | <b>170</b> |
| <b>RIDING MODE</b>                        | <b>171</b> |
| <b>DYNAMIC BRAKE CONTROL</b>              | <b>175</b> |
| <b>TYRE PRESSURE CONTROL (RDC)</b>        | <b>175</b> |
| <b>GEAR SHIFT ASSISTANT</b>               | <b>177</b> |
| <b>HILL START CONTROL (HSC)</b>           | <b>179</b> |
| <b>SHIFTCAM</b>                           | <b>180</b> |
| <b>ADAPTIVE HEADLIGHT</b>                 | <b>181</b> |

---

## GENERAL NOTES

To find out more about engineering, go to [bmw-motorrad.com/technik](http://bmw-motorrad.com/technik).

---

## ANTILOCK BRAKE SYSTEM (ABS)

### Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The foot-brake lever acts only on the rear brake.

When actively intervening in the braking process, the BMW Motorrad Integral ABS adapts braking-force distribution between front and rear brakes to suit the load on the motorcycle, and so ABS intervention helps achieve the shortest possible stopping distance.



### ATTENTION

#### Attempted burn-out despite Integral braking function

Damage to rear brake and clutch

- Do not burn out tyres.

### How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean and dry asphalt surface. The lower the coefficient of friction, the longer the braking distance. If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the vehicle loses its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force. The wheels continue to turn and the driving stability is retained irrespective of the road condition.

### What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circum-

stances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the ABS Pro must assume an extremely low coefficient of friction (gravel, ice, snow), so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

### **What feedback does the rider receive from the BMW Motorrad Integral ABS Pro?**

If ABS has to reduce braking force on account of the circumstances described above, vibration is perceptible through the handbrake lever.

When the handbrake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the handbrake lever is pulled, the brake pressure built up beforehand is perceptible as counter-pressure sooner than is

the case when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

### **Rear wheel lift**

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the BMW Motorrad Integral ABS Pro will be unable to prevent the rear wheel from lifting clear of the ground. If this happens the outcome can be a highsidings situation in which the motorcycle can flip over.



### **WARNING**

#### **Rear wheel lift due to severe braking**

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.

## What is the design baseline for BMW Motorrad Integral ABS Pro?

Within the limits imposed by physics, BMW Motorrad Integral ABS Pro ensures directional stability on any surface. The system is not optimised for special requirements that apply under extreme competitive situations on the track. The driving behaviour should be adapted to actual driving skills and the road conditions.

## Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued. In addition to problems with the BMW Motorrad ABS, exceptional riding conditions can also cause a fault message to be issued:

- Heating up with the motor-cycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending on a loose or slippery surface.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

## What significance devolves on regular maintenance?



### WARNING

#### Brake system not regularly serviced.

Risk of accident

- In order to ensure that the ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.

## Safety reserves

The potentially shorter braking distances which BMW Motorrad Integral ABS Pro permits must not be used as an excuse for careless riding. The system is

primarily a means of ensuring a safety margin in genuine emergencies.



## **WARNING**

### **Braking when cornering**

Risk of accident despite ABS

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional margin of safety offered by this system.

### **Evolution of ABS to ABS Pro**

Until now, BMW Motorrad ABS has helped ensure a very high degree of safety for braking with the motorcycle upright and travelling in a straight line. Now ABS Pro offers enhanced safety for braking in corners as well. ABS Pro prevents the wheels from locking even under sharp braking. ABS Pro reduces abrupt changes in steering force, particularly in shock-braking situations, counteracting the vehicle's otherwise natural but undesirable tendency to straighten up.

### **ABS intervention**

Technically speaking, depending on the riding situation ABS Pro adapts ABS intervention to the motorcycle's bank angle. Signals for rate of roll and rate of yaw and lateral acceleration are used to calculate bank angle.

As the motorcycle is heeled over more and more as it banks into a corner, an increasingly strict limit is imposed on the brake-pressure gradient for the start of brake application. This slows the build-up of brake pressure to a corresponding degree. Additionally, pressure modulation is more uniform across the range of ABS intervention.

### **Advantages for the rider**

The advantages of ABS Pro for the rider are sensitive response and high braking and directional stability combined with best-case deceleration of the motorcycle, even when cornering.

## DYNAMIC TRACTION CONTROL (DTC)

### How does traction control work?

Traction control compares the front and rear wheel circumferential velocities. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the electrical machine management system intervenes and adapts torque accordingly. Dynamic Traction Control (DTC) takes bank angle into consideration and on account of this additional bank angle and acceleration data, its intervention is more precise and more comfortable for the rider.

BMW Motorrad DTC is designed as an assistant system for the rider and for use on public roads. The extent to which the rider affects DTC control can be considerable (weight shifts when cornering, items of luggage loose on the vehicle), especially when the style of riding takes rider and machine close to the limits imposed by physics.

The system is not optimised for special requirements that apply under extreme competitive conditions off-road or on the track. The BMW Motorrad DTC can be deactivated in these cases.



### WARNING

#### Risky riding

Risk of accident despite DTC

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional safety offered by this system.

#### Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

If the electronic processor receives values for the bank angle that it considers implausible over a lengthy period, a dummy value is used for the bank angle or the DTC function is switched off. Under these

circumstances the indicator for a DTC fault shows. Self-diagnosis has to complete before fault messages can be issued.

The BMW Motorrad Traction Control can shut down automatically under the exceptional riding conditions outlined below.

**Exceptional riding conditions:**

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by application of the front brake (burn-out).
- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.



Minimum speed for activation of DTC

min 5 km/h

If the front wheel lifts clear of the ground under severe acceleration, the DTC reduces engine torque in the **RAIN** and **ROAD** riding modes until the front wheel regains contact with the ground.

In the DTC settings **DYNAMIC** and **DYNAMIC PRO**, front wheel

lift-off detection allows short wheelies.

In **ECO** riding mode, the DTC setting corresponds to the **ROAD** riding mode.

In **RAIN**, **ROAD**, **DYNAMIC** and **DYNAMIC PRO** riding modes, the DTC setting corresponds to the riding mode.

In **DYNAMIC PRO** riding mode, DTC can be set up differently (▶ 85).

BMW Motorrad recommends turning the throttle grip back slightly when lifting the front wheel in order to reach a stable driving condition again as soon as possible.

When riding on a slippery surface, never snap the throttle twistgrip fully closed without pulling the clutch at the same time. Engine braking torque can cause the rear wheel to skid, with a corresponding loss of stability. The BMW Motorrad DTC is unable to control a situation of this nature. With dynamic engine brake control, this loss of stability can be prevented.

---

## DYNAMIC ENGINE BRAKE CONTROL (MSR)

—with riding modes Pro<sup>OE</sup>

### How does dynamic engine brake control work?

The purpose of dynamic engine brake control is to prevent the unstable riding states that can be produced by excessive engine braking moment acting on the rear wheel. Depending on the road condition and riding dynamic, excessive braking torque can produce a sharp rise in rear-wheel slip and impair directional stability. Dynamic engine brake control limits this slip at the rear wheel to a safe mode-dependent and bank-angle-dependent regulated slip.

### Causes for excessive slip at the rear wheel:

- Riding with engine overrun on a surface with a low coefficient of friction (e.g. wet leaves).
- Rear-wheel hop when rider downshifts.
- Sharp braking during sporty riding.

In the same way as DTC traction control, dynamic engine brake control compares the wheel circumferential velocities

of the front and rear wheels. Additional information on the bank angle enables dynamic engine brake control to calculate slip and the reserve of stability at the rear wheel.

If slip overshoots the applicable limit, the throttle valves are opened very slightly to increase engine torque. Slip is reduced and the vehicle is stabilised.

### Effect of dynamic engine brake control

- In ECO, RAIN and ROAD riding modes: Maximum stability.
- In DYNAMIC and DYNAMIC PRO riding modes: High stability.

---

## DYNAMIC ESA

—with Dynamic ESA<sup>OE</sup>

### Riding position equaliser

The electronic chassis and suspension setting Dynamic ESA is able to adjust your motorcycle automatically to the load. If the spring setting is set to **Auto**, the rider does not have to change the load setting.



BMW Motorrad recommends the **Auto** chassis and suspension setting.

When driving off and when riding, the system monitors the suspension at the rear wheel and corrects the spring setting in order to set the correct riding position. The damping is also adjusted automatically to the load.

Via ride height sensors, Dynamic ESA detects the movements in the chassis and suspension and responds by adjusting the EDC valves. The chassis and suspension will thus be adapted to the characteristics of the terrain. Dynamic ESA calibrates itself at regular intervals to ensure the system functions correctly.

### **Possible settings**

#### **Damping modes**

- Road: Damping action for comfortable on-road riding
- Dynamic: Damping action for dynamic on-road riding

#### **Load settings**

- Auto: Active riding position equaliser with automatic adjustment of the spring setting and damping (recommended chassis and suspension adjustment)
- Min: Minimum spring setting (only suitable for one-up mode)

- Max: Minimum spring setting (only suitable for two-up mode)

---

## **RIDING MODE**

### **Selection**

To adjust the motorcycle to the road condition and the desired driving experience, the following riding modes can be selected:

- ECO
- RAIN
- ROAD (default mode)
- with riding modes Pro<sup>OE</sup>
- DYNAMIC
- DYNAMIC PRO

With the Riding modes Pro option installed, the ROAD, RAIN and ECO riding modes are activated by default. The other riding modes can be selected in the riding modes preselection. A maximum of four riding modes can be preselected at any given time.

For each of these riding modes, there is a matching setting for the ABS, DTC and MSR systems and for the engine characteristic.

## 172 ENGINEERING DETAILS

—with Dynamic ESA<sup>OE</sup>

The adjustment of the Dynamic ESA also depends on the riding mode selected.

DTC can be switched off in each riding mode. The explanations below always refer to the dynamic safety systems that are switched on.

### Throttle response

- In ECO riding mode: Very restrained
- In RAIN riding mode: Restrained
- In ROAD riding mode: Direct
- In DYNAMIC and DYNAMIC PRO riding modes: Dynamic
- In DYNAMIC PRO riding mode, throttle response can be set up differently using the configuration (► 82).

### ABS

#### Adjustment

- In ROAD and DYNAMIC riding modes, the ABS setting corresponds to the selected riding mode.
- In ECO and RAIN riding modes, the ABS setting corresponds to the ROAD riding mode.
- In DYNAMIC PRO riding mode, the ABS setting

corresponds to the DYNAMIC riding mode.

- In DYNAMIC PRO riding mode, ABS can be set up differently using the configuration (► 85).

### Tuning setup

- In ECO, RAIN, ROAD, DYNAMIC and DYNAMIC PRO riding modes, the ABS is set up for on-road riding.

### Rear-wheel lift-off detection

- In ECO, RAIN and ROAD riding modes, the rider has maximum assistance from rear-wheel lift-off detection.
- In DYNAMIC and DYNAMIC PRO riding modes, rear-wheel lift-off detection offers reduced assistance and allows slight lift-off of the rear wheel.

### ABS Pro

- In ECO, RAIN and ROAD riding modes, ABS Pro is fully available.
- In DYNAMIC and DYNAMIC PRO riding modes, ABS Pro assistance is reduced by comparison with ECO, RAIN and ROAD riding modes.

- In DYNAMIC PRO riding mode, ABS can be set up differently.
- In the ABS setting DYNAMIC PRO, ABS Pro is not available.

-with riding modes Pro<sup>OE</sup>

## **DTC**

### **Tyres**

- In the DTC settings RAIN, ROAD and DYNAMIC, DTC is set up for on-road riding with road tyres.

### **Riding stability**

- In the DTC setting RAIN, DTC intervenes early enough to achieve maximum riding stability.
- In the DTC settings of the ECO and ROAD riding modes, DTC intervenes later than in RAIN riding mode. This prevents the rear wheel from spinning whenever possible.
- In the DTC settings ECO, RAIN and ROAD, the front wheel is prevented from lifting off.
- In the DTC setting DYNAMIC, DTC intervenes later than in the DTC setting ROAD, so slight drift can be induced when exiting corners and

brief wheelies are also possible.

In ECO, RAIN, ROAD and DYNAMIC riding modes, the DTC setting corresponds to the riding mode.

In DYNAMIC PRO riding mode, DTC can be set up differently (▣▣▣ 85).

### **Mode changes**

The riding mode can be changed while the vehicle is stationary with the ignition on. Under the following precondition, it is also possible to change modes while riding:

- No drive torque on the rear wheel.
- No brake pressure in the brake system.

The following steps must be taken to change the riding mode:

- Close the throttle twistgrip.
- Release the brake levers.
- Deactivate adaptive cruise control.

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state. The selection menu does not disappear from the display until

the mode change has taken place.

### **ECO mode**

ShiftCam technology is the bridge-builder between ultra-high dynamism and maximum efficiency. The full-load cams allow full valve lift for maximum combustion-chamber charge and high power, whereas the part-load cams considerably shorten the lift of the intake valves and open the valves to different extents. Charge-cycle losses are lessened by de-throttling, friction is reduced, the mixture is swirled more vigorously and combusted more effectively, fuel consumption goes down.

The ECO mode assists the rider with ECO indicator and engine characteristic (parametrisation of the electromotive throttle controller) to keep the engine in the operating range of the consumption-oriented part-load cam, so as to maximise the distance travelled with a given quantity of fuel.

The length of the green bar in the ECO indicator in the TFT display visualises whether the drive is operating in the consumption-optimised range of the part-load cam and the

margin from the switch-over threshold to full-load cam operation. The length of the bar represents the load reserve left before the switch-over point for full-load cam operation is reached. The colour changes to grey when load requirement increases and the engine switches to the full-load cam. The reading shown by the ECO indicator varies depending on the gear selected by the rider, the load requirement input via the throttle grip, and engine rpm. Even outside the operating range of the part-load cam, when the bar is grey, the ECO offers benefits for an economical style of riding by reducing maximum available torque and peak power.



Because of the reduced acceleration ability in ECO mode, changing to a different riding mode is recommended prior to critical overtaking manoeuvres with the motorcycle heavily loaded or when riding two-up.

Rider can further reduce consumption by riding with fuel economy in mind (180).

---

## DYNAMIC BRAKE CONTROL

### How Dynamic Brake Control works

 The Dynamic Brake Control function is active in all riding modes. It can be deactivated in the DYNAMIC PRO riding mode only, by custom parametrisation of the ABS.

The Dynamic Brake Control function assists the rider in emergency braking situations.

### Detection of emergency braking

—Sudden, sharp application of the front brake is interpreted as emergency braking.

### Behaviour in emergency braking

- If emergency braking occurs at a speed in excess of min 10 km/h, the ABS function is further assisted by Dynamic Brake Control.
- When partially integral braking at a high brake pressure gradient is initiated, Dynamic Brake Control increases the integral brake pressure at the rear wheel. The stopping distance shortens and controlled braking is possible.

### Behaviour during accidental actuation of the throttle grip

- If the throttle is accidentally opened (throttle grip position > 5 %) during emergency braking, Dynamic Brake Control ensures the desired braking effect by ignoring actuation of the throttle grip. The effectiveness of emergency braking is ensured.
- If the throttle is closed (throttle grip position < 5 %) while Dynamic Brake Control is in action, the engine torque requested by the ABS brake system is restored.
- If emergency braking ceases and the rider still has not changed the position of the throttle grip, Dynamic Brake Control steadily ramps engine torque back to the rider's requested level.

---

## TYRE PRESSURE CONTROL (RDC)

—with tyre pressure control (RDC)<sup>OE</sup>

### Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit.

Each sensor has a centrifugal-force tripswitch that does not enable transmission of the measured values until the motorcycle has exceeded a defined minimum speed for the first time.

|                                                                                  |                                                            |
|----------------------------------------------------------------------------------|------------------------------------------------------------|
|  | Minimum speed for transmission of the RDC measured values: |
| min 30 km/h                                                                      |                                                            |

The display shows "--" for each tyre until the tyre-pressure signal is received for the first time. The sensors continue to transmit the measured-value signals for some time after the vehicle comes to a stop.

|                                                                                  |                                                                         |
|----------------------------------------------------------------------------------|-------------------------------------------------------------------------|
|  | Time for transmission of measured values after vehicle comes to a stop: |
| min 15 min                                                                       |                                                                         |

An error message is issued if wheels without sensors are fitted to a vehicle equipped with an RDC control unit.

## Tyre pressure ranges

The RDC control unit differentiates between three tyre-pressure ranges, all of which are parameterised for the motorcycle:

- Tyre pressure within permitted tolerance.
- Tyre pressure close to limit of permitted tolerance.
- Tyre pressure outside permitted tolerance.

## Temperature compensation

Tyre pressure is a temperature-sensitive variable: pressure increases as tyre-air temperature rises and decreases as tyre-air temperature drops. Tyre-air temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.

|                                                                                   |                                                                                                                                    |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
|  | The tyre pressures are shown in the TFT display as temperature compensated and always refer to the following tyre air temperature: |
| 20 °C                                                                             |                                                                                                                                    |

The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre-air pressure. As a result, the values displayed there usually do not correspond to the values displayed in the TFT display.

## Pressure adaptation

Compare the RDC value on the TFT display with the value in the table on the back cover of the Rider's Manual. Then use the air-line gauge at a service station to compensate for the difference between the RDC reading and the value in the table.

|                                                                                                |
|------------------------------------------------------------------------------------------------|
|  Example      |
| According to the Rider's Manual, the tyre pressure should be the following value:              |
| 2.5 bar                                                                                        |
| The following display is shown in the TFT display:                                             |
| 2.3 bar                                                                                        |
| Missing:                                                                                       |
| 0.2 bar                                                                                        |
| The tester on the filling station shows:                                                       |
| 2.4 bar                                                                                        |
| The tyre pressure must be increased to the following value to reach the correct tyre pressure: |
| 2.6 bar                                                                                        |

## GEAR SHIFT ASSISTANT

—with shift assistant Pro<sup>OE</sup>

### Shift assistant Pro

Your vehicle is equipped with a Pro shift assistant, a system originally developed for racing and now adapted for touring. It permits upshifts and downshifts without declutching or closing the throttle in virtually all load and rpm ranges.

### Advantages

- 70-80 % of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.
- It is not necessary to close the throttle valve when shifting under acceleration.
- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

## 178 ENGINEERING DETAILS

In order for the system to identify a gearshift request, the rider has to move the gearshift lever from its idle position in the desired direction against the spring force through a certain "overtravel" at ordinary speed or rapidly and keep the gearshift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the shift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place. When shifting gears with the Pro shift assistant, the rider has to keep load state (throttle grip position) constant before and during the gearshift. A change in the position of the throttle grip during a gearshift can cause the function to abort and/or lead to a missed shift. The Pro shift assistant provides no assistance for the gearshift if the rider declutches.

### Downshifting

- Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents over-revving.



Maximum engine speed

max 9000 min<sup>-1</sup>

### Upshifting

- Upshifting is only possible when the current speed is higher than the respective release threshold of the next higher gear.
- This prevents the engine from dropping below idle speed.



Idle speed

1050 min<sup>-1</sup> (Engine at regular operating temperature)



Release thresholds

1st gear

min 1350 min<sup>-1</sup>

2nd gear

min 1400 min<sup>-1</sup>

3rd gear

min 1450 min<sup>-1</sup>

4th gear

min 1500 min<sup>-1</sup>

|                                                                                                      |
|------------------------------------------------------------------------------------------------------|
|  Release thresholds |
| 5th gear                                                                                             |
| min 1550 min <sup>-1</sup>                                                                           |
| 6th gear                                                                                             |
| min 1600 min <sup>-1</sup>                                                                           |

## HILL START CONTROL (HSC)

### Hill Start Control function

Hill Start Control assistant prevents the motorcycle from rolling backwards uncontrolled on gradients by intervening specifically with the ABS brake system without the driver having to constantly operate the brake lever. Pressure in the rear brake system is built up when Hill Start Control is activated in order to keep the motorcycle stationary on an incline.

The brake pressure in the brake system is dependent on the gradient.

### Effect of an incline on brake pressure and drive-off behaviour

–If the motorcycle is stopped on a gentle incline, only low brake pressure is built up. In this case, the brakes are quickly released when driving off. The motorcycle can be moved off more gently. It

is not necessary to turn the throttle grip again.

–If the motorcycle is stopped on a steep incline, high brake pressure is built up. In this case, the brakes take longer to release when driving off. More torque is required for driving off which also requires the rider to turn the throttle grip again.

### Behaviour when the motorcycle rolls or slips

–If the motorcycle rolls when Hill Start Control is activated, the brake pressure is increased.

–If the rear wheel slips, the brake is released again after approx. 1 m. This prevents, for example, slipping due to a blocked rear wheel.

### Releasing brake when stopping the engine or timeout

Hill Start Control is deactivated when the engine is stopped using the emergency-off switch, when the side stand is folded out or after timeout (10 minutes).

In addition to the indicator and warning lights, the rider should be made aware that Hill Start

## 180 ENGINEERING DETAILS

Control has been deactivated by the following behaviour:

### **Brake warning jolt**

- The brake is released briefly and reactivated immediately.
- This creates a jolt which the rider feels.
- The ABS brake system with partially integral function sets a speed of approx. 1-2 km/h.
- The rider must brake the motorcycle manually.
- After two minutes, or when the brake is actuated, Hill Start Control is completely deactivated.



The holding pressure is released immediately without a brake warning jolt as soon as the ignition is switched off.

---

### **SHIFTCAM**

#### **Functional principle of ShiftCam**

The vehicle features BMW ShiftCam technology for varying valve timing and valve lift on the intake side. The heart of this technology is a one-piece shifting intake camshaft that has two lobes for each valve: a partial-load cam and a full-load cam. The partial-load cam is fine-tuned

for consumption optimisation and engine smoothness. As well as adapting valve timing, the partial-load cam also reduces intake-valve lift. With the partial-load cams activated, moreover, the lobes for the cylinder's left and right intake valves produce staggered valve lift and offset angles of rotation. Consequently the two intake valves open at very slightly different times and the distance to which they open also differs. The advantage: The fuel/air mixture flowing into the combustion chamber is swirled more thoroughly and combusted effectively - so all in all the fuel is utilised more efficiently and engine operation is perceptibly smoother. The full-load cam is designed for optimised engine power and it maximises intake valve lift. The intake camshaft is shifted axially to vary valve timing and valve lift. The pins of an electromechanical actuator engage a shift gate on the intake camshaft. This permits load-dependent and speed-dependent actuation of the intake valves and, consequently, a no-compromises combination

of performance and low fuel consumption.

---

## **ADAPTIVE HEADLIGHT**

—with adaptive head light<sup>OE</sup>

### **Function**

In addition to the bulbs for low beam, high beam and, if applicable, daytime riding light or side light, the headlight has separate LED elements complete with their own reflectors. The LED elements are activated as a function of bank angle in addition to the low-beam headlight, enabling the headlight to illuminate the inside of the bend as the motorcycle banks for cornering. The adaptive cornering headlight is optimised for slight to moderate bank angles.

The adaptive cornering headlight is activated under the following conditions:

- Cornering at a slight to moderate bank angle.
- Speed is min 10 km/h.
- The low-beam headlight is switched on.

# MAINTENANCE

09

---

|                             |            |
|-----------------------------|------------|
| <b>GENERAL NOTES</b>        | <b>184</b> |
| <b>TOOLKIT</b>              | <b>185</b> |
| <b>FRONT-WHEEL STAND</b>    | <b>185</b> |
| <b>REAR-WHEEL STAND</b>     | <b>186</b> |
| <b>ENGINE OIL</b>           | <b>186</b> |
| <b>BRAKE SYSTEM</b>         | <b>188</b> |
| <b>CLUTCH</b>               | <b>193</b> |
| <b>COOLANT</b>              | <b>193</b> |
| <b>TYRES</b>                | <b>194</b> |
| <b>WHEEL RIMS</b>           | <b>195</b> |
| <b>WHEELS</b>               | <b>196</b> |
| <b>SILENCER</b>             | <b>203</b> |
| <b>AIR FILTER</b>           | <b>206</b> |
| <b>LIGHTING</b>             | <b>208</b> |
| <b>JUMP-STARTING</b>        | <b>208</b> |
| <b>BATTERY</b>              | <b>210</b> |
| <b>FUSES</b>                | <b>214</b> |
| <b>DIAGNOSTIC CONNECTOR</b> | <b>216</b> |

---

## GENERAL NOTES

The Maintenance chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad retailer.

### Microencapsulated screws

The microencapsulation is a chemical thread-locker. An adhesive compound creates a secure connection between bolt and nut or between screw and component. Consequently, microencapsulated screws are for once-only use and are not intended for re-installation after being slackened.

Regardless of whether the procedure involves removal or installation, the threaded bore always has to be cleaned. After removal of the screw, clean the

internal thread to remove all traces of thread-locking compound. Always use new microencapsulated screws when re-assembling. Consequently, prior to disassembly make sure that you have suitable tools for cleaning the threads and a new replacement for each screw to be removed. If the job is not done correctly there is no guarantee that the screw will remain secure, which means that you would be putting yourself at risk!

### Non-reusable cable ties

Non-reusable cable ties are used at some points to secure cables and lines. To prevent damage to cables and lines when these items are being removed, it is essential to use a suitable tool, for example diagonal cutting pliers, for their removal.

Cables and lines detached beforehand by the removal of non-reusable cable ties have to be re-secured with new non-reusable cable ties.

Use cable-tie clippers to clip off the excess length of the cable ties.

## TOOLKIT



- 1** Screwdriver handle
  - Use with screwdriver insert
  - Topping up the engine oil. (► 187)
- 2** Open-ended spanner  
Width across flats 8/10 mm
  - Removing battery (► 212).
- 3** Open-ended spanner  
Width across flats 14 mm
  - Adjust the mirror arm. (► 130)
- 4** Reversible screwdriver blade  
Phillips PH1 and Torx T25
  - Remove the battery cover. (► 212)
- 5** Torx wrench, T40

## FRONT-WHEEL STAND

### Install the front-wheel stand



#### ATTENTION

**Use of the BMW Motorrad front-wheel stand without accompanying use of centre stand or auxiliary stand**

Risk of damage to parts if vehicle topples

- Place the motorcycle on its centre stand or another auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.

- Make sure the motorcycle is standing firmly.
- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand. (► 186)



- See the instructions issued with the front-wheel stand for the details of the correct procedure for installation.
- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

### REAR-WHEEL STAND

#### Install the rear-wheel stand



- The description of how to fit the rear-wheel stand correctly will be found in the instructions for the stand.
- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

### ENGINE OIL

#### Checking engine oil level

- Make sure the ground is level and firm and hold the motorcycle upright.  
—with centre stand<sup>OE</sup>
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁




#### ATTENTION

**Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)**

Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature.
- Allow the engine to idle until the fan cuts in.
- Switch off the engine when it is at operating temperature.
- Wait five minutes for the oil to drain into the oil pan.

 As a contribution to reducing environmental impact, BMW Motorrad recommends checking the engine oil on occasion after a trip of at least min 50 km.

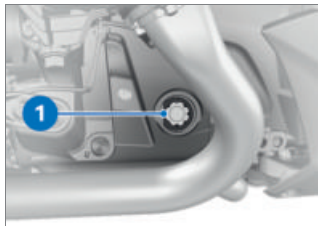


### ATTENTION

#### Vehicle toppling sideways

Risk of damage to parts if vehicle topples

- Secure the vehicle, preferably with the assistance of a second person, so that it cannot topple sideways.

- Check the oil level in the display **1**.

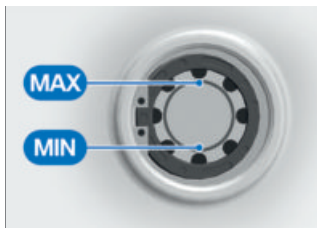

Engine oil, specified level

Between **MIN** and **MAX** marks

If the oil level is below the **MIN** mark:


- Topping up the engine oil. (→ 187)

If the oil level is above the **MAX** mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad retailer.

#### Topping up engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Check the engine oil level. (→ 186)

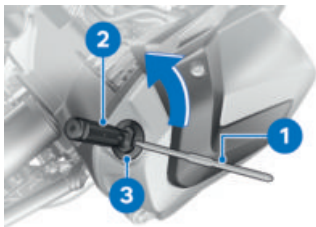

- Wipe the area around the oil filler opening clean.
- Insert Torx end of reversible screwdriver insert **1** into screwdriver handle **2** (toolkit) for additional leverage.
- Engage this tool in cap **3** of the oil filler opening and turn anti-clockwise to remove.



## ATTENTION

### Use of insufficient engine oil or too much engine oil

Engine damage

- Always make sure that the oil level is correct.

- Top up the engine oil to the specified level.



Engine oil, quantity for topping up

max 0.8 l (Difference between **MIN** and **MAX**)

- Check the engine oil level. (186)

- Install cap **3** of the oil filler opening.

## BRAKE SYSTEM

### Check operation of the brakes

- Pull the handbrake lever.
  - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
  - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:



## ATTENTION

### Work on brake system not in compliance with correct procedure


Risk to operational reliability of the brake system

- Have all work on the brake system undertaken by trained and qualified specialists.


- Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### Checking brake pad thickness, front brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.

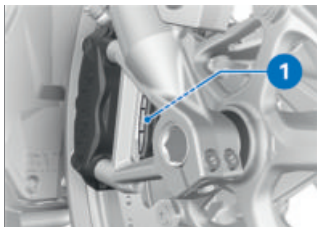

- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: Between wheel and front suspension toward brake pads **1**.

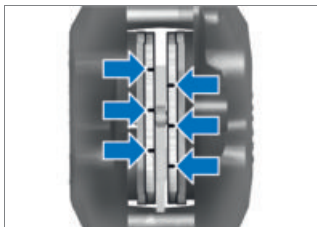

Brake-pad wear limit,  
front

1.0 mm (Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.)

If the wear indicating marks are no longer clearly visible:



## WARNING

### Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes


- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.


### Checking brake pad thickness, rear brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.

## 190 MAINTENANCE

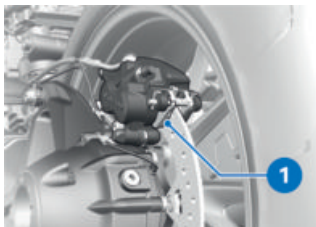

- Visually inspect the brake pads to ascertain their thickness. Viewing direction: From the rear toward brake pads **1**.

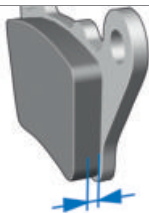

Brake-pad wear limit,  
rear

1.0 mm (Friction pad only,  
without backing plate)

If the wear limit has been  
reached:



### WARNING

#### **Brake-pad thickness less than permissible minimum**

Diminished braking effect,  
damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## Checking brake-fluid level, front brakes



### WARNING

#### Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.


—with centre stand<sup>OE</sup>

- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁

—without centre stand<sup>OE</sup>

- Make sure the ground is level and firm and hold the motorcycle upright.◁

- Turn the handlebars to a position in which the brake fluid reservoir is horizontal.

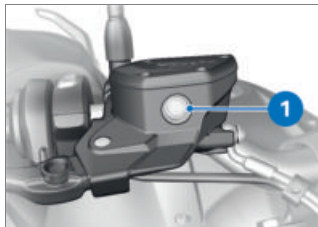

- Check the brake fluid level in brake fluid reservoir for front wheel brake **1**.



Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, front

Brake fluid, DOT4

The brake fluid level may not drop below the **MIN** mark.  
(Brake-fluid reservoir horizontal, motorcycle upright)

## 192 MAINTENANCE

If the brake fluid level drops below the permitted level:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

### Checking brake-fluid level, rear brakes



#### WARNING

#### Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system


- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.

—with centre stand<sup>OE</sup>

- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀

—without centre stand<sup>OE</sup>

- Make sure the ground is level and firm and hold the motorcycle upright.◀

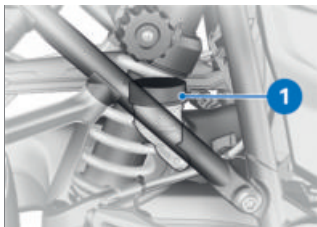

- Check the brake fluid level in brake fluid reservoir for rear wheel brake **1**.



- Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, rear

Brake fluid, DOT4

The brake fluid level may not drop below the **MIN** mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## CLUTCH

### Checking operation of the clutch

- Pull the clutch lever.
- » The pressure point must be clearly perceptible.


If the pressure point is not clearly perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## COOLANT

### Check the coolant level

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Allow the engine to cool down.

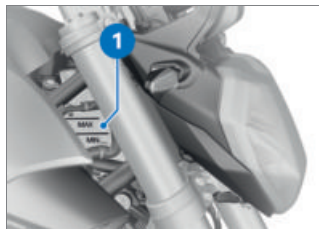

- Check the coolant level in expansion tank **1**.



- Read the coolant level.

## 194 MAINTENANCE

» The coolant level must be between the **MIN** and **MAX** marks.

If the coolant level drops below the **MIN** mark:

- Top up the coolant.

### Top up coolant




#### WARNING

#### Opening radiator cap

Risk of burning

- Do not open the radiator cap when the system is hot.
- Check and, if necessary, top up the coolant in the expansion tank only.

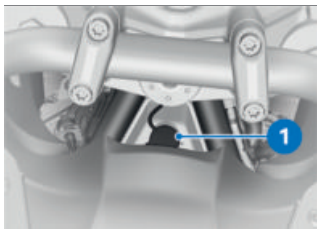

- Open cap **1** of the coolant expansion tank and top up the coolant to the specified level.
- Check the coolant level.  
( 193)
- Close cap **1** of the coolant expansion tank.

## TYRES

### Checking tyre pressures



#### WARNING

#### Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct.



#### WARNING

#### Tendency of valve inserts installed vertically to open by themselves at high riding speeds

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Check tyre pressures against the data below.



Tyre pressure, front

2.5 bar (with cold tyre; one-up and two-up riding)



Tyre pressure, rear

2.9 bar (with cold tyre; one-up and two-up riding)

If tyre pressure is too low:

- Correct tyre pressure.



Tyre pressures can be determined with tyre pressure control (RDC). The tyre-pressure readings shown in the instrument cluster are temperature-compensated and are always referenced to a tyre air temperature of 20 °C. The gauges on forecourt air lines do not compensate for temperature. Consequently, the values they show do not usually tally with the pressure readings shown by the TFT display.

### Check the tyre tread depth



#### WARNING

#### Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Measure the tyre tread depth in the main tread grooves with wear marks.



Each tyre has wear indicators integrated into the main tread grooves. The tyre has reached its wear limit when the tread has worn down to the level of the wear indicators. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow.

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

### WHEEL RIMS

#### Checking rims

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Visually inspect the rims for defects.
- Have damaged rims checked and, if necessary, replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## Check the spokes

-with Option 719 wheel Classic<sup>OE</sup>

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Draw the handle of a screwdriver or a similar instrument across the spokes and listen to the sequence of sounds made by the individual spokes.

If there is a variation in the sequence of sounds:

- Have the spokes checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## WHEELS

## Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the ABS suspension control system. In particular, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have seri-

ous effects on the performance of the control systems.

The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad retailer. In some cases, the data programmed into the control units can be changed to suit the new wheel sizes.


## Removing front wheel

- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.

- Install the rear-wheel stand.  
( 186)

–with centre stand<sup>OE</sup>

- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁

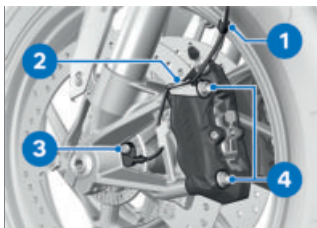

- Disengage the cable for the wheel speed sensor from holding clips **1** and **2**.
- Remove screw **3** and remove the wheel speed sensor from its bore.
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.




### ATTENTION


#### Unwanted inward movement of the brake pads

Component damage on attempt to install the brake caliper or because brake pads have to be forced apart


- Do not operate the brakes with a brake caliper not correctly secured.
- Remove mounting bolts **4** of the left and right brake calipers.

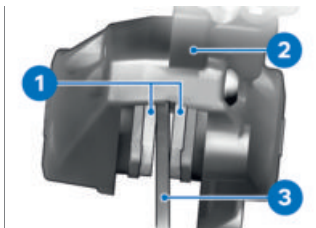


- Force brake pads **1** slightly apart by rocking brake caliper **2** back and forth against brake disc **3**.
- Carefully pull the brake calipers back and out until clear of the brake discs.
- Lift the front of the motor-cycle until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Install the front-wheel stand. (→ 185)

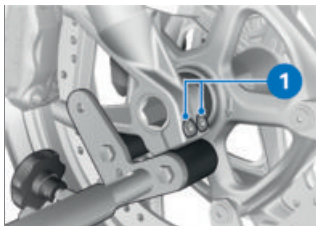

- Slacken axle clamping screws **1**.

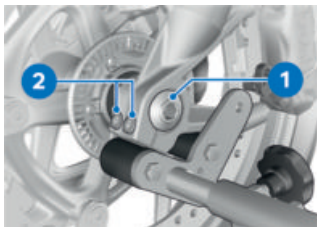

- Remove screw **1**.
- Slacken axle clamping screws **2**.
- Press quick-release axle slightly toward the inside, so as to be better able to grip it on the right-hand side.

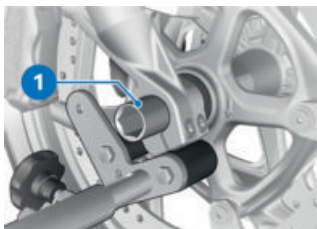

- Withdraw quick-release axle **1**, support the front wheel when doing this.
- Set down front wheel and roll forwards out of the front suspension.



- Remove spacer bushing **1** from the wheel hub.

## Installing front wheel



### WARNING

#### Use of a non-standard wheel

Malfunctions in operation of ABS and DTC

- See the information on the effect of wheel size on the ABS and DTC systems at the start of this chapter.



### ATTENTION

#### Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.



- Lubricate the friction face of spacer bushing **1**.



Lubricant

Optimoly TA

- Insert spacer bushing **1** into the wheel hub on the left-hand side.




### ATTENTION

#### Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim.

- Roll the front wheel into position between the forks of the front suspension.

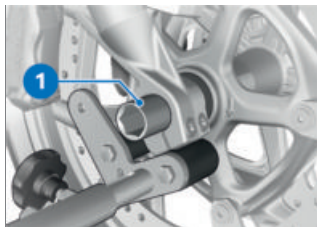


- Lubricate quick-release axle **1**.



Lubricant

Optimoly TA

- Lift the front wheel slightly and install quick-release axle **1**.
- Remove front-wheel stand and firmly compress front forks several times. Do not operate the handbrake lever in this process.
- Install the front-wheel stand. (185)

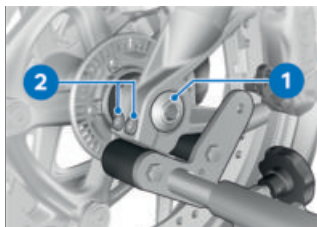

- Install screw **1** and tighten to specified torque. In this pro-

## 200 MAINTENANCE

cess, counter-hold the quick-release axle on the right side.




Quick-release axle in the telescopic forks

M20 x 1.5

50 Nm

- Tighten axle clamping screws **2** to the specified torque.

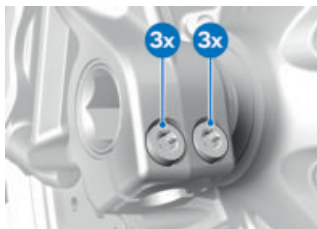


Clamping screws in axle holder


Tightening sequence: Tighten screws six times in alternate sequence

M8 x 35

19 Nm

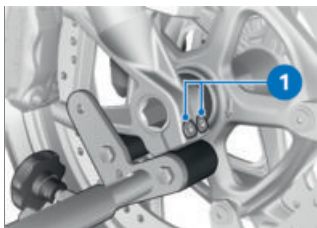

- Tighten axle clamping screws **1** to the specified torque.

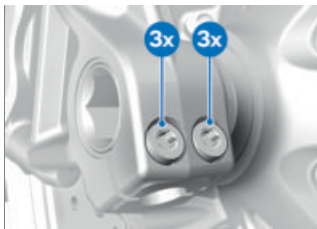

Clamping screws in axle holder


Tightening sequence: Tighten screws six times in alternate sequence

M8 x 35

19 Nm

- Remove the front-wheel stand.

- Position left and right brake calipers on the brake discs.

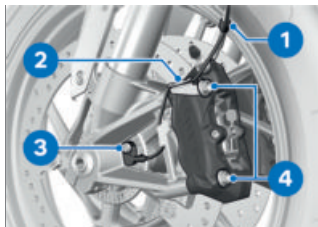

- Install securing screws **4** on left and right and tighten to specified tightening torque.



Brake caliper on the telescopic forks

M10 x 65

38 Nm

- Remove the adhesive tape from the wheel rim



## WARNING

### Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.

- Operate the brake several times until the brake pads are bedded.

- Insert the cable for the wheel speed sensor into holding clips **1** and **2**.
- Insert the wheel speed sensor into the bore hole and install a new screw **3**.



Wheel-speed sensor to fork leg

M6 x 16

Joining compound: Micro-encapsulated or medium-strength thread-locking compound

8 Nm

## Removing rear wheel



## CAUTION

### Hot exhaust system

Risk of burn injury

- Do not touch a hot exhaust system.

- Remove the silencer. (➡ 203)



- Engage first gear.

## 202 MAINTENANCE

- Remove bolts **1** from the rear wheel, while supporting the wheel.
- Roll the rear wheel out toward the rear.

### Installing rear wheel



#### WARNING

#### Use of a non-standard wheel

Malfunctions in operation of ABS and DTC

- See the information on the effect of wheel size on the ABS and DTC systems at the start of this chapter.




#### ATTENTION


#### Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

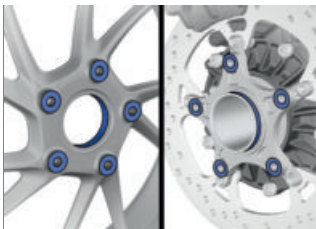

- Clean the wheel centring spigot and the contact surfaces of the wheel hub.
- Seat the rear wheel on the rear-wheel adapter.

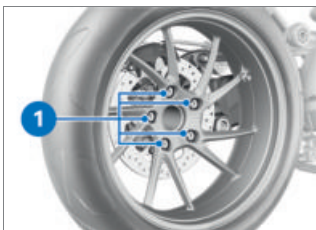

- Install wheel bolts **1** and tighten to specified torque.



Rear wheel to wheel flange

Tightening sequence: tighten in diagonally opposite sequence

M10 x 1.25 x 40

60 Nm

- Install the silencer. (204)

## SILENCER

### Removing silencer



#### CAUTION

#### Hot exhaust system


Risk of burn injury

- Do not touch a hot exhaust system.

- Allow rear silencer to cool down.
- Make sure the ground is level and firm and place the motorcycle on a suitable auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand.  
( 186)


—with centre stand<sup>OE</sup>

- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁

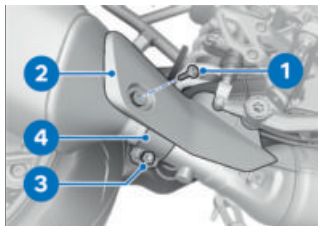

- Remove screw **1** from cover **2**.

- Loosen nut **3** in clamp **4**.

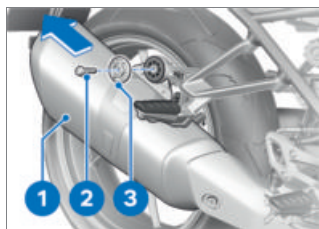

- Remove screw **2** and washer **3**.
- Remove silencer **1**.

—with Sports silencer<sup>OE</sup>




#### CAUTION

#### Hot exhaust system


Risk of burn injury

- Do not touch a hot exhaust system.

- Allow rear silencer to cool down.
  - Make sure the ground is level and firm and place the motorcycle on a suitable auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
  - Install the rear-wheel stand.  
( 186)
- with centre stand<sup>OE</sup>
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁

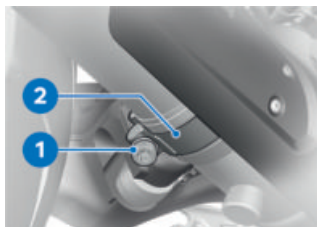

- Loosen nut **1** to slide clamp **2** back.

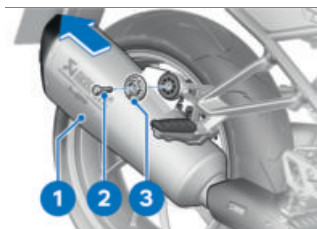

- Remove screw **2** and washer **3**.
- Remove silencer **1**.◀

## Installing silencer




### ATTENTION

#### Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

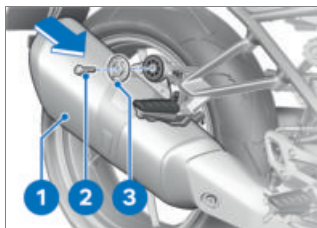

- Lightly lubricate the **inner face** of the clamp.



Lubricant


Optimoly TA

- Slip the clamp on to the silencer.
- Push silencer **1** to the limit position.
- Install screw **2** and washer **3**.

 Silencer to rear frame

M8 x 35

19 Nm

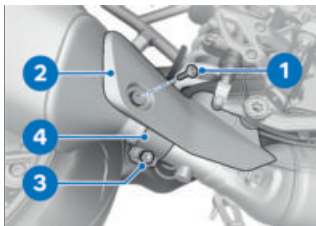

- Tighten nut **3** of clamp **4**.

 Clamp to silencer and exhaust manifold

24 Nm

- Install screw **2** of cover **1**.


–with Sports silencer<sup>OE</sup>

### **ATTENTION**

#### **Tightening threaded fasteners to incorrect tightening torque**

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

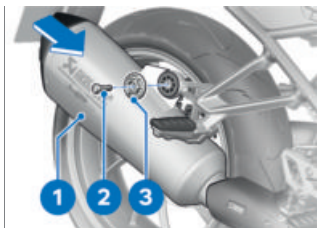

- Lightly lubricate the **inner face** of the clamp.

 Lubricant


Optimoly TA

- Slip the clamp on to the silencer.
- Push silencer **1** to the limit position.
- Install screw **2** and washer **3**.

 Silencer to rear frame

M8 x 35

19 Nm

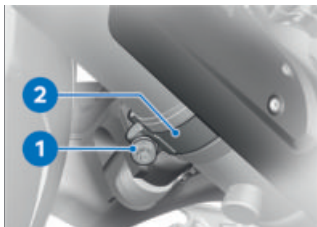

- Tighten nut **1** of clamp **2**.

## 206 MAINTENANCE




Clamp to silencer and  
exhaust manifold

24 Nm


### AIR FILTER

#### Replace air filter insert

- Remove the front seat.  
( 98)

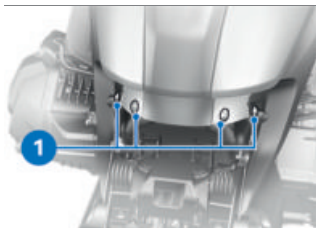

- Remove screws **1**.

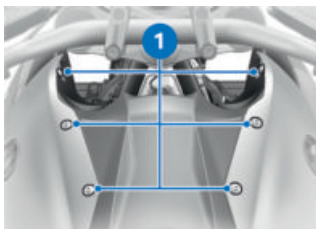


- Remove screws **1** and ease the two side trim panels slightly apart.




- Remove screws **1**.
- Remove the centre trim panel.



- Remove screws **1**.
- Remove the air filter cover.

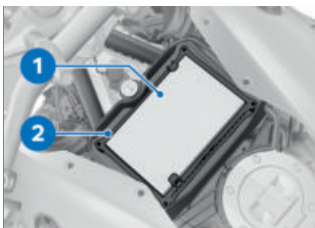

- Remove frame **2**.
- Remove air filter insert **1**.

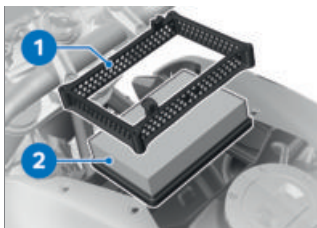

- Clean air filter insert **2** or replace if necessary.
- Insert air filter element **2** and frame **1**.



- Install the air filter cover.
- Install screws **1**.



Air filter cover to intake air silencer

Tightening sequence: in diagonally opposite sequence


M5 x 50

3 Nm


- Place centre trim panel in position, paying attention to the connections to the side panels.



- Install screws **1**.

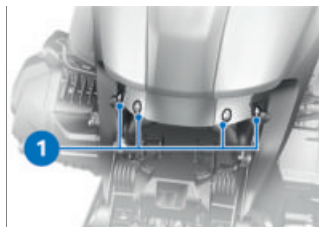

- Install screws **1**.

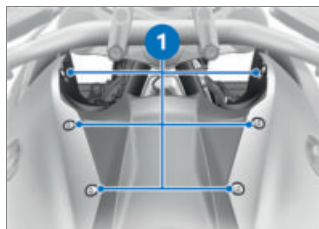

- Install screws **1**.
- Install the rider's seat. (→ 99)

### LIGHTING

#### Replacing LED light sources



#### WARNING

**Vehicle overlooked in traffic due to failure of the lights on the vehicle**

Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

All light sources of the vehicle are LED light sources. The service life of the LED light sources is longer than the presumed vehicle service life. If an LED light source is faulty contact a specialist workshop, preferably an authorised BMW Motorrad retailer.

### JUMP-STARTING



#### CAUTION

**Touching live parts of the ignition system when the engine is running**

Electric shock

- Do not touch parts of the ignition system when the engine is running.



#### ATTENTION

**Excessive current flowing when the motorcycle is jump-started**

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the engine by connecting leads to the on-board socket.

**ATTENTION**
**Contact between crocodile clips of jump leads and vehicle**


Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.

**ATTENTION**
**Jump-starting with a voltage greater than 12 V**

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V.
  - Make sure the ground is level and firm and place the motorcycle on its stand.
  - Remove the battery cover. (→ 212)
  - When jump-starting the engine, do not disconnect the battery from the on-board electrical system.
- Remove protective cap **1**.
  - Use the red jump lead to connect remote positive terminal **2** of the discharged battery to the positive terminal of the donor battery.
  - Connect one end of the black jump lead to the negative terminal of the donor battery, then connect the other end to negative terminal **3** of the discharged battery.
  - Run the engine of the donor vehicle during jump-starting.
  - Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.
  - Allow both engines to idle for a few minutes before disconnecting the jump leads.
  - Disconnect the jump lead from the negative termin-

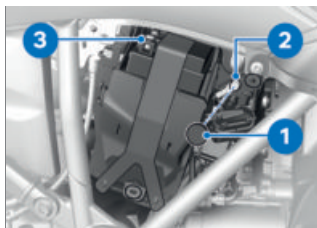

## 210 MAINTENANCE

als first, then disconnect the second lead from the positive terminals.

 Do not use proprietary start-assist sprays or other products to start the engine.

- Install the protective cap.
- Install the battery cover.  
( 214)

### BATTERY

#### Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.
- Do not turn the battery upside down.



#### ATTENTION

##### **On-board electronics (e.g. clock) draining connected battery**

Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.



BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. More information is available on request from your authorised BMW Motorrad retailer.

## Charging battery when connected



### ATTENTION

#### Charging the battery that is connected to the vehicle via the battery terminals

Damage to the on-board electronics

- Disconnect the battery at the battery terminals before charging.



### ATTENTION

#### Recharging a fully discharged battery via the power socket or extra socket

Damage to the vehicle electronics

- If a battery has discharged to the extent that it is completely flat (battery voltage less than 12 V, indicator lights and multifunction display remain off when the ignition is switched on) always charge the **disconnected** battery with the charger connected directly to the battery terminals.



### ATTENTION

#### Unsuitable chargers connected to a socket

Damage to charger and vehicle electronics

- Use suitable BMW chargers. The suitable charger is available from your authorised BMW Motorrad dealer.

- With the battery connected to the vehicle's on-board electrical system, charge via the power socket.



The motorcycle's on-board electronics know when the battery is fully charged. The on-board socket is switched off when this happens.

- Comply with the operating instructions of the charger.



If you are unable to charge the battery through the on-board socket, you may be using a charger that is not compatible with your motorcycle's electronics. In this case, directly charge the battery at the terminals of the battery that has been disconnected from the vehicle.


## 212 MAINTENANCE

### Charging battery when disconnected

- Remove the battery. (➡ 212)
- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.

 The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.

### Removing battery

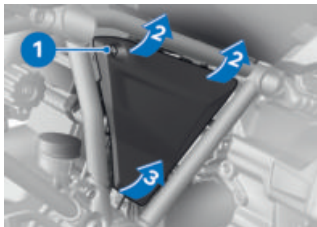


- Switch off the ignition.
- Remove screw **1**.
- Pull the battery cover slightly forward at the top at positions **2**.

- In order not to damage the battery cover or the mounting, work the battery cover up at position **3** to remove.

—with anti-theft alarm (DWA)<sup>OE</sup>

- If applicable, switch off the anti-theft alarm.◁

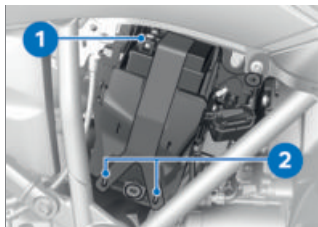

- Disconnect battery earth lead **1** and disengage rubber strap **2**.
- Wrap the end of negative battery cable **1** with insulating tape.



- Pull retaining panel in position **1** outwards and remove in an upward direction.

- Slightly lift the battery and ease it clear of the holder until the battery positive terminal is accessible.



- Disconnect battery negative lead **1** and remove the battery.

### Installing battery

 If the 12 V battery is not correctly installed or if the polarity of the terminals is reversed (e.g. in an attempt to jump-start the vehicle), this can cause the fuse for the alternator regulator to blow.



- Secure positive battery cable **1**.




Wiring harness to battery


M6 x 13.5

5 Nm

- Push battery into the mounting.

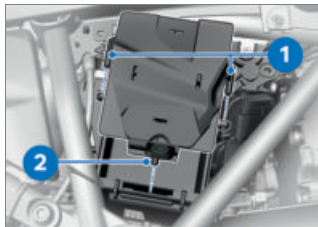

- First insert retaining plate into the mountings **1** and then push under the battery in position **2**.

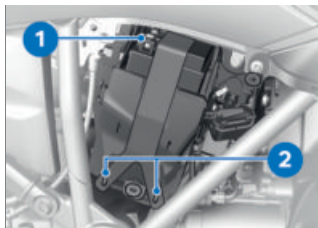

- Remove the insulating tape from negative battery cable **1**.
- Secure negative battery cable **1**.

## 214 MAINTENANCE




Wiring harness to battery


M6 x 13.5

5 Nm

- Secure the battery with rubber strap **2**.

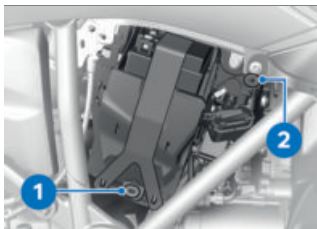


- Place battery cover into the mounting **1** and press into the mounting **2**.

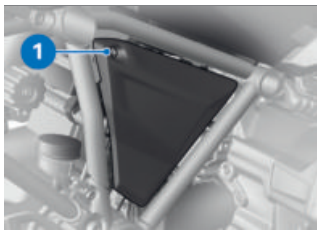

- Install screw **1**.
- Set the clock. (►► 113)
- Set the date. (►► 113)

### FUSES

#### Replacing fuses

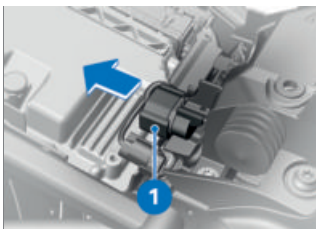

- Switch off the ignition.
- Remove the front seat. (►► 98)
- Disconnect connector **1**.



#### ATTENTION

##### Jumping of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
- Always replace a defective fuse with a new fuse of the same amperage.

- Replace faulty fuse in accordance with the fuse allocation diagram.




If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

- Install plug **1**.

- Install the rider's seat. (🔧 99)

### Fuse assignment

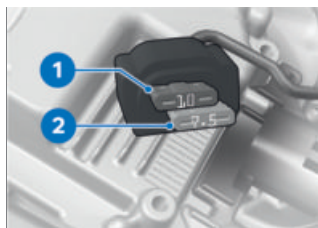

- 1** 10 A
  - Instrument cluster
  - Anti-theft alarm (DWA)
  - Ignition switch
  - Main relay
  - Diagnostic socket
- 2** 7.5 A
  - Multifunction switch, left
  - Tyre pressure control (RDC)
  - Angular rate sensor

### Fuse for the alternator regulator



- 1** 50 A
  - Alternator regulator

 Have the fuse replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

## DIAGNOSTIC CONNECTOR

### Disengaging diagnostic socket




#### CAUTION


#### Incorrect disconnection of the diagnostic socket for on-board diagnosis

Malfunctions of the vehicle

- Do not disconnect the diagnostic socket or allow it to be disconnected except in the course of a BMW Motorrad service by a specialist workshop or by other authorised persons.
  - Have the work carried out by appropriately trained personnel.
  - Comply with the stipulations of the vehicle manufacturer.
- Remove the battery cover.  
( 212)

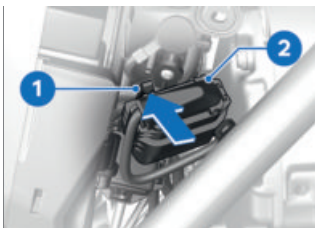


- Press hook **1** and pull diagnostic socket **2** up to remove.

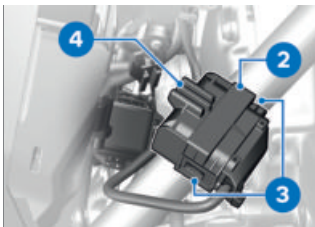


- Press locks **3** on both sides.
- Disengage diagnostic socket **2** from holder **4**.
- » The interface to the diagnosis and information system can be connected to the diagnostic connector **2**.

#### Securing diagnostic socket

- Disconnect the interface for the diagnosis and information system.

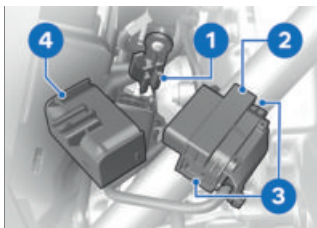

- Insert diagnostic socket **2** into holder **4**.
- » Locks **3** engage on both sides.
- Seat bracket **4** on mounting **1**.

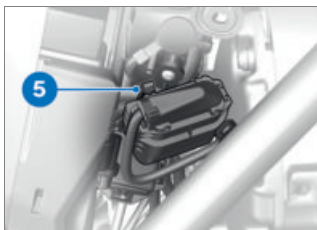

- Make sure that hook **5** engages.
  - Install the battery cover.
- ( 214)

# ACCESSORIES

10

---

|                            |            |
|----------------------------|------------|
| <b>GENERAL NOTES</b>       | <b>220</b> |
| <b>POWER SOCKETS</b>       | <b>220</b> |
| <b>USB CHARGING SOCKET</b> | <b>221</b> |
| <b>CASES</b>               | <b>222</b> |
| <b>TOPCASE</b>             | <b>224</b> |
| <b>NAVIGATION SYSTEM</b>   | <b>227</b> |

## GENERAL NOTES



### CAUTION

#### Use of other-make products

##### Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle.

BMW has conducted extensive testing of the parts and accessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts responsibility for the products. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

All modifications must be in compliance with legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country. Your authorised BMW Motorrad retailer can offer expert advice on the choice of genuine BMW parts, accessories and other products. To find out more about accessories go to: **[bmw-motorrad.com/equipment](http://bmw-motorrad.com/equipment)**.

## POWER SOCKETS

### Connection of electrical devices

- You can start using electrical devices connected to the motorcycle's sockets only when the ignition is switched on.

### Cable routing

- The cables from the power sockets to the auxiliary devices must be routed in such a way that they do not impede the rider.
- The cable routing should not restrict the steering angle or obstruct handling.

- The cables must not be trapped.

### **Automatic shutdown**

- The sockets will be automatically switched off during the start procedure.
- The power supply to the sockets is switched off 60 seconds after the ignition is switched off, in order to prevent overloading of the on-board electrics. Low-wattage electrical accessories might not be recognised by the vehicle's electronics. In such cases, power sockets are switched off very shortly after the ignition is turned off.
- If the battery charge state is too low to maintain the motorcycle's start capability, the power sockets are switched off.
- The power sockets are also switched off when the maximum load capability as stated in the technical data is exceeded.

---

### **USB CHARGING SOCKET**

Notes on use:

### **Charge current**

This is a 5 V USB charging interface that provides a maximum charge current of 2.4 A.

### **Automatic shutdown**

The USB charging sockets are shut down automatically under the following circumstances:

- If battery charge state is too low, to maintain the vehicle's start capability.
- If the maximum load capacity as stated in the technical data is exceeded.
- During the starting operation.

### **Connection of electrical devices**

You can start using electrical devices connected to the USB charging sockets only when the ignition is switched on. The power supply to the sockets is switched off no more than 60 seconds after the ignition is switched off, in order to prevent overloading of the on-board electrics.

While riding in the rain, you should disconnect the device from the interface in order to protect against damage.

To prevent dirtying, keep the protective cover closed when no device is connected.

## 222 ACCESSORIES

### Cable routing

Note the following with regard to the routing of cables from USB charging sockets to items of electronic equipment:

- Make sure that cables do not impede the rider.
- Make sure that cables do not restrict the steering angle or obstruct handling.
- Make sure that cables cannot be trapped.

### CASES

– with touring cases<sup>OA</sup>

#### Opening cases



- Turn key **1** counter-clockwise to the **OPEN** position.
- Pull grey release lever **2** **OPEN** up and at the same time open the case lid.

#### Closing cases



- Turn key **1** counter-clockwise to the **OPEN** position.
- Press catches **2** of the case lid into locks **3**. Check that nothing is trapped between the lid and the case.
- Pull grey release lever **4** **OPEN** up and at the same time close the case lid.
- » The lid engages with an audible click.
- Turn key **1** in the case lock to the position in which it is parallel with the direction of travel and remove the key.

## Removing cases



- Turn key **1** to the **RELEASE** position.




- Pull black release lever **1 RE-LEASE** up and at the same time pull the case out.
- Then lift the case out of the bottom mount.

## Installing cases



- Turn key **1** to the **RELEASE** position.

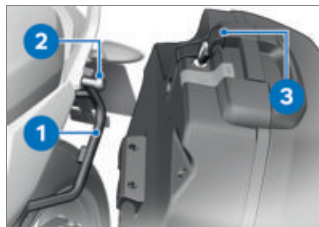

- Position the case in case carrier **1**, then pivot it until it is seated at mount **2**.
- Pull black release lever **3 RE-LEASE** up and at the same time push the case into top mount **2**.
- Push black release lever **3 RE-LEASE** down until it engages.
- Turn the key in the case lock to the position in which it is parallel with the direction of travel and remove the key.

## 224 ACCESSORIES


### Maximum payload and maximum speed

Note the maximum payload and the maximum permissible speed.

The values for the combination described here are as follows:

|                                                                                  |                                                                          |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------|
|  | Maximum permissible speed for riding with cases fitted to the motorcycle |
| max 180 km/h                                                                     |                                                                          |
|  | Payload per case                                                         |
| max 10 kg                                                                        |                                                                          |

### Secure attachment

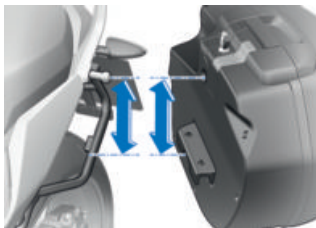

If a case wobbles or is difficult to install, it has to be adapted to the spacing between the top and bottom mounts.




### WARNING

**Case installation not in compliance with correct procedure.**

Impairment of road safety.

- Cases may not wobble and must be secured free from play. Re-adjust the retainer if play develops over the course of time.

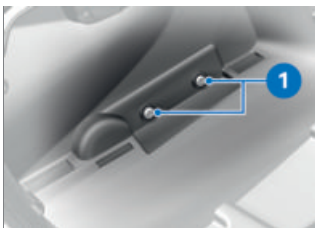

Screws **1** inside the case allow you to make this adjustment.

### TOPCASE

—with topcase<sup>OA</sup>

## Opening topcase



- Turn the key in the topcase lock to position **1**.



- Push lock barrel **1** forward.  
» Release lever **2** pops up.
- Pull the release lever all the way up.  
» Topcase lid can be opened.

## Closing topcase



- Pull release lever **1** all the way up.
- Close the lid of the topcase and hold it down. Check that nothing is trapped between the lid and the case.

 The topcase can also be closed when the lock is in the **LOCK** position. Make sure that the ignition key is not left inside the topcase.



- Push release lever **1** down until it engages.
- Turn the key in the topcase lock to the **LOCK** position and remove the key from the lock.

## 226 ACCESSORIES

### Removing topcase



- Turn the key in the topcase lock to position **1**.  
» The handle pops out.



- Pull carry handle **1** up as far as it will go.
- Lift the topcase at the rear and remove it from the luggage carrier.

### Installing topcase




#### WARNING

#### Topcase not properly secured

Driving safety is impaired


- The topcase must not wobble and must be secured free from play.
- Pull the carry handle up as far as it will go.

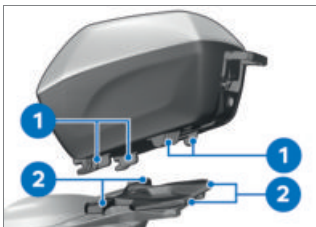

- Hook the topcase into position on the luggage carrier. Make sure that hooks **1** are securely seated in corresponding keepers **2**.



- Push carry handle **1** down until it engages.

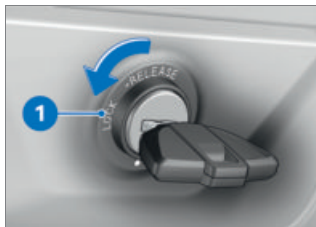

- Turn the key in the topcase lock to position **1** and remove the key from the lock.

### Maximum payload and maximum speed

Note the maximum payload and the maximum permissible speed.

The values for the combination described here are as follows:



Maximum speed for riding with a loaded topcase

max 180 km/h



Payload of topcase

max 5 kg

## NAVIGATION SYSTEM

### Securing navigation system

- with preparation for navigation system<sup>OE</sup>
- with navigation system<sup>OA</sup>



Navigation preparation is suitable from BMW Motorrad Navigator IV.



The latching system of the Mount Cradle is not designed to protect against theft.

Always remove the navigation system and stow it away safely as soon as you finish your ride.



- Turn ignition key **1** counter-clockwise.
- Pull the lock retainer **2** to the left.
- Press the lock **3** in.

## 228 ACCESSORIES

- » The Mount Cradle is unlocked and cover **4** can be pivoted forward and removed.



- Insert navigation system **1** at bottom and pivot it toward the rear.

- » The navigation system engages with an audible click.

- Push the lock retainer **2** all the way to the **right**.

- » Lock **3** is locked.

- Turn ignition key **4** clockwise.

- » The navigation system is secured and the ignition key can be removed.

### Removing navigation system and installing cover

—with preparation for navigation system<sup>OE</sup>

—with navigation system<sup>OA</sup>



### ATTENTION

#### Dust and dirt on the Mount Cradle contacts

Damaged contacts

- Always reinstall the cover as soon as you finish your ride.



- Turn ignition key **1** anti-clockwise.

- Pull the lock retainer **2** all the way to the **left**.

- » Lock **3** is unlocked.

- Push lock **3** all the way to the **left**.

- » Navigation system **4** is unlocked.

- Tilt navigation system **4** and work it down to remove.



- Insert cover **1** in the lower section and swing to the top with a rotational movement.
- » The cover engages with an audible click.
- Push lock retainer **2** to the **right**.
- Turn ignition key **3** clockwise.
- » The cover **1** is secured.

### Operating navigation system


- with preparation for navigation system<sup>OE</sup>
- with navigation system<sup>OA</sup>

 The description below is based on the BMW Motorrad Navigator V and the BMW Motorrad Navigator VI. The BMW Motorrad Navigator IV does not support all the options described here.

 Only the latest version of the BMW Motorrad communication system is supported. A software update of the BMW Motorrad communication system may be neces-

sary. If this is the case, consult your authorised BMW Motorrad dealer.

If the BMW Motorrad Navigator is installed and the operating focus is switched to the Navigator ( 109), some of its functions can be operated without the rider removing a hand from the handlebars.

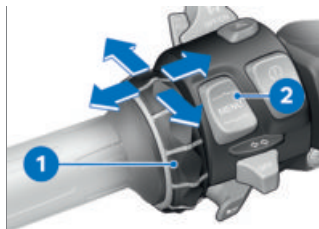

The navigation system is operated using Multi-Controller **1** and MENU rocker button **2**.

### Turning Multi-Controller 1 up and down

On the Compass and Media-player pages: Increase or reduce volume of a Bluetooth-connected BMW Motorrad communication system. In BMW special menu: Select menu items.

## 230 ACCESSORIES

### Short-tilting Multi-Controller 1 to the left and right

Switch between the main pages of the Navigator:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My Motorcycle page

### Long-tilting Multi-Controller 1 to the left and right

Activate certain functions on the Navigator display. An arrow to the right or to the left above the corresponding button area on the display indicates a function that can be activated in this way.



Long-push to the right to activate this function.



Long-push to the left to activate this function.

### Pressing bottom section of MENU rocker button 2

Switch operating focus to Pure Ride view.

In detail, the following functions can be controlled:

### Map view

- Turn up: Zoom in.
- Turn down: Zoom out.

### Compass page

- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

### BMW special menu

- Speak: Repeat most recent navigation announcement.
- Waypoint: Save current location as a favourite.
- Home: Starts navigation to home address (greyed if no home address has been defined).
- Mute: Switch automatic navigation announcements off or on (off: a crossed-out lips symbol appears in the top line of the display). "Speak" will still activate navigation announcements. All other acoustic outputs remain switched on.
- Switch off display: Switch off the display.
- Dial home number: Dials the home phone number saved in the Navigator (not shown unless a communication system and a phone are connected).

- Diversion: Activates the diversion function (not shown unless a route is active).
- Skip: Skips the next waypoint (not shown unless the route has waypoints).

### My Motorcycle

- Turn: Changes the number of data shown.
- Touch a data field on the display to open the menu for selecting data.
- The values available for selection depend on the optional extras installed on the vehicle.

### Mediaplayer

- Long-push to the left: Play preceding track.
- Long-push to the right: Play next track.
- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

 The Mediaplayer function is only available when a Bluetooth device complying with the A2DP standard is used, for example a BMW Motorrad communication system.

### Warnings and status messages

- with navigation system<sup>OA</sup>



Warning and status messages from the motorcycle are indicated by a symbol **1** appearing at the top left in the map view.

 If a BMW Motorrad communication system is connected, warnings are accompanied by an acoustic signal.

If there are two or more active warnings the number appears below the warning triangle. Touching the warning triangle when more than one warning is active opens a list of all the warnings.

Additional information appears as soon as a message is selected.

 Detailed information cannot be displayed for all warnings.

## 232 ACCESSORIES

### Special functions

—with preparation for navigation system<sup>OE</sup>

Integration of the BMW Motorrad Navigator has produced a number of deviations from the descriptions in the operating instructions for the Navigator.

### Reserve fuel level warning

The settings for the fuel gauge are not available, because the reserve warning is transmitted from the vehicle to the Navigator. Touch the message when it is active to view the locations of the nearest filling stations.

### Security settings

The BMW Motorrad Navigator V and the BMW Motorrad Navigator VI can be secured against unauthorised use with a four-digit PIN (Garmin Lock). If this function is activated, while the Navigator is cradled on the vehicle and the ignition is switched on you are prompted to add the vehicle to the list of secured vehicles. If you answer "Yes" at this prompt, the Navigator saves the VIN of this vehicle in its internal memory. A maximum of five VINs can be saved in this way.

It is then no longer necessary to enter the PIN when the Navigator is switched on by ignition ON on any of these vehicles.

If the Navigator is removed from the vehicle while switched on, a security prompt is issued asking for the PIN to be entered.

### Screen brightness

Screen brightness is adjusted by the motorcycle while the unit is cradled. Manual input is not necessary.

Automatic setting can be switched off in the display settings for the Navigator if desired.



**CARE**

**11**

---

|                                           |            |
|-------------------------------------------|------------|
| <b>CARE PRODUCTS</b>                      | <b>236</b> |
| <b>WASHING THE VEHICLE</b>                | <b>236</b> |
| <b>CLEANING EASILY DAMAGED COMPONENTS</b> | <b>238</b> |
| <b>CARE OF PAINTWORK</b>                  | <b>239</b> |
| <b>PAINT PRESERVATION</b>                 | <b>239</b> |
| <b>LAYING UP THE MOTORCYCLE</b>           | <b>239</b> |
| <b>RESTORING MOTORCYCLE TO USE</b>        | <b>240</b> |

## CARE PRODUCTS

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad retailer. The substances in BMW Care Products have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



### ATTENTION

#### Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol.



### ATTENTION

#### Use of strongly acidic or strongly alkaline cleaning agents

Damage to vehicle parts

- Dilute in accordance with the dilution ratio stated on the packaging of the cleaning agent.
- Do not use strongly acidic or strongly alkaline cleaning agents.

## WASHING THE VEHICLE

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Remove dirt from the fork legs at regular intervals.

Make sure that the vehicle is washed frequently, especially during the winter months or if it is ridden on roads near the coast.

To remove road salt deposits, clean the vehicle and mounted

parts, as applicable, with cold water immediately after every trip.

 After a ride in the rain, when humidity is high or after the vehicle has been washed, condensation might form inside the headlight. This can cause temporary fogging on the headlight lens. If moisture is constantly present inside the headlight consult a specialist workshop, preferably an authorised BMW Motorrad retailer.



### **WARNING**

#### **Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions**

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads.



### **ATTENTION**

#### **Effect of road salt intensified by warm water**

Corrosion

- Use only cold water to remove road salt deposits.



### **ATTENTION**

#### **Damage due to high water pressure from high pressure cleaners or steam cleaners**

Corrosion or short circuit, damage to labels, seals, hydraulic brake system, electrical system and the motorcycle seat

- Exercise restraint when using a steam jet or high pressure cleaning equipment.

## CLEANING EASILY DAMAGED COMPONENTS

### Plastics



#### ATTENTION

#### Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.

Clean the plastic parts with water and BMW plastic care product. This includes in particular:

- Windscreen and slipstream deflectors
- Headlight lens made of plastic
- Glass cover of the instrument cluster
- Black, unpainted parts



Soften stubborn dirt and insects by covering the affected areas with a wet cloth.

#### TFT display

Clean the TFT display with warm water and washing-up liquid. Then dry it with a clean cloth, e.g. a paper towel.

### Chrome

Carefully clean chrome parts with plenty of water and

motorcycle cleaner from the BMW Care Products range.

This is particularly important to counter the effects of salt.

Use BMW Motorrad metal polish for additional treatment.

### Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



#### ATTENTION

#### Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.

### Rubber

Treat rubber components with water or BMW rubber-care products.



#### ATTENTION

#### Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.

## CARE OF PAINTWORK

Washing the vehicle regularly will help counteract the long-term effects of substances that can damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen.

Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel, oil, grease, brake fluid and bird droppings. For this, we recommend BMW Motorrad solvent cleaner followed by BMW Motorrad gloss polish for preservation.

Marks on the paintwork are particularly easy to see after the motorcycle has been washed. Remove stains of this kind at the earliest possible opportunity, using benzine or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Then apply preserving agent to the areas treated in this way.



### ATTENTION

#### Damage to paintwork due to metal polish

Risk of damage

- Do not treat painted surfaces and chrome-painted surfaces with metal polish.

## PAINT PRESERVATION

If water no longer rolls off the paint, the paint must be preserved.

For paint preservation, BMW Motorrad recommends the use of BMW Motorrad gloss polish or agents containing carnauba wax or synthetic wax.



Do not use chrome polish to preserve chrome paints. Use only the agents recommended by BMW Motorrad.

## LAYING UP THE MOTORCYCLE

- Clean the motorcycle.
- Fill the motorcycle's fuel tank.



Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the

## 240 CARE

vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.

- Removing battery (▮▮▮ 212).
- Spray the brake and clutch lever pivots and the side-stand and centre-stand pivot mounts with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel (preferably using the front-wheel and rear-wheel stands from BMW Motorrad).

---

### RESTORING MOTORCYCLE TO USE

- Remove the protective wax coating.
- Clean the motorcycle.
- Install the battery. (▮▮▮ 213)
- Comply with the checklist. (▮▮▮ 144)



# TECHNICAL DATA

12

---

|                               |            |
|-------------------------------|------------|
| <b>TROUBLESHOOTING CHART</b>  | <b>244</b> |
| <b>THREADED FASTENERS</b>     | <b>246</b> |
| <b>FUEL</b>                   | <b>249</b> |
| <b>ENGINE OIL</b>             | <b>250</b> |
| <b>ENGINE</b>                 | <b>250</b> |
| <b>CLUTCH</b>                 | <b>251</b> |
| <b>TRANSMISSION</b>           | <b>251</b> |
| <b>FINAL DRIVE</b>            | <b>252</b> |
| <b>FRAME</b>                  | <b>252</b> |
| <b>CHASSIS AND SUSPENSION</b> | <b>252</b> |
| <b>BRAKES</b>                 | <b>253</b> |
| <b>WHEELS AND TYRES</b>       | <b>254</b> |
| <b>ELECTRICAL SYSTEM</b>      | <b>255</b> |
| <b>ANTI-THEFT ALARM</b>       | <b>256</b> |
| <b>DIMENSIONS</b>             | <b>256</b> |
| <b>WEIGHTS</b>                | <b>257</b> |
| <b>PERFORMANCE FIGURES</b>    | <b>257</b> |

### TROUBLESHOOTING CHART

The engine doesn't start.

| Possible cause                                                                                                                | Rectification                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| Side stand extended and gear engaged                                                                                          | Fold in side stand.                                                              |
| Gear engaged and clutch not pressed                                                                                           | Select neutral or pull the clutch lever.                                         |
| No fuel in tank                                                                                                               | Refuel. (▶▶▶ 155)                                                                |
| Battery flat                                                                                                                  | Charge the battery when connected. (▶▶▶ 211)                                     |
| Overheating protection for starter motor has been activated. Starter motor can only be operated for a limited period of time. | Allow the starter motor to cool down for approx. 1 minute before using it again. |

The Bluetooth connection is not established.

| Possible cause                                                                       | Rectification                                                                                        |
|--------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| The steps required for pairing were not carried out.                                 | Check the necessary steps for pairing in the operating instructions for the communication system.    |
| The communication system was not connected automatically despite successful pairing. | Switch off the helmet's communication system and reconnect it after a minute or two.                 |
| Too many Bluetooth devices are saved on the helmet.                                  | All pairing entries on the helmet are deleted (see the communication system operating instructions). |
| There are other vehicles with Bluetooth-capable devices in the vicinity.             | Avoid simultaneously pairing with more vehicles.                                                     |

Bluetooth connection is interrupted.

| Possible cause                                                    | Rectification                                                                        |
|-------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| The Bluetooth connection to the mobile end device is interrupted. | Switch off energy saving mode.                                                       |
| The Bluetooth connection to the helmet is interrupted.            | Switch off the helmet's communication system and reconnect it after a minute or two. |
| The volume in the helmet cannot be adjusted.                      | Switch off the helmet's communication system and reconnect it after a minute or two. |

The telephone book is not displayed in the TFT display.

| Possible cause                                     | Rectification                                                                                                                                                   |
|----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The phone book was not transmitted to the vehicle. | Confirm transmission of the phone data (  127) when pairing the mobile device. |

Active route guidance is not displayed in the TFT display.

| Possible cause                                                      | Rectification                                                                                   |
|---------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Navigation from the BMW Motorrad Connected App was not transmitted. | The BMW Motorrad Connected App is opened on the connected mobile end device prior to departure. |
| The route guidance cannot be started.                               | Secure the mobile device's data connection and check the map data on the mobile end device.     |

## 246 TECHNICAL DATA

### THREADED FASTENERS

| Front wheel                                       | Value                                                                         | Valid |
|---------------------------------------------------|-------------------------------------------------------------------------------|-------|
| <b>Brake caliper on the telescopic forks</b>      |                                                                               |       |
| M10 x 65                                          | 38 Nm                                                                         |       |
| <b>Quick-release axle in the telescopic forks</b> |                                                                               |       |
| M20 x 1.5                                         | 50 Nm                                                                         |       |
| <b>Clamping screws in axle holder</b>             |                                                                               |       |
| M8 x 35                                           | <b>Tightening sequence:</b><br>Tighten screws six times in alternate sequence |       |
|                                                   | 19 Nm                                                                         |       |

| Rear wheel                        | Value                                                                  | Valid |
|-----------------------------------|------------------------------------------------------------------------|-------|
| <b>Rear wheel to wheel flange</b> |                                                                        |       |
| M10 x 1.25 x 40                   | <b>Tightening sequence:</b><br>tighten in diagonally opposite sequence |       |
|                                   | 60 Nm                                                                  |       |

| Mirror arm                         | Value                      | Valid |
|------------------------------------|----------------------------|-------|
| <b>Mirror (locknut) to adapter</b> |                            |       |
| M10 x 1.25                         | Left-hand thread,<br>22 Nm |       |

| Mirror arm                              | Value | Valid |
|-----------------------------------------|-------|-------|
| <b>Adapter to clamping block</b>        |       |       |
| M10 x 14 - 4.8                          | 25 Nm |       |
| Gearshift lever                         | Value | Valid |
| <b>Peg to gearshift lever</b>           |       |       |
| M6 x 20<br>micro-encapsulated           | 10 Nm |       |
| Footbrake lever                         | Value | Valid |
| <b>Peg to footbrake lever</b>           |       |       |
| M6 x 20<br>micro-encapsulated           | 10 Nm |       |
| Footrests                               | Value | Valid |
| <b>Clamping block on footrest hinge</b> |       |       |
| M8 x 25                                 | 20 Nm |       |
| <b>Footrest on clamping block</b>       |       |       |
| M6 x 20 / M6 x 12                       | 10 Nm |       |

## 248 TECHNICAL DATA

| Handlebars                                             | Value                                                                                | Valid                                                 |
|--------------------------------------------------------|--------------------------------------------------------------------------------------|-------------------------------------------------------|
| <b>Clamping block (handlebar clamp) to fork bridge</b> |                                                                                      |                                                       |
| M8 x 35                                                | <b>Tightening sequence: in the forward direction of travel, tighten until seated</b> |                                                       |
|                                                        | 19 Nm                                                                                |                                                       |
| M8 x 30                                                | <b>Tightening sequence: in the forward direction of travel, tighten until seated</b> | —with preparation for navigation system <sup>OE</sup> |
|                                                        | 19 Nm                                                                                |                                                       |

**FUEL**

|                                     |                                                                                                                                                                                                                                                                                        |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Recommended fuel grade              |  Premium unleaded (maximum 15 % ethanol, E15)<br> 95 ROZ/RON<br>90 AKI                                               |
| Alternative fuel grade              |  Regular unleaded (power- and consumption-related restrictions) (maximum 15 % ethanol, E15)<br> 91 ROZ/RON<br>87 AKI |
| Usable fuel capacity                | approx. 18 l                                                                                                                                                                                                                                                                           |
| Reserve fuel                        | approx. 4 l                                                                                                                                                                                                                                                                            |
| Fuel consumption                    | 4.75 l/100 km, in accordance with WMTC                                                                                                                                                                                                                                                 |
| –with power reduction <sup>OE</sup> | 4.88 l/100 km, in accordance with WMTC                                                                                                                                                                                                                                                 |
| CO <sub>2</sub> emission            | 110 g/km, following world-wide harmonised motorcycle test cycle (WMTC)                                                                                                                                                                                                                 |
| –with power reduction <sup>OE</sup> | 113 g/km, following world-wide harmonised motorcycle test cycle (WMTC)                                                                                                                                                                                                                 |
| Exhaust emissions standard          | EU5                                                                                                                                                                                                                                                                                    |

## 250 TECHNICAL DATA

### ENGINE OIL

|                                     |                                                                                                                                                                                                          |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine oil, capacity                | max 4 l, with filter change                                                                                                                                                                              |
| Specification                       | SAE 5W-40, API SL / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil. |
| Engine oil, quantity for topping up | max 0.8 l, Difference between <b>MIN</b> and <b>MAX</b>                                                                                                                                                  |

**BMW recommends** **ADVANTEC**  
ORIGINAL BMW ENGINE OIL

### ENGINE

|                        |                                                                                                                                                                                           |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine number location | Crankcase, bottom right, below starter motor                                                                                                                                              |
| Engine design          | A74B12M                                                                                                                                                                                   |
| Engine design          | Air/liquid-cooled, two-cylinder four-stroke opposed-twin engine with two overlying, spur-gear-driven camshafts, a counterbalance shaft and variable intake camshaft control, BMW ShiftCam |
| Displacement           | 1254 cm <sup>3</sup>                                                                                                                                                                      |
| Cylinder bore          | 102.5 mm                                                                                                                                                                                  |
| Piston stroke          | 76 mm                                                                                                                                                                                     |
| Compression ratio      | 12.5:1                                                                                                                                                                                    |

|                                     |                                                                     |
|-------------------------------------|---------------------------------------------------------------------|
| Nominal capacity                    | 100 kW, at engine speed:<br>7750 min <sup>-1</sup>                  |
| —with power reduction <sup>OE</sup> | 79 kW, at engine speed:<br>7750 min <sup>-1</sup>                   |
| Torque                              | 143 Nm, at engine speed:<br>6250 min <sup>-1</sup>                  |
| —with power reduction <sup>OE</sup> | 140 Nm, at engine speed:<br>5000 min <sup>-1</sup>                  |
| Maximum engine speed                | max 9000 min <sup>-1</sup>                                          |
| Idle speed                          | 1050 min <sup>-1</sup> , Engine at regular<br>operating temperature |

## CLUTCH

|             |                                          |
|-------------|------------------------------------------|
| Clutch type | Multi-plate oil-bath (anti-hop-<br>ping) |
|-------------|------------------------------------------|

## TRANSMISSION

|                             |                                                                                                                                                                                                                                                                 |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Type of transmission        | Constant-mesh six-speed<br>transmission with helical-cut<br>gearing                                                                                                                                                                                             |
| Gearbox transmission ratios | 1,650 (33:20), Primary trans-<br>mission ratio<br>2,438 (39:16), 1st gear<br>1,714 (36:21), 2nd gear<br>1,296 (35:27), 3rd gear<br>1,059 (36:34), 4th gear<br>0,943 (33:35), 5th gear<br>0,848 (28:33), 6th gear<br>1,061 (35:33), Transmission<br>output ratio |

## 252 TECHNICAL DATA

---

### FINAL DRIVE

|                            |                                                                     |
|----------------------------|---------------------------------------------------------------------|
| Type of final drive        | Shaft drive with bevel gears                                        |
| Type of rear suspension    | Cast aluminium single swinging arm featuring BMW Motorrad Paralever |
| Gear ratio of final drive  | 2.818 (31/11 teeth)                                                 |
| Rear axle differential oil | SAE 70W-80 / Hypoid Axle G3                                         |

---

### FRAME

|                                               |                                                                        |
|-----------------------------------------------|------------------------------------------------------------------------|
| Frame type                                    | Tubular steel frame with supporting drive unit, steel pipe rear frames |
| Type plate location                           | Frame, front left at steering head                                     |
| Position of the vehicle identification number | Frame, front right, on steering head                                   |

---

### CHASSIS AND SUSPENSION

#### Front wheel

|                                 |                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------|
| Type of front suspension        | Upside-down telescopic fork                                                               |
| –with Dynamic ESA <sup>OE</sup> | Upside-down telescopic forks, 54 mm in diameter, adjustable rebound and compression stage |
| Spring travel, front            | 140 mm, at front wheel                                                                    |

**Rear wheel**

|                                 |                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------|
| Type of rear suspension         | Cast aluminium single swinging arm featuring BMW Motorrad Paralever                         |
| Type of rear-wheel suspension   | Central spring strut with coil spring, adjustable rebound-stage damping and spring pre-load |
| –with Dynamic ESA <sup>OE</sup> | ESA-2 with spring rate setting                                                              |
| Spring travel at rear wheel     | 140 mm                                                                                      |

**BRAKES****Front wheel**

|                             |                                                                                   |
|-----------------------------|-----------------------------------------------------------------------------------|
| Type of front brake         | Twin disc brakes, floating brake discs, diameter 320 mm, 4-piston radial calipers |
| Brake-pad material, front   | Sintered metal                                                                    |
| Brake disc thickness, front | 4.5 mm, when new<br>min 4.0 mm, wear limit                                        |

**Rear wheel**

|                            |                                                               |
|----------------------------|---------------------------------------------------------------|
| Type of rear brake         | Single-disc brake, diameter 276 mm, 2-piston floating caliper |
| Brake-pad material, rear   | Sintered metal                                                |
| Brake disc thickness, rear | 5 mm, when new<br>min 4.5 mm, wear limit                      |

## 254 TECHNICAL DATA

### WHEELS AND TYRES

|                                  |                                                                                                                           |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Recommended tyre combinations    | Your authorised BMW Motorrad retailer will be happy to supply an up-to-date list of the approved wheel/tyre combinations. |
| Speed category, front/rear tyres | W, required at least: 270 km/h                                                                                            |

#### Front wheel

|                                              |                      |
|----------------------------------------------|----------------------|
| Front-wheel type                             | Aluminium cast wheel |
| –with Option 719 wheel Classic <sup>OE</sup> | Spoked wheel         |
| Front-wheel rim size                         | 3.50" x 17"          |
| Tyre designation, front                      | 120/70 - ZR 17       |
| Load index, front tyre                       | min. 58              |
| Permissible wheel load, front                | max 180 kg           |
| Permissible front-wheel imbalance            | max 5 g              |

#### Rear wheel

|                                              |                      |
|----------------------------------------------|----------------------|
| Rear-wheel type                              | Aluminium cast wheel |
| –with Option 719 wheel Classic <sup>OE</sup> | Spoked wheel         |
| Rear wheel rim size                          | 5.50" x 17"          |
| Tyre designation, rear                       | 180/55 - ZR 17       |
| Load index, rear tyre                        | min. 73              |
| Permissible wheel load, rear                 | max 325 kg           |
| Permissible rear-wheel imbalance             | max 5 g              |

**Tyre pressures**

|                      |                                                   |
|----------------------|---------------------------------------------------|
| Tyre pressure, front | 2.5 bar, with cold tyre; one-up and two-up riding |
| Tyre pressure, rear  | 2.9 bar, with cold tyre; one-up and two-up riding |

**ELECTRICAL SYSTEM**

|                                       |                                                                                                                                                                                                  |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Electrical rating of on-board sockets | max 5 A, total for all sockets                                                                                                                                                                   |
| Fuse carrier 1                        | 10 A, Slot 1: instrument cluster, alarm system (DWA), ignition lock, main relay, diagnostic socket<br>7.5 A, Slot 2: multifunction switch left, tyre pressure control (RDC), angular rate sensor |
| Fuse holder                           | 50 A, Fuse 1: Voltage regulator                                                                                                                                                                  |

**Battery**

|                        |                                                     |
|------------------------|-----------------------------------------------------|
| Battery type           | AGM battery (Absorbent Glass Mat), maintenance-free |
| Battery rated voltage  | 12 V                                                |
| Battery rated capacity | 12 Ah                                               |

**Spark plugs**

|                                           |                |
|-------------------------------------------|----------------|
| Spark plugs, manufacturer and designation | NGK LMAR8AI-10 |
|-------------------------------------------|----------------|

## 256 TECHNICAL DATA

### Lighting

|                                         |                  |
|-----------------------------------------|------------------|
| Bulb for high-beam headlight            | LED              |
| Bulbs for the low-beam headlight        | LED              |
| Bulb for parking light                  | LED              |
| Bulb for tail light/brake light         | LED              |
| Bulbs for turn indicators               | LED              |
| Light source for the number plate light | W5W / 12 V / 5 W |

### ANTI-THEFT ALARM

|                                                    |              |
|----------------------------------------------------|--------------|
| Activation time on arming                          | approx. 30 s |
| Alarm duration                                     | approx. 26 s |
| Battery type (For Keyless Ride radio-operated key) | CR 2032      |

### DIMENSIONS

|                                       |                                                      |
|---------------------------------------|------------------------------------------------------|
| Length of motorcycle                  | 2165 mm, over number-plate carrier                   |
| Height of motorcycle                  | 1300 mm, via mirror                                  |
| Width of motorcycle                   | 880 mm, with mirrors<br>845 mm, using the hand lever |
| —with sports handlebars <sup>OE</sup> | 893 mm, with mirrors<br>836 mm, using the hand lever |
| Height of rider's seat                | 820 mm, without rider at DIN unladen weight          |
| —with rider's seat, low <sup>OE</sup> | 760 mm, without rider at DIN unladen weight          |
| —with Sport seat <sup>OE</sup>        | 840 mm, without rider at DIN unladen weight          |

|                                       |                                          |
|---------------------------------------|------------------------------------------|
| Rider's inside-leg arc, heel to heel  | 1840 mm, without rider at unladen weight |
| –with rider's seat, low <sup>OE</sup> | 1720 mm, without rider at unladen weight |
| –with Sport seat <sup>OE</sup>        | 1875 mm, without rider at unladen weight |

## WEIGHTS

|                                  |                                                                                        |
|----------------------------------|----------------------------------------------------------------------------------------|
| Vehicle kerb weight              | 239 kg, DIN unladen weight, ready for road, 90 % load of fuel, without optional extras |
| Permissible gross vehicle weight | 460 kg                                                                                 |
| Maximum payload                  | 221 kg                                                                                 |

## PERFORMANCE FIGURES

|                                     |              |
|-------------------------------------|--------------|
| Top speed                           | >200 km/h    |
| –with power reduction <sup>OE</sup> | min 200 km/h |
| –with case <sup>OA</sup>            | 180 km/h     |
| –with topcase <sup>OA</sup>         | 180 km/h     |

**SERVICE**

**13**

---

|                                          |            |
|------------------------------------------|------------|
| <b>REPORTING SAFETY-RELEVANT DEFECTS</b> | <b>260</b> |
| <b>RECYCLING</b>                         | <b>261</b> |
| <b>BMW MOTORRAD SERVICE</b>              | <b>261</b> |
| <b>BMW MOTORRAD SERVICE HISTORY</b>      | <b>262</b> |
| <b>BMW MOTORRAD MOBILITY SERVICES</b>    | <b>262</b> |
| <b>MAINTENANCE WORK</b>                  | <b>263</b> |
| <b>BMW MOTORRAD SERVICE</b>              | <b>263</b> |
| <b>MAINTENANCE SCHEDULE</b>              | <b>264</b> |
| <b>BMW MOTORRAD RUNNING-IN CHECK</b>     | <b>265</b> |
| <b>MAINTENANCE CONFIRMATIONS</b>         | <b>266</b> |
| <b>SERVICE CONFIRMATIONS</b>             | <b>278</b> |

---

### REPORTING SAFETY-RELEVANT DEFECTS

—with Canada export<sup>NV</sup>

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the NHTSA (National Highway Traffic Safety Administration) in addition to notifying the BMW of North America, LLC.


If the NHTSA receives other, similar complaints, it may open an investigation. If it finds that a safety defect exists in a group of vehicles, the NHTSA it may order a recall and remedy campaign. However, the NHTSA cannot become involved in individual problems between you, your retailer, or BMW of North America, LLC. You can contact the NHTSA by calling the Vehicle Safety Hotline on 1-888-327-4236 (teletypewriter TTY for the hearing impaired: 1-800-424-9153) toll-free, by visiting the website at <http://www.safercar.gov> or by writing to Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. Further information on vehicle safety is available at <http://www.safercar.gov>.

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls can call the toll-free hotline 1-800-333-0510. You can obtain further information about motor vehicle safety from <http://www.tc.gc.ca/roadsafety>.

## RECYCLING

—with France export<sup>NV</sup>

### Disposal of the rider's manual

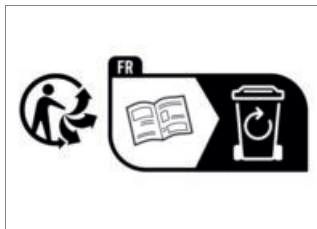

Dispose of this rider's manual by depositing it in the container provided for the purpose.

## BMW MOTORRAD SERVICE

BMW Motorrad has an extensive network of retailers in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad retailers have the technical information and the technical know-how to carry out reliably all preventive maintenance and repair work on your BMW.

You can locate the nearest authorised BMW Motorrad retailer by visiting our website:

**[bmw-motorrad.com](http://bmw-motorrad.com)**



## WARNING

### Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a specialist workshop, preferably an authorised BMW Motorrad dealer.

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle.

Have all preventive maintenance and repair work carried out confirmed in the "Service" chapter in this manual.

Evidence of regular preventive maintenance is essential for generous treatment of claims submitted after the warranty period has expired.

Your authorised BMW Motorrad retailer can provide information on BMW Motorrad services and the work undertaken as part of each service.

---

### **BMW MOTORRAD SERVICE HISTORY**

#### **Entries**

Maintenance work that has been carried out is entered in the proof of maintenance. The entries are like a Service Booklet and provide proof of regular maintenance.

When an entry is made in the electronic service booklet of the vehicle, service-relevant data is saved in the central IT systems of BMW AG, Munich, Germany.

If there is a change in vehicle ownership, the data saved in the electronic service booklet can also be viewed by the new vehicle owner. An authorised BMW Motorrad retailer or a specialist workshop can also view data that is stored in the electronic service booklet.

#### **Objection**

The vehicle owner can object to entries being made by the authorised BMW Motorrad retailer or a specialist workshop in the electronic service booklet along with the corresponding storage of data in the vehicle and transfer of data to the vehicle manufacturer for the period of time that they are the vehicle owner. In this instance, no entry is made in the electronic service booklet of the vehicle.

---

### **BMW MOTORRAD MOBILITY SERVICES**

As owner of a new BMW vehicle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile Service, breakdown service, vehicle recovery service). Your authorised BMW Motorrad dealer will be happy provide information about the mobility services available to you.

---

## **MAINTENANCE WORK**

### **BMW pre-delivery check**

Your authorised BMW Motorrad dealer conducts the BMW pre-delivery check before handing over the vehicle to you.

### **BMW Running-in check**

The BMW running-in check has to be performed when the vehicle has covered between 500 km and 1200 km.

---

## **BMW MOTORRAD SERVICE**

The BMW Motorrad Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad retailer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odo-

meter reading is reached before the next scheduled date for the service.

The service display is a service-due indicator that appears on the TFT display to remind you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:  
**[bmw-motorrad.com/service](http://bmw-motorrad.com/service)**

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below:

## MAINTENANCE SCHEDULE

|   | 500 -1200 km<br>300 - 750 mls | 10 000 km<br>6 000 mls | 20 000 km<br>12 000 mls | 30 000 km<br>18 000 mls | 40 000 km<br>24 000 mls | 50 000 km<br>30 000 mls | 60 000 km<br>36 000 mls | 70 000 km<br>42 000 mls | 80 000 km<br>48 000 mls | 90 000 km<br>54 000 mls | 100 000 km<br>60 000 mls | 12 months      | 24 months      |
|---|-------------------------------|------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|-------------------------|--------------------------|----------------|----------------|
| 1 | X                             |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
| 2 |                               | X                      | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                        | X <sup>a</sup> |                |
| 3 |                               | X                      | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                       | X                        | X <sup>a</sup> |                |
| 4 |                               |                        | X                       |                         | X                       |                         | X                       |                         | X                       |                         | X                        |                | X <sup>b</sup> |
| 5 |                               |                        | X                       |                         | X                       |                         | X                       |                         | X                       |                         | X                        |                |                |
| 6 |                               |                        | X                       |                         | X                       |                         | X                       |                         | X                       |                         | X                        |                |                |
| 7 |                               |                        | X                       |                         | X                       |                         | X                       |                         | X                       |                         | X                        |                |                |
| 8 |                               |                        |                         | X                       |                         |                         | X                       |                         |                         | X                       |                          |                |                |
| 9 |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          | X <sup>c</sup> | X <sup>c</sup> |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |
|   |                               |                        |                         |                         |                         |                         |                         |                         |                         |                         |                          |                |                |

- 1 BMW running-in check (including oil change and oil filter change)
- 2 BMW Motorrad Service, standard scope
- 3 Engine-oil change, with filter
- 4 Oil change in bevel gears rear
- 5 Check valve clearances
- 6 Replace all spark plugs
- 7 Replace air-filter element
- 8 Oil change in the telescopic forks
- 9 Change brake fluid, entire system

- a annually or every 10000 km (whichever comes first)
- b every 2 years or every 20000 km (whichever comes first)
- c for the first time after one year, then every two years

---

## **BMW MOTORRAD RUNNING-IN CHECK**

### **BMW Motorrad running-in check**

The tasks included in the BMW Motorrad running-in check are listed below. The actual scope of work applicable for your vehicle may vary.

- Setting service-due date and countdown distance
- Performing vehicle test with BMW Motorrad diagnostic system
- Engine-oil change, with filter
- Changing oil in bevel gears
- Adjusting steering-head bearing
- Checking brake-fluid level, front brakes
- Checking brake-fluid level, rear brakes
- Checking coolant level
- Checking tyre tread depth and tyre pressure
- Check the lights and signalling equipment
- Function test, engine start suppression
- Final inspection and check of roadworthiness
- Performing vehicle test with BMW Motorrad diagnostic system
- Confirming the BMW service in the on-board literature

### MAINTENANCE CONFIRMATIONS

#### **BMW Motorrad Service standard scope**

The tasks included in the BMW Motorrad Service standard scope are listed below. The actual scope of maintenance work applicable for your vehicle may vary.

- Performing vehicle test with BMW Motorrad diagnostic system
- Visual inspection of clutch system
- Visual inspection of the brake lines, brake hoses and connections
- Check the front brake pads and brake discs for wear
- Check the brake-fluid level, front wheel brake
- Check the rear brake pads and brake disc for wear
- Check the brake-fluid level, rear wheel brake
- Checking steering-head bearing
- Check the coolant level
- Check the side stand's ease of movement
- Check the ease of movement of the centre stand
- Check the tyre pressures and tread depth
- Check the tension of the spokes, adjust if necessary
- Checking lighting and signalling system
- Function test, engine start suppression
- Final inspection and check of roadworthiness
- Setting service-due date and countdown distance with BMW Motorrad diagnostic system
- Checking battery state of charge
- Confirm the BMW Motorrad service in the on-board literature

**BMW Motorrad pre-delivery check**

carried out

on \_\_\_\_\_

Stamp, signature

**BMW Motorrad running-in check**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

Stamp, signature

## BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

## Work performed

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

### Work performed

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

## Work performed

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

## Work performed

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## BMW Motorrad service

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

## Work performed

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

**BMW Motorrad service**

carried out

on \_\_\_\_\_

odometer reading \_\_\_\_\_

Next service

at the latest

on \_\_\_\_\_

or, when reached earlier

odometer reading \_\_\_\_\_

**Work performed**

|                                               | Yes                      | No                       |
|-----------------------------------------------|--------------------------|--------------------------|
| BMW Motorrad service                          | <input type="checkbox"/> | <input type="checkbox"/> |
| Engine oil change with filter                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Oil change in rear angular gearbox            | <input type="checkbox"/> | <input type="checkbox"/> |
| Checking valve clearance                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Renewing all spark plugs                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Replacing the air filter element              | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the oil in the telescopic fork       | <input type="checkbox"/> | <input type="checkbox"/> |
| Changing the brake fluid in the entire system | <input type="checkbox"/> | <input type="checkbox"/> |

Notes

Stamp, signature

## SERVICE CONFIRMATIONS

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, technical campaign work.

[illegible]



|                                                                               |            |
|-------------------------------------------------------------------------------|------------|
| <b>DECLARATION OF CONFORMITY</b>                                              | <b>281</b> |
| <b>CERTIFICATE FOR ELECTRONIC IMMOBILISER</b>                                 | <b>284</b> |
| <b>CERTIFICATE FOR KEYLESS RIDE HUF5750</b>                                   | <b>287</b> |
| <b>CERTIFICATE FOR TYRE PRESSURE CONTROL (RE-<br/>IFENDRUCK-CONTROL, RDC)</b> | <b>289</b> |
| <b>CERTIFICATE FOR TFT INSTRUMENT CLUSTER</b>                                 | <b>290</b> |

**DECLARATION OF CONFORMITY****Manufacturer**

Bayerische Motoren Werke Aktiengesellschaft  
Petuelring 130, 80809 Munich, Germany

Hereby, BMW AG declares that the radio equipment components listed below are in compliance with Directive 2014/53/EU and with Radio Equipment Regulations 2017 of the United Kingdom. The full text of the EU/UK declarations of conformity are available at the following internet address:  
**[bmw-motorrad.com/certification](http://bmw-motorrad.com/certification)**



**Simplified UK Declaration of Conformity according to Radio Equipment Regulations 2017 of the United Kingdom.**



**Simplified EU Declaration of Conformity according to EU RED (2014/53/EU).**

## 282 APPENDIX

### Technical information

| Radio equipment          | Component            | Frequency band                                              | Output/Transmission Power               |
|--------------------------|----------------------|-------------------------------------------------------------|-----------------------------------------|
| EWS4                     | EWS                  | 134 kHz                                                     | 50 dB $\mu$ V/m                         |
| HUF5750                  | Keyless Ride         | 434,42 MHz                                                  | 10 mW                                   |
| HUF8465                  | Keyless Ride         | 134,45 kHz                                                  | 42 dB $\mu$ V/m                         |
| HUF5794                  | Keyless Ride         | 433,92 MHz                                                  | 10 mW                                   |
| HUF8485                  | Keyless Ride         | 134,45 kHz                                                  | 42 dB $\mu$ V/m                         |
| ZB001                    | Keyless Ride         | 134.5 kHz                                                   | allowed<br>66 dB $\mu$ A/<br>m@ 10m     |
| ZB002                    | Keyless Ride         | 433.92 MHz                                                  | max.<br>10 dBm<br>e.r.p                 |
| TXBM-WMR                 | DWA                  | 433.05 MHz - 434.79 MHz                                     | 18,8 dBm                                |
| RDC3                     | RDC                  | 433.92 MHz                                                  | <13 mW                                  |
| Wus Moto gen 3           | RDC                  | 433,05 MHz - 434,79 MHz                                     | <10 mW<br>e.r.p.                        |
| MC24MA4                  | RDC                  |                                                             |                                         |
| WCA Motorrad-Ladestafach | Charging compartment | 110 kHz - 115 kHz                                           | < 6 W                                   |
| ICC6.5in                 | Instrument Cluster   | Bluetooth: 2402 MHz - 2480 MHz<br>WLAN: 2412 MHz - 2462 MHz | Bluetooth:<br>< 4 dBm<br>WLAN: < 20 dBm |

| <b>Radio equipment</b> | <b>Component</b>           | <b>Frequency band</b>                                                                                                                                         | <b>Output/Transmission Power</b>                         |
|------------------------|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| ICC10in                | Instrument Cluster         | Bluetooth: 2402 MHz - 2480 MHz<br>WLAN: 2402 MHz - 2472 MHz                                                                                                   | Bluetooth: < +4 dBm<br>WLAN: < +14 dBm                   |
| MRR e14FCR             | ACC                        | 76 - 77 GHz                                                                                                                                                   | Peak max. 32 dBm<br>Nom max. 27 dBm                      |
| TL1P22                 | Intelligent emergency call | 832 MHz - 862 MHz<br>880 MHz - 915 MHz<br>1710 MHz - 1785 MHz<br>1920 MHz - 1980 MHz<br>2500 MHz - 2570 MHz<br>2570 MHz - 2620 MHz<br>GNSS: 1559 MHz-1610 MHz | 23 dBm<br>33 dBm<br>30 dBm<br>24 dBm<br>23 dBm<br>23 dBm |
| MCR001                 | Audio system               |                                                                                                                                                               |                                                          |

# Declaration of Conformity

## Radio equipment electronic immobiliser (EWS4)

For all countries without EU

### Technical information

Frequency Band: 134 kHz  
(Transponder: TMS37145 /  
Type DST80, TMS3705  
Transponder Base Station IC)  
Output Power: 50 dBμV/m

### Manufacturer and Address

Manufacturer:  
BECOM Electronics GmbH  
Address: Technikerstraße 1,  
A-7442 Hochstraß

### Argentina

 **RAMATEL**  
H-25246

### Australia/New Zealand



R-NZ

### Brunei



TA No: DTA-007061

### United Arab Emirates

TRA  
REGISTERED No:  
ER89926/20

DEALER No:  
DA96133I20

### Philippiens



**NTC**

Type Approved  
No.: ESD-RCE-2023298

### South Africa



TA-2020/6131

APPROVED

### India

ETA-SD-20200905860

### Belarus



## Indonesia

72790/SDPPI/2021  
13349




Dilarang melakukan perubahan  
Spesifikasi yang dapat  
Menimbulkan gangguan fisik  
dan/atau elektromagnetik  
terhadap lingkungan sekitarnya

## Taiwan



低功 電波 射性電機管 辦法  
第十二條 經型式認證合格之低  
功率射頻電 機，非經許可，公  
司、商號或使用者均不得擅 自變  
更頻率、加大功率或變更原設計  
之特性及 功能。第十四條 低功  
率射頻電機之使用不 得影響飛航  
安全及干擾合法通信；經發現有  
干 擾現象時，應立即停用，並改  
善至無干擾時方 得繼續使用。前  
項合法通信，指依電信法規定作  
業之無線電 通信。

## Paraguay

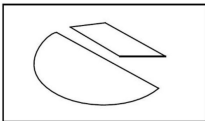

CONATEL

NR: 2020-11-I-0834

## Malaysia



RFCL/47A/0920/S(20-3358)

## Singapore

Complies with  
IMDA Standards  
N3504-20

## Israel

מספר אישור אלחוטי של משרד התקשורת הוא  
51-74908  
אסור להחליף את האנטנה המקורית של המכשיר  
ולא  
לעשות בו כל שינוי טכני אחר

## United States (USA)

Contains FCC ID:

ODE-MREWS5012

FCC § 15.19 Labelling requirements

This device complies with part 15 of the FCC Rules and Industry Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC § 15.21 Information to user

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Requirements

To comply with FCC RF exposure compliance requirements, the device must be installed to provide a separation distance of at least 20 cm from all persons.

## Serbia



P1620118300

## Canada

Contains IC:


10430A-MREWS5012

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Vietnam

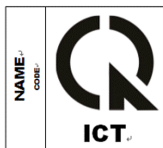

A1109091120AF04A3

# Declaration of Conformity

## Keyless Ride Key

For all Countries without EU

**Model name: HUF5750**

## Technical information

Frequenzy band: 434,42 MHz

Output/Transmission Power:

10 mW

## Manufacturer and Address

Huf Hüsbeck &

Fürst GmbH & Co. KG

Steeger Str. 17,

42551 Velbert, Germany

## Argentina

**CNC** COMISIÓN NACIONAL  
DE COMUNICACIONES

H-17115

## Morocco

AGREE PAR L'ANRT MAROC

Numéro d'agrément: MR 8851 ANRT 2014

Date d'agrément: 17/01/2014

## Nigeria

Connection and use of this communications  
equipment is permitted by the Nigerian  
Communications Commission

## United Arab Emirates



**TRA – United Arab Emirates**

Dealer ID: DA36976/14


TA RTE: ER57698/17

Model: HUF5750

Type: RF transceiver for BMW Motorcycles



## Malaysia



**MCMC**

HIDF17000037

## Philippines



**NTC**

Type Approved

No. ESD-1408693C

## South Africa



TA-2013/1674

APPROVED

## Vietnam




## Indonesia

81556/SDPPI/2022



13349

## Paraguay



**CONATEL**

2020-05-I-0277

## Belarus



## Singapore

Complies with  
IMDA Standards  
DA101586

## Serbia



M005 19

## Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Taiwan

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用

不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之

無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

## Thailand



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มิ ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



**nadb.** | โทรคมนาคม  
กำกับดูแลเพื่อประชาชน  
Call Center 1200 (InsWRI)

# Certification Tire Pressure Control (TPC)

FCC ID: MRXBC54MA4  
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4  
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

# Declaration of Conformity

## Radio equipment TFT instrument cluster

For all Countries without EU

### Technical information

BT operating frq. Range:  
2402 – 2480 MHz  
BT version: 4.2 (no BTLE)  
BT output power: < 4 dBm  
WLAN operating frq. Range:  
2412 – 2462 MHz  
WLAN standards:  
IEEE 802.11 b/g/n  
WLAN output power: < 20 dBm

### Manufacturer and Address

Manufacturer:  
Robert Bosch GmbH  
Address: Robert Bosch Str. 200,  
31139 Hildesheim, Germany

### Turkey

Robert Bosch GmbH, ICC6.5'in  
tipi telsiz sisteminin 2014/53/EU  
nolu yönetmeliğe uygun  
olduğunu beyan eder. AB  
Uygunluk Beyanı'nın tam metni,  
aşağıdaki internet adresinden  
görülebilir: <http://cert.bosch-carmultimedia.net>

## Argentina

 **RAMATEL**

C-24711

## Brazil

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

## Canada

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **Korea**

적합성평가에 관한 고시

R-CMM-RBR-ICC65IN

상호 : Robert Bosch GmbH모델

명 : ICC6.5in

기자재명칭 : 특정소출력 무선기기  
(무선데이터통신시스템용 무선기기)

제조사 및 제조국가 : Robert

Bosch GmbH / 포르투갈

제조년월 : 제조년월로 표기

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

### **Mexico**

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

### **Taiwan, Republic of**

根據 NCC 低功率電波輻射性電機管理辦法 規定: 第十二條

經型式認證合格之低功率射頻電機, 非經許可, 公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

#### **第十四條**

低功率射頻電機之使用不得影響飛航安全及干擾合法通信; 經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。

前項合法通信, 指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

## **Thailand**

เครื่องโทรคมนาคมและอุปกรณ์นี้

มีความสอดคล้องตามข้อกำหนดของ กทช.

(This telecommunication equipments is in compliance with NTC requirements)

## **United States (USA)**

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



## 294 INDEX

### A

Abbreviations and symbols, 4

#### ABS

Engineering details, 164

Self-diagnosis, 147

Status indicators, 54

Warning indicators, 54, 55,  
56

#### Accessories

General notes, 220

Adaptive Headlight, 181

#### Air filter

Position in the vehicle, 19

Replacing the air filter  
element, 206

Ambient temperature, 39

#### Anti-theft alarm

Indicator light, 24

operating, 92

### B

#### Battery

charging battery when  
connected, 211

charging battery when  
disconnected, 212

installing, 213

Maintenance instructions, 210

Removal, 212

Technical data, 255

Warning indicators, 40, 41,  
42

Bluetooth, 114

#### Brake fluid

Checking fluid level,  
front, 191

Checking fluid level, rear, 192

Reservoir, front, 19

Reservoir, rear, 19

#### Brake pads

checking front, 188

checking rear, 189

Running in, 149

#### Brakes

ABS Pro in detail, 167

ABS Pro depending on riding  
mode, 152

Adjust the footbrake  
lever, 134

Adjusting handlebar

levers, 133

Checking operation, 188

Dynamic Brake Control

depending on riding

mode, 152

Safety information, 151

Technical data, 253

Braking, 121

### C

#### Care

Care products, 236

Chrome, 238

Paintwork preservation, 239

Washing the vehicle, 236

#### Cases, 222

#### Chassis and suspension

Technical data, 252

#### Check control

Dialogue, 31

Display, 31

#### Checklist, 144

Clock, 113

**Clutch**

- Adjusting handlebar levers, 131
- Checking operation, 193
- Technical data, 251

**Coolant**

- Checking fill level, 193
- Topping up, 194

**Cruise control**

- operating, 86

**D****Damping**

- Adjuster, rear, 18

**Daytime riding lights**

- automatic daytime riding light, 77
- manual daytime riding light, 76

**Diagnostic connector**

- disengaging, 216
- securing, 216

**Dimensions**

- Technical data, 256

**DTC, 121**

- Engineering details, 168
- operating, 78
- Self-diagnosis, 148
- Warning indicators, 56, 57

**DWA**

- Technical data, 256
- Warning indicator lights, 44
- Warning indicators, 43, 44

**Dynamic Brake Control, 175**

- Engineering details, 175

**Dynamic engine brake**

- control, 170

**E****Electrical system**

- Technical data, 255

**Emergency call**

- Automatically in the event of a light fall, 73
- Automatically in the event of a severe fall, 74
- Language, 72
- manual, 72
- Notes, 11
- Warning indicators, 53

**Emergency off switch (kill switch), 22, 23**

- operating, 71

**Engine**

- starting, 145
- Technical data, 250
- Warning indicator lights, 47
- Warning indicators, 47, 48

**Engine oil**

- Checking fill level, 186
- Electronic oil-level check, 44
- Filler neck, 19
- Fill-level indicator, 19
- Indicator light for engine oil level, 45
- Technical data, 250
- topping up, 187

**Engine temperature, 45, 46****ESA**

- Control, 21
- operating, 80

**F****Final drive**

- Technical data, 252

**Frame**

- Technical data, 252

Front-wheel stand  
installing, 185

Fuel

Filler neck, 18

Fuel grade, 154

refuelling, 155, 156

refuelling with Keyless

Ride, 157

Technical data, 249

Fuel filler cap emergency

release, 158, 159

Fuel reserve

Range, 112

Warning indicators, 58

Fuses

replacing, 214

Technical data, 255

## G

General views, 121

Indicator and warning

lights, 28

Instrument cluster, 24

Left multifunction switch, 21

left side of vehicle, 18

My vehicle, 118

Right multifunction switch, 22,

23

right side of vehicle, 19

TFT display, 29, 30

Underneath the seat, 20

## H

Hazard warning flashers, 77

Control, 21, 22, 23

Headlight

Headlight beam throw, 131

Headlight courtesy delay

feature, 64, 74

Heated handlebar grips

Control, 22, 23

operating, 95

heel angle, 121

Hill Start Control, 88, 179

cannot be activated, 59

Engineering details, 179

Indicator and warning

lights, 58, 59

operating, 89

switching on and off, 89

Hill Start Control Pro

adjusting, 90

Engineering details, 179

operating, 90

Horn, 21

## I

Ignition

switching off, 65

switching on, 64

Immobiliser, 68

Spare key, 65

Indicator lights, 24

Overview, 28

Instrument cluster

Ambient-light brightness

sensor, 24

Overview, 24

## J

Jump-starting, 208

**K**

## Keyless Ride

- Battery of the radio-operated

- key is empty or loss of the

- radio-operated key, 68

- Electronic immobiliser

- EWS, 68

- Fuel filler cap, unlocking, 156, 157

- Locking the steering lock, 66

- Switching off ignition, 67

- Switching on ignition, 67

- Warning indicators, 39, 40

- Keys, 64, 66

**L**

## Lighting

- Replacing LED light

- sources, 208

- Technical data, 256

- Warning indicators, 42

## Lights

- Adaptive headlight, 181

- automatic daytime riding light, 77

- Control, 21

- Headlight courtesy delay feature, 74

- Headlight flasher, operating, 74

- High-beam headlight, operating, 74

- Low-beam headlight, 74
- manual daytime riding light, 76

- Operating auxiliary headlights, 75

- Parking lights, 75

- Side light, 74

## Luggage

- Instructions for loading, 142

**M**

## Maintenance

- Maintenance schedule, 264

- Maintenance confirmations, 266

- Maintenance intervals, 263

## Media

- operating, 125

## Menu

- calling up, 108

## Mirrors

- adjusting, 130

- Adjusting mirror arm, 131

- Mobility services, 262

## Motorcycle

- care, 234

- cleaning, 234

- lashing, 159

- Laying up, 239

- parking, 153

- restoring to use, 240

## Multifunction switch

- Overview, left side, 21

- Overview, right side, 22, 23

**N**

## Navigation

- operating, 123

**O**

- On-board computer, 118

- On-board voltage, 40, 41, 42

- Operating focus change, 109

## 298 INDEX

### P

- Pairing, 115
- Parking, 153
- Parking light, 75
- Phone
  - operating, 126
- Power socket
  - Notes on use, 220
  - Position on the vehicle, 19
- Pre-Ride-Check, 146
- Pure Ride
  - Overview, 29

### R

- Radio-operated key
  - Warning indicators, 39, 40
- RDC
  - Engineering details, 175
  - Warning indicators, 50, 51, 52
- Rear-wheel stand
  - installing, 186
- Recycling, 261
- Refuelling, 155, 156
  - Fuel grade, 154
  - with Keyless Ride, 157
- Remote control
  - Replacing battery, 69
- Rev. counter, 24
  - Rev. counter, 112
- Rider's Manual
  - Position on the vehicle, 20
- Riding mode
  - adjusting, 82
  - Control, 22, 23
  - Engineering details, 171
  - Setting up PRO riding mode, 85
- Running in, 148

### S

- Safety instructions
  - for brakes, 151
  - for riding, 142
- Seats, 97
  - Lock, 18
- Service, 261
  - Reporting safety-relevant defects, 260
  - Service history, 262
  - Warning indicators, 60
- Service-due indicator, 60
- Shift assistant, 149
  - Engineering details, 177
  - Gear not trained, 59
  - Riding, 149
- Shift lever
  - Adjusting peg, 133
- Shift light, 91
  - adjusting, 91
  - Overview, 149
  - switching on/off, 91
- ShiftCam, 180
  - Engineering details, 180
- Shifting gear
  - Recommendation to upshift, 113
  - Shift light, 150
- Silencer
  - Installing silencer, 204
  - Removing silencer, 203
- Spark plugs
  - Technical data, 255
- Speed Limit Info
  - Switching on or off, 111
- Speedometer, 24

- Spring preload
  - Adjuster, rear, 19
  - adjusting, 136
- Starting, 145
  - Control, 22, 23
- Status line, top
  - adjusting, 110, 111
- Steering lock
  - Locking, 64

## T

- Technical data
  - Anti-theft alarm, 256
  - Battery, 255
  - Brakes, 253
  - Chassis and suspension, 252
  - Clutch, 251
  - Dimensions, 256
  - Electrical system, 255
  - Engine, 250
  - Engine oil, 250
  - Final drive, 252
  - Frame, 252
  - Fuel, 249
  - Lighting, 256
  - Spark plugs, 255
  - Transmission, 251
  - Weights, 257
  - Wheels and tyres, 254
- TFT display, 24
  - Control, 21
  - operating, 108, 109, 110
  - Overview, 29, 30
  - Selecting display, 105
- Toolkit
  - Position on the vehicle, 20
- Topcase
  - operating, 224
- Torques, 246

- Traction control, 168
  - DTC, 168
- Transmission
  - Technical data, 251
- Troubleshooting chart, 244
- Turn indicators
  - Control, 21
  - Control, right, 22, 23
- Type plate
  - Position on the vehicle, 19
- Tyre pressure monitoring RDC
  - Display, 49
- Tyres
  - Checking tread depth, 194, 195
  - Checking tyre pressure, 194
  - Pressures, 255
  - Running in, 149
  - Table of tyre pressures, 20
  - Technical data, 254

## U

- USB charging socket
  - Position on the vehicle, 18

## V

- Value
  - Display, 31
- Vehicle Identification Number
  - Position on the vehicle, 19

## W

- Warning indicator lights
  - ABS, 54, 55, 56
  - Anti-theft alarm, 44
  - Bulb faulty, 42
  - DTC, 56, 57
  - DWA, 43, 44
  - Electrical machine control unit, 47, 48

## 300 INDEX

- Electrical machine temperature, 45, 46
- Emergency call, 53
- Engine, 47
- Engine electronics, 47
- Engine oil level, 45
- Fuel reserve, 58
- Gear not trained, 59
- Hill Start Control, 58, 59
- Keyless Ride, 39, 40
- Light control failed, 43
- Mode of presentation, 31
- My vehicle, 118
- On-board voltage, 40, 41, 42
- Outside temperature warning, 39
- RDC, 50, 51, 52
- Service, 60
- Side stand, 54
- Warning light, drive malfunction, 47
- Warning light, drive malfunction, 47
- Warning lights, 24
  - Overview, 28
- Warnings, overview, 33
- Weights
  - Payload table, 20
  - Technical data, 257
- Wheels
  - Change of size, 196
  - Check the spokes, 196
  - Checking rims, 195
  - Installing front wheel, 198
  - Installing rear wheel, 202
  - Removing front wheel, 196
  - Technical data, 254

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2022 Bayerische Motoren  
Werke Aktiengesellschaft  
80788 Munich, Germany

Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Original rider's manual, printed in Germany.

## Important data for refuelling:

### Fuel

|                        |                                                                                                                                                                                                                                                                                        |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Recommended fuel grade |  Premium unleaded (maximum 15 % ethanol, E15)<br> 95 ROZ/RON<br>90 AKI                                               |
| Alternative fuel grade |  Regular unleaded (power- and consumption-related restrictions) (maximum 15 % ethanol, E15)<br> 91 ROZ/RON<br>87 AKI |
| Usable fuel capacity   | approx. 18 l                                                                                                                                                                                                                                                                           |
| Reserve fuel           | approx. 4 l                                                                                                                                                                                                                                                                            |
| <b>Tyre pressures</b>  |                                                                                                                                                                                                                                                                                        |
| Tyre pressure, front   | 2.5 bar, with cold tyre; one-up and two-up riding                                                                                                                                                                                                                                      |
| Tyre pressure, rear    | 2.9 bar, with cold tyre; one-up and two-up riding                                                                                                                                                                                                                                      |

For further information on all aspects of your vehicle, visit: **[bmw-motorrad.com](https://bmw-motorrad.com)**

