



**BMW
MOTORRAD**

RIDER'S MANUAL

S 1000 RR



MAKE LIFE A RIDE

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

YOUR BMW.

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About this rider's manual

Read this rider's manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features.

In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

If the time comes to sell your BMW, please remember to hand over this rider's manual to the new owner. It is an important part of the vehicle.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 GENERAL INSTRUCTIONS	2	03 STATUS INDICATORS	26
Quick & easy reference	4	Indicator and warning lights	28
Abbreviations and symbols	4	TFT display in Pure Ride view	29
Equipment	5	TFT display in Menu view	30
Technical data	5	Warning indicators	31
Currency	6		
Additional sources of information	6	04 OPERATION	60
Certificates and operating licences	6	Ignition switch/steering lock	62
Data memory	6	Emergency-off switch (kill switch)	63
Intelligent emergency call system	11	Intelligent emergency call	64
02 GENERAL VIEWS	16	Lighting	66
General view, left side	18	Dynamic Traction Control (DTC)	69
General view, right side	20	Riding mode	70
Under the rider's seat	21	Dynamic Damping Control (DDC)	72
Multifunction switch, left	22	Cruise control	73
Multifunction switch, right	23	Hill Start Control	76
Multifunction switch, right	24	Shift light	77
Instrument cluster	25	Anti-theft alarm (DWA)	78
		Tyre pressure monitoring (RDC)	80
		Heated grips	80
		Front and rear seats	81

05 TFT DISPLAY	84	Brakes	139
General notes	86	Parking your motorcycle	141
Principle	87	Refuelling	142
Pure Ride view	93	Securing motorcycle for transportation	144
General settings	94		
Bluetooth	96		
My vehicle	99		
On-board computer	102	08 ON THE RACE	146
Navigation	102	TRACK	
Media	105	Status indicators for racing	148
Telephone	106	LAPTIMER	151
Display software version	106	RACE PRO riding modes	152
Display licence information	107	Launch Control	154
		Pit Lane Limiter	155
		DTC	156
06 ADJUSTMENT	108	Chassis and suspension settings for racing	158
Mirrors	110	Mirrors	159
Headlight	110	Number plate carrier	163
Brakes	110	M Cover Kit	166
Clutch	111	Switching off ABS when riding on the race track	168
Footrest system	112	Deactivating intelligent emergency call when riding on the race track	169
Steering	114	Gearshift-pattern reverser	173
Spring preload	115	Data recording and 2D software	174
Damping	118		
Swinging arm	121		
Riding height	125		
DDC calibration	126		
07 RIDING	128		
Safety information	130		
Regular check	133		
Starting	134		
Running in	137		
Shifting gear	138		

09 ENGINEERING DETAILS	176	Jump-starting	227
General notes	178	Battery	229
Antilock Brake System (ABS)	178	Fuses	232
Dynamic Damping Control (DDC)	182	Diagnostic connector	233
Dynamic Traction Control (DTC)	183		
Dynamic engine brake control (MSR)	185	11 ACCESSORIES	236
Riding mode	185	General notes	238
Dynamic Brake Control	189	Connector for optional accessories	238
Tyre pressure control (RDC)	190	USB charging socket	240
Gear Shift Assistant	191		
Hill Start Control (HSC)	193	12 CARE	242
		Care products	244
10 MAINTENANCE	196	Washing the vehicle	244
General notes	198	Cleaning easily damaged components	246
Toolkit	199	Care of paintwork	247
Front-wheel stand	200	Paint preservation	247
Rear-wheel stand	200	Laying up motorcycle	247
Engine oil	201	Restoring motorcycle to use	248
Brake system	203		
Clutch	207	13 TECHNICAL DATA	250
Coolant	208	Troubleshooting chart	252
Tyres	210	Threaded fasteners	254
Wheel rims	211	Fuel	258
Wheels	211	Engine oil	259
Chain	220	Coolant	259
Lighting	223	Engine	259
Trim panel components	223	Clutch	260
		Transmission	260
		Final drive	260
		Frame	261

Chassis and suspension	261
Brakes	262
Wheels and tyres	263
Electrical system	264
Anti-theft alarm	265
Dimensions	265
Weights	265
Performance figures	266

14 SERVICE	268
-------------------	------------

Reporting safety-relevant defects	270
Recycling	271
BMW Motorrad	
Service	271
BMW Motorrad	
Service history	272
BMW Motorrad mobility services	272
Maintenance work	272
Maintenance schedule	274
BMW Motorrad running-in check	275
Maintenance confirmations	276
Service confirmations	288

APPENDIX	290
Declaration of Conformity	291
Certificate for electronic immobiliser	294
Certificate for tyre pressure control (Reifendruck-Control, RDC)	297
Certificate for TFT instrument cluster	298

INDEX	302
--------------	------------

GENERAL INSTRUCTIONS

01


QUICK & EASY REFERENCE	4
ABBREVIATIONS AND SYMBOLS	4
EQUIPMENT	5
TECHNICAL DATA	5
CURRENCY	6
ADDITIONAL SOURCES OF INFORMATION	6
CERTIFICATES AND OPERATING LICENCES	6
DATA MEMORY	6
INTELLIGENT EMERGENCY CALL SYSTEM	11


4 GENERAL INSTRUCTIONS


QUICK & EASY REFERENCE


An important aspect of this rider's manual is that it can be used for quick and easy reference. Consulting the extensive index at the end of this rider's manual is the fastest way to find information on a particular topic or item. To first read an overview of your vehicle, please go to Chapter 2. All maintenance and servicing work on the vehicle is documented in the "Service" section. The record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims.


ABBREVIATIONS AND SYMBOLS



 **CAUTION** Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

 **WARNING** Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

 **DANGER** High-risk hazard. Non-avoidance leads to fatal or severe injury.

 **ATTENTION** Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

 Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.

- Instruction.
- » Result of an activity.
- ➡ Reference to a page with more detailed information.
- ◁ Indicates the end of a passage relating to specific accessories or items of equipment.
-  Tightening torque.
-  Technical data.
- NV National-market version.

OE	Optional equipment. The vehicles are assembled complete with all the BMW Motorrad optional equipment originally ordered.
OA	Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
ABS	Anti-lock brake system.
DDC	Dynamic Damping Control.
DTC	Dynamic Traction Control.
DWA	Anti-theft alarm.
EWS	Electronic immobiliser.
RDC	Tyre pressure monitoring.

EQUIPMENT

When you ordered your BMW Motorrad, you chose various items of custom equipment. This rider's manual describes optional equipment (OE) and selected optional accessories (OA) provided by BMW. This explains why the manual may also contain descriptions of equipment that you might not have selected. Please note, too, that on account of country-specific differences, your motorcycle might not be exactly as illustrated.

If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

TECHNICAL DATA

All dimensions, weights and power ratings stated in the rider's manual are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e. V. (DIN).

Technical data and specifications in this rider's manual are guide values. The vehicle-specific data may deviate from these, for example as a result

6 GENERAL INSTRUCTIONS

of selected optional equipment, the national-market version or country-specific measuring procedures. Detailed values can be taken from the vehicle registration documents, or can be obtained from your authorised BMW Motorrad retailer or another qualified service partner or specialist workshop. The specifications in the vehicle documents always have priority over the information provided in this rider's manual.

CURRENCY

The high safety and quality standards of BMW motorcycles are maintained by constant development work on designs, equipment and accessories. Because of this, your vehicle may differ from the information supplied in the rider's manual. Nor can BMW Motorrad entirely rule out errors and omissions. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in these operating instructions.

Up-to-date information is available at

bmw-motorrad.com/service.

ADDITIONAL SOURCES OF INFORMATION

Authorised BMW Motorrad retailer

Your authorised BMW Motorrad retailer will be happy to answer any questions you may have.

Internet

The rider's manual for your vehicle, operating and installation instructions for accessories and general information about BMW Motorrad, in relation to technology, for example, are available for download from **bmw-motorrad.com/manuals**.

CERTIFICATES AND OPERATING LICENCES

The certificates for the vehicle and the official operating licences for accessories can be downloaded from **bmw-motorrad.com/certification**.

DATA MEMORY

General

Control units are installed in the vehicle. Control units process data that they receive, for example, from vehicle sensors, or that they generate themselves or exchange between

each other. Some control units are required for the vehicle to function safely or provide assistance during riding, for example assistance systems. In addition, control units enable comfort or infotainment functions.

Information on data that has been stored or exchanged can be obtained from the manufacturer of the vehicle, for example via a separate booklet.

Personal reference

Each vehicle is identified with a clear vehicle identification number. Depending on the country, the vehicle identification number, the number plate and the corresponding authorities can be referenced to ascertain the vehicle owner. There are also other ways to use data obtained from the vehicle to trace the rider or vehicle owner, for example using the Connected-Drive user account.

Data protection rights

In accordance with applicable data protection laws, vehicle users have certain rights in relation to the manufacturer of the vehicle or in relation to companies which collect or process personal data.

Vehicle users have the right to obtain full information at no cost from persons or entities storing personal data of the vehicle user.

These entities may include:

- Manufacturer of the vehicle
- Qualified service partners
- Specialist workshops
- Service providers

Vehicle users have the right to request information on what personal data has been stored, for what purpose the data is used, and where the data comes from. To obtain this information, proof of ownership or use is required.

The right to information also includes information about data that has been shared with other companies or entities. The website of the vehicle manufacturer contains the applicable data protection information. This data protection information includes information on the right to have data deleted or corrected. The manufacturer of the vehicle also provides their contact details and those of the data protection officer on their website.

8 GENERAL INSTRUCTIONS

The vehicle owner can also request that a BMW Motorrad retailer or another qualified service partner or specialist workshop read out the data that is stored in the vehicle for a charge.

The vehicle data is read out using the legally prescribed socket for on-board diagnosis (OBD) in the vehicle.

Legal requirements for the disclosure of data

As part of its legal responsibilities, the manufacturer of the vehicle is obligated to make its stored data available to the relevant authorities. This data is provided in the required scope in individual cases, for example to clarify a criminal offence. In the context of applicable laws, public agencies are entitled in individual cases to read out data from the vehicle themselves.

Operating data in the vehicle

Control units process data to operate the vehicle.

This includes, for example:

- Status reports of the vehicle and its individual components, for example wheel speed, wheel circumferential velocity, deceleration
- Environmental conditions, for example temperature

The data is only processed in the vehicle itself and is generally non-permanent. The data is not stored beyond the operating period.

Electronic components, for example control units, contain components for storing technical information. Information can be temporarily or permanently stored on the vehicle condition, component loads, incidents or errors.

This information is generally used to document the condition of a component, a module, a system or the surrounding area, for example:

- Operating conditions of system components, for example filling levels, tyre pressure
- Malfunctions and faults in important system components, for example light and brakes
- Response of the vehicle in special riding situations, for example engagement of the driving dynamics systems

- Information on incidents resulting in damage to the vehicle

The data is necessary for the provision of control unit functions. Furthermore, the data is used to detect and rectify malfunctions and to enable the vehicle manufacturer to optimise vehicle functions.

The vast majority of this data is non-permanent and is only processed in the vehicle itself. Only a small amount of the data is stored in incident or fault memories as required by events.

If services are accessed, for example repairs, service processes, warranty cases and quality assurance measures, this technical information can be read out of the vehicle together with the vehicle identification number.

The information can be read out by a BMW Motorrad retailer or another qualified service partner or specialist workshop. The legally stipulated socket for on-board diagnosis (OBD) in the vehicle is used to read out the data. The data is obtained, processed and used by the

relevant parts of the retailer network. The data is used to document the technical conditions of the vehicle, to help with error localization, to comply with warranty obligations and to improve quality.

In addition, the manufacturer has various product monitoring obligations arising from product liability legislation. To meet these obligations, the vehicle manufacturer requires technical data from the vehicle. The data from the vehicle can also be used to check warranty claims from the customer. Error and incident memories in the vehicle can be reset during servicing or repair work by a BMW Motorrad retailer or another qualified service partner or specialist workshop.

Data input and data transfer in the vehicle

General

Depending on the equipment, comfort and customised settings can be stored in the vehicle and can be changed or reset at any time.

If required, data can be entered in the entertainment and communication system of the

10 GENERAL INSTRUCTIONS

vehicle, for example using a smartphone.

Depending on the individual equipment, this includes:

- Multimedia data, such as music for playback
- Contacts data for use in connection with a communication system or an integrated navigation system
- Entered destinations
- Data on the use of internet services. This data can be stored locally in the vehicle or is located on a device that is connected to the vehicle, for example smartphone, USB stick, MP3 player. If this data is stored in the vehicle, the data can be deleted at any time.

This data is transferred to third parties only if personally requested within the context of using online services. This depends on the selected settings when using the services.

Incorporation of mobile devices

Depending on the equipment, mobile devices connected to the vehicle, for example smartphones, can be controlled using the operating elements of the vehicle.

The image and sound of the mobile device can then be output via the multimedia system.

At the same time, specific information is transferred to the mobile device. Depending on the type of integration, this includes, for example, position data and additional general vehicle information. This enables optimal use of the selected apps, for example navigation or music playback.

The type of additional data processing is determined by the provider of the respective app. The scope of the possible settings depends on the corresponding app and the operating system of the mobile device.

Services

General

If the vehicle has a wireless connection, this enables the exchange of data between the vehicle and other systems. The wireless connection is enabled by the vehicle's own transceiver unit or using personally integrated mobile devices, for example smartphones. Online functions can be accessed through this wireless connection. These include online services and

apps that are provided by the vehicle manufacturer or by other providers.

Services of the vehicle manufacturer

For online services of the vehicle manufacturer, the individual functions are described at suitable points, for example rider's manual, website of the manufacturer. At the same time, information is also provided on the relevant data protection law. Personal data may be used to provide online services. Data is exchanged using a secure connection, for example with the IT systems provided by the vehicle manufacturer.

Obtaining, processing and using personal data outside of the normal provision of services requires legal permission, contractual agreement or consent. It is also possible to have the entire data connection activated or deactivated. Statutory functions are excluded from this.

Services from other providers

When using online services from other providers, these services are subject to the responsibility and the data protection and operating conditions of the individual provider. The vehicle manufacturer has no influence on the content that is exchanged in this instance. Information on the type, scope and purpose of the data capture and use of personal data as part of the services of third parties can be ascertained from the individual provider.

INTELLIGENT EMERGENCY CALL SYSTEM

—with intelligent emergency call^{OE}

Principle

The intelligent emergency call system enables manual or automatic emergency calls, for example in the event of an accident.

The emergency calls are received by an emergency call centre that is commissioned by the vehicle manufacturer.

For information on operating the intelligent emergency call

12 GENERAL INSTRUCTIONS

system and its functions see (▮▮▮▮ 64).

Legal basis

Processing of personal data using the intelligent emergency call system is in line with the following regulations:

–Protection of personal data:

Directive 95/46/EC of the European Parliament and of the Council.

–Protection of personal data:

Directive 2002/58/EC of the European Parliament and of the Council.

The legal basis for the activation and function of the intelligent emergency call system is the concluded Connected-Ride contract for this function, as well as the corresponding laws, ordinances and directives of the European Parliament and of the European Council.

The relevant ordinances and directives regulate the protection of natural persons during the processing of personal data.

The processing of personal data by the intelligent emergency call system satisfies the European directives for the protection of personal data.

The intelligent emergency call system processes personal data only with the agreement of the vehicle owner.

The intelligent emergency call system and other services with additional benefits can process personal data only with the express permission of the person affected by the data processing, for example the vehicle owner.

SIM card

The intelligent emergency call system operates via the mobile phone network using the SIM card installed in the vehicle. The SIM card is permanently logged into the mobile phone network to enable rapid connection setup. Data is sent to the vehicle manufacturer in the event of an emergency.

Improving quality

The data that is transferred in an emergency is also used by the manufacturer of the vehicle to improve product and service quality.

Location determination

The position of the vehicle can be determined exclusively by the mobile phone network provider based on the mobile

phone site locations. It is not possible for the provider to trace a connection between the vehicle's VIN and the phone number of the installed SIM card. Only the manufacturer of the vehicle can link a VIN and the phone number of the SIM card installed in a particular vehicle.

Log data of emergency calls

The log data of emergency calls is stored in a memory of the vehicle. The oldest log data is regularly deleted. The log data includes, for example, information on when and where an emergency call was made. In exceptional cases, the log data can be read out of the vehicle memory. As a rule, log data is only read out following a court order, and this is only possible if the corresponding devices are connected directly to the vehicle.

Automatic emergency call

The system is designed so that, following a sufficiently serious accident, which is detected by sensors in the vehicle, an emergency call is automatically activated.

Sent information

When making an emergency call using the intelligent emergency call system, the system forwards the same information to the designated emergency call centre as is forwarded to the public emergency operations centre by the statutory emergency call system eCall. In addition, the intelligent emergency call system sends the following additional information to an emergency call centre commissioned by the vehicle manufacturer and, if required, to the emergency services:

- Accident data, for example the direction of impact detected by the vehicle sensors, to assist the emergency services response.
- Contact details, for example the phone number of the installed SIM card and the phone number of the rider, if available, to enable rapid contact with those involved in the accident if required.

Data storage

The data for an activated emergency call is stored in the vehicle. The data contains information on the emergency

14 GENERAL INSTRUCTIONS

call, for example the location and time of the emergency call.

The voice recordings of the emergency call are stored at the emergency call centre.

The voice recordings of the customer are stored for 24 hours in case details of the emergency call need to be analysed. After this, the voice recordings are deleted. The voice recordings of the employee of the emergency call centre are stored for 24 hours for quality assurance purposes.

Information on personal data

The data that is processed as part of the intelligent emergency call is processed exclusively to carry out the emergency call. As part of its statutory obligation, the manufacturer of the vehicle provides information about the data that it has processed and any data that it still has stored.


GENERAL VIEWS

02

GENERAL VIEW, LEFT SIDE	18
GENERAL VIEW, RIGHT SIDE	20
UNDER THE RIDER'S SEAT	21
MULTIFUNCTION SWITCH, LEFT	22
MULTIFUNCTION SWITCH, RIGHT	23
MULTIFUNCTION SWITCH, RIGHT	24
INSTRUMENT CLUSTER	25

18 GENERAL VIEWS

GENERAL VIEW, LEFT SIDE

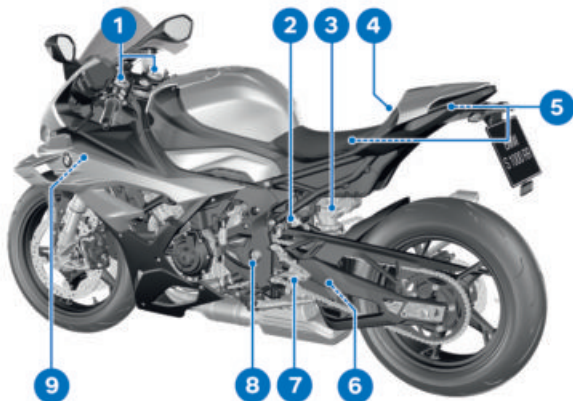


- | | |
|---|---|
| <p>1 Rebound-stage damping, front wheel (➡ 119)
Spring preload at front wheel (➡ 115)
Compression-stage damping, front wheel (➡ 119)</p> <p>2 Adjusting riding height at the traction strut (➡ 125)</p> | <p>3 Compression-stage damping, rear wheel (➡ 120)
Spring preload at rear wheel (➡ 116)
—with Dynamic Damping Control (DDC)^{OE}
Adjust the spring preload for the rear wheel. (➡ 117)</p> <p>4 Lock for tail-hump cover (➡ 81)</p> <p>5 Tyre pressures table
Payload table
Chain settings</p> <p>6 Rebound-stage damping, rear wheel (➡ 121)</p> |
|---|---|


- 7 rider footrest
- 8 Adjusting swinging arm
pivot point (111 122)
- 9 Steering damper
(111 114)

20 GENERAL VIEWS

GENERAL VIEW, RIGHT SIDE

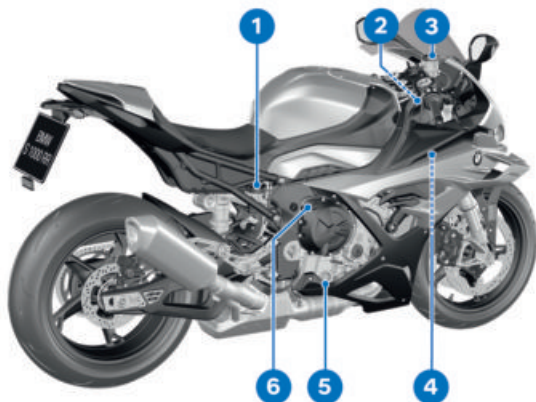

- 1** Brake-fluid reservoir, rear
(➡ 206)
- 2** Vehicle identification
number (on steering-head
bearing)
Type plate (on steering-
head bearing)
- 3** Brake-fluid reservoir, front
(➡ 205)
- 4** Coolant expansion tank
(➡ 208)
- 5** Engine oil level indicator
(➡ 201)
- 6** Oil filler opening
(➡ 202)

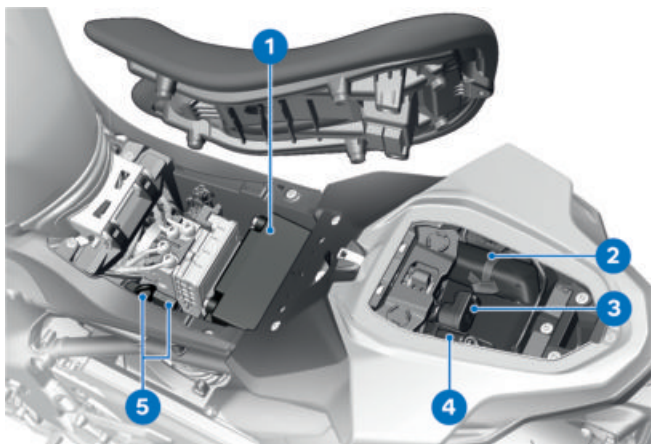UNDER THE RIDER'S SEAT

- 1** Battery (➡ 229)
- 2** Toolkit (➡ 199)
- 3** USB charging socket
(➡ 240)
- 4** Diagnostic connector
(➡ 233)
- 5** Fuses (➡ 232)

22 GENERAL VIEWS

MULTIFUNCTION SWITCH, LEFT



- 1 DTC (➡ 69)
- 2 High-beam headlight and headlight flasher (➡ 67)
- 3 Cruise control (➡ 74)
- 4 Hazard warning lights (➡ 68)
- 5 Adapt DTC (➡ 157)
- 6 Turn indicators (➡ 68)
- 7 Horn
- 8 Multi-Controller (➡ 87)
- 9 MENU rocker button (➡ 87)

MULTIFUNCTION SWITCH, RIGHT

—with intelligent emergency call^{OE}




- 1 Heated grips (➡ 80)
- 2 Riding mode (➡ 70)
- 3 Emergency-off switch (kill switch) (➡ 63)
- 4 Starter button (➡ 134)
Race start with Launch Control (➡ 154)
- 5 SOS button
Intelligent emergency call (➡ 64)

24 GENERAL VIEWS


MULTIFUNCTION SWITCH, RIGHT

—without intelligent emergency call^{OE}

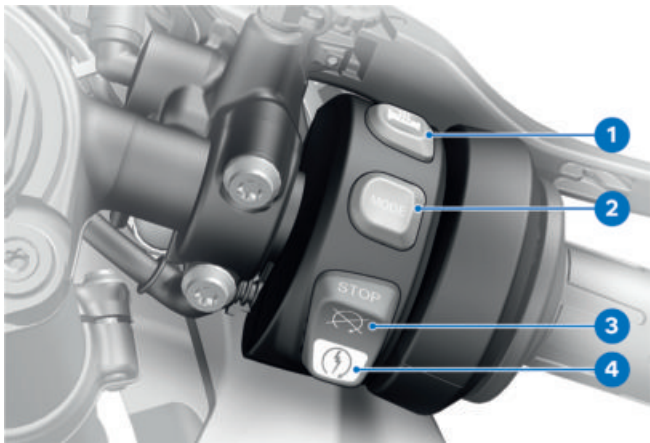

- 1** Heated grips (➡ 80)
- 2** Riding mode (➡ 70)
- 3** Emergency-off switch (kill switch) (➡ 63)
- 4** Starter button (➡ 134)
Race start with Launch Control (➡ 154)

INSTRUMENT CLUSTER

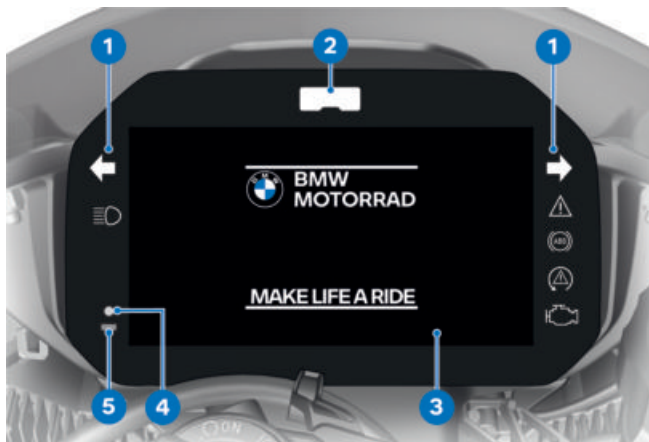

- 1 Indicator and warning lights (➡ 28)
- 2 Shift light (➡ 138)
- 3 TFT display (➡ 29)
- 4 Indicator light DWA (➡ 78)
- 5 Photosensor (for adapting the brightness of the instrument lighting)


STATUS INDICATORS

03

INDICATOR AND WARNING LIGHTS	28
TFT DISPLAY IN PURE RIDE VIEW	29
TFT DISPLAY IN MENU VIEW	30
WARNING INDICATORS	31


28 STATUS INDICATORS

INDICATOR AND WARNING LIGHTS

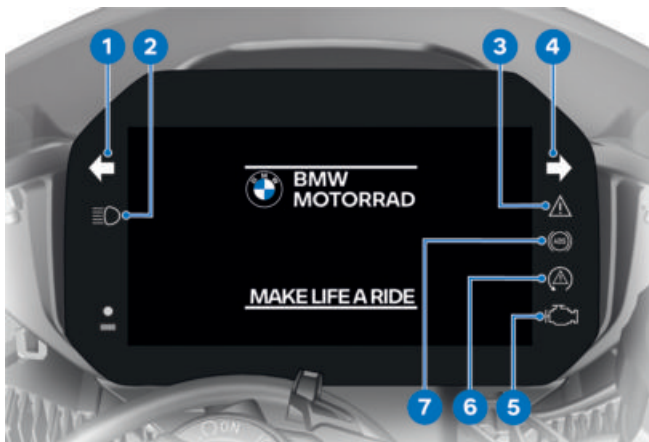

- 1 Turn indicators, left
(➡ 68)
- 2 High-beam headlight
(➡ 67)
- 3 General warning light
(➡ 31)
- 4 Turn indicators, right
(➡ 68)
- 5 Warning light, drive mal-
function (➡ 44)
- 6 DTC (➡ 53)
- 7 ABS (➡ 168)


TFT DISPLAY IN PURE RIDE VIEW

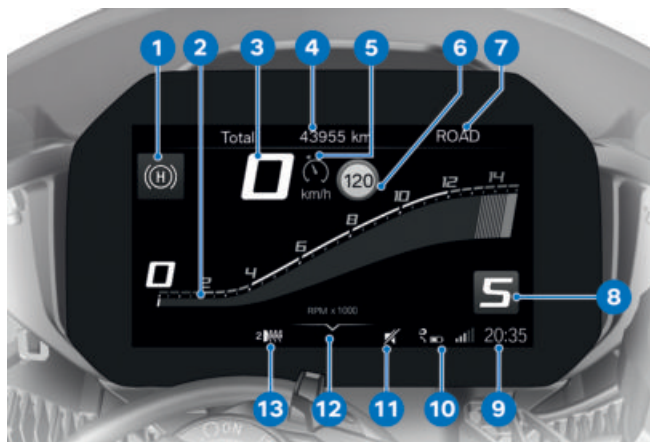

- 1 Hill Start Control (➡ 57)
- 2 Rev. counter (➡ 93)
- 3 Speedometer
- 4 Status line, top (➡ 91)
- 5 Cruise control (➡ 74)
- 6 Speed Limit Info (➡ 93)
DTC (➡ 157)
- 7 Riding mode (➡ 70)
- 8 Gear indicator
- 9 Clock (➡ 95)
- 10 Connection status
(➡ 97)
- 11 Muting (➡ 94)
- 12 Operating help
- 13 Heated grips (➡ 80)

30 STATUS INDICATORS

TFT DISPLAY IN MENU VIEW

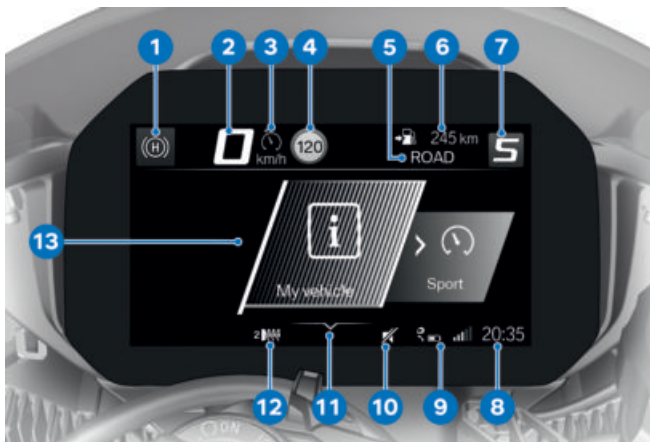

- 1 Hill Start Control (➡ 57)
- 2 Speedometer
- 3 Cruise control (➡ 74)
- 4 Speed Limit Info (➡ 93)
DTC (➡ 157)
- 5 Riding mode (➡ 70)
- 6 Status line, top (➡ 91)
- 7 Gear indicator
- 8 Clock (➡ 95)
- 9 Connection status
(➡ 97)
- 10 Muting (➡ 94)
- 11 Operating help
- 12 Heated grips (➡ 80)
- 13 Menu section


WARNING INDICATORS

Mode of presentation

Warnings are indicated by the corresponding warning lights. Warnings are indicated by the 'General' warning light showing in combination with a dialogue in the TFT display. The 'General' warning light shows yellow or red, depending on the urgency of the warning.




The status of the 'General' warning light matches the most urgent warning. The possible warnings are listed on the next pages.

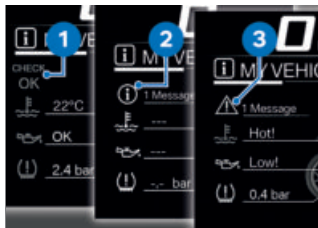

Check Control display

The messages differ in how they show on the display. Different colours and symbols are used depending on priority:

- Green CHECK OK **1**: No message, optimum values.
- White circle with small "i" **2**: Information.
- Yellow warning triangle **3**: Warning, value not ideal.
- Red warning triangle **3**: Warning, value critical

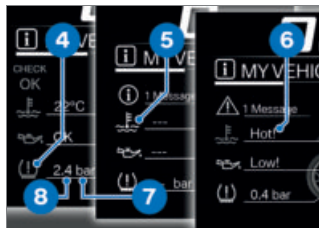

Values display


Symbols **4** differ in how they show on the display. The colours used differ and reflect the urgency of the message. Along with numerical values **8** with units **7**, texts **6** are displayed as well:


Colour of the symbol


- Green: (OK) Current value is ideal.
- Blue: (Cold!) Current temperature is too low.
- Yellow: (Low!/High!) Current value is too low or too high.

32 STATUS INDICATORS

- Red: (Hot!/High!) Current temperature or value is too high.
- White: (---) No valid value available. Dashes **5** are displayed instead of a numerical value.

 The assessment of some values is only possible from a certain journey duration or speed. If a measured value is still not being displayed because the conditions for measurement have not been met, dashes are displayed instead as a placeholder. If there are no valid measured values, there will be no assessment in the form of a coloured symbol.



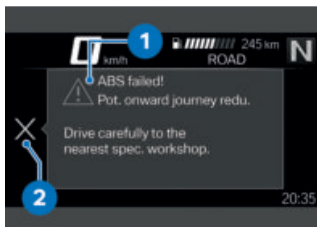

















- If there are two or more Check Control messages of equal priority, the messages keep changing in the order of their occurrence until they are acknowledged.
- If symbol **2** is actively displayed, it can be acknowledged by tilting the Multi-Controller to the left.
- Check Control messages are attached dynamically to the pages as additional tabs in the *My vehicle* menu ( 89). The message can be called up again as long as the fault persists.























Check Control dialogue





















Messages are output as Check Control dialogues **1**.

Warnings, overview




















Indicator and warning lights	Display text	Meaning
	 is displayed in yellow.	Voltage of the vehicle electrical system too low (▮▮▮ 39)
 lights up yellow.	 Vehicle voltage low.	Voltage of the vehicle electrical system critical (▮▮▮ 39)
 flashes yellow.	 is displayed in yellow.	Charging voltage critical (▮▮▮ 40)
	 Vehicle voltage critical!	
 lights up yellow.	 Battery voltage critical!	Bulb faulty (▮▮▮ 40)
 flashes yellow.	 The faulty bulb is displayed.	
 lights up yellow.	 The faulty bulb is displayed.	Light control failed (▮▮▮ 41)
	 Light control failure!	
	 Alarm system batt. capacity weak.	Anti-theft alarm battery weak (▮▮▮ 42)
	 Alarm system battery empty.	Anti-theft alarm battery flat (▮▮▮ 42)
	 Alarm system failure.	DWA failed (▮▮▮ 42)
 lights up yellow.	 Engine temp. high!	Engine temperature high (▮▮▮ 42)
 lights up red.	 Engine overheating!	Engine overheated (▮▮▮ 43)













34 STATUS INDICATORS

Indicator and warning lights	Display text	Meaning
 lights up.	 Engine!	Drive malfunction (►► 44)
 flashes red.	 Serious fault in the engine control!	Serious drive malfunction (►► 44)
 flashes.		
 lights up yellow.	 No communication with engine control.	Engine control failed (►► 44)
 lights up.		
 lights up yellow.	 Fault in the engine control.	Engine in emergency-operation mode (►► 45)
 flashes red.	 Serious fault in the engine control!	Serious fault in engine control (►► 45)
 lights up yellow.	 is displayed in yellow.	Tyre pressure close to limit of permitted tolerance (►► 47)
	 Tyre pressure does not match setpoint.	
 flashes red.	 is displayed in red.	Tyre pressure outside permitted tolerance (►► 47)
	 Tyre pressure does not match setpoint.	
	 Tyre press. control. Loss of pressure.	
	 "---"	Transmission fault (►► 48)



Indicator and warning lights	Display text	Meaning
 lights up yellow.	 "---"	Sensor faulty or system fault (➡ 49)
 lights up yellow.	 Tyre pressure check failure!	Tyre pressure monitoring (RDC) failed (➡ 49)
 lights up yellow.	 RDC sensor battery weak.	Battery for tyre pressure sensor weak (➡ 49)
	 Drop sensor faulty.	Drop sensor defective (➡ 50)
	 Cannot start engine.	Motorcycle dropped (➡ 50)
 lights up yellow.	 Emergency call system restricted.	Emergency call function restricted (➡ 50)
 lights up yellow.	 Emergency call system error.	Emergency call function failed (➡ 51)
 lights up yellow.	 Side stand monitoring faulty.	Side stand monitoring is faulty (➡ 51)
 flashes.		ABS self-diagnosis not completed (➡ 51)
 lights up.	 Off!	ABS deactivated (➡ 52)
	 ABS deactivated.	
 lights up yellow.	 Limited ABS availability!	ABS fault (➡ 52)

36 STATUS INDICATORS

Indicator and warning lights	Display text	Meaning
 lights up.		ABS fault (→ 52)
 lights up yellow.	 ABS failure!	ABS failed (→ 52)
 lights up.		
 lights up yellow.	 ABS Pro failure!	ABS Pro failed (→ 53)
 lights up.		
 flashes irregularly.		ABS control at front wheel only (→ 53)
 quick-flashes.		DTC intervention (→ 53)
 slow-flashes.		DTC self-diagnosis not completed (→ 54)
 lights up.	 Off!	DTC switched off (→ 54)
	 Traction control deactivated.	
 lights up yellow.	 Traction control failure!	DTC fault (→ 54)
 lights up.		
 lights up yellow.	 Traction control limited!	DTC restricted (→ 55)
 lights up.		

Indicator and warning lights	Display text	Meaning
 lights up yellow.	 Slide Control and Brake Slide Assist failed. Have it checked by a specialist workshop.	DTC Slide Control and Brake Slide Assist not available (➡ 56)
 lights up yellow.	 Spring strut adjustment faulty!	DDC fault (➡ 56)
	 Tank reserve level reached.	Fuel down to reserve (➡ 56)
	 shows green.	Hill Start Control active (➡ 57)
	 flashes yellow.	Hill Start Control automatically deactivated (➡ 57)
	 is displayed.	Hill Start Control cannot be activated (➡ 57)
	HSC not available. Engine not running.	
	 The gear indicator flashes.	Gear not trained (➡ 58)
 flashes green.		Hazard warning lights system is switched on (➡ 58)
 flashes green.		
Shift light shows or flashes.	L-Con not available. Clutch too hot.	Launch Control not ready (➡ 58)
	 is displayed in white.	Service due (➡ 59)

38 STATUS INDICATORS

Indicator and warning lights	Display text	Meaning
	Service due!	Service due (▶ 59)
 lights up yellow.	 is displayed in yellow.	Service-due date has passed (▶ 59)
	Service over-due!	

Voltage of the vehicle electrical system too low



is displayed in yellow.



Vehicle voltage low. Switch off unnecessary consumers.

The voltage of the vehicle electrical system is too low. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:

- Consumers with high power consumption are in operation (such as heated body warmers), too many consumers are in operation at one time, or battery faulty.
- Switch off non-essential consumers or disconnect them from the vehicle's electrical system.
- If the fault persists or occurs without consumers connected, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Voltage of the vehicle electrical system critical



lights up yellow.



is displayed in yellow.



Vehicle voltage critical! Consumers were switched off. Check battery condition.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey.

The voltage of the vehicle electrical system is critical. If you continue to ride the motorcycle the on-board electronics will drain the battery.

Possible cause:

- Consumers with high power consumption are in operation (such as heated body warmers), too many consumers are in operation at one time, or battery faulty.
- Switch off non-essential consumers or disconnect them from the vehicle's electrical system.
- If the fault persists or occurs without consumers connected, have the fault rectified as quickly as possible by a specialist workshop, preferably an

40 STATUS INDICATORS

authorised BMW Motorrad re-tailer.

Charging voltage critical



flashes yellow.



is displayed in yellow.



Battery voltage critical! Accident risk. Stop driving.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey.

Battery is not being charged. If you continue to ride the motorcycle the on-board electronics will drain the battery.
Possible cause:

Alternator or alternator drive faulty, battery faulty or fuse has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad re-tailer.

Bulb faulty



lights up yellow.



The faulty bulb is displayed:



High beam faulty!



Front left turn indicator faulty! or. Front right turn indicator faulty!



Low-beam headlight faulty!



Front side light faulty!



Tail light faulty!



Brake light faulty!



Rear left turn indicator faulty! or. Rear right turn indicator faulty!



Number plate light faulty!

–Have it checked by a specialist workshop.



flashes yellow.



The faulty bulb is displayed:



Active headlight
faulty.



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

One or more light sources are faulty.

- Identify the faulty light source through a visual inspection.
- Have LED light sources completely replaced; consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

Plug connection disconnected.

- Identify disconnected plug connection.
- Connect disconnected plug connection.

Light control failed



lights up yellow.



Light control failure! Have it checked by a specialist workshop.



WARNING

Vehicle overlooked in traffic on account of failure of the vehicle lighting

Safety risk

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

The vehicle lighting has partially or completely failed.

Possible cause:


Light control has diagnosed a communication fault.


- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

42 STATUS INDICATORS

Anti-theft alarm battery weak

—with anti-theft alarm (DWA)^{OE}

 Alarm system batt. capacity weak. No restrictions. Make an appointment at a specialist workshop.

 This error message shows briefly only after the Pre-Ride-Check completes.


Possible cause:


The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Anti-theft alarm battery flat

—with anti-theft alarm (DWA)^{OE}

 Alarm system battery empty. No independent alarm. Make an appointment at a specialist workshop.

 This error message shows briefly only after the Pre-Ride-Check completes.


Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

DWA failed

—with anti-theft alarm (DWA)^{OE}

 Alarm system failure. Have it checked by a specialist workshop.


Possible cause:

The DWA control unit has diagnosed a communication fault.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » DWA can no longer be activated or deactivated.
- » False alarm possible.

Engine temperature high

 lights up yellow.

 Engine temp. high! Continue riding with restriction to allow cooling.

**ATTENTION****Riding with overheated engine**

Engine damage

- Compliance with the information set out below is essential.

Possible cause:

The coolant level is too low.

- Check the coolant level.

(208)

If the coolant level is too low:

- Allow the engine to cool down.
- Top up coolant (209).
- Have the cooling system checked by a specialist workshop, preferably by a BMW Motorrad partner.

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Engine overheated

lights up red.



Engine overheating!

Stop when it is safe to do so and switch off the engine.

**ATTENTION****Riding with overheated engine**

Engine damage

- Compliance with the information set out below is essential.

Possible cause:

The coolant level is too low.

- Check the coolant level.

(208)

If the coolant level is too low:

- Allow the engine to cool down.
- Top up coolant (209).
- Have the cooling system checked by a specialist workshop, preferably by a BMW Motorrad partner.

Possible cause:

Engine is overheated.

- Carefully bring the vehicle to a stop, switch off the engine and wait until the engine has cooled down.

44 STATUS INDICATORS

- If engine overheating is a frequent occurrence, have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Drive malfunction



lights up.



Engine! Have it checked by a specialist workshop.

Possible cause:

The engine control unit has diagnosed a fault that affects pollutant emissions and/or reduces power.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

Serious drive malfunction



flashes red.



flashes.



Serious fault in the engine control! Riding at mod. speed pos. Damage possible. Have checked by workshop.

Possible cause:

The engine control unit has diagnosed a fault that can lead to damage to the exhaust system.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

» It is possible to continue to ride but not recommended.

Engine control failed



lights up yellow.



lights up.




No communication with engine control. Multiple sys. affected. Ride carefully to the next specialist workshop.


Possible cause:

Communication with the engine control unit has failed.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Engine in emergency-operation mode

 lights up yellow.

 Fault in the engine control. Onward journey possible. Ride carefully to next specialist workshop.

WARNING

Unusual ride characteristics when engine running in emergency-operation mode

Risk of accident

- Avoid accelerating sharply and overtaking.


Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine power or the full range of engine rpm might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Serious fault in engine control

 flashes red.

 Serious fault in the engine control! Riding at mod. speed pos. Damage possible. Have checked by workshop.

WARNING

Engine damage when running in emergency-operation mode

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- It is possible to continue to ride but not recommended.
- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a spe-


46 STATUS INDICATORS

cialist workshop, preferably an authorised BMW Motorrad Retailer.

Tyre pressure

—with tyre pressure control (RDC)^{OE}

In addition to the MY VEHICLE menu screen and the Check Control messages, there is also the TYRE PRESSURE screen for showing the tyre pressures:

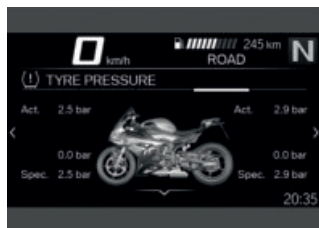

The values on the left are for the front wheel; those on the right are for the rear wheel. Actual and specified tyre pressures and the difference between them are displayed for each wheel.

Immediately after the ignition is switched on, only dashes are displayed. The sensors do not start transmitting tyre pressure signals until the first time the vehicle accelerates to more than the minimum speed stated below:



RDC sensor is not active

min 30 km/h (The RDC sensor does not send its signal to the vehicle until the vehicle has exceeded a minimum speed.)



The tyre pressures are shown in the TFT display as temperature compensated and always refer to the following tyre air temperature:

20 °C



If the tyre symbol appears as well, showing yellow or red, this is a warning. The pressure difference is highlighted with an exclamation point in the same colour.



If the value in question is close to the limit of the permissible tolerance range, the reading is accompanied by the 'General' warning light showing yellow.



The 'General' warning light flashes red if the tyre pressure registered by the sensor is outside the permissible tolerance range.

For further information about BMW Motorrad RDC, see the section entitled "Engineering details" (190).

Tyre pressure close to limit of permitted tolerance



lights up yellow.



is displayed in yellow.



Tyre pressure does not match setpoint. Check tyre pressure.

Possible cause:

Measured tyre pressure is close to the limit of permitted tolerance.

- Correct tyre pressure.
- Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details":

–with tyre pressure control (RDC) ^{OE}

» Temperature compensation (190) ◁

–with tyre pressure control (RDC) ^{OE}

» Pressure adaptation (191) ◁

» Find the correct tyre pressures in the following places:

- Back cover of the rider's manual
- Instrument cluster in the TYRE PRESSURE view
- Sign under the rider's seat

Tyre pressure outside permitted tolerance



flashes red.



is displayed in red.



Tyre pressure does not match setpoint. Stop immediately! Check tyre pressure.



Tyre press. control. Loss of pressure. Stop immediately! Check tyre pressure.



WARNING

Tyre pressure outside the permitted tolerance.

Risk of accident, degradation of the vehicle's driving characteristics.

- Adapt your style of riding accordingly.

48 STATUS INDICATORS

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.
- Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details":

–with tyre pressure control (RDC)^{OE}

» Temperature compensation (190)◁

–with tyre pressure control (RDC)^{OE}

» Pressure adaptation (191)◁

» Find the correct tyre pressures in the following places:

–Back cover of the rider's manual

–Instrument cluster in the TYRE PRESSURE view

–Sign under the rider's seat

- Have the tyre checked for damage by a specialist work-

shop, preferably an authorised BMW Motorrad retailer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

Transmission fault



"---"

Possible cause:

The vehicle has not reached the minimum speed (190).



RDC sensor is not active

min 30 km/h (The RDC sensor does not send its signal to the vehicle until the vehicle has exceeded a minimum speed.)

- Observe the RDC display at higher speeds.



Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.


Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

The radio link to the RDC sensors is faulty. Radio systems are located in the surrounding area which are interfering with the transmission between the RDC control unit and the sensors.


- Observe the RDC displays in other surrounding areas.


 Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Sensor faulty or system fault

 lights up yellow.

 "----"

Possible cause:

Wheels not equipped with RDC sensors have been fitted.


- Fit wheels and tyres equipped with RDC sensors.


Possible cause:

One or two RDC sensors have failed or there is a system fault.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Tyre pressure monitoring (RDC) failed

 lights up yellow.


 Tyre pressure check failure! Function limited. Have it checked by a specialist workshop.


Possible cause:

The tyre pressure control (RDC) control unit has diagnosed a communication fault.


- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » Tyre pressure warnings not available.

Battery for tyre pressure sensor weak

 lights up yellow.

 RDC sensor battery weak. Function limited. Have it checked by a specialist workshop.

50 STATUS INDICATORS


 This error message shows briefly only after the Pre-Ride-Check completes.

Possible cause:

The tyre pressure sensor battery no longer provides its full capacity. The tyre pressure monitoring function will be available for a limit time only.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Drop sensor defective


 Drop sensor faulty. Have it checked by a specialist workshop.

Possible cause:

The drop sensor is not available.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Motorcycle dropped

 Cannot start engine. Stand motorcycle upright. Switch ignition on/off. Start the engine.


Possible cause:


The drop sensor has detected a drop and has cut out the engine.

- Hold the vehicle upright and check it for damage.
- Switch the ignition off and then on again or switch the kill switch on and then off again.

Emergency call function restricted

—with intelligent emergency call^{OE}

 lights up yellow.

 Emergency call system restricted. If this occurs again, have the vehicle checked by a specialist workshop.

Possible cause:

The emergency call cannot be made automatically or via BMW.

- Observe the information on operating the intelligent emergency call from page (64) onwards.
- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Possible cause:

Plug connection disconnected.

- Connect disconnected plug connection. (170)

Emergency call function failed

—with intelligent emergency call^{OE}



lights up yellow.



Emergency call system error. Make an appointment at a specialist workshop.

Possible cause:

The control unit of the emergency call system has diagnosed a fault. The emergency call function has failed.

- Bear in mind that an emergency call cannot be made.
- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Possible cause:

Plug connection disconnected.

- Connect disconnected plug connection. (170)

Side stand monitoring is faulty



lights up yellow.



Side stand monitoring faulty. Onward journey possible. Engine will stop if stationary! Have checked by workshop.

Possible cause:



Side-stand switch or wiring damaged

The engine will switch off when speed drops below the minimum threshold. You cannot resume your journey.

min 5 km/h

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS self-diagnosis not completed



flashes.

Possible cause:



ABS self-diagnosis not completed

The ABS function is not available because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the ABS function

52 STATUS INDICATORS

is not available until self-diagnosis has completed.

ABS deactivated



lights up.



Off!



ABS deactivated.

Possible cause:

The rider has switched off the ABS system.

- Activate the ABS function.
(169)

ABS fault



lights up yellow.



lights up.



Limited ABS availability! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The partially integral function and the Dynamic Brake Control function have failed. The ABS function has limited availability.

- You can continue to ride.

Take note of the more detailed information on

certain situations that can lead to an ABS fault message (180).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

ABS failed



lights up yellow.



lights up.



ABS failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available.

- You can continue to ride.
Take note of the more detailed information on certain situations that can lead to an ABS fault message (180).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

ABS Pro failed

lights up yellow.



lights up.



ABS Pro failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

Monitoring of the ABS Pro function has detected a fault. The ABS Pro function is not available. The ABS function is still available. ABS provides support only for braking in straight-ahead driving.

- You can continue to ride. Bear in mind the more detailed information on certain situations that can lead to an ABS Pro fault message (►► 180).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS control at front wheel only

—with riding modes Pro^{OE}



flashes irregularly.

Possible cause:

ABS control for the rear wheel is switched off in the currently selected riding mode. The rear wheel brake can lock the rear wheel.

- Check the settings of the riding mode.
- For more information on setting up the riding modes, see the section entitled "Engineering details" (►► 185).

DTC intervention

quick-flashes.

Possible cause:

The DTC has detected a degree of instability at the rear wheel and has intervened to reduce torque.

The indicator and warning light flashes longer than the duration of the DTC. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

54 STATUS INDICATORS

- You can continue to ride.
Ride carefully and think well ahead.

DTC self-diagnosis not completed



slow-flashes.

Possible cause:



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the DTC function is not available until self-diagnosis has completed.

DTC switched off



lights up.



Off!



Traction control deactivated.

Possible cause:

The rider has switched off the DTC system.

- Switch on DTC. (→ 70)

DTC fault



lights up yellow.



lights up.



Traction control failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The engine control unit has detected a DTC fault.



ATTENTION

Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
- Secure the toolkit.
- Do not damage the angular rate sensor.
- Bear in mind that the DTC function, engine drag torque control and, if applicable, other riding-dynamics control

systems as well are not available.

- You can continue to ride. Bear in mind the more detailed information on situations that can lead to a DTC fault (► 184).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DTC restricted



lights up yellow.



lights up.



Traction control limited! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The engine control unit has detected a DTC fault.



ATTENTION

Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
- Secure the toolkit.
- Do not damage the angular rate sensor.
- Bear in mind that the DTC function, engine drag torque control and, if applicable, other riding-dynamics control systems as well are only conditionally available.
- You can continue to ride. Bear in mind the more detailed information on situations that can lead to a DTC fault (► 184).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

56 STATUS INDICATORS

DTC Slide Control and Brake Slide Assist not available

—with riding modes Pro^{OE}



lights up yellow.



Slide Control and Brake Slide Assist failed. Have it checked by a specialist workshop.

Possible cause:

The steering angle sensor is faulty, or communication with the control unit is disrupted.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

DDC fault

—with Dynamic Damping Control (DDC)^{OE}



lights up yellow.



Spring strut adjustment faulty! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The DDC control unit has detected a fault.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

» In this condition, the motorcycle may have too much damping and is uncomfortable to drive, especially on roads in poor condition.

Possible cause:

A DDC sensor fault has been detected.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.
- » The semi-active functionality is deactivated.

Fuel down to reserve



Tank reserve level reached. Ride to the next filling station.

**WARNING****Irregular engine operation or engine shutdown due to lack of fuel**

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Fuel reserve

approx. 4 l

- Refuel. (►► 143)

Hill Start Control active

shows green.

Possible cause:

Hill Start Control (►► 193) has been activated by the rider.

- Switch off Hill Start Control.
- Operate Hill Start Control Pro. (►► 76)

Hill Start Control automatically deactivated

flashes yellow.

Possible cause:

Hill Start Control has been automatically deactivated.

- Side stand has been extended.
- » Hill Start Control is deactivated when the side stand is extended.
- Engine has been switched off.
- » Hill Start Control is deactivated when the engine is switched off.
- Operate Hill Start Control Pro. (►► 76)

Hill Start Control cannot be activated

is displayed.

HSC not available. Engine not running.

Possible cause:

Hill Start Control cannot be activated.

- Fold in side stand.
- » Hill Start Control functions only when the side stands are folded in.
- Start the engine.
- » Hill Start Control functions only when the engine is running.

58 STATUS INDICATORS

Gear not trained

N The gear indicator flashes.
The Pro shift assistant is not available.

Possible cause:

The gearbox sensor is not fully trained.

- Engage neutral gear **N** and, with the vehicle at a standstill, let the engine run for at least 10 seconds to train the idle gear.


- Engage all gears with clutch actuation and ride at least 10 seconds with the engaged gear.

» The gear indicator starts to flash when the gearbox sensor has been trained successfully.

– The Gear Shift Assistant Pro operates as described (191) once the transmission sensor has been completely taught-in.

- If the training process was not successful, have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

Hazard warning lights system is switched on

 flashes green.

 flashes green.

Possible cause:

The driver has switched on the hazard warning lights system.

- Operate the hazard warning flashers. (68)

Launch Control not ready

– with riding modes Pro^{OE}

Shift light shows or flashes.

L-Con not available.


Clutch too hot.

Possible cause:

The number of racing starts possible with Launch Control has been exceeded.

- Allow the clutch to cool.
- Operate Launch Control. (154)

Service-due indicator

 If service is overdue, the due date or the odometer reading at which service was due is accompanied by the general warning light showing yellow.

If the service is overdue, a yellow CC message is displayed. Exclamation marks also draw attention to the displays for service, service appointment and remaining distance in the MY VEHICLE and SERVICE REQUIREMENTS menu screens.



If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected.

Service due



is displayed in white.

Service due! Have service performed by a specialist workshop. Possible cause:

Service is due because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad Retailer.
- » The operational and road safety of the motorcycle remain intact.
- » The motorcycle's value is maintained as best as possible.

Service-due date has passed



lights up yellow.



is displayed in yellow.

Service overdue! Have service performed by a specialist workshop.

Possible cause:

Service is overdue because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad Retailer.
- » The operational and road safety of the motorcycle remain intact.
- » The motorcycle's value is maintained as best as possible.

OPERATION

04

IGNITION SWITCH/STEERING LOCK	62
EMERGENCY-OFF SWITCH (KILL SWITCH)	63
INTELLIGENT EMERGENCY CALL	64
LIGHTING	66
DYNAMIC TRACTION CONTROL (DTC)	69
RIDING MODE	70
DYNAMIC DAMPING CONTROL (DDC)	72
CRUISE CONTROL	73
HILL START CONTROL	76
SHIFT LIGHT	77
ANTI-THEFT ALARM (DWA)	78
TYRE PRESSURE MONITORING (RDC)	80
HEATED GRIPS	80
FRONT AND REAR SEATS	81

62 OPERATION


IGNITION SWITCH/STEERING LOCK

Keys

You receive 2 vehicle keys.
If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (► 63).
Ignition switch/steering lock, fuel filler cap lock and lock for the tail-hump cover are all operated with the same key.

Engaging steering lock

- Turn the handlebars all the way to the left.

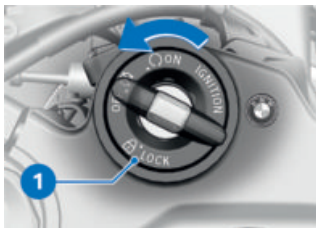

- Turn the vehicle key to position 1, while moving the handlebars slightly.
 - » Ignition, lights and all function circuits switched off.
 - » Steering lock engaged.
 - » Vehicle key can be removed.

Switching on ignition



- Turn the ignition key to position 1.
 - » Side lights and all function circuits switched on.
 - » Engine can be started.
 - » Pre-Ride-Check is performed. (► 134)
 - » ABS self-diagnosis is in progress. (► 135)
 - » DTC self-diagnosis is in progress. (► 136)

Switching off ignition




- Turn the ignition key to position 1.
 - » Lights switched off.
 - » Handlebars not locked.

» Vehicle key can be removed.

Electronic immobiliser (EWS)

The on-board electronics access the data saved in the ignition key via a ring aerial in the ignition lock. The engine control unit will not permit the engine to be started unless the key is identified as "authorised".

 A second ignition key attached to the same ring as the ignition key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued.

Always keep the ignition keys separate from each other.

If you lose an ignition key, you can have it barred by your authorised BMW Motorrad retailer.

If you wish to do this, you will need to bring all other keys for the motorcycle with you. The engine cannot be started by a barred key, but a key that has been barred can subsequently be reactivated.

You can obtain spare keys only through an authorised BMW Motorrad retailer. The keys are part of an integrated security system, so the retailer is under an obligation to

check the legitimacy of all applications for replacement/extra keys.

EMERGENCY-OFF SWITCH (KILL SWITCH)



1 Emergency-off switch (kill switch)



WARNING

Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding.

The emergency off switch is a kill switch for switching off the engine quickly and easily.

64 OPERATION



- A** Engine switched off
B Normal operating position (run)

INTELLIGENT EMERGENCY CALL

—with intelligent emergency call^{OE}

Emergency call via BMW

Press the SOS button in an emergency only.

The emergency call is not able to be ensured because of technical reasons due to unfavourable conditions, e.g. in areas where there is no mobile phone reception.

During an emergency call, the location of the vehicle, the choice of language and, if applicable, accident-related data are transmitted to BMW (11). Under unfavourable conditions, data transfer can be restricted or delayed. This can

lead to delayed processing of the emergency call.

Even if an emergency call using BMW is not possible, the system may make an emergency call to a public emergency call number. This depends on the respective mobile phone network and the national regulations.

Language for emergency call

Each vehicle has a language assigned to it depending on the market for which it is intended. The BMW Call Center answers in this language.




The language for the emergency call can only be changed by the BMW Motorrad partner. The language assigned to the vehicle differs from the display languages that can be selected by the rider in the TFT display.

Manual emergency call Requirement


An emergency has occurred.
The vehicle is at a standstill.
The ignition is switched on.



- Open cover **1**.
- Short-press SOS button **2**.

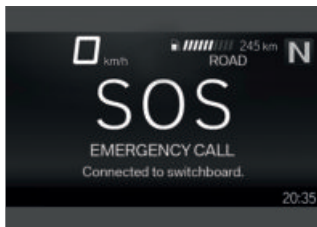

The connection was established.

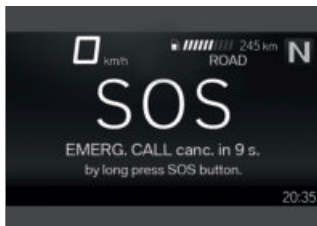

- » The time until transmission of the emergency call is displayed. During that time, it is possible to cancel the emergency call.
- To cancel an emergency call: Press SOS button **2** and hold it down for two seconds.
- Operate the emergency-off switch to stop the engine.
- Remove helmet.
- » After expiry of the timer, a voice contact to the BMW Call Center is established.



- Provide information to the emergency services using the microphone **3** and speaker **4**.


Automatic emergency call

The intelligent emergency call is active after the ignition is switched on and reacts if a fall or crash occurs.


Emergency call in the event of a light fall

- A minor fall or a crash is detected.
- » An acoustic signal is sounded.


66 OPERATION

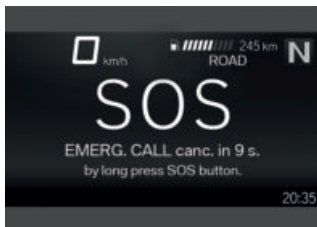

- If possible, remove helmet and stop engine.
- » A voice contact connection to the BMW Call Center is established.

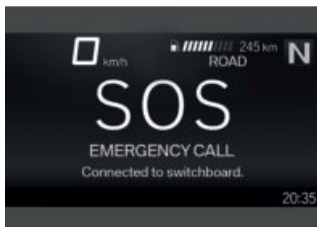

The connection was established.

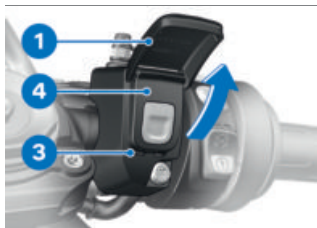

- Open cover **1**.

- Provide information to the emergency services using the microphone **3** and speaker **4**.

Emergency call in the event of a severe fall

- A severe fall or a crash is detected.
- » The emergency call is placed automatically without delay.

LIGHTING

Low-beam headlight

- Switch on the ignition.
(62)



- Alternatively: With the ignition switched on, pull switch **1**.


Side light

The side lights switch on automatically when the ignition is switched on.




- The side lights place a strain on the battery; leave the ignition switched on for a limited time only.

Lights warning

 If the turn indicators or the number plate carrier are removed in preparation for a race-track session, the vehicle electronics detect a bulb failure and the appropriate warning message is displayed. If Light warnings is deactivated, the warning message is suppressed.

- Navigate to Settings, Vehicle settings and select Lights.
- Switch Light warnings on or off.


High-beam headlight and headlight flasher

- Switch on the ignition.
( 62)



- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.


Headlight courtesy delay feature

- Switch off the ignition.
( 62)



- Immediately after switching off the ignition, pull switch **1** back and hold it in that position until the headlight courtesy delay feature comes on.
» The vehicle's lights come on for one minute and then switch off automatically.
– This can be used to light up the path to the house door after the vehicle has been parked, for example.

Parking lights


- Switch off the ignition.
( 62)


68 OPERATION



- Immediately after switching off the ignition, push button **1** to the left and hold it in that position until the parking lights come on.
- Switch the ignition on and off again to switch off the parking lights.

Hazard warning lights


- Switch on the ignition.
( 62)

 The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary.



- Press button **1** to switch on the hazard warning lights system.
» Ignition can be switched off.
- To switch off the hazard warning lights system, switch on the ignition if necessary and press button **1** again.

Turn indicators

- Switch on the ignition.
( 62)
- Navigate to **Settings**, **Vehicle settings** and select **Lights**.
- Switch **Comfort turn indicator** on or off.



- Push button **1** to the left or right, as appropriate, to switch on the turn indicators.
- » If the comfort turn indicators function is switched on, the turn indicators are cancelled automatically when the speed-dependent distance is covered.
- Alternatively: Press button **1** to cancel the turn indicators.

DYNAMIC TRACTION CONTROL (DTC)

Switching off DTC

- Switch on the ignition.
(62)

Dynamic Traction Control (DTC) can also be switched off when the motorcycle is in motion.



- Press and hold button **1** until the DTC indicator light changes its status. Immediately after button **1** is pressed, DTC system status **ON** is displayed.

lights up.

Possible DTC system status **OFF!** is displayed.

- Release button **1** once the status has changed. The new DTC system status **OFF!** is displayed briefly.

remains lit.

- » The DTC function is switched off.


70 OPERATION

Switch on DTC




- Press and hold down button **1** until the DTC indicator light changes status.

Immediately after button **1** is pressed, DTC system status **OFF!** is displayed.

 goes out; if self-diagnosis has not completed it starts flashing.

Possible DTC system status **ON** is displayed.

- Release button **1** once the status has changed.

 remains off or continues to flash.

The new DTC system status **ON** is displayed briefly.

- » The DTC function is switched on.
- You also have the option of switching the ignition off and then on again.



An DTC fault has occurred if the DTC indicator and warning light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 5 km/h

- For more information on Dynamic Traction Control, see the section entitled "Engineering details" (183).

RIDING MODE

Using the riding modes

BMW Motorrad has developed operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

- RAIN: Riding on a rain-wet roadway.
- ROAD: Riding on a dry roadway.
- DYNAMIC: Dynamic riding on a dry roadway.
- RACE: riding on race tracks with sport tyres or slicks.

- with riding modes Pro^{OE}
- RACE PRO 1/2/3: riding on race tracks while considering individual settings made by the rider.

The respective optimum interplay of engine characteristics, ABS control and DTC control is provided for each of these scenarios.

- with Dynamic Damping Control (DDC)^{OE}

The chassis adjustment also adapts to the selected scenario.

Riding-mode preselection


Riding mode preselection is a function for shortlisting the rider's subset of preferred riding modes.

Between two and a maximum of four riding modes can be added to the riding modes preselection shortlist.

Factory setting:


RAIN, ROAD, DYNAMIC and RACE

Configure riding-mode preselection

- Switch on the ignition.
( 62)
- Navigate to Settings, Vehicle settings, Driving mode preselection.

- Activate or deactivate riding modes for riding mode preselection.
 - » The activated riding modes are available for subsequent selection.
 - » If fewer than two riding modes are preselected, this message is displayed:
Action not possible.
Min. number reached.
 - » The list of preselected riding modes is retained in memory, even after the ignition is switched off.

Select the riding mode

- Switch on the ignition.
( 62)



- Press button 1.


72 OPERATION



The riding mode currently active **2** is sent to the back and is displayed in the pop-up **3**. The guide **4** indicates how many riding modes are available.



- Repeatedly press button **1** until the riding mode you want is displayed.

 The intervention of riding dynamics control systems can be restricted, depending on which riding mode is selected and how the selected mode is configured.

Possible restrictions are indicated by a pop-up message,

for example Warning! ABS & DTC setting..

See the section entitled "Engineering details" for more information on riding dynamics control systems such as ABS and DTC.

- » The availability of the riding modes depends on the custom configuration of the riding modes preselection function.
- » With the vehicle at a standstill, the selected mode is activated after approximately 2 seconds.
- » The following conditions must be satisfied for activation of a new riding mode while riding:
 - Throttle grip is in idle position.
 - Brake is not applied.
 - Cruise control is deactivated.

DYNAMIC DAMPING CONTROL (DDC)

- with Dynamic Damping Control (DDC) ^{OE}


DDC possibilities for adjustment

Dynamic Damping Control (DDC) adapts the damping of the suspension to the riding situation dynamically and taking the selected riding mode into account.

For more information on DDC see the section headed "Engineering details" (► 182).

Adjusting suspension damping

- Switch on the ignition.
(► 62)
- Navigate to Settings, Assist and select DDC.
- Select the desired suspension-damping setting.

 You can adjust the damping characteristic while the motorcycle is on the move.

CRUISE CONTROL

—with cruise control^{OE}

Display when adjusting settings (Speed Limit Info not active)



Symbol **1** for cruise control is displayed in the Pure Ride view and in the top status line.

Display when adjusting settings (Speed Limit Info active)



Symbol **1** for cruise control is displayed in the Pure Ride view and in the top status line.

74 OPERATION

Switching on cruise control




- Slide switch **1** to the right.
 - » Button **2** is enabled for operation.

Setting road speed



- Short-push button **1** forward.

 Adjustment range for cruise control (gear-dependent)


20...210 km/h



shows.


- » The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating

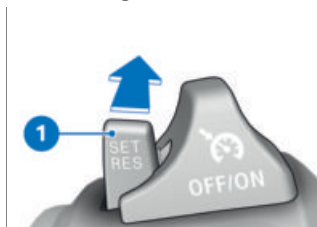

- Short-push button **1** forward.
 - » Speed is increased by approx. 1 km/h each time you push the button.
- Push button **1** forward and hold it in this position.
 - » The vehicle accelerates smoothly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Decelerating

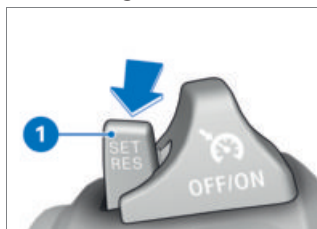



- Short-push button **1** back.
 - » Speed is reduced by approx. 1 km/h each time you push the button.

- Push button **1** back and hold it in this position.
- » The vehicle decelerates smoothly.
- » The current speed is maintained and saved if button **1** is not pushed again.

Deactivating cruise control


- Brake, pull the clutch lever or turn the throttle grip (close the throttle by turning the grip back past the idle position) to deactivate adaptive cruise control.

 For safety reasons, adaptive cruise control is automatically deactivated when Gear Shift Assistant Pro downshifts.


 For safety reasons, adaptive cruise control is automatically deactivated whenever ABS or DTC intervention occurs. If DTC is deactivated by the rider, adaptive cruise control is deactivated as well.

- » Indicator light for adaptive cruise control goes out.

Resuming former cruising speed

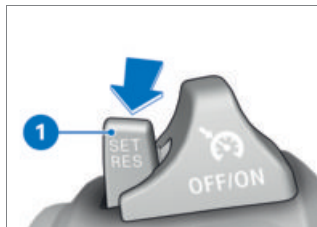


- Short-push button **1** back to return to the speed saved beforehand.

 Opening the throttle does not deactivate cruise control. When the twistgrip is released the motorcycle decelerates only to the speed saved in memory, even if the rider intended slowing to a lower speed.

 shows.

Switching off cruise control

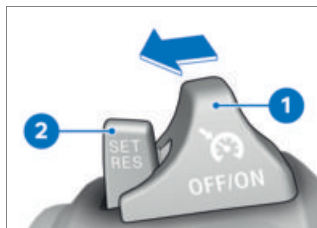

- Slide switch **1** to the left.
- » The system is deactivated.

76 OPERATION

» Button **2** is disabled.

HILL START CONTROL

Display



Symbol **1** for Hill Start Control is displayed in the Pure Ride view and in the top status line.

Adjust Hill Start Control Pro

- Switch on the ignition.
(62)
- Navigate to **Settings**,
Vehicle settings.
- Select **HSC Pro**.
- To switch off Hill Start Control Pro, select **Off**.
 - » Hill Start Control Pro is deactivated.
- To switch on manual Hill Start Control Pro, select **Manual**.
 - » Hill Start Control Pro can be activated by forcefully operating the handbrake or foot-brake lever.
- To switch on automatic Hill Start Control Pro, select **Auto**.
 - » Hill Start Control Pro can be activated by forcefully oper-

ating the handbrake or foot-brake lever.

- » If the brake is actuated for approximately one second after the vehicle has come to a standstill and the motorcycle is on a gradient of at least 3 %, Hill Start Control Pro is automatically activated.
- » The selected setting remains stored even after the ignition is switched off.

Operating Hill Start Control Pro Requirement

Vehicle stationary and upright,
engine running.



ATTENTION

Failure of Hill Start Control

Risk of accident


- Apply the brakes manually to hold the vehicle.



The drive-off assistant Hill Start Control Pro is only a comfort system to enable easier riding off on gradients and should not be confused with an electromechanical holding brake.



The Hill Start Control Pro drive-off assistant should not be used on inclines of over 40 %.

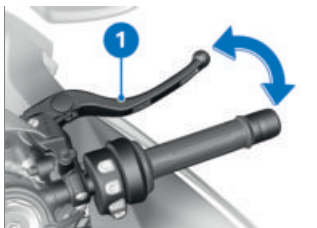

- Apply firm pressure to handbrake lever **1** or to the footbrake lever and then quickly release the lever.
- Alternatively, apply the brake for about one second beyond the vehicle reaching a standstill on an incline of at least 3 %.



shows green.

» Hill Start Control Pro is activated.

- To switch off Hill Start Control Pro, operate handbrake lever **1** or the footbrake lever again.



If Hill Start Control Pro has been deactivated by means of the handbrake lever, automatic Hill Start Control is deactivated for the next 4 m.



disappears.

- Alternatively, ride off in 1st or 2nd gear.



Pulling away from rest with the throttle grip turned to open the throttle automatically deactivates Hill Start Control Pro.



disappears as soon as the brake is fully released.

» Hill Start Control Pro is deactivated.

- For more information on Hill Start Control Pro see the section headed "Engineering details" (193)

SHIFT LIGHT

Switch the shift light on and off



- Navigate to **Settings**, **Vehicle settings**.
- Switch **Shift light** on or off.



When the shift light flashes the secondary indicator flashes as well, even in the sold red rpm range.

78 OPERATION




Set the shift light

- Switch on the Shift light function.
- Navigate to Settings, Vehicle settings, Configuration (under Shift light).
- » The following settings are available:
 - Start RPM
 - End RPM
 - Brightness
 - Frequency. A flashing frequency of 0 Hz corresponds to steady light.
- » Changes to brightness and the flashing frequency are demonstrated by the shift light with it briefly lighting up or flashing.

ANTI-THEFT ALARM (DWA)

- with anti-theft alarm (DWA)^{OE}

Activation

- Switch on the ignition.
( 62)
- Customise the anti-theft alarm settings. ( 79)
- Switch off the ignition.
( 62)
- » If the alarm system is activated, then the alarm system will be automatically activated when the ignition is switched off.

- » Activation takes approximately 30 seconds to complete.
- » Turn indicators flash twice.
- » Confirmation tone sounds twice (if programmed).
- » Anti-theft alarm is active.

Alarm signal

A DWA alarm can be triggered by:

- Tilt sensor
- Switch-on attempt with an unauthorised vehicle key.
- Disconnection of the DWA anti-theft alarm from the vehicle's battery (DWA internal battery in the anti-theft alarm provides power - acoustic alarm only, the turn indicators do not flash)

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the vehicle's battery.


An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of acoustic alarm tone can be set by an authorised BMW Motorrad retailer.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the alarm for one minute.


Light signals issued by the DWA LED:

- Flashes 1x: Tilt sensor 1
- Flashes 2x: Tilt sensor 2
- Flashes 3x: Ignition switched on with unauthorised key
- Flashes 4x: Disconnection of the anti-theft alarm from the vehicle's battery
- Flashes 5x: Tilt sensor 3

Deactivating anti-theft alarm system (DWA)

- Switch on the ignition.
( 62)
- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » DWA is switched off.

Customise the anti-theft alarm settings

- Switch on the ignition.
( 62)
- Navigate to *Settings*, *Vehicle settings*, *Alarm system*.


» The following adaptation settings are available:

- Adapting Warning signal
- Switch Tilt sensor on or off
- Switch Arming tone on or off
- Switch Arm automatically on or off

Possible settings

Warning signal: set the increasing and decreasing or intermittent alarm tone.

Tilt sensor: activate inclination sensor to monitor the inclination of the vehicle. The DWA responds, for example, to wheel theft or being towed away.

 When the vehicle is going to be transported, deactivate the tilt sensor to prevent the anti-theft alarm (DWA) from being triggered.

Arming tone: confirmation alarm tone after having activated/deactivated the DWA in addition to flashing turn indicators.

Arm automatically: automatic activation of the alarm function when switching off the ignition.

80 OPERATION

TYRE PRESSURE MONITORING (RDC)

—with tyre pressure control (RDC)^{OE}


Switch the target-pressure warning on or off


- The system can be set to issue a specified-pressure warning when tyre pressure drops to the defined minimum.
- Navigate to Settings, Vehicle settings, RDC.
- Switch Target pressure warn. on or off.

HEATED GRIPS

—with heated grips^{OE}

Operating heated handlebar grips

 The heating in the heated handlebar grips can be activated only when the engine is running.

 The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.

- Start the engine. ( 134)



- Repeatedly press button 1 until desired heating stage 2 appears in front of heated grip symbol 3.

The handlebar grips can be heated to three levels.



Low heating power



Medium heating power



High heating power


- » The 3rd stage is for heating the grips quickly: it is advisable to switch back to a lower stage as soon as the grips are warm.
- » The selected heating stage will be saved if you allow a certain length of time to pass without making further changes.
- To switch off the heated grips, repeatedly press

button **1** until heated grip symbol **3** disappears.

FRONT AND REAR SEATS


Remove the tail-hump cover

- Make sure the ground is level and firm and place the motorcycle on its stand.

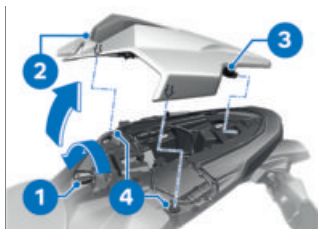

- Use ignition key **1** to unlock lock for tail-hump cover **2**.
- Disengage tail-hump cover **2** from grommets **4** and unhook fixing **3**.

Install the tail-hump cover

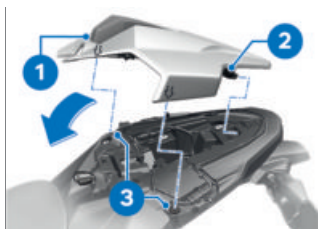


- Position tail-hump cover **1**; hook in fixing **2** while doing so.

- Engage tail-hump cover **1** in grommets **3** and press down, applying uniform pressure.
- Press tail-hump cover **1** down in the middle.
- Lock tail-hump cover **1**.

Removing passenger seat

—with two-up riding package^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.

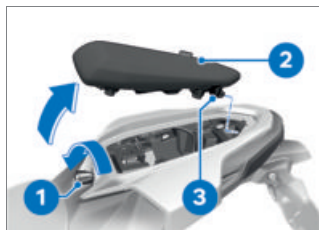

- Use ignition key **1** to unlock lock for passenger seat **2**.
- Remove passenger seat **2**; to do so, unhook fixing **3**.
- Remove the ignition key from the lock and place the passenger seat, upholstered side down, on a clean surface.

Installing passenger seat

—with two-up riding package^{OE}

82 OPERATION



- Position passenger seat **1**; hook in fixing **2** while doing so.
- Press passenger seat **1** downwards and lock.

Removing rider's seat



- Push the rider's seat cover **1** forward slightly on the seat cushion surface and expose tab **2**.
- Remove screw **3**.
- Lift up the rider's seat **1** at the rear and unhook fixing **4**.
- Place the seat, upholstered side down, on a clean surface.

Installing rider's seat



- Insert rider's seat **1** into the fixing **4** at the front and position it.
- Push the rider's seat cover **1** forward slightly on the seat cushion surface and expose tab **2**.
- Position and install bolt **3**.

TFT DISPLAY

05

GENERAL NOTES	86
PRINCIPLE	87
PURE RIDE VIEW	93
GENERAL SETTINGS	94
BLUETOOTH	96
MY VEHICLE	99
ON-BOARD COMPUTER	102
NAVIGATION	102
MEDIA	105
TELEPHONE	106
DISPLAY SOFTWARE VERSION	106
DISPLAY LICENCE INFORMATION	107

GENERAL NOTES

Warnings



WARNING

Operation of a smartphone while riding the vehicle

Risk of accident

- Always comply with the road traffic regulations in force where you are riding.
- Do not use a smartphone while riding. This applies with the exception of applications without operation, such as hands-free telephony.



WARNING

Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.

Connectivity functions

Connectivity functions include media, telephony and navigation. Connectivity functions can be used when the TFT display is paired with a mobile end device and a helmet (► 96). For more information on the Connectivity functions go to: **bmw-motorrad.com/connectivity**



If the fuel tank is between the mobile device and the TFT display, the Bluetooth connection may be restricted. BMW Motorrad recommends storing the device above the fuel tank (e.g. in your jacket pocket).




Depending on the mobile device, the scope of the Connectivity functions may be restricted.

BMW Motorrad Connected app

The BMW Motorrad Connected app enables the user to call up usage data and vehicle status information. For some functions such as navigation, for example, the app has to be installed on the mobile device and paired to the TFT display. The app is used to start route

guidance and adjust the navigation.


 On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

Currency

Updates of the TFT display subsequent to the date of publication are possible. Because of this, your vehicle may differ from the information supplied in the rider's manual. Up-to-date information is available at **bmw-motorrad.com/service**.

PRINCIPLE

Controls

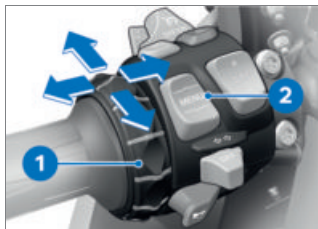

All display content is controlled by means of Multi-Controller **1** and MENU rocker button **2**. Depending on the context, the following functions are possible.

Functions of the Multi-Controller

Turn the Multi-Controller up:

- Move the cursor up in lists.
- Adjust settings.
- Increase volume.

Turn the Multi-Controller down:

- Move the cursor down in lists.
- Adjust settings.
- Decrease volume.

Tilt the Multi-Controller to the left:

- Activate the function in accordance with the operation feedback.
- Activate the function to the left or back.
- Go back to the Menu view after making the settings.
- In Menu view: Change up one level.
- In the *My vehicle* menu: Advance one menu screen.


Tilt the Multi-Controller to the right:

- Activate the function in accordance with the operation feedback.
- Confirm selection.
- Confirm settings.
- Advance a menu step.
- Scroll to the right in lists.

88 TFT DISPLAY

- In the `My vehicle` menu:
Advance one menu screen.

MENU rocker button functions

 Instructions given by the navigation system are displayed in a dialogue box if the `Navigation` menu has not been called up. Operation of the MENU rocker button is temporarily restricted.

Short-press the top section of the MENU button:

- In Menu view: Change up one level.
- In Pure Ride view: Select the display of the top status line.

Long-press the top section of the MENU button:

- In Menu view: Open the Pure Ride view.
- In Pure Ride view: Switch the operating focus to the Navigator.


Short-press the bottom section of the MENU button:

- Change down a level.
- No function if the lowest hierarchical level has been reached.

Long-press the bottom section of the MENU button:

- Change back to the last menu after a previous menu change effected by long-pressing the top section of the MENU rocker button.

Operating pointers in the main menu

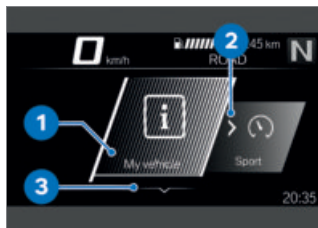

Operating pointers show whether interactions are possible, and which ones.




Meaning of the operating pointers:

- Operating pointer **1**: Left end reached.

- Operating pointer **2**: You can scroll to the right.
- Operating pointer **3**: You can scroll down.
- Operating pointer **4**: You can scroll to the left.
- Operating pointer **5**: Right end reached.

Operating pointers in submenus

In addition to the operating pointers in the main menu, there are additional operating pointers in the submenus.

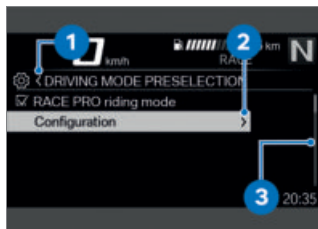

Meaning of the operating pointers:


- Operating pointer **1**: The current display is in a hierarchical menu. One symbol represents one submenu level. Two symbols represent two or more submenu levels. The colour of the symbol changes, depending on whether you can return to a higher level.

- Operating pointer **2**: One more submenu level can be accessed.
- Operating pointer **3**: There are more entries than can be displayed.

Display Pure Ride view

- Long-press the top section of the MENU rocker button.

Switching functions on and off

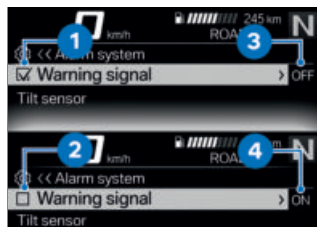

Some menu items have a check box in front of them. The check box shows whether the function is on or off. Action symbols after the menu items indicate what action you can trigger by short-tilting the Multi-Controller to the right.


Examples for switching on and off:

- Symbol **1** shows that the function is switched on.
- Symbol **2** shows that the function is switched off.

90 TFT DISPLAY

- Symbol **3** shows that the function can be switched off.
- Symbol **4** shows that the function can be switched on.

Calling up menu

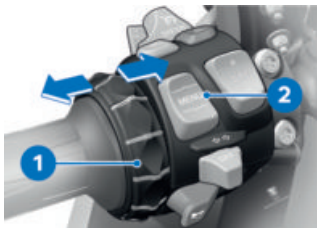


- Display the Pure Ride view. (▮▮▮ 89)
- Short-press the bottom section of button **2**.

The following menus can be called up:

- My vehicle
- Sport
- Navigation
- Media
- Telephone
- Settings

- Repeatedly short-push Multi-Controller **1** to the right until the menu item you want is highlighted.
- Short-press the bottom section of button **2**.


 The **Settings** menu can only be called up when the vehicle is stationary.

Moving cursor in lists



- Call up a menu. (▮▮▮ 90)
- To move the cursor down in a list, turn Multi-Controller **1** down until the entry you want is highlighted.
- To move the cursor up in a list, turn Multi-Controller **1** up until the entry you want is highlighted.

Confirming selection

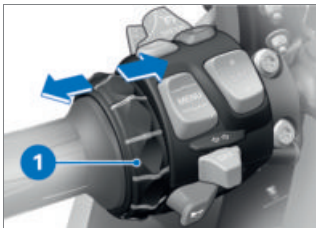


- Select the desired entry.
- Short-push Multi-Controller **1** to the right.

Call up the last menu used

- In Pure Ride view: Long-press the bottom section of the MENU rocker button.
- » The last menu used is called up. The last entry highlighted is selected.

System status displays

The system status is displayed in the lower area of the menu if a function is switched on or off.

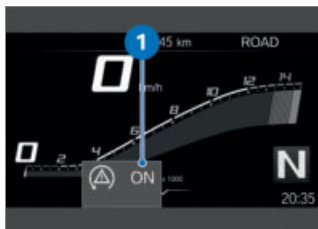

Example of what the system statuses mean:

- System status 1: DTC function is switched on.

Select the display of the top status line

Requirement

The vehicle is at a standstill.
The Pure Ride view is displayed.

- Switch on the ignition.
(➡ 62)
- » The TFT display shows all the information necessary

for riding on public roads from the on-board computer (e.g. TRIP 1) and the trip computer (e.g. TRIP 2). The information can be displayed in the top status line.

–with tyre pressure control (RDC) ^{OE}

» Information from the tyre pressure monitoring can also be displayed.◁

- Select the content of the top status line. (➡ 92)



- Long-press button 1 to obtain the Pure Ride view.
- Repeatedly short-press button 1 to select the value in the top status line 2.

The following values can be displayed:



Total distance



Current distance 1

92 TFT DISPLAY



Current distance 2

– Intake air temp. INTAKE



Consumption 1 (Average)



Consumption 2 (Average)



Riding time 1



Riding time 2



Break 1



Break 2



Speed 1 (Average)



Speed 2 (Average)

– with tyre pressure control (RDC) ^{OE}



Tyre pressure <



Fuel tank level



Range

- Switch on the desired displays.

» You can switch between the selected displays in the top status line. If no displays are selected, only the range will be displayed.

Adjusting settings



- Select and confirm the desired settings menu.
 - Turn Multi-Controller **1** down until the setting you want is highlighted.
 - If an operating pointer shows, tilt Multi-Controller **1** to the right.
 - If no operating pointer shows, tilt Multi-Controller **1** to the left.
- » The setting is saved.

Select the content of the top status line


- Navigate to Settings, Display, Status line content.

Switch Speed Limit Info on or off

Requirement

Vehicle is connected to a compatible mobile device. The BMW Motorrad Connected app is installed on the mobile device.

- Speed Limit Info shows the maximum speed permitted at the time, if this information is made available by the publisher of the map material in the navigation system.
- Navigate to Settings, Display.
- Switch Speed Limit Info on or off.


 Speed Limit Info is not available if a RACE PRO riding mode is activated.

PURE RIDE VIEW

Rev. counter




- 1 Scale
- 2 Low engine speed range
- 3 Upper/red engine speed range
- 4 Unit for engine speed display: 1000 revolutions per minute
- 5 Needle
- 6 Secondary indicator


 The red-hatched engine speed range changes depending on the coolant temperature:

The colder the engine, the lower the engine speed at which the red range starts. The warmer the engine, the higher the speed at which the red range starts.

When operating temperature is reached, the red range no longer changes.

94 TFT DISPLAY

 The solid red rpm range indicates the current maximum engine speed, depending for example on whether the running-in check still has to be performed, Launch Control is active or the electronic engine management system is experiencing a fault.

 When the shift light flashes the secondary indicator flashes as well, even in the solid red rpm range.

Range



The range readout **1** indicates how far you can ride with the fuel remaining in the tank. This distance is calculated on the basis of average consumption and the quantity of fuel on board.

–When the vehicle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly.

This is the reason why the range is recalculated only when the side stand is in the retracted position.

- The range is shown together with a warning once the fuel reserve has been reached.
- After a refuelling stop, range is recalculated if the amount of fuel in the tank is greater than the reserve quantity.
- The calculated range is only an approximate figure.

GENERAL SETTINGS

Adjusting volume

- Connect the rider's and passenger's helmets. (🔊 98)
- Increase volume: Turn the Multi-Controller up.
- Reduce volume: Turn the Multi-Controller down.
- Mute: Turn the Multi-Controller all the way down.


Set the date

- Switch on the ignition. (🔊 62)
- Navigate to Settings, System settings, Date and time, Set date.
- Set Day, Month and Year.
- Confirm setting.

Set date format

- Navigate to Settings, System settings, Date and time, Date format.
- Select the desired setting.
- Confirm setting.

Set the clock

- Switch on the ignition.
( 62)
- Navigate to Settings, System settings, Date and time, Set time.
- Set Hour and Minute.

Set the time format

- Navigate to Settings, System settings, Date and time, Time format.
- Select the desired setting.
- Confirm setting.

Set units of measurement

- Navigate to Settings, System settings, Units.

The following units of measurement can be set:

- with tyre pressure control (RDC)^{OE}
- Pressure◀
- Temperature
- Speed
- Consumption

Set the language

- Navigate to Settings, System settings, Language.

The following languages can be set:

- German
- English (UK)
- English (US)
- Spanish
- French
- Italian
- Dutch
- Polish
- Portuguese (Brazil)
- Portuguese (Portugal)
- Turkish
- Romanian
- Russian
- Ukrainian
- Thai
- Chinese
- Japanese
- Korean

Adjusting brightness

- Navigate to Settings, Display, Brightness.
- Adjust display brightness.
- » When ambient brightness drops below a defined threshold, the display is dimmed to the brightness set here.

96 TFT DISPLAY

Reset all settings

- All the settings in the `Settings` menu can be reset to the factory settings.
- Call up the `Settings` menu.
- Select `Reset all` and confirm.

The settings in the following menus are reset:

- Vehicle settings
- System settings
- Connections
- Display
- Information

» Existing Bluetooth connections are not deleted.

BLUETOOTH

Short-range wireless technology

Bluetooth is a short-range wireless technology. Bluetooth devices are short-range devices transmitting on the license-free ISM band (Industrial, Scientific, Medical) between 2.402...2.480 GHz. They can be operated anywhere in the world without a licence being required.

Although Bluetooth is designed to establish and sustain robust connections over short distances, as with every other wireless technology disruptions

are possible. Interference can affect connections or connections can sometimes fail. Particularly when multiple devices operate in a Bluetooth network, with wireless technology of this nature it is not possible to ensure fault-free communications in every situation.

Possible sources of interference:

- interference zones due to transmission masts and similar.
- devices with non-compliant Bluetooth implementations.
- proximity of other Bluetooth-compatible devices.
- shielding by metal objects or bodies.

Pairing

Two Bluetooth devices have to recognise each other before they can communicate. This process of mutual recognition is known as pairing. When two devices have paired they remember each other, so the pairing process is conducted only once, on initial contact.



On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

During the pairing process, the TFT display searches for other Bluetooth-compatible devices within its reception range. The conditions that have to be satisfied before the audio system can recognise another device are as follows:

- The device's Bluetooth function must be active
- The device must be "visible" to others
- Other Bluetooth-compatible devices must be OFF (e.g. mobile phones and navigation systems).

Please consult the operating instructions for your communication system.

Pairing

- Navigate to **Settings, Connections**.
- » Bluetooth connections can be established, managed and deleted in the **CONNECTIONS** menu. The following Bluetooth connections are displayed:
 - Mobile device
 - Rider's helmet
 - Passenger helm.

The connection status for mobile devices is displayed.

Connect mobile device

- Perform pairing. (▶▶▶ 97)
- Activate the mobile device's Bluetooth function (see mobile device's operating instructions).
- Select **Mobile device** and confirm.
- Select **Pair new mobile device** and confirm.

Mobile devices are being searched for.



flashes in the bottom status line during pairing.

Mobile devices found are displayed.

- Select and confirm mobile device.
- Follow the instructions on the mobile device.
- Confirm that the code matches.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (▶▶▶ 252)
- » Depending on the mobile device, telephone data is transferred to the vehicle automatically.

98 TFT DISPLAY

- » Telephone data (▣▣▣▣ 106)
- » If the telephone book is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (▣▣▣▣ 253)
- » If the Bluetooth connection does not work as expected, consult the troubleshooting chart in the section entitled "Technical data". (▣▣▣▣ 253)

Connect rider's and passenger's helmet

- Perform pairing. (▣▣▣▣ 97)
- Select Rider's helmet or Passenger helm. and confirm.
- Make the helmet's communication system visible.
- Select Pair new rider's helmet or Pair new passenger helmet and confirm.

Helmets are searched for.



flashes in the bottom status line during pairing.

Helmets found are displayed.

- Select and confirm helmet.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the

section entitled "Technical data". (▣▣▣▣ 252)


- » If the Bluetooth connection does not work as expected, consult the troubleshooting chart in the section entitled "Technical data". (▣▣▣▣ 253)

Delete connections

- Navigate to Settings, Connections.
- Select Delete connections.
- To delete an individual connection, select the connection and confirm.
- To delete all connections, select Delete all connections and confirm.

MY VEHICLE


START SCREEN

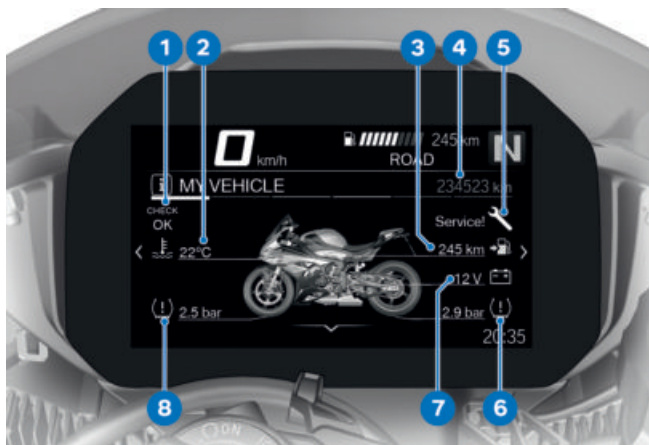

- 1 Check Control display
(➡ 31)
- 2 Coolant temperature
(➡ 42)
- 3 Range (➡ 94)
- 4 Odometer
- 5 Service display (➡ 58)
- 6 Tyre pressure, rear
(➡ 46)
- 7 On-board voltage
(➡ 230)
- 8 Tyre pressure, front
(➡ 46)

100 TFT DISPLAY

Operating pointers

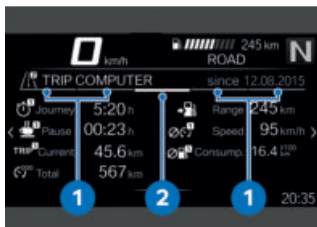

- Operating pointer 1: Indicators showing how far you can scroll to the left or right.
- Operating pointer 2: Indicator showing the position of the current menu screen.

Scrolling through menu screens




- Call up the My vehicle menu.
- To scroll to the right, short-press Multi-Controller 1 to the right.

- To scroll to the left, short-press Multi-Controller 1 to the left.

The My vehicle menu contains the following screens:


- MY VEHICLE
- ON-BOARD COMPUTER
- TRIP COMPUTER
- with tyre pressure control (RDC)^{OE}
- TYRE PRESSURE◀
- SERVICE REQUIREMENTS
- CC MESSAGE (if available)
- For more information on tyre pressures and Check Control messages, see the section on displays (► 31).

 Check Control messages are attached dynamically to the menu screens as additional tabs in the My vehicle menu.

On-board computer and trip computer

The ON-BOARD COMPUTER and TRIP COMPUTER menu screens display vehicle and trip data, such as average values.

Service requirements

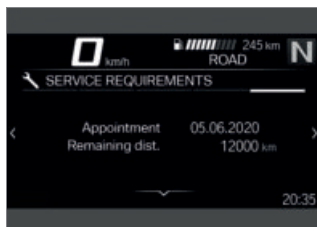

When the next service is due within less than a month or within 1000 km, a white Check Control message is displayed.

102 TFT DISPLAY

ON-BOARD COMPUTER

Call up the on-board computer

- Call up the `My vehicle` menu.
- Scroll to the right until the `ON-BOARD COMPUTER` menu screen is displayed.

Reset the on-board computer

- Call up the on-board computer. (102)
- Press down the MENU rocker button.
- Select `Reset all values` or `Reset individual values` and confirm.

The following values can be reset:

- Break
- Journey
- Current (TRIP 1)
- Speed
- Consump.

Call up the trip computer

- Call up the on-board computer. (102)
- Scroll to the right until the `TRIP COMPUTER` menu screen is displayed.

Reset the trip computer

- Call up the trip computer. (102)
- Press down the MENU rocker button.

- Select `Autom. reset` or `Reset all values` and confirm.
- » If `Autom. reset` is selected, the trip computer is automatically reset when a minimum of 6 hours have passed and the date has changed since the ignition was switched off.

NAVIGATION

Warnings



WARNING

Operation of a smartphone while riding the vehicle

Risk of accident

- Always comply with the road traffic regulations in force where you are riding.
- Do not use a smartphone while riding. This applies with the exception of applications without operation, such as hands-free telephony.



WARNING

Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.

Precondition

The vehicle is connected via Bluetooth to a compatible mobile device.

The BMW Motorrad Connected app is installed on the connected mobile device.



On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.

Enter the destination address

- Connect a mobile device.
(97)
- Call up the BMW Motorrad Connected app and start the route guidance.

- Call up the Navigation menu in the TFT display.
- » Active route guidance is displayed.
- » If active route guidance is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (253)

Select destination from recent destinations

- Navigate to Navigation, Recent destinations.
- Select and confirm destination.
- Select Start route guidance.

Select destination from favourites

- The FAVOURITES menu shows all the destinations saved as favourites in the BMW Motorrad Connected app. You cannot use the TFT display to add favourites to the list.
- Navigate to Navigation, Favourites.
- Select and confirm destination.
- Select Start guidance.

104 TFT DISPLAY

Enter special destinations

- Special destinations, such as points of interest, can be displayed on the map.
- Navigate to Navigation, POIs.

The following locations can be selected:

- At current location
- At destination
- Along the route
- Select where the special destinations should be looked for.

For example, the following special destination can be selected:

- Filling station
- Select and confirm the special destination.
- Select Start route guidance and confirm.

Set route criteria

- Navigate to Navigation, Route criteria.

The following criteria can be selected:

- Route type
- Avoid
- Select desired Route type.
- Switch desired Avoid on or off.

The number of avoidances activated is displayed in brackets.

View the route information

- Navigate to Navigation, Settings and select Route info.

You can choose between the following options:

- Dest.
- Waypoint
- Select the desired option.
- » Countdown distance and time are displayed.

Edit route guidance

- Navigate to Navigation, New destination.

You can choose from the following destinations:

- Recent destinations
- Favourites
- POIs
- Select a destination from one of the three destination categories.
- Select Change route guidance in the destination entry.
- Select Add as waypoint to add the selected destination as a waypoint.
- Select Start guidance to overwrite the current destination.

End route guidance

- Navigate to Navigation, Active route guidance.

- Select End route guidance and confirm, or tilt the Multi-Controller to the left.

Switch spoken instructions on or off

- Connect the rider's and passenger's helmets. (➡ 98)
- The navigation can be read out by a computer voice. For this purpose, Spoken instruction must be switched on.
- Navigate to Navigation, Active route guidance.
- Switch Spoken instruction on or off.

Repeat last spoken instruction

- Navigate to Navigation, Active route guidance.
- Select Current instruction and confirm.

MEDIA


Precondition

The vehicle is connected to a compatible mobile device and helmet.


Controlling music playback



- Call up the Media menu.

 BMW Motorrad recommends setting the volume on the mobile end device for media and calls to maximum before setting off.

- Adjust volume. (➡ 94)
- Next track: Short-tilt Multi-Controller **1** to the right.
- Preceding track or start of current track: Short-tilt Multi-Controller **1** to the left.
- Fast forward: Long-tilt Multi-Controller **1** to the right.
- Rewind: Long-tilt Multi-Controller **1** to the left.
- Call up context menu: Press bottom section of button **2**.

 Depending on the mobile device, the scope of the Connectivity functions may be restricted.

- » The following functions can be used in the context menu:
 - Playback or Pause.

106 TFT DISPLAY

- Select the **Now playing**, **All artists**, **All albums** or **All tracks** category for search and playback.
- Select **Playlists**.

You can make the following adjustments in the **Audio settings** submenu:

- Switch **Shuffle** on or off.
- Select **Repeat**: **Off**, **One** (current track) or **All**.

TELEPHONE

Precondition

The vehicle is connected to a compatible mobile device and helmet.

Telephone calls



- Call up the **Telephone** menu.
- Accept call: Tilt Multi-Controller **1** to the right.
- Reject call: Tilt Multi-Controller **1** to the left.
- End call: Tilt Multi-Controller **1** to the left.

Muting

During active phone calls, the microphone in the helmet can be muted.

Phone calls with multiple participants

While a phone call is in progress, a second call can be accepted. The first phone call is put on hold. The number of active calls is shown in the **Telephone** menu. It is possible to switch between two phone calls.

Telephone data

Depending on the mobile device, when pairing (📶➡ 96) completes telephone data are automatically sent to the vehicle.

Phone book: List of contacts saved on the mobile device

Call list: List of calls with the mobile device

Favourites: List of favourites saved on the mobile device

DISPLAY SOFTWARE VERSION

- Navigate to **Settings**, **Information**, **Software version**.

DISPLAY LICENCE INFORMATION

- Navigate to Settings, Information, Licences.

ADJUSTMENT

06

MIRRORS	110
HEADLIGHT	110
BRAKES	110
CLUTCH	111
FOOTREST SYSTEM	112
STEERING	114
SPRING PRELOAD	115
DAMPING	118
SWINGING ARM	121
RIDING HEIGHT	125
DDC CALIBRATION	126

110 ADJUSTMENT

MIRRORS

Adjusting mirrors



- Pivot the mirror to the correct position by pressing gently at the edge of the glass.


HEADLIGHT

Headlight adjustment for right- or left-hand traffic

This motorcycle has a symmetric-beam low-beam headlight. If the motorcycle is ridden in a country where the opposite rule of the road applies, its symmetric low-beam headlight means that no measures are necessary to prevent the headlight beam from dazzling oncoming traffic.

Headlight beam throw and spring preload

The headlight beam throw generally remains constant by adjustment of the spring preload to the load status.

-  If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

BRAKES

Adjusting handbrake lever




WARNING


Adjusting the handbrake lever while riding

Risk of accident

- Do not attempt to adjust the handbrake lever unless the motorcycle is at a standstill.

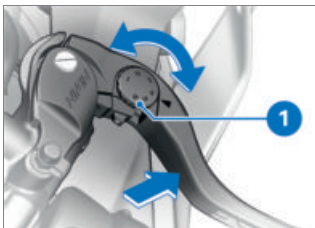


- Turn adjuster knob **1** to the desired position.

 The adjuster is easier to turn if you push the brake lever slightly forward.


» Adjustment options:

- Position 1: Narrowest span between handlebar grip and handbrake lever
- Position 6: Widest span between handlebar grip and handbrake lever

– with Billet pack^{OE}

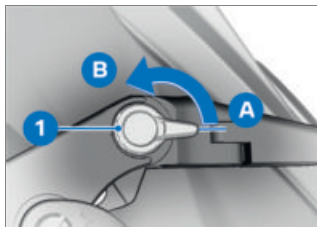

- Turn adjustment lever **1** to the desired position.

 The adjuster is easier to turn if you push the brake lever slightly forward.

» Adjustment options:

- From position **A**: Narrowest span between handlebar grip and handbrake lever.
- In 5 steps toward position **B** to increase the span between handlebar grip and handbrake lever.◀

CLUTCH

Adjusting clutch lever




WARNING


Adjusting the clutch lever while riding

Risk of accident

- Adjust the clutch lever only when the motorcycle is at a standstill.

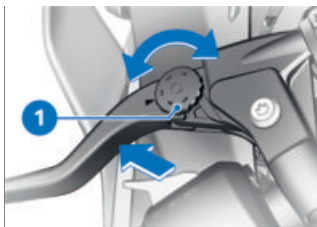

- Turn adjuster knob **1** to the desired position.


 The adjuster is easier to turn if you push the clutch lever forward.

» Adjustment options:


- Position 1: Narrowest span between handlebar grip and clutch lever
- Position 5: Widest span between handlebar grip and clutch lever

112 ADJUSTMENT

—with Billet pack^{OE}

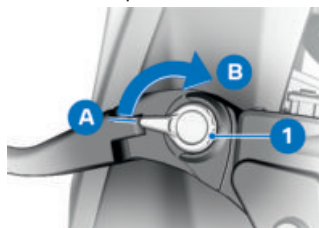

- Turn adjustment lever **1** to the desired position.

 The adjuster is easier to turn if you push the clutch lever forward.

» Adjustment options:


- Position **A**: Narrowest span between handlebar grip and clutch lever.
- In 5 steps toward position **B** to increase the span between handlebar grip and clutch lever.◀

FOOTREST SYSTEM

—with Billet pack^{OE}

Adjust the rotor

- Setting of the rotor is the same on the right and left.
- The position of the rotor must be set identically on the right and left.

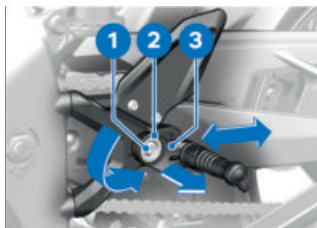

- Rotor **3** enables foot clearance and foot position to be adjusted.
- Slacken screw **1** in toothed bushing **2** until toothed bushing **2** can be eased out of rotor **3**.
 - » Rotor **3** can be adjusted to any of 6 positions around its axis of rotation.
 - » Rotor **3** can be adjusted to any of 5 positions along its longitudinal axis.
- Install rotor **3** in the desired position and tighten screw **1** in toothed bushing **2**.



Screw connection for footrest adjustment

M8 x 40

Thread-locking compound:
mechanical

20 Nm

**WARNING**

Incorrectly adjusted footrest as a result of movement of the rotor.

Risk of falling

- The footrest setting must be adjusted accordingly if the rotor has moved.


- The footrest may only fold upwards and slightly towards the rear.

Adjusting footrest hinge

- Setting of the footrest joint is the same on the right and left.



- Slacken screw **3**.
» Footrest joint **1** can be turned.
- Set footrest joint **1** to the reading on scale **2** corresponding to the position of the rotor.

 The scale is a guide for correct positioning of the footrest joint in combination with the setting selected for

the rotor. For example, if the rotor is moved one position clockwise, the footrest joint has to be moved one position counter-clockwise.

- Tighten screw **3**.




Clamping bolt for rider footrest

M8 x 25

Thread-locking compound: mechanical

20 Nm

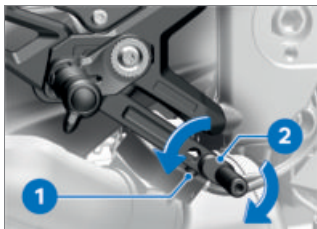Adjust the footbrake lever peg

- Foot clearance and height relative to peg **2** can be adjusted by turning to different positions.
- Slacken screw **1**.
- Turn peg **2** to the desired position.
- Tighten screw **1**.



Peg to footbrake lever

M6 x 20

114 ADJUSTMENT




Peg to footbrake lever

Thread-locking compound:
micro-encapsulated

10 Nm

Adjusting gearshift lever peg

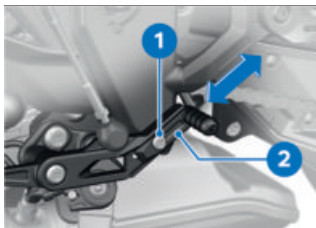

- Foot clearance can be adjusted by repositioning peg **2**.
- Slacken screw **1**.
- » Peg **2** can be repositioned along the longitudinal axis.
- Set the desired foot clearance and tighten screw **1**.




Folding peg

M6 x 16

10 Nm

STEERING

Adjusting steering damper

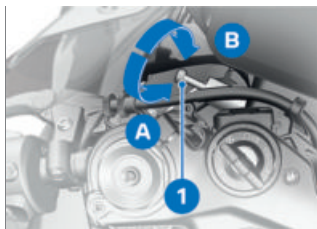

WARNING

Adjusting the steering damper while riding.

Risk of accident

- Do not attempt to adjust the steering damper unless the motorcycle is at a standstill.
- To increase damping: Turn adjusting screw **1** in direction **A**.
- To reduce damping: Turn adjusting screw **1** in direction **B**.



Steering damper basic setting

Turn adjusting screw to the limit position in direction **A**, then turn it 6 clicks in direction **B**. (Public roads)

Turn adjusting screw to the limit position in direction **A**, then turn it 4 clicks in direction **B**. (Racing)

SPRING PRELOAD

Adjustment

Front spring preload has to be adjusted to suit the rider's weight. Increase spring preload for heavier loads, decrease spring preload for lighter loads. It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring preload when the vehicle is heavily loaded and reduce spring preload accordingly when the vehicle is lightly loaded.


Lifting the motorcycle

Adjusting spring preload as recommended by BMW Motorrad requires the use of an engine lifter. The procedure for use of this equipment is not detailed here.

As an alternative, spring preload can also be gauged by a test ride. If you are not sure whether this work is within your capability, contact a specialist workshop, preferably an authorised BMW Motorrad retailer.

Adjust the spring preload for front wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Lift the motorcycle with an engine lifter until there is no load on the front wheel.

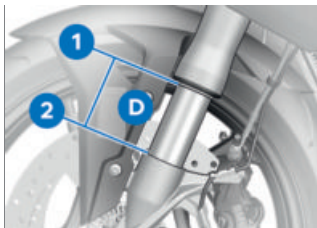

- Measure distance **D** between bottom edge **1** of the slider tube and front axle **2**.
- Remove the engine lifter.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Apply the rider's weight to the motorcycle.
- With the assistance of a second person, measure the distance **D** between the points **1** and **2** again and calculate the difference (compression) between the measured values.


116 ADJUSTMENT



Load-dependent adjustment of spring preload

Negative spring displacement of front wheel

35 ± 2 mm (with rider 85 kg)

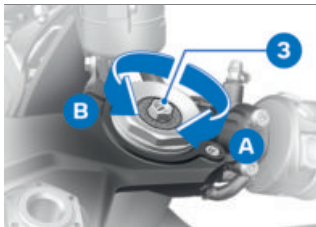

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.


- Adjust spring-strut damping to suit spring preload.
- To reduce compression (increase spring preload), use the tool from the on-board toolkit to turn adjusting screw **3** in direction **A**. The toolkit includes an appropriate adapter that protects the screw from scratches.
- To increase compression (reduce spring preload), use the tool from the on-board toolkit to turn adjusting screw **3**

in direction **B**. The toolkit includes an appropriate adapter that protects the screw from scratches.

Adjusting spring preload for rear wheel

—without Dynamic Damping Control (DDC)^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Use the engine lifter to raise the vehicle until the weight is completely off the rear wheel.

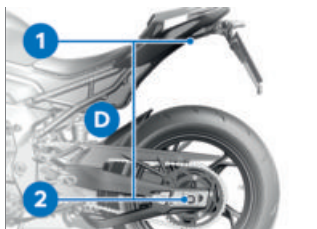

- Measure distance **D** between number plate carrier **1** and axle **2**.
- Remove the engine lifter.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Apply the rider's weight and possibly the weight of luggage to the motorcycle.
- With the assistance of a second person, measure


the distance **D** between the points **1** and **2** again and calculate the difference (compression) between the measured values.



Load-dependent adjustment of spring preload

Suspension compression at rear wheel

30±2 mm (Road use with rider 85 kg)

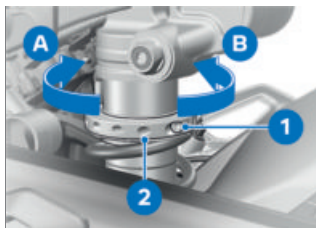

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload.

- Loosen screw **1** with toolkit.
- To reduce compression (increase spring preload), use the tool from the on-board toolkit to turn adjusting ring **2** in direction **A**.

- To increase compression (reduce spring preload), use the tool from the on-board toolkit to turn adjusting ring **2** in direction **B**.

- Tighten screw **1** to the specified tightening torque.



Screw in adjusting ring

M5 x 16

6 Nm

Adjusting spring preload for rear wheel


—with Dynamic Damping Control (DDC)^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Use the engine lifter to raise the vehicle until the weight is completely off the rear wheel.
- Switch on the ignition.
- Start the engine to avoid discharging the battery.



Adjustments to the DDC system are possible only with the ignition switched on, because only then are the electric valves active.

118 ADJUSTMENT

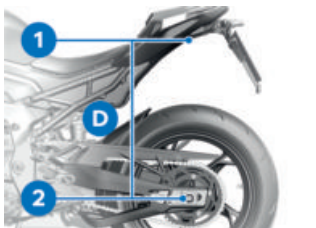


- Measure distance **D** between number plate carrier **1** and axle **2**.
- Remove the engine lifter.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Subject the motorcycle to load with a rider, and possibly with luggage.
- With the assistance of a second person, measure the distance **D** between points **1** and **2** again and calculate the difference (compression) between the measured values.



Load-dependent adjustment of spring preload

Suspension compression at rear wheel

30±2 mm (Road use with rider 85 kg)

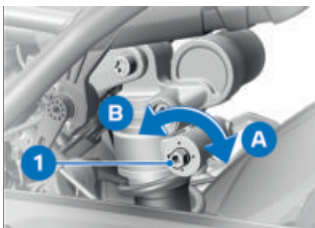

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload.

- To reduce compression (increase of spring preload), turn screw **1** using toolkit in the direction **A**.
- To increase compression (reduction of spring preload), turn screw **1** using toolkit in the direction **B**.

DAMPING

Adjustment

Damping must be adapted to suit the condition of the surface on which the motorcycle is ridden and to suit spring preload.

- An uneven surface requires softer damping than a smooth surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjust the compression-stage damping for front wheel

- without Dynamic Damping Control (DDC)^{OE}



- Adjust compression-stage damping using the adjusting screw **1** and the yellow scale on the left fork leg.



- To increase damping: Use the tool from the on-board toolkit

to turn the adjusting screw so that mark **2** points to a higher value on the scale.

- To reduce damping: Use the tool from the on-board toolkit to turn the adjusting screw so that mark **2** points to a lower value on the scale.



Compression stage, basic setting, front

Position 5 (Road use with rider 85 kg)

Adjust the rebound-stage damping for front wheel

- without Dynamic Damping Control (DDC)^{OE}



- Adjust rebound-stage damping using the adjusting screw **1** and red scale on the right fork leg.

120 ADJUSTMENT



- To increase damping: Use the tool from the on-board toolkit to turn the adjusting screw so that mark **2** points to a higher value on the scale.
- To reduce damping: Use the tool from the on-board toolkit to turn the adjusting screw so that mark **2** points to a lower value on the scale.




Rebound stage, basic setting, front

Position 5 (Road use with rider 85 kg)

Adjust the compression-stage damping for rear wheel

—without Dynamic Damping Control (DDC)^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.

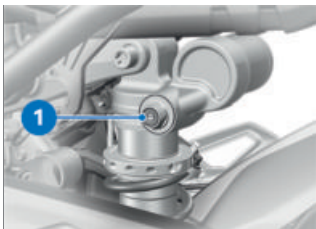

- Adjust the compression-stage damping by using the adjusting screw **1**.



- To increase damping: Use the tool from the on-board toolkit to turn the adjusting screw clockwise in the **+** direction.
- To reduce damping: Use the tool from the on-board toolkit to turn the adjusting screw counter-clockwise in the **-** direction.



Compression stage, basic setting, rear

Turn adjusting screw **1** to the limit position in the **+** direction, then turn it 5 clicks in the **-** direction. (Road use with rider 85 kg)

Adjust the rebound-stage damping for rear wheel

—without Dynamic Damping Control (DDC)^{OE}



CAUTION

Hot exhaust system


Risk of burn injury

- Do not touch a hot exhaust system.

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Adjust rebound-stage damping using the adjusting screw **1**.

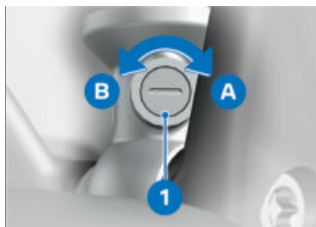

- To increase damping: Use the tool from the on-board toolkit to turn adjusting screw **1** in direction **A**.
- To reduce damping: Use the tool from the on-board toolkit to turn adjusting screw **1** in direction **B**.



Rebound stage, basic setting, rear

Turn adjuster knob to the limit position in direction **A**, then turn it 5 clicks in direction **B**. (Road use with rider 85 kg)

SWINGING ARM

Adjusting swinging arm

The swinging arm pivot point can be adjusted to three levels. Additional tools such as an engine lifter or footrest stand are required, however, they will not be dealt with in detail here. If you are not sure whether this work is within your capabil-

122 ADJUSTMENT

ity, contact a specialist workshop, preferably an authorised BMW Motorrad retailer.

Adjusting swinging arm pivot point

- Make sure the ground is level and firm and place the motorcycle on its stand.




ATTENTION

Vehicle toppling to side


Risk of damage to parts if vehicle topples

- Make sure that the vehicle is secured so that it cannot topple sideways.
- Lift motorcycle with an engine lifter or another suitable jack, so that there is no load on the rear wheel swinging arm.

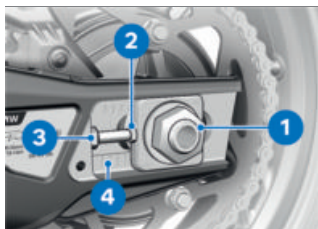


- Loosen quick-release axle nut **1**.
- Loosen lock nuts **3** on left and right.


- Use the adjusting screws **2** on left and right to significantly increase chain sag.
- Make sure that scale readings **4** are the same on left and right.

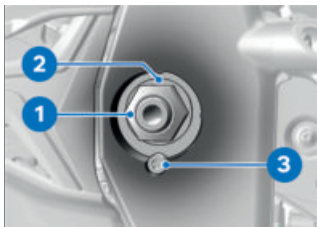


- Remove nut **1** and washer **2**.
- Remove fixing screw **3**.

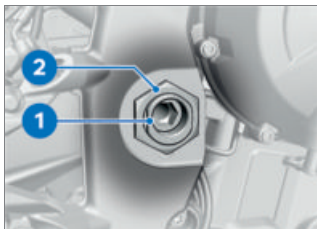

- Loosen swinging arm axle **1**.
- Remove nut **2**.

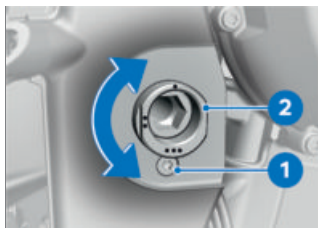


- Remove fixing screw **1**.
- Alternately turn right bush **2** and left bush in steps of no more than 90° until the desired position is reached.
- Install fixing screw **1**.

 Positioning of swinging arm pivot point bush in main frame, right


M6 x 26.7

5 Nm

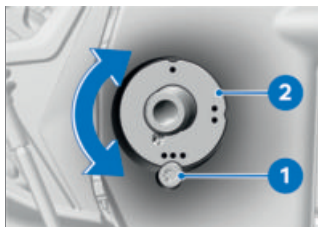


- Alternately turn left bush **2** and right bush in steps of no more than 90° until the desired position is reached.

- Make sure that left bush **2** and the right bush are fixed in the same position (**mark**).
- Install fixing screw **1**.


 Positioning of swinging arm pivot point bush in main frame, left

M6 x 12

8 Nm

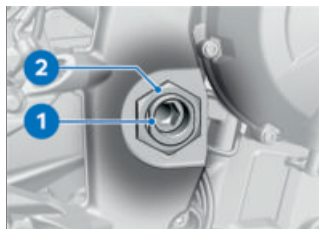

- Install nut **2** and tighten specified torque.


 Nut for swinging arm pivot point bush to frame

M36 x 0.75

Thread-locking compound:
Loctite 270, High strength

70 Nm

- Tighten swinging arm axle **1** to specified torque.

 Swinging arm axle to frame

M27 x 1.25

15 Nm (Tightening torque)


124 ADJUSTMENT



Swinging arm axle to frame

120° (Loosen)

5 Nm (Tightening torque)

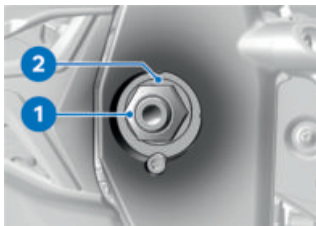

- Install nut **2** with washer **1** and tighten to specified torque, while counter-holding the swinging arm axle.




Nut on swinging arm axle

M18 x 1.5

Thread-locking compound: mechanical

100 Nm

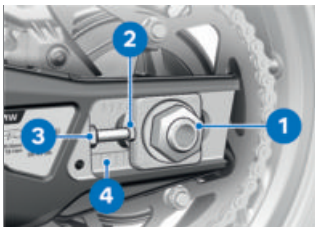

- Use the adjusting screws **2** on left and right to adjust chain sag.
- Check chain sag. (→ 220)
- Make sure that scale readings **4** are the same on left and right.
- Tighten lock nuts **3** on left and right to the specified tightening torque.



Locknut of the final-drive chain tensioning screw

M8

19 Nm

- Tighten quick-release axle nut **1** to the specified tightening torque.



Rear quick-release axle in swinging arm

M24 x 1.5

Thread-locking compound: mechanical

125 Nm

- Check chain sag. (→ 220)

- Remove the engine lifter.
 - After changing the swinging arm pivot point, the riding height must be corrected at the traction strut.
 - Adjust the ride height to swinging arm pivot point setting. (➡ 125)
- with Dynamic Damping Control (DDC)^{OE}
- Calibrate DDC. (➡ 126)

RIDING HEIGHT

Adjusting the riding height

The riding height at the rear-wheel guide can be adjusted via the traction strut length.

When adjusting the ride height, bear in mind that with certain setting combinations, the clearances to different components cannot be guaranteed. Therefore, after making changes, the clearance to the rear wheel swinging arm and rear wheel must always be checked.

Additional tools such as an engine lifter or footrest stand are required for adjusting the riding height; however, they will not be dealt with in detail here. If you are not sure whether this work is within your capability, contact a specialist work-

shop, preferably an authorised BMW Motorrad retailer.

Adjust the ride height to swinging arm pivot point setting

- Make sure the ground is level and firm and place the motorcycle on its stand.




ATTENTION

Vehicle toppling to side

Risk of damage to parts if vehicle topples

- Make sure that the vehicle is secured so that it cannot topple sideways.
- Lift the motorcycle with an engine lifter, so that there is no load on the rear wheel swinging arm.

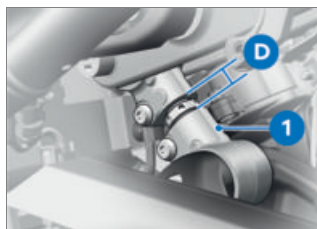

- Measure gap **D** at traction strut **1**.

126 ADJUSTMENT




Traction strut gap dimension to compensate the swinging arm pivot point setting

9.5 mm (Basic setting)

8.0...13.0 mm (Adjustment range)

12.5 mm (Swinging arm pivot point Position 2)

13.0 mm (Swinging arm pivot point Position 3)

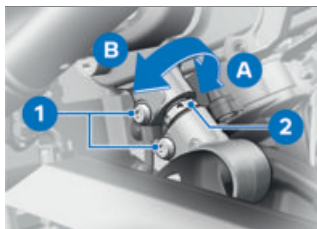

- Loosen clamping screws **1**.
- To increase ride height, turn adjusting screw **2** in direction **A**.
- To reduce ride height, turn adjusting screw **2** in direction **B**.
- Righten clamping screws **1**.



Clamping bolt at adjusting strut

M6 x 25

8 Nm

- Remove the engine lifter.

—with Dynamic Damping Control (DDC) ^{OE}


- Calibrate DDC. (→ 126)◀

DDC CALIBRATION

—with Dynamic Damping Control (DDC) ^{OE}

Calibrating DDC

- Place the motorcycle on the side stand or on a suitable auxiliary stand. Do not sit on the motorcycle during calibration. Remove items of luggage.

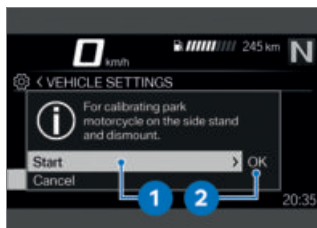

- Navigate to Settings, Vehicle settings, DDC calibration.
- Select Start **1** and confirm with OK **2**.
- » Calibration is performed.
- » If calibration was successful, Calibration was successful. is displayed. If Calibration failed! Park the fully unloaded vehicle on its side

stand. is displayed, the calibration must be repeated.

- **Select Repeat.**

» If calibration is not successful even after several attempts, contact a specialist workshop, preferably an authorised BMW Motorrad Partner.

RIDING

07

SAFETY INFORMATION	130
REGULAR CHECK	133
STARTING	134
RUNNING IN	137
SHIFTING GEAR	138
BRAKES	139
PARKING YOUR MOTORCYCLE	141
REFUELLING	142
SECURING MOTORCYCLE FOR TRANSPORTATION	144

SAFETY INFORMATION

Rider's equipment

Do not ride without the correct clothing! Always wear

- Helmet
- Suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad retailer will be glad to advise you on the correct clothing for every purpose.



WARNING

Loose textiles, items of luggage or straps snagged by open rotating parts of the vehicle (wheels, drive shaft)

Risk of accident

- Make sure that loosely worn or carried textiles cannot be snagged by openly rotating parts of the vehicle.
- Keep all items of luggage and straps well clear of openly rotating parts of the vehicle.

Load



WARNING

Handling adversely affected by overloading and imbalanced loads

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.

- Adjusting spring preload setting and damping to the total weight.

Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Settings of the spring-strut and shock-absorber system
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

Parts removed



ATTENTION

Riding on public roads without vehicle parts that were removed for racetrack use

Risk of accident, voiding of homologation for riding on public roads

- Install all vehicle parts required by law for operation on public roads.

Carbon wheels

—with M carbon wheels^{OE}

The material properties of carbon differ considerably from those of metallic materials, for example in terms of rigidity and weight.

Structural damage to carbon wheels is not always visible to the naked eye. If damage is suspected, for example after a fall or a significant influence on the carbon structure (e.g. riding through a pothole), carbon wheels must be evaluated by a specialist workshop with the relevant expertise, preferably an authorised BMW Motorrad retailer.



WARNING

Unnoticed structural damage

Risk of accident

- After a fall or a significant impact effect (e.g. riding through a pothole), have carbon wheels checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



WARNING

Exhaust gases adversely affecting health

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.



WARNING

Inhalation of harmful vapours

Health hazard

- Do not inhale vapours from operating fluid and plastics.
- Use the vehicle only outdoors.

Risk of burning



CAUTION

Engine and exhaust system become very hot when the vehicle is in use

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.



WARNING

Opening radiator cap

Risk of burning

- Do not open the radiator cap when the system is hot.
- Check and, if necessary, top up the coolant in the expansion tank only.

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry.
- Do not attempt to start or run the engine with a spark-plug cap disconnected.

- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.



ATTENTION

Unburned fuel in catalytic converter

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.

Risk of overheating



ATTENTION

Engine running for prolonged period with vehicle at standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.

Tampering



ATTENTION

Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

- Do not tamper with the vehicle in any way that could result in tuned performance.

REGULAR CHECK

Comply with checklist

At regular intervals, use the checklist below to check your motorcycle.

When load status changes:

- Adjust the spring preload for front wheel (➡ 115).
- Adjust the damping characteristic for the front wheel (➡ 119).
- Adjust the spring preload for the rear wheel (➡ 116).
- Adjust the damping for the rear wheel (➡ 120).

Always before riding off

- Check operation of the brake system (➡ 203).
- Check operation of the lights and signalling equipment.
- Check operation of the clutch (➡ 207).
- Check the tyre tread depth (➡ 210).
- Check the tyre pressures (➡ 210).
- Check security of luggage.


Every 3rd refuelling stop


- Check the engine oil level (➡ 201).
- Check the brake pad thickness, front brakes (➡ 203).
- Check the brake pad thickness, rear brakes (➡ 204).
- Check the brake-fluid level, front brakes (➡ 205).
- Check the brake-fluid level, rear brakes (➡ 206).
- Check the coolant level (➡ 208).
- Lubricate the chain (➡ 221).
- Check chain sag (➡ 220).
- Check chain wear (➡ 222).

STARTING

Starting engine

- Switch on the ignition. (➡ 62)
- » Pre-Ride-Check is performed. (➡ 134)
- » ABS self-diagnosis is in progress. (➡ 135)
- » DTC self-diagnosis is in progress. (➡ 136)
- Select neutral or, if a gear is engaged, pull the clutch lever.


 You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.

 To ensure rapid operational readiness of the catalytic converter, idle speed is increased for a short time after engine start.

- Cold starts and low temperatures: Pull the clutch lever.
- » Low temperatures can impact on the starting response. Repeated, brief application of load on the battery causes battery temperature to rise, so more battery power is available for starting the engine.



- Press starter button **1**.

 The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.

See the subsection on jump starting in "Maintenance" for more details.

- » The engine starts.
- » Consult the troubleshooting chart below if the engine refuses to start. (➡ 252)

Pre-Ride-Check

The instrument cluster runs a test of the instruments and the indicator and warning lights when the ignition is switched on. This test is known as the Pre-Ride-Check. The test is aborted if you start the engine before it completes.

Phase 1

All indicator and warning lights are switched on.

After a longer vehicle stand-still period, an animation is displayed when the system starts up.

Phase 2

The 'General' warning light changes from red to yellow.

Phase 3

All the indicator and warning lights switched on in the initial phase are switched off in reverse sequence.

The malfunction indicator lamp (MIL) does not go out until 15 seconds have elapsed.

If one of the indicator and warning lights did not switch on:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.



The intervention of riding dynamics control systems can be restricted, depending on which riding mode is selected and how the selected mode is configured.

Possible restrictions are indicated by a pop-up message,

for example Warning! ABS & DTC setting..

See the section entitled "Engineering details" for more information on riding dynamics control systems such as ABS and DTC.

ABS self-diagnosis

BMW Motorrad Integral ABS performs self-diagnosis to ensure its operability. Self-diagnosis starts automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosis-compatible system components with the vehicle at a standstill.



flashes.

Phase 2

- » Test of the wheel-speed sensors as the vehicle pulls away from rest.



flashes.

ABS self-diagnosis completed

- » The ABS indicator and warning light goes out.



ABS self-diagnosis not completed

The ABS function is not available because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride.
Bear in mind that neither the ABS function nor the integral braking function is available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

DTC self-diagnosis

BMW Motorrad DTC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosis-compatible system components with the vehicle at a standstill.



slow-flashes.

Phase 2

- » Pullaway test of the system components with diagnostic capability.



slow-flashes.

DTC self-diagnosis completed

- » The DTC symbol no longer shows.

- Check all the indicator and warning lights.



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel sensors to be checked: min 5 km/h)



If an indicator showing an DTC fault appears when DTC self-diagnosis completes:

- You can continue to ride.
Bear in mind that the DTC function is not available or the functionality might be subject to certain restrictions.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad Retailer.

RUNNING IN

Engine

- Until the first running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads.
- Comply with the running-in speeds.

	Running-in speed
	<7000 min ⁻¹ (Odometer reading 0...300 km)
	<9000 min ⁻¹ (Odometer reading 300...1000 km)
	No full load (Odometer reading 0...1000 km)
	• Note the mileage after which the running-in check should be carried out.
	Mileage until the running-in check
	500...1200 km

Brake pads

New brake pads have to be run in before they can achieve their optimum friction levels. The reduced braking effect can be compensated for by greater pressure on the brake lever.



WARNING

New brake pads

Longer stopping distance, risk of accident

- Apply the brakes in good time.

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



WARNING


New tyres losing grip on wet roads and at extreme bank angles


Risk of accident

- Ride carefully and avoid extremely sharp inclines.

SHIFTING GEAR

Gear Shift Assistant Pro

 See the section entitled "Engineering details" for more information on Gear Shift Assistant Pro.

 For safety reasons, adaptive cruise control is automatically deactivated when Gear Shift Assistant Pro downshifts.




- You select the gear in the usual way by means of the foot-operated shift lever.
- » The sensor **1** on the gearshift rod registers the gearshift request and triggers shift assistance.
- » When you are riding at constant speed or in overrun in a low gear with the engine revving high, shifting gear without disengaging the clutch can cause a severe reaction to the load change. BMW Motorrad recommends


disengaging the clutch for shifts in these circumstances. It is advisable to avoid using the shift assistant at engine speeds close to the limits at which the governor cuts in to limit engine rpm.

- » Shift assistance is not available in the following situations:
 - With clutch lever pulled.
 - Gearshift lever not in its initial position
 - After a gearshift, the shift lever has to be fully released before another gearshift with the shift assistant can take place.

Shift light

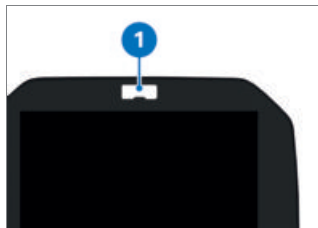

Shift light **1** indicates to the rider that the engine speed threshold preset beforehand for upshifts is approaching.

-  When the shift light flashes the secondary

indicator flashes as well, even in the solid red rpm range.

- Shift light flashes at preset frequency: Approaching upshift rpm
- Shift light goes out: Engine revving at upshift rpm

The engine-speed thresholds and the way in which the shift light indicates the various states can be customised by navigating to **Settings, Vehicle settings**, also see the section on operation (▮▮▮ 78).

BRAKES

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The higher the wheel load, the more braking force can be transmitted.

To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic

increase in load at the front wheel. Remember to pull the clutch at the same time.

BMW Motorrad ABS Pro prevents the front wheel from locking up.

In the "emergency braking situations" that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road. In the absence of load on the wheel the ABS has to intervene to prevent the front wheel from locking even if the brakes are applied only very lightly. This leads to a reduced braking effect.

Emergency braking

If you brake sharply from a speed in excess of >50 km/h, the brake light flashes rapidly as a warning for road users behind you.

If you brake until your speed is less than <15 km/h, the hazard warning lights start to flash as well. The hazard warning lights switch off automatically

140 RIDING

as soon as you start to accelerate and vehicle speed reaches 20 km/h.

Descending mountain passes



WARNING

Braking mostly with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.



WARNING

Wetness and dirt result in diminished braking efficiency

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.

ABS Pro

Physical limits applicable to motorcycling



WARNING

Braking when cornering

Risk of crash despite ABS Pro


- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.

– without riding modes Pro^{OE}



ABS Pro is activated in all riding modes except RACE.<

—with riding modes Pro^{OE}

 ABS Pro is activated in all riding modes. In RACE PRO riding mode, ABS Pro can be parametrised to suit the rider's individual needs and preferences.◀


Possibility of a fall not precluded

Although ABS Pro and Dynamic Brake Control provide the rider with valuable assistance and constitute a huge advance in safety for braking with the motorcycle banked for cornering, they cannot under any circumstances be considered as re-defining the physical limits that apply to motorcycling. It is still possible for these limits to be overshoot due to misjudgement or rider error. In extreme cases this can result in a crash.

Use on public roads


ABS Pro and Dynamic Brake Control help make the motorcycle even safer for riding on public roads. When the brakes are applied because of an unforeseen hazard when the motorcycle is banked for cornering, within the physical limits that apply to motorcycling the ABS Pro system prevents the wheels from locking and skid-

ding away. In emergency braking, Dynamic Brake Control increases the braking effect and intervenes if the throttle grip is accidentally turned during braking.

 ABS Pro was not developed to enhance individual braking performance with the motorcycle banked into corners.

PARKING YOUR MOTORCYCLE

Side stand

- Switch off the ignition.
( 62)
- On a gradient, the motorcycle should always face uphill; select 1st gear.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.

- Extend the side stand and prop the motorcycle on the stand.



ATTENTION

Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.

- If the camber of the roadway permits, turn the handlebars all the way to the left.

REFUELLING

Fuel grade

Requirement

For optimum fuel consumption, fuel should be sulphur-free or as low-sulphur as possible.



ATTENTION

Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron).
- Observe the maximum ethanol content of the fuel.



Fuel additives clean the fuel injection system and the combustion zone. It is ad-

visable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.



Recommended fuel grade



Premium, unleaded
(max. 5 % ethanol, E5)
98 ROZ/RON
93 AKI



Alternative fuel grade



Premium unleaded
(power- and consumption-related restrictions)
(max 10 % ethanol, E10)
95 ROZ/RON
90 AKI

» Look for these symbols on the fuel filler cap and on the fuel pump:



Refuelling



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank.



ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.
- Make sure the ground is level and firm and place the motor-cycle on its side stand.



- Open protective flap **1**.
- Unlock cap **2** of the fuel tank by turning the vehicle key clockwise in the lock and pop the cap open.




- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.



When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and the fuel reserve indicator light is switched off.

144 RIDING

 The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.



Usable fuel capacity

approx. 17 l



Fuel reserve

approx. 4 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

SECURING MOTORCYCLE FOR TRANSPORTATION

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.




ATTENTION

Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.

- Push the motorcycle onto the transportation flat and hold it in position: do not place it on the side stand.

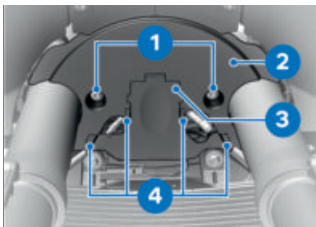

- Carefully unclip cover **3** from holder **4** and remove.

- Remove screws **1** and fork partition **2**.



ATTENTION


Trapping of components

Component damage

- Do not trap components such as brake lines or cable legs.
- At the front, loop a strap over the bottom fork bridge on each side.
- Pull the straps down and tight.



- At the rear, secure the straps to the rear frame on both sides and tighten the straps.
- Tighten all the straps uniformly; the vehicle's suspension should be compressed as tightly as possible front and rear.

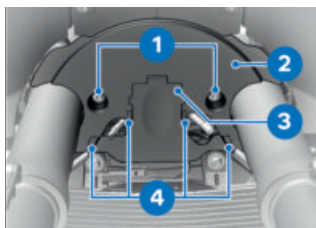

- After transport, position fork partition **2** and install bolts **1**.



Fork partition to bottom fork bridge

M5 x 14

2 Nm

- Place cover **3** in position and clip it into holder **4**.

ON THE RACE TRACK


08

STATUS INDICATORS FOR RACING	148
LAPTIMER	151
RACE PRO RIDING MODES	152
LAUNCH CONTROL	154
PIT LANE LIMITER	155
DTC	156
CHASSIS AND SUSPENSION SETTINGS FOR RACING	158
MIRRORS	159
NUMBER PLATE CARRIER	163
M COVER KIT	166
SWITCHING OFF ABS WHEN RIDING ON THE RACE TRACK	168
DEACTIVATING INTELLIGENT EMERGENCY CALL WHEN RIDING ON THE RACE TRACK	169
GEARSHIFT-PATTERN REVERSER	173
DATA RECORDING AND 2D SOFTWARE	174

148 ON THE RACE TRACK


STATUS INDICATORS FOR RACING

SPORT 1 DISPLAY

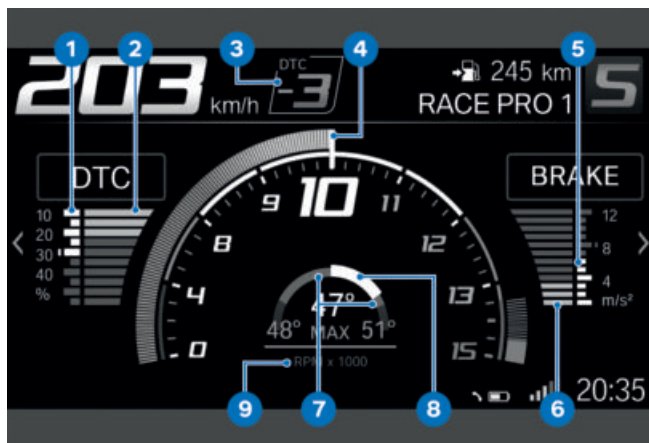

- 1 Maximum DTC torque reduction
- 2 Current DTC torque reduction
- 3 DTC control value
- 4 Rev. counter
- 5 Maximum braking deceleration
- 6 Current braking deceleration
- 7 Maximum lean angle
- 8 Current lean angle
- 9 Unit for engine speed display: 1000 revolutions per minute


SPORT 2 DISPLAY

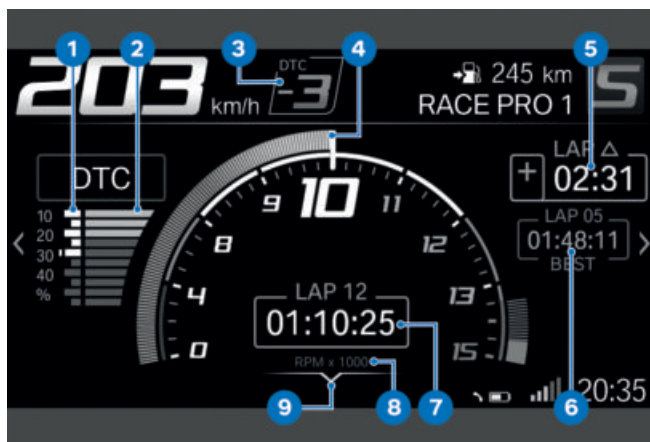

- | | |
|---|---|
| <p>1 Maximum DTC torque reduction</p> <p>2 Current DTC torque reduction</p> <p>3 DTC control value</p> <p>4 Rev. counter</p> <p>5 Difference between the last lap time and reference time or difference between current lap time and reference time</p> <p>6 Reference time: Fastest of the currently saved laps or all-time fastest saved lap (▶ 151)</p> <p>7 Current lap time</p> | <p>8 Unit for engine speed display: 1000 revolutions per minute</p> <p>9 Operating help</p> |
|---|---|

150 ON THE RACE TRACK

SPORT 3 DISPLAY

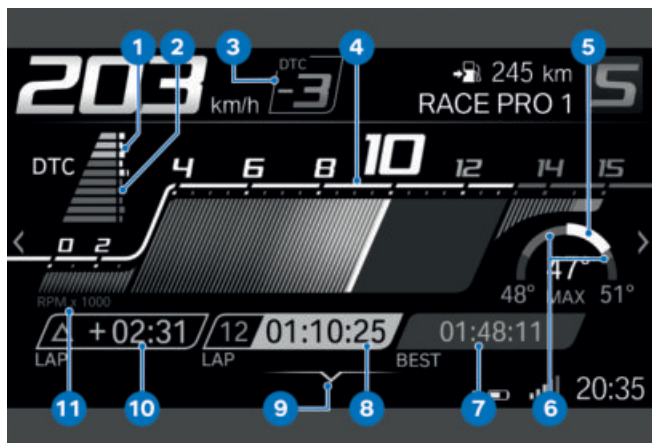

- | | |
|--|---|
| 1 Current DTC torque reduction | 10 Difference between the last lap time and reference time or difference between current lap time and reference time |
| 2 Maximum DTC torque reduction | |
| 3 DTC control value | |
| 4 Rev. counter | |
| 5 Current lean angle | |
| 6 Maximum lean angle | |
| 7 Reference time: Fastest of the currently saved laps or all-time fastest saved lap (► 151) | 11 Unit for engine speed display: 1000 revolutions per minute |
| 8 Current lap time | |
| 9 Operating help | |

LAPTIMER

Start the timing

- Call up the `Sport` menu and change to the `Sport 2` or `Sport 3` display.
- Start the engine.



- Press button **1**.
 - » Time recording is running.
- Every time you cross the start/finish line, press button **1** again to start recording for the next lap.
 - » The data of the preceding lap are written into memory.
 - » The time for the current lap starts again from `00:00:00`.
 - » The stopped time for a lap is displayed for an adjustable `Disp. duration` time before the display switches to elapsed time for the current lap.
 - » Recording continues even if you exit the display mode during recording.

Ending time recording and managing times

Requirement

`Sport 2` or `Sport 3` display is shown.

- Press down the `MENU` rocker button.
 - » The `LAPTIMER` menu is displayed.
- Timing in progress can be ended with `Stop recording`.
- You can go to the current lap times and riding data by using `Laps`. 99 laps can be saved. If the laps have not been deleted in the meantime, additional laps overwrite the first laps.
- All laps can be deleted with `Delete all laps`.
- You can use `Reset Best Ever` to reset the all-time best lap (`Best Ever`).

Set up the laptimer

- Navigate to `Settings`, `Vehicle settings`, `Laptimer`. The following settings are available:
 - » `Debounce time`: If the headlight flasher has been actuated, the headlight flasher can be actuated again within this time without affecting lap time measurement.

152 ON THE RACE TRACK

- » **Trigger:** Change of actuation. **Manual:** Actuation by headlight flasher. **External:** Actuation by M GPS-Laptrigger. Automatic signalling of each new lap and evaluation of the logged data require the optional M Datalogger accessory including GPS-Laptrigger.
- » **Disp. duration:** Within this time, the stopped lap time is displayed before the current lap time is shown.
- » **Reference:** Selection of which best time is displayed as a reference. **Best:** Best time of the current recording session or **Best Ever:** Best-ever measured time.
- » **Best lap in progress:** When this function is activated, the difference between the current lap time and the reference time is displayed instead of the difference between the last lap time and the reference time.

Best-ever lap

The best-ever lap (**Best Ever**) is the fastest of all recorded laps and is updated once a faster lap has been recorded. The best-ever lap remains stored in memory even if the

recorded laps are deleted. This means that other races can subsequently be timed and the lap times of those races compared with the best-ever lap from earlier races.

The best-ever lap can be deleted in the **LAPTIMER** menu. If the best-ever lap is from a saved recording, it is accompanied on the display by the relevant lap number. If the best-ever lap shows without a lap number, this means that it comes from a recording that has been deleted.

RACE PRO RIDING MODES

—with riding modes Pro^{OE}

Configuration for the race track

The RACE PRO riding modes enable pro-rider tweaks to be made to the chassis and suspension, braking and engine control systems. This means that individual rider requests, track characteristics and weather conditions can be taken into account.

The following parameters can be adjusted:

- Engine
- Engine Brake
- Traction (DTC)
- Wheelie (DTC)
- ABS
- with Dynamic Damping Control (DDC)^{OE}
- DDC

For further information about the parameters, see (➡ 185).

Three RACE PRO riding modes can be configured.

One RACE PRO riding mode can also be selected by pressing the MODE button (➡ 70).

Configuring RACE PRO riding modes

- Navigate to Settings, Vehicle settings and select Driving mode preselection.
- Activate at least one RACE PRO riding mode.
- Select Configuration.
- » The current configurations are shown as an overview.



- Select a configuration.



- Select a parameter.
- » The current setting is displayed graphically and numerically. In addition, explanatory texts are displayed for the relevant setting.
- If a setting is also saved in a standard riding mode, this riding mode is specified.
- Change the setting as desired.

Restore the factory defaults

- Select a configuration.
- Scroll down the list of parameters and select the last entry Reset.

154 ON THE RACE TRACK

LAUNCH CONTROL

Racing start with Launch Control

—with riding modes Pro^{OE}

Launch Control assists the rider by revving the engine to the ideal speed for a racing start.



Engine speed after activating Launch Control at full throttle

9000 min⁻¹

When Launch Control is active engine torque is reduced so that forward propulsion is maximised on the flat with the front wheel just starting to lift off the ground. Torque is temporarily reduced slightly when the electronics detect front-wheel lift. Engine rpm limitation is deactivated when the motorcycle reaches a specified speed.



Speed when deactivating engine speed limitation for Launch Control

approx. 70 km/h

Launch Control is switched off in the following circumstances:

- Third gear is engaged.
- Bank angle is greater than 30°.
- The engine or the ignition is switched off.

The number of consecutive starts using Launch Control is limited in order to protect the clutch. The number of possible starts remaining appears on the display, e.g. Launch Control: 3 starts still avail..

Operating Launch Control



CAUTION

Launch Control permits maximum acceleration, so unfamiliar riding situations can occur.

Risk of accident through increased acceleration.

- Use Launch Control only on race tracks.

- Bring vehicle to starting position.
 - » Vehicle is stationary, engine is running.



- Press and hold down starter button **1** until the display shows the number of starts with Launch Control still permitted.
- » If no more starts are possible, L-Con not available. Clutch too hot. is displayed.
- Allow the clutch to cool.



Clutch cooling time

approx. 3 min (With engine running)

approx. 20 min (With engine stopped)

- Proceed in the normal way when starting; open the throttle only as far as necessary to reach the rpm limit.
- After engaging the clutch, open the throttle completely.
 - » Shift light shows or flashes.
 - » Launch Control controls the optimum torque on the rear

wheel and keeps the engine speed constant up to the speed specified below.

- Keep the throttle twistgrip fully open.



Speed when deactivating engine speed limitation for Launch Control

approx. 70 km/h

- » As soon as rpm limitation ceases, engine rpm increases because the throttle twistgrip is in the full-throttle position.
- » Throttle-twistgrip reaction is normal again.
- » If in third gear or leaning further than 30°, the shift light disappears.
- » The racing start with Launch Control is concluded.

PIT LANE LIMITER

—with riding modes Pro^{OE}

Limiting the speed with the Pit Lane Limiter

The Pit Lane Limiter helps you to comply with a speed limit, e.g. in the pit lane. To do so, a maximum rpm is specified for the engine when riding in 1st gear.



The speed resulting from the maximum rotational

156 ON THE RACE TRACK

speed is dependent on the ratio and tyre size.

Range of values

-3500 to 8000 rpm in increments of 100

Setting up Pit Lane Limiter

- Navigate to Settings, Vehicle settings and activate Pit Lane Limiter.
- Select Configuration.
- Set up RPM.

Operating Pit Lane Limiter



- Ride in 1st gear.
 - Press and hold down starter button **1**.
 - Open throttle grip until the set maximum rpm has been reached.
- » Engine speed is limited to the set rpm.



WARNING

As soon as the starter button is released the vehicle accelerates in accordance with the position of the throttle twistgrip.

Risk of crashing due to severe jerk forward if throttle twist-grip in full load position.

- Do not fully open the throttle twistgrip; instead, turn it only to the position at which the engine reaches its speed-limit rpm.

- Release starter button **1**.
 - » The vehicle accelerates at the maximum rate.

DTC

DTC adjustment

The DTC controls permissible rear-wheel slip in accordance with your selected riding mode.

- with riding modes Pro^{OE}

The control can be adjusted in detail in the configuration of the RACE PRO riding modes. Configuring RACE PRO riding modes (153)



The DTC setting can be adjusted during riding via the DTC rocker button **1** on the left handlebar operating facility.

Adapt DTC

- Configure the RACE PRO riding modes. (153)
- Select the desired RACE PRO riding mode.



DTC can also be adjusted during riding.



If RACE PRO riding mode is activated, Speed Limit Info **1** is hidden and DTC control value **2** is displayed instead.



- Press rocker button **1** upwards briefly in order to increase DTC control.



WARNING

Loss of stability because of rear wheel spinning when DTC control is reduced.

Risk of falling

- Reduce DTC for riding on racing circuits only.
- Only change DTC control by one level at a time and carefully test the effects on drivability.

- Press DTC rocker button **1** downwards briefly in order to reduce DTC control.
- » The set value is shown in the display and is between -7 and 7:
- » 1 ... 7: Reduce slip at the rear wheel in a maximum of seven stages. 7 is the value corresponding to earliest DTC intervention.

» -1 ... -7: Increase slip at the rear wheel in a maximum of seven steps. -7 is the value corresponding to latest DTC intervention.

» 0: Works default setting

» DTC indicator not showing:
DTC is switched off.

DTC shutdown

On very loose surfaces (for example in a gravel trap of a race track) the DTC's attempts to control propulsive power might reduce drive to the extent that the machine cannot propel itself forward. Under these circumstances, BMW Motorrad recommends temporarily switching off DTC. Bear in mind that the rear wheel will spin on the loose surface and close the throttle in good time before you reach a firm surface.

Switching off DTC also deactivates traction control and wheelie suppression.

Switch DTC on again as soon as temporary shutdown is no longer necessary.

Switching off DTC (➡ 69)

CHASSIS AND SUSPENSION SETTINGS FOR RACING

Observe the recommendations for racing:

Adjust the steering damper (➡ 114).

—without Dynamic Damping Control (DDC)^{OE}

Adjust the spring preload for the rear wheel (➡ 116).

—with Dynamic Damping Control (DDC)^{OE}

Adjust the spring preload for the rear wheel (➡ 117).

—without Dynamic Damping Control (DDC)^{OE}

Adjust compression-stage damping for front wheel (➡ 119).

Adjust rebound-stage damping for front wheel (➡ 119).

Adjust rebound-stage damping for rear wheel (➡ 120).

Adjust compression-stage damping for rear wheel (➡ 121).

- with Dynamic Damping Control (DDC)^{OE}
Dynamic Damping Control (DDC) automatically selects the appropriate damping (➡ 182).
- with Dynamic Damping Control (DDC)^{OE}
- with riding modes Pro^{OE}
Dynamic Damping Control (DDC) can be individually adjusted for the front and rear wheel (➡ 153).

Adjust ride height (➡ 125).
Adjusting swinging arm (➡ 122).

MIRRORS

Remove the mirrors




ATTENTION

Removal of the mirrors

Voiding of homologation for riding on public roads

- Do not ride on public roads without mirrors and turn indicators correctly installed.

- Make sure the ground is level and firm and place the motorcycle on its stand.

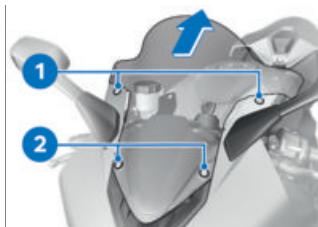

- Remove screws **1** and **2**.
- Remove windscreen in the **direction of arrow**.




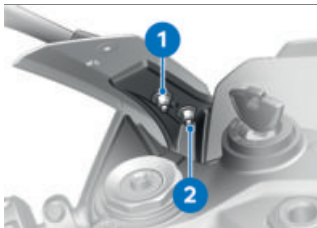
- Unclip air inlet flap at the top in the **direction of arrow** and remove downwards.

160 ON THE RACE TRACK



- Disconnect connector for right turn indicator **1** and left turn indicator **2**.

 If the mirrors with integrated turn indicators are removed in preparation for a race-track session, the electronics interpret this as a defective light and the corresponding warning appears on the display. Deactivating the **Light warnings** function in the **Lights** menu suppresses this warning message.




- Remove nuts **1** and **2** on the left and right and remove mirrors.

- Carefully thread out cable.




- Secure fairing **1** at the left and right fairing bracket **2**. If cable ties are used, affix adhesive tape as protection at the points where chafing might occur.

 Use the M Cover Kit from BMW Motorrad to cover the threaded holes for the screws so that the parts can subsequently be re-installed. The M Cover Kit also includes blanking plugs to prevent moisture from making its way into the vehicle electrical system.



- Position air inlet flap **1** and clip in at the top **2**.

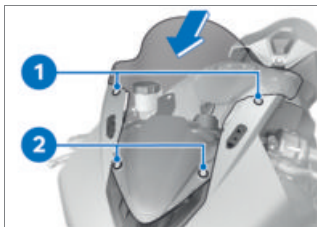

- Position windscreen in the **direction of arrow**.
- Install screws **1** and **2**.



Windscreen to air intake

M5 × 16

1 Nm




Fairing top section to windscreen

M5 × 16


1.5 Nm

Install the mirrors

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Remove the trim panel fasteners.

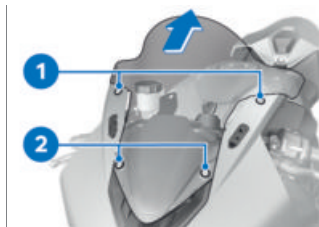

- Remove screws **1** and **2**.
- Remove windscreen in the **direction of arrow**.

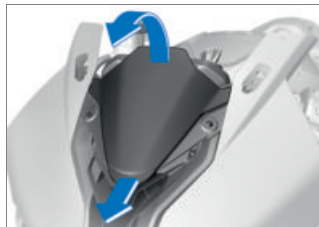

- Unclip air inlet flap at the top in the **direction of arrow** and remove downwards.

162 ON THE RACE TRACK



- Carefully thread in cable for turn indicators.
- Place left and right mirrors in the mountings **1**.



- Connect connector for right turn indicator **1** and left turn indicator **2**.
- Check operation of the turn indicators.



- Install new nuts **1** and **2** on the rear of the fairing and tighten to specified torque.



- Insert air inlet flap at the bottom **1** and clip in at the top **2**.




Mirror to front panel carrier

M6

Thread-locking compound:
mechanical

8 Nm

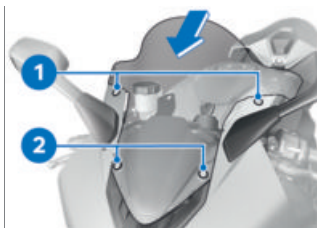

- Position windscreen in the **direction of arrow**.
- Install screws **1** and **2**.



Windscreen to air intake

M5 × 16

1 Nm



Fairing top section to windscreen

M5 × 16

1.5 Nm

NUMBER PLATE CARRIER

Remove the number plate carrier




ATTENTION

Removal of the number plate carrier


Voiding of homologation for riding on public roads


- With the number-plate carrier removed, do not ride the motorcycle on public roads.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- with two-up riding package ^{OE}
- Remove the rear seat. (▮▮▮ 81)
- Remove the tail-hump cover. (▮▮▮ 81)

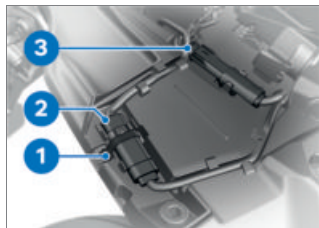

- Remove cable strap **1**.
- Disconnect connector for right turn indicator **2** and connector for number plate light **3**.

164 ON THE RACE TRACK

 If the license-plate carrier is removed in preparation for a race-track session, the electronics interpret this as a defective light and the corresponding warning appears on the display. Deactivating the Light warnings function in the Lights menu suppresses this warning message.

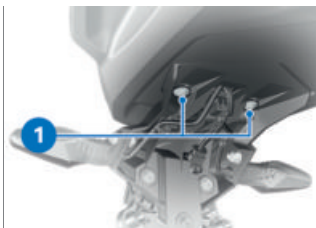


- Remove screws **1**.



- Remove cable strap **1**.
- Disconnect connector for left turn indicator **2**.



- Unhook number plate carrier **1** and remove down-wards.
- Carefully thread out cable.

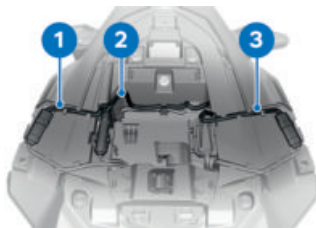

- Work cables for right turn indicator **1**, number plate light **2** and left turn indicator **3** clear.

-  Use the M Cover Kit from BMW Motorrad to cover the threaded holes for the screws so that the parts can subsequently be re-installed. The M Cover Kit also includes blanking plugs to prevent moisture from making its way into the vehicle electrical system.
- Prevent moisture from making its way into open plug

connections, preferably by inserting the corresponding blanking plugs from the BMW Motorrad M Cover Kit.

—with two-up riding package^{OE}

- Install the passenger seat.

( 81)

- Install the tail-hump cover.

( 81)

Install the number plate carrier

- Make sure the ground is level and firm and place the motorcycle on its stand.

—with two-up riding package^{OE}


- Remove the rear seat. ( 81)

- Remove the tail-hump cover.

( 81)



- Position number plate carrier **1** and carefully thread in cable.
- Hook in number plate carrier **1**.

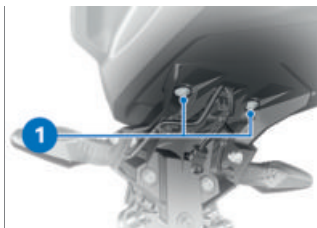


- Install screws **1**.



Number-plate carrier to rear frame


M5 x 25

2 Nm

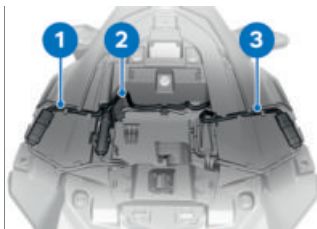


- Work cable for right turn indicator **1** into position.
- Work cables for number plate light **2** and left turn indicator **3** into position.

166 ON THE RACE TRACK

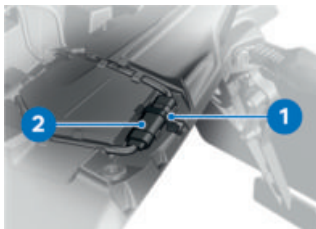

- Connect connector for left turn indicator **1**.
- Install cable strap **1**.
- » The cable-tie latch is seated in the recess provided for the purpose.

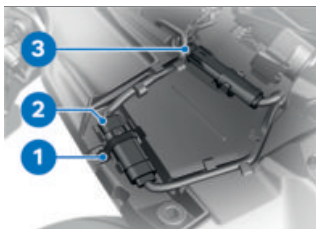

- Connect connector for right turn indicator **2** and connector for number plate light **3**.
- Install cable strap **1**.
- » The cable-tie latch is seated in the recess provided for the purpose.
- Check operation of the light and the turn indicators.

—with two-up riding package^{OE}

- Install the passenger seat.
(81)
- Install the tail-hump cover.
(81)


M COVER KIT

Covering body openings

Requirement


The M Cover Kit is used to professionally mount the front trim panel and to cover the body openings if the mirrors and number plate carrier have been removed.

- Remove the mirrors. (159)
- Remove the number plate carrier. (163)
- Install the M Cover Kit.
(167)


 Comply with the installation instructions supplied with the optional accessory or racing accessory.

- After removal of the M Cover Kit, the mirrors and the number plate carrier have to be re-installed.
- Install the number-plate carrier. (165)
- Install the mirrors. (161)

Installing M Cover Kit

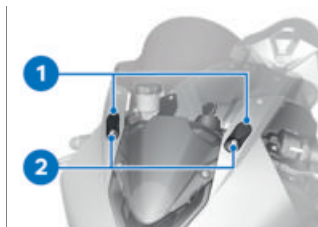

- Insert mirror mount cover **1**.
- Install screws **2**.

 Cover for mounting of mirror

M6 x 25


3 Nm



- Hook in and position number plate carrier cover **1**.




- Install screws **1**.

 Number-plate carrier to rear frame

M5 x 25

2 Nm

Removing M Cover Kit

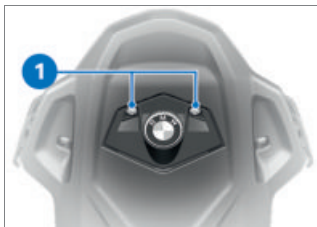


- Remove screws **1**.

168 ON THE RACE TRACK



- Unhook number plate carrier cover **1** and remove downwards.
- Install the number-plate carrier. (▮▮▮▮ 165)

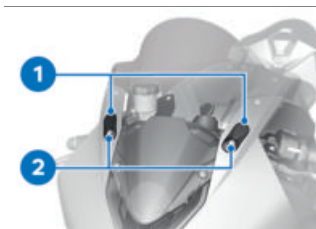

- Remove screws **2**.
- Remove mirror mount cover **1**.
- Install the mirrors. (▮▮▮▮ 161)

SWITCHING OFF ABS WHEN RIDING ON THE RACE TRACK

Switch off the ABS function Requirement

Number plate carrier is removed.

- Switch on the ignition.
(▮▮▮▮ 62)



You have the option of deactivating the ABS function while the motorcycle is on the move.



- Press button **1** for at least three seconds.



lights up.

- » The ABS function is switched off.
- » The integral function is switched off.
- » Hill Start Control is still activated.

- with riding modes Pro^{OE}
 - » Dynamic Brake Control is also switched off when the ABS function is switched off.◁
 - » In RACE PRO riding modes, the ABS function remains switched off even after the ignition is switched off and on again.
- For more information on brake systems with BMW Motorrad Integral ABS, see the section entitled "Engineering details":
 - » Partially integral brakes (▮▮▮ 178)
 - » Hill Start Control function (▮▮▮ 193)
- with riding modes Pro^{OE}
 - » How Dynamic Brake Control works (▮▮▮ 189)◁

Switch on the ABS function



- Press button 1 for at least 3 seconds.



goes out; if self-diagnosis has not completed it starts flashing.

- » The ABS function is switched on.
- If menu Driving mode preselection has no activated RACE PRO riding mode, switching the ignition off and then on again also reactivates ABS.



An ABS fault has occurred if the ABS indicator and warning light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 10 km/h


DEACTIVATING INTELLIGENT EMERGENCY CALL WHEN RIDING ON THE RACE TRACK

- with intelligent emergency call^{OE}

170 ON THE RACE TRACK


Deactivating intelligent emergency call

To prevent an emergency call connection from being established in the event of a fall on a race track where medical staff are in attendance, the intelligent emergency call control unit and control panel must be removed.


 Remove the intelligent emergency call control unit and control panel only for riding on the race track. The intelligent emergency call control unit and the operating panel must be reinstalled at the latest before returning to public roads.

Removing intelligent emergency call control unit

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Disconnect the battery from the motorcycle. (➡ 229)
- Remove the tail-hump trim panel. (➡ 225)

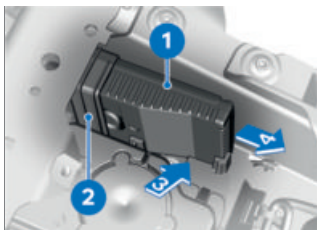

- Press intelligent emergency call control unit **1** out of the lock **3** and carefully remove **4** from the holder **2**.

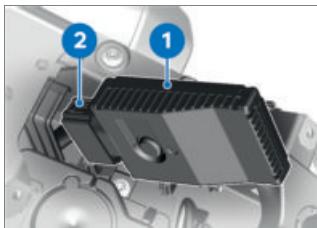


- Disconnect plug connection **2** and store intelligent emergency call control unit **1** in a place that is dry and free of dust.
- Protect open plug connection **2** against dirt and moisture, for example by masking it with insulating tape.
- Connect the battery to the motorcycle. (➡ 230)
- Install the tail-hump trim panel. (➡ 226)


- Remove the intelligent emergency call control panel. (171)

Removing intelligent emergency call control panel

- Turn the handlebars all the way to the left.

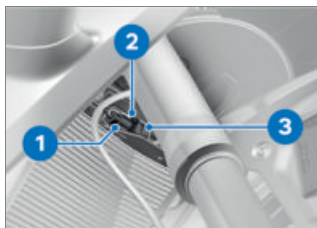

- Remove cable strap **2**.
- Disconnect and disengage connector for control panel **1**.
- Protect open plug connection **3** against moisture, preferably by inserting a dummy plug or by wrapping it with insulating tape.
- Secure plug connection **3** with a cable tie.

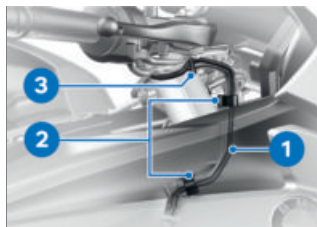

- Work cable with connector **1** down from above until it is clear of tensioning straps **2**.
- Remove cable strap **3**.



- Remove screw **1**.
- Remove control panel **2**.

172 ON THE RACE TRACK

Installing intelligent emergency call control panel



- Hold control panel **2** in position.
- Install screw **1**.




Switch for intelligent emergency call to adapter

M5 x 22

Thread-locking compound: mechanical


3 Nm

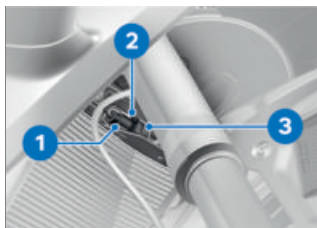


- Connect plug connection for control panel **1** and **3**.
- Secure the plug connection and excess length of cable with cable tie **2**.
- Install the intelligent emergency call control unit. (►► 172)

Installing intelligent emergency call control unit

- Disconnect the battery from the motorcycle. (►► 229)
- Remove the tail-hump trim panel. (►► 225)

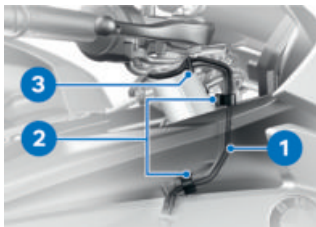


- Work cable with connector **1** up from below and into tensioning straps **2**.
- Install cable strap **3**.

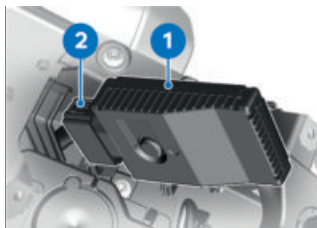

- Remove the insulating tape from connector **2**.

- Connect intelligent emergency call control unit **1** with connector **2**.

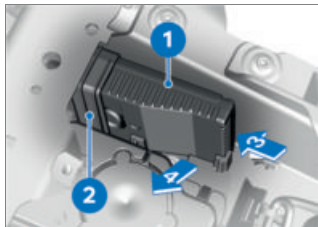

- Insert **3** intelligent emergency control unit **1** into the holder **2** and allow it to engage in lock **4**.
- Connect the battery to the motorcycle. (→ 230)
- Install the tail-hump trim panel. (→ 226)

GEARSHIFT-PATTERN REVERSER

Shift pattern for racing

The shift pattern can be reversed for racing by changing the position of the selector rod. Reversing the shift pattern means that the gearshift lever is lifted up for 1st gear and pressed down for all the other gears. This is the reverse of the arrangement for riding on public roads.

Reversing the shift pattern




ATTENTION

Riding with shift pattern reversal on public roads


Voiding of homologation for riding on public roads

- Do not install the gearshift-pattern reverser for riding on public roads.

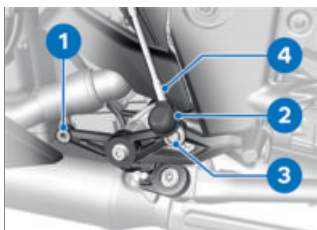

- Clean thread **1**.
- Pull off protective cap **2** and slide on the gearshift rod **4**.
- Remove screw **3** with the washer.
- Transfer the gearshift rod **4** to the thread for the inverted gearshift pattern **1**.

174 ON THE RACE TRACK

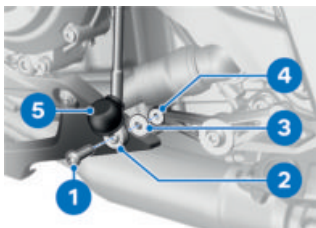

- Insert new screw **1** through ball joint **2** and washer **3**.
- Install new screw **1** in threaded bore for gearshift-pattern reverser **4**.



Selector rod to gearshift lever

M6 x 20

Thread-locking compound:
micro-encapsulated

8 Nm

- Install protective cap **5**.
» The gearshift-pattern reverser for racing is set up.

DATA RECORDING AND 2D SOFTWARE

Data recording and 2D software

You can receive all the information and support for dealing with the 2D software, reading out and evaluating recorded driving data under:

2d-datarecording.com/en/m-gps-laptrigger.

ENGINEERING DETAILS

09

GENERAL NOTES	178
ANTILOCK BRAKE SYSTEM (ABS)	178
DYNAMIC DAMPING CONTROL (DDC)	182
DYNAMIC TRACTION CONTROL (DTC)	183
DYNAMIC ENGINE BRAKE CONTROL (MSR)	185
RIDING MODE	185
DYNAMIC BRAKE CONTROL	189
TYRE PRESSURE CONTROL (RDC)	190
GEAR SHIFT ASSISTANT	191
HILL START CONTROL (HSC)	193

GENERAL NOTES

To find out more about engineering, go to bmw-motorrad.com/technik.

ANTILOCK BRAKE SYSTEM (ABS)

Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The foot-brake lever acts only on the rear brake.



ATTENTION

Attempted burn-out despite integral braking function

Damage to rear brake and clutch

- Do not attempt a burn-out unless the vehicle is at a complete standstill. A burn-out is not use of the vehicle as intended by the manufacturer and can, therefore, lead to fault memory entries.

How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean, dry asphalt surface. The lower the coefficient of friction, the longer the braking distance. If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the motorcycle loses its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force, so the wheels continue to turn and directional stability is maintained irrespective of the condition of the road surface.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road

can drop to zero. If the rider brakes in this situation, the ABS has to reduce the brake pressure in order to ensure driving stability when resuming contact with the road. Up to this point, BMW Motorrad Integral ABS assumes an extremely low coefficient of friction (gravel, ice, snow) so that the road wheels turn in every conceivable situation and so ensure driving stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

What feedback does the rider receive from the BMW Motorrad Integral ABS Pro?

If the ABS has to reduce braking force on account of the circumstances described above, vibration is perceptible through the brake lever.

When the brake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the brake lever is pulled, the brake pressure built up beforehand is perceptible as counter-pressure sooner than is the case

when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

Rear wheel lift

Where there is a high level of adhesion between the tyres and road, the front wheel is only blocked very late or not at all even when the brakes are applied forcefully. Consequently, ABS does not intervene until very late, if at all. Under these circumstances the rear wheel can lift off the ground, and the outcome can be a highsidings situation in which the motorcycle can flip over.



WARNING

Rear wheel lift due to severe braking

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.

180 ENGINEERING DETAILS

What is the design baseline for BMW Motorrad Integral ABS Pro?

Within the limits imposed by physics, BMW Motorrad Integral ABS Pro ensures directional stability on any surface. The system is not optimised for special requirements that apply under extreme competitive conditions off-road or on the track. The driving behaviour should be adapted to actual driving skills and the road conditions.

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued.

In addition to problems with the BMW Motorrad ABS Pro, exceptional riding conditions can lead to a fault message being issued.

If a fault message is issued on account of exceptional riding

conditions, you can reactivate the ABS function by switching the ignition off and on again.

Exceptional riding conditions:

- Heating up with the motor-cycle on an auxiliary stand, in neutral or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending steep gradients.

What significance devolves on regular servicing?



WARNING

Brake system not regularly serviced

Risk of accident

- In order to ensure that the BMW Motorrad ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.

Safety reserves

The potentially shorter braking distances which ABS permits must not be used as an excuse for careless riding. It is primarily there to provide a safety reserve for emergency situations.



WARNING

Braking when cornering

Risk of accident despite ABS

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional margin of safety offered by this system.

ABS Pro

ABS Pro increases safety, particularly for braking with the machine banked over in bends. ABS Pro prevents the wheels from locking even under sharp braking. ABS Pro reduces abrupt changes in steering force, particularly in shock-braking situations, counteracting the vehicle's otherwise natural but undesirable tendency to straighten up.

ABS intervention

Technically speaking, depending on the riding situation ABS Pro adapts ABS intervention to the motorcycle's bank angle. Signals for rate of roll and rate of yaw and lateral acceleration are used

to calculate bank angle. They come from the angular rate sensor, an integral component of Dynamic Traction Control (DTC) and Dynamic Damping Control (DDC).

As the motorcycle is heeled over more and more as it banks into a corner, an increasingly strict limit is imposed on the brake-pressure gradient for the start of brake application. This slows the build-up of brake pressure to a corresponding degree. Additionally, pressure modulation is more uniform across the range of ABS intervention.

Advantages for the rider


The advantages of ABS Pro for the rider are sensitive response and high braking and directional stability combined with best-case deceleration of the motorcycle, even when cornering.

—with riding modes Pro^{OE}



ABS Pro is activated in all riding modes. In RACE PRO riding mode, ABS Pro can be parametrised to suit the rider's individual needs and preferences.◀

—without riding modes Pro^{OE}

 ABS Pro is activated in all riding modes except RACE.<

Brake Slide Assist

—with riding modes Pro^{OE}

Brake Slide Assist is an extension of BMW Motorrad ABS Pro and is designed as a rider assistance system for riding with slicks on race tracks.

Under sharp deceleration by application of the front and rear brakes, Brake Slide Assist calculates the current drift angle, taking the wheel centrifugal velocities of both wheels, the steering angle and the bank angle into account.

If drift angle exceeds a limit calculated by Brake Slide Assist, brake pressure at the rear wheel is limited and the engine drag torque control electronics intervene to reduce slip and stabilise the motorcycle.

Close to the limits of what is physically possible in motorcycling, both the rider and external influences such as track conditions and suspension settings have considerable effect on the ability of Brake Slide Assist. to control drift.

DYNAMIC DAMPING CONTROL (DDC)

—with Dynamic Damping Control (DDC)^{OE}

DDC

By interpreting ride height sensor signals, DDC detects movements in the suspension and responds by adjusting the damper valves. This enables the suspension to adapt to the terrain.

Possibilities for adjustment

DDC is preset to a setting appropriate to the selected riding mode. The damping settings available for setting up the suspension for the desired riding experience are as follows:

- Road: Damping for comfortable on-road riding (default setting in RAIN and ROAD riding modes)
- Dynamic: Damping for dynamic on-road riding (default setting in DYNAMIC riding mode)
- Race: Damping for riding on the race track (default setting in RACE riding mode)

—with riding modes Pro^{OE}

In addition, the damping values for the front wheel and the rear wheel can set in the RACE PRO CONFIGURATION menu on a 14-level scale (level 1: "softest" setting; level 14: "hardest" setting. Rebound and compression damping can be altered on the back wheel separately.

A spring travel sensor (racing accessory) has to be installed on the front forks for separate compression-stage and rebound-stage adjustment of the damping values for the front suspension.

Calibration is necessary if an additional spring travel sensor has been installed on the front forks, an existing ride-height sensor on the rear spring strut replaced, or the height of the suspension altered. Calibration is started in the Settings, Vehicle settings, DDC calibration menu.

DYNAMIC TRACTION CONTROL (DTC)

How does Dynamic Traction Control work?

Dynamic Traction Control compares the wheel circumferential velocities of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the electrical machine management system intervenes and adapts torque accordingly. DTC takes the vehicle tilt into accounts, conveniently controls it and is useful for improving lap times on the racetrack. DTC can assist only within the limits imposed by physics. The physical limits are strongly dependent on the road surface, road temperatures, tyre choice and tyre temperature. There is the danger of overheating when using unsuitable tyres on the race track.

**WARNING****Risky riding**

Risk of accident despite DTC

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional safety offered by this system.

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

With DTC, the speeds of the front and rear wheels are compared and the angle of heel taken into account as one means of detecting the rear wheel's incipient tendency to spin or slip sideways.

If the lean angle values are identified as implausible over an extended period of time, a substitute value is used for the lean angle or the DTC is switched off. Under these circumstances the indicator for

a DTC fault shows. Self-diagnosis has to complete before fault messages can be issued. The BMW Motorrad traction control may switch off automatically under the exceptional riding conditions outlined below.

Exceptional riding conditions:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by applying the front brake (burn-out).
- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.

DTC Slide Control

- with riding modes Pro^{OE}

DTC Slide Control is an extension of Dynamic Traction control and is designed as a rider assistance system for operation with slicks on race tracks. Under sharp acceleration, DTC Slide Control calculates the current drift angle, taking the wheel centrifugal velocity, the steering angle and the bank angle into account. If the drift angle exceeds a limit that the rider can set, engine

torque is reduced. This reduces drive slip and stabilises the motorcycle.

Close to the limits of what is physically possible in motorcycling, both the rider and external influences such as track conditions and suspension settings have considerable effect on the ability of DTC Slide Control to control drift.

DYNAMIC ENGINE BRAKE CONTROL (MSR)

How does dynamic engine brake control work?

The purpose of dynamic engine brake control is to prevent the unstable riding states that can be produced by excessive engine braking moment acting on the rear wheel. Depending on the road condition and riding dynamic, excessive braking torque can produce a sharp rise in rear-wheel slip and impair directional stability. Dynamic engine brake control limits this slip at the rear wheel to a safe mode-dependent and bank-angle-dependent regulated slip.

Causes for excessive slip at the rear wheel:

- Riding with engine overrun on a surface with a low coefficient of friction (e.g. wet leaves).
- Rear-wheel hop when rider downshifts.
- Sharp braking during sporty riding.

In the same way as DTC traction control, dynamic engine brake control compares the wheel circumferential velocities of the front and rear wheels. Additional information on the bank angle enables dynamic engine brake control to calculate slip and the reserve of stability at the rear wheel. If slip overshoots the applicable limit, the throttle valves are opened very slightly to increase engine torque. Slip is reduced and the motorcycle is stabilised.

RIDING MODE

Selection

To adjust the motorcycle to the road condition and the desired driving experience, the following riding modes can be selected:

- RAIN
- ROAD
- DYNAMIC
- RACE

- with riding modes Pro^{OE}
- RACE PRO 1
- RACE PRO 2
- RACE PRO 3

A maximum of four riding modes can be preselected by means of the riding mode preselection function.

A coordinated setting for the systems Engine, Engine Brake, DTC, Wheelie (DTC), ABS and DDC is available for each riding mode.

- with riding modes Pro^{OE}
- In RACE PRO riding modes, the settings for the Engine, Engine Brake, Traction (DTC), Wheelie (DTC), ABS and DDC systems can be individually adjusted.

Torque and throttle response

- In RAIN riding mode: Gentle throttle response, reduced torque in low gears.
- In ROAD and DYNAMIC riding modes: Optimum throttle response, reduced torque in low gears.

- In RACE riding mode: Optimum throttle response, maximum torque.

- with riding modes Pro^{OE}
- In RACE PRO riding modes additionally: Soft or direct throttle response, maximum torque.

Braking effect of the engine and engine drag torque control

- In RAIN and ROAD riding modes: Maximum braking effect of the engine. Maximum stability.
- In DYNAMIC and RACE riding modes: Reduced braking effect of the engine. High stability.

- with riding modes Pro^{OE}
- In RACE PRO riding modes additionally: Minimal braking effect of the engine. Reduced stability.

Traction control (DTC)

- In RAIN riding mode: Maximum stability on wet roads. Acceleration on dry roads might be reduced.
- In ROAD riding mode: High stability on dry roads. Acceleration on dry roads might be slightly reduced.
- In DYNAMIC riding mode: High performance on dry

roads. If road conditions are poor, optimum stability cannot be ensured.

- In RACE riding mode: Maximum performance. On a poor road surface or with unsuitable tyres such as touring tyres for example, stability might be impaired.
- with riding modes Pro^{OE}
- In RACE PRO riding modes, traction control can be finely adjusted using the DTC rocker button while riding to ensure optimum performance.

DTC Slide Control

- In RAIN, ROAD and DYNAMIC riding modes: Maximum stability.
- In RACE riding mode: High performance. Slight drifts can be induced exiting corners, depending on the condition of the track and the tyres.
- In RACE PRO riding modes with setting 2: Maximum performance. Drifts can be induced exiting corners, depending on the condition of the track and the tyres.
- In RACE PRO riding modes with setting 1: DTC Slide Control is deactivated.

Wheelie (DTC) - front wheel lifted clear of the ground

- In RAIN riding mode: Maximum stability. Efforts are made to suppress a Wheelie.
- In ROAD, DYNAMIC and RACE riding modes: Shallow Wheelie possible, optimum drive.
- with riding modes Pro^{OE}
- In RACE PRO riding modes with setting 1: High Wheelie possible. The rider has to control the speed of the rear wheel to prevent the Wheelie. The system only intervenes late.
- In RACE PRO riding modes with setting 0: The system is deactivated.

ABS

- The rear wheel lift-off assistant is active in the RAIN, ROAD and DYNAMIC riding modes.
- In RAIN, ROAD and DYNAMIC riding modes, ABS is set up for on-road riding.

188 ENGINEERING DETAILS

—without riding modes Pro^{OE}
—In RACE riding mode, ABS is set up for race-track riding. The rear-wheel lift-off assistant is deactivated.

—with riding modes Pro^{OE}
—In RACE riding mode, ABS is set up for race-track riding with slicks. The rear-wheel lift-off assistant permits high stoppies.
—In RACE PRO riding modes: The deployment of ABS can be adjusted individually.

Brake Slide Assist

—In RAIN, ROAD and DYNAMIC riding modes: Brake Slide Assist is deactivated. Maximum stability for braking into corners.
—In RACE and RACE PRO riding modes with setting 2: Maximum performance. Drifts when braking into corners are possible.
—In RACE PRO riding modes with setting 1: Brake Slide Assist is inactive. The rear wheel can lock up under sharp braking.

—with Dynamic Damping Control (DDC)^{OE}

DDC

—In RAIN and ROAD riding modes: Damper characteristic set up for comfortable riding.
—In DYNAMIC riding mode: Damper characteristic set up for sporty riding.
—In RACE riding mode: Damper characteristic set up for riding on the race track.

—with riding modes Pro^{OE}
—In RACE PRO riding modes: Damper characteristic can be set up to suit the rider.

Mode changes

The riding mode can be changed while the vehicle is stationary with the ignition on. It is possible to change it while driving under the following conditions:

—No drive torque on the rear wheel.
—No brake pressure in the brake system.

The following steps must be taken to change the riding mode:


- Close the throttle twistgrip.
- Release the brake levers.
- Deactivate adaptive cruise control.

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state. The selection menu does not disappear from the display until the mode change has taken place.

DYNAMIC BRAKE CONTROL

- with riding modes Pro^{OE}

How Dynamic Brake Control works

 The Dynamic Brake Control function is active in all riding modes. It can only be deactivated in the RACE PRO riding modes by individually adjusting the ABS.

The Dynamic Brake Control function assists the rider in emergency braking situations.

Detection of emergency braking

- Sudden, sharp application of the front brake is interpreted as emergency braking.

Behaviour in emergency braking

- If emergency braking occurs at a speed in excess of min 10 km/h, the ABS function is further assisted by Dynamic Brake Control.
- When partially integral braking at a high brake pressure gradient is initiated, Dynamic Brake Control increases the integral brake pressure at the rear wheel. The stopping distance shortens and controlled braking is possible.

Behaviour during accidental actuation of the throttle grip

- If the throttle is accidentally opened (throttle grip position > 5 %) during emergency braking, Dynamic Brake Control ensures the desired braking effect by ignoring actuation of the throttle grip. The effectiveness of emergency braking is ensured.
- If the throttle is closed (throttle grip position < 5 %) while Dynamic Brake Control is in action, the engine torque requested by the ABS brake system is restored.
- If emergency braking ceases and the rider still has not changed the position of

190 ENGINEERING DETAILS

the throttle grip, Dynamic Brake Control steadily ramps engine torque back to the rider's requested level.



The function of the Dynamic Brake Control is switched off at the same time as the ABS is switched off.

TYRE PRESSURE CONTROL (RDC)

—with tyre pressure control (RDC)^{OE}

Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit. The sensors are fitted with a centrifugal-force trip switch which allows the measured values to be transmitted after the minimum speed is exceeded the first time.



Minimum speed for transmission of the RDC measured values:

min 30 km/h

The display shows -- for each tyre until the tyre-pressure signal is received for the first time. The sensors continue to transmit the measured-value signals

for some time after the vehicle comes to a stop.



Transmission duration of the measured values after vehicle standstill:

min 15 min

An error message is issued if wheels without sensors are fitted to a vehicle equipped with an RDC control unit.

Tyre pressure ranges

The RDC control unit distinguishes between three tyre pressure ranges matched to the vehicle:

- Filling pressure within the permissible tolerance
- Filling pressure in the limit range of the permissible tolerance
- Filling pressure outside permitted tolerance

Temperature compensation

Tyre pressure is a temperature-sensitive variable: pressure increases as tyre-air temperature rises and decreases as tyre-air temperature drops. Tyre air temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.


The tyre-pressure readings in the multifunction display are


temperature-compensated and are always referenced to a tyre-air temperature of 20 °C.

The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre-air pressure. As a result, the values displayed there usually do not correspond to the values displayed in the TFT display.

Pressure adaptation

Compare the RDC value on the TFT display with the value in the table on the back cover of the Rider's Manual. Then use the air-line gauge at a service station to compensate for the difference between the RDC reading and the value in the table.

 Example
According to the Rider's Manual, the tyre pressure should be the following value:
2.5 bar
The following display is shown in the TFT display:
2.3 bar

 Example
Missing:
0.2 bar
The tester on the filling station shows:
2.4 bar
The tyre pressure must be increased to the following value to reach the correct tyre pressure:
2.6 bar

GEAR SHIFT ASSISTANT

Gear Shift Assistant Pro

Your vehicle is equipped with a shift assistant, a system originally developed for racing and now adapted for riding on public roads. It permits upshifts and downshifts without de-clutching or closing the throttle in virtually all load and rpm ranges.

Advantages

- 70-80 % of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.

192 ENGINEERING DETAILS

- It is not necessary to close the throttle valve when shifting under acceleration.
- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the spring through a certain "overtravel" at ordinary speed or rapidly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the gearshift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place. When shifting gears with the Gear Shift Assistant Pro, the rider has to keep load state (throttle twistgrip position) constant before and during the gearshift. A change in the position of

the throttle twistgrip during a gearshift can cause the function to abort and/or lead to a missed shift. Gear Shift Assistant Pro provides no assistance for the gearshift if the rider declutches.

Downshifting

- Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents over-revving.



Maximum engine speed

max 14600 min⁻¹

Upshifting

- The shift assistant provides no assistance if engine speed drops below idle during an upshift.



Idle speed

1270^{±50} min⁻¹ (Engine at regular operating temperature)

HILL START CONTROL (HSC)

Hill Start Control function

Hill Start Control is a pullaway assistant that operates on the partially integral ABS system to prevent the vehicle from rolling back on a gradient, without the rider having to keep pressure applied to the brake lever. When Hill Start Control is activated, pressure is built up in the rear brake system to keep the machine at a standstill on a gradient.

The brake pressure in the brake system is dependent on the gradient.

Effect of an incline on brake pressure and drive-off behaviour

- If the motorcycle is stopped on a gentle incline, only low brake pressure is built up. In this case, the brakes are quickly released when driving off. The motorcycle can be moved off more gently. It is not necessary to turn the throttle grip again.
- If the motorcycle is stopped on a steep incline, high brake pressure is built up. In this case, the brakes take longer to release when driving off. More torque is required for

driving off which also requires the rider to turn the throttle grip again.

Behaviour when the motorcycle rolls or slips

- If the vehicle starts to roll while Hill Start Control is active, brake pressure is increased.
- If the rear wheel slips, the brake is released again after approx. 1 m. This prevents the vehicle slipping with a locked rear wheel, for example.

Brake release when engine is stopped or after time-out

Hill Start Control is deactivated if the rider stops the engine by hitting the emergency-off switch (kill switch) or when the side stand is extended, or after time-out (10 minutes).

In addition to the indicator and warning lights, the rider should be made aware that Hill Start Control has been deactivated by the following behaviour:

Brake warning jolt

- The brake is released briefly and reactivated immediately.
- This creates a jolt which the rider feels.

194 ENGINEERING DETAILS

- The partial integral ABS brake system limits the speed of movement to approx. 1...2 km/h.
- The rider must brake the motorcycle manually.
- After two minutes, or when the brake is actuated, Hill Start Control is completely deactivated.



The holding pressure is released immediately without a brake warning jolt as soon as the ignition is switched off.

MAINTENANCE

10

GENERAL NOTES	198
TOOLKIT	199
FRONT-WHEEL STAND	200
REAR-WHEEL STAND	200
ENGINE OIL	201
BRAKE SYSTEM	203
CLUTCH	207
COOLANT	208
TYRES	210
WHEEL RIMS	211
WHEELS	211
CHAIN	220
LIGHTING	223
TRIM PANEL COMPONENTS	223
JUMP-STARTING	227
BATTERY	229
FUSES	232
DIAGNOSTIC CONNECTOR	233

GENERAL NOTES

The Maintenance chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad retailer.

Microencapsulated screws

The microencapsulation is a chemical thread-locker. An adhesive compound creates a secure connection between bolt and nut or between screw and component. Consequently, microencapsulated screws are for once-only use and are not intended for re-installation after being slackened.

Regardless of whether the procedure involves removal or installation, the threaded bore always has to be cleaned. After removal of the screw, clean the

internal thread to remove all traces of thread-locking compound. Always use new microencapsulated screws when re-assembling. Consequently, prior to disassembly make sure that you have suitable tools for cleaning the threads and a new replacement for each screw to be removed. If the job is not done correctly there is no guarantee that the screw will remain secure, which means that you would be putting yourself at risk!


Non-reusable cable ties

Non-reusable cable ties are used at some points to secure cables and lines. To prevent damage to cables and lines when these items are being removed, it is essential to use a suitable tool, for example diagonal cutting pliers, for their removal.

Cables and lines detached beforehand by the removal of non-reusable cable ties have to be re-secured with new non-reusable cable ties.

Use cable-tie clippers to clip off the excess length of the cable tie.

TOOLKIT

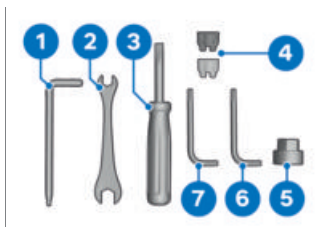

- 1** Lever
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust the spring pre-load for the rear wheel. (▮▮▮ 116)
 - Adjust the ride height to swinging arm pivot point setting. (▮▮▮ 125)
- 2** Open-ended spanner
Width across flats 10/13 mm
 - Removing battery (▮▮▮ 231).
 - Adjust the spring pre-load for front wheel. (▮▮▮ 115)
 - with Dynamic Damping Control (DDC)^{OE}
 - Adjust the spring pre-load for the rear wheel. (▮▮▮ 117)
- 3** Reversible screwdriver
Slotless bit and Torx T25
 - Removing and installing trim panel components.
 - Remove the front seat. (▮▮▮ 82)
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust compression-stage damping at front wheel. (▮▮▮ 119)
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust rebound-stage damping for front wheel. (▮▮▮ 119)
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust rebound-stage damping for rear wheel. (▮▮▮ 121)
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust the compression-stage damping for the rear wheel. (▮▮▮ 120)
- 4** Replacement fuses
 - 7.5 A
 - 15 A
- 5** Plastic cap
 - Adjust the spring pre-load for front wheel. (▮▮▮ 115)
- 6** Torx wrench, T20
 - Removing and installing trim panel components.

200 MAINTENANCE

- 7 Torx wrench, T30
-Removing and installing trim panel components.

FRONT-WHEEL STAND

Install the front-wheel stand



ATTENTION

Use of the BMW Motorrad front wheel stand without accompanying use of centre stand or auxiliary stand

Risk of damage to parts if vehicle topples

- Place the motorcycle on its centre stand or another auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.
- Make sure the motorcycle is standing firmly.
- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand.
(▶▶▶ 200)



- See the instructions issued with the front-wheel stand for the details of the correct procedure for installation.
- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

REAR-WHEEL STAND

Install the rear-wheel stand



- The description of how to fit the rear-wheel stand correctly will be found in the instructions for the stand.

- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

ENGINE OIL

Checking engine oil level



ATTENTION


Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)

Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature.
- Allow the engine to idle for one minute.
- Switch off the ignition.
- Wait five minutes for the oil to drain into the oil pan.



As a contribution to reducing environmental impact, BMW Motorrad recommends checking the engine oil on occasion after a trip of min 50 km.

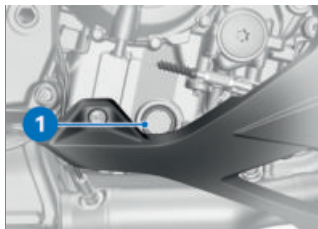


ATTENTION

Vehicle toppling sideways

Risk of damage to parts if vehicle topples

- Secure the vehicle, preferably with the assistance of a second person, so that it cannot topple sideways.
- Make sure the ground is level and firm and hold the motorcycle upright.
- Check the oil level in the display **1**.

202 MAINTENANCE

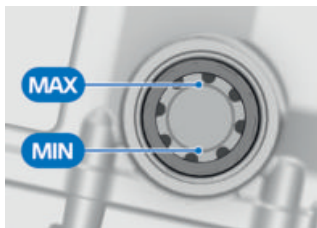

Engine oil, specified level

Between **MIN** and **MAX** mark
(Engine at operating temperature, vehicle is in vertical position)

If the oil level is below the **MIN** mark:

- Topping up the engine oil.
(202)

If the oil level is above the **MAX** mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Topping up engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Wipe the area around the oil filler opening clean.

- Remove cap **1** of the oil filler opening.



ATTENTION

Use of insufficient engine oil or too much engine oil

Engine damage

- Always make sure that the oil level is correct.

- Top up the engine oil to the specified level.



Engine oil, quantity for topping up

max 1.3 l (Difference between **MIN** and **MAX**)

- Check the engine oil level.
(201)
- Install cap of oil filler opening **1**.

BRAKE SYSTEM

Check operation of the brakes

- Operate the brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:




ATTENTION

Work on brake system not in compliance with correct procedure

Risk to operational reliability of the brake system

- Have all work on the brake system undertaken by trained and qualified specialists.
 - Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- ### Checking brake pad thickness, front brakes
- Make sure the ground is level and firm and place the motorcycle on its stand.
 - Turn the handlebars to the full-lock position.

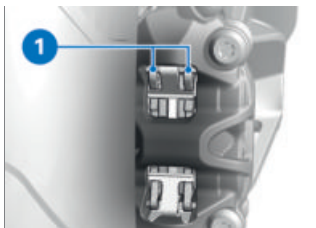

- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: from the rear toward brake pads 1.



Brake-pad wear limit, front

min 1 mm (friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible)

If the wear indicating marks are no longer clearly visible:



WARNING

Brake-pad thickness less than permissible minimum


Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.


- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake pad thickness, rear brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.

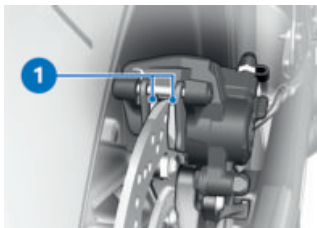

- Visually inspect the brake pads to ascertain their thickness. Viewing direction: from the rear toward brake pads 1.

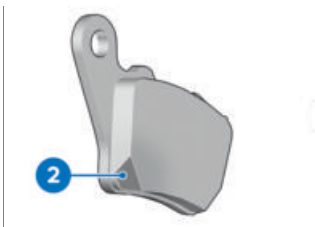

- Note chamfer 2.



Brake-pad wear limit, rear

min 0.9 mm (friction pad only, without backing plate.)

If the chamfer is no longer visible:

**WARNING****Brake-pad thickness less than permissible minimum**

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake-fluid level, front brakes

- Make sure the ground is level and firm and hold the motorcycle upright.
- Move the handlebars to the straight-ahead position.



- Check the brake fluid level in brake fluid reservoir **1**.



Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, front

Brake fluid, DOT4

The brake fluid level may not drop below the **MIN** mark. (Brake-fluid reservoir horizontal)

206 MAINTENANCE

If the brake fluid level drops below the permitted level:



WARNING


Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
 - Check the brake-fluid levels at regular intervals.
 - Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
 - Make sure that only fresh brake fluid from a sealed container is used.
-
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake-fluid level, rear brakes

- Make sure the ground is level and firm and hold the motorcycle upright.

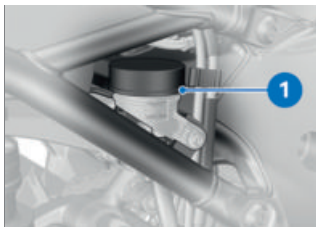

- Check the brake fluid level in brake fluid reservoir for rear wheel brake 1.



Wear of the brake pads causes the brake fluid level in the reservoir to sink.



Brake fluid level, rear

Brake fluid, DOT4



Brake fluid level, rear

The brake fluid level may not drop below the **MIN** mark (Brake-fluid reservoir horizontal)

If the brake fluid level drops below the permitted level:



WARNING

Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an

authorised BMW Motorrad retailer.

CLUTCH

Checking operation of the clutch

- Pull the clutch lever.
- » An increase in force with increasing actuation must be perceptible.


If no increase in force with increasing actuation is perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Check the clutch-lever play Requirement

Engine is cold.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Move the handlebars to the straight-ahead position.

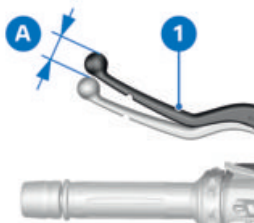

- Repeatedly pull clutch lever **1** tight against the grip.
- Pull clutch lever **1** gently until resistance is perceptible, observing the clutch play **A**.




Clutch-lever play

3...5 mm (measured on outer clutch lever, handlebars in straight-ahead position, with cold engine)

Clutch play is out of tolerance:

- Adjust the clutch play.
(208)

Adjust the clutch play

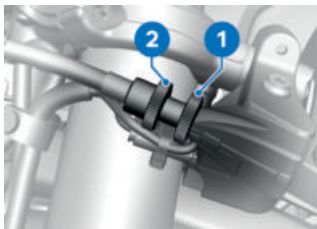

- Loosen lock nut **1**.

- To increase clutch play:
Tighten adjusting screw **2** into the handlebar fitting.
- To reduce clutch play: Back off adjusting screw **2** in the handlebar fitting.
- » The distance between locknut and adjusting nut (measured at the inside) is not more than 8 ± 1.5 mm.

If backing the nut off further is the only way to obtain the correct clutch play:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- Check the clutch-lever play.
(207)
- Tighten lock nut **1** while holding adjusting screw **2**.

COOLANT

Check the coolant level

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Allow the engine to cool down.
- Turn the handlebars all the way to the left.



- Check the coolant level in expansion tank **1**. Viewing direction: From in front toward the inside of the right side panel.



Coolant, specified level

Between **MIN** and **MAX** mark on the expansion tank (cold engine)

If the coolant drops below the permitted level:

- Top up the coolant. (➡ 209)

Top up coolant



WARNING

Opening radiator cap

Risk of burning

- Do not open the radiator cap when the system is hot.
- Check and, if necessary, top up the coolant in the expansion tank only.



- Open cap **1** of the expansion tank.
- Top up coolant to the specified level using a suitable funnel.



Coolant top-up quantity

0.15 l (Difference between **MIN** and **MAX**)

2.4 l (Coolant circuit, total)

FROSTOX HT-12 (Coolant)

- Check the coolant level. (➡ 208)
- Close cap **1** of the expansion tank.

210 MAINTENANCE

TYRES

Check the tyre pressures



WARNING

Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct.



WARNING

Tendency of valve inserts to open by themselves at high riding speeds

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Check tyre pressures against the data below.



Tyre pressure, front

2.5 bar (tyre cold)



Tyre pressure, rear

2.9 bar (tyre cold)

If tyre pressure is too low:

- Correct tyre pressure.


Check the tyre tread depth



WARNING

Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law.
 - Make sure the ground is level and firm and place the motorcycle on its stand.
 - Measure the tyre tread depth in the main tread grooves with wear marks.
-  Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow.
- If the tyre tread is worn to minimum:
- Replace tyre or tyres, as applicable.

WHEEL RIMS

Checking rims

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Visually inspect the rims for defects.



WARNING

Unnoticed structural damage

Risk of accident

- After a fall or a significant impact effect (e.g. riding through a pothole), have carbon wheels checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- Have damaged rims checked and, if necessary, replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

WHEELS

Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the suspension control systems. In particular, the diameter and the width of a vehicle's wheels are programmed into the control unit

and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.

The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad retailer. In these cases, the data programmed into the control units has to be changed to suit the new wheel sizes.

Removing front wheel

- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand. (Illustration 200)


212 MAINTENANCE

ATTENTION

Use of hard or sharp-edged objects in proximity to component

Component damage

- Take care not to scratch components; cover or mask as necessary.
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.

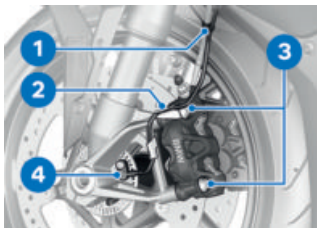


- Disengage the cable for the wheel speed sensor from holding clips **1** and **2**.
- Remove screw **4** and remove the wheel speed sensor from its bore.

ATTENTION

Unwanted inward movement of the brake pads


Component damage on attempt to install the brake caliper or because brake pads have to be forced apart

- Do not operate the brakes with a brake caliper not correctly secured.
- Remove mounting bolts **3** of the left and right brake calipers.

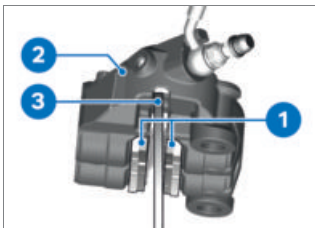

- Force brake pads **1** slightly apart by rocking brake caliper **2** back and forth against brake disc **3**.
- Carefully pull the brake calipers back and out until clear of the brake discs.

- Lift the front of the motor-cycle until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Install the front-wheel stand. (► 200)

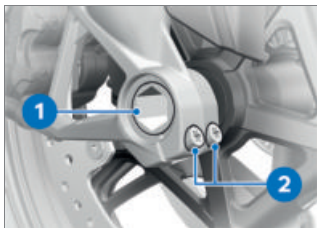

ATTENTION

Incorrect gap between sensor ring and wheel speed sensor due to misaligned threaded bush in front suspension

Damage to wheel speed sensor. ABS malfunction

- Left clamp locates the threaded bush; do not loosen or remove this clamp.
- Loosen clamping screws **2**.
- Support the wheel and remove quick-release axle **1**.
- Roll the front wheel forward to remove.

Install the front wheel

WARNING

Use of a non-standard wheel

Malfunctions in operation of ABS and DTC

- See the information on the effect of wheel size on the ABS and DTC systems at the start of this chapter.

ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.


ATTENTION

Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim.
- Roll the front wheel into position between the forks of the front suspension.

214 MAINTENANCE

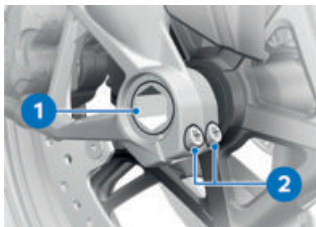

- Lubricate quick-release axle **1**.



Lubricant

Optimoly TA

- Raise the front wheel, install quick-release axle **1** and tighten to specified torque.




Quick-release axle in threaded bush

M24 x 1.5

50 Nm

- Tighten clamping screws **2** to the specified tightening torque.

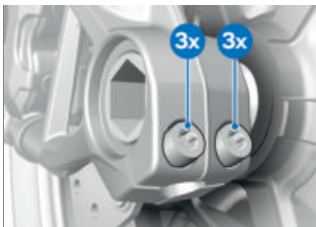


Clamping screws in axle holder

Tightening sequence: Tighten screws six times in alternate sequence


M8 x 35

19 Nm

- Ease the brake calipers on to the brake discs.

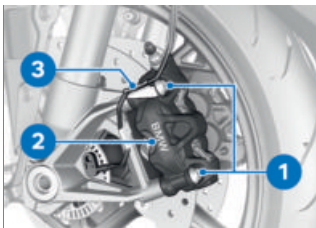


- Place brake caliper **2** on left and position cable routing **3**.
- Install bolts **1** and tighten to the specified torque.


 Radial brake calliper to axle mounting

M10 x 60

38 Nm

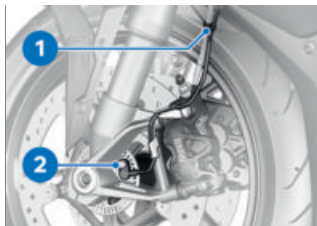

- Secure cable for wheel speed sensor in holder **1**.
- Insert wheel speed sensor in the bore hole and secure with bolt **2**.

 Wheel-speed sensor, front to forkleg


M6 x 16

Thread-locking compound: micro-encapsulated

8 Nm



- Place brake caliper **2** on the right and install bolts **1** to specified torque.

 Radial brake calliper to axle mounting

M10 x 60

38 Nm

- Remove the adhesive tape from the wheel rim.



WARNING

Brake pads not lying against the brake disc


Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.
- Firmly pull the brake lever until the pressure point is perceptible, and repeat this operation several times.
- Remove the front-wheel stand and the auxiliary stand.


216 MAINTENANCE

Removing rear wheel

- Lift the motorcycle, preferably with a BMW Motorrad rear-wheel stand.
- Install the rear-wheel stand. (111111 200)
- Slip wooden chocks or similar under the rear wheel to prevent it from dropping out after the quick-release axle has been removed.

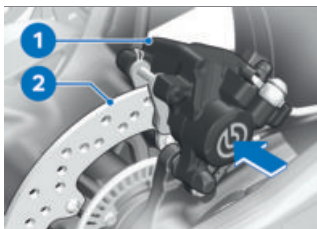


- Press the brake caliper **1** against the brake disc **2**.
» Brake pistons are pushed back.

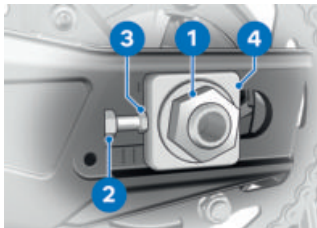


- Remove axle nut **1** with washer.

- Loosen lock nuts **2** on left and right.
- Loosen adjusting screws **3** on left and right.
- Remove adjustment plate **4** and push the axle forward as far as it will go to slacken the chain.

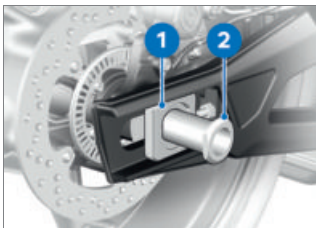


- Remove quick-release axle **2** and remove adjustment plate **1**.

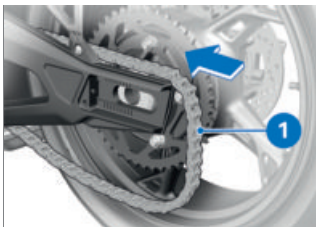

- Roll the rear wheel as far forward as possible and disengage chain **1** from the chain sprocket.



- Pull out brake-caliper support **1** to the front and hang to the side.
- Roll the rear wheel back until it is clear of the swinging arm.

 The sprocket and the spacer bushes on left and right are loose fits in the wheel. Make sure that these parts are not damaged or get lost on removal.

Installing rear wheel

WARNING

Use of a non-standard wheel

Malfunctions in operation of ABS and DTC


- See the information on the effect of wheel size on the ABS and DTC systems at the start of this chapter.

ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

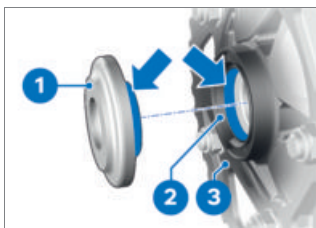

- Clean dirt and old lubricant off spacer bushing **1** and radial shaft seal **2** on chain sprocket support **3**.
- Lubricate spacer bushing **1** and radial shaft seal **2** on the surfaces indicated by the **arrows**.




Lubricant

Unirex N3

218 MAINTENANCE



- Check judder damping elements **2** for damage, deformation and wear; replace if necessary.

 The adaptation values have to be reset with the BMW Motorrad diagnostic system after replacement of the judder-damper elements. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

- Lubricate judder damping elements **2** and install.




Installation tool

Silicone spray


- Install chain sprocket carrier **1**.




- Roll rear wheel on the support into the swinging arm.

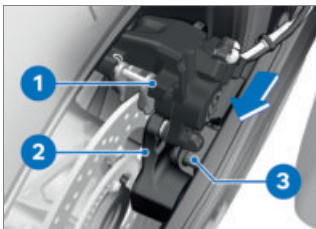


- Insert brake caliper **1** with brake-caliper support **2** into the guide **3** of the swinging arm.

 Make sure that brake line and ABS sensor cable are correctly positioned. The brake line and the ABS sensor cable must be seated in their guides to prevent contact with the rear wheel or the exhaust system.

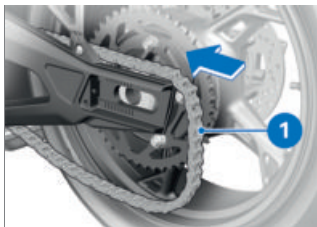

- Roll the rear wheel as far forward as possible and loop chain **1** over the chain sprocket.

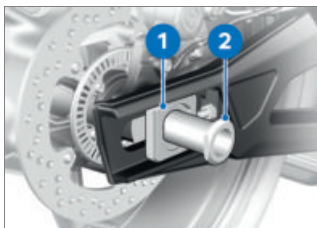

- Install adjustment plate on the right **1** in the swinging arm.
- Lubricate quick-release axle **2**.



Lubricant

Optimoly TA

- Lift the rear wheel and work quick-release axle **2** through adjustment plate **1** and into the brake caliper mounting bracket and the rear wheel.

- Make sure that quick-release axle **2** is positive-locked into adjustment plate **1**.



- Insert left adjustment plate **1**.
- Install axle nut **2** with washer, but do not tighten it at this point.
- Remove the rear-wheel stand.




WARNING

Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.


- Operate the brake several times until the brake pads are bedded.
- Adjust the chain sag.
( 220)

220 MAINTENANCE

CHAIN

Check chain sag

- Push the motorcycle to turn the rear wheel and find the position at which chain sag is at its minimum.
- Make sure the ground is level and firm and place the motorcycle on its stand.

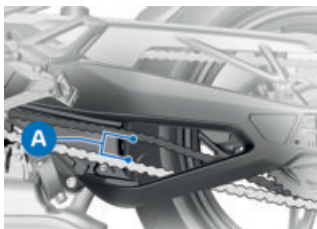

- Use a screwdriver to push the chain up at a point midway between the pinion and sprocket and measure difference **A**.



Chain deflection


45...50 mm (Motorcycle with no weight applied, supported on its side stand)

If measured value is outside permitted tolerance:

- Adjust the chain sag.
(→ 220)

Adjust the chain sag

- Make sure the ground is level and firm and place the motorcycle on its stand.

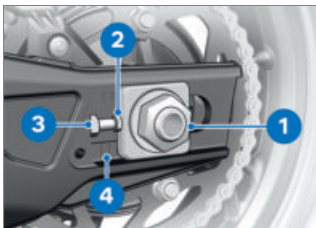

- Loosen quick-release axle nut **1**.
- Loosen lock nuts **3** on left and right.
- Use the adjusting screws **2** on left and right to adjust chain sag.



ATTENTION

Rear wheel skewed at a slight angle because tensioning screws not adjusted to same setting

Accelerated wear at rear wheel and chain drive

- Make sure that the rear wheel is aligned to track correctly (same scale reading on both sides of the rear wheel swinging arm).

- Make sure that scale readings **4** are the same on left and right.
- Check chain sag. (➡ 220)
- Tighten lock nuts **3** on left and right to the specified tightening torque.



Locknut of the final-drive chain tensioning screw

M8

19 Nm

- Tighten quick-release axle nut **1** to the specified tightening torque.



Rear quick-release axle in swinging arm

M24 x 1.5

Thread-locking compound: mechanical

125 Nm

- Check chain sag. (➡ 220)

Lubricate the chain



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.

- Switch the ignition off and select neutral.



Lubricate the drive chain at regular intervals.

min 800 km

- To prolong chain life, BMW Motorrad recommends the use of BMW Motorrad chain lubricant or:



Lubricant

Chain spray, O-ring compatible

- Wipe off excess lubricant.

Lubricating and caring for low-maintenance chain

—with M Endurance chain^{OE}



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.



The low-maintenance drive chain is cleaned and lubricated as part of the annual

222 MAINTENANCE

service. For optimum durability, the low-maintenance chain can also be lubricated at intervals by application of a chain lubricant suitable for low-maintenance chains. If riding involves above-average wear and tear due to exposure to salt or dust and dirt, carry out lubrication at correspondingly more frequent intervals.

- Switch the ignition off and select neutral.
- Clean the drive chain with a suitable cleaning product, dry it and apply chain lubricant. To prolong chain life, BMW Motorrad recommends the use of BMW Motorrad chain lubricant or:



Lubricant

Chain spray, O-ring compatible


- Wipe off excess lubricant.

Check the chain wear Requirement

Chain tension is set correctly.

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Engage 1st gear.

- Turn the rear wheel in the normal direction of travel until the chain is tensioned.
- Determine the length of the chain underneath the rear wheel swinging arm above the middle of 10 rivets in 3 different places.

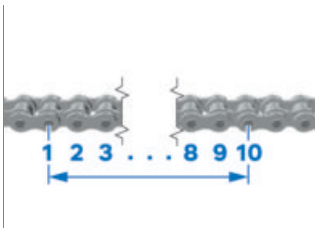


Permissible chain length

max 144 mm (measured from the **centre** of 10 rivets, chain pulled taut)

If the chain has stretched to the maximum permissible length:

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

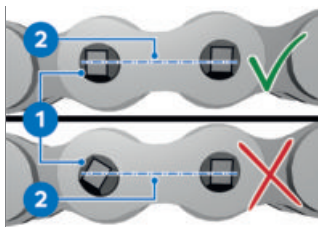

- Check whether a rivet head **1** has twisted out of line.

Rivet heads are parallel to the chain centreline **2**.

- Chain riveting is OK.

If one or more rivet heads have twisted out of line:

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

LIGHTING

Replacing LED light sources



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Always replace a faulty bulb at the earliest possible opportunity. Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer.

All light sources of the vehicle are LED light sources. The service life of the LED light sources is longer than the presumed vehicle service life. If an LED light source is faulty, please contact a specialist workshop, preferably an authorised BMW Motorrad Retailer.


TRIM PANEL COMPONENTS

Remove the side panel




The procedure described here for the right side panel applies by analogy to the left side as well.

- Make sure the ground is level and firm and place the motorcycle on its stand.

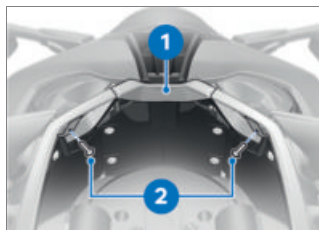


- Remove screws **2**.
- Remove trim panel **1**.

224 MAINTENANCE

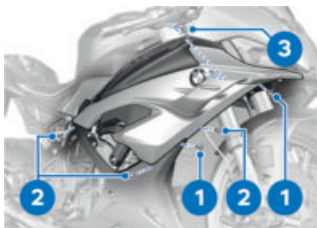

- Remove screws **1** (6 mm with collar).
- Remove screws **2** (3 mm with collar).
- Remove screw **3** (9 mm with collar).

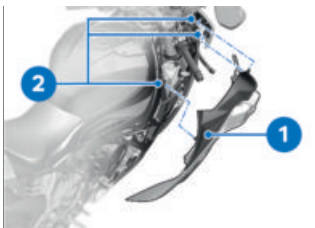


- Disengage fairing side panel **1** from grommets **2** and remove, carefully bending upper section of fairing aside if necessary in the process.

Installing side panel




- Bend engine spoiler **2** down slightly, remove screw **1**.

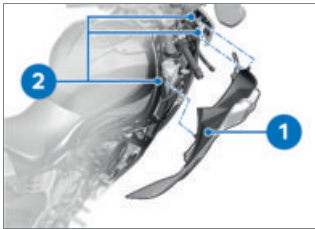


- Engage fairing side panel **1** in grommets **2**, carefully bending upper section of fairing aside if necessary in the process.



- Bend engine spoiler **2** downwards slightly and install bolt **1**.

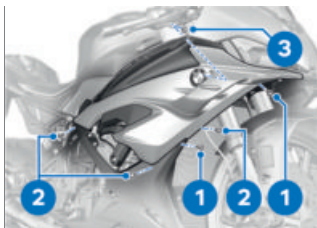


- Install screws **1** (6 mm with collar).
- Install screws **2** (3 mm with collar).
- Install screw **3** (9 mm with collar).

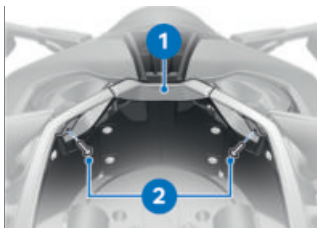

- Hold trim panel **1** in position.
- Install screws **2**.


Removing tail-hump trim panel

- Remove the front seat. (▶▶ 82)
—with two-up riding package^{OE}
- Remove the rear seat. (▶▶ 81)
- Remove the tail-hump cover. (▶▶ 81)
—with two-up riding package^{OE}

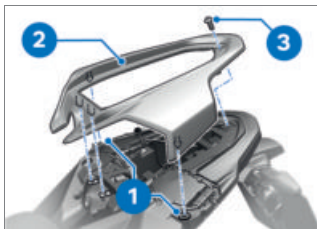


- Remove screw **3**.
- Disengage tail section **2** from grommets **1** and remove.◁


226 MAINTENANCE

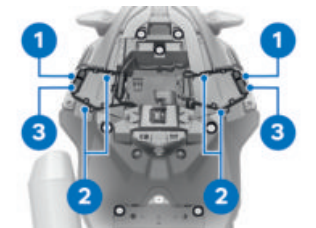

- Remove cable strap **1**.
- Work plug connection with cable **3** clear of holder **2**.

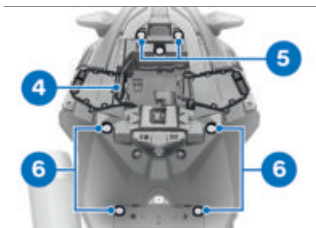

- Unclip plug connection **4**.
- Remove screws **5** (6 mm with collar).
- Remove screws **6** (3 mm with collar).

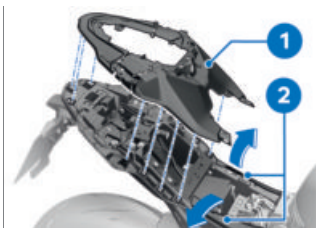


- Carefully unclip panels **2** in the **direction of arrow**.
- Unclip and remove tail-hump cover **1**.


Installing tail-hump trim panel



- Hold tail-hump trim panel **1** in place and, starting at the rear and working forward, carefully clip it into position.
- Carefully clip trim panels **2** into position in the **direction of the arrow**.

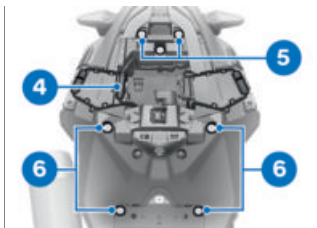

- Install screws **5** (6 mm with collar).
- Install screws **6** (3 mm with collar).
- Clip plug connection **4** into position.

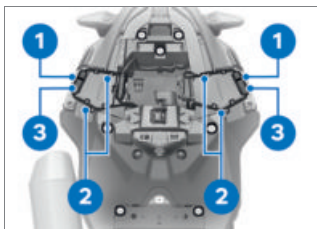

- Work plug connection with cable **3** into holder **2**.
 - Position plug connection **3** correctly and install cable tie **1**.
- » The cable-tie latch is seated in the recess provided for the purpose.

—with two-up riding package^{OE}



- Engage tail section **2** in grommets **1**.
- Install screw **3**.◁

—with two-up riding package^{OE}

- Install the passenger seat. (▮▮▮ 81)
- Install the tail-hump cover. (▮▮▮ 81)
- Install the rider's seat. (▮▮▮ 82)

JUMP-STARTING



CAUTION

Touching live parts of the ignition system when the engine is running

Electric shock

- Do not touch parts of the ignition system when the engine is running.



ATTENTION

Contact between crocodile clips of jump leads and vehicle

Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.



ATTENTION

Jump-starting with a voltage greater than 12 V

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle does not exceed a voltage of 12 V.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.
- Remove the front seat. (82)
- Run the engine of the donor vehicle during jump-starting.
- Begin by connecting one end of the red jump lead to the positive terminal of the discharged battery and the other

end to the positive terminal of the donor battery.

- Connect one end of the black jump lead to the negative terminal of the donor battery, then connect the other end to the negative terminal of the discharged battery.
- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.



Do not use proprietary start-assist sprays or other products to start the engine.

- Allow both engines to idle for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminals first, then disconnect the second lead from the positive terminals.
- Install the rider's seat. (82)

BATTERY

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.
- Do not turn the battery upside down.



ATTENTION

On-board electronics (e.g. clock) draining connected battery


Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.




BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.

Disconnecting battery from motorcycle

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Remove the front seat.
( 82)
- with anti-theft alarm (DWA)^{OE}
- If applicable, switch off the DWA.◀

230 MAINTENANCE

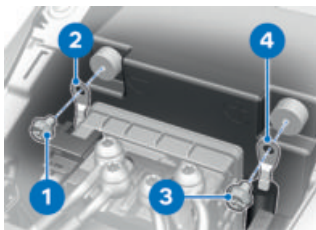


ATTENTION

Battery not disconnected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.
- Remove screw **1**, disconnect negative battery cable **2** and push it forward.
- Remove screw **3** and disconnect positive battery cable **4**.

Connecting battery to motorcycle

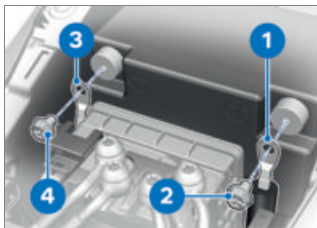

ATTENTION

Battery not connected in accordance with correct procedure


Risk of short-circuit

- Always proceed in compliance with specified installation sequence.
- Hold positive battery cable **1** in position and install screw **2**.
- Hold negative battery cable **3** in position and install screw **4**.
- Install the rider's seat. (► 82)
- with anti-theft alarm (DWA)^{OE}
- Switch on DWA if necessary.◁

Recharging battery

- Disconnect the battery from the motorcycle. (► 229)
- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.

- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.

 The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.

- Connect the battery to the motorcycle. (➡ 230)

Removing battery


- Remove the front seat. (➡ 82)
 - Disconnect the battery from the motorcycle. (➡ 229)
- with intelligent emergency call^{OE}



- Remove screw **2**.
- Remove battery holder **1**, noting lug **3**.◀


- Lift the battery up and out; work it slightly back and forth if it is difficult to remove.

Installing battery

 If the vehicle has been disconnected from the battery for a significant time, the current date will have to be entered in the instrument cluster to guarantee correct operation of the service display.

- Place the battery in the battery compartment; positive terminal on the left in the direction of travel.

—with intelligent emergency call^{OE}

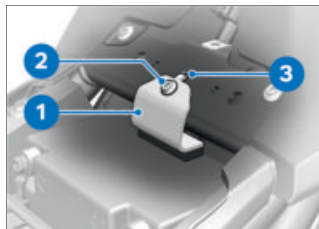

- Hold battery holder **1** in position, making sure that lug **3** is introduced into the hole.
- Install screw **2**.◀
- Connect the battery to the motorcycle. (➡ 230)
- Install the rider's seat. (➡ 82)
- Set the date. (➡ 94)

232 MAINTENANCE

- Set the clock. (▮▮▮ 95)

FUSES

Replacing fuses

- Switch off the ignition.
- Remove the front seat.
(▮▮▮ 82)




ATTENTION

Jumpering of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
 - Always replace a defective fuse with a new fuse of the same amperage.
- Replace faulty fuse in accordance with the fuse allocation diagram.

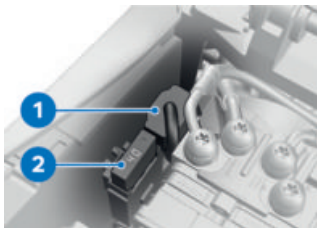

- Remove the faulty fuse **2** upwards out of the slot.
- To replace the two fuses in fuse box **1**, pull the fuse box up and out of its holder. To do so, squeeze the retaining


lugs on the left and right of the fuse box inward.



If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

- Install fuse box **1** in the holder.
- Install the rider's seat. (▮▮▮ 82)

Fuse assignment

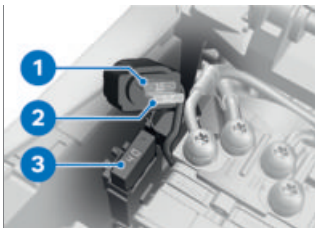

- 1** 15 A
Instrument cluster
Anti-theft alarm (DWA)
Ignition switch
Diagnostic connector
- 2** 7.5 A
Multifunction switch, left
RDC
- 3** 40 A
Alternator regulator

DIAGNOSTIC CONNECTOR

Disengaging diagnostic socket



CAUTION


Incorrect disconnection of the diagnostic socket for on-board diagnosis

Malfunctions of the vehicle

- Do not disconnect the diagnostic socket or allow it to be disconnected except in the course of a BMW Motorrad service by a specialist workshop or by other authorised persons.
- Have the work carried out by appropriately trained personnel.
- Comply with the stipulations of the vehicle manufacturer.

—with two-up riding package^{OE}


- Remove the rear seat. (► 81)
- Remove the tail-hump cover. (► 81)

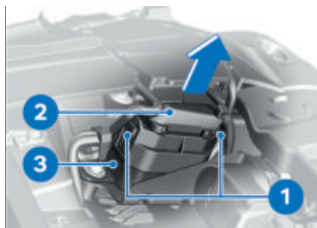

- Press locks **1**.
- Disengage diagnostic socket **2** from holder **3**.
- » The interface to the diagnosis and information system can be connected to the diagnostic connector **2**.

Securing diagnostic socket

- Disconnect the interface for the diagnosis and information system.

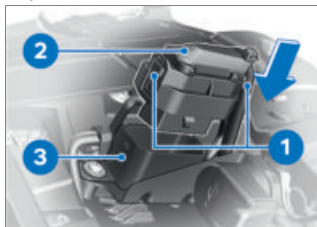

- Insert diagnostic socket **2** into holder **3**.
- » The locks **1** engage.
- with two-up riding package^{OE}
- Install the passenger seat. (► 81)

234 MAINTENANCE

- Install the tail-hump cover.

( 81)

ACCESSORIES

11

GENERAL NOTES	238
CONNECTOR FOR OPTIONAL ACCESSORIES	238
USB CHARGING SOCKET	240

GENERAL NOTES



CAUTION

Use of other-make products

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle.

BMW has conducted extensive testing of the parts and accessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts responsibility for the products. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

All modifications must be in compliance with legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country. Your authorised BMW Motorrad retailer can offer expert advice on the choice of genuine BMW parts, accessories and other products. To find out more about accessories go to:
bmw-motorrad.com/equipment

CONNECTOR FOR OPTIONAL ACCESSORIES

Equipment

The vehicle is fitted with the following plugs for optional accessories and racing accessories:


- Spring-travel sensor
- M data logger
- Optional accessory

Underneath the left side panel

- 1 Plug for optional accessories and racing accessories:
Voltage supply and LIN Spring travel sensor for front forks (racing accessory)

Under the tail-hump trim panel


—with anti-theft alarm (DWA)^{OE}

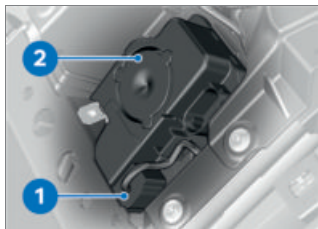

- 1 Connector for DWA and M data logger
- 2 DWA

Under the tail-hump cover

—without anti-theft alarm (DWA)^{OE}

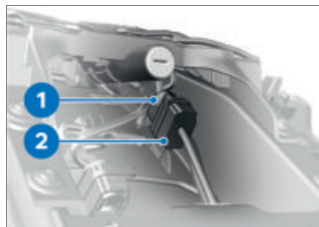

- 1 Terminating resistor
- 2 Connector for DWA and M data logger

Under the tail-hump cover

- 1 Connector for optional accessories, rear


240 ACCESSORIES


Connect the optional accessories and racing accessories

Requirement

Remove the side panel, rear seat or tail-hump cover, as applicable, to gain access to the plugs.

- Remove the fairing side panel with engine spoiler. (▮▮▮ 223)
—with two-up riding package^{OE}
- Remove the rear seat. (▮▮▮ 81)
- Remove the tail-hump cover. (▮▮▮ 81)
- Unlock the protective cap or terminating resistor, as applicable, and disconnect it from the plug.
- Connect the optional accessory or racing accessory, as applicable.

 Comply with the installation instructions supplied with the optional accessory or racing accessory.

 Tightening the cable ties has to be the last step in the process; this is in order to ensure that the wiring harness can be positioned correctly and that there is no strain on the cable legs with plugs.



ATTENTION

Dirt and damp penetrating inside open connectors

Malfunctions

- Reinstall the cap or terminating resistor, as applicable, after removing the plug.

- After removing accessories: Reinstall the cover cap or terminating resistor, as applicable.
- Install the fairing side panel. (▮▮▮ 224)
—with two-up riding package^{OE}
- Install the passenger seat. (▮▮▮ 81)
- Install the tail-hump cover. (▮▮▮ 81)
- Install the tail-hump trim panel. (▮▮▮ 226)

USB CHARGING SOCKET

Notes on use

Charge current

This is a 5 V USB charging interface that provides a maximum charge current of 2.4 A.

Automatic shutdown

The USB charging interface is shut down automatically under the following circumstances:

- If battery charge state is too low, to maintain the vehicle's start capability.
- If the maximum load capacity as stated in the technical data is exceeded.
- During the starting operation.

Connection of electrical devices

You can start using electrical devices connected to the USB charging socket only when the ignition is switched on. The power supply to the USB charging sockets is switched off 60 seconds after the ignition is switched off, in order to prevent overloading of the on-board electrics.

BMW Motorrad recommends using the BMW Motorrad pouch for smartphone to protect your smartphone against water and vibration. To prevent dirtying, keep the protective cover of the USB charging interface closed when no device is connected.

Cable routing

Make sure that cables are routed in such a way that they cannot be trapped.

CARE

12

CARE PRODUCTS	244
WASHING THE VEHICLE	244
CLEANING EASILY DAMAGED COMPONENTS	246
CARE OF PAINTWORK	247
PAINT PRESERVATION	247
LAYING UP MOTORCYCLE	247
RESTORING MOTORCYCLE TO USE	248

CARE PRODUCTS

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad retailer. The substances in BMW Care Products have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



ATTENTION

Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol.



ATTENTION

Use of strongly acidic or strongly alkaline cleaning agents

Damage to vehicle parts

- Dilute in accordance with the dilution ratio stated on the packaging of the cleaning agent.
- Do not use strongly acidic or strongly alkaline cleaning agents.

WASHING THE VEHICLE

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Remove dirt from the fork legs at regular intervals.

Make sure that the vehicle is washed frequently, especially during the winter months.

**ATTENTION****Effect of road salt intensified by warm water****Corrosion**

- Use only cold water to remove road salt deposits.

To remove road salt deposits, clean the vehicle and mounted parts, as applicable, with cold water immediately after every trip.



After a ride in the rain, when humidity is high or after the vehicle has been washed, condensation might form inside the headlight. This can cause temporary fogging on the headlight lens. If moisture is constantly present inside the headlight consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

**WARNING****Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions**

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads.

**ATTENTION****Damage due to high water pressure from high pressure cleaners or steam cleaners**

Corrosion or short circuit, damage to labels, seals, hydraulic brake system, electrical system and the motorcycle seat

- Exercise restraint when using a steam jet or high pressure cleaning equipment.

CLEANING EASILY DAMAGED COMPONENTS

Plastics



ATTENTION

Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.

Clean the plastic parts with water and BMW plastic care product. This includes in particular:

- Windscreen and slipstream deflectors
- Headlight lens made of plastic
- Glass cover of the instrument cluster
- Black, unpainted parts



Soften stubborn dirt and insects by covering the affected areas with a wet cloth.

Carbon parts

Clean Carbon parts with water and a microfibre cloth.

TFT display

Clean the TFT display with warm water and washing-up liquid. Then dry it with a clean cloth, e.g. a paper towel.

Chrome

Carefully clean chrome parts with plenty of water and motorcycle cleaner from the BMW Care Products range. This is particularly important to counter the effects of salt. Use BMW Motorrad metal polish for additional treatment.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



ATTENTION

Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.

Rubber

Treat rubber components with water or BMW rubber-care products.

**ATTENTION****Application of silicone sprays to rubber seals**

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.

CARE OF PAINTWORK

Washing the vehicle regularly will help counteract the long-term effects of substances that can damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen.

Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel, oil, grease, brake fluid and bird droppings. For this, we recommend BMW Motorrad solvent cleaner followed by BMW Motorrad gloss polish for preservation.

Marks on the paintwork are particularly easy to see after the motorcycle has been washed. Remove stains of this kind at the earliest possible

opportunity, using benzine or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Then apply preserving agent to the areas treated in this way.

**ATTENTION****Damage to paintwork due to metal polish**

Risk of damage

- Do not treat painted surfaces and chrome-painted surfaces with metal polish.

PAINT PRESERVATION

If water no longer rolls off the paint, the paint must be preserved.

For paint preservation, BMW Motorrad recommends the use of BMW Motorrad gloss polish or agents containing carnauba wax or synthetic wax.




Do not use chrome polish to preserve chrome paints. Use only the agents recommended by BMW Motorrad.

LAYING UP MOTORCYCLE

- Fill the motorcycle's fuel tank.



 Fuel additives clean the fuel injection system and the combustion zone. It is advisable to use fuel additives when the engine is operated with low-grade fuel or if the vehicle is to be out of use for a lengthy period of time. More information is available from your authorised BMW Motorrad retailer.

- Clean the motorcycle.
- Remove the battery. (231)
- Spray the brake and clutch lever pivots and the side stand pivot mounts with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel.

RESTORING MOTORCYCLE TO USE

- Remove the protective wax coating.
- Clean the motorcycle.
- Install the battery. (▶▶▶ 231)

TECHNICAL DATA

13

TROUBLESHOOTING CHART	252
THREADED FASTENERS	254
FUEL	258
ENGINE OIL	259
COOLANT	259
ENGINE	259
CLUTCH	260
TRANSMISSION	260
FINAL DRIVE	260
FRAME	261
CHASSIS AND SUSPENSION	261
BRAKES	262
WHEELS AND TYRES	263
ELECTRICAL SYSTEM	264
ANTI-THEFT ALARM	265
DIMENSIONS	265
WEIGHTS	265
PERFORMANCE FIGURES	266

TROUBLESHOOTING CHART

Engine does not start or is difficult to start.

Possible cause	Rectification
Side stand extended and gear engaged	Fold in side stand.
Gear engaged and clutch not pressed	Select neutral or pull the clutch lever.
No fuel in tank	Refuel. (143)
Battery flat	Recharge the battery. (230)
Overheating protection for starter motor has been activated. Starter motor can only be operated for a limited period of time.	Allow the starter motor to cool down for approx. 1 minute before using it again.

The Bluetooth connection is not established.

Possible cause	Rectification
The steps required for pairing were not carried out.	Check the necessary steps for pairing in the operating instructions for the communication system.
The communication system was not connected automatically despite successful pairing.	Switch off the helmet's communication system and reconnect it after a minute or two.
Too many Bluetooth devices are saved on the helmet.	All pairing entries on the helmet are deleted (see the communication system operating instructions).
There are other vehicles with Bluetooth-capable devices in the vicinity.	Avoid simultaneously pairing with more vehicles.

Bluetooth connection is interrupted.

Possible cause	Rectification
The Bluetooth connection to the mobile end device is interrupted.	Switch off energy saving mode.
The Bluetooth connection to the helmet is interrupted.	Switch off the helmet's communication system and reconnect it after a minute or two.
The volume in the helmet cannot be adjusted.	Switch off the helmet's communication system and reconnect it after a minute or two.

The telephone book is not displayed in the TFT display.

Possible cause	Rectification
The phone book was not transmitted to the vehicle.	Confirm transmission of the phone data (📶➡ 106) when pairing on the mobile end device.

Active route guidance is not displayed in the TFT display.

Possible cause	Rectification
Navigation from the BMW Motorrad Connected App was not transmitted.	The BMW Motorrad Connected App is opened on the connected mobile end device prior to departure.
The route guidance cannot be started.	Secure the mobile device's data connection and check the map data on the mobile end device.

254 TECHNICAL DATA

THREADED FASTENERS

Frame	Value	Valid
Positioning of swinging arm pivot point bush in main frame, right		
M6 x 26.7	5 Nm	
Positioning of swinging arm pivot point bush in main frame, left		
M6 x 12	8 Nm	
Swinging arm axle to frame		
M27 x 1.25	Tightening torque, 15 Nm	
	Loosen, 120°	
	Tightening torque, 5 Nm	
Nut on swinging arm axle		
M18 x 1.5, Replace nut mechanical	100 Nm	
Nut for swinging arm pivot point bush to frame		
M36 x 0.75, Replace nut Loctite 270, High strength	70 Nm	

Front wheel	Value	Valid
Quick-release axle in threaded bush		
M24 x 1.5	50 Nm	
Clamping screws in axle holder		
M8 x 35	Tightening sequence: Tighten screws six times in alternate sequence	
	19 Nm	
Radial brake caliper on wheel axle clamp		
M10 x 65	38 Nm	
Rear wheel	Value	Valid
Locknut of the final-drive chain tensioning screw		
M8	19 Nm	
Rear quick-release axle in swinging arm		
M24 x 1.5 mechanical	125 Nm	
Swinging-arm adapter to rear wheel swinging arm		
M8 x 30	20 Nm	

256 TECHNICAL DATA

Rear wheel	Value	Valid
Screw in adjusting ring		
M5 x 16	6 Nm	—without Dynamic Damping Control (DDC) ^{OE}
Spring strut at deflection lever		
M12 x 75 - 10.9 micro-encapsulated	100 Nm	
Clamping bolt at adjusting strut		
M6 x 25	8 Nm	

Mirrors	Value	Valid
Mirror to front panel carrier		
M6, Replace nut mechanical	8 Nm	
Cover for mounting of mirror		
M6 x 25	3 Nm	

Footrest system	Value	Valid
Screw connection for footrest adjustment		
M8 x 40 mechanical	20 Nm	—with Billet pack ^{OE}




Footrest system	Value	Valid
Clamping bolt for rider footrest		
M8 x 25 mechanical	20 Nm	–with Billet pack ^{OE}
Peg to footbrake lever		
M6 x 20 micro-encapsulated	10 Nm	–with Billet pack ^{OE}
Folding peg		
M6 x 16	10 Nm	–with Billet pack ^{OE}

Number plate carrier on rear frame	Value	Valid
Number-plate carrier to rear frame		
M5 x 25, without collar	2 Nm	

Selector rod to gear-shift lever	Value	Valid
Selector rod to gear-shift lever		
M6 x 20, Replace screw micro-encapsulated	8 Nm	

258 TECHNICAL DATA

FUEL

Recommended fuel grade	 Premium, unleaded (max. 5 % ethanol, E5) 98 ROZ/RON 93 AKI
Alternative fuel grade	 Premium unleaded (power- and consumption-related restrictions)  (max 10 % ethanol, E10) 95 ROZ/RON 90 AKI
Usable fuel capacity	approx. 17 l
Fuel reserve	approx. 4 l
Fuel consumption	6.4 l/100 km, in accordance with WMTC
—with power reduction ^{OE}	6.3 l/100 km, in accordance with WMTC
CO ₂ emission	149 g/km, following world-wide harmonised motorcycle test cycle (WMTC)
—with power reduction ^{OE}	147 g/km, following world-wide harmonised motorcycle test cycle (WMTC)
Exhaust emissions standard	EU 5
—with Canada export ^{NV}	TIER 2, measured in accordance with FTP75

ENGINE OIL

Engine oil, capacity	approx. 4.0 l, with filter change
Specification	SAE 5W-40, API SJ / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.
Engine oil, quantity for topping up	max 1.3 l, Difference between MIN and MAX

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

COOLANT

Coolant top-up quantity	0.15 l, Difference between MIN and MAX 2.4 l, Coolant circuit, total FROSTOX HT-12, Coolant
-------------------------	--

ENGINE

Engine number location	Crankcase, bottom right
Engine type	A10A10C
Engine design	Oil-/water-cooled four-stroke inline four, with four valves per cylinder
Displacement	999 cm ³
Cylinder bore	80 mm
Piston stroke	49.7 mm
Compression ratio	13,3:1

260 TECHNICAL DATA

Nominal capacity	154 kW, at rpm: 13750 min ⁻¹
–with power reduction ^{OE}	79 kW, at rpm: 7250 min ⁻¹
Torque	113 Nm, at rpm: 11000 min ⁻¹
–with power reduction ^{OE}	107 Nm, at rpm: 7000 min ⁻¹
Maximum engine speed	max 14600 min ⁻¹
Idle speed	1270 ^{±50} min ⁻¹ , Engine at regular operating temperature

CLUTCH

Clutch type	Multi-plate oil-bath (anti-hopping) with self-reinforcement
-------------	---

TRANSMISSION

Type of transmission	Claw-shift 6-speed gearbox, integrated into engine block
Gearbox transmission ratios	1.652 (76:46 teeth), Primary transmission ratio 2.647 (45:17 teeth), 1st gear 2.091 (46:22 teeth), 2nd gear 1.727 (38:22 teeth), 3rd gear 1.500 (33:22 teeth), 4th gear 1.360 (34:25 teeth), 5th gear 1.261 (29:23 teeth), 6th gear

FINAL DRIVE

Type of final drive	Chain drive
Chain deflection	45...50 mm, Motorcycle with no weight applied, supported on its side stand
Permissible chain length	max 144 mm, measured from the centre of 10 rivets, chain pulled taut

Number of teeth, rear-wheel drive (Pinion / sprocket)	17:46
Secondary transmission ratio	2.706

FRAME

Frame type	Aluminium composite bridge frame, engine also load bearing
Type plate location	Frame, front right on steering head
Position of the vehicle identification number	Frame, front right on steering head

CHASSIS AND SUSPENSION

Front wheel

Type of front suspension	Upside-down telescopic forks, diameter 45 mm, spring preload, rebound and compression stages adjustable
–with Dynamic Damping Control (DDC) ^{OE}	Upside-down telescopic forks, diameter 45 mm, DDC electronically controlled, spring preload adjustable, shock-absorber damping range electronically customisable
Spring travel, front	120 mm, at front wheel

262 TECHNICAL DATA

Rear wheel

Type of rear suspension	Two-arm aluminium swinging arm
Design of the rear-wheel suspension	Central spring strut with coil spring, adjustable rebound-stage and compression-stage damping and spring preload
—with Dynamic Damping Control (DDC) ^{OE}	Central spring strut with coil spring, with adjustable rebound-stage and compression-stage damping and hydraulically adjustable spring preload
Spring travel, rear	118 mm, at rear wheel

BRAKES

Front wheel

Type of front brake	Twin disc brake, diameter 320 mm, 4-piston fixed caliper
Brake-pad material, front	Sintered metal
Brake disc thickness, front	4.5 mm, when new min 4.0 mm, wear limit
—with M carbon wheels ^{OE} or —with M forged wheels ^{OE}	5.5 mm, when new min 5 mm, wear limit
Play of brake controls (Front brake)	5.2...15.2 mm, at the outermost end of the stock handlebar lever

Rear wheel

Type of rear brake	Single-disc brake, diameter 220 mm, 1-piston floating caliper
Brake-pad material, rear	Organic material
Brake disc thickness, rear	5 mm, when new min 4.5 mm, wear limit
Blow-by clearance of the foot-brake lever	2...3 mm, between the foot-brake lever and footrest plate

WHEELS AND TYRES

Recommended tyre combinations	An overview of currently approved tyres is available from your authorised BMW Motorrad retailer.
Speed category, front/rear tyres	W, required at least: 270 km/h

Front wheel

Front-wheel type	Aluminium cast wheel
–with M carbon wheels ^{OE}	Carbon wheel
–with M forged wheels ^{OE}	Forged aluminium wheels
Front-wheel rim size	3.50" x 17"
Tyre designation, front	120/70 ZR 17
Load index, front tyre	min. 58
Permissible front-wheel imbalance	max 5 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
–with M carbon wheels ^{OE}	Carbon wheel
–with M forged wheels ^{OE}	Forged aluminium wheels
Rear wheel rim size	6.0" x 17"

264 TECHNICAL DATA

Tyre designation, rear	190/55 ZR 17
—with M carbon wheels ^{OE}	200/55 ZR 17
—with M forged wheels ^{OE}	200/55 ZR 17
Load index, rear tyre	min. 75
Permissible rear-wheel imbalance	max 5 g

Tyre pressure

Tyre pressure, front	2.5 bar, tyre cold
Tyre pressure, rear	2.9 bar, tyre cold

ELECTRICAL SYSTEM

Fuses

Main fuse	40 A, Alternator regulator, isolating relay, BCL, BMS-O, ABS, SAF
Fuse 1	15 A, DWA, OBD, ignition switch, instrument cluster
Fuse 2	7.5 A, Multifunction switch left, RDC control unit, sensor box

Battery

Battery type	Lithium-ion, maintenance-free
Battery rated voltage	12 V
Battery rated capacity	5 Ah

Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR9FI-10G
---	-----------------

Lighting

All light sources	LED
-------------------	-----

ANTI-THEFT ALARM

Activation time on arming	approx. 30 s
Alarm duration	approx. 26 s

DIMENSIONS

Length of motorcycle	2073 mm, via rear wheel
Height of motorcycle	1205 mm, across mirrors at DIN unladen weight 1205 mm, without mirrors, at DIN unladen weight
Width of motorcycle	848 mm, with mirrors 740 mm, over handlebar weights
Height of rider's seat	832 mm, without rider, at DIN unladen weight
Rider's inside-leg arc, heel to heel	1845 mm, without rider, at DIN unladen weight

WEIGHTS

Vehicle kerb weight	197 kg, DIN unladen weight, ready for road, 90 % load of fuel, without optional extras (OE)
Permissible gross vehicle weight	407 kg
Maximum payload	210 kg
—with M Package ^{OE} —with M carbon wheels ^{OE}	212 kg
—with M Package ^{OE} —with M forged wheels ^{OE}	212 kg

266 TECHNICAL DATA

PERFORMANCE FIGURES

Top speed	>200 km/h
–with power reduction ^{OE}	>200 km/h

SERVICE

14

REPORTING SAFETY-RELEVANT DEFECTS	270
RECYCLING	271
BMW MOTORRAD SERVICE	271
BMW MOTORRAD SERVICE HISTORY	272
BMW MOTORRAD MOBILITY SERVICES	272
MAINTENANCE WORK	272
MAINTENANCE SCHEDULE	274
BMW MOTORRAD RUNNING-IN CHECK	275
MAINTENANCE CONFIRMATIONS	276
SERVICE CONFIRMATIONS	288

REPORTING SAFETY-RELEVANT DEFECTS

—with Canada export^{NV}

If you think that your motorcycle has a fault which may cause an accident, injury or death, you must inform the NHTSA (National Highway Traffic Safety Administration) immediately and BMW of North America, LLC.

If the NHTSA receives other similar complaints, it may open an investigation. If it finds that a safety defect exists in a group of vehicles, the NHTSA may order the manufacturer to perform a recall and remedy campaign. However, the NHTSA cannot become involved in individual problems between you, your retailer, or BMW of North America, LLC.


You can contact the NHTSA by calling the Vehicle Safety hotline on 1-888-327-4236 (teletypewriter TTY for the hearing impaired: 1-800-424-9153) for free, by visiting the website at [http:// www.safercar.gov](http://www.safercar.gov) or by writing to Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. Further information on vehicle safety is available at [http:// www.safercar.gov](http://www.safercar.gov).

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls can call the toll-free hotline 1-800-333-0510. You can also obtain other information about motor vehicle safety from [http:// www.tc.gc.ca/roadsafety](http://www.tc.gc.ca/roadsafety).

RECYCLING

—with France export^{NV}

Disposal of the rider's manual

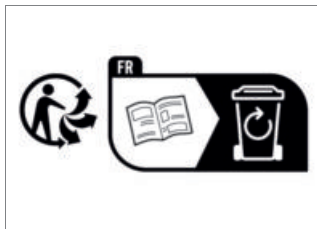

Dispose of this rider's manual by depositing it in the container provided for the purpose.

BMW MOTORRAD SERVICE

BMW Motorrad has an extensive network of retailers in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad retailers have the technical information and the technical know-how to carry out reliably all preventive maintenance and repair work on your BMW.

You can locate the nearest authorised BMW Motorrad retailer by visiting our website:

bmw-motorrad.com.



WARNING

Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a specialist workshop, preferably an authorised BMW Motorrad dealer.

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle.

Have all maintenance and repair work carried out confirmed in the "Service" chapter in this manual. Evidence of regular preventive maintenance is essential for generous treatment of claims submitted after the warranty period has expired.

272 SERVICE

You can inquire about the content of BMW Motorrad services at your authorised BMW Motorrad retailer.

BMW MOTORRAD SERVICE HISTORY

Entries

Maintenance work that has been carried out is entered in the proof of maintenance. The entries are like a Service Booklet and provide proof of regular maintenance.

When an entry is made in the electronic service booklet of the vehicle, service-relevant data is saved in the central IT systems of BMW AG, Munich, Germany.

If there is a change in vehicle ownership, the data saved in the electronic service booklet can also be viewed by the new vehicle owner. A BMW Motorrad retailer or a specialist workshop can also view data that is stored in the electronic service booklet.

Objection

The vehicle owner can object to entries being made by the BMW Motorrad retailer or a specialist workshop in the electronic service booklet along

with the corresponding storage of data in the vehicle and transfer of data to the vehicle manufacturer for the period of time that they are the vehicle owner. In this instance, no entry is made in the electronic service booklet of the vehicle.

BMW MOTORRAD MOBILITY SERVICES

If you have a new BMW motorcycle, you are protected by various of the BMW Motorrad mobility services in the event of a breakdown (e.g. BMW breakdown assistance, breakdown recovery, vehicle transport). Find out from your authorised BMW Motorrad Retailer which mobility services are offered.

MAINTENANCE WORK

BMW pre-delivery check

The BMW pre-delivery check is performed by your authorised BMW Motorrad retailer before the vehicle is handed over to you.

BMW Running-in check

The BMW running-in check has to be performed when the vehicle has covered between 500 km and 1200 km.

BMW Motorrad Service

The BMW Motorrad Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad retailer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odometer reading is reached before the next scheduled date for the service.

The service display in the multifunction display reminds you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:

bmw-motorrad.com/service

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below.

MAINTENANCE SCHEDULE

	500 -1200 km 300 - 750 mls	10 000 km 6 000 mls	20 000 km 12 000 mls	30 000 km 18 000 mls	40 000 km 24 000 mls	50 000 km 30 000 mls	60 000 km 36 000 mls	70 000 km 42 000 mls	80 000 km 48 000 mls	90 000 km 54 000 mls	100 000 km 60 000 mls	12 months	24 months
1	X												
2		X	X	X	X	X	X	X	X	X	X	X ^a	
3		X	X	X	X	X	X	X	X	X	X	X ^a	
4				X			X			X			
5				X			X			X			
6				X			X			X			
7		X	X	X	X	X	X	X	X	X	X		
8				X			X			X			
9												X ^b	X ^b

- 1 BMW Motorrad running-in check (including oil change and oil filter change)
- 2 BMW Motorrad Service, standard scope
- 3 Engine-oil change, with filter
- 4 Check valve clearances
- 5 Check timing
- 6 Replace all spark plugs
- 7 Replace air-filter element
- 8 Oil change in the telescopic forks
- 9 Change brake fluid, entire system

- a annually or every 10000 km (whichever comes first)
- b for the first time after one year, then every two years

BMW MOTORRAD RUNNING-IN CHECK

BMW Motorrad running-in check

The tasks included in the BMW Motorrad running-in check are listed below. The actual scope of work applicable for your vehicle may vary.

- Setting service-due date and countdown distance with BMW Motorrad diagnostic system
- Deleting running-in rpm limitation with BMW Motorrad diagnostic system
- Performing vehicle test with BMW Motorrad diagnostic system
- Engine-oil change, with filter
- Check the clutch cable and clutch-lever play
- Check the brake-fluid level, front wheel brake
- Check the brake-fluid level, rear wheel brake
- Check the coolant level
- Check chain sag
- Check the tyre pressures and tread depth
- Check the lighting and signalling system
- Function test, engine start suppression
- Final inspection and check for road safety
- Performing vehicle test with BMW Motorrad diagnostic system
- Confirm the BMW service in the on-board literature

MAINTENANCE CONFIRMATIONS

BMW Motorrad Service standard scope

The tasks included in the BMW Motorrad Service standard scope are listed below. The actual scope of maintenance work applicable for your vehicle may vary.

- Performing vehicle test with BMW Motorrad diagnostic system
- Visual inspection of the brake lines, brake hoses and connections
- Check the front brake pads and brake discs for wear
- Check the brake-fluid level, front wheel brake
- Check the rear brake pads and brake disc for wear
- Check the brake-fluid level, rear wheel brake
- Check steering-head bearing
- Check the coolant level
- Check the clutch cable and clutch-lever play
- Checking and lubricating the chain drive
- Check the tyre pressures and tread depth
- Check the carbon wheels
- Check the side stand's ease of movement
- Check the lighting and signalling system
- Function test, engine start suppression
- Final inspection and check for road safety
- Setting service-due date and countdown distance with BMW Motorrad diagnostic system
- Check the battery state of charge
- Confirm the BMW Motorrad service in the on-board literature

BMW Motorrad pre-delivery check

carried out

on _____

Stamp, signature

BMW Motorrad running-in check

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Stamp, signature

BMW Motorrad service

carried out

on_____

odometer reading_____

Next service

at the latest

on_____

or, when reached earlier

odometer reading_____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad service

carried out

on _____

odometer reading _____

Next service

at the latest

on _____

or, when reached earlier

odometer reading _____

Work performed

	Yes	No
BMW Motorrad service	<input type="checkbox"/>	<input type="checkbox"/>
Engine oil change with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking the timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing the air filter element	<input type="checkbox"/>	<input type="checkbox"/>
Changing the oil in the telescopic fork	<input type="checkbox"/>	<input type="checkbox"/>
Changing the brake fluid in the entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

DECLARATION OF CONFORMITY	291
CERTIFICATE FOR ELECTRONIC IMMOBILISER	294
CERTIFICATE FOR TYRE PRESSURE CONTROL (RE- IFENDRUCK-CONTROL, RDC)	297
CERTIFICATE FOR TFT INSTRUMENT CLUSTER	298

DECLARATION OF CONFORMITY**Manufacturer**

Bayerische Motoren Werke Aktiengesellschaft
Petuelring 130, 80809 Munich, Germany

Hereby, BMW AG declares that the radio equipment components listed below are in compliance with Directive 2014/53/EU and with Radio Equipment Regulations 2017 of the United Kingdom. The full text of the EU/UK declarations of conformity are available at the following internet address:
bmw-motorrad.com/certification



Simplified UK Declaration of Conformity according to Radio Equipment Regulations 2017 of the United Kingdom.



Simplified EU Declaration of Conformity according to EU RED (2014/53/EU).

292 APPENDIX

Technical information

Radio equipment	Component	Frequency band	Output/Transmission Power
EWS4	EWS	134 kHz	50 dB μ V/m
HUF5750	Keyless Ride	434,42 MHz	10 mW
HUF8465	Keyless Ride	134,45 kHz	42 dB μ V/m
HUF5794	Keyless Ride	433,92 MHz	10 mW
HUF8485	Keyless Ride	134,45 kHz	42 dB μ V/m
ZB001	Keyless Ride	134.5 kHz	allowed 66 dB μ A/ m@ 10m
ZB002	Keyless Ride	433.92 MHz	max. 10 dBm e.r.p
TXBM-WMR	DWA	433.05 MHz - 434.79 MHz	18,8 dBm
RDC3	RDC	433.92 MHz	<13 mW
Wus Moto gen 3	RDC	433,05 MHz - 434,79 MHz	<10 mW e.r.p.
MC24MA4	RDC		
WCA Motorrad-Ladestufach	Charging compartment	110 kHz - 115 kHz	< 6 W
ICC6.5in	Instrument Cluster	Bluetooth: 2402 MHz - 2480 MHz WLAN: 2412 MHz - 2462 MHz	Bluetooth: < 4 dBm WLAN: < 20 dBm

Radio equipment	Component	Frequency band	Output/Transmission Power
ICC10in	Instrument Cluster	Bluetooth: 2402 MHz - 2480 MHz WLAN: 2402 MHz - 2472 MHz	Bluetooth: < +4 dBm WLAN: < +14 dBm
MRR e14FCR	ACC	76 - 77 GHz	Peak max. 32 dBm Nom max. 27 dBm
TL1P22	Intelligent emergency call	832 MHz - 862 MHz 880 MHz - 915 MHz 1710 MHz - 1785 MHz 1920 MHz - 1980 MHz 2500 MHz - 2570 MHz 2570 MHz - 2620 MHz GNSS: 1559 MHz-1610 MHz	23 dBm 33 dBm 30 dBm 24 dBm 23 dBm 23 dBm
MCR001	Audio system		

Declaration of Conformity

Radio equipment electronic immobiliser (EWS4)

For all countries without EU

Technical information

Frequency Band: 134 kHz
(Transponder: TMS37145 /
Type DST80, TMS3705
Transponder Base Station IC)
Output Power: 50 dBμV/m

Manufacturer and Address

Manufacturer:
BECOM Electronics GmbH
Address: Technikerstraße 1,
A-7442 Hochstraß

Argentina

 **RAMATEL**
H-25246

Australia/New Zealand



R-NZ

Brunei



TA No: DTA-007061

United Arab Emirates

TRA
REGISTERED No:
ER89926/20

DEALER No:
DA96133I20

Philippiens



NTC

Type Approved
No.: ESD-RCE-2023298

South Africa



TA-2020/6131

APPROVED

India

ETA-SD-20200905860

Belarus



Indonesia

72790/SDPPI/2021
13349




Dilarang melakukan perubahan
Spesifikasi yang dapat
Menimbulkan gangguan fisik
dan/atau elektromagnetik
terhadap lingkungan sekitarnya

Taiwan



低功 電波 射性電機管 辦法
第十二條 經型式認證合格之低
功率射頻電 機，非經許可，公
司、商號或使用者均不得擅 自變
更頻率、加大功率或變更原設計
之特性及 功能。第十四條 低功
率射頻電機之使用不 得影響飛航
安全及干擾合法通信；經發現有
干 擾現象時，應立即停用，並改
善至無干擾時方 得繼續使用。前
項合法通信，指依電信法規定作
業之無線電 通信。

Paraguay

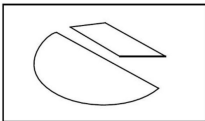

CONATEL

NR: 2020-11-I-0834

Malaysia



RFCL/47A/0920/S(20-3358)

Singapore

Complies with
IMDA Standards
N3504-20

Israel

מספר אישור אלחוטי של משרד התקשורת הוא
51-74908
אסור להחליף את האנטנה המקורית של המכשיר
ולא
לעשות בו כל שינוי טכני אחר

United States (USA)

Contains FCC ID:

ODE-MREWS5012

FCC § 15.19 Labelling requirements

This device complies with part 15 of the FCC Rules and Industry Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC § 15.21 Information to user

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Requirements

To comply with FCC RF exposure compliance requirements, the device must be installed to provide a separation distance of at least 20 cm from all persons.

Serbia



P1620118300

Canada

Contains IC:


10430A-MREWS5012

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Vietnam

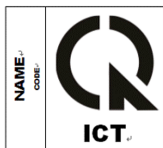

A1109091120AF04A3

Certification Tire Pressure Control (TPC)

FCC ID: MRXBC54MA4
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Declaration of Conformity

Radio equipment TFT instrument cluster

For all Countries without EU

Technical information

BT operating frq. Range:
2402 – 2480 MHz
BT version: 4.2 (no BTLE)
BT output power: < 4 dBm
WLAN operating frq. Range:
2412 – 2462 MHz
WLAN standards:
IEEE 802.11 b/g/n
WLAN output power: < 20 dBm

Manufacturer and Address

Manufacturer:
Robert Bosch GmbH
Address: Robert Bosch Str. 200,
31139 Hildesheim, Germany

Turkey

Robert Bosch GmbH, ICC6.5'in
tipi telsiz sisteminin 2014/53/EU
nolu yönetmeliğe uygun
olduğunu beyan eder. AB
Uygunluk Beyanı'nın tam metni,
aşağıdaki internet adresinden
görülebilir: <http://cert.bosch-carmultimedia.net>

Argentina

 **RAMATEL**

C-24711

Brazil

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

Canada

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Korea

적합성평가에 관한 고시

R-CMM-RBR-ICC65IN

상호 : Robert Bosch GmbH모델

명 : ICC6.5in

기자재명칭 : 특정소출력 무선기기
(무선데이터통신시스템용 무선기기)

제조사 및 제조국가 : Robert

Bosch GmbH / 포르투갈

제조년월 : 제조년월로 표기

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

Mexico

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Taiwan, Republic of

根據 NCC 低功率電波輻射性電機
管理辦法 規定: 第十二條

經型式認證合格之低功率射頻電機, 非經許可, 公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信; 經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。

前項合法通信, 指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Thailand

เครื่องโทรคมนาคมและอุปกรณ์นี้

มีความสอดคล้องตามข้อกำหนดของ กทช.

(This telecommunication equipments is in compliance with NTC requirements)

United States (USA)

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

302 INDEX

A

- Abbreviations and symbols, 4
- ABS, 182
 - Engineering details, 178
 - Self-diagnosis, 135
 - Status indicators, 51
 - Warning indicators, 52, 53

Accessories

- Connector for optional accessories, 238
- M Cover Kit, 166

Air filter

- Position in the vehicle, 20

Anti-theft alarm

- Indicator light, 25
- operating, 78

B

Battery

- charging, 230
- connecting to motor-cycle, 230
- disconnecting from motorcycle, 229
- installing, 231
- Maintenance instructions, 229
- Position on the vehicle, 21
- remove, 231
- Technical data, 264
- Warning indicators, 39, 40

Best-ever lap, 152

Bluetooth, 96

Brake fluid

- Checking fluid level, front, 205
- Checking fluid level, rear, 206
- Reservoir, front, 20
- Reservoir, rear, 20

Brake pads

- checking front, 203
- checking rear, 204
- Running in, 137

Brakes

- ABS Pro, 181
- ABS Pro depending on riding mode, 140
- Adjusting handlebar levers, 110
- Checking operation, 203
- Dynamic Brake Control depending on riding mode, 140
- Safety information, 139
- Technical data, 262

C

Care

- Care products, 244
- Chrome, 246
- Paintwork preservation, 247
- Washing the vehicle, 244

Chain

- Adjusting sag, 220
- Checking tension, 220
- Checking wear, 222
- Lubricating, 221

Chassis and suspension

- Technical data, 261

Check control

- Dialogue, 31
- Display, 31

Checklist, 133

Clock, 95

Clutch
 Adjusting handlebar
 levers, 111
 Adjusting play, 208
 Checking operation, 207
 Checking play, 207
 Technical data, 260

Coolant
 Checking fill level, 208
 Technical data, 259
 Topping up, 209
 Cruise control, 22
 operating, 73

D

Damping
 Adjuster, front, 18
 Adjuster, rear, 18
 adjusting, 118
 adjusting, without DDC, 119

Data recording
 Data recording, 174

DDC
 calibrating, 126
 Engineering details, 182
 operating, 72

Diagnostic connector
 disengaging, 233
 Position on the vehicle, 21
 securing, 233

Dimensions
 Technical data, 265

Drop sensor
 Indicator light, 50

DTC, 22
 Customising controls, 156
 Engineering details, 183
 operating, 69
 Self-diagnosis, 136

switching off, 69
 switching on, 70
 Warning indicators, 53, 54,
 55, 56

DWA

Technical data, 265
 Warning indicator lights, 42
 Warning indicators, 42

Dynamic Brake Control, 189
 Engineering details, 189
 Dynamic engine brake
 control, 185

E

Electrical system
 Technical data, 264
 Emergency call, 170, 171, 172
 Automatically in the event of a
 light fall, 65
 Automatically in the event of a
 severe fall, 66
 Language, 64
 manual, 64
 Notes, 11

Warning indicators, 51
 Emergency off switch (kill
 switch), 23, 24
 operating, 63

Engine
 parking, 62
 starting, 134
 Technical data, 259
 Warning indicator lights, 44
 Warning indicators, 44, 45

Engine oil
 Checking fill level, 201
 Filler neck, 20
 Fill-level indicator, 20

304 INDEX

Technical data, 259
topping up, 202
Engine temperature, 42, 43

F

Final drive
 Technical data, 260
Frame
 Technical data, 261
Front-wheel stand
 installing, 200
Fuel
 Fuel grade, 142
 refuelling, 143
 Technical data, 258
Fuel reserve
 Range, 94
 Warning indicators, 56
Fuses
 Position on the vehicle, 21
 replacing, 232
 Technical data, 264

G

General views
 Indicator and warning
 lights, 28
 Instrument cluster, 25
 Left multifunction switch, 22
 left side of vehicle, 18
 My vehicle, 99
 Right multifunction switch, 23,
 24
 right side of vehicle, 20
 TFT display, 29, 30
 Under the rider's seat, 21

H

Hazard warning flashers
 Control, 22, 23, 24
 operating, 66
Headlight
 Headlight beam throw, 110
 Setting for right-hand/left-
 hand traffic, 110
Headlight courtesy delay
 feature, 67
Heated handlebar grips
 Control, 23, 24
 operating, 80
Hill Start Control, 76, 193
 cannot be activated, 57
 Engineering details, 193
 Indicator and warning
 lights, 57
Hill Start Control Pro
 adjusting, 76
 Engineering details, 193
 operating, 76
Horn, 22

I

Ignition
 switching off, 62
 switching on, 62
Immobiliser
 Spare key, 63
Indicator lights, 25
 Overview, 28
Instrument cluster
 Ambient-light brightness
 sensor, 25
 Overview, 25

J

Jump-starting, 227

K

Keys, 62

L

Laptimer

adjusting, 151

Ending timing, 151

operating, 151

Start the timing, 151

Launch control, 152, 154

Racing start, 154

Lighting

Indicator light for faulty bulb, 40

Replacing LED light sources, 223

Technical data, 264

Lights

Control, 22

Headlight courtesy delay feature, 67

Headlight flasher, operating, 67

High-beam headlight, operating, 67

Low-beam headlight, 66

Parking lights, 67

Side light, 66

Luggage

Instructions for loading, 130

M

Maintenance

Maintenance schedule, 274

Maintenance confirmations, 276

Maintenance intervals, 272

Media

operating, 105

Menu

calling up, 90

Mirrors

adjusting, 110

Removing and installing, 159

Mobility services, 272

Motorcycle

care, 242

cleaning, 242

laying up, 247

parking, 141

restoring to use, 248

securing, 144

Multi-Controller, 22

Multifunction display

Status indicators for racing, 148

Multifunction switch

Overview, left side, 22

Overview, right side, 23, 24

N

Navigation

operating, 102

Number-plate carrier

Removing and installing, 163

O

On-board computer, 102

On-board voltage, 39, 40

P

Pairing, 96

Parking, 141

Parking light, 67

Phone

operating, 106

Pit Lane Limiter, 156

adjusting, 156

306 INDEX

Pit-lane speed limiter
Maximum rpm, setting, 155
operating, 156
Pre-Ride-Check, 134
Pure Ride
Overview, 29

R

Race track
Chassis and suspension
settings, 158
Pit-lane speed limiter, 156
Racing start with Launch
Control, 154
Status indicators for
racing, 146
RACE PRO, 152
configuring, 153
Restoring factory setting, 153
RDC
Engineering details, 190
Warning indicators, 47, 48,
49
Rear-wheel stand
installing, 200
Recycling, 271
Refuelling, 143
Fuel grade, 142
Rev. counter, 25
Rev. counter, 93
Riding height
adjusting, 18, 125
Riding mode
adjusting, 70
Control, 23, 24
Engineering details, 185
Riding-mode preselection, 71
Running in, 137

S

Safety instructions
for brakes, 139
for riding, 130
Seats
Lock, 18
Removing and installing, 81
Service, 271
Reporting safety-relevant
defects, 270
Service history, 272
Warning indicators, 59
Service-due indicator, 58
Shift assistant, 138, 191
Engineering details, 191
Gear not trained, 58
Riding, 138
Shift lever
Gearshift-pattern re-
verser, 173
Shift light, 138
adjusting, 78
switching on/off, 77
Shifting gear
Shift light, 138
Spark plugs, 264
Speed Limit Info
Switching on or off, 93
Speedometer, 25
Spring preload
Adjuster, front, 18
Adjuster, rear, 18, 20
adjusting, 115
Starting, 134
Control, 23, 24
Status line, top, 92
adjusting, 91

- steering damper
 - adjusting, 114
 - Steering damper, 18
- Steering lock
 - Locking, 62
- Swinging arm
 - Adjusting swinging arm pivot point, 18, 121

T

- Tail-hump trim panel
 - install, 226
 - remove, 225
- Technical data
 - Anti-theft alarm, 265
 - Battery, 264
 - Brakes, 262
 - Chassis and suspension, 261
 - Clutch, 260
 - Coolant, 259
 - Dimensions, 265
 - Electrical system, 264
 - Engine, 259
 - Engine oil, 259
 - Final drive, 260
 - Frame, 261
 - Fuel, 258
 - Fuses, 264
 - Lighting, 264
 - Spark plugs, 264
 - Transmission, 260
 - Weights, 265
 - Wheels and tyres, 263
- TFT display, 25
 - Control, 22
 - operating, 90, 91
 - Overview, 29, 30
 - Selecting display, 87
- Toolkit
 - Contents, 199
 - Position on the vehicle, 21
- Torques, 254
- Traction control, 183
 - DTC, 183, 184
- Transmission
 - Technical data, 260
- Trim panels
 - Installing side panel, 224
 - Installing tail-hump trim panel, 226
 - Remove the side panel, 223
 - Removing tail-hump trim panel, 225
- Troubleshooting chart, 252
- Turn indicators
 - Control, 22
 - Control, right, 23, 24
 - operating, 66
- Type plate
 - Position on the vehicle, 20
- Tyre pressure monitoring RDC
 - Display, 46
- Tyres
 - Checking tread depth, 210
 - Checking tyre pressure, 210
 - Pressures, 264
 - Running in, 137
 - Table of tyre pressures, 18
 - Technical data, 263

U

- USB charging socket
 - Position on the vehicle, 21

V

- Value
 - Display, 31

308 INDEX

Vehicle Identification Number
Position on the vehicle, 20

W

Warning indicator lights

ABS, 51, 52, 53

Anti-theft alarm, 42

Brake Slide Assist, 56

Bulb faulty, 40

Drop sensor, 50

DTC, 53, 54, 55

DTC Slide Control, 56

DWA, 42

Electrical machine control
unit, 44, 45

Electrical machine tempera-
ture, 42, 43

Emergency call, 51

Engine, 44

Engine electronics, 45

Fuel reserve, 56

Gear not trained, 58

Hill Start Control, 57

Light control failed, 41

Mode of presentation, 31

My vehicle, 99

On-board voltage, 39, 40

RDC, 47, 48, 49

Service, 59

Side stand, 51

Warning light, drive
malfunction, 44

Warning light, drive malfunc-
tion, 44

Warning lights, 25

Overview, 28

Warnings, overview, 33

Weights

Payload table, 18

Technical data, 265

Wheels

Change of size, 211

Checking rims, 211

Install the front wheel, 213

Installing rear wheel, 217

Removing front wheel, 211

Removing rear wheel, 216

Technical data, 263

Windscreen

Adjuster, 20

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.




© 2022 Bayerische Motoren
Werke Aktiengesellschaft
80788 Munich, Germany

Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Original rider's manual, printed in Germany.

Important data for refuelling:

Fuel

Recommended fuel grade	 Premium, unleaded (max. 5 % ethanol, E5) 98 ROZ/RON 93 AKI
Alternative fuel grade	 Premium unleaded (power- and consumption-related restrictions) (max 10 % ethanol, E10)  95 ROZ/RON 90 AKI
Usable fuel capacity	approx. 17 l
Fuel reserve	approx. 4 l

Tyre pressure

Tyre pressure, front	2.5 bar, tyre cold
Tyre pressure, rear	2.9 bar, tyre cold

For further information on all aspects of your vehicle, visit: [bmw-motorrad.com](https://www.bmw-motorrad.com)

