



**BMW
MOTORRAD**



Installation instructions

BMW CONNECTEDRIDE COM P1

MAKE LIFE A RIDE

BEFORE COMMENCING WORK, YOU MUST READ THESE INSTALLATION INSTRUCTIONS THROUGH CAREFULLY AND MAKE SURE YOU UNDERSTAND THEM FULLY.

We congratulate you on your choice of optional accessories from BMW Motorrad that will enable you to customise your motorcycle in accordance with your personal preferences.

Safety is invariably an essential prerequisite for extracting full benefit and enjoyment from new accessories. Some work calls for special tools and possibly a thorough knowledge of motorcycle technology. If you are in doubt consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Since we provide you with a multitude of accessories and optional equipment, we cannot cover all equipment specifications in these installation instructions. Therefore we restrict ourselves to the basic version of the corresponding model. The removal and installation of other possibly installed accessories is described in the corresponding installation instructions. Consult your authorised BMW Motorrad dealer if you no longer have access to the sets of instructions you need.

If you have questions concerning your motorcycle or any of the accessories from our range, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We at BMW Motorrad hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe.

THE SYMBOLS USED TO DRAW ATTENTION TO PRECAUTIONARY STATEMENTS IN THIS MANUAL ARE AS FOLLOWS:
** CAUTION**

Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

** DANGER**

High-risk hazard. Non-avoidance leads to fatal or severe injury.

** NOTICE**

Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.

** WARNING**

Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

** ATTENTION**

Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

** Tightening torque**


Screws, bolts and nuts are tightened in accordance with the applicable DIN/ISO standards. Tightening torques that deviate from the standards are stated. Non-compliance can result in damage to the vehicle or accessories or can endanger the driver.

- Start of the main activity
- ▷ Start of the secondary activity
- Instruction

- ◄ End of the main activity
- ◁ End of the secondary activity
- ◇ End of validity designation CS (construction status), OE (optional extra) or OA (optional accessory)

All rights reserved.

BMW ConnectedRide COM P1

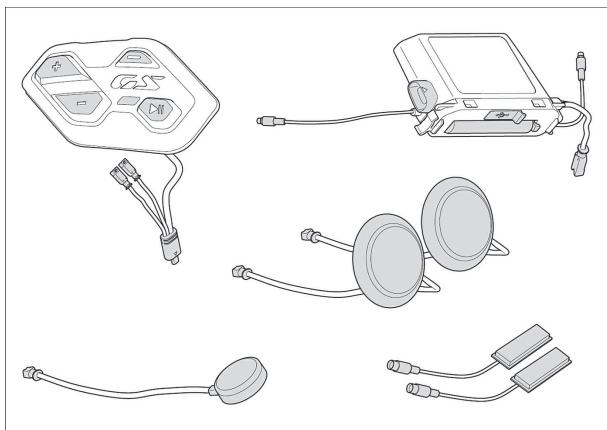

Scope of installation

- Operating panel
- Central unit
- loudspeaker 2×
- Aerial 2×
- microphone
- Mounting set
- Small parts kit

General instructions

CAUTION

Hot engine and/or hot exhaust system

Risk of burn injury

- Allow engine and exhaust system to cool before starting work.

ATTENTION

Vehicle not securely propped

Risk of damage to parts if vehicle topples

- Prop the vehicle securely.

WARNING

Children and pets in the working area

Injury to persons

- Keep children and pets away from the working area.

CAUTION

Wearing jewellery during work

Risk of injury by snagging or electrical short circuit

- Remove all items of personal jewellery (rings, chains, wristwatch, etc.) before starting work.


NOTICE

Once the retrofit kit has been installed by the workshop, these installation instructions must be handed over to the customer.

Make sure that these installation instructions accompany the retrofit kit when it is passed on to a third party.


76 51 013 Wireless communication system for GS Rallye helmet

1

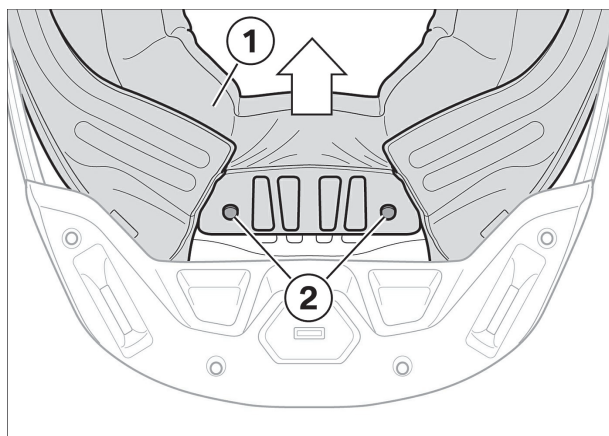


► Removing cheek pad

- Press cheek pad **(1)** forwards to loosen press studs **(2)**.

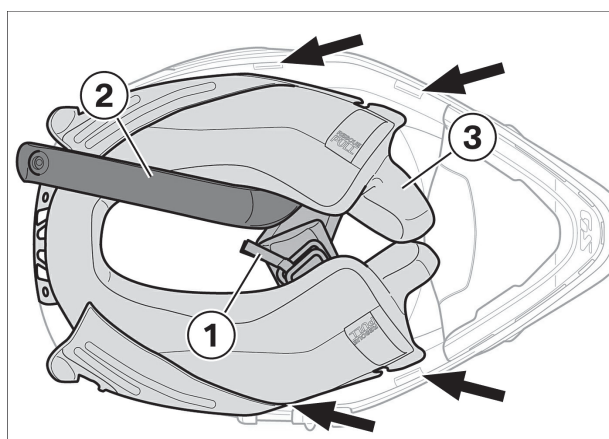


- Loosen cheek pad from stops (**arrows**).
- Pull chinstraps **(1)** and **(2)** out of cheek pad **(3)**.

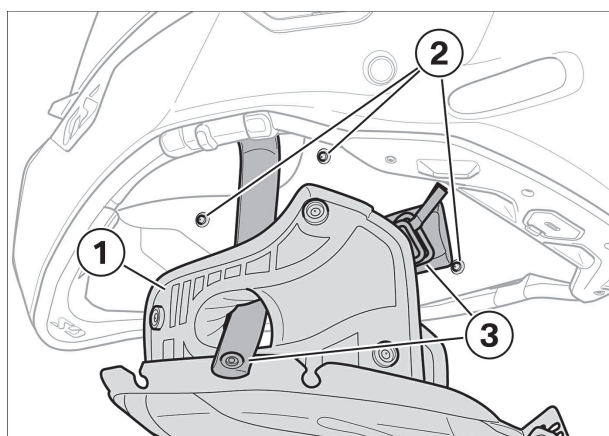


- Loosen cheek pad **(1)** from press studs **(2)**.
- Guide chinstrap **(3)** out of cheek pad **(1)**.

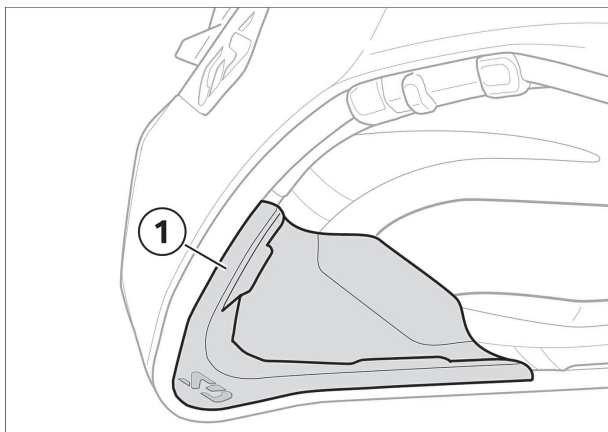


2**► Removing chin spoiler**

- Remove chin spoiler (1).

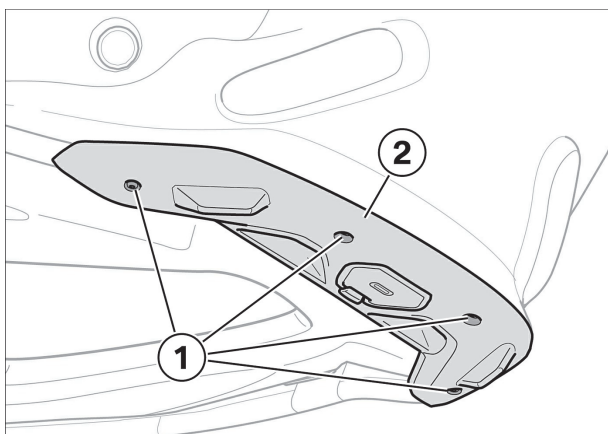3**► Removing cover flap**


- Remove screws (1).
- Remove cover flap (2).

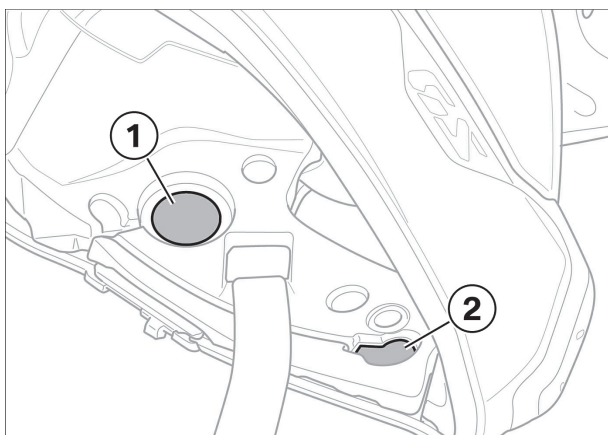4**► Installing hook and loop pads**

- Install hook and loop pad for speaker (1) and microphone (2).

- Install hook and loop pad for right speaker in the same way.


5

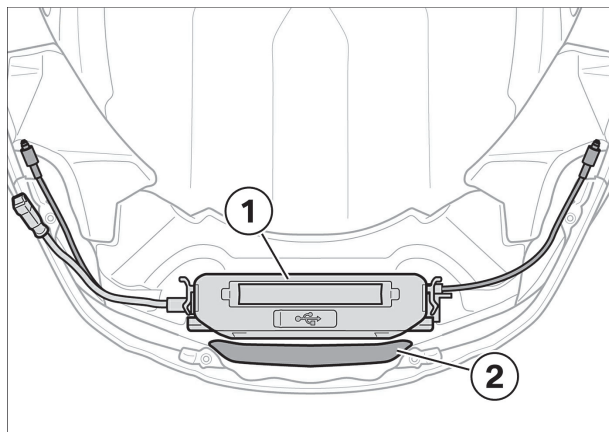

► **Installing central processing unit**

- Install central processing unit (1) with upholstery (2).

6

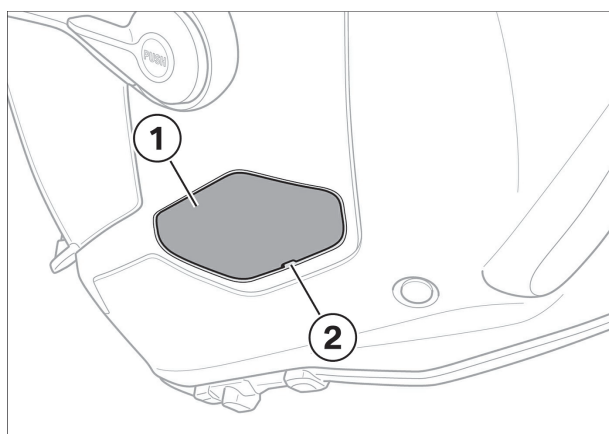


► **Removing protective caps**

- Remove cover cap (1), aligning a suitable tool on recess (2) for this purpose.


- Remove the right cover cap in the same way.

7

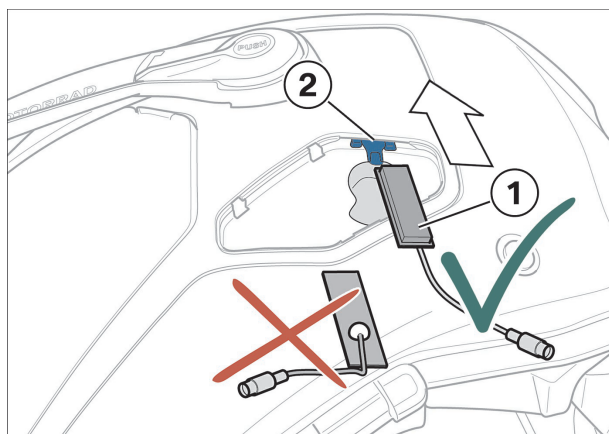

► **Installing aerial**


- Install aerial (1) in aerial duct (2).
- Ensure correct alignment of the aerial.

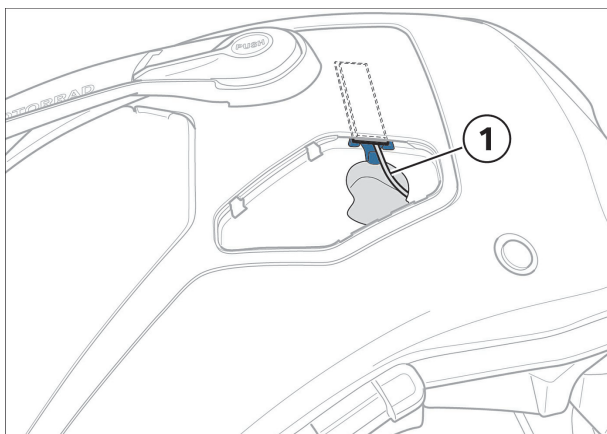

- Thread aerial cable **(1)** into the cable channel.

- Install the right aerial in the same way.

8

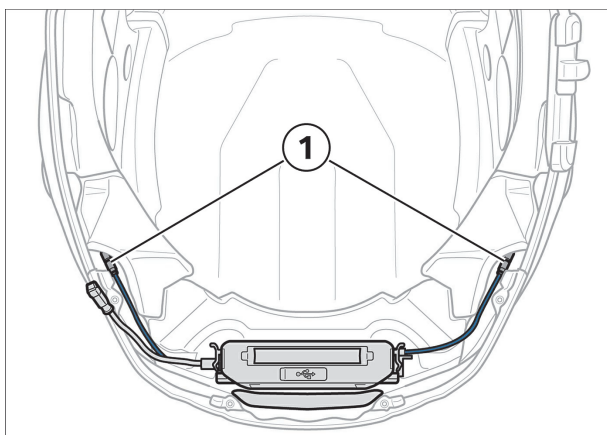

► Connecting aerials


- Connect and thread in aerial connector **(1)**.



NOTICE

Make sure that the aerial lines are not kinked


9

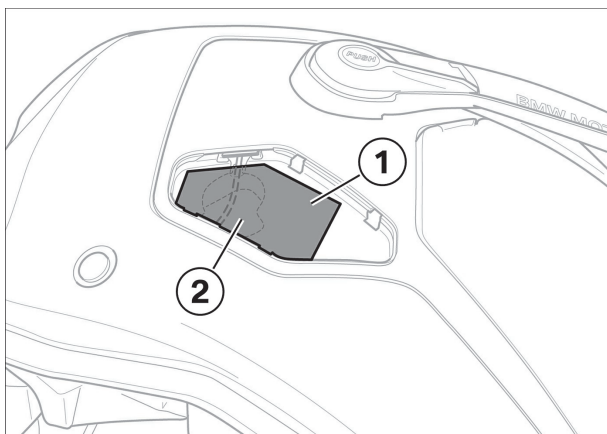

► Installing adhesive tape

- Apply adhesive tape **(1)** over opening **(2)**.

10

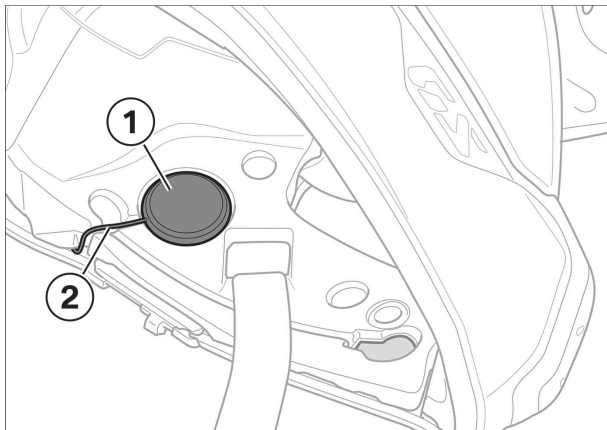


► Installing speaker

- Install speaker (1) and route cable (2).

- Install the right speaker in the same way.


11

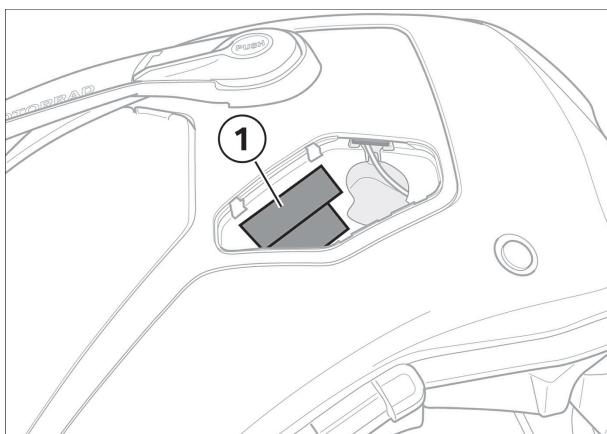

► Installing adhesive tape


- Apply adhesive tape (1).

12

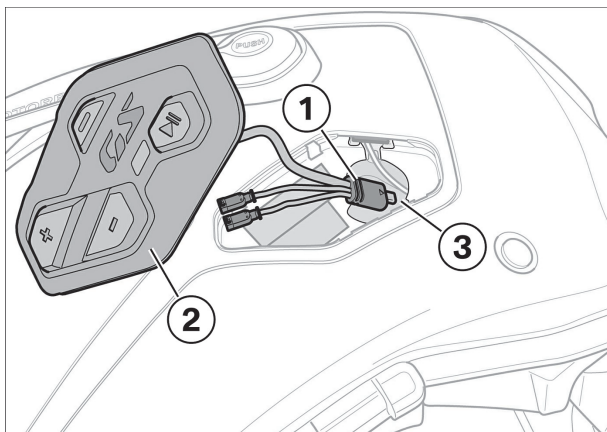


► Installing operating unit

- Thread cable (1) of operating unit (2) through opening (3).

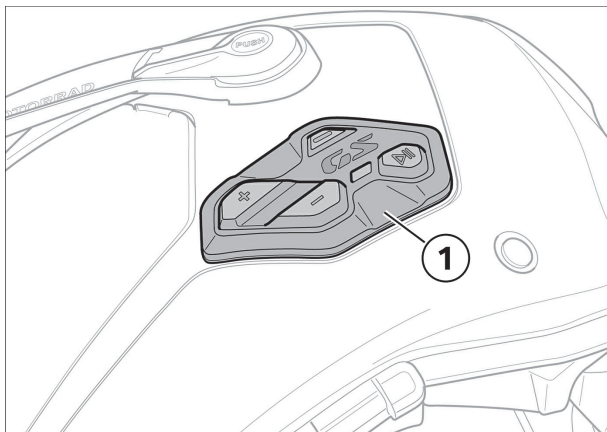

- Install operating unit **(1)**.


13

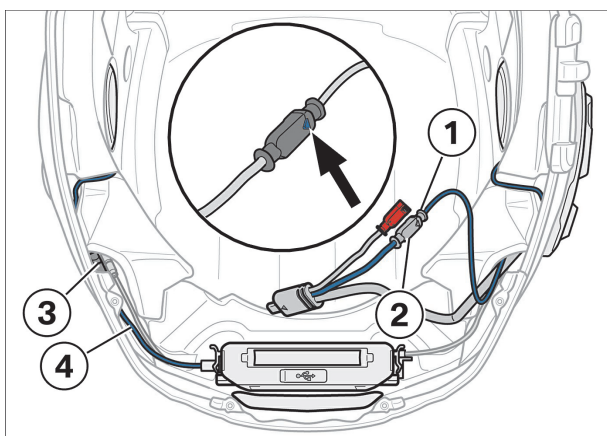

► Connecting speakers

- Connect speaker connector **(1)** to black connector **(2)**.
- Connect speaker connector **(3)** to connector **(4)**.
- Ensure correct alignment of the connectors **(arrow)**.


14

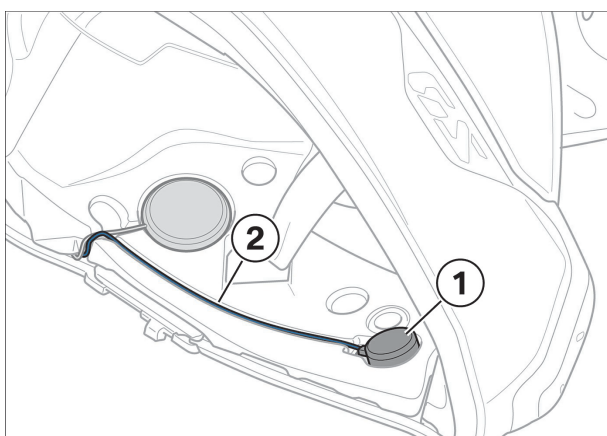

► Installing microphone


- Install microphone **(1)** and route cable **(2)**.

15

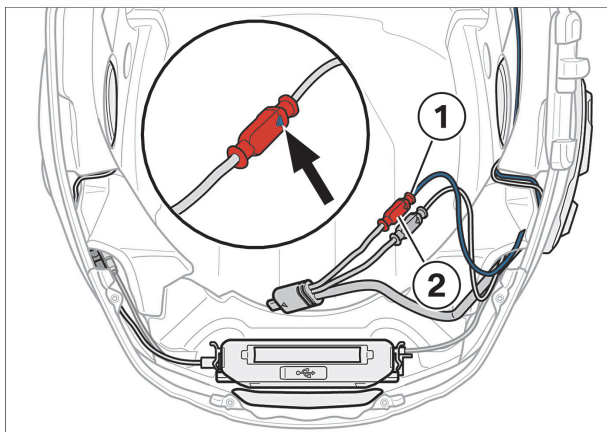
► **Connecting microphone**

- Connect red connectors **(1)** and **(2)** for microphone.
- Ensure correct alignment of the connectors **(arrow)**.


16

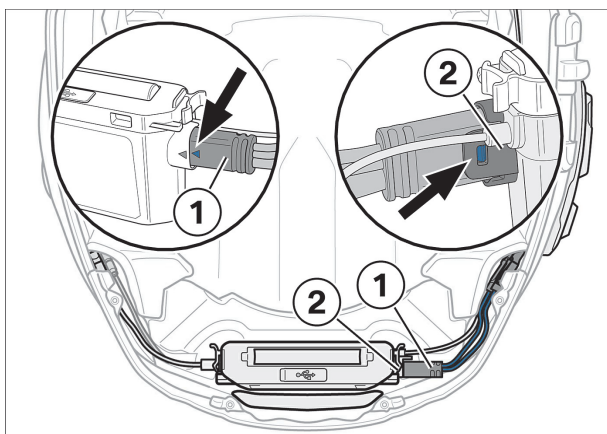► **Connecting operating unit**


- Connect operating unit cable **(1)** to central processing unit **(2)**.
- Ensure correct alignment and locking of the connector **(arrows)**.

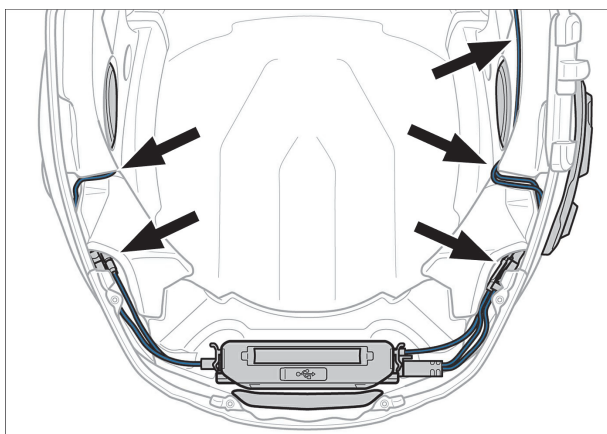


- Route cable in recess **(arrows)**.

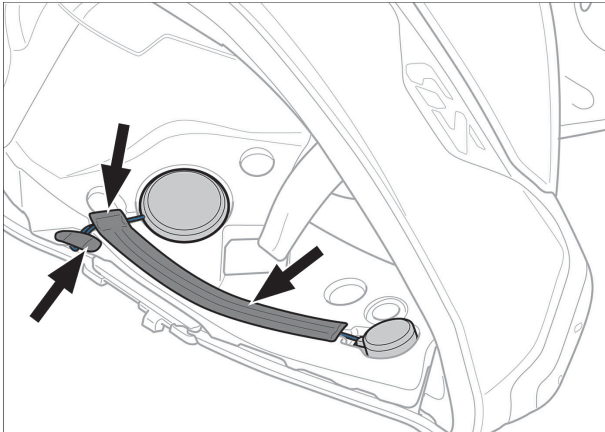17**► Securing cable**

- Secure the left and right microphone and speaker cables with adhesive tape.

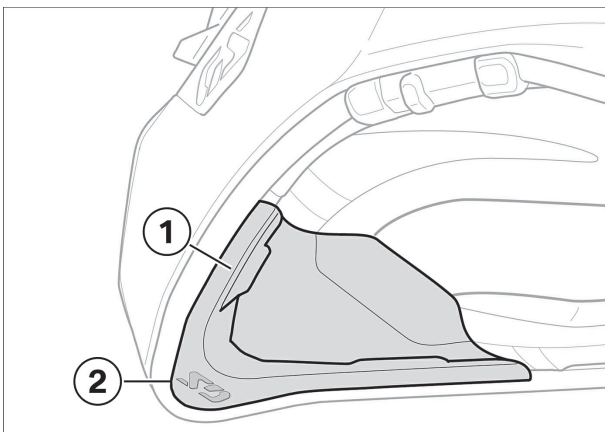18**► Installing chin spoiler**

- Align chin spoiler (1) with helmet shell (2) and press on.

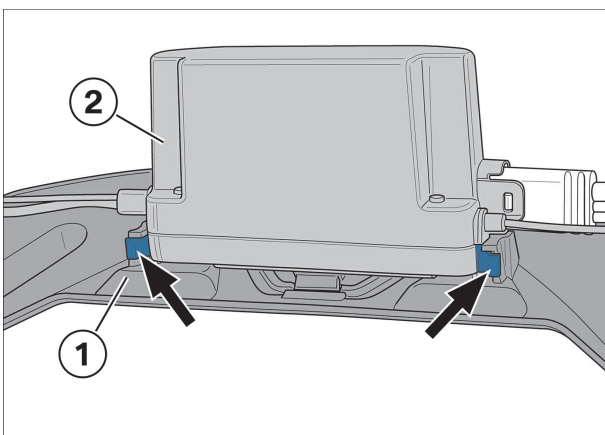19**► Installing central processing unit**

- Push cover flap (1) onto central processing unit (2).
- » The cover flap engages in the guide lugs (arrows).


20

► Function test of BMW Motorrad communication system

- Check the Bluetooth functionality by pairing the helmet to a second helmet or a mobile phone as described in the operating instructions of the BMW Motorrad communication system.
- Connect the charger and fully charge the battery.



21

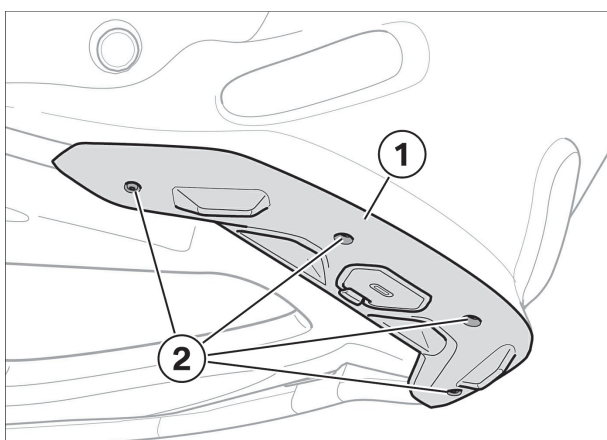


► Installing cover flap

- Align cover flap (1).
- Install screws (2).



22

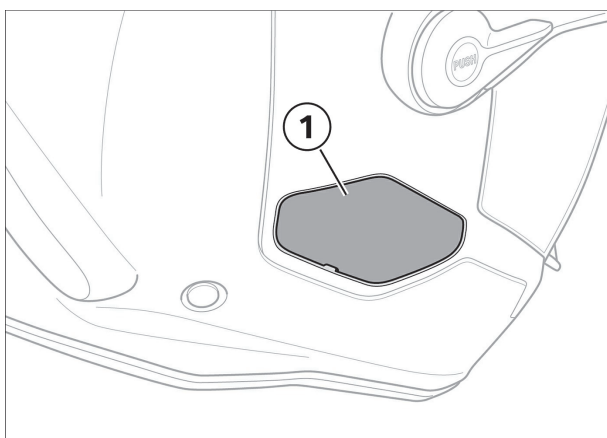


► Installing right cover cap

- Install cover cap (1).




23

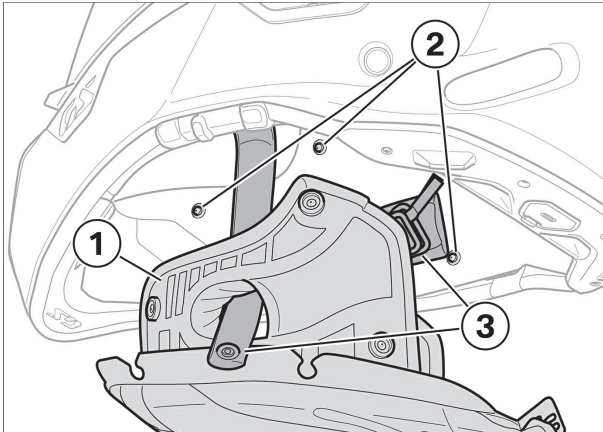


► Installing cheek pad

- Thread chinstrap (3) into cheek pad (1).
- Secure cheek pad (1) in press studs (2).

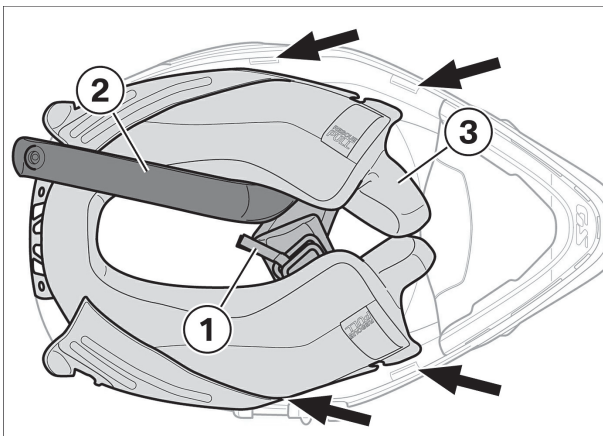

- Thread chinstraps (1) and (2) into cheek pad (3).
- Secure cheek pad in stops (arrows).

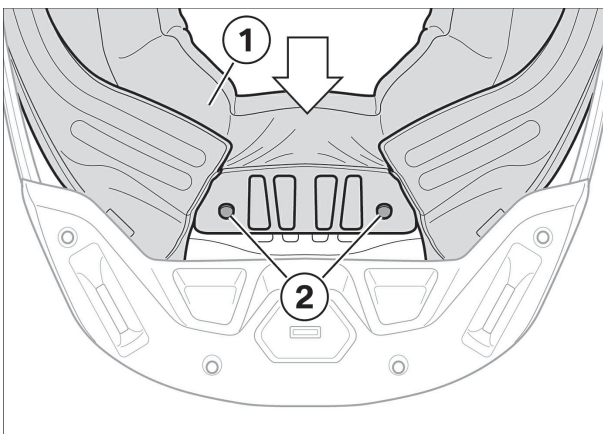

- Press cheek pad (1) backwards to secure press studs (2)