



**BMW
MOTORRAD**



Installation instructions

BMW CONNECTEDRIDE COM P1

MAKE LIFE A RIDE

BEFORE COMMENCING WORK, YOU MUST READ THESE INSTALLATION INSTRUCTIONS THROUGH CAREFULLY AND MAKE SURE YOU UNDERSTAND THEM FULLY.

We congratulate you on your choice of optional accessories from BMW Motorrad that will enable you to customise your motorcycle in accordance with your personal preferences.

Safety is invariably an essential prerequisite for extracting full benefit and enjoyment from new accessories. Some work calls for special tools and possibly a thorough knowledge of motorcycle technology. If you are in doubt consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Since we provide you with a multitude of accessories and optional equipment, we cannot cover all equipment specifications in these installation instructions. Therefore we restrict ourselves to the basic version of the corresponding model. The removal and installation of other possibly installed accessories is described in the corresponding installation instructions. Consult your authorised BMW Motorrad dealer if you no longer have access to the sets of instructions you need.

If you have questions concerning your motorcycle or any of the accessories from our range, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We at BMW Motorrad hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe.

THE SYMBOLS USED TO DRAW ATTENTION TO PRECAUTIONARY STATEMENTS IN THIS MANUAL ARE AS FOLLOWS:

** CAUTION**

Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

** DANGER**

High-risk hazard. Non-avoidance leads to fatal or severe injury.

** NOTICE**

Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.

** WARNING**

Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

** ATTENTION**

Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

** Tightening torque**


Screws, bolts and nuts are tightened in accordance with the applicable DIN/ISO standards. Tightening torques that deviate from the standards are stated. Non-compliance can result in damage to the vehicle or accessories or can endanger the driver.

- Start of the main activity
- ▷ Start of the secondary activity
- Instruction

- ◄ End of the main activity
- ◁ End of the secondary activity
- ◇ End of validity designation CS (construction status), OE (optional extra) or OA (optional accessory)

All rights reserved.

BMW ConnectedRide COM P1

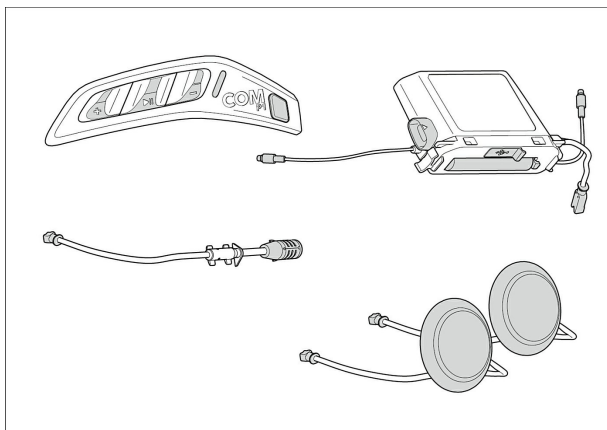

Scope of installation

Operating panel
Central unit
loudspeaker
microphone
Mounting set
Small parts kit

2×

General instructions

⚠ CAUTION

Hot engine and/or hot exhaust system

Risk of burn injury

- Allow engine and exhaust system to cool before starting work.

⚠ ATTENTION

Vehicle not securely propped

Risk of damage to parts if vehicle topples

- Prop the vehicle securely.

⚠ WARNING

Children and pets in the working area

Injury to persons

- Keep children and pets away from the working area.

⚠ CAUTION

Wearing jewellery during work


Risk of injury by snagging or electrical short circuit

- Remove all items of personal jewellery (rings, chains, wristwatch, etc.) before starting work.


⚠ NOTICE

Once the retrofit kit has been installed by the workshop, these installation instructions must be handed over to the customer.


Make sure that these installation instructions accompany the retrofit kit when it is passed on to a third party.

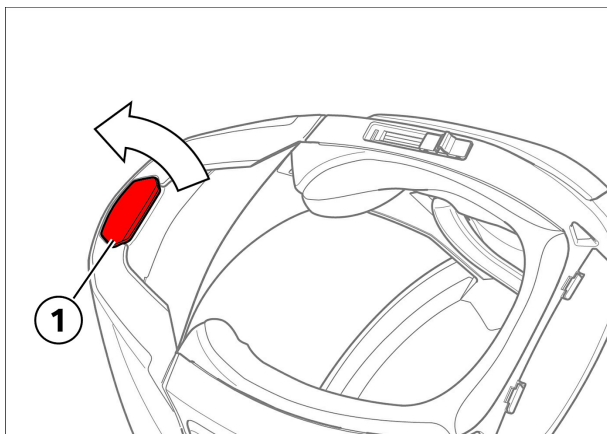76 51 014 Installing wireless communication system for System 8 helmet**1****► Opening chin guard**


- Push key **(1)** to the front.

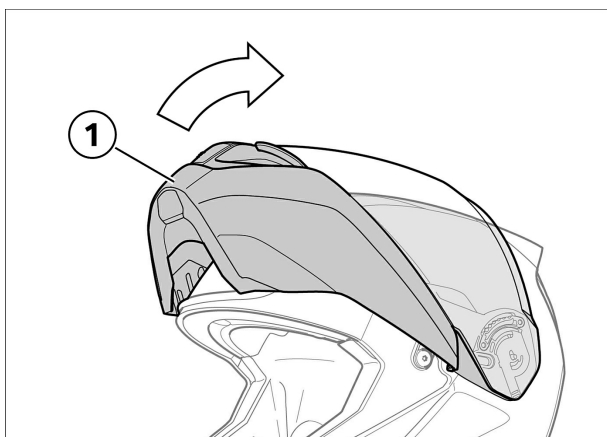

- Swivel chin guard **(1)** up until it audibly engages.

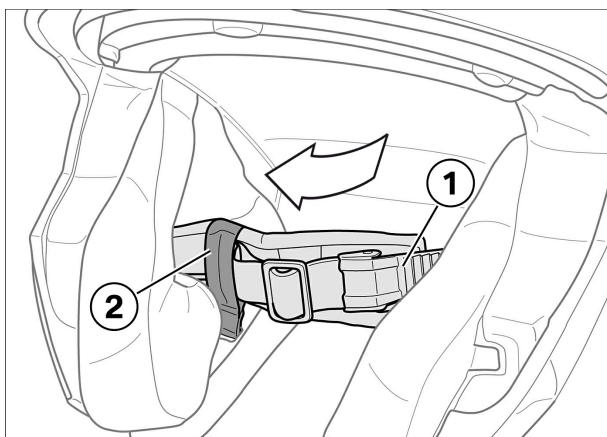**2****► Removing cheek pad**


- Pull chinstrap **(1)** out of fastening lug **(2)**.

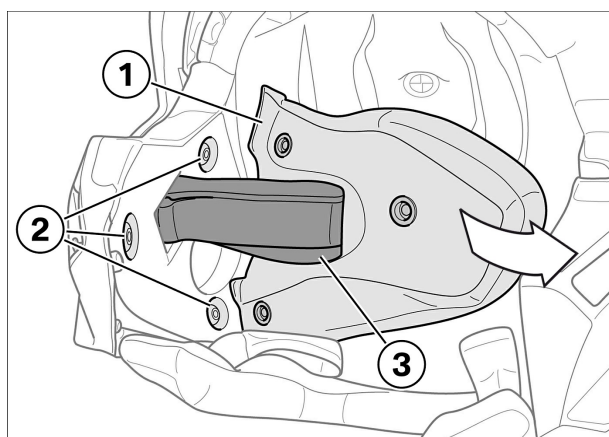

- Release cheek pad **(1)** from push-buttons **(2)**.
- Guide chinstrap **(3)** out of cheek pad **(1)**.


- Remove left cheek pad in the same way.

3

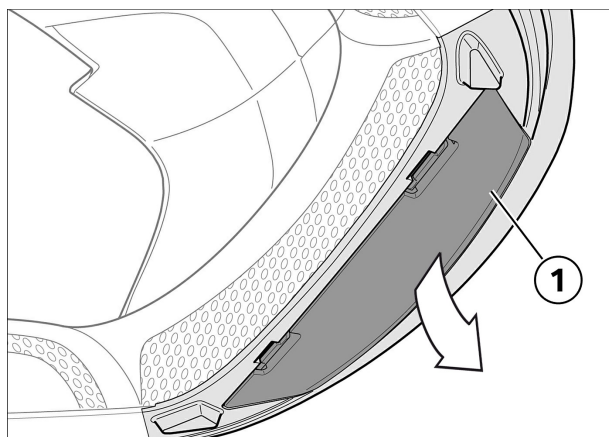


► Removing cover flap


- Open cover **(1)**.

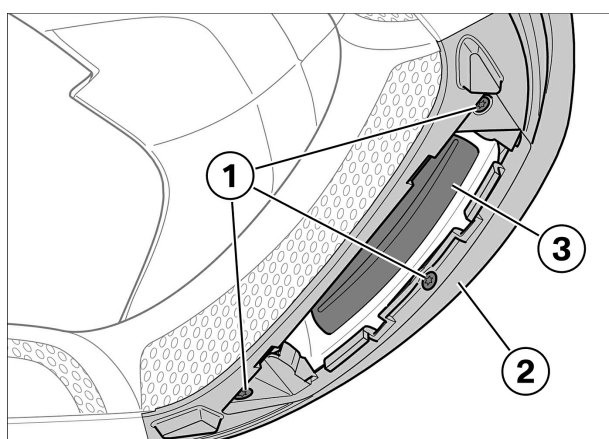


- Remove screws **(1)**.
- Remove cover **(2)**.
- Remove filling **(3)**.

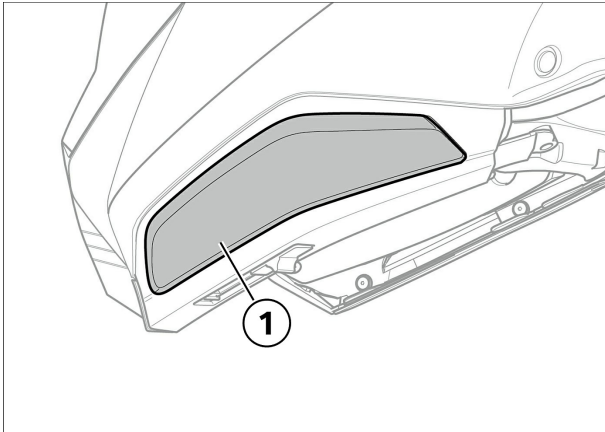4**► Removing left cover cap**

- Remove cover cap (1).

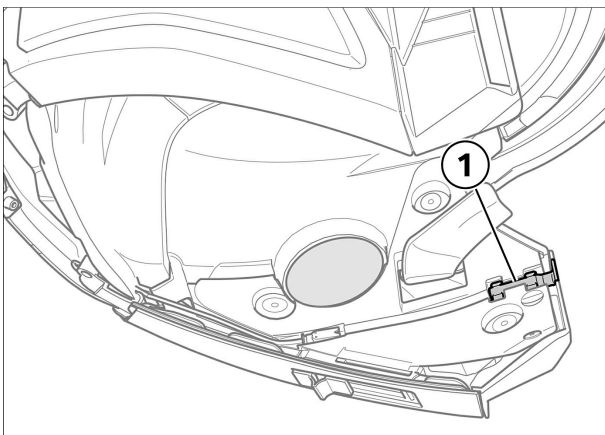5**► Removing microphone cover**


- Remove cover for microphone (1).

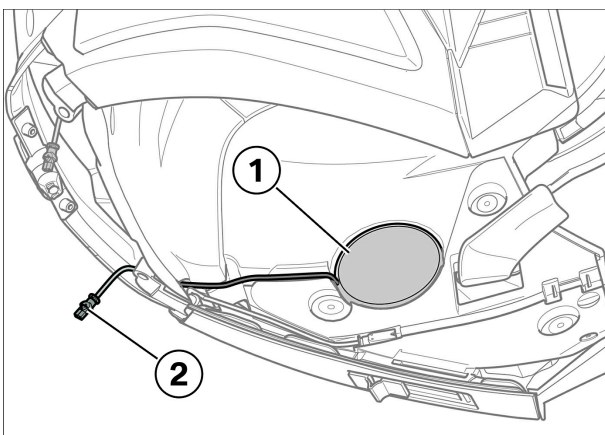6**► Installing speaker**

- Install speaker (1) and route cable (2).

- Install the right speaker in the same way.

7

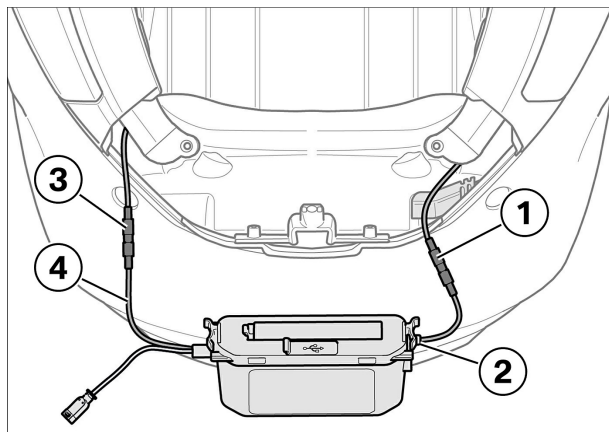

► Connecting aural


- Connect left aural connector (1) to connector (2).
- Connect right aural connector (3) to connector (4).



NOTICE

Ensure that the aural lines are not kinked.


8

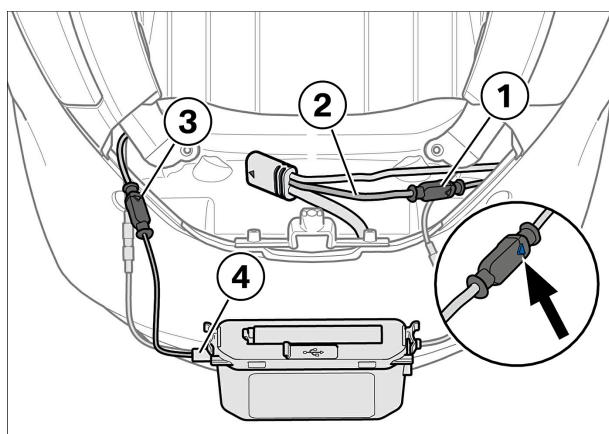

► Connecting speakers

- Connect speaker connector (1) to black connector (2).
- Connect speaker connector (3) to connector (4).
- Ensure correct alignment of the connectors (arrow).

9

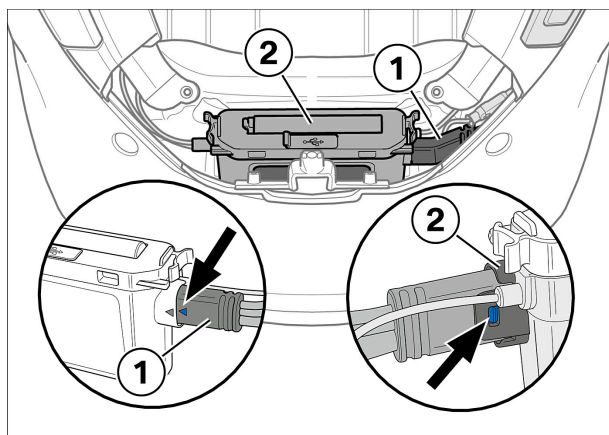

► Connecting operating unit

- Connect operating unit cable (1) to central processing unit (2).

Ensure correct alignment and locking of the connector (arrows).


- Route cable in helmet.



NOTICE

Ensure that the aural lines are not kinked.


10

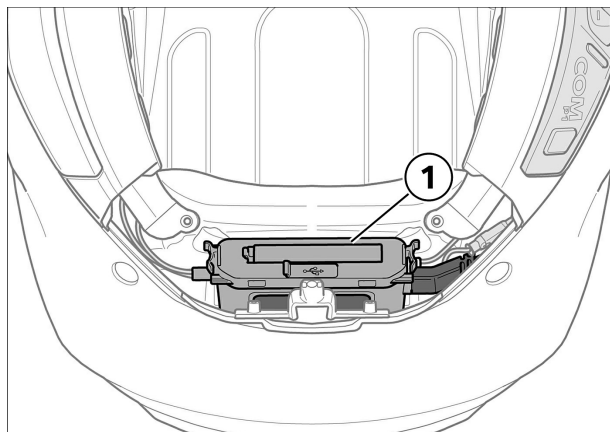

► **Installing central processing unit**

- Install central processing unit **(1)**.
Ensure that cables are not kinked.

11

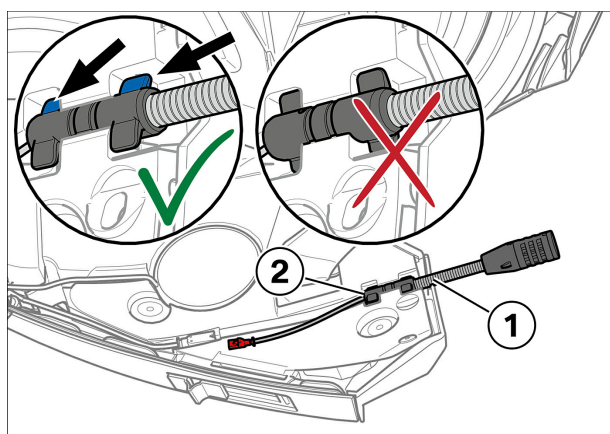

► **Installing microphone**


- Install microphone **(1)** and engage with holder **(2)**.



NOTICE

Inserting the upper retaining lugs turned towards the outer shell and then engaging them in the guide


12

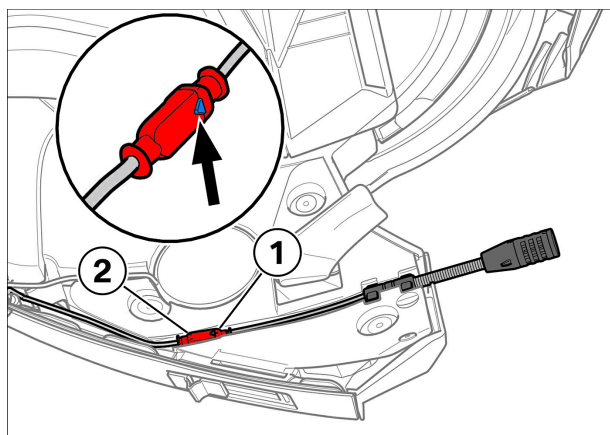

► **Connecting microphone**

- Connect red connectors **(1)** and **(2)** for microphone.
Ensure correct alignment of the connectors **(arrow)**.


13

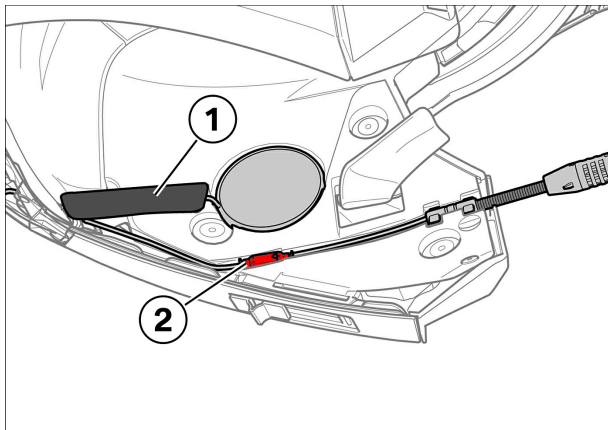

► Securing cable


- Fasten cables for left and right speakers using adhesive tape (1).
- Secure connector (2) in helmet.

14

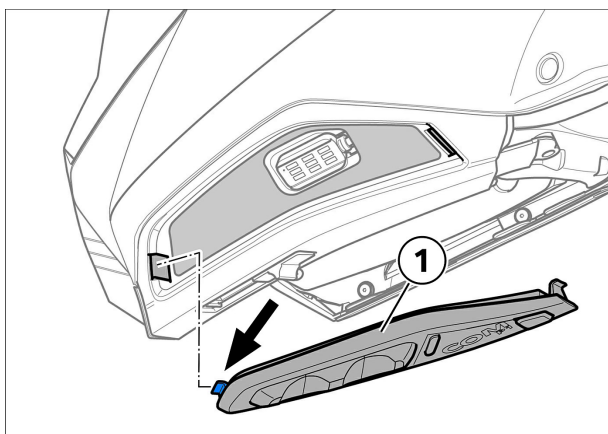

► Installing operating unit

- Peel off the backing paper.
- Hook in operating unit (1) at front (arrow).

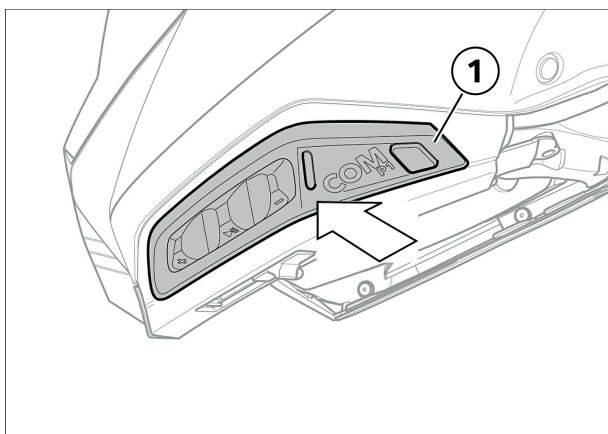

- Install operating unit (1).
 - » The rear hook snaps into place.
- Press operating unit (1) firmly in place in the centre.

15

► Function test of BMW Motorrad communication system



- Check the Bluetooth functionality by pairing the helmet to a second helmet or a mobile phone as described in the operating instructions of the BMW Motorrad communication system.
- Connect the charger and fully charge the battery.



16

► Installing cover flap


- Position cover (1).
- Install screws (2) hand-tight.

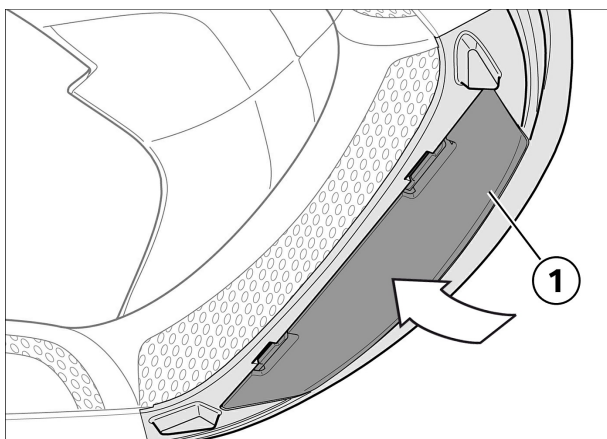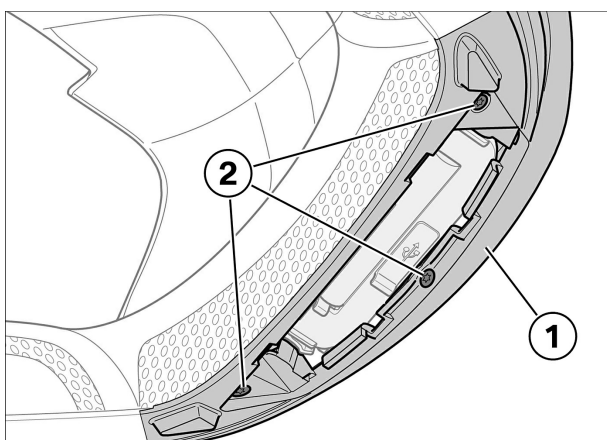


- Close cover (1).



17

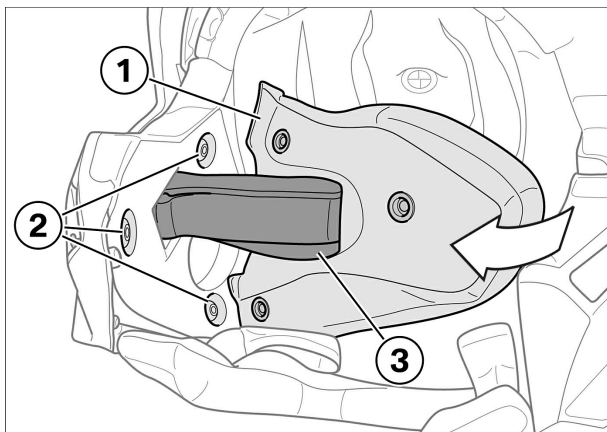► **Installing cheek pad**


- Thread chinstrap (3) into cheek pad (1).
- Secure cheek pad (1) in press studs (2).

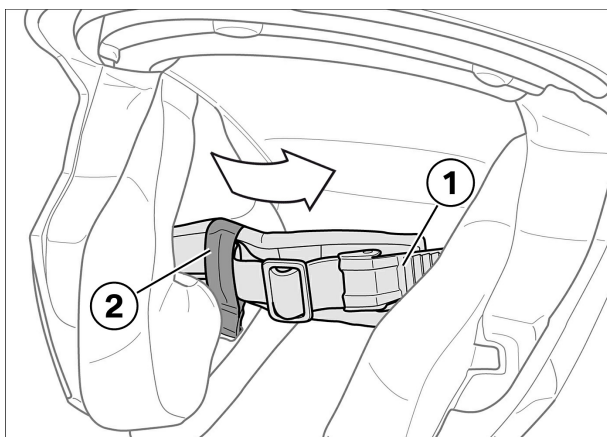

- Thread chinstrap (1) through fastening tab (2).

- Install left cheek pad in the same way.

18

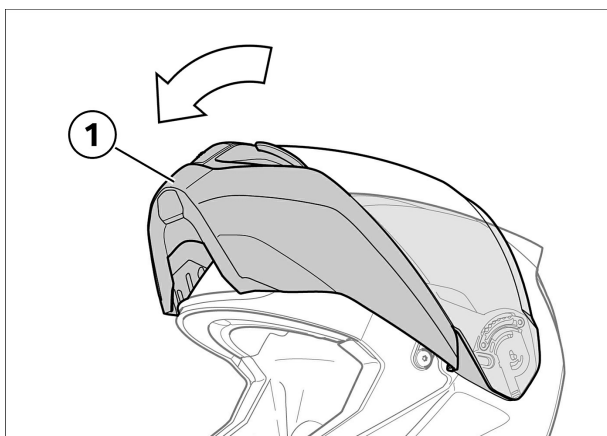► **Closing the chin guard**

- Swivel chin guard down with visor (1).
- The chin guard engages audibly.