

BMW Motorrad

Installation instructions

Handlebar weights, chrome-plated



Before commencing work, you must read these installation instructions through carefully and make sure you understand them fully.

We congratulate you on your choice of optional accessories from BMW Motorrad that will enable you to customise your motorcycle in accordance with your personal preferences.

Safety is invariably an essential prerequisite for extracting full benefit and enjoyment from new accessories. Some work calls for special tools and possibly a thorough knowledge of motorcycle technology. If you are in doubt consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Since we provide you with a multitude of accessories and optional equipment, we cannot cover all equipment specifications in these installation instructions. Therefore we restrict ourselves to the basic version of the corresponding model. The removal and installation of other possibly installed accessories is described in the corresponding installation instructions. Consult your authorised BMW Motorrad dealer if you no longer have access to the sets of instructions you need.

If you have questions concerning your motorcycle or any of the accessories from our range, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We at BMW Motorrad hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe.

The symbols used to draw attention to precautionary statements in this manual are as follows:



CAUTION

Low-risk hazard. Non-avoidance can lead to slight or moderate injury.



WARNING

Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.



DANGER

High-risk hazard. Non-avoidance leads to fatal or severe injury.



ATTENTION

Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.



NOTICE

Specific instructions on how to operate, control, adjust or look after items of equipment on the motorcycle.



Tightening torque

Screws, bolts and nuts are tightened in accordance with the applicable DIN/ISO standards. Tightening torques that deviate from the standards are stated. Non-compliance can result in damage to the vehicle or accessories or can endanger the driver.

► Start of the main activity

▷ Start of the secondary activity

• Instruction

◄ End of the main activity


◁ End of the secondary activity

◇ End of validity designation CS (construction status), OE (optional extra) or OA (optional accessory)

Handlebar weights, chrome-plated

Requisite tools

- Set of Torx bits
- Torque wrench

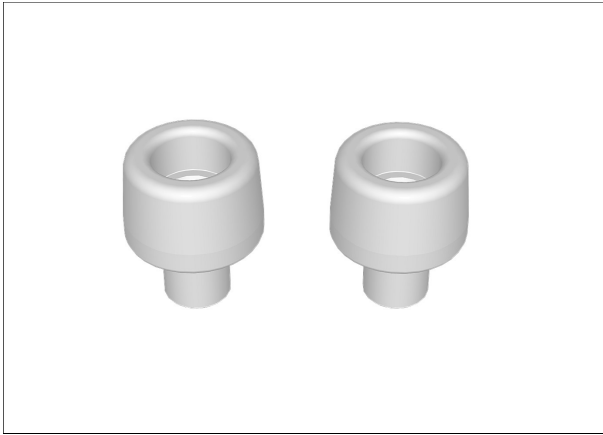

Delivery specification

- Handlebar weight 2

Also required:

- Bolt M12 x 1.5 x 60 2

General instructions

ATTENTION

Vehicle not securely propped

Risk of damage to parts if vehicle topples

- Prop the vehicle securely.

WARNING

Children and pets in the working area

Injury to persons

- Keep children and pets away from the working area.

CAUTION

Wearing jewellery during work

Risk of injury by snagging or electrical short circuit

- Remove all items of personal jewellery (rings, chains, wristwatch, etc.) before starting work.

NOTICE


Once the retrofit kit has been installed by the workshop, these installation instructions must be handed over to the customer.

Make sure that these installation instructions accompany the retrofit kit when it is passed on to a third party.

77 22 005 Installing chrome plated handlebar weights

– with handlebar weight, chrome-plated^{OA}

1

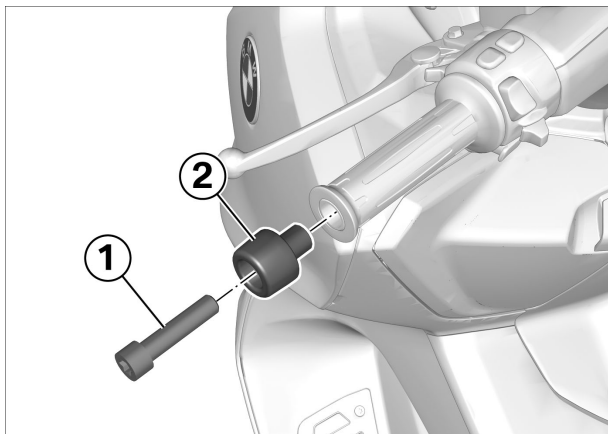


► Remove the left handlebar weight

- Remove screw (1) and remove handlebar weight (2).



2

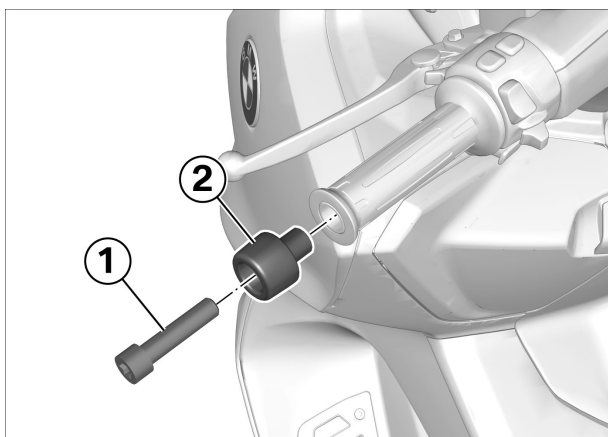

► Installing chrome-plated left handlebar weight

- Clean the threads.
- Install handlebar weight (2) and screw (1).



Tightening torques


Handlebar weight to handlebar

M12 x 1.5 x 60, Replace screw
Thread-locking compound (micro-encapsulated)

66 Nm



3

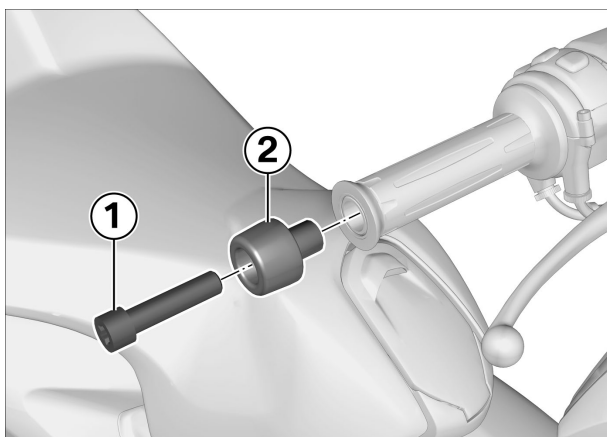


► Remove the right handlebar weight

- Remove screw **(1)** and remove handlebar weight **(2)**.



4

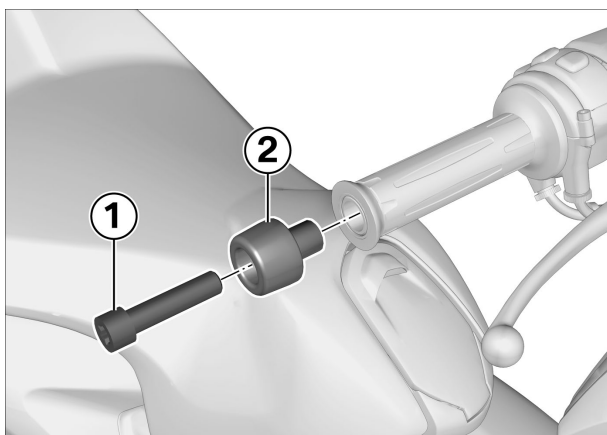

► Installing chrome-plated right handlebar weight

- Clean the threads.
- Hold handlebar weight **(2)** in position and install screw **(1)**.

Tightening torques		
Handlebar weight to handlebar		
M12 x 1.5 x 60, Replace screw	66 Nm	
Thread-locking compound (micro-encapsulated)		



5

► Final check of work performed

NOTICE

After every tyre change, always remind the customer that the ASC has to be calibrated in accordance with the instructions in the rider's manual.

- Check the following:
 - The work as performed achieved the intended purpose.
 - All reservoirs and containers have been filled and all fluids and lubricants are at their correct levels.
 - All threaded fasteners released beforehand have been correctly retightened.
 - The fuel system is free of leaks.
 - The lights and signalling equipment are fully operational and the vehicle is roadworthy.

- The brake pads of the front and rear brakes are bedded against the brake discs.

▷ **Function test, engine start suppression**

Check

- Switch on the ignition.
- Set kill switch to operating position (run).
- Extend the side stand.
- Press the starter button.
- » Starter does **not** operate.
- Retract the side stand.
- Press the starter button.
- » Starter does **not** operate.
- With the brakes applied, press the starter button.
- » Starter operates.
- Open the **rear** stowage compartment.
- With the brakes applied, press the starter button.
- » Starter does **not** operate.

Result

Not all test steps completed successfully.

Measure

- Check the appropriate parts with the BMW Motorrad diagnostic system.◇

