



**BMW
MOTORRAD**

RIDER'S MANUAL (US MODEL)

R 1250 GS Adventure



MAKE LIFE A RIDE

Vehicle data

Model

Vehicle identification number

Color number

First registration

License plate

Retailer data

Contact in Service

Ms./Mr.

Phone number

Retailer's address/Phone (company stamp)

YOUR BMW.

We are pleased that you have chosen a BMW Motorrad vehicle and welcome you to the family of BMW riders. Familiarize yourself with your new vehicle so that you can ride safely and confidently in all traffic situations.

About these operating instructions

Read this rider's manual before starting your new BMW. It contains important notes about operating the vehicle that will enable you to make full use of the technical assets of your BMW.

You will also obtain preventive maintenance and care instructions, which are beneficial to operating and road safety and help retain the value of your vehicle as much as possible.

If you should decide to sell your BMW one day, please remember to hand over this rider's manual as well. They are an important part of your vehicle.

We wish you many miles of safe and enjoyable riding with your BMW

BMW Motorrad.

01 GENERAL INSTRUCTIONS	2	03 DISPLAYS	26
Quick & easy reference	4	Indicator and warning lights	28
Abbreviations and symbols	4	Menu view	29
Equipment	5	Pure Ride view	30
Technical data	5	My Vehicle view	33
Timeliness of the status of this manual	6	Indicator lights	35
Additional sources of information	6	<hr/>	
Certificates and operating permits	6	04 INSTRUMENT CLUSTER	64
Data memory	6	Warnings	66
Intelligent assist system	11	Operating elements	66
Short-range radio technology	14	My Vehicle Operation	67
Connectivity functions	14	Settings	68
<hr/>		Bluetooth®	70
02 OVERVIEWS	16	Operating focus	71
Overall view, left side	18	Navigation	73
Overall view, right side	19	Media	73
Underneath the seat	20	Telephone	75
Multifunction switch, left	21	Displaying software version	76
Multifunction switch, right	22	License information	77
Multifunction switch, right	23	<hr/>	
Instrument cluster	24	05 OPERATION	78
		Ignition switch/steering lock	80
		Ignition with Keyless Ride	82
		Emergency-off switch	86
		Intelligent emergency call	87
		Lighting	89
		Dynamic Traction Control (DTC)	92

Electronic chassis and suspension adjustment (D-ESA)	93	Brakes	141
Riding mode	96	Parking the motorcycle	143
Pro riding mode	99	Refueling	144
Cruise control	100	Fastening motorcycle in place for transportation	150
Hill Start Control (HSC)	102		
Anti-theft alarm system (DWA)	105	08 TECHNOLOGY IN DETAIL	152
Tire Pressure Monitor (TPM)	108	General notes	154
Heating	108	Antilock braking system (ABS)	154
Storage compartment	111	Dynamic Traction Control (DTC)	157
06 SETTING	112	Dynamic engine brake control (MSR)	159
Mirrors	114	Dynamic ESA	160
Headlights	115	Riding mode	160
Windshield	116	Dynamic Brake Control	165
Clutch	117	Tire Pressure Monitor (RDC)	166
Brakes	118	Gear Shift Assistant	167
Shifting	120	Hill Start Control	169
Footrests	121	ShiftCam	170
Handlebars	122	Adaptive headlight	171
Seats	123		
Rallye seat	126	09 MAINTENANCE	172
Spring preload	127	General notes	174
Damping	128	Onboard tool set	175
07 RIDING	130	Front wheel stand	175
Safety instructions	132	Engine oil	176
Regular check	135	Brake system	178
Starting	135	Clutch	182
Breaking in	138		
Off-road use	139		
Shifting	140		

Coolant	182	Engine	239
Tires	184	Clutch	240
Rims	185	Transmission	240
Wheels	185	Rear-wheel drive	240
Air filter	192	Frame	240
Light sources	194	Running gear	240
Jump-starting	197	Brakes	241
Battery	199	Wheels and tires	242
Fuses	203	Electrical system	242
Diagnostic connector	205	Dimensions	244
		Weights	246
		Performance data	246
10 ACCESSORIES	208		
General notes	210	13 SERVICE	248
Sockets	210	Reporting safety defects	250
USB charging socket	211	BMW Motorrad Service	251
Cases	212	BMW Motorrad service history	251
Topcase	214	BMW Motorrad mobility services	252
Navigation system	215	Maintenance work	252
		Maintenance schedule	254
11 CARE	222	BMW Motorrad break-in service	256
Care products	224	Maintenance confirmations	257
Washing the vehicle	224	Service confirmations	269
Cleaning sensitive vehicle parts	225		
Care of paintwork	226		
Paint preservation	227		
Store motorcycle	227		
Putting the motorcycle into operation	227		
12 TECHNICAL DATA	230		
Troubleshooting chart	232		
Threaded connections	235		
Fuel	238		
Engine oil	238		

APPENDIX 272**Radio equipment
electronic immo-
biliser** 273**Keyless Ride Key** 274**Keyless Ride ECU** 275**Certification****Tire Pressure Control** 275**Radio equipment TFT
instrument cluster** 276

INDEX 278

GENERAL INSTRUCTIONS

01


QUICK & EASY REFERENCE	4
ABBREVIATIONS AND SYMBOLS	4
EQUIPMENT	5
TECHNICAL DATA	5
TIMELINESS OF THE STATUS OF THIS MANUAL	6
ADDITIONAL SOURCES OF INFORMATION	6
CERTIFICATES AND OPERATING PERMITS	6
DATA MEMORY	6
INTELLIGENT ASSIST SYSTEM	11
SHORT-RANGE RADIO TECHNOLOGY	14
CONNECTIVITY FUNCTIONS	14


4 GENERAL INSTRUCTIONS


QUICK & EASY REFERENCE


This rider's manual has been designed to provide quick and efficient orientation. The quickest way for you to find information on specific topics is to consult the comprehensive index at the end of the rider's manual. If you would like to start with a quick overview of your vehicle, this information has been provided in chapter 2. All preventive maintenance and repair procedures carried out on your motorcycle will be documented in the chapter "Service". Documentation of the maintenance work performed is a prerequisite for generous treatment of claims.


ABBREVIATIONS AND SYMBOLS




 **CAUTION** Hazard with low risk. Failure to avoid this hazard can result in minor or moderate injury.

 **WARNING** Hazard with moderate risk. Failure to avoid this hazard can result in death or serious injury.

 **DANGER** Hazard with high risk. Failure to avoid this hazard results in death or serious injury.

 **ATTENTION** Special instructions and precautionary measures. Non-compliance can cause damage to the vehicle or accessories and warranty claims may be denied as a result.

 Special information on operating and inspecting your motorcycle as well as maintenance and adjustment procedures.

- Instruction.
- » Result of a repair procedure.
-  Reference to a page with more detailed information.
- < Indicates the end of accessory or equipment-dependent information.
-  Tightening torque.
-  Technical data.
- NV National-market version.

OE	Optional equipment. BMW Motorrad optional equipment is already completely installed during motorcycle production.
OA	Optional accessories. BMW Motorrad optional accessories can be purchased and retrofitted at your authorized BMW Motorrad dealer.
ABS	Anti-Lock Brake System.
D-ESA	Electronic chassis and suspension adjustment.
DTC	Dynamic Traction Control.
DWA	Anti-theft alarm.
EWS	Electronic immobilizer.
MSR	Engine drag torque control.
TPC	Tire Pressure Control (TPC).

EQUIPMENT

When you ordered your BMW Motorrad, you chose various custom equipment items. This rider's manual describes optional equipment (OE) and selected optional accessories (OA) offered by BMW. This explains why the manual may also contain descriptions of equipment which you have not ordered. Please note, too, that your motorcycle might not be exactly as illustrated in this manual on account of country-specific differences.

If your motorcycle features equipment that is not described here, you can find these features described in a separate manual.

TECHNICAL DATA

All dimensions, weights and performance data contained in this rider's manual refer to the German Institute for Standardization i.e. DIN (Deutsches Institut für Normung e. V.) and comply with their tolerance specifications.

The technical data and specifications in this rider's manual serve as points of reference. The vehicle-specific data may

6 GENERAL INSTRUCTIONS

vary, for instance due to the selected optional equipment, national-market version or country-specific measuring procedures. Detailed values can be obtained from the registration documents or requested from your authorized BMW Motorrad dealer or other qualified service partner or repair shop. The information on the vehicle documents always takes precedence over the information in this rider's manual.

TIMELINESS OF THE STATUS OF THIS MANUAL

The high safety and quality level of BMW motorcycles are ensured by consistent, ongoing development efforts embracing their design, equipment and accessories. For this reason, some aspects of your motorcycle may vary from the descriptions in these operating instructions. In addition, BMW Motorrad cannot guarantee the total absence of errors. We hope you will appreciate that no claims can be recognized that are based on the data, illustrations or descriptions in this manual.

ADDITIONAL SOURCES OF INFORMATION

Authorized BMW Motorrad dealer

Your authorized BMW Motorrad dealer is always happy to answer any of your questions.

Internet

The rider's manual for your vehicle, the Owner's Manual and installation instructions for optional accessories and general BMW Motorrad information related to the technology or other features are available at **bmw-motorrad.com/manuals**.

CERTIFICATES AND OPERATING PERMITS

The certificates for the vehicle and the official operating permits for possible accessories are available at **bmw-motorrad.com/certification**.

DATA MEMORY

General information

Control units are installed in the vehicle. Control units process data received from vehicle sensors, self-generated data or data exchanged between control units, for example. Some

control units are required for safe vehicle operation or provide riding assistance, such as rider assistance systems. Control units also make comfort and infotainment functions possible.

Information about the stored or exchanged data can be obtained from the vehicle manufacturer, such as in the form of a separate booklet.

Personal references

Every vehicle is marked with a unique vehicle identification number. Depending on the country, the vehicle owner can be identified using the vehicle identification number and license plate and with the help of the relevant authorities. There are also other ways to trace data obtained from the vehicle back to the rider or vehicle owner, such as via the ConnectedDrive Account that was used.

Data privacy laws

In accordance with applicable data privacy laws, vehicle users have certain rights over the vehicle manufacturer or company that collects or processes personal data.

Vehicle users have the right to obtain comprehensive information without charge from the locations that store the vehicle user's personal data.

These locations may be:

- The vehicle manufacturer
- Qualified service partners
- Repair shops
- Service providers

Vehicle users may request information about the type of personal data that is stored, the purpose for which the data will be used and the source of the data. This information can only be obtained by a registered owner or a person with written proof authorizing use of the vehicle.

The right to information also includes information related to data transmitted to other companies or locations.

The vehicle manufacturer's website contains the appropriate privacy policy notices. The privacy policy notices contain information on the right to delete or correct data. The vehicle manufacturer also provides the manufacturer contact information and the contact information of the data security officer on the Internet.

8 GENERAL INSTRUCTIONS

The vehicle owner can have an authorized BMW Motorrad dealer or other qualified service partner or repair shop read out the data stored in the vehicle for a fee if required.

The vehicle data is read out via the vehicle's legally mandated diagnostic socket.

Operating data in the vehicle

Control units process data so that the vehicle can run.

Examples of this include:

- Status messages from the vehicle and its individual components, such as wheel speed, wheel centrifugal velocity and deceleration
- Ambient conditions, such as temperature

The data is processed only in the vehicle itself and is usually temporary. The data is not stored beyond the period in which the vehicle is operating. Electronic components such as control units contain components for storing technical information. This may be information about the vehicle's condition, component load, events or faults stored temporarily or permanently.

This information generally documents the condition of a com-

ponent, module, system or the surrounding area; for example:

- Operating states of system components, such as fill levels and tire pressure
- Malfunctions and faults in key system components, such as lights and brakes
- Vehicle responses in specific riding situations, such as the activation of riding dynamics systems
- Information about events causing damage to the vehicle

The data is necessary for providing control unit functions. In addition, it is used by the vehicle manufacturer to detect and eliminate malfunctions as well as to optimize vehicle functions.

The majority of this data is temporary and is processed only within the vehicle itself. Only a small amount of event-driven data is stored in the event data recorder and fault memory.

When a vehicle is serviced, such as for repairs, servicing processes, warranty cases and quality assurance measures, this technical information can be read out from the vehicle together with the vehicle identification number.

The information can be read out by an authorized BMW Motorrad dealer or other qualified service partner or repair shop. The vehicle's legally mandated diagnostic socket is used to read out the data.

The data is collected, processed and used by the respective service network locations. The data documents the vehicle's technical states and helps with fault finding, compliance with warranty obligations and quality improvements.

The manufacturer also has product monitoring obligations arising from product liability law. The vehicle manufacturer requires technical data from the vehicle in order to fulfill these obligations. The data from the vehicle can also be used to verify customer warranty and guarantee claims. The fault memory and event data recorder in the vehicle can be reset by an authorized BMW Motorrad dealer or other qualified service partner or repair shop as part of a repair or servicing.

Data input and data transfer in the vehicle

General information

Depending on the equipment, comfort settings and individualized settings in the vehicle can be saved and changed or reset at any time.

It is possible to introduce data into the vehicle entertainment and communication system via a smartphone, for instance.

Depending on the individual equipment, this includes:

- Multimedia data, such as music for playback
- Address book data for use in combination with a communication system or integrated navigation system
- Entered destinations
- Data about the use of Internet services. This data can be stored locally in the vehicle or is on a device connected to the vehicle, such as a smartphone, USB stick or MP3 player. If this data is saved in the vehicle, it can be deleted at any time.

This data is transmitted to third parties only upon personal request as part of the use of online services. The data transmitted depends on the selected

10 GENERAL INSTRUCTIONS

settings when using the services.

Incorporating mobile end devices

Depending on the equipment, mobile end devices connected to the vehicle, such as smartphones, are controlled using the vehicle's operating elements.

This enables audio and visual output from mobile end devices through the multimedia system. At the same time, certain information is transmitted to the mobile end device. This includes, for instance, position data and other general vehicle information, depending on the type of incorporation, and makes it possible to optimize the use of selected apps, such as those for navigation or audio playback.

The way the data is processed further is determined by the provider of the particular app used. The range of possible settings depends on the particular app and the operating system of the mobile end device.

Services

General information

If the vehicle has a mobile phone connection, this connection makes it possible to exchange data between the vehicle and other systems. The mobile phone connection is made possible through the vehicle's transmitter and receiver or via personally integrated mobile end devices such as smartphones. Online functions, as they are called, are used over this mobile phone connection. These include online services and apps provided by the vehicle manufacturer or other providers.

Vehicle manufacturer services

In the case of the vehicle manufacturer's online services, the particular functions are described at the appropriate location, such as in the rider's manual or on the manufacturer's website. The relevant legal information on data privacy is also provided there. Personal data may be used in order to provide online services. The data is exchanged over a secure connection, i.e. with the vehicle manufacturer's IT sys-

tems which are intended for this purpose.

Any collection, processing and use of personal data that goes beyond the provision of services take place only as permitted by law, on the basis of a contractual agreement or as a result of consent. It is also possible to have the entire data connection activated or deactivated. This is not the case for legally prescribed functions.

Services of other providers

When using the online services of other providers, these services are subject to the responsibility and the term of data protection and use of the respective provider. The vehicle manufacturer has no control over the content exchanged via these services. Information about the type, scope and purpose of collecting and using personal data as part of third-party services can be obtained from the particular service provider.

INTELLIGENT ASSIST SYSTEM

–with intelligent emergency call^{OE}

Principle

The intelligent assist system makes it possible to place manual or automatic emergency calls in the event of an accident, for example.

The emergency calls are answered by an emergency call center authorized by the vehicle manufacturer.

For information on how to operate the intelligent assist system and its features, see (▣▣▣▣▶ 87).

Legal basis

The processing of personal data by way of the intelligent assist system complies with the following regulations:

–Protection of personal data:
Directive 95/46/EC of the European Parliament and of the Council.

–Protection of personal data:
Directive 2002/58/EC of the European Parliament and of the Council.

The legal basis for the activation and operation of the intelligent assist system are the

12 GENERAL INSTRUCTIONS

signed ConnectedRide contract for this function, as well as the corresponding laws, regulations, and directives of the European Parliament and European Council.

The relevant regulations and directives govern the protection of individuals when processing personal data.

The processing of personal data by the intelligent assist system conforms to the European directive concerning personal data protection.

The intelligent assist system processes personal data only with the consent of the vehicle owner.

The intelligent assist system and other services with additional benefits may process personal data only with the express consent of the individual affected by the data processing, for example, the vehicle owner.

SIM card

The intelligent assist system is operated by way of mobile radio via the installed SIM card in the vehicle. The SIM card is permanently registered to the mobile phone network to enable a fast connection setup.

The data is sent to the vehicle manufacturer in the event of an emergency.

Quality improvement

The data transmitted in the event of an emergency call is also used by the vehicle manufacturer to improve the quality of products and services.

Geopositioning

The vehicle position can be determined exclusively by the mobile phone network provider based on their mobile phone cell towers. The network provider cannot link the vehicle identification number and phone number of the installed SIM card. Only the vehicle manufacturer can link the vehicle identification number and phone number of the installed SIM cards.

Emergency call log data

The emergency call log data is stored in the vehicle memory. The oldest log data is deleted regularly. The log data includes for example information about when and where an emergency call was initiated. The log data can be read out from the vehicle memory in exceptional cases. The log data is usually

read out only by court order and can only be read out when the relevant devices are connected directly to the vehicle.

Automatic emergency call

The system is designed so that an emergency call is triggered automatically in the event of an accident of a particular severity detected by sensors in the vehicle.

Transmitted information

In the event of an emergency call by the intelligent assist system, the same information is forwarded to the authorized emergency call center as is forwarded by the assist system eCall to the public emergency operations center.

Moreover, through the intelligent assist system, the following additional information is sent to one of the emergency call centers authorized by the vehicle manufacturer and forwarded to the public safety answering point if necessary:

- Accident data, such as the direction of impact detected by the vehicle sensors in order to facilitate planning of the deployment of emergency services.

- Contact information, such as the phone number of the installed SIM card and that of the rider, if available, in order to expedite contact with the individuals involved in the accident.

Data storage

The data related to a triggered emergency call is stored in the vehicle. The data contains information about the emergency call, such as the emergency call location and time.

Audio recordings of emergency calls are stored at the emergency call center.

Customer audio recordings are stored for 24 hours in case the details of the emergency call need to be analyzed. The audio recordings are then deleted.

Emergency call center employee audio recordings are stored for 24 hours for quality assurance purposes.

Disclosure of personal data

The data processed as part of the intelligent emergency call is processed only for the purpose of providing the emergency call service. The vehicle manufacturer discloses information about the data that it processes or continues to store

14 GENERAL INSTRUCTIONS

if necessary as part of its legal obligation.

Regional limitation

For the built-in Intelligent Emergency Call system to function properly, the respective national-market vehicle must support the current region.

For more information on regional limitations:

support.bmw-motorrad.com

SHORT-RANGE RADIO TECHNOLOGY

The Bluetooth function may not be offered depending on the country of use.

Bluetooth is a close-range wireless technology. Bluetooth devices are short-range devices (transmitting with a limited range) on the license-free ISM band (Industrial, Scientific, Medical) between 2.402...2.480 GHz. They can be operated anywhere in the world without a license being required.

Although Bluetooth is designed for establishing robust connections over short distances, faults are possible as with any other wireless technology. Connections can be subject to interference, can be briefly

interrupted or lost entirely. Especially when several devices are operated in one Bluetooth network, there is no guarantee for smooth operation in every situation.


Possible sources of interference:

- Interference fields due to transmission towers and similar.
- Devices with incorrectly implemented Bluetooth radio standard.
- By nearby Bluetooth-capable devices.
- Shielding by metals or bodies.

CONNECTIVITY FUNCTIONS

Connectivity functions include media, telephony and navigation. Connectivity functions can be used if the instrument cluster is connected to a mobile terminal and a helmet (► 71). You can find more information on the Connectivity functions at:

bmw-motorrad.com/connectivity

 Depending on the mobile terminal, the scope of the Connectivity functions may be limited.

BMW Motorrad Connected App

With the BMW Motorrad Connected App, you can call up information about the vehicle and usage. To use some functions such as navigation, the app must be installed on the mobile terminal and be connected to the instrument cluster. The app starts the route guidance and adapts the navigation.



On some mobile terminals, e.g. with operating system iOS, you must go to the BMW Motorrad Connected App before use.

OVERVIEWS

02


OVERALL VIEW, LEFT SIDE	18
OVERALL VIEW, RIGHT SIDE	19
UNDERNEATH THE SEAT	20
MULTIFUNCTION SWITCH, LEFT	21
MULTIFUNCTION SWITCH, RIGHT	22
MULTIFUNCTION SWITCH, RIGHT	23
INSTRUMENT CLUSTER	24

18 OVERVIEWS

OVERALL VIEW, LEFT SIDE




- 1 Fuel filler opening (►►► 145)
- 2 12V socket
- 3 Seat lock (►►► 123)
- 4 Passenger grab handle
- 5 Passenger footrest
- 6 Adjuster for rear damping (at the bottom on the spring strut) (►►► 128)
- 7 Rider footrest
- 8 Tire pressure table (behind the side trim panel)

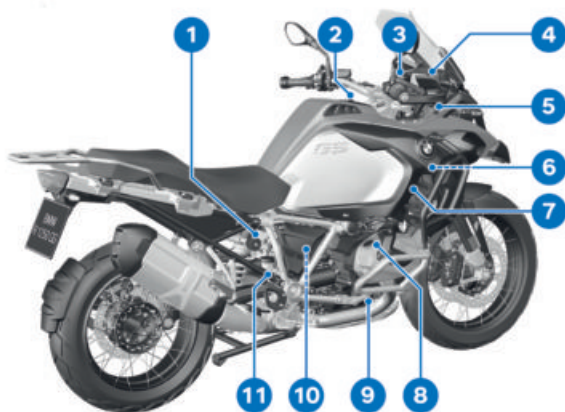OVERALL VIEW, RIGHT SIDE


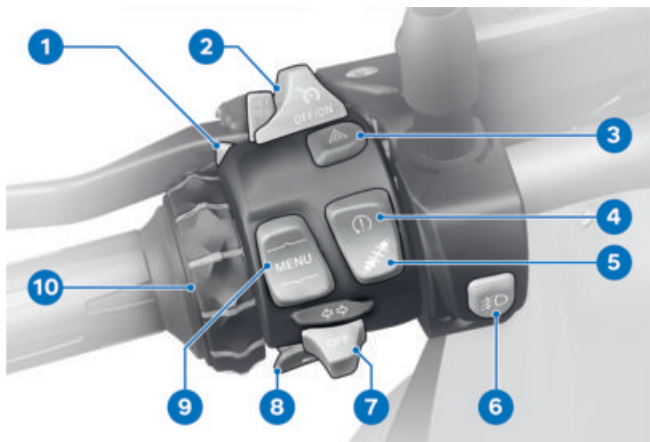
- | | |
|--|---|
| <p>1 Adjuster for spring preload, rear (➡ 127)</p> <p>2 Air filter (under center fairing panel) (➡ 192)</p> <p>3 Brake fluid reservoir for front wheel brake (➡ 180)</p> <p>4 Height adjustment of the windshield (➡ 116)</p> <p>5 USB charging interface (➡ 211)</p> <p>6 Vehicle identification number (on the steering-head bearing)
Nameplate (on the steering-head bearing)</p> | <p>7 Coolant level indicator (➡ 182)
Coolant tank (➡ 183)</p> <p>8 Oil filler opening (➡ 177)</p> <p>9 Engine oil indicator (➡ 176)</p> <p>10 Behind the side trim panel (right lower frame tube):
Battery (➡ 199)
Jump-start terminal (➡ 197)
Diagnostic connector (➡ 205)</p> <p>11 Brake fluid reservoir for rear wheel brake (➡ 181)</p> |
|--|---|

20 OVERVIEWS

UNDERNEATH THE SEAT

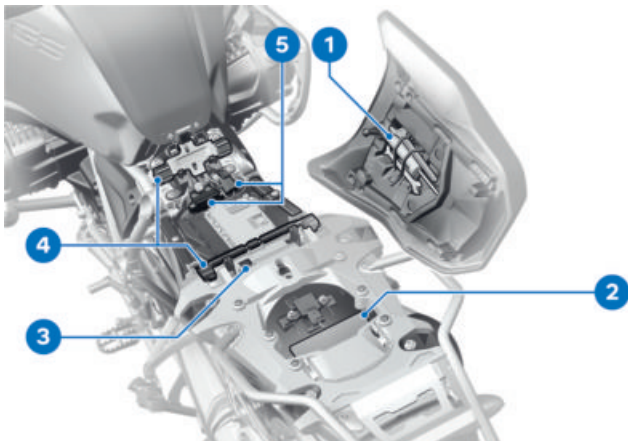

- 1 Onboard vehicle tool kit
([►►► 175](#))
- 2 Rider's manual
- 3 Payload table
- 4 Adjustment in setting
of rider's seat height
([►►► 124](#))
- 5 Fuses ([►►► 203](#))


MULTIFUNCTION SWITCH, LEFT

- 1 High beams and headlight flasher (➡ 90)
- 2 Cruise control (➡ 100)
- 3 Hazard warning system (➡ 91)
- 4 DTC (➡ 92)
- 5 Dynamic ESA (➡ 93)
- 6 Auxiliary headlights (➡ 90)
- 7 Turn signals (➡ 91)
- 8 Horn
- 9 Rocker button MENU (➡ 67)
- 10 Multi-Controller (➡ 66)

22 OVERVIEWS

MULTIFUNCTION SWITCH, RIGHT


–with intelligent emergency call^{OE}

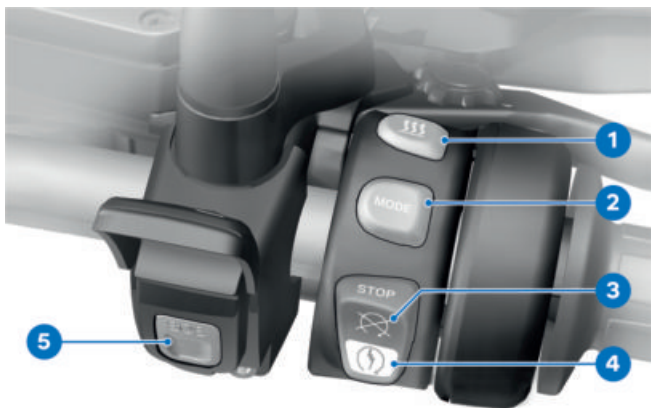

- 1 Heating (➡ 108)
- 2 Riding mode (➡ 96)
- 3 Emergency-off switch (➡ 86)
- 4 Starter button (➡ 135)
- 5 SOS button
Intelligent emergency call (➡ 87)

MULTIFUNCTION SWITCH, RIGHT

–without intelligent emergency call^{OE}

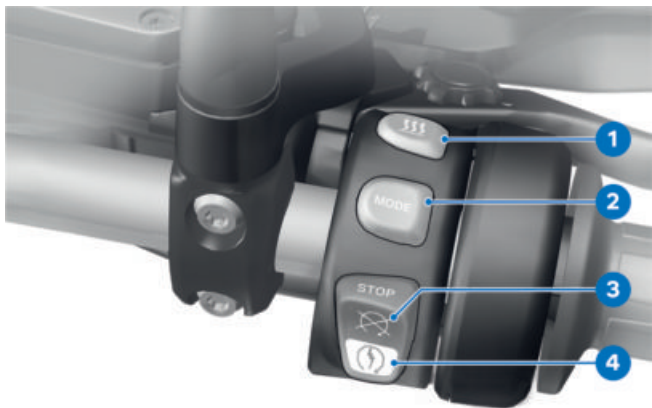

- 1 Heating (➡ 108)
- 2 Riding mode (➡ 96)
- 3 Emergency-off switch (➡ 86)
- 4 Starter button (➡ 135)

24 OVERVIEWS

INSTRUMENT CLUSTER



- 1 Indicator and warning lights (☞ 28)
- 2 Display (☞ 30)
- 3 Indicator light
DWA (☞ 106)
Keyless Ride (☞ 83)
- 4 Photodiode (for adjusting brightness of instrument lighting)


DISPLAYS

03

INDICATOR AND WARNING LIGHTS	28
MENU VIEW	29
PURE RIDE VIEW	30
MY VEHICLE VIEW	33
INDICATOR LIGHTS	35


28 DISPLAYS

INDICATOR AND WARNING LIGHTS

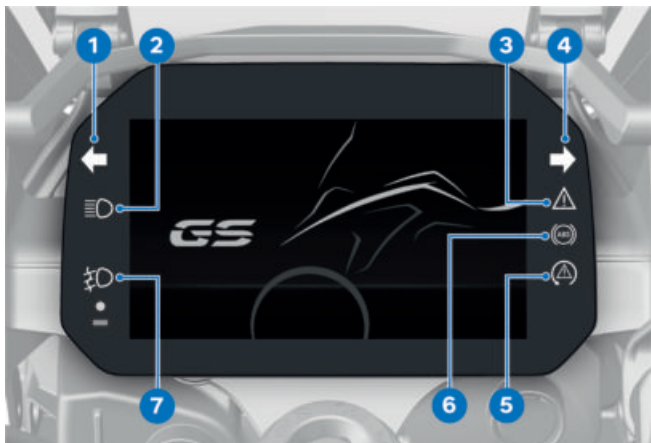

- 1 Turn signal, left (☛ 91)
- 2 High beams (☛ 90)
- 3 General warning light (☛ 35)
- 4 General warning light (☛ 35)
- 5 DTC (☛ 58)
- 6 ABS (☛ 57)
- 7 Auxiliary headlights (☛ 90)

MENU VIEW

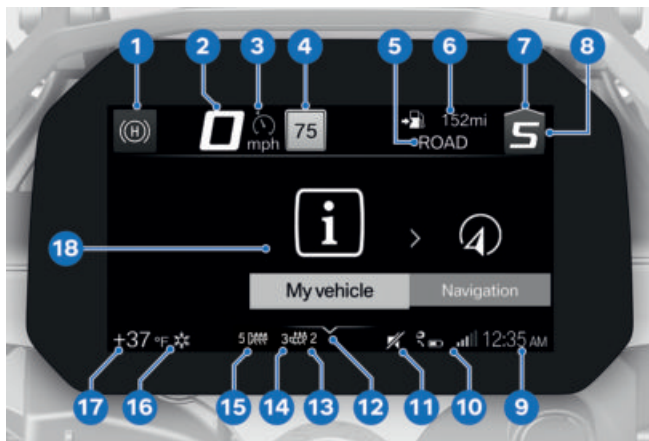


- | | |
|---|---|
| 1 Hill Start Control (►►► 61) | 14 Rider's seat heater (►►► 109) |
| 2 Speedometer | 15 Heated grips (►►► 108) |
| 3 Cruise control (►►► 100) | 16 External temperature warning (►►► 43) |
| 4 Speed Limit Info (►►► 75) | 17 Outside temperature |
| 5 Riding mode (►►► 96) | 18 Menu area |
| 6 Rider info. status line (►►► 69) | |
| 7 Upshift recommendation (►►► 32) | |
| 8 Gear display | |
| 9 Clock (►►► 70) | |
| 10 Connection status | |
| 11 Muting (►►► 70) | |
| 12 Operating assistance | |
| 13 Passenger seat heater (►►► 110) | |

30 DISPLAYS

PURE RIDE VIEW

START SCREEN

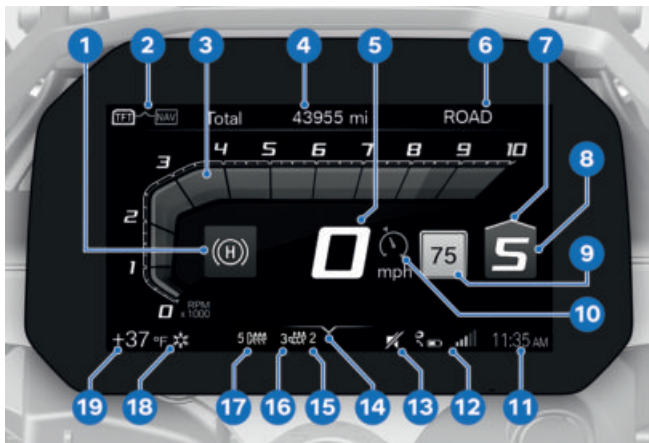

- | | |
|--|---|
| 1 Hill Start Control (➡ 61) | 12 Connection status (➡ 71) |
| 2 Changing operating focus (➡ 73) | 13 Muting (➡ 70) |
| 3 Tachometer (➡ 31) | 14 Operating assistance |
| 4 Rider info. status line (➡ 69) | 15 Passenger seat heater (➡ 110) |
| 5 Speedometer | 16 Rider's seat heater (➡ 109) |
| 6 Riding mode (➡ 96) | 17 Heated grips (➡ 108) |
| 7 Upshift recommendation (➡ 32) | 18 External temperature warning (➡ 43) |
| 8 Gear display | 19 Outside temperature |
| 9 Speed Limit Info (➡ 75) | |
| 10 Cruise control (➡ 100) | |
| 11 Clock (➡ 70) | |

TACHOMETER



- 1 Scale
- 2 High / red engine speed range
- 3 Needle
- 4 Drag pointer

32 DISPLAYS

Range



The range **1** indicates how far you can ride with the remaining fuel. This distance is calculated based on average consumption and the remaining fuel quantity.


- When the vehicle is propped on its side stand, the resulting angle of inclination means that the sensor cannot register the fuel quantity correctly. For this reason, the range is only recalculated when the side stand is folded in.
- The range is output together with a warning after the fuel reserve level is reached.
- After refueling, the range is recalculated if the fuel quantity is greater than the fuel reserve.
- The calculated range is only an approximate figure.

Upshift recommendation



The upshift recommendation in the **1** status line or in the Pure Ride **2** view signals the economically best time for an upshift.


MY VEHICLE VIEW START SCREEN

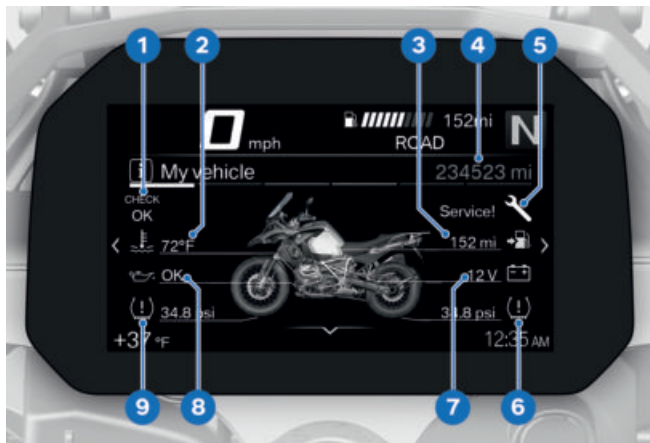

- 1 Check Control display
Layout (➡ 35)
- 2 Coolant temperature
(➡ 49)
- 3 Range (➡ 32)
- 4 Odometer
- 5 Service display (➡ 62)
- 6 Rear tire pressure (➡ 52)
- 7 Voltage of the vehicle
electrical system
(➡ 200)
- 8 Engine oil level (➡ 49)
- 9 Front tire pressure
(➡ 52)


34 DISPLAYS

On-board computer and travel on-board computer

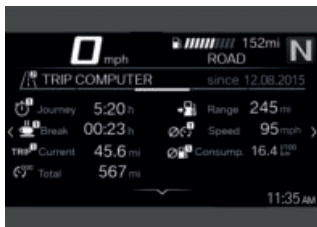

The ONBOARD COMPUTER and TRIP COMPUTER menu windows show the vehicle and trip data, e.g. average values.

Service display

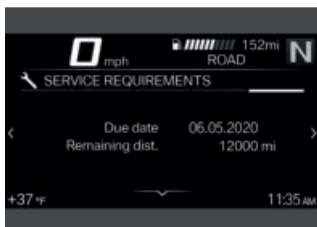


If the time remaining until the next service is less than a month, or if the next service is due within 620 mi (1000 km), a white Check Control message is displayed.


INDICATOR LIGHTS

Layout

Warnings are indicated by the corresponding warning light. Warnings are indicated by the general warning light in combination with a dialog in the instrument cluster. The general warning light lights up in either yellow or red, depending on the urgency of the warning.

 The general warning light lights up for whichever warning is most urgent at the current time.


You will find an overview of the potential warnings on the following pages.

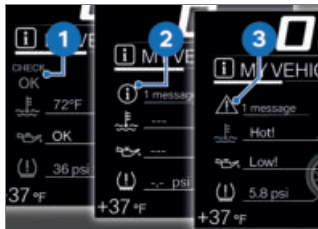

Check Control display

The messages in the display are shown differently in the display. Different colors and characters are used depending on the priority:

- Green CHECK OK **1**: No message, optimal values.
- White circle with lowercase "i" **2**: Information.
- Yellow warning triangle **3**: Warning, value not optimal.
- Red warning triangle **3**: Warning, value critical

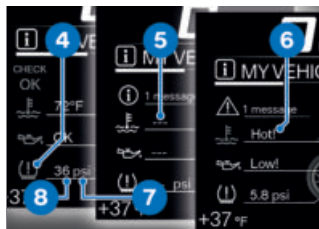

Value display


The icons **4** are displayed differently. Different colors are used depending on the assessment of value. Instead of numerical values **8** with units **7**, texts **6** are also displayed:

Color of the icon

- Green: (OK) Current value is optimal.
- Blue: (Cold!) Current temperature is low.
- Yellow: (Low!/High!) Current value is too low or too high.
- Red: (Hot!/High!) Current temperature or value is too high.


36 DISPLAYS

–White: (---) There is no valid value. Instead of the value, dashes **5** are displayed.

 The evaluation of the individual values is possible in part only after a certain riding duration or speed. If a measured value cannot yet be displayed due to unfulfilled measurement conditions, dashes are displayed instead as placeholders. As long as no valid measured value is available, no evaluation is carried out in the form of a colored symbol.

–If the icon **2** is active, you can acknowledge this by tilting the Multi-Controller to the left.

–Check Control messages are dynamically added to the screens in the *My vehicle* menu as additional tabs. You can go back to the message as long as the fault is present.

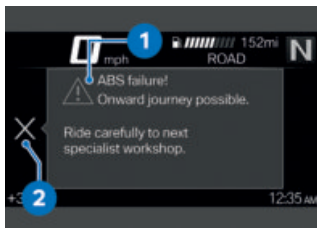




















Check Control dialog



















Messages are output as Check Control dialog **1**.


















–If several Check Control messages of the same priority are present, the messages change in the order in which they occur, until they are acknowledged.

Overview of warning indicators


















Indicator and warning lights	Display text	Meaning
	 is displayed.	External temperature warning (▶▶▶▶ 43)
 lights up yellow.	 Remote key not in range.	Radio-operated key outside reception range (▶▶▶▶ 43)
 lights up yellow.	 Keyless Ride failure!	Keyless Ride malfunction (▶▶▶▶ 44)
 lights up yellow.	 Remote key battery low.	Replacing the battery of the radio-operated key (▶▶▶▶ 44)
	 is displayed in yellow.	Voltage of the vehicle electrical system too low (▶▶▶▶ 44)
	 Vehicle voltage low.	
 lights up yellow.	 is displayed in red.	Voltage of the vehicle electrical system is critical (▶▶▶▶ 45)
	 Vehicle voltage critical!	
 flashes yellow.	 is displayed in red.	Charging voltage critical (▶▶▶▶ 45)
	 Vehicle voltage critical!	
 lights up yellow.	 The faulty light source is displayed.	Faulty light source (▶▶▶▶ 46)
 flashes yellow.	 The faulty light source is displayed.	

















38 DISPLAYS

Indicator and warning lights	Display text	Meaning
 lights up yellow.	 Light control failure!	Light control unit failed (➡ 47)
	 Anti-theft alarm batt. capacity low.	Anti-theft alarm system battery is weak (➡ 47)
	 Anti-theft alarm battery discharged.	Anti-theft alarm system battery discharged (➡ 48)
	 Anti-theft alarm system failure.	DWA malfunction (➡ 48)
 lights up yellow.	 Engine oil level. Check engine oil level.	Low engine oil level (➡ 49)
 lights up yellow.	 Engine too hot!	Engine temperature high (➡ 49)
 lights up red.	 Engine overheating!	Engine overheated (➡ 50)
 lights up yellow.	 No communication with engine control.	Engine control malfunction (➡ 50)
 lights up.		
 lights up yellow.	 Fault in the engine control.	Engine in emergency operation mode (➡ 51)
 flashes red.	 Serious fault in the engine control.	Serious fault in the engine control (➡ 51)









Indicator and warning lights	Display text	Meaning
 lights up yellow.	 is displayed in yellow.	Tire pressure is the limit range of approved tolerance (→ 53)
	 Tire pressure not at setpoint.	
 flashes red.	 is displayed in red.	Tire pressure is outside the approved tolerance range (→ 53)
	 Tire pressure not at setpoint.	
	 Tire Press. Monitor. Loss of pressure.	
	 "----"	Transmission fault (→ 54)
 lights up yellow.	 "----"	Sensor faulty or system fault (→ 55)
 lights up yellow.	 Tire Press. Monitor failure!	Tire Pressure Monitor (TPM) malfunction (→ 55)
 lights up yellow.	 TPM sensors battery low.	Battery of the tire pressure sensor weak (→ 55)
	 Fall sensor faulty.	Malfunction of fall sensor (→ 56)
 lights up yellow.	 Emergency call system restricted.	Emergency call function has limited availability (→ 56)

40 DISPLAYS

Indicator and warning lights	Display text	Meaning
 lights up yellow.	 Emergency call system failure.	Emergency call function failed (→ 56)
 lights up yellow.	 Side stand monitoring faulty	Malfunction of side stand monitor (→ 56)
 flashes regularly.		ABS self-diagnosis not completed (→ 57)
 lights up yellow.	 Limited ABS availability!	ABS fault (→ 57)
 lights up.		
 lights up yellow.	 ABS failure!	ABS failure (→ 57)
 lights up.		
 lights up yellow.	 ABS Pro failure!	ABS Pro failure (→ 58)
 lights up.		
 flashes irregularly.		ABS-control on front wheel only (→ 58)
 flashes rapidly.		DTC intervention (→ 58)
 flashes slowly.		DTC self-diagnosis not completed (→ 59)

Indicator and warning lights	Display text	Meaning
 lights up.	 Off!	DTC turned off (➡ 59)
	 Traction control deactivated.	
 lights up yellow.	 Traction control limited.	Limited DTC availability (➡ 59)
 lights up.		
 lights up yellow.	 Traction control failure!	DTC error (➡ 60)
 lights up.		
 lights up yellow.	 Spring strut adjustment faulty!	D-ESA error (➡ 60)
	 Low fuel.	Fuel has reached reserve volume (➡ 61)
	 is displayed in green.	Hill Start Control active (➡ 61)
	 blinks yellow.	Hill Start Control is automatically deactivated (➡ 61)
	 is displayed. HSC not available. Engine not running.	Hill Start Control cannot be activated (➡ 61)
	 Gear indicator flashes.	Gear not taught in (➡ 62)

42 DISPLAYS

Indicator and warning lights	Display text	Meaning
 flashes in green.		Hazard warning flasher switched on ( 62)
 flashes in green.		
	 is displayed in white. Service due!	Service due ( 63)
 lights up yellow.	 is displayed in yellow. Service overdue!	Service appointment overdue ( 63)

Outside temperature

The outside temperature is displayed in the status line of the instrument cluster.

Engine heat can lead to spurious measurement readings of the outside temperature when the vehicle is stationary. If the effect of the motor heat becomes excessive, dashes are temporarily displayed instead of the value.



If the outside temperature falls below the limit value of approx. 37 °F (approx. 3 °C), there is a risk of black ice formation.

The first time the temperature drops below this value, the outside temperature display and ice crystal symbol flash in the status line of the instrument cluster.

External temperature warning



is displayed.

Possible cause:



The outside temperature measured on the vehicle is less than:

Approx. 37 °F (Approx. 3 °C)



WARNING

Risk of black ice, even above approx. 37 °F (approx. 3 °C)

Risk of accident

- At a low outside temperature, icy conditions must be expected on bridges and in shady road areas.

- Use caution when riding.

Radio-operated key outside reception range

—with Keyless Ride^{OE}



lights up yellow.



Remote key not in range. It is not possible to turn on the ignition again.

Possible cause:

The communication between the radio-operated key and the engine electronics is faulty.

- Check the battery in the radio-operated key. —with Keyless Ride^{OE}
- Replace the battery of the radio-operated key. (▶ 85)
- Use the spare key for further travel.

44 DISPLAYS

–with Keyless Ride^{OE}

- Battery of radio-operated key is dead or radio-operated key is lost. (➡ 84)
- If the Check Control dialog appears while riding, remain calm. You can continue riding; the engine will not turn off.
- Have a faulty radio-operated key replaced by an authorized BMW Motorrad retailer.

Keyless Ride malfunction

–with Keyless Ride^{OE}



lights up yellow.



Keyless Ride failure! Do not stop engine. Engine restart may not be possible.

Possible cause:

The Keyless Ride control unit has diagnosed a communication fault.

- Do not shut off the engine. Visit a repair shop immediately if possible, ideally an authorized BMW Motorrad dealer.
- » Engine start can no longer be turned on using Keyless Ride.
- » DWA can no longer be activated.

Replacing the battery of the radio-operated key

–with Keyless Ride^{OE}



lights up yellow.



Remote key battery low. Function limited. Change battery.

Possible cause:

- The battery for the radio-operated key is no longer charged to full capacity. Operation of the radio-operated key is only ensured for a limited time.
- Replace the battery of the radio-operated key. (➡ 85)

Voltage of the vehicle electrical system too low



is displayed in yellow.



Vehicle voltage low. Switch off unneeded consumers.

The vehicle voltage is too low. If you continue riding, the vehicle electronics will discharge the battery.

Possible cause:

Electrical loads with high electrical consumption, e.g. heating vests, are in operation; too many electrical loads are in op-

eration at the same time, or the battery is defective.

- Switch off electrical loads that are not needed or disconnect them from the electrical system.
- If the fault persists or occurs without any electrical loads connected, have the fault corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

Voltage of the vehicle electrical system is critical



lights up yellow.



is displayed in red.



Vehicle voltage critical! Consumers were switched off Check battery condition.



WARNING

Failure of vehicle systems

Accident hazard

- Do not continue riding.

The vehicle voltage is critical. The vehicle electronics will drain the battery.

Possible cause:

Electrical loads with high electrical consumption, e.g. heating vests, are in operation; too many electrical loads are in operation at the same time, or the battery is defective.

- Switch off electrical loads that are not needed or disconnect them from the electrical system.
- If the fault persists or occurs without any electrical loads connected, have the fault corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

Charging voltage critical



flashes yellow.



is displayed in red.



Vehicle voltage critical! Battery is not charged. Check battery condition.



WARNING

Failure of vehicle systems

Accident hazard

- Do not continue riding.


46 DISPLAYS


The battery is not being charged. The vehicle electronics will drain the battery.
Possible cause:


Alternator is malfunctioning, battery is defective or fuse is burned through.


- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.


Faulty light source


 lights up yellow.

 The faulty light source is displayed:


 High beam faulty!


 Turn indicator front left faulty! or Turn indicator front right faulty!


 Low beam faulty!


 Front parking lamp faulty!


—with additional headlight^{OE}

 Left auxiliary headlight faulty!
or Right auxiliary headlight faulty!◀

 Tail light faulty!

 Brake light faulty!


 Rear left turn signal faulty! or Rear right turn signal faulty!


 License plate light faulty!

—Have checked by a specialist workshop.

 flashes yellow.

—with Adaptive Lights^{OE}

 The faulty light source is displayed:

 Active headlamp faulty.◀

WARNING

Overlooking the vehicle in road traffic due to failure of the lighting on the vehicle

Safety risk

- Replace defective lighting as soon as possible. Please contact a repair shop for this purpose, preferably an authorized BMW Motorrad dealer.

Possible cause:

One or more light sources are faulty.

- Identify faulty lights by visually inspecting them.
- Have the LED light source replaced in full; for details please contact a repair shop, preferably an authorized BMW Motorrad retailer.

Light control unit failed



lights up yellow.



Light control failure! Have checked by a specialist workshop.



WARNING

Overlooking the vehicle in road traffic due to failure of the vehicle lighting

Safety risk

- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

The vehicle lighting has failed partially or completely.

Possible cause:

The light control unit has diagnosed a communication fault.

- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

Anti-theft alarm system battery is weak

–with anti-theft alarm system (DWA)^{OE}



Anti-theft alarm batt. capacity low. No limitations. Arrange an appointment at a specialist workshop.



This fault message is only shown for a short time immediately following the Pre-Ride-Check.

Possible cause:


The anti-theft alarm system battery no longer has its full capacity. The operation of the anti-theft alarm system is only ensured for a limited time with the vehicle battery disconnected.


- Contact a repair shop, preferably an authorized BMW Motorrad dealer.

48 DISPLAYS

Anti-theft alarm system battery discharged

–with anti-theft alarm system
(DWA)^{OE}

 Anti-theft alarm battery discharged. No independent alarm. Arrange an appointment at a specialist workshop.

 This fault message is only shown for a short time immediately following the Pre-Ride-Check.


Possible cause:

The DWA battery no longer has any charging capacity. Operation of the DWA is no longer guaranteed when the vehicle battery is disconnected.

- Contact a repair shop, preferably an authorized BMW Motorrad dealer.

DWA malfunction

–with anti-theft alarm system
(DWA)^{OE}


 Anti-theft alarm system failure. Have checked by a specialist workshop.

Possible cause:

The DWA control unit has diagnosed a communication fault.

- Contact a repair shop, preferably an authorized BMW Motorrad dealer.
- » DWA can no longer be activated or deactivated.
- » False alarm possible.

Electronic oil-level check

 The electronic oil-level check evaluates the oil level in the engine as OK or Low!

The following conditions must be satisfied in order to use the electronic oil-level check; multiple measurements may be necessary:

- Rider is sitting on the vehicle and the vehicle has been ridden at least min 6 mph (min 10 km/h) beforehand.
- Engine in Neutral for at least 20 seconds.
- Engine is at operating temperature.
- Vehicle stands vertically on a level surface.
- The side stand is retracted and the vehicle is not resting on the center stand.
- The spring strut is set according to the load status, or D-

ESA is in the Auto loading mode.

If the measurement is incomplete or the conditions specified above are not fulfilled, an assessment of the oil level is not possible. Dashes (---) are indicated in place of the note.

Low engine oil level



lights up yellow.



Engine oil level
Check engine oil level.

Possible cause:

The electronic oil level sensor has detected a low engine oil level. If the motorcycle is not standing vertically on a level surface, the message can also appear even when the oil level is correct. At next refueling stop:

- Check engine oil level. (➡ 176)

If the oil level is too low in the inspection glass:

- Top up engine oil. (➡ 177)

If the oil level is correct in the inspection glass:

- Check whether the conditions for the electronic oil level check are fulfilled.

If the notice appears multiple times even though the oil level is slightly below the **MAX** mark:

- Contact a repair shop, preferably an authorized BMW Motorrad dealer.

Engine temperature high



lights up yellow.



Engine too hot! Continue driving at low revs to cool engine.



ATTENTION

Riding with overheated engine

Engine damage

- Be sure to observe the measures listed below.

Possible cause:

Coolant level is too low.

- Check the coolant level. (➡ 182)

If coolant level is too low:

- Allow the engine to cool down. Top up coolant. Have the cooling system checked at a repair shop, preferably by an authorized BMW Motorrad dealer.

50 DISPLAYS

Possible cause:

The temperature sensor has detected a high temperature in the engine.

- Ride in the partial load range if possible to cool the engine.
- If the engine temperature is more frequently too high, have the fault rectified as quickly as possible by a repair shop, preferably an authorized BMW Motorrad retailer.

Engine overheated



lights up red.



Engine overheating!
Come to a safe stop,
then stop the engine.



ATTENTION


Riding with overheated engine

Engine damage

- Be sure to observe the measures listed below.

Possible cause:

Coolant level is too low.

- Check the coolant level.
( 182)

If coolant level is too low:

- Allow the engine to cool down. Top up coolant. Have the cooling system checked at a repair shop, preferably by

an authorized BMW Motorrad dealer.

Possible cause:

Engine is overheated.

- Carefully come to a stop and turn off the engine until it has cooled down.
- If the engine overheats more frequently, have the fault corrected as soon as possible by a repair shop, preferably an authorized BMW Motorrad dealer.

Engine control malfunction



lights up yellow.



lights up.



No communication
with engine control.
Multiple sys. affected.
Ride carefully to the
next specialist workshop

Possible cause:

Communication with the engine control unit has malfunctioned.

- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

Engine in emergency operation mode



lights up yellow.



Fault in the engine control. Onward journey possible. Ride carefully to next specialist workshop.



WARNING

Unusual handling when the engine is in emergency operation

Accident hazard

- Avoid rapid acceleration and passing maneuvers.

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and can no longer be started. Otherwise, the engine runs in emergency operation.

- Continued riding is possible, however, the accustomed engine power may not be available.
- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

Serious fault in the engine control



flashes red.



Serious fault in the engine control. Onward journey possible. Damage possible. Have checked by a workshop.



WARNING

Damage to the engine during emergency operation

Risk of accident

- Drive slowly and refrain from accelerating quickly and overtaking other vehicles.
- If possible, have the vehicle picked up and let the malfunction be corrected at a repair shop, preferably an authorized BMW Motorrad dealer.

Possible cause:

The engine control unit has diagnosed a fault, which can lead to a severe consequential fault. The engine is in emergency operation.

- Continued riding is possible, however it is not recommended.


52 DISPLAYS

- Avoid high load and engine speed ranges if possible.
- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

Tire pressure

—with tire pressure monitor (TPM)^{OE}

In addition to the MY VEHICLE menu screen and the Check Control messages, there is also the TIRE PRESSURE screen to display the tire pressures:

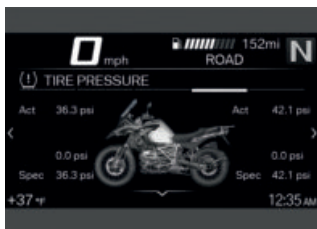

The values on the left refer to the front wheel, and the values on the right refer to the rear wheel.

The pressure differential is indicated by the current and set-point tire pressure.

Immediately after the ignition is turned on, only dashes are displayed. The transmission of the tire pressure values does

not begin until the following minimum speed is exceeded for the first time:



RDC sensor is not active

min 19 mph (min 30 km/h)
(The RDC sensor does not transmit a signal to the motorcycle until this minimum speed has been exceeded.)



The tire pressures are shown in the instrument cluster with temperature compensation and are always based on the following tire air temperature:


68 °F (20 °C)



If the tire icon appears yellow or red at the same time, the display is a warning. The pressure differential is highlighted with an exclamation mark of the same color.




If the value in question is within the limit range of the permitted tolerance, the general warning light also lights up yellow.


 If the determined tire pressure is outside the permitted tolerance, the general warning light blinks red.

For more information about the BMW Motorrad TPM, see the "Technology in detail" chapter starting on page (▮▮▮ 166).

Tire pressure is the limit range of approved tolerance

 lights up yellow.

 is displayed in yellow.

 Tire pressure not at setpoint. Check tire pressure.

Possible cause:

The measured tire pressure is within the limit range of the permissible tolerance.

- Correct the tire pressure.
- Before adjusting the tire pressure, check the information on temperature compensation and tire pressure adjustment in the chapter "Technology in detail":

–with tire pressure monitor (TPM)^{OE}

» Temperature compensation (▮▮▮ 166)◁

–with tire pressure monitor (TPM)^{OE}

» Tire pressure adjustment (▮▮▮ 167)◁

» The target tire pressures can be found in the following locations:

–On the back cover of the rider's manual


–Instrument cluster in the TIRE PRESSURE view


–Tire pressure table

Tire pressure is outside the approved tolerance range

 flashes red.

 is displayed in red.

 Tire pressure not at setpoint. Stop immediately! Check tire pressure.

 Tire Press. Monitor. Loss of pressure. Stop immediately! Check tire pressure.

WARNING

Tire pressure is outside the approved tolerance range.

Risk of accident, deterioration in the handling characteristics of the vehicle.

- Adjust the driving style.

54 DISPLAYS

Possible cause:

The measured tire pressure is outside of the permissible tolerance.

- Check tire for damage and ridability.

If the tire is still rideable:

- Correct the tire pressure at the next opportunity.
- Before adjusting the tire pressure, check the information on temperature compensation and tire pressure adjustment in the chapter "Technology in detail":

–with tire pressure monitor (TPM)^{OE}

» Temperature compensation (▣▣▣▣▶ 166)◀

–with tire pressure monitor (TPM)^{OE}

» Tire pressure adjustment (▣▣▣▣▶ 167)◀

» The target tire pressures can be found in the following locations:

–On the back cover of the rider's manual

–Instrument cluster in the TIRE PRESSURE view

–Tire pressure table

- Have the tire checked by a repair shop for damage, preferably by an authorized BMW Motorrad dealer.

If you are unsure about the tire's rideability:

- Do not continue riding.
- Contact roadside service.

Transmission fault



"----"

Possible cause:

The vehicle has not reached the minimum speed (▣▣▣▶ 166).



RDC sensor is not active

min 19 mph (min 30 km/h)
(The RDC sensor does not transmit a signal to the motorcycle until this minimum speed has been exceeded.)

- Observe the TPM display at higher speed. This is a permanent fault only when the general warning light also lights up. In this case:
- Have the fault corrected at a repair shop, preferably an authorized BMW Motorrad dealer.

Possible cause:

There is a fault in the radio link to the RDC sensors. Possible causes are radio systems in the surrounding area, which interfere with the connection between the TPM control unit and the sensors.

- Observe the RDC display in a different environment. This is

a permanent fault only when the general warning light also lights up. In this case:

- Have the fault corrected at a repair shop, preferably an authorized BMW Motorrad dealer.

Sensor faulty or system fault



lights up yellow.



"----"

Possible cause:

Wheels without RDC sensors are installed.

- Retrofit wheel set with RDC sensors.

Possible cause:

One or two RDC sensors have failed or a system fault has occurred.

- Have the fault corrected at a repair shop, preferably an authorized BMW Motorrad dealer.

Tire Pressure Monitor (TPM) malfunction



lights up yellow.



Tire Press. Monitor failure! Function limited. Have checked by a specialist workshop.

Possible cause:

The TPM control unit has diagnosed a communication fault.

- Contact a repair shop, preferably an authorized BMW Motorrad dealer.
- » Tire pressure warnings not available.

Battery of the tire pressure sensor weak



lights up yellow.



TPM sensors battery low. Function limited. Have checked by a specialist workshop.



This fault message is only shown for a short time immediately following the Pre-Ride-Check.


Possible cause:

The battery for the tire pressure sensor is no longer charged to full capacity. Operation of the Tire Pressure Monitor is only ensured for a limited time.

- Contact a repair shop, preferably an authorized BMW Motorrad dealer.

56 DISPLAYS

Malfunction of fall sensor

 Fall sensor faulty. Have checked by a specialist workshop.


Possible cause:


The fall sensor is not functioning.

- Contact a repair shop, preferably an authorized BMW Motorrad dealer.

Emergency call function has limited availability

–with intelligent emergency call^{OE}

 lights up yellow.

 Emergency call system restricted. If it occurs again, have it checked by a specialist workshop.


Possible cause:


The emergency call cannot be established automatically or via BMW.

- Please refer to page (➡ 87) for information on using the intelligent emergency call.
- Contact a repair shop, preferably an authorized BMW Motorrad dealer.

Emergency call function failed

–with intelligent emergency call^{OE}

 lights up yellow.


 Emergency call system failure. Schedule an appointment at a specialist workshop.


Possible cause:

The control unit of the Assist system has diagnosed a fault. The emergency call function has failed.

- Note that the emergency call cannot be placed.
- Contact a repair shop, preferably an authorized BMW Motorrad dealer.

Malfunction of side stand monitor

 lights up yellow.

 Side stand monitoring faulty Onward journey possible. Stop engine when stationary! Have checked by workshop.

Possible cause:



The side support switch or its wiring is damaged

The engine is turned off if the speed falls below the minimum limit. The journey cannot be continued.

min 3 mph (min 5 km/h)

- Contact a repair shop, preferably an authorized BMW Motorrad dealer.

ABS self-diagnosis not completed



blinks.

Possible cause:



ABS self-diagnosis routine not completed

ABS is not available, as the self-diagnosis routine was not completed. (The motor-cycle must reach a specified minimum speed before the system can check operation of the wheel speed sensors: 3 mph (5 km/h))

- Ride off slowly. Note that the anti-lock braking system function is only available after the self-diagnosis has been completed.

ABS fault



lights up yellow.



lights up.



Limited ABS availability! Onward journey possible.

Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected an error. The ABS function is limited.

- You may continue riding. Take note of additional information on special situations that can lead to an ABS fault message (156).
- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

ABS failure



lights up yellow.



lights up.



ABS failure! Onward journey possible.

Ride carefully to next specialist workshop.

58 DISPLAYS

Possible cause:

The ABS control unit has detected an error. The ABS function is not available.

- You may continue riding. Take note of additional information on special situations that can lead to an ABS fault message (▮▮▮▮▶ 156).
- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

ABS Pro failure



lights up yellow.



lights up.



ABS Pro failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The monitoring of the ABS Pro function has detected a fault. The ABS Pro function is not available. The ABS function remains available. ABS only supports braking in straight-ahead riding.

- You may continue riding. Observe additional information on special situations that can

lead to a ABS Pro fault message (▮▮▮▮▶ 156).

- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

ABS-control on front wheel only

—with riding modes Pro^{OE}



flashes irregularly.

Possible cause:

The ABS control for the rear wheel is turned off in the currently selected riding mode. The rear wheel brake can block the rear wheel.

- Check the settings of the riding mode.
- More detailed information on configuring the riding modes can be found in the "Technology in detail" chapter (▮▮▮▮▶ 160).

DTC intervention



flashes rapidly.

Possible cause:

DTC has detected instability at the rear wheel and responded by reducing the torque. The indicator and warning light flashes longer than the DTC intervention lasts. This provides

the rider with visual feedback for the control action that was taken even after the critical riding situation has passed.

- You may continue riding. Use caution when riding.

DTC self-diagnosis not completed



flashes slowly.

Possible cause:



DTC self-diagnosis not completed

The DTC function is not available, as the self-diagnosis function has not been completed. (To check wheel speed sensors, motorcycle must reach a minimum speed with engine running: min 3 mph (min 5 km/h))

- Ride off slowly. Note that the DTC function is only available after the self-diagnosis has been completed.

DTC turned off



lights up.



Off!



Traction control deactivated.

Possible cause:

The DTC system was turned off by the rider.

- Turn on the DTC. (▣➔ 92)

Limited DTC availability



lights up yellow.



lights up.



Traction control limited. Onward

journey possible. Ride carefully to next specialist workshop.

Possible cause:

The engine control unit has detected a DTC fault.



ATTENTION

Damage to components


Damage to sensors, for example, with the resultant malfunctions

- Do not carry along any objects under the rider's or passenger's seat.
- Secure vehicle tools.
- Do not damage the angular rate sensor.
- Note that the DTC function and other electronic stability control systems are available with limitations only.


60 DISPLAYS

- You may continue riding. Observe additional information on situations that can lead to a DTC fault (►► 158).
- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

DTC error

 lights up yellow.

 lights up.

 Traction control failure! Onward journey possible. Ride carefully to the next specialist workshop.

Possible cause:

The engine control unit has detected a DTC fault.



ATTENTION

Damage to components


Damage to sensors, for example, with the resultant malfunctions


- Do not carry along any objects under the rider's or passenger's seat.
 - Secure vehicle tools.
- Do not damage the angular rate sensor.

- Note that the DTC function and other electronic stability control systems are not available.
- You may continue riding. Observe additional information on situations that can lead to a DTC fault (►► 158).
- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad dealer.

D-ESA error

–with Dynamic ESA^{OE}

 lights up yellow.

 Spring strut adjustment faulty! Onward journey possible. Ride carefully to next specialist workshop.


Possible cause:

The Dynamic ESA control unit has detected an error. Components of the electronic chassis and suspension adjustment are faulty or the communication with the control unit is disrupted. Motorcycle damping is in this condition very firm and riding is rather uncomfortable - in particular on rough roads.

- Have the malfunction corrected as soon as possible

at a repair shop, preferably an authorized BMW Motorrad dealer.

Fuel has reached reserve volume

 Low fuel. Ride to the next filling station.

WARNING


Rough engine running or switching off of the engine due to a fuel shortage

Accident hazard, damage to catalytic converter

- Do not drive to the extent that the fuel tank is completely empty.

Possible cause:


At most, the fuel tank contains only the reserve volume.

 Reserve fuel quantity

Approx. 1.1 gal (Approx. 4 l)

- Refueling procedure. (➡ 145)

Hill Start Control active

 is displayed in green.

Possible cause:

The Hill Start Control (➡ 169) was activated by the rider.

- Turn off the Hill Start Control.
- Operate Hill Start Control. (➡ 103)

Hill Start Control is automatically deactivated


 blinks yellow.

Possible cause:

Hill Start Control was deactivated automatically.

- Side stand was folded out.
 - » Hill Start Control is deactivated when the side stand is folded out.
- Engine was stopped.
 - » Hill Start Control is deactivated when the engine is shut off.
- Operate Hill Start Control. (➡ 103)

Hill Start Control cannot be activated

 is displayed.

HSC not available. Engine not running.

Possible cause:

The Hill Start Control cannot be activated.

- Fold in side stand.

62 DISPLAYS

- » Hill Start Control only functions when the side stand is folded away.
- Start engine.
- » Hill Start Control only functions with the engine running.

Gear not taught in

–with Gearshift Assistant Pro^{OE}

 Gear indicator flashes.


Possible cause:


The transmission sensor has not been completely taught in.

- Start engine. (▣▣▣ 135)
- Shift to neutral N.
- Fold the side stand out and back in; do not operate the gearshift lever while doing this.
- Shift all gears with clutch control. In the respective gear, put the throttle grip in the idle position multiple times and then accelerate again.
- » The gear display stops blinking when the transmission sensor has been successfully taught in.
- Once the transmission sensor has been fully taught in, the Gear Shift Assistant Pro functions as described (▣▣▣ 167).
- If the teach-in procedure is unsuccessful, have the fault corrected at a repair shop,

preferably an authorized BMW Motorrad dealer.

Hazard warning flasher switched on

 flashes in green.


 flashes in green.

Possible cause:


The hazard warning lights system was switched on by the rider.

- Operate hazard warning flashers. (▣▣▣ 91)

Service display

 If service is overdue, the due date or the odometer reading at which service was due is accompanied by the general warning light in yellow.

If service is overdue, a yellow Check Control message is displayed. The displays for service, service appointment, and remaining distance are also highlighted with exclamation marks in the menu windows MY VEHICLE and SERVICE REQUIREMENTS.

 If the service display appears more than a month before the service date, the current day's date must be re-

set. This situation can occur if the battery was disconnected.

Service due



is displayed in white.

Service due! Have a service performed at a specialist workshop.

Possible cause:

Service is due because of the driving performance or the date.

- Have service performed regularly by a specialist workshop, preferably an authorized BMW Motorrad retailer.
- » The operating and road safety of the vehicle remains unchanged.
- » The best-possible value retention of the vehicle is ensured.

Service appointment overdue



lights up yellow.



is displayed in yellow.

Service overdue! Have a service performed at a specialist workshop.

Possible cause:

Service is overdue because of the riding performance or the date.

- Have service performed regularly by a specialist workshop, preferably an authorized BMW Motorrad retailer.
- » The operating and road safety of the vehicle remains unchanged.
- » The best-possible value retention of the vehicle is ensured.

INSTRUMENT CLUSTER

04

WARNINGS	66
OPERATING ELEMENTS	66
MY VEHICLE	67
OPERATION	68
SETTINGS	70
BLUETOOTH®	71
OPERATING FOCUS	73
NAVIGATION	73
MEDIA	75
TELEPHONE	76
DISPLAYING SOFTWARE VERSION	77
LICENSE INFORMATION	77

66 INSTRUMENT CLUSTER

WARNINGS



WARNING

Operation of a smartphone while riding

Risk of accident

- Observe the valid road traffic regulations.
- Do not use any smartphone while riding. Applications that do not involve operation are exempt, such as phone calls using a hands-free system.



WARNING


Distraction from traffic conditions and loss of control

Risk of accident through the use of integrated information systems and communication devices during the journey

- Operate these systems or devices only if the traffic situation allows.
- If necessary, stop and operate the system or devices at a standstill.

OPERATING ELEMENTS

Multi-Controller

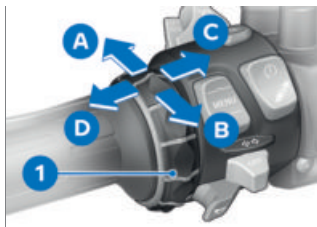

- 1** Multi-Controller
- A** Move the cursor up in lists
Increases the volume
- B** Move the cursor down in lists
Decrease volume
- C** Activate the function according to the feedback
Confirm selection/setting
Browsing through menu screens
- D** Activate or deactivate the function according to the feedback
After settings, return to menu view
Change one hierarchy level up
Browsing through menu screens

Rocker button MENU



Briefly press the top of the MENU 1:

- In Menu view: Change a hierarchy level up.
- In Pure Ride view: Changing the display for rider info. status line.

Press and hold the top of the MENU 1:

- In Menu view: Open Pure Ride view.
- In Pure Ride or Sport view: Change the operating focus to the navigator.


Press the bottom of the MENU 1:

- Change a hierarchy level down.
- Confirm the selection/setting.

Press and hold the bottom of the MENU 1:

- Return to the last menu, after a menu change has been previously carried out by pressing

and holding the top of the rocker button.


 Navigation instructions are displayed as a dialog if you have not gone to the Navigation menu. Operation of the MENU rocker button is temporarily restricted.

MY VEHICLE

Calling up the on-board computer

- Go to the `My vehicle` menu.
- Scroll to the right until the `ONBOARD COMPUTER` menu screen is displayed.


Resetting the on-board computer

- Go to the on-board computer. ( 67)
- Press MENU rocker button down.
- Select `Reset all values` or `Reset individual values` and confirm.


The following values can be reset individually:

 Break

 Journey

 Current

68 INSTRUMENT CLUSTER



Calling up the travel on-board computer


- Go to the on-board computer. (→ 67)
- Scroll to the right until the TRIP COMPUTER menu screen is displayed.

Resetting the travel on-board computer


- Go to the travel on-board computer. (→ 68)
 - Press MENU rocker button down.
 - Select Automatic reset or Reset all values and confirm.
- » If Automatic reset is selected, the travel on-board computer is automatically reset if at least 6 hours have passed since the ignition was switched off and the date has changed.

OPERATION

Go to the menu

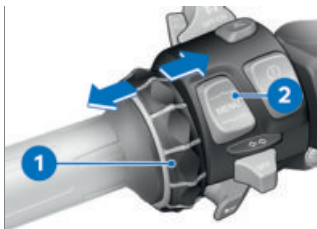

- Press and hold the top of the **2** rocker button.
 - » The Pure Ride view will appear.
 - Briefly press the bottom of the rocker button **2**.
- You can go to the following menus:
- My vehicle
 - Navigation
 - Media
 - Telephone
 - Settings
- Press Multi-Controller **1** repeatedly briefly to the right until the desired menu item is marked.
 - Briefly press button **2** downward.

 The Settings menu can only be called up when stationary.

System status displays

The system status is displayed in the lower menu area when a function has been turned on or switched off.



Example of the meaning of the system statuses:

–System status 1: DTC function is turned on.

Changing the display for rider info. status line

Requirement

The vehicle is stationary. The Pure Ride view is displayed.

- Turn on the ignition. (▶▶▶ 80)
- » In the instrument cluster, all of the information necessary for operating the vehicle on public roads is made available from the instrument cluster (e.g. TRIP 1) and the travel on-board computer (e.g. TRIP 2). The information can be displayed in the upper status line.

–with tire pressure monitor (TPM)^{OE}

» In addition, information from the Tire Pressure Monitor can be displayed.◀

- Select content of rider info. status line. (▶▶▶ 70)



- Press and hold button 1 to display the Pure Ride view.
- Press button 1 briefly to select the value in the upper status line 2.

The following values can be displayed:



Total distance



Current distance 1



Current distance 2





Consumption 1 (average)



Consumption 2 (average)


70 INSTRUMENT CLUSTER

 Riding time 1

 Riding time 2


 Break 1

 Break 2


 Speed 1 (average)

 Speed 2 (average)

–with tire pressure monitor
(TPM)^{OE}

 Tire pressure◀

 Range

 Fuel tank level

Selecting content of driver info. status line

- Go to menu **Settings**, **Display**, **Status line content**.
- Turn on desired displays.
- » It is possible to change between the selected displays in the driver info. status line. If no displays are selected, only the range is shown.

SETTINGS

Adjusting the volume

- Connect the rider's helmet and the passenger helmet. (▶▶▶▶ 72)
- Increase volume: Turn the Multi-Controller up.
- Decrease volume: Turn the Multi-Controller down.
- Mute: Turn the Multi-Controller all the way down.

Configuring system settings

- Turn on the ignition. (▶▶▶▶ 80)
- Call up menu **Settings**, **System settings**.
- » The following system settings can be configured here:
 - Date and time
 - Units
 - Language

Adjusting brightness

- Go to menu **Settings**, **Display**, **Brightness**.
- Adjust brightness.
- » The brightness of the display is dimmed to the set value if ambient brightness falls below a defined value.

Resetting all settings

- Go to the **Settings** menu.
- Select **Reset all** and confirm.

The settings of the following menus are reset:

- Vehicle settings

- System settings
 - Connections
 - Display
 - Information
- » Existing Bluetooth connections are not deleted.
 - » The pairing of the vehicle with the current BMW Motorrad ConnectedRide account is reset.

BLUETOOTH®

Pairing

Two Bluetooth devices have to recognize each other before they can communicate. This process of mutual recognition is known as pairing. When two devices have paired they remember each other, so the pairing process is conducted only once, on initial contact.



On some mobile terminals, e.g. with operating system iOS, you must go to the BMW Motorrad Connected App before use.

During the pairing process, the instrument cluster searches for other Bluetooth-compatible devices within its reception range. The conditions that have to be satisfied before a device can be detected are as follows:

- The Bluetooth® function of the device must be activated
- The device must be "visible" to others
- Other Bluetooth-capable devices must be OFF (e.g. mobile phones and navigation systems).

Please consult the operating instructions for your communication system.

Carrying out pairing

- Call up menu *Settings*, *Connections*.
- » Bluetooth connections can be established, managed, and deleted in the *CONNECTIONS* menu. The following Bluetooth connections are displayed:
 - Mobile device
 - Rider's helmet
 - Passenger helm.

The connection status for mobile end devices is displayed.


Connecting a mobile end device

- Carry out pairing. (➡ 71)
- Activate the Bluetooth function of the mobile end device (see operating instructions for the mobile end device).
- Select *Mobile device* and confirm.

72 INSTRUMENT CLUSTER

- Select PAIR NEW MOBILE DEVICE and confirm.

Mobile end devices are searched for.

 During the pairing, the Bluetooth symbol flashes in the lower status line.


Visible mobile end devices are displayed.

- Select the mobile end device and confirm.
- Observe the instructions for the mobile end device.
- Confirm that the codes match.
 - » The connection is established and the connection status is updated.
 - » If the connection cannot be established, the troubleshooting chart in the Technical data chapter may provide assistance. (▣▣▣ 233)
 - » Depending on the mobile end device, telephone data is transferred to the vehicle automatically.
 - » Telephone data (▣▣▣ 77)
 - » If the phone book is not displayed, the troubleshooting chart in the Technical data chapter may provide assistance. (▣▣▣ 234)
 - » If the Bluetooth connection does not work as expected, the troubleshooting chart in the Technical data chap-

ter may provide assistance. (▣▣▣ 233)

Connect the rider's helmet and the passenger helmet

- Carry out pairing. (▣▣▣ 71)
- Select Rider's helmet or Passenger helm. and confirm.
- Show the communication system of the helmet.
- Select PAIR NEW RIDER'S HELMET or PAIR NEW PASSENG. HELMET and confirm. Helmets are searched for.

 During the pairing, the Bluetooth symbol flashes in the lower status line.

Visible helmets are displayed.

- Select helmet and confirm.
 - » The connection is established and the connection status is updated.
 - » If the connection cannot be established, the troubleshooting chart in the Technical data chapter may provide assistance. (▣▣▣ 233)
 - » If the Bluetooth connection does not work as expected, the troubleshooting chart in the Technical data chapter may provide assistance. (▣▣▣ 233)

Deleting connections

- Call up menu *Settings*, *Connections*.
- Select *Delete connections*.
- To delete an individual connection, select the connection and confirm.
- To delete all connections, select *Delete all connections* and confirm.

OPERATING FOCUS

–with preparation for navigation system^{OE}

Changing operating focus

When the Navigator is connected, you can change between operation of the Navigator and of the instrument cluster.

Changing the operating focus

- Securely fasten the navigation device. (▮▮▮▮ 215)
- Press and hold the top of the MENU rocker button.
 - » The Pure Ride view will appear.
- Press and hold the top of the MENU rocker button.
 - » Operating focus changes to the Navigator or the instrument cluster. The active device is marked in the upper left status line. Operating actions affect the active device

until the operating focus is changed again.

- » Operating the navigation system (▮▮▮▮ 217)

NAVIGATION

Prerequisite

The vehicle is connected to a compatible mobile end device via Bluetooth.

The BMW Motorrad Connected app is installed on the connected mobile terminal.



On some mobile terminals, e.g. with operating system iOS, you must go to the BMW Motorrad Connected App before use.

Entering destination address

- Connect mobile terminal. (▮▮▮▮ 71)
- Go to the BMW Motorrad Connected app and start the guidance.
- Call up *Navigation* menu in the instrument cluster.
 - » Active destination guidance is displayed.
 - » If the active destination guidance is not displayed, the troubleshooting chart in the Technical data chapter may provide assistance. (▮▮▮▮ 234)

74 INSTRUMENT CLUSTER

Select destination from most recent destinations

- Call up menu `Navigation`, `Recent destinations`.
- Select destination and confirm.
- Select `Start route guidance`.

Select destination from favorites

- The `FAVORITES` menu shows all destinations that have been saved as a favorite in the BMW Motorrad Connected app. It is not possible to create new favorites in the instrument cluster.
- Call up menu `Navigation`, `Favorites`.
- Select destination and confirm.
- Select `Start guidance`.

Entering special destinations

- Special destinations, e.g. landmarks, can be displayed on the map.
- Call up menu `Navigation`, `POIs`.

The following locations can be selected:

- At current location
- At destination
- Along the route

- Select in which location you want to search for special destinations.

The following point of interest can be selected:

- `Filling station`
- Select special destination and confirm.
- Select `Start route guidance` and confirm.

Specifying route criteria

- Call up menu `Navigation`, `Route criteria`.

The following criteria can be selected:

- `Route type`
- `Avoid`
- Select desired `Route type`.
- Turn desired `Avoid` on or off.

The number of enabled avoidances is displayed in brackets.

Display route info

- Go to the `Navigation`, `Settings` menu, then select the `Route info` menu item.

You can select between the following options:

- `Destination`
- `Waypoint`
- Select desired option.
- » The remaining distance and time are displayed.

Editing guidance

- Call up menu Navigation, New destination.

You can select between the following destinations:

- Recent destinations
- Favorites
- POIs
- Select destination from one of the three destination categories.
- Select Edit route guidance in the destination entry.
- Select Add stop to add the selected destination as a way-point.
- Select Start guidance to overwrite the current destination.

Ending route guidance

- Call up menu Navigation, Active route guidance.
- Select End route guidance and confirm.

Switching spoken instructions on or off

- Connect the rider's helmet and the passenger helmet. (▣▣▣ 72)
- The navigation can be read out by a computer voice. To do this, the Spoken instructions must be turned on.
- Call up menu Navigation, Active route guidance.

- Turn Spoken instructions on or off.

Repeating the last spoken instruction

- Call up menu Navigation, Active route guidance.
- Select Current instruction and confirm.

Turning Speed Limit Info on or off**Requirement**

The vehicle is connected to a compatible mobile end device. The BMW Motorrad Connected app is installed on the mobile end device.


- Speed Limit Info displays the currently permitted maximum speed insofar as this information is provided by the editor of the maps in the navigation system.
- Call up menu Settings, Display.
- Turn Speed Limit Info on or off.

MEDIA**Prerequisite**


The vehicle is connected to a compatible mobile end device and a compatible helmet.

76 INSTRUMENT CLUSTER


Controlling audio playback

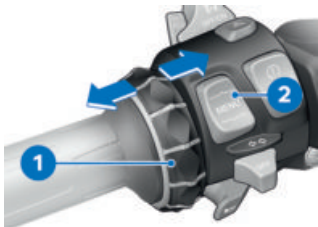

- Go to the **Media** menu.

 BMW Motorrad recommends setting the volume for media and conversations via mobile terminals to the maximum before starting a journey.

- Adjust the volume. (||| 70)
- Next title: Briefly tilt Multi-Controller **1** to the right.
- Last title or beginning of the current title: Briefly tilt Multi-Controller **1** to the left.
- Fast forward: Tilt Multi-Controller **1** to the right for an extended period.
- Fast rewind: Tilt Multi-Controller **1** to the left for an extended period.
- Go to context menu: Press button **2** downward.

 Depending on the mobile terminal, the scope of the Connectivity functions may be limited.

» The following functions can be used in the context menu:

- Playback or Pause.
- For search and playback, select the category **Now playing**, **All artists**, **All albums**, or **All tracks**.
- Select **Playlists**.

In the **Audio** settings submenu you can adjust the following settings:


- Turn **Shuffle** on or off.
- Repeat: Select **Off**, **One** (current track), or **All**.

TELEPHONE

Prerequisite

The vehicle is connected to a compatible mobile end device and a compatible helmet.

Making a phone call

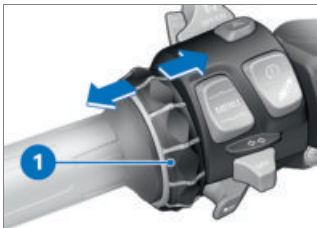

- Go to the **Telephone** menu.
- Accepting a call: Tilt Multi-Controller **1** to the right.
- Rejecting a call: Tilt Multi-Controller **1** to the left.
- Ending a call: Tilt Multi-Controller **1** to the left.

Muting

The microphone in the helmet can be muted during active conversations.

Conversations with multiple users

A second telephone call can be accepted during a conversation. The first conversation will be put on hold. The number of active telephone calls is displayed in the Telephone menu. It is possible to switch between two conversations.

Telephone data

Depending on the mobile end device, telephone data will be automatically transferred to the vehicle after the pairing (▶▶▶ 71).

Phone book: List of contacts saved in the mobile end device

Call list: List of telephone calls with the mobile end device

Favorites: List of favorites saved in the mobile end device

LICENSE INFORMATION

- Go to menu Settings, Information, Licenses.

DISPLAYING SOFTWARE VERSION

- Go to menu Settings, Information, Software version.

OPERATION

05

IGNITION SWITCH/STEERING LOCK	80
IGNITION WITH KEYLESS RIDE	82
EMERGENCY-OFF SWITCH	86
INTELLIGENT EMERGENCY CALL	87
LIGHTING	89
DYNAMIC TRACTION CONTROL (DTC)	92
ELECTRONIC CHASSIS AND SUSPENSION ADJUST- MENT (D-ESA)	93
RIDING MODE	96
PRO RIDING MODE	99
CRUISE CONTROL	100
HILL START CONTROL (HSC)	102
ANTI-THEFT ALARM SYSTEM (DWA)	105
TIRE PRESSURE MONITOR (TPM)	108
HEATING	108
STORAGE COMPARTMENT	111

80 OPERATION

IGNITION SWITCH/STEERING LOCK

Ignition keys

You are provided with 2 ignition keys.

If you lose your keys, refer to the notes regarding the electronic immobilizer (EWS) (▮▮▮ 81).

A single ignition key fits the ignition switch/steering lock, the fuel filler cap and the seat lock.

The cases and the topcase can also be ordered with locks for the ignition keys on request. For this, please contact a repair shop, preferably an authorized BMW Motorrad dealer.

Locking the steering lock

- Turn handlebars to left.



- Turn the ignition key to position **1** while moving the handlebars somewhat.

- » Ignition, lights and all electrical circuits turned off.
- » Steering lock is locked.
- » The ignition key can be removed.

Turning on the ignition



- Insert the ignition key into the ignition switch/steering lock and turn it to position **1**.
 - » Parking lights and all function circuits are turned on.
 - » Pre-Ride-Check is carried out. (▮▮▮ 136)
 - » ABS self-diagnosis is performed. (▮▮▮ 137)
 - » DTC self-diagnosis is performed. (▮▮▮ 138)


Turning off the ignition



- Turn the ignition key to position **1**.
 - » After the ignition has been turned off, the instrument cluster remains turned on for a little while and indicates any existing fault messages.
 - » Steering lock is not locked.
 - » Electrically powered accessories remain operational for a limited period of time.
 - » Battery can be recharged using the onboard power socket.
 - » The ignition key can be removed.
- with additional headlight^{OE}
- The auxiliary headlights go off shortly after the ignition is switched off.<

EWS electronic immobilizer

The motorcycle's electronics monitor the data stored in the ignition key through a ring antenna incorporated in the ignition switch / steering lock. The engine control unit does not enable engine start until this ignition key has been recognized as "authorized" for your motorcycle.

 An additional ignition key fastened to the same ring as the ignition key used to start the engine could "irritate" the electronics, in which case the enabling signal for an engine start is not issued.

Always keep the ignition keys separate from each other.

If you lose an ignition key, you can have it disabled by your authorized BMW Motorrad dealer. For this purpose, you must bring all of the motorcycle's remaining ignition keys with you. The engine can no longer be started using a disabled ignition key; however, a disabled ignition key can be enabled again.

Ignition keys can only be obtained from an authorized BMW Motorrad dealer. The keys are part of an integrated


82 OPERATION

safety system, so the dealer is under an obligation to check the legitimacy of all applications for replacement/extra ignition keys.

IGNITION WITH KEY-LESS RIDE

—with Keyless Ride^{OE}


Ignition key

 The indicator light for the radio-operated key flashes as long as the radio-operated key is being searched for. If the radio-operated key or the spare key is detected, it goes out.

If the radio-operated key or the spare key is not detected, it lights up briefly.

You are provided with one radio-operated key and one spare key. If you lose your keys, refer to the notes regarding the electronic immobilizer (EWS) (► 81).

The ignition, fuel filler cap and anti-theft alarm system are activated with the radio-operated key. The seat lock, topcase and case can be operated manually.

 When the range of the radio-operated key is exceeded (e.g. in case or Top-

case), the vehicle cannot be started.

If the radio-operated key continues to be missing, the ignition will be turned off after approx. 90 seconds to protect the battery.

It is advisable to carry the radio-operated key directly on your person (e.g. in a jacket pocket) and to also carry the spare key as an alternative.

	Range of Keyless Ride radio-operated key
—with Keyless Ride ^{OE}	
Approx. 3.3 ft (Approx. 1 m)	
◀	

Locking the steering lock Requirement

Handlebars are turned to the left. Radio-operated key is within reception area.



- Press and hold button **1**.
- » Steering lock audibly locks.

- » Ignition, lights and all electrical circuits turned off.
- To unlock the steering lock, briefly press button **1**.

Turning on the ignition Requirement

Radio-operated key is within reception area.



- There are **two** ways to activate the ignition.

Version 1:

- Briefly press button **1**.
- » Parking lights and all function circuits are turned on.
–with additional headlight^{OE}
- » Auxiliary headlights are switched on.◁
- » Pre-Ride-Check is carried out. (▮▮▮ 136)
- » ABS self-diagnosis is performed. (▮▮▮ 137)

Version 2:

- Steering lock is locked; press and hold button **1**.
- » Steering lock is unlocked.

- » Parking lights and all function circuits turned on.
–with additional headlight^{OE}
- » Auxiliary headlights are switched on.◁
- » Pre-Ride-Check is carried out. (▮▮▮ 136)
- » ABS self-diagnosis is performed. (▮▮▮ 137)

Turning off the ignition Requirement

Radio-operated key is within reception area.



- The ignition can be deactivated in **two** ways.

Version 1:

- Briefly press button **1**.
- » Light is turned off.
- » Steering lock is not locked.


Version 2:

- Turn handlebars to left.
- Press and hold button **1**.
- » Light is turned off.
- » Steering lock is locked.

84 OPERATION

Electronic immobilizer (EWS)

The motorcycle's electronics monitor the data stored in the radio-operated key through a ring antenna in the radio-operated lock. The engine control unit does not enable the engine to start until the radio-operated key has been recognized as "authorized".

 An additional radio-operated key attached to the same ring as the radio-operated key used to start the engine could "irritate" the electronics, in which case the enabling signal for the engine start is not issued.

Always keep the radio-operated keys separate from each other.

If you lose a radio-operated key, you can have it disabled by your authorized BMW Motorrad dealer. For this purpose, you must bring all of the motorcycle's remaining ignition keys with you.

The engine can no longer be started using a disabled radio-operated key; however, a disabled radio-operated key can be enabled again.


Ignition keys can only be obtained from an authorized

BMW Motorrad dealer. As the radio-operated keys are part of a safety system, the dealer is under obligation to check your proof of identity.

Battery of radio-operated key is dead or radio-operated key is lost



- If you lose your keys, refer to the notes regarding the electronic immobilizer (**EWS**).
- If you lose the radio-operated key while riding, you can start the vehicle by using the spare key.
- If the battery of the radio-operated key is dead, you can start the vehicle by touching the rear wheel cover with the radio-operated key.
- Hold the spare key **1** or the empty key remote **2** against the rear wheel cover at the height of the antenna **3**.

 The spare key or dead radio-operated key must be **touching** the rear wheel cover.



Period in which the engine must be started. Then unlocking must be repeated.

30 s

- » Pre-Ride-Check is carried out.
- Radio-operated key was detected.
- Engine can be started.
- Start engine. (▶▶▶ 135)

Replacing the battery of the radio-operated key

If the radio-operated key does not respond when a button is pressed for a short or long time:

- The battery for the radio-operated key no longer has full capacity.



Remote key battery low. Function limited. Change battery.




DANGER

Swallowing a battery

Risk of injury or death

- An ignition key contains a button cell as a battery. Batteries or button cells can be swallowed and cause severe or fatal injuries within two hours, e.g. due to internal burns or chemical burns.
- Keep ignition keys and batteries out of the reach (range) of children.
- If it is suspected that a battery or button cell has been swallowed or is inside a body part, seek medical attention immediately.

- Change battery.

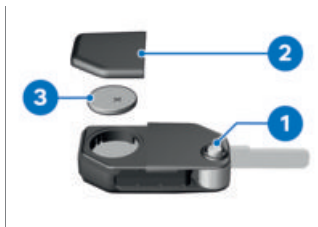

- Press button **1**.
- » Key bit folds open.
- Press battery cover **2** upward.
- Remove battery **3**.
- Dispose of the old battery in accordance with legal reg-

86 OPERATION

ulations. Do not dispose of the battery in the household waste.

ATTENTION

Unsuitable or improperly inserted batteries

Component damage

- Use a battery compliant with the manufacturer's specifications.
 - When inserting the battery, make sure that the polarity is correct.
-
- Insert the new battery with the positive terminal facing up.



Battery type

For Keyless Ride radio-operated key

CR 2032

EMERGENCY-OFF SWITCH



1 Emergency-off switch

WARNING

Operation of the emergency ON/OFF switch when riding

Danger of falling due to blocking of rear wheel

- Do not operate the emergency ON/OFF switch when riding.

The engine can be turned off easily and quickly using the emergency-off switch.



- A** Engine turned off
B Operating position

INTELLIGENT EMERGENCY CALL

—with intelligent emergency call^{OE}

Emergency call via BMW

Only press the SOS button in an emergency.

Emergency call cannot be ensured if the conditions are unfavorable for technical reasons, e.g. in regions where there is no cellphone reception.


During an emergency call, the position of the vehicle, the selected language and any accident data are transmitted to BMW (►► 11). Under unfavorable conditions, data transfer can be limited or delayed. This can lead to delayed processing of the emergency call.

Even if an emergency call via BMW is not possible, a call to a

public emergency call number may be established. This depends on the respective mobile phone network and the national regulations.

Language for emergency call


Each vehicle is assigned a language depending on the market for which it was intended. The BMW Call Center responds in this language.

 Only your authorized BMW Motorrad dealer is able to change the language for the emergency call. This language assignment to the vehicle differs from the display languages that the rider is able to select in the instrument cluster.


Manual emergency call Requirement

An emergency has arisen. The vehicle is stationary. The ignition is turned on.


88 OPERATION

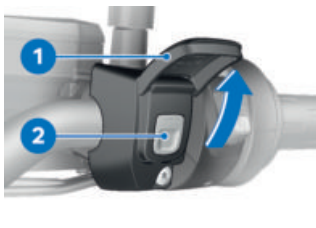

- Open cover **1**.
- Briefly press SOS button **2**.

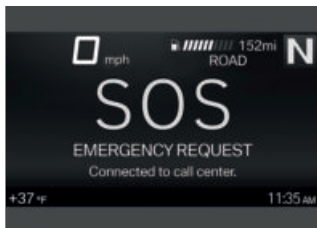


The connection has been established.

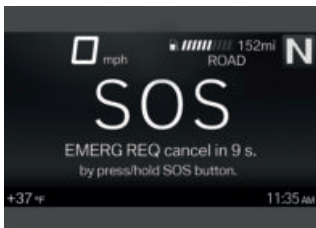

The time until an emergency call is placed is displayed. The emergency call can be aborted during this time.

- Cancel emergency call: Press and hold the SOS button **2** for two seconds or turn off the ignition.
 - Press the emergency-off switch to stop the engine.
 - Remove your helmet.
- » Once the timer has expired, a voice connection will be established with the BMW Call Center.

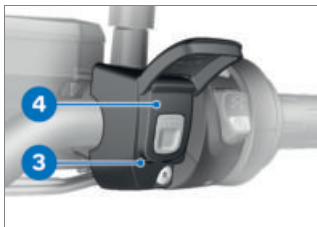

- Communicate information for the rescue services using the microphone **3** and speakers **4**.

Automatic emergency call

The intelligent emergency call is automatically active once the ignition is switched on and will react if you are involved in a fall.


Emergency call in the event of a minor fall

- A light fall or crash has been detected.
- » An acoustic signal is emitted.




The time until an emergency call is placed is displayed. The emergency call can be aborted during this time.

- » The time until an emergency call is placed is displayed. The emergency call can be aborted during this time.
- Cancel emergency call: Press and hold the SOS button for two seconds or turn off the ignition.
- If possible, remove helmet and stop the engine.
- » Voice contact to the BMW Call Center is established.

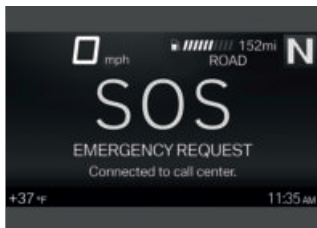

The connection has been established.

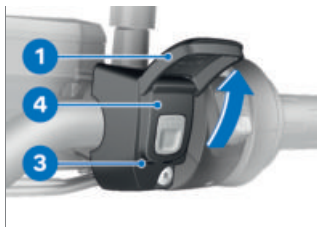

- Open cover **1**.
- Communicate information for the rescue services using the microphone **3** and speakers **4**.


Emergency call in the event of a heavy fall

- A heavy fall or crash has been detected.
- » The emergency call is sent automatically without delay.

LIGHTING

Low beams and parking lights

The parking lights turn on automatically when the ignition is turned on.

-  The parking lights are a strain on the battery. Only turn on the ignition briefly.

The low-beam headlight switches on automatically when the engine is started.

90 OPERATION

High beams and headlight flasher

- Turn on the ignition. (▣▣▣ 80)



- Press switch **1** forward to turn on high beams.
- Pull switch **1** toward rear to actuate headlight flasher.

Headlight courtesy delay feature

- Turn off the ignition. (▣▣▣ 81)



- Immediately after turning off the ignition, pull switch **1** back and hold until the headlight courtesy delay feature turns on.

» The vehicle lighting lights up for one minute and then turns off automatically.

– This can be used, for example, to light the path to your front door after the vehicle is parked.

Roadside parking lights

- Turn off the ignition. (▣▣▣ 81)




- Immediately after turning off the ignition, push button **1** to the left and hold it until the roadside parking lights turn on.
- Turn ignition on and then off again to turn off the roadside parking lights.

Auxiliary headlights

–with additional headlight^{OE}

Requirement


The auxiliary headlights are only active if the low beams are active.

 The auxiliary headlights are permitted as fog lamps and may only be used in poor weather conditions. Comply with the country-specific road traffic regulations.

- Start engine. ( 135)




- Press button **1** to turn on the auxiliary headlights.

 lights up.

- Press button **1** again to turn off the auxiliary headlights.

Hazard warning system


- Turn on the ignition. ( 80)

 The hazard warning system places a load on the battery. Only switch the hazard warning lights system on briefly.



- Press button **1** to turn on the hazard warning system.
» Ignition can be turned off.
- To turn off the hazard warning system, turn on the ignition as required and press button **1** once again.

Turn signals

- Turn on the ignition. ( 80)
- Go to the Settings, Vehicle settings menu, then select the Lights menu item.
- Turn Comfort turn indicator on or off.



- Press button **1** to the left or right to turn on the turn signals.

92 OPERATION


» If the comfort turn signal is turned on, the turn signal automatically switches off once the speed-dependent distance has been covered.

- Alternative: Press button **1** to turn off the turn signals.

DYNAMIC TRACTION CONTROL (DTC)

Turning off the DTC

- Turn on the ignition. (III 80)

 The Dynamic Traction Control (DTC) can also be turned off while riding.



- Press and hold button **1** until the DTC indicator light changes its behavior. Immediately after pressing button **1**, the DTC system status **ON** is displayed.

 lights up.

Possible DTC system status **OFF!** is displayed.

- Release button **1** after changeover of the status. The new DTC system status **OFF!** is displayed for a short time.



continues to light up.

» The DTC function is switched off.

Turn on the DTC




- Press and hold button **1** until the DTC indicator light changes its behavior. Immediately after pressing button **1**, the DTC system status **ON** is displayed.



goes out, and if self-diagnosis has not been completed, it begins to flash.

Possible DTC system status **ON** is displayed.

- Release button **1** after changeover of the status.

 remains off or continues to flash.

The new DTC system status **ON** is displayed for a short time.

- » The DTC function is switched on.
- More detailed information on the Dynamic Traction Control (DTC) can be found in the Technology in detail chapter (▮▮▮ 157).

ELECTRONIC CHASSIS AND SUSPENSION ADJUSTMENT (D-ESA)

Dynamic ESA ranges of adjustment

—with Dynamic ESA^{OE}

The electronic Dynamic ESA chassis and suspension adjustment can automatically adapt your motorcycle to the load. If the suspension adjustment is set to **Auto**, the rider does not have to deal with adjusting the vehicle load.

More information about the Dynamic ESA can be found in the chapter "Technology in detail" (▮▮▮ 160).


Displaying chassis and suspension adjustment

—with Dynamic ESA^{OE}

- Turn on the ignition. (▮▮▮ 80)



- Press button **1** briefly to display current setting.

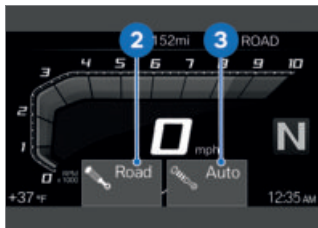

Immediately after the button **1** is pressed, the chassis and suspension adjustment options for damping **2** and spring preload **3** are displayed.

- » The display automatically disappears again after a short time.

94 OPERATION


Adjusting damping

—with Dynamic ESA^{OE}

- Turn on the ignition. (🔋➔ 80)




- Press button **1** briefly to display current setting.

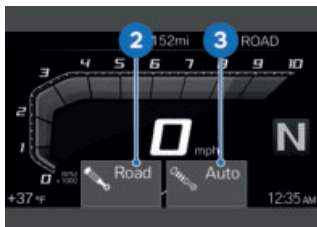

Immediately after the button **1** is pressed, the chassis and suspension adjustment options for damping **2** and spring preload **3** are displayed.

To adjust the damping rate:

- Repeatedly press button **1** briefly until the desired setting is displayed.

 The damping cannot be adjusted while the motorcycle is being ridden.



The selection arrow **4** is displayed.

» The selection arrow **4** goes away after the changeover of the status.

The following settings are available:

- Road: Damping for comfortable road travel
- Dynamic: Damping for dynamic road travel
- Enduro: Damping for off-road riding. Only available in the ENDURO or ENDURO PRO riding modes, and cannot be further adjusted in these riding modes.


The following message is displayed if no adjustments are possible in the selected riding mode: In ENDURO riding mode damp. not adjustable.

Adjusting spring preload

- Turn on the ignition. (▶▶▶ 80)




- Press button **1** briefly to display current setting.

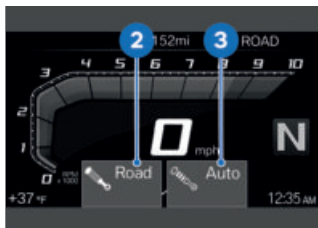


Immediately after the button **1** is pressed, the chassis and suspension adjustment options for damping **2** and spring preload **3** are displayed.

To adjust the spring preload:

- Start engine. (▶▶▶ 135)
- Repeatedly press and hold button **1** until the desired setting is displayed.

 BMW Motorrad recommends the *Auto* setting. *Min* can be used for easier dis-

mounting and *Max*, for example, for off-road use.

 The settings *Min*, *Auto* and *Max* can only be selected while stationary.

The following message is output if no adjustments to the setting are possible: Load adjust. only avail. when halted.



The selection arrow **4** is displayed.

» The selection arrow **4** goes away after the changeover of the status.


The following settings are available:

- Min*: minimum spring preload
- Auto*: automatic spring preload setting
- Max*: maximum spring preload

» If the button **1** is not pressed for an extended period, the damping action and the spring preload will be

96 OPERATION

adjusted to the displayed settings.

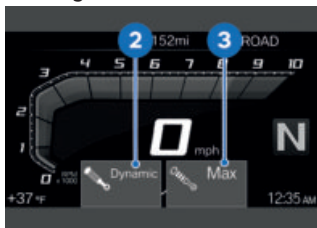

The new chassis and suspension adjustment options for damping **2** and spring preload **3** are displayed briefly.

- At very low temperatures, unload the motorcycle before increasing the spring preload, and have the passenger dismount if necessary.
- » After the setting is completed, the chassis and suspension adjustments disappear.
- » In the `Auto` loading mode, the spring preload is only adjusted after riding off.

RIDING MODE

Use of the riding modes

BMW Motorrad has developed riding scenarios for your vehicle from which you can select the one matching your situation:

Series

- ECO: Range-optimized riding.
- RAIN: Riding on wet roads.
- ROAD: Riding on dry roads.

–with riding modes Pro^{OE}

With Pro riding modes

- ENDURO: Driving off-road with road tires.
- DYNAMIC: Brisk riding on dry roads.
- ENDURO PRO: Off-road riding with knobby off-road tires taking into account settings made by the rider.
- DYNAMIC PRO: Dynamic riding on dry roads taking into account settings made by the rider.

The optimum interaction between engine characteristics and DTC, ABS and MSR is provided for each of these scenarios.

–with Dynamic ESA^{OE}

The chassis and suspension adjustments can also be adapted in the selected scenario.

More detailed information about the riding modes can be found in the "Technology in detail" Chapter (▣▶ 160).

Riding mode preselection

The available riding modes can be preselected. Between two and four riding modes can be selected at a time.

Factory setting:

ECO, RAIN and ROAD

–With Pro riding modes

In addition: ENDURO, DYNAMIC, ENDURO PRO and DYNAMIC PRO

Preselecting the riding mode

- Turn on the ignition. (▣▣▣ 80)
- Go to menu Settings, Vehicle settings, Riding mode preselection.
- Select riding modes.

You can select from the following riding modes:

- ECO: For range-optimized riding.
- RAIN: For riding on rain-slicked roads.
- ROAD: For riding on dry roads.

–with riding modes Pro^{OE}

The following riding modes are additionally available for selection:

- DYNAMIC: For dynamic riding on dry roads.
- ENDURO: For off-road riding with road tires.
- DYNAMIC PRO: For dynamic riding on dry roads, taking

account of the settings made by the rider.


- ENDURO PRO: For off-road riding with knobby off-road tires, taking account of the settings made by the rider. ◁

Select riding mode

- Turn on the ignition. (▣▣▣ 80)
- Preselect the riding mode. (▣▣▣ 97)



- Press button 1.

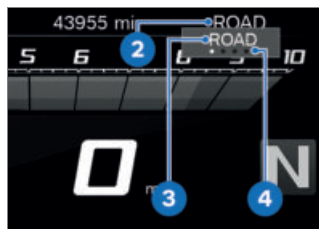

The active riding mode 2 fades into the background, and the first selectable riding mode 3 is displayed. The guide 4 shows how many riding modes are available.


98 OPERATION




ATTENTION

Turning on off-road mode (ENDURO and ENDURO PRO) when in road mode

Risk of falling due to unstable riding conditions when braking or accelerating in the ABS or DTC control range

- Switch on off-road mode (ENDURO and ENDURO PRO) during off-road riding only.
 - Press button **1** repeatedly until the desired riding mode is displayed.
- with riding modes Pro^{OE}
-  In the factory setting, the ABS control for the rear wheel is deactivated when the ENDURO PRO riding mode is active.<

—with riding modes Pro^{OE}

 Depending on the riding mode or its configuration, the intervention of electronic stability control systems can be restricted.

Possible restrictions are displayed as a pop-up message, e.g. Caution! ABS setting..

The ABS indicator light flashes irregularly.

You can find more detailed information regarding road handling control systems such as ABS in the chapter "Technology in detail".<

- » When the vehicle is stationary, the selected riding mode is activated after approx. two seconds.
- » The new riding mode is activated while the vehicle is in motion under the following conditions:
 - The throttle grip is in idle position.
 - Brake is not engaged.
 - Adaptive cruise control is not active.
- » The riding mode selected and its associated adjustments of engine characteristics DTC, ABS and MSR are retained even after the ignition has been turned off.

PRO RIDING MODE

—with riding modes Pro^{OE}

Adjustment options

The Pro riding modes can be adjusted individually only if they have been selected in the riding mode preselection.


Select Pro riding mode

- Turn on the ignition. (▶▶▶ 80)
- Go to menu Settings, Vehicle settings, Riding mode preselection.
- Select ENDURO PRO riding mode or DYNAMIC PRO riding mode.
- Call up Configuration.

Adjusting Enduro Pro

—with riding modes Pro^{OE}

- Select Pro riding mode. (▶▶▶ 99)

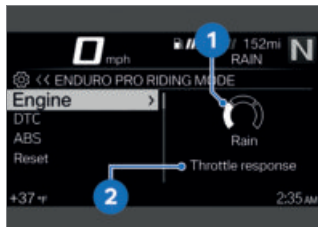

The Engine system is selected. The current setting is displayed as a diagram **1** with explanations of the system **2**.

- Select and confirm the system.



You can browse through the possible settings **3** and the related descriptions **4**.

- Adjust the system.
 - » The Engine, DTC, and ABS systems can all be adjusted in the same way.
- The settings can be reset to factory settings:
- Reset the riding mode settings. (▶▶▶ 99)

Adjusting Dynamic Pro

- Select Pro riding mode. (▶▶▶ 99)
- Set systems as for ENDURO PRO riding mode.

Riding mode settings reset

- Select Pro riding mode. (▶▶▶ 99)
- Select Reset and confirm.
 - » The following factory settings apply to ENDURO PRO RIDING MODE:
 - ENGINE: Road


100 OPERATION

- DTC: Enduro Pro
- ABS: Enduro Pro
- » The following factory settings apply to DYNAMIC PRO RIDING MODE:
 - ENGINE: Dynamic
 - DTC: Road
 - ABS: Dynamic

CRUISE CONTROL

-with cruise control^{OE}

Displayed value while adjusting (Speed Limit Info not active)

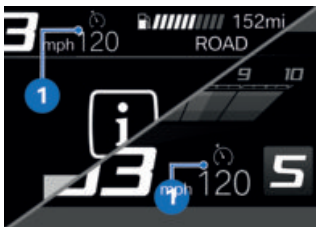

The icon **1** for cruise control is displayed in the Pure Ride view and in the upper status line.


Displayed value while adjusting (Speed Limit Info active)



The icon **1** for cruise control is displayed in the Pure Ride view and in the upper status line.

Turning on cruise control Requirement

ECO, RAIN, ROAD or DYNAMIC riding mode has been selected.

 The cruise control is not available in the ENDURO and ENDURO PRO riding modes.



- Slide switch **2** to the right.
- » Button **1** can be operated.

Saving the speed



- Briefly press button **1** forward.



Adjustment range of cruise control (gear-dependent)


12...130 mph (20...210 km/h)



is displayed.

- » The vehicle maintains your current cruising speed and the setting is saved.


Accelerating

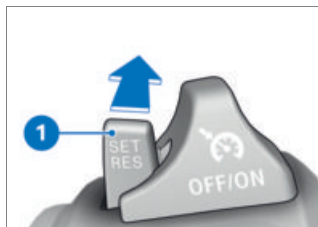

- Briefly press button **1** forward.

- » The speed is increased by 1 mph (1.6 km/h) each time the button is pressed.
- Press button **1** forward and hold.
- » The speed increases continuously.
- » If button **1** is no longer pressed, the speed reached is maintained and saved.

Decelerating

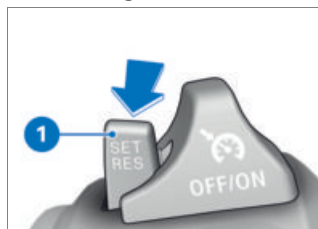


- Briefly press button **1** backward.
- » The speed is decreased by 1 mph (1.6 km/h) each time the button is pressed.
- Press button **1** back and hold.
- » The speed is reduced continuously.
- » If button **1** is no longer pressed, the speed reached is maintained and saved.


Deactivating cruise control


- Actuate the brakes, coupling or throttle grip (ease the throttle beyond the default

102 OPERATION


setting) to deactivate the adaptive cruise control.

 When downshifting using the Pro Gear Shift Assistant, the cruise control is automatically deactivated for safety reasons. During upshifting, the cruise control remains active.


 During ABS or DTC interventions, the cruise control is automatically deactivated for safety reasons. If the rider deactivates DTC, the cruise control is also deactivated.

 is hidden.


Resuming previous cruising speed

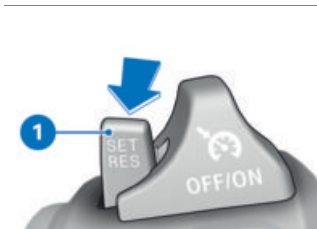


• Briefly push button **1** back to return to the speed saved beforehand.

 Cruise control is not deactivated by accelerating. If you release the throttle grip, the motorcycle will deceler-


ate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed.

 is displayed.

Turning off cruise control

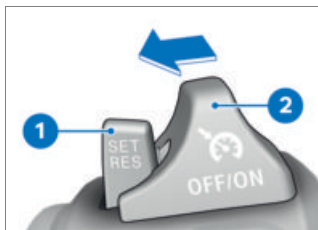

• Push switch **2** to the left.
» The system is turned off.

 is hidden.

» Button **1** is locked.

HILL START CONTROL (HSC)

Display



The icon **1** for Hill Start Control is displayed in the Pure Ride

view and in the upper status line.

Turn Hill Start Control on and off

- Turn on the ignition. (➡ 80)
- Call up menu Settings, Vehicle settings.
- Turn Hill Start Control on or off.

Operating Hill Start Control Requirement

Vehicle is at a standstill with the engine running.



ATTENTION


Failure of the Hill Start Control

Risk of accident

- Secure the vehicle through manual braking.



Hill Start Control is only a comfort system to make driving off on hills easier and should therefore not be confused with a parking brake.

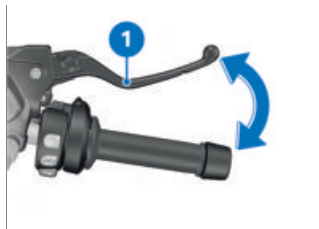

- Apply brake lever 1 or foot-brake lever firmly and then release again.



is displayed in green.

- » Hill Start Control has been activated.
- To turn off Hill Start Control, activate the brake lever 1 or footbrake lever again.



is hidden.

- Alternatively, ride off in 1st or 2nd gear.



For driving off with Hill Start Control, the throttle grip must be actuated as the motorcycle starts driving off.



is hidden.

- » Hill Start Control is deactivated.
- More information about the Hill Start Control can be found

104 OPERATION

in the chapter "Technology in detail" (169).

Operating

Hill Start Control Pro

—with riding modes Pro^{OE}

Requirement

Vehicle is at a standstill with the engine running.



ATTENTION

Failure of the Hill Start Control

Risk of accident


- Secure the vehicle through manual braking.



Hill Start Control Pro is only a comfort system to make driving off on hills easier and should therefore not be confused with a parking brake.



Hill Start Control Pro should not be used for gradients of more than 40%.

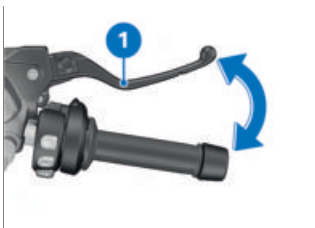

- Apply brake lever **1** or foot-brake lever firmly and then release again.
- Alternatively, apply the brake for about one second after the vehicle has come to a standstill, with a gradient of at least 3%.



is displayed in green.

- » Hill Start Control Pro has been activated.
- To turn off Hill Start Control Pro, activate the brake lever **1** or footbrake lever again.





If Hill Start Control Pro was deactivated using the brake lever, then automatic Hill Start Control is deactivated for the next 13.1 ft (4 m).



is hidden.

- Alternatively, ride off in 1st or 2nd gear.

 For driving off with Hill Start Control Pro, the throttle grip must be actuated as the motorcycle starts driving off.

 is hidden.

- » Hill Start Control Pro is deactivated.
- More information about the Hill Start Control Pro can be found in the chapter "Technology in detail" (►► 169).

Adjusting Hill Start Control Pro

–with riding modes Pro^{OE}

- Turn on the ignition. (►► 80)
- Call up menu *Settings, Vehicle settings*.
- Select *HSC Pro*.
- To turn off Hill Start Control Pro, select *Off*.
 - » Hill Start Control Pro is deactivated.
- To turn on manual Hill Start Control Pro, select *Manual*.
 - » Hill Start Control Pro can be activated by firmly applying the handbrake or footbrake lever.
- To turn on automatic Hill Start Control Pro, select *Auto*.
 - » Hill Start Control Pro can be activated by firmly applying

the handbrake or footbrake lever.

- » During brake actuation for approximately one second after the vehicle has come to a standstill and on a slope with at least a 3 % gradient, Hill Start Control Pro is activated automatically.
- » The selected setting is retained even after the ignition is turned off.

ANTI-THEFT ALARM SYSTEM (DWA)

–with anti-theft alarm system (DWA)^{OE}

Activation

- Turn on the ignition. (►► 80)
- Adjust the anti-theft alarm system. (►► 108)
- Turn off the ignition. (►► 81)
 - » If DWA is activated, DWA is automatically activated after the ignition is switched off.
 - » Activation takes approximately 30 seconds to complete.
 - » Turn signals flash twice.
 - » Confirmation tone sounds twice (if programmed).
 - » Anti-theft alarm system is active.

106 OPERATION

–with Keyless Ride^{OE}



- Turn off the ignition. (▶▶▶ 81)
- Press button **1** on the radio-operated key twice.
 - » Activation takes approximately 30 seconds to complete.
 - » Turn signals flash twice.
 - » Confirmation tone sounds twice (if programmed).
 - » Anti-theft alarm system is active.




- To deactivate the motion sensor (for example, if the motorcycle is being transported on a train and the train's movements could trigger the alarm signal), press the button **1** on

- the radio-operated key again during the activation phase.
 - » Turn signals flash three times.
 - » Confirmation tone sounds three times (if programmed).
 - » Motion sensor is deactivated.
- ◀

Alarm signal

The DWA alarm signal can be triggered by:

- Motion sensor
- Switch-on attempt with an unauthorized ignition key.
- Disconnection of the DWA from the vehicle battery (DWA battery takes over the power supply – alarm tone only, turn signals do not flash)

 If the radio-operated key is within the reception range, any alarm triggered by the tilt alarm sensor is suppressed.

If the DWA battery is discharged, all functions remain operational; the only difference is that the alarm cannot be triggered if the system is disconnected from the vehicle battery.

The duration of the alarm signal is approx. 26 seconds. During the alarm, an alarm tone sounds and the turn signals blink. The type of alarm tone can be set by an authorized BMW Motorrad dealer.

–with Keyless Ride^{OE}



You can cancel a triggered alarm signal at any time by pressing the button **1** of the radio-operated key without deactivating the DWA.


If an alarm signal has been triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is turned on. Then the DWA LED indicates the reason for the alarm signal for one minute.

Light signals on DWA LED:


- 1x flash: Movement sensor 1
- 2x flashes: Movement sensor 2
- 3x flashes: Ignition is turned on using an unauthorized ignition key
- 4x flashes: DWA disconnected from vehicle battery
- 5x flashes: Movement sensor 3

Deactivation

- Emergency-off switch in operating position.
- Turn on the ignition. (▶▶▶ 80)
 - » Turn signals flash once.
 - » Confirmation tone sounds once (if programmed).
 - » DWA is turned off.
- with Keyless Ride^{OE}

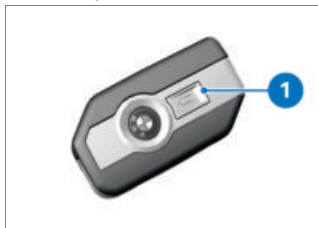

- Press the button **1** on the radio-operated key once.

 If the alarm function is deactivated using the radio-operated key and the ignition is not turned on then, the alarm function will be reactivated au-

108 OPERATION

tomatically after approximately 30 seconds if Arm automatically is turned on.

- » Turn signals flash once.
- » Confirmation tone sounds once (if programmed).
- » DWA is turned off.<

Adjusting the anti-theft alarm system


- Turn on the ignition. (▣▣▣ 80)
- Go to menu Settings, Vehicle settings, Alarm system.
- » The following settings are available:
 - Adapting Warning signal
 - Turning Tilt sensor on and off
 - Turning Arming tone on and off
 - Turning Arm automatically on and off
- » Adjustment options (▣▣▣ 108)

Adjustment options

Warning signal: Set rising and falling or intermittent alarm tone.

Tilt sensor: Activate the inclination sensor to monitor the inclination of the vehicle.

The anti-theft alarm system responds if, for example, if the wheel is stolen or the motorcycle is towed.

 Deactivate the tilt sensor when transporting the vehicle to avoid triggering the DWA.

Arming tone: Confirmation alarm tone after activating/deactivating the DWA in addition to flashing turn indicators.

Arm automatically: Automatic activation of the alarm function when turning off the ignition.

TIRE PRESSURE MONITOR (TPM)

- with riding modes Pro^{OE}
- with tire pressure monitor (TPM)^{OE}


Switching setpoint pressure warning on or off


- If the minimum tire pressure is reached, a target pressure warning can be displayed.
- Go to menu Settings, Vehicle settings, RDC.
- Turn Target pressure warn. on or off.

HEATING

Operating heated grips

- with heated grips^{OE}
- without seat heating^{OE}

 The heated grips option can only be activated when the engine is running.

 The increase in power consumption caused by the heated grips can drain the battery if you are riding at low engine speeds. If the battery is inadequately charged, the heated grips are switched off to ensure starting capability.

- Start engine. (▶▶▶ 135)



- Press the button **1** repeatedly until the desired heating level **2** is shown in front of the heated grip icon **3**.

The handlebar grips can be heated at two different levels.



Low heater output




High heater output

- » The high heating level is used for fast heat-up of the grips; then the switch should be switched back to the 1st level.
- » If no further changes are made, the selected heating level is set.

- To turn off the heated grips, press the button **1** repeatedly until the heated grip icon **3** disappears.

Operating the heating

- with heated grips^{OE}
- with seat heating^{OE}

 The heated grips and seat heating can be activated only when the engine is running.


- Start engine. (▶▶▶ 135)



- Press button **1**.
 - » The HEATING menu opens.
- Select Heated handlebar grips or Seat heating.
- Select the desired heating level and confirm.
 - » The selected heating level is shown in the display to the left of the heating symbols **2**.
- Press the **1** button to close the HEATING menu.
- To switch the heater off or on again using the previously

110 OPERATION


selected heating levels, press and hold the **1** button.

 The heat level settings are retained even after the ignition is turned off.

Operating the passenger seat heater

- with heated grips^{OE}
- with seat heating^{OE}

• Start engine. ( 135)

 Seat heating can be activated only when the engine is running.




• Select the desired heating level with **1** switch.



The passenger seat has two-level heating. The second level is used for heating the seat quickly. It is advisable to switch back to the first level as soon as the seat is warm.


- Move switch **2** to the center position: Heating off.
- Switch **3** in one-dot position: Low heating output.
- Switch **4** in two-dot position: High heating output.

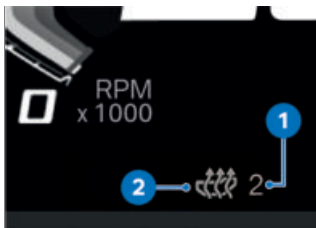

The selected heating level **1** and the seat heating icon **2** are shown in the display.

STORAGE COMPARTMENT

Opening and locking the storage compartment

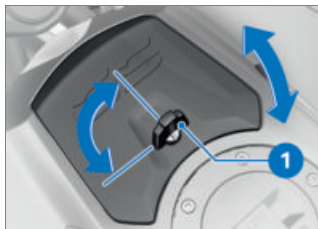

- To open the storage compartment, turn the bow-type outer door handle **1** by 90° counter-clockwise and pull upwards.
- To lock the storage compartment, turn the bow-type outer door handle **1** by 90° clockwise and fold it down onto the storage compartment in the riding direction.

SETTING

06

MIRRORS	114
HEADLIGHTS	115
WINDSHIELD	116
CLUTCH	117
BRAKES	118
SHIFTING	120
FOOTRESTS	121
HANDLEBARS	122
SEATS	123
RALLYE SEAT	126
SPRING PRELOAD	127
DAMPING	128

114 SETTING

MIRRORS

Adjusting the mirrors



- Move mirror into desired position by twisting.

Adjusting the mirror arm



- Slide the protective cap **1** upwards over the threaded connection on the mirror arm.
- Loosen nut **2**.
- Turn the mirror arm into the desired position.
- Tighten the nut to the specified torque while holding the mirror arm in place.



Mirror (locknut) on adapter

M10 x 1.25



Mirror (locknut) on adapter

16 lb/ft (22 Nm) (Left-hand thread)

- Slide protective cap **1** over threaded connection.

Adjusting the mirrors

–with Option 719 Billet pack Classic II^{OE}

or

–with Option 719 Billet pack Storm II^{OE}

or

–with Option 719 Billet pack Shadow II^{OE}



- Move mirror **1** into desired position by turning it.

Adjusting the mirror arm


–with Option 719 Billet pack
Classic II^{OE}


or

–with Option 719 Billet pack
Storm II^{OE}

or

–with Option 719 Billet pack
Shadow II^{OE}

 To adjust the mirror arm, a small and a large angle screwdriver are included with the vehicle.

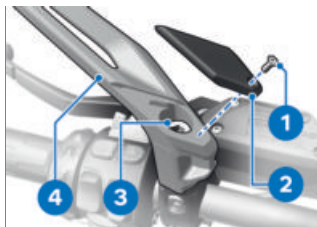

- Remove screw **1** and remove cover **2**.
- Loosen adjusting screw **3** and turn mirror arm **4** into the desired position.
- Tighten adjusting screw **3**, holding the mirror arm while doing so.
- Affix cover **2** and install screw **1**.



Mirror on handlebars

M10 x 50




Mirror on handlebars

18 lb/ft (25 Nm)

HEADLIGHTS

Headlamp range and spring preload

The headlamp range generally remains constant due to the adjustment of the spring preload to the loading state. Spring preload adjustment may only be insufficient when the motorcycle is very heavily loaded. In this case, the headlamp range must be adjusted to the weight.


 If there are doubts as to the correct headlight range, have the setting checked by a repair shop, preferably by an authorized BMW Motorrad dealer.

Adjusting the headlight range Requirement

When the spring preload adjustment is no longer able to maintain the correct beam height to avoid dazzling oncoming traffic owing to high vehicle payloads.


116 SETTING

–without ^{OE} headlight control

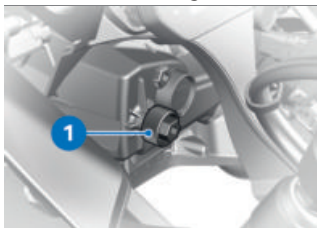

- Adjust the headlight range at adjustment screw **1**.<

–with ^{OE} headlight control

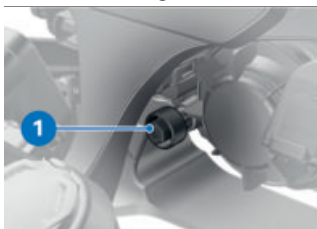

If the spring preload adjustment is no longer able to maintain the correct beam height to avoid dazzling oncoming traffic owing to high vehicle payloads:


- To lower the headlight, turn the adjustment wheel **1** counterclockwise.

If the motorcycle is ridden again with lower payload:

- Have the headlight base setting restored by a repair shop, preferably an authorized BMW Motorrad dealer.<

WINDSHIELD

Adjusting the windshield

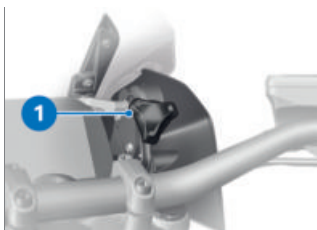

WARNING

Adjusting the windshield while driving

Accident hazard

- Only adjust the windshield when the motorcycle is stationary.

- Turn the adjustment wheel **1** clockwise to lower the windshield.
- Turn the adjustment wheel **1** counterclockwise to raise the windshield.

CLUTCH

Adjusting the clutch lever




WARNING


Adjusting the clutch lever while driving

Accident hazard

- Adjust the clutch lever when the motorcycle is stationary.

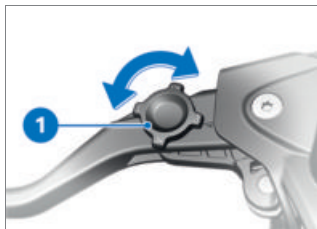

- Turn the adjustment wheel **1** into the desired position.

 The adjustment wheel is easier to turn when the clutch lever is pressed forward slightly.

» Adjustment options:

- Position 1: Minimum distance between handlebar grip and clutch lever
- Position 4: Maximum distance between handlebar grip and clutch lever


–with Option 719 Billet pack Classic II^{OE}

or

–with Option 719 Billet pack Storm II^{OE}

or

–with Option 719 Billet pack Shadow II^{OE}

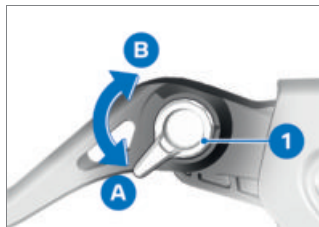

- Turn the adjustment lever **1** to the desired position.

» Adjustment options:

- From position **A**: Minimum distance between handlebar grip and clutch lever.
- Five steps toward position **B** to increase the distance between the handlebar grip and the clutch lever.◁

BRAKES

Setting the brake lever




WARNING


Adjusting the brake lever while driving

Risk of accident

- Do not attempt to adjust the brake lever unless the motorcycle is at a standstill.

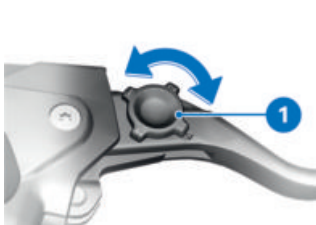

- Turn the adjustment wheel **1** into the desired position.

 The adjustment wheel is easier to turn when the brake lever is pressed forward slightly.

» Adjustment options:

- Position 1: Minimum distance between handlebar grip and brake lever
- Position 4: Maximum distance between handlebar grip and brake lever


–with Option 719 Billet pack Classic II^{OE}

or

–with Option 719 Billet pack Storm II^{OE}

or


–with Option 719 Billet pack Shadow II^{OE}

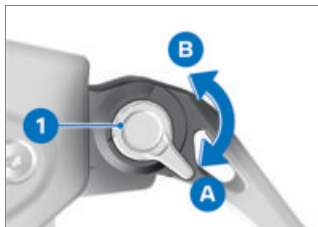


- Turn the adjustment lever **1** to the desired position.
» Adjustment options:
 - From position **A**: Minimum distance between handlebar grip and brake lever.
 - Five steps toward position **B** to increase the distance between the handlebar grip and the brake lever.◁

Adjusting the footbrake lever


- Park the motorcycle, making sure the ground is level and firm.

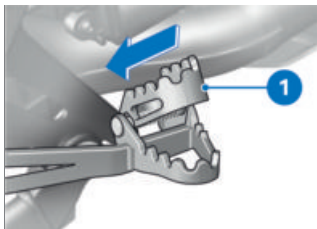

- Slide the footboard **1** of the footrest to the left to unlock it.

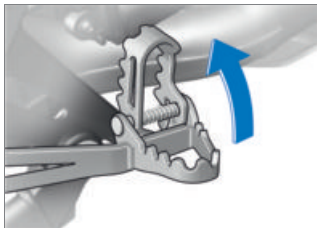

- Fold the footboard up to the latch mechanism if riding in a seated position.

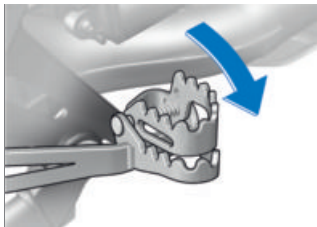

- Fold the footboard down to the latch mechanism if riding in a standing position.

Adjusting the footbrake lever foot plate


–with Option 719 Billet pack Classic II^{OE}

or

–with Option 719 Billet pack Storm II^{OE}


or

–with Option 719 Billet pack Shadow II^{OE}

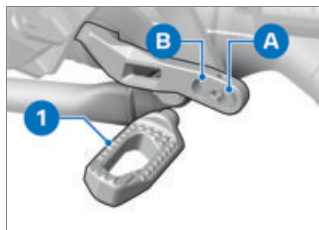

- You can adjust the horizontal and vertical distance of the foot relative to the foot plate **1** by turning the lever 180° and installing it in position **A** or **B**.
- Remove screw **1**.

120 SETTING

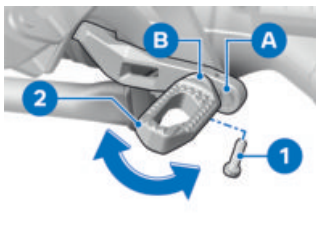

- Clean the thread.
- Install the foot plate **2** in position **A** or **B** as desired.
- Turn the foot plate **2** into the desired position.
- Install the **new** screw **1**.



Foot piece on footbrake lever

M6 x 20

Thread-locking compound:
micro-encapsulated

7 lb/ft (10 Nm)



If the toe piece is set too high or too low, this can cause problems when shifting gears. In the event of shifting problems, check the toe piece setting.

- Tighten screw **1** to the specified torque.



Treadplate (fixing) on gear lever

M6 x 16

6 lb/ft (8 Nm)

Adjusting the gearshift lever foot plate

–with Option 719 Billet pack Classic II^{OE}

or


–with Option 719 Billet pack Storm II^{OE}

or


–with Option 719 Billet pack Shadow II^{OE}

SHIFTING

Adjusting the gearshift lever

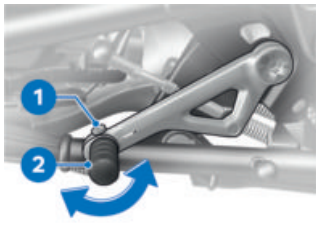


- Loosen screw **1**.
- Turn the foot plate **2** to the desired position.

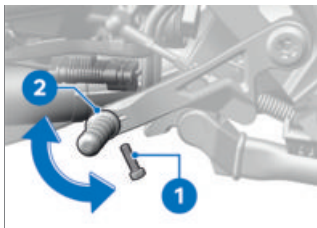

- The horizontal and vertical distance of the foot relative to the foot plate **2** can be ad-

justed by turning it to different positions.

- Remove screw **1**.

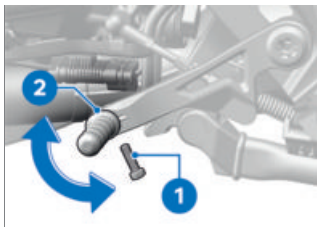

- Clean the thread.
- Turn the foot plate **2** into the desired position.
- Install the **new** screw **1**.



Foot piece to gearshift lever

M6 x 20

Thread-locking compound:
micro-encapsulated

7 lb/ft (10 Nm)

FOOTRESTS

–with Option 719 Billet pack
Classic II^{OE}

or


–with Option 719 Billet pack
Storm II^{OE}

or


–with Option 719 Billet pack
Shadow II^{OE}

Adjusting the footrests

- The footrest is set the same way on the right and left.
- The position of the footrest must be set equally on the right and left.

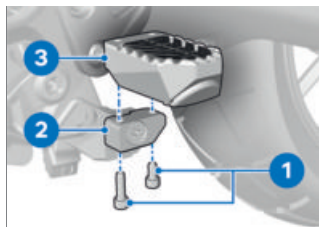


- Remove screws **1**.
- Remove the footrest **3** from the clamping block **2**.

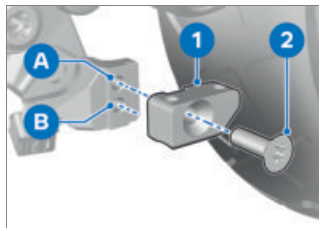


- Remove screw **2**.
- Remove clamping block **1**.

122 SETTING

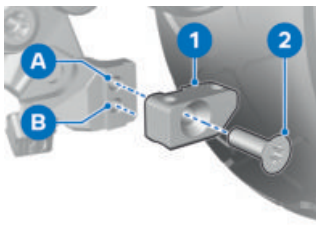


- Install clamping block **1** in the desired position **A** or **B** and tighten screw **2**.


 Clamping block on footrest hinge

M8 x 25

15 lb/ft (20 Nm)

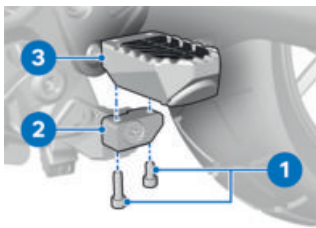

- Position footrest **3** on clamping block **2**.
- Install screws **1**.

 Footrest on clamping block

M6 x 20 / M6 x 12


7 lb/ft (10 Nm)

- Remove and install the footrest on the other side in the same way.

HANDLEBARS


Adjustable handlebars


Have the handlebars adjusted by a repair shop, preferably an authorized BMW Motorrad dealer.

 When adjusting the handlebars, check whether the mirror and windshield will collide.

Where appropriate, adjust the mirror arm accordingly.

–with handlebar risers^{OE}

 The handlebar risers can restrict the free movement of cables and wires. BMW Motorrad recommends setting the handlebars to the upper position (**10°** mark) if the handlebar risers are installed.◀

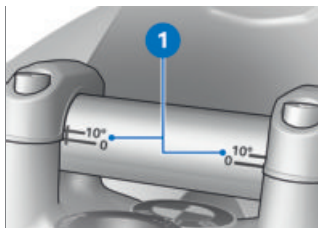

The inclination of the handlebars is adjustable in the areas with the mark **1**.

SEATS


Removing the passenger seat

- Remove the rider's seat.
(124)



- Turn the ignition key **1** clockwise.
- Slide passenger seat **2** forwards and lift up to remove


–with seat heating^{OE}

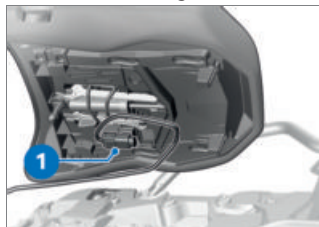

- Disconnect the plug connection **1** of the seat heater.◁
- Lay the passenger seat on a clean, dry surface with the upholstered side down.


Installing the passenger seat

–with seat heating^{OE}

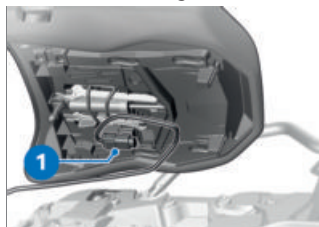


- Connect the plug connection **1** for the seat heater.◁

124 SETTING

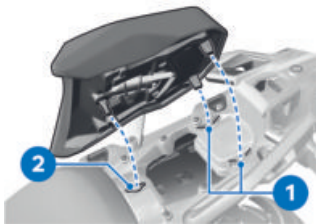

- Fit passenger seat centered in rear mounts **1** and in front mount **2**.
- Slide the passenger seat to the rear (in the direction opposite of the driving direction).
- Check passenger seat for proper fit.




- Firmly press passenger seat **1** downwards.
» Passenger seat audibly engages.
- Install the rider's seat.
( 126)

Removing the rider's seat




- Turn ignition key **1** counter-clockwise and hold while lifting rider's seat **2** in rear area.
- Remove rider's seat **2** from seat bracket **3** toward rear.


—with seat heating^{OE}

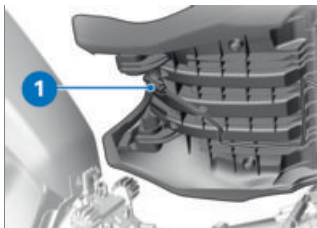


- Disconnect the plug connection **1** of the seat heating.◁
- Lay the rider's seat on a clean, dry surface with the upholstered side down.

Adjusting the seat height and seat angle


- Remove the rider's seat.
( 124)

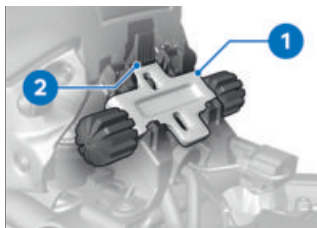


- To remove the front height adjustment **1** push the lock **2** forwards and remove the height adjustment in an upwards direction.

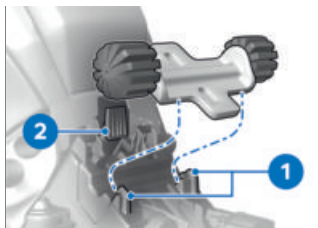

- First, slide the front height adjustment under the mounts **1**. Then press into locking mechanism **2** until it engages.

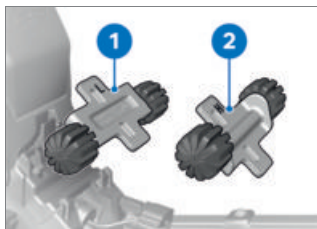


- To set the low seat position, install the front height adjustment in **1** alignment (**L** mark).
- To set the high seat position, install the front height adjustment in **2** alignment (**H** mark).

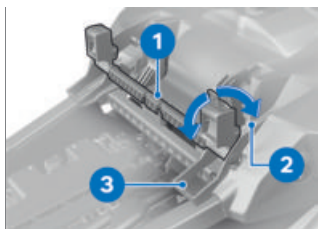


- In order to adjust the low seat position, swivel the rear height adjustment **1** to the **3** position (**L** mark).
- In order to adjust the high seat position, swivel the rear height adjustment **1** to the **2** position (**H** mark).

If seat tilt should be changed:


- Position the front and rear height adjustment differently.
- Install the rider's seat.
( 126)

126 SETTING

Installing the rider's seat –with seat heating^{OE}

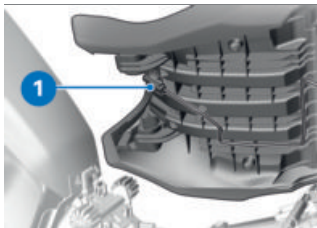

- Connect the plug connection **1** for the seat heater.◁

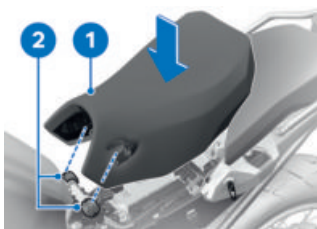

- Insert the rider's seat **1** into the seat mount **2** on the left and right and place it loosely on the motorcycle.
- Press the rider's seat forward slightly in the rear area and then press down firmly until the locking mechanism engages.


RALLYE SEAT

Removing the Rallye seat



- Unlock the seat lock **1** by turning the vehicle key clockwise and hold the vehicle key.
- Lift the seat **2** at the rear and release ignition key.
- Take off the seat and set it on a clean surface with upholstered side facing down.

Observing height adjustment

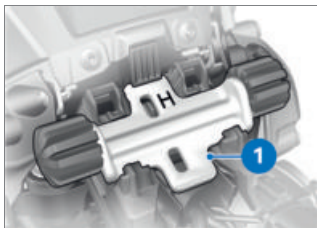


- The front height adjustment **1** must always be set to the high position (marked H).




- The rear height adjustment **1** must always be set to the low position (marked L).

Installing the Rallye seat

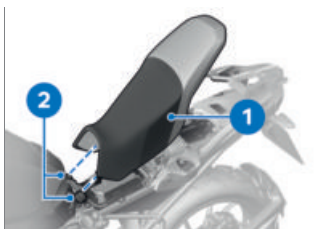

- Insert the Rallye seat **1** into the receptacles **2** on the left and right and then press forward and downward in the rear area until the lock audibly engages.

 To remove and install seat with optional equipment, see the vehicle rider's manual.

SPRING PRELOAD

–without Dynamic ESA^{OE}

Setting

It is essential to set the spring preload to suit the load carried by the motorcycle. Increase spring preload when the vehicle is heavily loaded and reduce spring preload accordingly when the vehicle is lightly loaded.

Adjusting the spring preload at the rear wheel




WARNING

Adjusting the spring preload while riding.

Accident hazard

- Adjust the spring preload only when the motorcycle is stationary.
- Park the motorcycle, making sure the ground is level and firm.

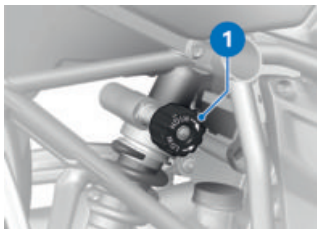

WARNING

Settings for spring preload and spring strut damping that have not been coordinated.

Worse handling.

- Adapt the spring strut damping to the spring preload.
- To increase spring preload, turn the adjustment wheel **1** in the arrow direction **HIGH**.
- To decrease spring preload, turn the adjustment wheel **1** in the arrow direction **LOW**.



Basic setting of spring preload, rear

Turn adjustment wheel to the stop in the **LOW** direction (One-up without load)

Turn adjustment wheel to the stop in the **LOW** direction, then 15 revolutions in **HIGH** direction (One-up with load)



Basic setting of spring preload, rear

Turn adjustment wheel to the stop in the **LOW** direction, then 30 revolutions in **HIGH** direction (Two-up and load)

DAMPING

–without Dynamic ESA^{OE}

Setting

The damping must be adjusted to the road conditions and the spring preload.

- A rough road surface requires softer damping than a smooth road surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjusting damping at the rear wheel

- Park the motorcycle, making sure the ground is level and firm.
- Adjust damping from the left side of the vehicle.



- To increase damping, turn the adjustment screw **1** clockwise.
- To reduce damping, turn the adjustment screw **1** counterclockwise.



Basic setting of rear wheel damping

Turn adjuster wheel as far as possible clockwise, then 8 clicks counterclockwise (One-up without load)

Turn adjuster wheel as far as possible clockwise, then 4 clicks counterclockwise (One-up with load)

Turn adjuster wheel as far as possible clockwise, then 4 clicks counterclockwise (Two-up mode with load)

RIDING

07

SAFETY INSTRUCTIONS	132
REGULAR CHECK	135
STARTING	135
BREAKING IN	138
OFF-ROAD USE	139
SHIFTING	140
BRAKES	141
PARKING THE MOTORCYCLE	143
REFUELING	144
FASTENING MOTORCYCLE IN PLACE FOR TRANS- PORTATION	150

132 RIDING

SAFETY INSTRUCTIONS

Rider's Equipment

Do not ride without the correct clothing. Always wear:

- Helmet
- Rider's suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorized BMW Motorrad Dealer will be happy to advise you and has the correct clothing for every purpose.

Reduced clearance in inclined position

Motorcycles with lowered running gear have less ground clearance in all positions than motorcycles with standard running gear.

WARNING

When cornering with lowered motorcycles, motorcycle parts can contact the road surface sooner than normal.

Accident hazard

- Carefully test the clearance of the motorcycle in an inclined position and adjust your riding style accordingly.

Test the clearance of your motorcycle at an angle in safe situations. Remember to take the limited ground clearance of your vehicle into account when riding over curbs and similar obstacles.

The motorcycle's lowered suspension shortens the spring travel (see the "Technical data" chapter). This may result in reduction of the usual riding comfort. Especially in two-up mode, the spring preload should be adjusted accordingly.

Vehicle load

WARNING

Reduced riding stability caused by overloading and uneven loading

Accident hazard

- Do not exceed the gross weight limit and observe the loading information.
- Adjust the setting of the spring preload and damping for the current gross vehicle weight.
 - with aluminum case^{OA}
- Ensure that case volumes on left and right are equal.

- Make sure that weight is uniformly distributed between right and left.
- Pack heavy pieces of luggage and cargo as low and as close to the center of the motorcycle as possible.
- Observe the maximum payload and maximum speed; also see the Accessories chapter (▶▶▶ 214).◀

–with aluminum topcase^{OA}

- Observe the maximum payload and maximum speed; also see the Accessories chapter (▶▶▶ 215).◀

–with tank bag^{OA}

- Observe the maximum payload of the tank bag.



Payload of tank bag

max 11 lbs (max 5 kg)◀

Speed

If you ride at high speed, always bear in mind that various boundary conditions can negatively affect the vehicle handling of your motorcycle. These include, but are not limited to, the following:

- Settings of spring struts
- Unevenly distributed load
- Loose clothing
- Insufficient tire pressure
- Tire tread in poor condition

Maximum speed with studded or winter tires



DANGER

Maximum speed of the motorcycle is higher than the permissible maximum rated speed of the tires.

Risk of accident due to tire damage at high speed.

- Observe the maximum permissible speed for the tires.

With studded or winter tires, the maximum speed permitted for the tires must be observed. Attach a sticker specifying the maximum speed permitted within the field of view of the instrument cluster.

Risk of poisoning

Exhaust gas contains carbon monoxide, which is colorless and odorless but highly toxic.

WARNING

Harmful exhaust gas

Danger of suffocation

- Do not inhale exhaust fumes.
- Do not run the engine in closed rooms.

WARNING

Inhalation of vapors that are harmful to health

Damage to health

- Do not inhale vapors from operating fluids and plastics.
- Only use the vehicle outdoors.

Burn hazard

CAUTION

Intense heating up of engine and exhaust system while riding

Burn hazard

- After parking the motorcycle, make sure that no persons or objects come into contact with the engine and exhaust system.

WARNING

Opening the radiator cap

Risk of burning

- Do not open the radiator cap when it is hot.
- Check the coolant level exclusively at the expansion tank and top up if necessary.

Catalytic converter

If misfire causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following must be observed:

- Do not run the fuel tank dry.
- Do not run the engine with the spark-plug cap removed.
- Stop the engine immediately if it misfires.
- Use unleaded fuel only.
- Comply with all specified maintenance intervals.

ATTENTION

Unburned fuel in the catalytic converter

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.

Danger of overheating



ATTENTION

Engine idling for a lengthy period while at a standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- After starting, ride off immediately.

Modifications



ATTENTION

Modifications to the motorcycle (e.g. engine control unit, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions, expiration of warranty

- Do not make any modifications.

Always before riding off

- Check operation of the brake system (▣▣▣ 178).
- Check operation of the lighting and signal system.
- Check clutch function (▣▣▣ 182).
- Check tire tread depth (▣▣▣ 185).
- Check tire pressure (▣▣▣ 184).
- Check that the case and luggage are firmly secured.

At every third refueling stop

- Check engine oil level (▣▣▣ 176).
- Check front brake pad thickness (▣▣▣ 178).
- Check rear brake pad thickness (▣▣▣ 179).
- Check front brake fluid level (▣▣▣ 180).
- Check rear brake fluid level (▣▣▣ 181).
- Check the coolant level (▣▣▣ 182).

REGULAR CHECK

Observe checklist

Use the following checklist to check your motorcycle at regular intervals.


STARTING

Starting the engine

- Turn on the ignition. (▣▣▣ 80)
 - » Pre-Ride-Check is carried out. (▣▣▣ 136)
 - » ABS self-diagnosis is performed. (▣▣▣ 137)
 - » DTC self-diagnosis is performed. (▣▣▣ 138)

136 RIDING

- Engage Neutral, or pull back the clutch lever if a gear is engaged.

 You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if it is started with the transmission in neutral and then a gear is engaged before retracting the side stand.

- For cold start and at low temperatures: Pull clutch.

–with M Lightweight battery^{OE}


» The starting response may be affected by low temperatures. Repeated brief load on the battery increases the battery temperature and thus the available services for the engine start.◀



- Press starter button **1**.
 - » Engine starts.
 - » If the engine fails to start, the troubleshooting chart in the chapter Technical Data can provide assistance. (▶▶▶ 232)

Recharge the battery before you attempt to start the engine again, or get a jump start:

- Charge the connected battery. (▶▶▶ 200)
- Jump-starting. (▶▶▶ 197)

 The starting attempt is automatically interrupted if battery voltage is too low.

Pre-Ride-Check

After the ignition is turned on, the instrument cluster performs a test of the indicator and warning lights – what we call the "Pre-Ride-Check". Starting the engine before the test is completed will cancel the remainder of the test.

Phase 1

All indicator and warning lights are turned on.

After a longer standstill of the vehicle, an animation is displayed during the system start.

Phase 2

The general warning light changes from red to yellow.


Phase 3

All of the indicator and warning lights that have been turned on are turned off in reverse order.

If one of the indicator and warning lights was not turned on:

- Have the malfunction corrected as soon as possible at a repair shop, preferably an authorized BMW Motorrad retailer.

–with riding modes Pro^{OE}

 Depending on the riding mode or its configuration, the intervention of electronic stability control systems can be restricted.

Possible restrictions are displayed as a pop-up message, e.g. Caution! ABS setting..

The ABS indicator light flashes irregularly.

You can find more detailed information regarding road handling control systems such as ABS in the chapter "Technology in detail".◀

ABS self-diagnosis

The self-diagnosis routine checks whether the BMW Motorrad Integral ABS Pro is ready for operation. The self-diagnosis starts automatically when you start the ignition.

Phase 1

» Checking system components capable of diagnosis while vehicle is at a standstill.



blinks.

Phase 2

» Check wheel speed sensors while riding off.



blinks.

ABS self-diagnosis completed

» The ABS indicator and warning light goes out.



ABS self-diagnosis routine not completed

ABS is not available, as the self-diagnosis routine was not completed. (The motorcycle must reach a specified minimum speed before the system can check operation of the wheel speed sensors: 3 mph (5 km/h))

If an ABS error is displayed after the ABS self-diagnosis is completed:

- You may continue riding. Bear in mind that neither the ABS function nor the integral function is available.
- Have the malfunction corrected as soon as possible at a specialist workshop,

138 RIDING

preferably an authorized BMW Motorrad retailer.

DTC self-diagnosis

The self-diagnosis routine is determining whether BMW Motorrad DTC is ready for operation. The self-diagnosis runs automatically when you switch on the ignition.

Phase 1

» Checking system components capable of diagnosis while vehicle is at a standstill.



flashes slowly.

Phase 2

» Checking system components capable of diagnosis while riding off.



flashes slowly.

DTC self-diagnosis completed

» The DTC icon is no longer displayed.

- Watch all indicator lights on the display.



DTC self-diagnosis not completed

The DTC function is not available, as the self-diagnosis function has not been completed. (To check wheel speed sensors, motorcycle must reach a minimum speed with engine running: min 3 mph (min 5 km/h))



If a DTC fault is displayed after the DTC self-diagnosis is completed:

- You may continue riding. Please note that the DTC function is restricted or is not available at all.
- Have the malfunction corrected as soon as possible at a specialist workshop, preferably an authorized BMW Motorrad retailer.

BREAKING IN

Engine

- Up to the first break-in inspection, vary the throttle opening and engine-speed range frequently; avoid riding for long periods at a constant speed.
- Choose curvy, slightly hilly routes if possible.
- Observe the engine run-in speeds.

	Engine break-in speeds
	<5000 min ⁻¹ (Mileage 0...621 miles (0...1000 km))
	No full throttle (Mileage 0...621 miles (0...1000 km))
	• Observe mileage, after which the break-in inspection should be performed.
	Mileage until running-in check
	311...746 miles (500...1200 km)

Brake pads

New brake pads must be run in before they achieve their optimum friction force. This initial reduction in braking efficiency can be compensated for by exerting greater pressure on the brake levers.

WARNING

New brake pads

Extension of the braking distance, accident hazard

- Brake early.

Tires

New tires have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tires are run in. This running in procedure is essential if the tires are to achieve maximum grip.

WARNING

Loss of adhesion of new tires on wet roads and at extreme angles

Accident hazard

- Always think well ahead and avoid extreme angles.

OFF-ROAD USE

After riding off-road

Tire pressure

WARNING

When driving off-road, lower tire pressure than riding on paved roads

Risk of accident due to poorer handling characteristics.

- Ensure proper tire inflation pressure.

140 RIDING

Brakes



WARNING

Riding on unpaved or dirty roads

Delayed braking effect due to dirty brake discs and brake pads

- Brake early until the brakes are clean again.



ATTENTION

Riding on unpaved or dirty roads

Increased brake pad wear

- Check the brake pad thickness more often and replace the brake pads sooner.

Spring preload and damping



WARNING

Modified values for spring preload and spring strut damping when riding off-road

Poorer handling characteristics on paved roads

- Set correct spring preload and correct spring strut damping before leaving off-road terrain.

Rims

BMW Motorrad recommends checking the rims for possible damage after riding off-road.

Air cleaner element



ATTENTION

Dirty air filter element

Engine damage

- When driving in dusty terrain, check air filter insert for soiling at short intervals and clean or replace if necessary.

Use under very dusty conditions (deserts, savannas, etc.) requires the use air cleaner elements specially developed for these kinds of applications.


SHIFTING

—with Gearshift Assistant Pro^{OE}

Gear Shift Assistant Pro



When downshifting using the Pro Gear Shift Assistant, the cruise control is automatically deactivated for safety reasons. During upshifting, the cruise control remains active.

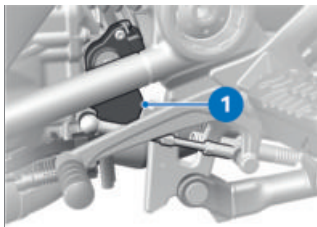

- Engage the gears as usual with the foot-operated gearshift lever.
 - » The Gear Shift Assistant provides assistance for upshifts and downshifts, without the rider having to actuate the clutch or throttle grip.
 - This is not an automatic gearshift system.
 - The rider is an essential part of the system and decides when to shift gears.
 - The sensor **1** on the gearshift shaft detects the intent to shift gears and triggers the shift assistance.
 - » If you are riding at a constant speed in a low gear at high RPMs and attempt to shift gears without clutch control, it can cause a strong load-change response.
 - BMW Motorrad recommends only shifting gears with clutch control in these riding situations.
- Use of the Pro Gear Shift Assistant should be avoided at RPMs within the speed limiter range.
 - » Shift assistance is not available in the following situations:
 - With clutch actuated.
 - Gearshift lever not in its initial position
 - When upshifting with the throttle valve closed (coasting overrun) or when decelerating.
 - When downshifting with the throttle valve open or when accelerating.
 - After a gearshift, you must fully release the gearshift lever before another gear shift with the Gear Shift Assistant Pro can take place.
 - Further information on the Gear Shift Assistant Pro can be found in the chapter "Technology in detail" (▣▣▣▣ 167).

BRAKES

How do you achieve the shortest braking distance?

The dynamic load distribution between the front and rear wheel changes during braking. The more pressure you apply to the brake, the greater the weight transfer to the front

142 RIDING

wheel. Increases in the load on an individual wheel are accompanied by a rise in the effective brake force that the wheel can provide.

To achieve the shortest possible braking distance, the front wheel brake must be applied quickly and with progressively greater levels of force. This procedure provides ideal utilization of the dynamic load increase to the front wheel. The clutch should also be engaged at the same time. With the frequently instructed "emergency braking," in which the brake pressure is generated as quickly as possible and with great force, dynamic load distribution lags behind the progressive increases in deceleration rate and the braking force cannot be completely transferred to the road.

Locking up of the front wheel is prevented by BMW Motorrad Integral ABS Pro.

Descending mountain passes



WARNING

Braking should be done predominantly using the rear wheel brake when riding on downhill routes

Loss of braking effect, destruction of the brakes due to overheating

- Apply the front and rear wheel brake and use the engine brake.

Wet, soiled brakes



WARNING

Decreased braking effect due to moisture and dirt

Risk of accident

- Dry brakes or clean them through braking; if necessary, clean them manually.
- Brake early until the tires have reached their full braking effect again.

Moisture and dirt on the brake discs and the brake pads result in a decrease in the braking effect.

Delayed or decreased braking effect must be expected in the following situations:

- When riding in the rain and through puddles.
- After washing the vehicle.
- When riding on salted roads.
- After working on the brakes due to oil or grease residues.
- When riding on soiled roads or offroad.

ABS Pro

Physical riding limits



WARNING

Braking in curves

Danger of falling despite ABS Pro

- The rider is always responsible for adapting his/her driving style.
- Do not reduce the system's extra safety margin with careless riding or unnecessary risks.

ABS Pro and the supporting function of the Dynamic Brake Control are available in all riding modes except ENDURO PRO.

Falling cannot be excluded

Although ABS Pro and Dynamic Brake Control represent valuable support and an enormous safety advantage for the rider when braking in an inclined position, they by no means rede-

fine the physical riding limits. It is still possible to exceed those limits through misjudgments or riding errors. In extreme cases this may result in a fall.

Use on public roads

ABS Pro and Dynamic Brake Control help make riding your motorcycle on public roads even safer. When braking due to unexpected hazards in curves, locking-up and slipping of the wheels is prevented within the scope of the physical riding limits. In the event of emergency braking, Dynamic Brake Control enhances the braking effect and intervenes if the throttle grip is accidentally actuated during braking.



ABS Pro was not developed to increase the individual braking performance in the inclined position.

PARKING THE MOTORCYCLE

Side stand

- Turn off the ignition. (81)



ATTENTION

Poor ground conditions in area of stand

Component damage cause by tipping over

- Always check that the ground under the stand is level and firm.



ATTENTION

Poor ground conditions in area of stand

Component damage cause by tipping over

- Always check that the ground under the stand is level and firm.



ATTENTION

Loading of the side stand with additional weight

Component damage cause by tipping over

- Do not sit on the motorcycle when it is parked on the side stands.



ATTENTION

Folding in the center stand in case of strong movements

Component damage cause by tipping over

- Do not sit on the vehicle while it is resting on the center stand.

- Fold out side stand and park motorcycle.
- Turn the handlebars to left.
- On slopes point the motorcycle uphill and engage 1st gear.

- Fold down center stand and prop up motorcycle.
- On slopes point the motorcycle uphill and engage 1st gear.

Center stand

- Turn off the ignition. (🔌➔ 81)

REFUELING

Fuel quality Requirement

For optimal fuel consumption, the fuel should be sulfur-free or very low in sulfur content.

**ATTENTION****Refueling with leaded fuel**

Damage to catalytic converter

- Do not refuel with leaded gasoline or gasoline with metallic additives, e.g. manganese or iron.

**ATTENTION****Use of Ethanol E85 as fuel**

Damage to the engine and fuel supply

- Do not refuel with E85, i.e. fuel with an ethanol content of 85 %, or with Flex Fuel.

- Observe the maximum ethanol content of the fuel.



Fuel additives clean the fuel injection system and the combustion area. Fuel additives should be used when refueling with low-quality fuels or during longer stationary periods. Your authorized BMW Motorrad dealer can provide you with more detailed information.



Recommended fuel quality

Super unleaded (max. 15 % ethanol, E15)
89 AKI (95 ROZ/RON)
90 AKI



Alternative fuel quality

Normal unleaded (with performance penalty) (max. 15 % ethanol, E15)
87 AKI (91 ROZ/RON)
87 AKI

- » After refueling with lower quality fuels, there may occasionally be a knocking noise.

Refueling procedure**WARNING****Fuel is highly flammable**

Fire and explosion hazard

- Do not smoke. Never bring a naked flame near the fuel tank.

ATTENTION

Component damage

Component damage due to overfilled fuel tank

- If the fuel tank is overfilled, the excess fuel will flow into the carbon canister and lead to component damage there.
- Only fill the fuel tank to the lower edge of the fuel filler neck.

ATTENTION

Contact of fuel and plastic surfaces

Damage to surfaces (become unattractive or cloudy)


- Immediately clean plastic surfaces after contact with fuel.
- Make sure the ground is level and firm and put the motorcycle on its center stand.




- Open the protective flap **2**.
- Unlock the cap of the fuel tank with your vehicle key **1** clockwise and open.



- Refuel up to the lower edge of the fuel filler neck, but no higher. This is the maximum level.

 If refueling is carried out after running on fuel reserve, the resulting filling capacity must be greater than the fuel reserve so that the new fill level is detected and the fuel reserve indicator light is switched off.

 The "usable fuel quantity" specified in the technical data is the fuel quantity, which can be refueled if the fuel tank was completely emptied, i.e., if the engine dies off due to lack of fuel.



Usable fuel quantity

Approx. 7.9 gal (Approx. 30 l)



Reserve fuel quantity

Approx. 1.1 gal (Approx. 4 l)

- Press the fuel tank cap down firmly to lock it.
- Remove the ignition key and close the protective flap.

Refueling procedure

—with Keyless Ride^{OE}

Requirement

Steering lock is unlocked.



WARNING

Fuel is highly flammable

Fire and explosion hazard

- Do not smoke. Never bring a naked flame near the fuel tank.



WARNING

Escaping of fuel due to expansion under exposure to heat with overfilled fuel tank

Accident hazard

- Do not overfill the fuel tank.



ATTENTION

Contact of fuel and plastic surfaces

Damage to surfaces (become unattractive or cloudy)

- Immediately clean plastic surfaces after contact with fuel.
- Make sure the ground is level and firm and put the motorcycle on its center stand.
- with Keyless Ride^{OE}
- Turn off the ignition. (▶▶▶ 83)



After the ignition is switched off, the fuel filler cap can be opened within the specified run-on time even without the radio-operated key being within the reception area.



After-running period for opening the fuel filler cap

2 min

- » There are **2 ways** to open the fuel filler cap:

148 RIDING


- Within the after-run period.
- After the after-run period is over.

Version 1

-with Keyless Ride^{OE}

Requirement

Within the after-run period

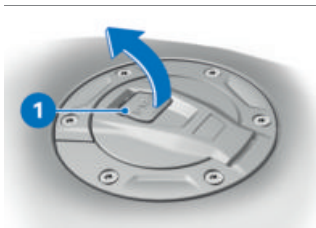

- Slowly pull up the fuel cap tab **1**.
 - » Fuel filler cap unlocked.
- Open fuel filler cap completely.

Version 2

-with Keyless Ride^{OE}

Requirement


After the after-run period is over


- Bring radio-operated key into reception range.
- Slowly pull up tab **1**.
 - » The indicator light for the radio-operated key blinks as long as the radio-operated key is being searched for.



- Slowly pull up the fuel cap tab **1** again.
 - » Fuel filler cap unlocked.
- Open fuel filler cap completely.



- Refuel with a fuel quality as specified above, but no higher than the lower edge of the fuel filler neck. This is the maximum level.

 If refueling is carried out after running on fuel reserve, the resulting filling capacity must be greater than the fuel reserve so that the new fill level is detected and the fuel reserve indicator light is switched off.

 The "usable fuel quantity" specified in the technical data is the fuel quantity, which can be refueled if the fuel tank was completely emptied, i.e., if the engine dies off due to lack of fuel.

	Usable fuel quantity
Approx. 7.9 gal (Approx. 30 l)	
	Reserve fuel quantity
Approx. 1.1 gal (Approx. 4 l)	


- Press fuel filler cap of fuel tank down firmly.
 - » Fuel filler cap snaps in audibly.
 - » The fuel cap automatically locks after the after-run period is over.
 - » The engaged fuel cap snaps in immediately when the steering lock is locked or the ignition is turned on.

Open fuel filler cap emergency release

–with Keyless Ride^{OE}

The fuel filler cap cannot be opened.

- Have the fault rectified as soon as possible by a repair shop, preferably an authorized BMW Motorrad dealer.

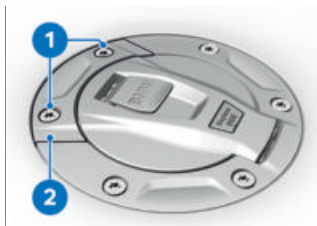


- Remove screws **1**.
- Remove emergency release **2**.
 - » Fuel filler cap unlocked.
- Open fuel filler cap completely.
- Refueling. (▶▶▶ 147)
- Close fuel filler cap emergency release. (▶▶▶ 149)

Close fuel filler cap emergency unlocking

–with Keyless Ride^{OE}

Requirement

Fuel filler cap is closed.

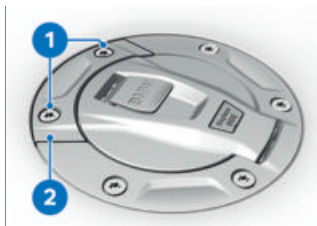

- Position the emergency unlocking **2**.
- Install screws **1**.

150 RIDING

FASTENING MOTORCYCLE IN PLACE FOR TRANSPORTATION

- Protect all components from being scratched where tensioning belts are routed, for example, by using adhesive tape or soft cloths.



ATTENTION

Motorcycle tips to the side when raising

Component damage cause by tipping over

- Secure the motorcycle against tipping to the side, preferably with the assistance of a second person.
- Push the motorcycle onto the transportation flat and hold it in position; do not place it on the side stand or center stand.

- Secure the motorcycle from tipping with support from a second person.



ATTENTION

Pinching of components

Component damage

- Do not pinch components, e.g. brake lines or wiring harnesses.
- Pass the luggage straps on the left and right through the fork bridge and strap the motorcycle down.



- Fasten and tighten the tensioning belts at the rear on

the brackets for the passenger footrests on both sides.

- Tension all luggage straps evenly so that the vehicle is securely fastened.

TECHNOLOGY IN DETAIL

08

GENERAL NOTES	154
ANTILOCK BRAKING SYSTEM (ABS)	154
DYNAMIC TRACTION CONTROL (DTC)	157
DYNAMIC ENGINE BRAKE CONTROL (MSR)	159
DYNAMIC ESA	160
RIDING MODE	160
DYNAMIC BRAKE CONTROL	165
TIRE PRESSURE MONITOR (RDC)	166
GEAR SHIFT ASSISTANT	167
HILL START CONTROL	169
SHIFTCAM	170
ADAPTIVE HEADLIGHT	171

GENERAL NOTES

More information on the topic of technology is available at bmw-motorrad.com/technik.

ANTILOCK BRAKING SYSTEM (ABS)

Partially integral brake

Your motorcycle is equipped with a partially integral brake configuration. In this brake system, both front and rear wheel brakes are applied simultaneously when you pull the brake lever. The footbrake lever acts only on the rear wheel brake. BMW Motorrad Integral ABS Pro adapts the braking force distribution between the front and rear wheel brakes during braking with ABS control to suit the load carried by the motorcycle.



ATTENTION

Attempt at a burn-out despite integral function

Damage to rear-wheel brake and clutch

- Do not perform burn-out.

How does ABS work?

The maximum braking force that can be transferred to the road surface is partially dependent on the friction coefficient of the road surface. Gravel, ice, snow and wet roads offer a considerably lower friction coefficient than a dry, clean asphalt surface. The poorer the friction coefficient of the road surface is, the longer the braking distance will be.

If the maximum transferable braking force is exceeded when the rider increases the brake pressure, the wheels begin to lock and driving stability is lost, and a fall can result. Before this situation occurs, ABS is activated and the brake pressure is adjusted to the maximum transferable braking force. This enables the wheels to continue to turn and maintains driving stability regardless of the road surface condition.

What happens when rough roads are encountered?

Bumpy or rough roads can briefly lead to a loss of contact between the tires and the road surface, until the transferable braking force is reduced to zero. If the brakes are ap-

plied in this situation, the ABS must reduce the brake pressure to ensure riding stability when contact to the road is restored. At this point in time, the BMW Motorrad Integral ABS Pro must assume extremely low friction coefficients (gravel, ice, snow) so that the running wheels turn in every imaginable case and the riding stability is ensured. After detecting the actual conditions, the system adjusts the optimum brake pressure.

In what ways is the BMW Motorrad Integral ABS Pro noticeable to the rider?

If the ABS system must reduce the braking forces due to the conditions described above, then vibrations can be felt at the handbrake lever.

If the brake lever is pulled, then brake pressure is built up at the rear wheel with the integral function. If the footbrake lever is not actuated until after this, the brake pressure already built up can be felt as counter-pressure earlier than when the footbrake lever is actuated before or together with the brake lever.

Lifting off rear wheel

However, during extremely heavy and rapid decelerations it is possible that the BMW Motorrad Integral ABS Pro cannot prevent the rear wheel from lifting off the ground. In these cases, the motorcycle can also flip end over end.



WARNING

Lifting off of the rear wheel due to heavy braking

Accident hazard

- When braking heavily, bear in mind that the ABS control cannot always be relied on to prevent the rear wheel from lifting off the ground.

What are the design features of the BMW Motorrad Integral ABS Pro?

The BMW Motorrad Integral ABS Pro ensures stability on all surfaces, within the limits set by riding dynamics. The system is not optimized for the special conditions encountered under the extreme conditions of competitive off-road and racetrack use. Handling should be adopted to riding skills and road conditions.

156 TECHNOLOGY IN DETAIL

Special situations

To detect the tendency of the wheels to lock up, the speeds of the front and rear wheel are compared. If implausible values are detected over a longer period of time, the ABS function is deactivated for safety reasons and an ABS error is indicated. A self-diagnosis routine must be completed before the error will be displayed.

Apart from problems with the BMW Motorrad ABS, unusual riding conditions can also cause a fault message to be generated:

- Warm-up on the center or auxiliary stand at idle or with gear engaged.
- Rear wheel locked-up for a longer period of time by engine brake, e.g. when riding downhill on slippery surfaces.

Should a fault code occur due to an unusual driving condition, the ABS function can be reactivated by switching the ignition off and then on again.

How important is regular maintenance?



WARNING

Failure to have maintenance performed on the brake system regularly.

Accident hazard

- To ensure that the ABS is in a properly maintained condition, it is vital that the specified service intervals be observed.

Reserves for safety

The potentially shorter stopping distances which BMW Motorrad Integral ABS Pro permits must not be used as an excuse for a careless riding style. ABS is primarily a means of ensuring a safety margin in genuine emergencies.



WARNING

Braking in curves

Risk of accident despite ABS

- The rider is always responsible for adapting his/her driving style.
- Do not reduce the additional safety function with careless riding or unnecessary risks.

Further development of ABS to ABS Pro

In the past, the BMW Motorrad ABS system provided for a very high level of safety while braking during straight-ahead riding. Now ABS Pro also offers increased safety even when braking in curves. ABS Pro prevents the wheels from locking up, even in the event that the brakes are applied quickly. ABS Pro reduces abrupt changes in steering forces, especially during shock braking, and therefore decreases the risk of the motorcycle lifting off the ground inadvertently.

ABS control

From a technical standpoint, ABS Pro adjusts the ABS control to the angle of inclination of the motorcycle in dependence on the respective riding situation. Signals for the roll and yaw rate and the lateral acceleration are used to determine the inclination of the motorcycle.

With an increasing inclination, the brake pressure gradient is increasingly limited at the start of braking. This results in a slower pressure buildup. In

addition, the pressure modulation in the range of the ABS control is more uniform.

Advantages for the rider

The advantages of ABS Pro for the rider are sensitive response and high braking and riding stability with the best possible deceleration, even in curves.

DYNAMIC TRACTION CONTROL (DTC)

How does traction control work?

The traction control compares the wheel centrifugal velocities of the front and rear wheels. The slip, and with it the stability reserves at the rear wheel, are determined from the speed difference. The engine control adapts the engine torque when the slip limit is exceeded. BMW Motorrad DTC is designed as an assistance system for the rider and for riding on public roads. The extent to which the rider affects DTC control can be considerable (weight shifts when cornering, loose luggage on the motorcycle), especially when approaching the limits imposed by the laws of physics.

158 TECHNOLOGY IN DETAIL

The ENDURO riding mode should be activated for off-road riding. In this mode, the adjusting intervention by the DTC is performed later, enabling controlled drifting.

The system is not optimized for the special requirements encountered under the extreme conditions of competitive off-road and racetrack use. The BMW Motorrad DTC can be switched off in such instances.



WARNING

Risky riding style

Risk of accident despite DTC

- The rider is always responsible for adapting his/her driving style.
- Do not reduce the system's extra safety margin with careless riding or unnecessary risks.

Special situations

As the angle of inclination increases, the capacity to accelerate is more and more limited in accordance with the laws of physics. This can result in reduced acceleration when coming out of very tight curves.

To detect spinning or slipping away of the rear wheel, the rotational speeds of the front and rear wheel are compared and the angle is considered, for example.

If the values for the lean angle are detected to be implausible for a long period, a substitute value is used for the angle, or the DTC function is turned off. In these cases, a DTC fault is displayed. A self-diagnosis must be completed before the fault message can be displayed. Under the following unusual riding conditions, BMW Motorrad Traction Control may be deactivated automatically.

Unusual riding conditions:

- Riding on the rear wheel (wheelie) for an extended period.
- Rear wheel spinning in place with front wheel brake engaged (burn out).
- Warming up the engine on an auxiliary stand in neutral or with gear engaged.

On a slippery surface, the throttle grip should never be suddenly throttled back completely unless the clutch is disengaged at the same time. The engine braking torque can cause the rear wheel to slip, resulting in an unstable riding condition. This case cannot be controlled by the BMW Motorrad DTC. Engine drag torque control prevents this unstable riding state.

DYNAMIC ENGINE BRAKE CONTROL (MSR)

–with riding modes Pro^{OE}

How does engine drag torque control work?

The purpose of the engine drag torque control is to safely prevent unstable riding conditions that are related to excess drag torque at the rear wheel. Depending on the road condition and riding dynamics, excess drag torque can make the drive slip at the rear wheel increase severely and impede riding stability. The dynamic engine brake control limits slip at the rear wheel to a safe, setpoint slip that is dependent on the mode and angle.

Causes of excess slip at the rear wheel:

- Riding in coasting overrun on a road with low coefficient of friction (e.g. wet leaves).
- Hopping when shifting gears down.
- Hard brake onset in sporty riding style.

Like the DTC traction control, the dynamic engine brake control compares the wheel circumferential velocities of the front and rear wheel. With the aid of more information on the angle, the dynamic engine brake control can determine the slip or the stability reserve at the rear wheel.

If the slip exceeds the respective limit value, the engine torque is increased by slightly opening the throttle valves. The slip is reduced, and the vehicle is stabilized.

Effect of the engine drag torque control

- In ECO, RAIN and ROAD riding modes: Maximum stability.
- In the DYNAMIC and DYNAMIC PRO riding modes: High stability.
- In the ENDURO riding mode: Minimum stability.

160 TECHNOLOGY IN DETAIL

–In ENDURO PRO riding mode, dynamic engine brake control is disabled.

DYNAMIC ESA

–with Dynamic ESA^{OE}

Riding position compensation

The Dynamic ESA electronic chassis and suspension adjustment can automatically adapt your motorcycle to the load. If the spring preload is set to *Auto*, the driver does not have to worry about adjusting the load.

When the motorcycle is started and while it is being driven, the system monitors the compression of the rear wheel and corrects the spring preload to ensure that the correct driving position is set. The damping is also automatically adjusted to the load.

Using ride height sensors, Dynamic ESA detects the movements of the chassis and suspension and responds to them by adjusting the EDC valves. As a result, the chassis and suspension is adjusted to the conditions of the surface. Dynamic ESA calibrates itself at regular intervals to ensure

that the system is operating correctly.

Adjustment options

Damping modes

- Road: Damping for comfortable road travel
- Dynamic: Damping for dynamic road travel
- Enduro: Damping for off-road riding

Load settings

- Auto: Active riding position compensation with automatic adjustment of spring preload and damping
- Min: Minimum spring preload
- Max: Maximum spring preload (for off-road use)
- The Min and Max spring preloads may be selected by the driver, but they cannot be changed. The riding position compensation function is deactivated in the Min and Max settings.

RIDING MODE

Selection

To adjust the motorcycle to the road condition and the desired riding experience, you can select from the following riding modes:

- ECO
- RAIN
- ROAD (standard mode)
- with riding modes Pro^{OE}
- ENDURO
- DYNAMIC
- ENDURO PRO
- DYNAMIC PRO

With OE Pro riding modes, the ROAD, RAIN, ECO and ENDURO riding modes are always activated from the factory. The other riding modes can be selected in the riding mode pre-selection. Only up to a maximum of four riding modes can be selected at a time.

For each of these riding modes, a setting designed to complement the systems DTC, ABS and MSR as well as for the engine characteristics is available.

-with Dynamic ESA^{OE}
Coordination of the Dynamic ESA also depends on the selected riding mode.

DTC can be switched off in any riding mode. The following explanations always refer to the riding safety systems that are turned on.

Throttle response

- In ECO riding mode: Particularly restrained
- In the RAIN and ENDURO riding modes: Restrained
- In the ROAD and ENDURO PRO riding modes: Optimum
- In the DYNAMIC and DYNAMIC PRO riding modes: Direct
- In the DYNAMIC PRO and ENDURO PRO riding modes, the throttle response can be set differently via the SETUP (▣▣▣▣▶ 96).

ABS Setting

- In the ROAD, DYNAMIC, ENDURO and ENDURO PRO riding modes, the ABS setting corresponds to the respective riding mode.
- In the ECO and RAIN settings, the ABS setting corresponds to the ROAD riding mode.
- In the DYNAMIC PRO riding mode, the ABS setting corresponds to the DYNAMIC riding mode.
- In the DYNAMIC PRO and ENDURO PRO riding modes, the ABS can be set up differently using the SETUP (▣▣▣▣▶ 99).

162 TECHNOLOGY IN DETAIL

Coordination

- In the ECO, RAIN, ROAD, DYNAMIC and DYNAMIC PRO riding modes, ABS is adjusted to road use.
- In ENDURO riding mode, ABS is set for off-road use with road tires.
- In riding mode ENDURO PRO, there is no ABS control on the rear wheel when the foot-brake lever is actuated. The ABS is adjusted to off-road use with cleated tires.

Rear wheel lift-off detection

- In the ECO, RAIN, ROAD and ENDURO riding modes, the rider is given maximum support by the rear wheel lift-off detection.
- In the DYNAMIC and DYNAMIC PRO riding modes, the rear wheel lift-off detection offers reduced support and permits gentle lift-off of the rear wheel.
- The rear wheel lift-off detection is disabled in ENDURO PRO riding mode.

ABS Pro

- In the ECO, RAIN and ROAD riding modes, the ABS Pro is available to its full capacity.
- In the DYNAMIC, DYNAMIC PRO and ENDURO riding modes, the support of

ABS Pro is reduced compared to ECO, RAIN and ROAD.

- In the ABS setting DYNAMIC PRO, ABS Pro is not available.
- In the ABS setting ENDURO PRO, ABS Pro is not available. It can be switched on by switching to the ABS setting ENDURO.

DTC

Tires

- In the DTC settings RAIN, ROAD and DYNAMIC, the DTC is set for road use with road tires.
- In the DTC setting ENDURO, the DTC is set for off-road use with road tires.
- In the DTC setting ENDURO PRO, DTC is adjusted to off-road use with cleated tires.

Riding stability

- In the DTC setting RAIN, DTC intervenes early enough to ensure that maximum riding stability is achieved.
- In the DTC settings of the ECO, ROAD and DYNAMIC PRO riding modes, the intervention of the DTC takes place later than in the RAIN riding mode. Rear wheel spinning without

traction is avoided wherever possible.

- In the RAIN and ROAD DTC settings, the front wheel is prevented from lifting off.
- In the DTC setting DYNAMIC, the DTC intervenes later than in the DTC setting ROAD, which enables minor drifts at the end of curves and brief wheelies.
- In the DTC setting ENDURO, the DTC intervenes even later and is set to off-road use so that longer drifts and brief wheelies are possible at the end of curves.
- In the DTC setting ENDURO PRO, the DTC control assumes that cleated tires are used for off-road riding. The front wheel lift-off detection is turned off, which enables wheelies of any duration and height. In extreme cases, the vehicle can roll over backward!

In the RAIN, ROAD, DYNAMIC, and ENDURO riding modes, the DTC setting corresponds to the riding mode.

In the ECO and DYNAMIC PRO settings, the DTC setting corresponds to the ROAD riding mode.

In the ENDURO PRO and DYNAMIC PRO riding modes, the DTC can be set differently (▣▣▣ 99).

Switchover

Riding modes can be changed when the vehicle is at a standstill with the ignition switched on. A changeover while riding is possible under the following conditions:

- No drive torque at rear wheel.
- No brake pressure in the braking system.

For a changeover while riding, the following steps must be carried out:

- Turn back throttle grip.
- Do not actuate brake lever.
- Deactivate the adaptive cruise control.

First, the desired riding mode is preselected. The switchover does not take place until the affected systems are in the required state.

The Selection menu does not disappear from the display until the riding mode has been switched over.


164 TECHNOLOGY IN DETAIL

ECO mode with ShiftCam technology

The ShiftCam technology bridges the gap between maximum dynamics and maximum efficiency. While the full load cams make the full valve stroke available for maximum combustion chamber filling and high power output, the partial load cams open the intake valves significantly less and at different widths. The gas exchange losses are reduced by de-throttling, friction is reduced, the mixture is agitated more thoroughly and burned more effectively, and the fuel consumption drops.

The ECO mode supports the rider by means of the ECO indicator and engine characteristics (E-gas adjustment) in the targeted operation of the combustion engine within the operating range of the partial load cam, which is the optimum for consumption, and thus to achieve a maximum range. The fill level of the green bar of the ECO indicator in the instrument cluster visualizes whether the drive is operating in the consumption-optimized range of the partial load cam

and, if so, at which distance to the switching threshold. The length of the bar here represents the remaining load reserve to the point of the switch to the full load cam. The color turns gray if the load requirement increases and a change to the full load cam has taken place. The ECO display varies depending on the selected gear, the load requirement and rotational speed. Even outside the operating range of the partial load cam, when the bar is gray, the ECO mode provides advantages with regard to an efficient riding style by reducing the maximum available torque and peak power output.

 Due to of the reduced acceleration capability in the ECO mode, it is recommended that the riding mode be changed before attempting critical passing maneuvers with a heavy vehicle load or in two-up operation.

Applying a defensive riding style can further reduce fuel consumption (▮▮▮▮▶ 170).

DYNAMIC BRAKE CONTROL

–with riding modes Pro^{OE}

Dynamic Brake Control function



The Dynamic Brake Control function is active in all riding modes. It can only be deactivated in the DYNAMIC PRO riding mode by individually adjusting the ABS.

The Dynamic Brake Control function helps the rider in the event of emergency braking.

Detection of emergency braking

–Emergency braking is detected when the front wheel brake is applied quickly and with force.

Behavior during emergency braking

–If emergency braking is applied at a speed of more than 10 km/h, in addition to the ABS function, the Dynamic Brake Control function will also be activated.

–In the event of partial braking with high brake pressure gradients, Dynamic Brake Control will increase the integral brake pressure on the rear wheel. This shortens the

braking distance, enabling controlled braking.

Behavior in the event of accidental activation of the throttle grip

–If the throttle grip is accidentally actuated during emergency braking (throttle position >5%), the intended braking effect is ensured by the Dynamic Brake Control ignoring the opening process of the throttle grip. This ensures the effectiveness of emergency braking.

–If the gas is shut off (throttle position <5%) during the intervention of the Dynamic Brake Control, the engine torque required by the ABS brake system will be restored.

–If hazard braking is stopped and the throttle grip is still under actuation, the Dynamic Brake Control adjusts the engine torque back to the rider's choice.

TIRE PRESSURE MONITOR (RDC)

–with tire pressure monitor (TPM)^{OE}

Operation

A sensor located in each tire monitors the air temperature and the inflation pressure inside the tire and transmits this information to the control unit. The sensors are equipped with a centrifugal controller, which does not enable the transmission of the measured values until the minimum speed is exceeded for the first time.



Minimum speed for the transmission of the RDC measured values:

min 19 mph (min 30 km/h)

Before initial reception of the tire pressure, -- is shown in the display for each tire. The sensors continue to transmit the measured readings for some time after the vehicle comes to a stop.



Transmission time of the measured values after vehicle standstill:

min 15 min

If an RDC control unit is installed but the wheels have

no sensors, a fault message is generated.

Tire inflation pressure ranges

The RDC control unit distinguishes between three inflation pressure ranges matched to the motorcycle:

- Tire pressure within the permissible tolerance
- Tire pressure within the limit range of the permissible tolerance
- Tire pressure outside of the permissible tolerance

Temperature compensation


The tire pressure is temperature dependent, i.e. it increases or decreases together with the tire air temperature. The tire temperature is dependent on the outside temperature, the riding style and the length of the journey.

The tire pressures are shown in the multifunction display with temperature compensation and are always based on a tire air temperature of 68 °F (20 °C). Tire pressure gauges at filling stations do not compensate for temperature; the tire pressure that is measured depends on the tire air temperature. As a result, in most cases the values

displayed there do not match the values shown in the display.

Tire pressure adjustment

Compare the RDC value in the instrument cluster with the value on the back cover of the rider's manual. The difference between the two values must be compensated with the tire pressure gauge at the filling station.

	Example
According to the rider's manual, the tire pressure should have the following value:	
36.3 psi (2.5 bar)	
The following value is displayed in the instrument cluster:	
33.4 psi (2.3 bar)	
The shortfall is thus:	
2.9 psi (0.2 bar)	
The tester at the filling station shows:	
34.8 psi (2.4 bar)	
To produce the correct tire pressure, this must be increased to the following value:	
37.7 psi (2.6 bar)	

GEAR SHIFT ASSISTANT

–with Gearshift Assistant Pro^{OE}

Gear Shift Assistant Pro

Your motorcycle is equipped with the Gear Shift Assistant Pro originally developed for racing but now specially adapted for touring use. It allows you upshift and downshift under almost any load conditions and in virtually all engine-speed ranges without operating the clutch or accelerator.

Benefits

- 70-80 % of all gear shifts can be performed without using the clutch.
- Less movement between rider and passenger due to shorter gear-change intervals.
- Throttle valve does not have to be closed when changing gear under acceleration.
- During deceleration and downshifts (throttle plate closed) the system blips the throttle valve to obtain the correct engine speed.
- Shifting times are faster than when the clutch is used to shift gears.

168 TECHNOLOGY IN DETAIL

For the system to detect the rider's intention to change gears, the gearshift lever previously not operated must be moved against the spring force by a certain amount of "overtravel" in the desired direction with a normal to brisk action and held in that position until the gear change is completed. A further increase of the force applied to the gearshift lever during the gear-shift operation is not necessary. After the gear change is completed, the gearshift lever must be fully released before the Gear Shift Assistant Pro can execute a new gear change. The load condition (throttle position) should remain constant both prior to and during execution of gear shifts using the Gear Shift Assistant Pro. Changing the throttle position during the gear-shift operation may cause the function to abort and/or the gear change to fail. The Gear Shift Assistant Pro does not provide support when gear shifts are made with clutch control.

Downshifts

- Downshifts are assisted up to the speed at which the engine reaches maximum rpm in the gear to be engaged. Over-revving is thus prevented.



Maximum engine speed

max 9000 min⁻¹

Upshifts

- Upshifting is only possible if the current RPM is higher than the release threshold for the next higher gear.
- The engine speed is thus prevented from dropping below idle speed.



Idle speed

1050 min⁻¹ (Engine at operating temperature)



Release thresholds


1st gear
min 1350 min⁻¹

2nd gear
min 1400 min⁻¹

3rd gear
min 1450 min⁻¹

4th gear
min 1500 min⁻¹

5th gear

 Release thresholds
min 1550 min ⁻¹
6th gear
min 1600 min ⁻¹

HILL START CONTROL

–with riding modes Pro^{OE}

Hill Start Control function

The Hill Start Control drive-off assistant function prevents uncontrolled rolling back on slopes by means of targeted intervention in the partial integral ABS brake system, without the rider having to operate the brake lever continuously. When the Hill Start Control is activated, the pressure in the rear brake system is built up so that the motorcycle remains in position on an incline.

Effects of the holding pressure on the behavior when driving off

–If the rider uses low brake pressure to stop, only a low holding pressure is built up. The brake is released quickly when riding off, making it possible to ride off more smoothly. Additional turning of the throttle grip is hardly required.

–If the rider uses high brake pressure to stop, a high holding pressure is built up. The brake is a bit slower to release when riding off. More torque is required to ride off, making additional turning of the throttle grip necessary.

Behavior when the vehicle is rolling back or slipping

–If the vehicle rolls with the Hill Start Control active, the holding pressure is increased.
–If the rear wheel slips, the brake is released again after approx. 1 m. This prevents the vehicle from slipping with a locked rear wheel, for example.


Releasing the brake when stopping the engine

The Hill Start Control is deactivated when the engine is switched off using the emergency-off switch or when the side stand is folded down. In addition to indicator and warning lights, the following vehicle behavior should make the rider aware that the Hill Start Control is deactivated:

170 TECHNOLOGY IN DETAIL

Brake warning jerk

- The brake is released briefly and is immediately reactivated.
- This causes a jerking behavior that the rider can feel.
- The brake is released slowly.
- The vehicle is unbraked.
- The rider must brake the vehicle manually.

 When the ignition is switched off, the holding pressure is built up immediately and without brake warning jerk.

SHIFTCAM

Principle of ShiftCam function

The motorcycle is equipped with the BMW ShiftCam technology - a technique for varying the valve timing and the valve stroke on the intake side. The centerpiece of this technology is a one-piece intake trip camshaft that has two cams per valve to be actuated: one for partial load and one for full load. The partial load cam has been developed with regard to fuel economy optimization and smooth running. The partial load cam reduces both the valve timings adapted for this purpose and the intake valve stroke. Furthermore, the intake

cams for the left and right intake valve differ in stroke and angle position when the partial load cam is activated. This causes a staggered opening of the two intake valves, which have different widths. The advantage is that the fuel-air mixture flowing into the combustion chamber is more strongly swirled and more effectively burned. Overall, this results in optimal fuel efficiency and noticeably improves the smoothness of running. The full load cam is optimized for performance and releases the maximum intake valve stroke. In order to vary the valve timing and the valve stroke, the intake camshaft is shifted axially. For this purpose, the pins of an electromechanical actuator mesh with a shift gate on the intake camshaft. This allows for the actuation of the intake valves depending on load and motor speed and, as a result, an uncompromising symbiosis of performance and low fuel consumption.

ADAPTIVE HEADLIGHT

–with Adaptive Lights^{OE}

How do the adaptive headlights work?

The standard installed dimming unit in the headlight consists of two reflectors that generate low-beam headlights using LED. Ride height sensors at the front and rear wheel suspension provide data for continuous headlight range control. Thanks to the pitching compensation, the light always illuminates the optimal, preset area when riding on straight stretches of road, regardless of the riding conditions and load status. Using Adaptive Headlights, the dimming unit additionally rotates around an axis, depending on the angle, and compensates for the angle of roll of the vehicle. The angle of rotation is $70^\circ (\pm 35^\circ)$.

In addition to the pitching compensation, therefore, the low-beam headlight is adjusted to compensate for the lean angle during riding. Both movements are overlaid so that a highlight in the curve results. This results in significantly improved illumination of the road when riding around curves and thus

an enormous increase in active safety.

MAINTENANCE

09

GENERAL NOTES	174
ONBOARD TOOL SET	175
FRONT WHEEL STAND	175
ENGINE OIL	176
BRAKE SYSTEM	178
CLUTCH	182
COOLANT	182
TIRES	184
RIMS	185
WHEELS	185
AIR FILTER	192
LIGHT SOURCES	194
JUMP-STARTING	197
BATTERY	199
FUSES	203
DIAGNOSTIC CONNECTOR	205

GENERAL NOTES

The "Preventive maintenance" chapter describes work involving the checking and replacement of wearing parts that can be performed with a minimum of effort.

If specific tightening torques are to be taken into account for installation, these are listed. An overview of all required tightening torques is contained in the "Technical data" chapter.

Special tools and thorough specialized knowledge are required to carry out some of the work described here. If in doubt, contact a repair shop, preferably an authorized BMW Motorrad dealer.

Microencapsulated screws

The microencapsulation is a chemical threadlocker. An adhesive is used to create a solid connection between screw and nut or component. Microencapsulated screws, therefore, are suitable for single use only. Regardless of the removal or installation, the hole must always be cleaned. After removal, the internal thread must be cleaned to remove adhesive. During installation, a new mi-

croencapsulated screw must be used. Before removal, make sure that you have suitable tools for cleaning the thread and a replacement screw. If you carry out the work improperly, the locking function of the screw might no longer be guaranteed, which puts you in danger!


Disposable cable ties

Occasionally cables and wires are secured with disposable cable ties. To prevent cables and wires from getting damaged during removal, a suitable tool must be used, e.g. diagonal cutting pliers.

For reinstallation, cables and wires that were cut free must be secured with new disposable cable ties.

Protrusions should be cut off with cable tie pliers.

ONBOARD TOOL SET

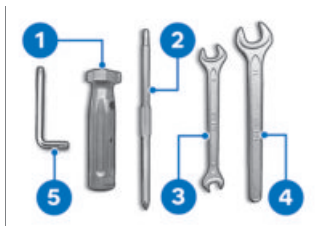

- 1 Screwdriver handle
 - Use with screwdriver insert
 - Top up engine oil. (▣▣▣ 177)
- 2 Reversible screwdriver insert
 - Phillips PH1 and Torx T25
 - Remove the battery cover. (▣▣▣ 201)
 - Topping up coolant (▣▣▣ 183).
- 3 Open-ended wrench
 - Key range: 8/10 mm
 - Removing battery (▣▣▣ 201).
- 4 Open-ended wrench
 - Key range: 14 mm
 - Adjust the mirror arm. (▣▣▣ 114)
- 5 Torx wrench T30
 - Adjusting the gearshift lever from below

FRONT WHEEL STAND

Attaching the front wheel stand



ATTENTION

Use of BMW Motorrad front wheel stand without additional center or auxiliary stand

Component damage cause by tipping over

- Place the motorcycle on a center or auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.
- Ensure that the motorcycle is standing securely.
- Make sure the ground is level and firm and put the motorcycle on its center stand.



- For a description of the correct installation, please refer to the instructions for the front wheel stand.

176 MAINTENANCE

- BMW Motorrad offers a suitable auxiliary stand for each vehicle. Your authorized BMW Motorrad dealer will be very happy to assist you in choosing the suitable auxiliary stand.

ENGINE OIL

Checking the engine oil level


- Make sure ground is level and firm and place the motorcycle on its center stand with the engine at operating temperature.


ATTENTION

Misinterpretation of the oil capacity because the oil level is temperature-dependent (the higher the temperature, the higher the oil level)

Engine damage from incorrect filling

- Only check the oil level after an extended ride or when the engine is warm.
- Run the engine in Neutral until the fan starts.
- Turn off engine at operating temperature.
- Wait five minutes to allow oil to drain into the oil pan.

-  BMW Motorrad recommends occasionally checking the engine oil after a journey of min 31 miles (min 50 km) in order to reduce the environmental impact.

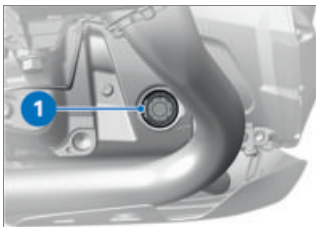


ATTENTION

Lateral tipping of the vehicle

Component damage cause by tipping over

- Secure the vehicle from tipping over laterally, preferably with the support of a second person.
- Read oil level on the display **1**.

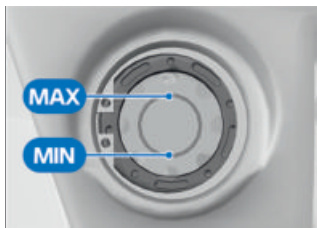

Specified level of engine oil

Between **MIN** and **MAX** mark

If the oil level is below the **MIN** mark:

- Top up engine oil. (☞ 177)

If the oil level is above the **MAX** mark:


- Have the oil level corrected at a repair shop, preferably an authorized BMW Motorrad dealer.

Topping up the engine oil

- Park the motorcycle, making sure the ground is level and firm.
- Checking the engine oil level



It is possible to misinterpret the oil capacity as the oil level depends on the temperature.

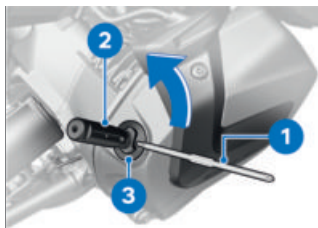

- Clean the area around the oil filler opening.
- To be able to apply force more easily, insert the interchangeable screwdriver bit **1** Torx-end first, into the screwdriver handle **2** (from on-board tool kit).
- Position the specified tool from the on-board tool kit on the cap **3** of the oil filler opening and turn counter-clockwise to remove it.
- Check engine oil level. (☞ 176)



ATTENTION

Use of too little or too much engine oil

Engine damage from incorrect filling

- Always make sure that the oil level is correct.
- Top up the engine oil to the specified level.

178 MAINTENANCE



Engine oil, quantity for topping up

max 0.8 quarts (max 0.8 l)
(Difference between **MIN** and **MAX**)

- Check engine oil level. (176)
- Install cap **3** of oil filler opening.

BRAKE SYSTEM

Checking brake function

- Actuate the brake lever.
 - » The resistance point must be clearly perceptible.
- Press the footbrake lever.
 - » The resistance point must be clearly perceptible.

If resistance points are not clearly perceptible:



ATTENTION


Improper working on the brake system

Endangering of the operating safety of the brake system


- Have all work on the brake system carried out by experts.
- Have the brakes checked by a repair shop, preferably an authorized BMW Motorrad dealer.


Checking the front brake pad thickness

- Park the motorcycle, making sure the ground is level and firm.

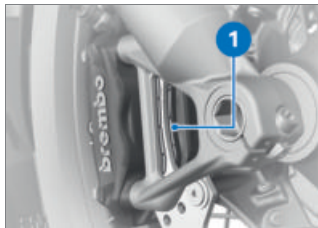

- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: between wheel and front suspension toward brake pads **1**.

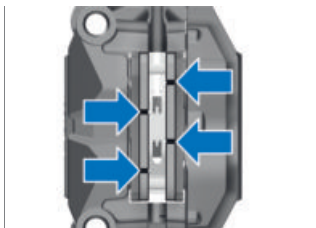

 Front brake-pad wear limit

0.04 in (1.0 mm) (Only friction material without carrier plate. The wear marks (grooves) must be clearly visible.)

If the wear marks are no longer clearly visible:

WARNING

Dropping below the minimum pad thickness

Reduced braking action, damage to the brake

- In order to ensure the operating reliability of the brake system, make sure that the brake pads are not worn beyond their minimum thickness.


- Have brake pads renewed at a repair shop, preferably an authorized BMW Motorrad dealer.


Checking the rear brake pad thickness

- Park the motorcycle, making sure the ground is level and firm.



- Conduct a visual inspection of the brake pad thickness. Viewing direction: between splash guard and rear wheel toward brake pads **1**.

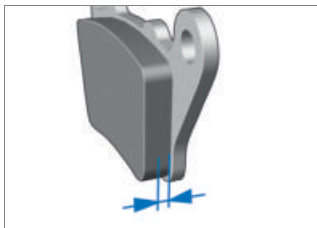

 Rear brake-pad wear limit

0.04 in (1.0 mm) (Only friction material without carrier plate.)

180 MAINTENANCE

If wear limit is reached:



WARNING

Dropping below the minimum pad thickness

Reduced braking action, damage to the brake

- In order to ensure the operating reliability of the brake system, make sure that the brake pads are not worn beyond their minimum thickness.
- Have brake pads renewed at a repair shop, preferably an authorized BMW Motorrad dealer.

Checking the front brake fluid level



WARNING


Insufficient or contaminated brake fluid in the brake fluid reservoir

Considerably reduced braking power caused by air, dirt or water in the brake system

- Stop riding immediately until fault is rectified.
- Check brake fluid level regularly.
- Make sure that the lid of the brake fluid reservoir is cleaned before opening.
- Make sure that brake fluid is used from a sealed container only.
- Make sure the ground is level and firm and put the motorcycle on its center stand.
- Move the handlebars to the straight-ahead position.



- Check brake fluid level at brake fluid reservoir for front wheel brake **1**.

 The brake fluid level in the brake fluid reservoir drops due to brake pad wear.



Front brake fluid level

Brake fluid, DOT4

The brake fluid level must not fall below the **MIN** mark. (Brake fluid reservoir horizontal, vehicle standing upright)

If the brake fluid level falls below the approved level:

- Have the fault rectified as soon as possible by a repair shop, preferably an authorized BMW Motorrad dealer.

Checking the rear brake fluid level

WARNING

Insufficient or contaminated brake fluid in the brake fluid reservoir

Considerably reduced braking power caused by air, dirt or water in the brake system


- Stop riding immediately until fault is rectified.
- Check brake fluid level regularly.
- Make sure that the lid of the brake fluid reservoir is cleaned before opening.
- Make sure that brake fluid is used from a sealed container only.

- Make sure the ground is level and firm and put the motorcycle on its center stand.

182 MAINTENANCE



- Check the brake fluid level at the brake fluid reservoir for rear wheel brake **1**.

 The brake fluid level in the brake fluid reservoir drops due to brake pad wear.



Rear brake fluid level

Brake fluid, DOT4

The brake fluid level must not fall below the **MIN** mark.
(Brake fluid reservoir horizontal, vehicle standing upright)

If the brake fluid level falls below the approved level:

- Have the fault rectified as soon as possible by a repair shop, preferably an authorized BMW Motorrad dealer.

CLUTCH

Checking the clutch function

- Pull the clutch lever.
 - » The resistance point must be clearly perceptible.


If no clear resistance point can be felt:

- Have the clutch checked by a repair shop, preferably an authorized BMW Motorrad dealer.

COOLANT

Checking the coolant level

- Park the motorcycle, making sure the ground is level and firm.
- Allow the engine to cool down.

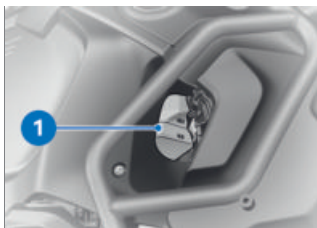

- Check coolant level at expansion tank **1**.



Required coolant level

Between **MIN** and **MAX** marks on the expansion tank (Engine cold)

If the coolant level drops below the permitted level:

- Top up coolant. (→ 183)

Topping up coolant




WARNING


Opening the radiator cap

Risk of burning

- Do not open the radiator cap when it is hot.
- Check the coolant level exclusively at the expansion tank and top up if necessary.

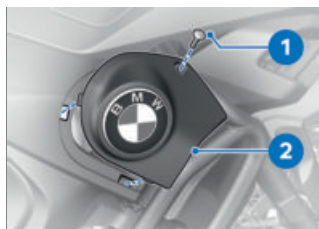


- Remove screw **1** and remove lid **2**.

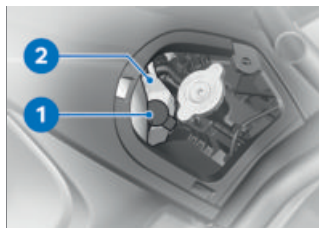

- Open the cap **1** of the coolant expansion tank **2** and top up coolant to the specified level.
- Check the coolant level. (→ 182)

184 MAINTENANCE

- Close the cap of the coolant expansion tank.

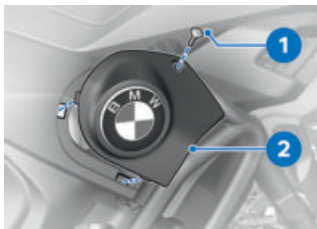

- Position the lid **2**.
- Install screw **1**.

- Park the motorcycle, making sure the ground is level and firm.
- Check tire pressure against data below.



Front tire pressure

36.3 psi (2.5 bar) (with tire cold)



Rear tire pressure

42.1 psi (2.9 bar) (with tire cold)

TIRES

Checking tire pressure



WARNING

Incorrect tire pressure

Worse handling characteristics of the motorcycle, reduction in the service life of the tires

- Ensure correct tire pressure.



WARNING

Automatic opening of vertically installed valve inserts at high speeds

Sudden loss of tire inflation pressure

- Use valve caps with rubber sealing ring and screw on firmly.

If tire pressure is too low:

- Correct the tire pressure.



Tire pressures can be determined with tire pressure control (RDC). These values are always displayed with compensation for temperature and always refer to a tire air temperature of 68 °F (20 °C).

Tire pressure gauges at gas stations do not compensate for temperature. Therefore, the values measured there usually do not match the values shown in the instrument cluster.

Checking tire tread depth



WARNING

Riding with heavily worn tires

Risk of accident due to poorer rideability

- If necessary, replace the tires before the legally specified minimum tread depth is reached.

- Park the motorcycle, making sure the ground is level and firm.
- Measure tire tread depth in main tread grooves with wear marks.



Wear marks are integrated into the main grooves on every tire. If the tire tread has worn down to the level of the marks, the tire is completely worn. The locations of the marks are indicated on the edge of the tire, e.g. by the letters TI, TWI or by an arrow.

When the minimum tread depth is reached:

- Replace the worn tire.

RIMS

Checking rims

- Park the motorcycle, making sure the ground is level and firm.
- Visually inspect rims for defects.
- Have damaged rims checked and, if necessary, renewed by a repair shop, preferably an authorized BMW Motorrad dealer.

Checking spokes

- Park the motorcycle, making sure the ground is level and firm.
- Run the handle of a screwdriver or similar object over the spokes and listen to the sound pattern.

If the sound pattern is uneven:

- Have spokes checked by a repair shop, preferably by an authorized BMW Motorrad dealer.

WHEELS

Effect of wheel sizes on suspension control systems

The wheel sizes play a major role in the ABS suspension control system. The diameter and width of the wheels stored in the control unit have particular significance as the basis


186 MAINTENANCE

for all necessary calculations. A change in these sizes resulting from conversion to wheels not installed as standard equipment can seriously affect the control convenience of these systems. The sensor rings required for wheel speed detection must also match the installed control systems and must not be replaced.

If you want to convert your motorcycle to different wheels, please contact a repair shop, preferably an authorized BMW Motorrad dealer. In some cases, the data stored in the control units can be adapted for the new wheel sizes.

Removing front wheel

- Make sure the ground is level and firm and put the motorcycle on its center stand.

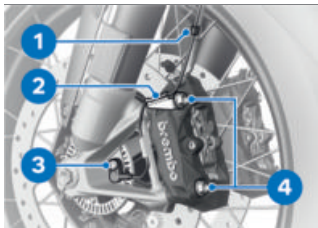

- Detach wheel speed sensor cable from holding clips **1** and **2**.


- Remove the screw **3** and remove the wheel speed sensor from the drilled hole.
- Mask off areas of the wheel rim that could get scratched in the process of removing the brake calipers.

ATTENTION

Unintentional pressing together of brake pads


Component damage when mounting the brake caliper or when pressing the brake pads apart

- Do not actuate the brakes with the brake caliper removed.
- Remove the mounting bolts **4** of the left and right brake calipers.

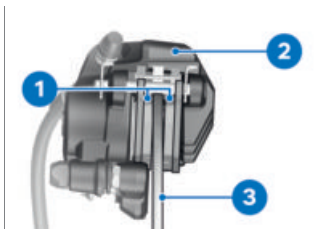


- Push brake pads **1** apart slightly by turning the brake caliper **2** back and forth against brake disk **3**.

- Carefully pull the brake calipers back and outward to remove them from the brake disks.
- Raise the front of motor-cycle, preferably using a BMW Motorrad front wheel stand, until the front wheel rotates freely.
- Attach the front wheel stand. (▶▶▶ 175)

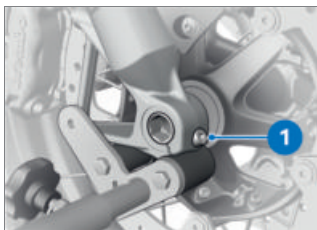


- Loosen the right axle clamping screw **1**.

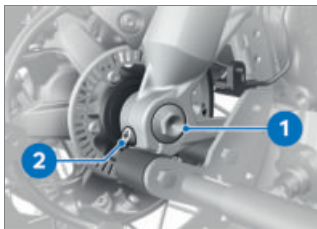


- Remove screw **1**.
- Loosen the left axle clamping screw **2**.

- Slightly press the quick-release axle inward for a better grip on the right side.

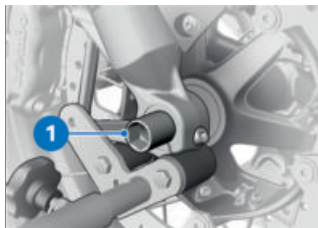

- Pull out the quick-release axle **1** while supporting the front wheel.
- Place front wheel down and roll it forward out of the front suspension.

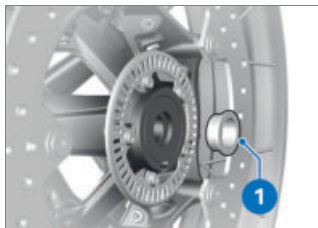

- Remove the spacer bushing **1** from the wheel hub.

188 MAINTENANCE

Installing the front wheel

WARNING

Use of a wheel which does not comply with series specifications

Malfunctions during control interventions by ABS and DTC


- Please see the information on the effect of wheel sizes on the ABS and DTC chassis control systems at the beginning of this chapter.

ATTENTION

Tightening screw connections with incorrect tightening torque

Damage to or loosening of screw connections

- Have the tightening torques checked by a repair shop, preferably by an authorized BMW Motorrad dealer.

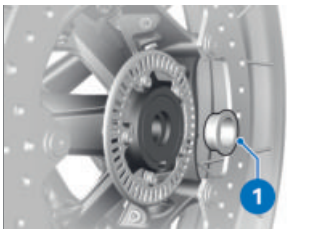

- Lubricate the contact surface on the spacer bushing **1**.



Lubricant

Optimoly TA


- Insert the spacer bushing **1** into the wheel hub on the left side.

ATTENTION

Front wheel installation opposite the running direction

Accident hazard

- Observe running direction arrows on tire or rim.
- Roll the front wheel into the front suspension.

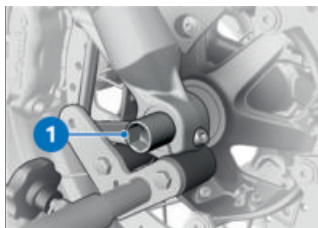


- Lubricate the quick-release axle **1**.



Lubricant

Optimoly TA

- Lift the front wheel and install the quick-release axle **1**.
- Remove front wheel stand and firmly compress front forks. Do not actuate brake lever at the same time.
- Attach the front wheel stand. (▶▶▶ 175)

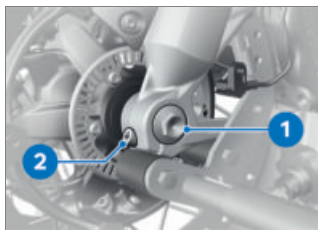

- Install the screw **1** to the specified torque. Brace quick-release axle on the right side at the same time.



Quick-release axle in telescopic fork

M12 x 20

22 lb/ft (30 Nm)


- Tighten left-hand axle clamping screw **2** to the specified torque.



Clamping screw for quick-release axle in telescopic fork

M8 x 35

14 lb/ft (19 Nm)

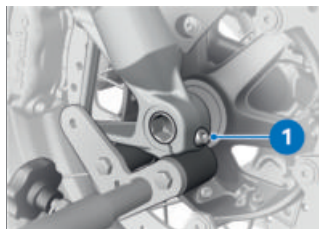

- Tighten right-hand axle clamping screw **1** to the specified torque.



Clamping screw for quick-release axle in telescopic fork


M8 x 35

14 lb/ft (19 Nm)

- Remove the front wheel stand.

190 MAINTENANCE

- Put the brake calipers on the left and right onto the brake disks.

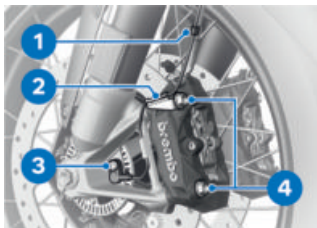

- Install mounting bolts **4** on left and right to the specified torque.



Brake caliper on telescopic forks

M10 x 65

28 lb/ft (38 Nm)

- Remove adhesive tape from wheel rim.



WARNING

Brake pads do not contact the brake disc

Risk of accident due to delayed braking effect.

- Before driving off, check that the braking effect kicks in without any delay.
- Engage the brakes repeatedly until the brake pads make contact with the discs.

- Insert the wheel speed sensor cable into the holding clips **1** and **2**.
- Insert the wheel speed sensor into the drilled hole and install screw **3**.



Wheel speed sensor on fork

M6 x 16

Joint compound: Micro-encapsulated or medium-strength screw lock

6 lb/ft (8 Nm)

Removing rear wheel

- Make sure the ground is level and firm and put the motorcycle on its center stand.
- Shift into first gear.




CAUTION

Hot exhaust system

Burn hazard

- Do not touch hot exhaust system.
- Let the end muffler cool down.

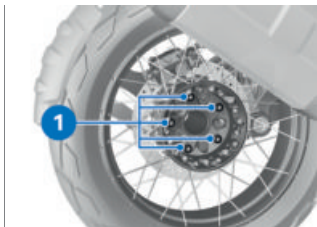

- Remove the screws **1** of the rear wheel while supporting the wheel.
- Roll rear wheel out toward rear.

Installing the rear wheel

WARNING

Use of a wheel which does not comply with series specifications

Malfunctions during control interventions by ABS and DTC


- Please see the information on the effect of wheel sizes on the ABS and DTC chassis control systems at the beginning of this chapter.

ATTENTION

Tightening screw connections with incorrect tightening torque

Damage to or loosening of screw connections

- Have the tightening torques checked by a repair shop, preferably by an authorized BMW Motorrad dealer.
- Place rear wheel on rear wheel support.

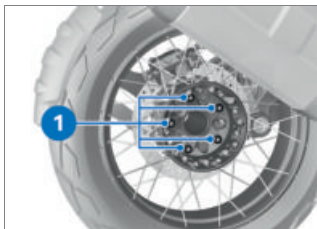

WARNING

Mixed installation of wheel bolts for spoked wheels and cast wheels

Accident hazard

- Use only wheel bolts with the same permitted length code numbers.
- Do not lubricate the lug bolts.

192 MAINTENANCE

- Install the lug bolts **1** to the specified torque.




Tighten rear wheel on wheel flange

Tightening sequence: Tighten crosswise

M10 x 1.25 x 40

44 lb/ft (60 Nm)

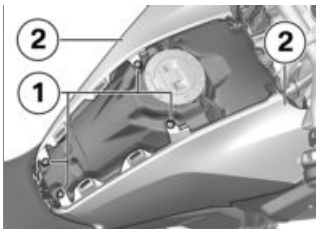


- Remove screws **1**.
- Loosen the cover **2** on both sides.

AIR FILTER


Removing air filter insert



- Remove the rider's seat. (→ 124)
- Open lid **1** of storage compartment.
- Remove the screws **2**, **3** and **4**.
- Take off the tank cover.

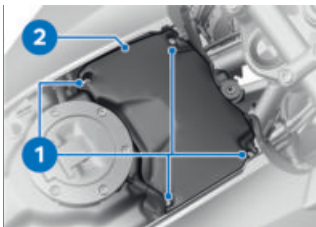

- Remove screws **1**.
- Remove air filter cover **2**.

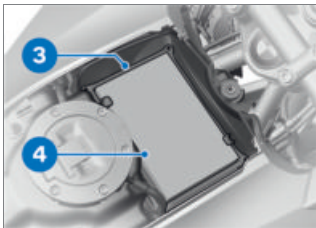


- Remove frame **3**.
- Remove air filter insert **4**.


Checking air filter insert

- Check air filter insert and clean if necessary.
- » Replace heavily soiled air filter insert.

Installing air filter insert

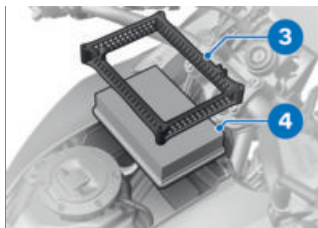

- Clean air filter element **4** or replace, if necessary.
- Insert air filter element **4** and frame **3**.

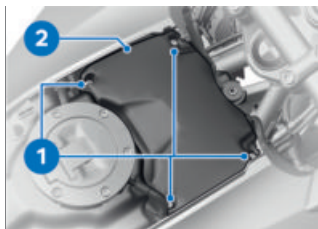

- Put air filter cover **2** in place.
- Install screws **1**.



Air filter cover on intake silencer


Tightening sequence: Tighten crosswise

M5 x 50




Air filter cover on intake silencer


2 lb/ft (3 Nm)

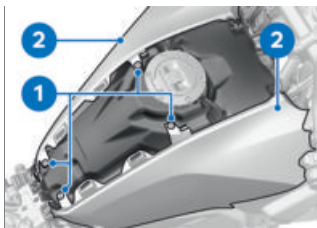

- Position the cover **2** on both sides.
- Install the screws (short collar) **1**.

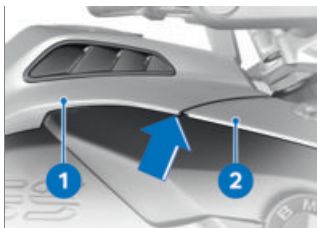

- Place tank cover **1** in position from above, taking care during installation that the guide (**arrow**) is underneath the upper front wheel cover **2**.

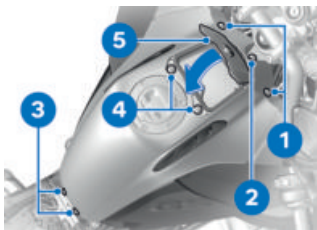

- Install screws (short collar) **3** and **4**.
- Close lid **5** of storage compartment.
- Install the screws (short collar) **1**.
- Install screw **2**.



Body screw connection

M6 x 25

6 lb/ft (8 Nm)

- Install the rider's seat.
(126)

LIGHT SOURCES

Replacing the LED light source

—without ^{OE} headlight control



WARNING

Overlooking the vehicle in road traffic due to failure of the lighting on the vehicle

Safety risk

- Replace defective lighting as soon as possible. Please contact a repair shop for this purpose, preferably an authorized BMW Motorrad dealer.

All light sources on the vehicle are LED light sources. The service life of the LED light sources is longer than the assumed service life of the vehicle. If an LED light source is faulty, please contact a repair shop, preferably an authorized BMW Motorrad dealer.

Replacing low and high-beam bulbs in headlight

—with ^{OE} headlight control


- Park the motorcycle, making sure the ground is level and firm.
- Turn off the ignition.



The alignment of the connectors and light sources may deviate from the following illustrations.




- To replace the lamp for low-beam headlight, remove the cover **1** by turning it counterclockwise.

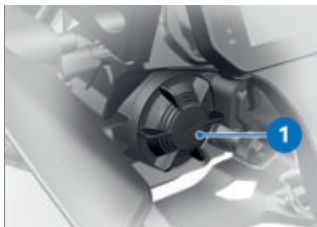


- To replace the lamp for high beam, remove the cover **1** by turning it counterclockwise.



- Disconnect plug **1**.

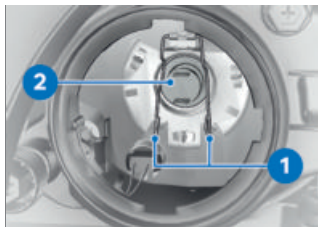


- Remove the spring clip **1** from the lock and fold it to the side.
- Remove the lamp **2**.
- Replace the defective light source.

	Bulbs for low-beam headlight
---	------------------------------

~without ^{OE} headlight control	LED◁
--	------

~with ^{OE} headlight control	H7 / 12 V / 55 W◁
---------------------------------------	-------------------

	Bulb for high-beam headlight
---	------------------------------

~without ^{OE} headlight control	LED◁
--	------


~with ^{OE} headlight control	H7 / 12 V / 55 W◁
---------------------------------------	-------------------

- To avoid leaving contamination deposits on the new bulb's glass surface, always hold it by its base.


196 MAINTENANCE



- Insert the lamp **2**, making sure the lug **3** is in the correct position.

 The alignment of the bulb may differ from the illustration.

- Insert the spring clip **1** into the lock.

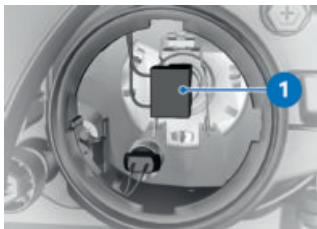

- Connect plug **1**.
- Position cover panel and install it by turning clockwise.◁

Replacing the bulbs for parking lights

—with ^{OE} headlight control

- Park the motorcycle, making sure the ground is level and firm.

- Turn off the ignition.



- Remove the cover **1** by turning it counterclockwise.




- Pull the socket **1** out of the headlight housing.



- Pull the lamp **1** out of the socket.

- Replace the defective light source.

 Bulb for parking light
-without ^{OE} headlight control LED◁
-with ^{OE} headlight control W5W / 12 V / 5 W◁

- To protect the glass of the new light source from getting dirty, hold it with a clean, dry cloth.



- Insert **1** lamp in socket.



- Insert the socket **1** into the headlight housing.

- Position cover panel and install it by turning clockwise.◁

JUMP-STARTING

CAUTION

Touching live parts of the ignition system when the engine is running

Electrocution

- Do not touch parts of the ignition system when the engine is running.

ATTENTION

Current too high when jump-starting the motorcycle

Cable fire or damage to the motorcycle electronics

- Do not jump-start the motorcycle using the power socket, only via the battery terminal.

ATTENTION

Contact between crocodile clips of jump leads and motorcycle

Danger of short circuit


- Use jump leads fitted with fully insulated crocodile clips at both ends.

ATTENTION

Jump-starting with a voltage higher than 12 V

Damage to the motorcycle's electronics

- The battery of the donor motorcycle must have a voltage of 12 V.
- Park the motorcycle, making sure the ground is level and firm.
- Remove the battery cover. (▮▮▮▮ 201)
- Do not disconnect the battery from the electrical system for an external start.

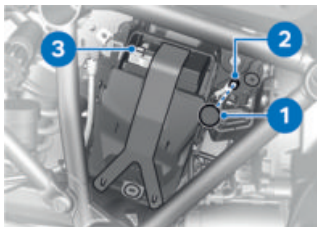

- Remove protective cap **1**.
- Begin by connecting the red jumper cable to the remote positive terminal **2** on the empty battery and the other end to the positive terminal of the donor battery.
- Then clamp one end of the black jumper cable to the

donor battery's negative terminal **3** while connecting the other end to the empty battery's negative terminal.

- Run the engine of the donor vehicle during the jump-starting procedure.
- Start the engine of the vehicle with the empty battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt to start the engine to protect the starter motor and the donor battery.



To start the engine, do not use start sprays or similar items.

- Allow both engines to idle for a few minutes before disconnecting jumper cables.
- Disconnect the jumper cable from the negative terminal first, then from the positive terminal.
- Install the protective cap.
- Install the battery cover. (▮▮▮▮ 203)


BATTERY

Maintenance instructions

Proper care, charging and storage extend the battery's service life and are required for any warranty claims.

Compliance with the points below is important in order to maximize battery service life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.
- Do not turn the battery upside down.

	Battery design
	AGM (Absorbent Glass Mat) battery, maintenance-free
	-with M Lightweight battery ^{OE}
	Lithium ion battery◁



ATTENTION

Discharging of the connected battery by the vehicle electronics (e.g. clock)

Total discharge of battery leading to a rejection of warranty claims

- During riding breaks of more than 4 weeks, connect a trickle-charger to the battery.



BMW Motorrad has developed a trickle-charger specially designed for compatibility with the electronics of the motorcycle. This device can be used to keep the battery charged during long periods when the motorcycle is not being used even while the battery is connected to the motorcycle. For more information, contact an authorized BMW Motorrad dealer.

200 MAINTENANCE

Charging connected battery

ATTENTION

Charging the battery connected to the vehicle using the battery terminals

Damage to the motorcycle's electronics

- Disconnect the battery before charging on the battery terminals.

ATTENTION

A fully discharged battery must be charged via a power socket or extra socket.

Damage to vehicle electronics

- A fully discharged battery (battery voltage less than 12 V, indicator lights and multifunction display remain off when ignition is switched on) must always be charged directly at the poles of the **disconnected** battery.


ATTENTION

Improper battery chargers connected to a socket


Damage to battery charger and vehicle electronics

- Use suitable BMW battery chargers. You can obtain the right charger from your authorized BMW Motorrad dealer.

- Charge connected battery via onboard power socket.


 The vehicle electronics detect when the battery is fully charged. The onboard socket is switched off when this happens.

- Comply with operating instructions of charger.


 If you are unable to charge the battery via the onboard power socket, you may be using a charger that is not compatible with your motorcycle's electronics. In this case, charge the battery directly from the terminals of the battery disconnected from the vehicle.

Charging disconnected battery

- Charge battery using a suitable charger.
- Comply with operating instructions of charger.
- Once battery is fully charged, disconnect charger's terminal clips from battery terminals.

 In the case of longer periods when the motorcycle is not being used, the battery must be recharged regularly. See the instructions for caring for your battery. Always fully recharge the battery before returning it to use.


Removing battery

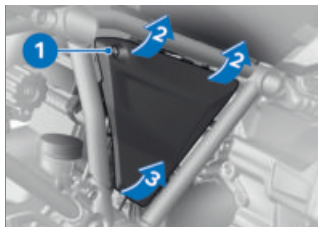

- Turn off the ignition.
- Remove screw **1**.
- Pull battery cover at top slightly forward at positions **2**.
- Remove the battery cover upward at position **3** in order not to damage the battery cover and the mount.

–with anti-theft alarm system (DWA)^{OE}

- Turn off the anti-theft alarm system if necessary.◁

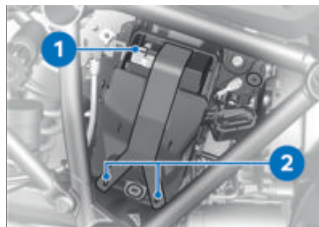

- Disconnect the negative battery cable **1** and rubber strap **2**.
- Insulate the negative battery cable **1** with adhesive strip.




- Pull the retaining plate at position **1** outward and remove it upward.
- Lift battery slightly out of holder sufficiently for positive terminal to be accessible.

202 MAINTENANCE



- Disconnect the positive battery cable **1** and pull out the battery.

Installing the battery

 If the 12 V battery is installed incorrectly or the terminals are reversed (e.g. when jump starting), it can burn through the fuse for the alternator regulator.



- Fasten the positive battery cable **1**.




Wiring harness on battery


M6 x 11

6 lb/ft (8 Nm)

- Slide battery into holder.

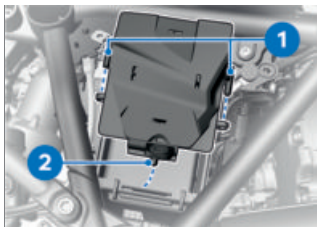

- First press retaining plate into the mounts **1** and then press under the battery at point **2**.

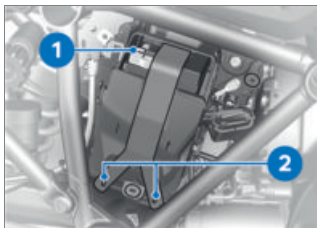

- Remove the adhesive strip from the negative battery cable **1**.
- Fasten negative battery cable **1**.




Wiring harness on battery


M6 x 11

6 lb/ft (8 Nm)

- Fasten battery with rubber strap **2**.

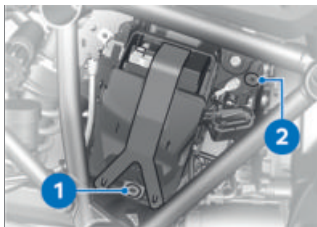


- Insert battery cover into mount **1** and press it into the mount **2**.

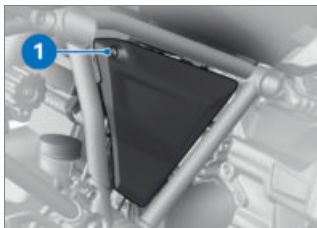

- Install screw **1**.
- Configure system settings.
(☛ 70)

FUSES

Replacing fuses

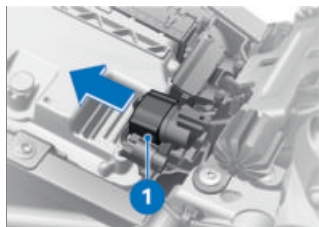


- Turn off the ignition.
- Remove the rider's seat.
(☛ 124)
- Detach connector **1**.

ATTENTION


Bypassing defective fuses

Risk of short circuit and fire

- Do not bypass defective fuses.
 - Replace defective fuses with new fuses.
- Consult the fuse assignment diagram and replace the defective fuse.
-  If the fuses are faulty frequently, have the electrical system checked by a repair shop, preferably an authorized BMW Motorrad dealer.
- Insert connector **1**.
 - Install the rider's seat.
(☛ 126)

204 MAINTENANCE

Fuse assignments

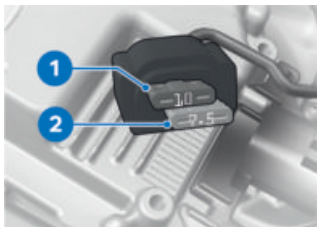


- 1** 10 A
Instrument cluster
Anti-theft alarm system (DWA)
Ignition switch
Diagnostic socket
Cut-off relay for ignition coil
- 2** 7.5 A
Multifunction switch, left
Tire pressure control (TPC)
Sensor box
Seat heating

Fuse for alternator regulator



- 1** 50 A
Alternator regulator

 Have the fuse exchanged by a specialist workshop, preferably an authorized BMW Motorrad dealer.

DIAGNOSTIC CONNECTOR

Detaching the diagnostic connector




CAUTION


Incorrect procedure when disconnecting the diagnostic socket for onboard diagnosis

Vehicle experiences malfunctions

- Do not have the diagnostic socket disconnected except during BMW Motorrad service by a repair shop or other authorized persons.
 - Have work carried out by appropriately trained personnel.
 - Observe the specifications of the vehicle manufacturer.
- Remove the battery cover. (→ 201)

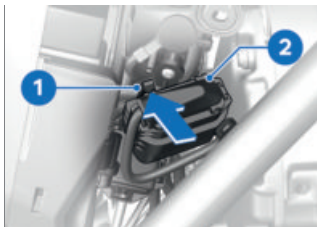

- Press the hook **1** and remove the diagnostic socket **2** by pulling it upwards.

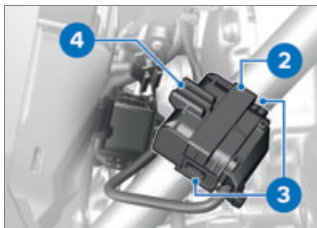


- Press locks **3** on both sides.
- Detach the diagnostic socket **2** from the holder **4**.
- » The interface for the diagnostics and information system can be connected to the diagnostic connector **2**.


Fastening the diagnostic connector

- Disconnect the interface for the diagnostics and information system.

206 MAINTENANCE

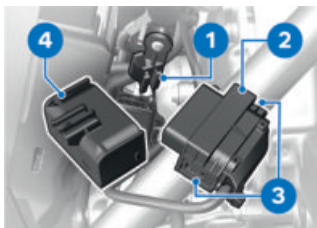

- Insert the diagnostic socket **2** into the holder **4**.
 - » The locking mechanisms **3** engage on both sides.
- Connect the bracket **4** to the mount **1**.

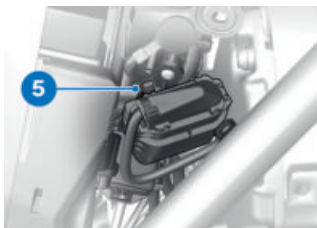

- Make sure that the hook **5** engages.
- Install the battery cover.
(☞ 203)

ACCESSORIES

10

GENERAL NOTES	210
SOCKETS	210
USB CHARGING SOCKET	211
CASES	212
TOPCASE	214
NAVIGATION SYSTEM	215

GENERAL NOTES



CAUTION

Use of products from other manufacturers

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW motorcycles without constituting a safety hazard. Nor is this guarantee provided when the official approval of a specific country has been granted. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW motorcycles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your motorcycle.

The safety, function and suitability of the parts and accessory products have been thoroughly tested by BMW. Therefore, BMW assumes responsibility for these products. BMW shall not be held liable for un-

approved parts and accessory products of any kind.

Comply with the legal requirements for any modifications.

Consult the road traffic licensing regulations of your country.

Your authorized

BMW Motorrad dealer

offers you qualified advice for choosing original BMW parts, accessories and other products.

More information on the topic of accessories is available at:

bmw-motorrad.com/equipment

SOCKETS

Connecting electrical devices

- The ignition must be turned on before electrical devices connected to the onboard power sockets can be put into operation.

Cable layout

- The cables from the on-board sockets to the auxiliary devices must be routed in such a way that they do not impede the rider.
- Cable layout must not restrict the steering angle and the handling characteristics.
- Cables must not be trapped.

Automatic shutoff

- The onboard sockets are automatically switched off during the starting procedure.
- To relieve the electrical system, the sockets are turned off 60 seconds after the ignition has been switched off. Accessories with low electrical consumption might not be detected by the vehicle electronics. In these cases, onboard sockets are already turned off shortly after the ignition is turned off.
- In case of insufficient battery voltage, the onboard sockets are switched off to maintain the starting capability of the vehicle.
- If the maximum loadability specified in the technical data is exceeded, the onboard sockets are switched off.

USB CHARGING SOCKET

Notes about use:

Charge current

This is a 5 V USB charging socket providing a maximum charge current of 2.4 A.

Automatic shutoff

- The USB charging sockets are automatically switched off under the following conditions:
- If the battery voltage is too low to retain the starting capability of the vehicle.
 - If the maximum load capacity specified in the technical data is exceeded.
 - During the starting procedure.

Connecting electrical devices

The ignition must be switched on before electrical devices connected to USB charging sockets can be operated. To relieve stress on the electrical system, the onboard power sockets are switched off no more than 60 seconds after the ignition is turned off.

To protect the connected device, the device should be unplugged when riding in rain. When no device is connected, the cover should be closed to prevent soiling.

Cable layout

Observe the following when routing cables from USB charging sockets to additional devices:


212 ACCESSORIES

- Cables must not impede the rider.
- Cables must not restrict the steering angle and handling characteristics.
- Cables must not become trapped.


CASES

-with aluminum case^{OA}

Opening a case

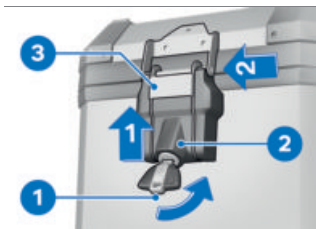

- Turn key **1** counterclockwise.

 The case cover can be opened with both the left and the right latch.

- Press the lock housing **2** upwards to unlock the locking claw **3**.
- Pull locking claw **3** to side and open cover lid.

Closing a case



- Close the case lid.
- Put the locking claw **1** on the lid.
- Push down lock housing **2**, in doing so ensure that the claw catches in the lid.
- To lock the lock, turn the key **3** clockwise and remove it.

Removing the case lid

- Open case. (→ 212)



- Detach the lid-retaining cable **1**.
- Close the case lid.
- Open the second closure of the case lid.
- Remove case lid.

Installing the case lid

- Put the case lid on the case.
- Close one closure of the case lid.
- Open the case lid toward the closed side.



- Attach the lid-retaining cable **1**.
- Close the case lid.
- Close the second closure of the case lid.


Removing a case




- Turn key **1** counterclockwise.
- Push the lock housing **2** to the side to unlock the locking claw **3**.

- Pull locking claw **3** to the side while holding the case in position.
- Pull the case forward up to the stop and remove it sideways.

Attaching a case

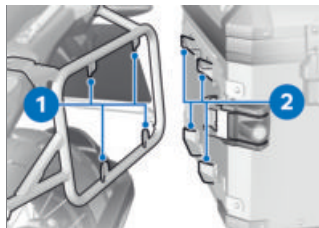

- Place case on case carrier and slide backwards so that mounts on case carrier **1** and case **2** interlock.

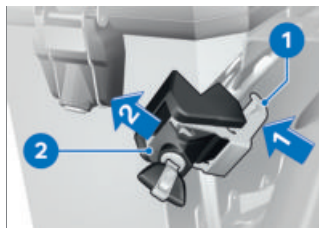

- Put the locking claw **1** on the case carrier while holding the case in position.
- Push lock housing **2** to one side, in doing so make sure that the claw grips around the holder.

214 ACCESSORIES

- Turn the key clockwise and remove it.

Maximum payload and maximum speed

Observe maximum payload and maximum speed.

The following values apply to the combination described here:



Maximum speed for riding with aluminum case

max 112 mph (max 180 km/h)




Payload per aluminum case

max 22 lbs (max 10 kg)

TOPCASE

—with aluminum topcase^{OA}


Opening topcase

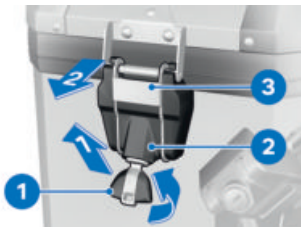

- Turn key **1** counterclockwise.
- Press the lock housing **2** upwards to unlock the locking claw **3**.


- Pull the locking claw **3** backward and open the lid.

Closing topcase

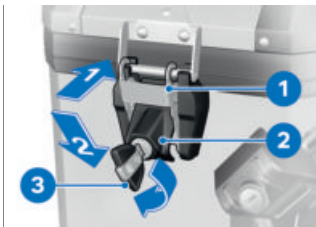

- Close the topcase lid.
- Put the locking claw **1** on the lid.
- Push down lock housing **2**, in doing so ensure that the claw catches in the lid.
- To lock the lock, turn the key **3** clockwise and remove it.


Removing the topcase

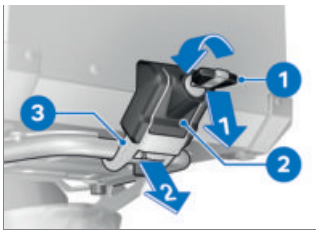


- Turn key **1** counterclockwise.
- Press the lock housing **2** down to unlock locking claw **3**.

- Pull the locking claw **3** backward.
- First pull the topcase backward and then remove it upward.

Installing the topcase

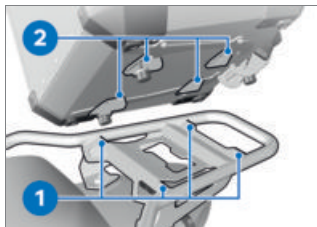

- Place topcase on topcase carrier and slide forwards so that mounts on topcase carrier **1** and topcase **2** interlock.

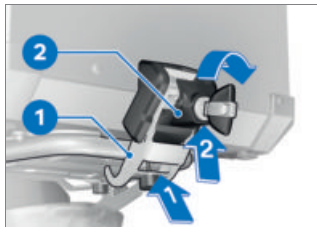


- Put the locking claw **1** on the topcase carrier.
- Push up lock housing **2**, in doing so make sure that the claw grips around the support.
- To lock the lock, turn the key clockwise and remove it.


Maximum payload and maximum speed

Observe maximum payload and maximum speed.

The following values apply to the combination described here:

	Maximum speed for riding with aluminum topcase
---	--

max 112 mph (max 180 km/h)


	Payload of aluminum topcase
---	-----------------------------


max 11 lbs (max 5 kg)

NAVIGATION SYSTEM


—with preparation for navigation system^{OE}

Securely fastening navigation device


 The navigation preparation is suitable for BMW Motorrad Navigator IV and later.

 The locking system of the Mount Cradle offers no protection against theft. Remove the navigation system and store in a safe place after every drive.

216 ACCESSORIES

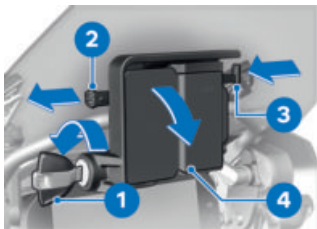

- Turn the ignition key **1** counterclockwise.
- Pull the shut-off lock **2** to the **left**.
- Press in the locking mechanism **3**.
- » The Mount Cradle is unlocked and the cover **4** can be removed with a rotational movement toward the front.

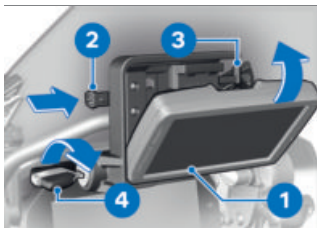

- Mount the navigation device **1** in the lower area and swing backward with a rotational movement.
- » Navigation device audibly engages.
- Slide the shut-off lock **2** completely to the **right**.

- » The locking mechanism **3** is locked.
- Turn the ignition key **4** clockwise.
- » Navigation device is locked and ignition key can be removed.

Removing the navigation device and installing the cover




ATTENTION

Dust and dirt on the contacts of the Mount Cradle


Damage to the contacts

- Reinstall the cover after end of each drive.

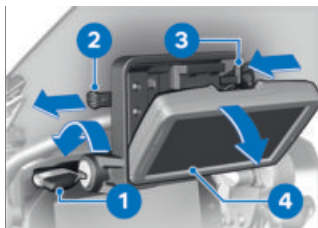


- Turn the ignition key **1** counterclockwise.
- Pull the shut-off lock **2** completely to the **left**.
- » The locking mechanism **3** is unlocked.
- Slide the locking mechanism **3** completely to the **left**.
- » Navigation device **4** is unlocked.


- Remove navigation device **4** downward with a tilting movement.

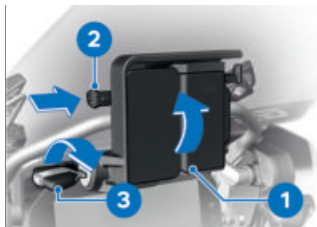


- Mount the cover **1** in the lower area and swing upward with a rotational movement.
 - » Cover audibly engages.
- Slide the shut-off lock **2** to the **right**.
- Turn the ignition key **3** clockwise.
 - » The cover **1** is secured.

Operating the navigation system

 The following description refers to the BMW Motorrad Navigator V and the BMW Motorrad Navigator VI. The BMW Motorrad Navigator IV does not offer all options described.

 Only the latest version of the BMW Motorrad communication system is supported. A software update may be required for the BMW Motorrad communication system. In this case, please contact your authorized BMW Motorrad dealer.

If the BMW Motorrad Navigator is installed and the operating focus is changed to the Navigator (➡ 73), some of its functions can be operated directly from the handlebars.

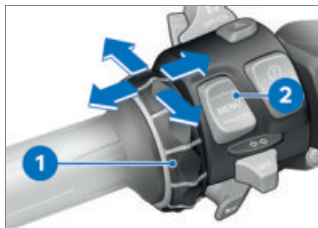

The navigation system is operated using the Multi-Controller **1** and the rocker button MENU **2**.

Turning the Multi-Controller **1** up and down

On the compass and Media player screen: Increase or reduce the volume of a via Bluetooth connected

218 ACCESSORIES

BMW Motorrad communication system.

In the BMW special menu: Select menu items.


Briefly tilting the Multi-Controller 1 to the left and right


Change between the main screens of the Navigator:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My motorcycle page

Tilting and holding the Multi-Controller 1 to the left and right

Activate certain functions on the Navigator display. These functions are indicated by a right arrow or left arrow above the corresponding touch field.

 The function is triggered by long actuation to the right.

 The function is triggered by long actuation to the left.

Press the rocker button MENU 2 at the bottom

Change the operating focus to the Pure Ride view.

In detail, the following functions can be operated:

Map view

- Turning upwards: zooms in on map section (Zoom in).
- Turning downwards: zooms out of map section (Zoom out).

Compass page

- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

BMW special menu

- Speech: Repeat last navigation announcement.
- Waypoint: Save current location as a favorite.
- Navigate home: Starts navigation to the home address (is grayed-out if no home address is set).
- Mute: Turn automatic navigation announcements off or on (off: The top line in the display shows a crossed-out lips icon). Navigation announcements can still be output via "Speak". All

other sound outputs remain switched on.


- Turn off display: Turns off the display.
- Making a call: Calls the home phone number stored in the navigator (only displayed when a communications system and a telephone are connected).
- Detour: Activates the detour function (only displayed if a route is active).
- Skip: Skips the next waypoint (only displayed if route is provided with waypoints).

My Motorcycle

- Turn: Changes the number of data sets displayed.
- Touching a data field on the display opens a menu for selecting the data.
- The values available for selection depend on the optional equipment that is installed.

Medioplayer


- Long press to the left: Play previous title.
- Long press to the right: Play next title.
- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

 The Medioplayer function is only available when using a Bluetooth device as per A2DP standard, e.g., a BMW Motorrad communication system.

Warning and status messages



Warning and status messages of the motorcycle are indicated with a corresponding icon **1** at the upper left on the map view.

 If a BMW Motorrad communication system is connected, an acoustic signal is also sounds in case of a warning.

If several warning messages are active, the number of messages is indicated below the warning triangle. A list of all warning messages is opened by pressing on the warning triangle with more than one message.

220 ACCESSORIES

Additional information is display when a message is selected.



Detailed information cannot be displayed for all warnings.

Special functions

Due to integration of the BMW Motorrad Navigator, there are differences from the descriptions in the operating instructions for the Navigator.

Reserve fuel level warning

The settings for the fuel gauge are not available because the low-fuel warning light is transmitted from the vehicle to the Navigator. If the message is active, the nearest gas stations are shown when you press on the message.

Security settings

The BMW Motorrad Navigator V and the BMW Motorrad Navigator VI can be secured against unauthorized use with a four-digit PIN (Garmin Lock). If this function is activated while the Navigator is installed in the vehicle and the ignition is turned on, you will be asked if you want to add this vehicle to the list of secure vehicles. If you confirm this question

by answering "Yes", then the Navigator will save the vehicle identification number of this vehicle.

A maximum of five VINs can be saved in this way.

Afterwards, if the Navigator is turned on when the ignition is turned on in one of these vehicles, then a PIN no longer needs to be entered.

If the Navigator is removed from the vehicle while it is turned on, then for security reasons a PIN prompt is started.

Screen brightness

Screen brightness is adjusted by the motorcycle while the unit is installed. There is no need for manual input.

If desired, automatic setting can be switched off in the Navigator via the display settings.

CARE

11

CARE PRODUCTS	224
WASHING THE VEHICLE	224
CLEANING SENSITIVE VEHICLE PARTS	225
CARE OF PAINTWORK	226
PAINT PRESERVATION	227
STORE MOTORCYCLE	227
PUTTING THE MOTORCYCLE INTO OPERATION	227

CARE PRODUCTS

BMW Motorrad recommends that you use cleaning and care products available at your authorized BMW Motorrad dealer. BMW Care Products have been materials tested, lab-tested, and field tested and provide optimum vehicle care and protection for the materials used in your vehicle.

ATTENTION

Use of unsuitable cleaning and care agents

Damage to motorcycle parts

- Do not use any solvents such as nitro thinners, cold cleaners, fuel or similar, and do not use cleaning agents that contain alcohol.

ATTENTION

Use of highly acidic or alkaline cleaning agents

Damage to motorcycle parts

- Observe the dilution ratio on the packaging of the cleaning agents.
- Do not use highly acidic or alkaline cleaning agents.

WASHING THE VEHICLE

WARNING

Wet brake disks and brake pads after washing the vehicle, after water passages or in rain

Decreased braking effect, risk of accident

- Brake early until the brake disks and brake pads have dried off on their own or through braking.

ATTENTION

Damage caused by high water pressure from high-pressure cleaners or steam-jet devices

Corrosion or short circuit, damage to labels, to seals, to hydraulic brake system, to the electrical system and the seat

- Exercise caution when using high-pressure or steam-jet devices.

BMW Motorrad recommends that you use BMW Insect Remover to soften and wash off insects and stubborn dirt from painted parts before washing the motorcycle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to bright sunlight and do not wash it in the sun.

Regularly clean the fork tubes of contamination.

Make sure that the vehicle is washed more frequently, especially during the winter months and when riding on salted roads.




ATTENTION

Increased effect of salt caused by warm water

Corrosion

- Only use cold water to remove salt deposits.

To remove salt deposits, clean the vehicle and any add-on parts with cold water immediately after completion of every trip.

 After rides in the rain, in high humidity and after the vehicle is washed, condensation can form inside the headlight. During this process, the headlight can become foggy for a while. If moisture accumulates in the headlight on an ongoing basis, contact a

repair shop, preferably an authorized BMW Motorrad dealer.

CLEANING SENSITIVE VEHICLE PARTS

Plastics



ATTENTION

Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use abrasive cleaners or cleaners containing alcohol or solvents.
- Do not use insect sponges or sponges with a hard surface.

Clean plastic components with water and BMW plastic care emulsion. This includes in particular:

- Windshields and wind deflectors
- Headlight diffusers made of plastic
- Glass cover of the instrument cluster
- Black, unpainted parts



Soften stubborn dirt and dead insects by covering the affected areas with a wet cloth.

226 CARE

Instrument cluster

Clean the instrument cluster with warm water and dish soap. Then dry with a clean cloth, e.g. a paper towel.

Chrome

Carefully clean chrome parts with plenty of water and motorcycle cleaner of the BMW Care Products series. This is particularly important in case of exposure to salt.

For additional treatment, use BMW Motorrad high-gloss polish.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



ATTENTION

Bending of radiator fins

Damage to radiator fins

- When cleaning, ensure that the cooler fins are not bent.

Rubber



ATTENTION

Use of silicone sprays for care of rubber seals

Damage to rubber seals

- Do not use silicone sprays or care products that contain silicone.

Treat rubber parts with water or BMW rubber care product.

CARE OF PAINTWORK

Washing the motorcycle regularly will help counteract the long-term effects of substances that damage the paint, especially if your motorcycle is ridden in areas with high air pollution or natural sources of dirt, such as tree resin or pollen.

However, remove particularly aggressive substances immediately; otherwise changes in the paint or discoloration may occur. These include spilled fuel, oil, grease and brake fluid as well as bird droppings.

It is recommended to use BMW Motorrad solvent cleaner and then apply BMW Motorrad high-gloss polish to preserve the paint.

Contaminants on the paint surface are particularly easy to see

after washing the vehicle. Remove this type of dirt immediately with cleaning benzene or ethyl alcohol on a clean cloth or cotton ball. BMW Motorrad recommends removing tar stains with BMW tar remover. Then add a protective wax coating to the paint at these locations.



ATTENTION

Paint damage from metal polish

Risk of damage

- Do not treat paints and chrome lacquers with metal polish.

PAINT PRESERVATION

Apply a preservative when water fails to bead up on the painted surface.


BMW Motorrad recommends BMW Motorrad high gloss polish or agents that contain carnauba or synthetic wax for paint preservation.



Chrome lacquer must not be preserved with chrome polish.

Only use the agents recommended by BMW Motorrad.

STORE MOTORCYCLE

- Clean the motorcycle.
- Completely fill the motorcycle's fuel tank.
-  Fuel additives clean the fuel injection system and the combustion area. Fuel additives should be used when refueling with low-quality fuels or during longer stationary periods. Your authorized BMW Motorrad dealer can provide you with more detailed information.

- Removing battery (▶▶▶ 201).
- Spray brake lever and clutch lever as well as center and side stand pivots with a suitable lubricant.
- Preserve bare metal and chrome-plated parts with an acid-free grease (Vaseline).
- Park motorcycle in a dry room, raising it to relieve weight from both wheels (preferably using the front-wheel and rear-wheel stands offered by BMW Motorrad).

PUTTING THE MOTORCYCLE INTO OPERATION

- Remove the protective wax coating.
- Clean the motorcycle.

228 CARE

- Install the battery. (☞ 202)
- Observe checklist (☞ 135).

TECHNICAL DATA



12

TROUBLESHOOTING CHART	232
THREADED CONNECTIONS	235
FUEL	238
ENGINE OIL	238
ENGINE	239
CLUTCH	240
TRANSMISSION	240
REAR-WHEEL DRIVE	240
FRAME	240
RUNNING GEAR	240
BRAKES	241
WHEELS AND TIRES	242
ELECTRICAL SYSTEM	242
DIMENSIONS	244
WEIGHTS	246
PERFORMANCE DATA	246

232 TECHNICAL DATA

TROUBLESHOOTING CHART

Engine does not start.

Possible cause	Remedy
Emergency on/off switch (kill switch)	Adjust emergency on/off switch (kill switch) to normal operating position.
Side stand extended and gear engaged	Retract side stand.
Gear engaged and clutch not disengaged	Place transmission in neutral or disengage clutch.
No fuel in tank	Refueling procedure. ( 145)
Battery drained	Charge the connected battery. ( 200)
Overheating protection for starter motor has activated. Starter motor can only be actuated for a limited period.	Leave the starter motor to cool down for around 1 minute until it becomes available again.

Bluetooth connection is not established.

Possible cause	Remedy
Necessary pairing steps were not performed.	Refer to the operating instructions of the communication system for the necessary steps for pairing.
The communication system is not connected automatically despite successful pairing.	Switch off the communication system of the helmet and connect again after one to two minutes.
Too many Bluetooth devices are stored in the helmet.	Delete all pairing entries in the helmet (see the operating instructions of the communication system).
There are additional vehicles with Bluetooth-capable devices nearby.	Avoid simultaneous pairing with multiple vehicles.

Bluetooth® connection is faulty.

Possible cause	Remedy
Bluetooth connection to the mobile end device is interrupted.	Switch off energy saving mode.
Bluetooth connection to the helmet is interrupted.	Switch off the communication system of the helmet and connect again after one to two minutes.
Volume in the helmet cannot be adjusted.	Switch off the communication system of the helmet and connect again after one to two minutes.

234 TECHNICAL DATA

The phone book is not displayed in the instrument cluster.

Possible cause	Remedy
-----------------------	---------------

Phone book was has not yet been transferred to the vehicle.

During pairing to the mobile end device, confirm the transfer of the telephone data (☰➔ 77).
--

Active destination guidance is not displayed in the instrument cluster.

Possible cause	Remedy
-----------------------	---------------

Navigation from the BMW Motorrad Connected App was not transferred.

Call up the BMW Motorrad Connected App on the connected mobile end device before riding.
--

Route guidance cannot be started.

Ensure that there is a data connection to the mobile end device and check the map data on the mobile end device.
--

THREADED CONNECTIONS

Front wheel	Value	Valid
Quick-release axle in telescopic fork		
M12 x 20	22 lb/ft (30 Nm)	
Fork bridge, bottom at slider tube		
M8 x 35	Tightening sequence: Tighten the screws 6 times, alternating between one and the other each time	
	14 lb/ft (19 Nm)	
Brake caliper on telescopic forks		
M10 x 65	28 lb/ft (38 Nm)	
Wheel speed sensor on fork		
M6 x 16 Micro-encapsulated or medium-strength screw lock	6 lb/ft (8 Nm)	
Rear wheel	Value	Valid
Tighten rear wheel on wheel flange		
M10 x 1.25 x 40	Tightening sequence: Tighten crosswise	
	44 lb/ft (60 Nm)	

236 TECHNICAL DATA

Mirrors	Value	Valid
Mirror (locknut) on adapter		
M10 x 1.25	Left-hand thread, 16 lb/ft (22 Nm)	
Adapter to clamping block		
M10 x 14	18 lb/ft (25 Nm)	

Gearshift lever	Value	Valid
Foot piece to gearshift lever		
M6 x 20 micro-encapsulated	7 lb/ft (10 Nm)	

Footbrake lever	Value	Valid
Foot piece on footbrake lever		
M6 x 20 micro-encapsulated	7 lb/ft (10 Nm)	

Footrests	Value	Valid
Clamping block on footrest hinge		
M8 x 25	15 lb/ft (20 Nm)	
Footrest on clamping block		
M6 x 20 / M6 x 12	7 lb/ft (10 Nm)	

Handlebars	Value	Valid
Clamping block (handlebar clamp) on fork bridge		
M8 x 35	Tightening sequence: tighten to block at front in direction of travel 14 lb/ft (19 Nm)	
M8 x 65	Tightening sequence: tighten to block at front in direction of travel 14 lb/ft (19 Nm)	–with handlebar risers ^{OE}

238 TECHNICAL DATA

FUEL

Recommended fuel quality	Super unleaded (max. 15 % ethanol, E15) 89 AKI (95 ROZ/RON) 90 AKI
Alternative fuel quality	Normal unleaded (with performance penalty) (max. 15 % ethanol, E15) 87 AKI (91 ROZ/RON) 87 AKI
Usable fuel quantity	Approx. 7.9 gal (Approx. 30 l)
Reserve fuel quantity	Approx. 1.1 gal (Approx. 4 l)
Fuel consumption	49 mpg (4.8 l/100 km), In accordance with WMTC
CO2 emissions	110 g/km, according to WMTC
Emission standard	TIER 2, measured in accordance with FTP75

ENGINE OIL

Engine oil, capacity	max 1.1 gal (max 4 l), with filter replacement
Specification	SAE 5W-40, API SL/ JASO MA2, Additives (for instance, molybdenum-based substances) are prohibited, because they would attack the coatings on engine components, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.

Engine oil, quantity for topping up	max 0.8 quarts (max 0.8 l), Difference between MIN and MAX
-------------------------------------	--

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

ENGINE

Engine number location	Lower right of engine block beneath the starter
Engine type	A74B12M
Engine design	Air-cooled/liquid-cooled two-cylinder four-stroke opposed-twin engine with two overhead, spur-gear-driven camshafts, a counterbalance shaft, and variable intake camshaft control BMW Shift-Cam
Displacement	1254 cc (1254 cm ³)
Compression ratio	12.5:1
Nominal capacity	134 hp (100 kW), at engine speed: 7750 min ⁻¹
Torque	105 lb/ft (143 Nm), at engine speed: 6250 min ⁻¹
Maximum engine speed	max 9000 min ⁻¹
Idle speed	1050 min ⁻¹ , Engine at operating temperature

240 TECHNICAL DATA

CLUTCH

Clutch design	Multi-disk oil-bath clutch, slipper clutch
---------------	--

TRANSMISSION

Transmission design	6-speed transmission with helical cut dog ring gears
---------------------	--

REAR-WHEEL DRIVE

Gear ratio of rear-wheel drive	2.91 (32:11 teeth)
Rear axle differential oil	SAE 70W-80, above 5 °C and below 5 °C

FRAME

Location of type plate	Frame at front left on steering head
Location of the vehicle identification number	Frame at front right below steering head

RUNNING GEAR

Front wheel

Type of front suspension	BMW Telelever, upper fork bridge tilt decoupled, leading link mounted in engine and on telescopic fork, centrally positioned spring strut supported on leading link and frame
Spring travel, front	8.3 in (210 mm), on wheel
-with lowered ^{OE}	6.2 in (158 mm), on wheel

Rear wheel	
Type of rear-wheel guide	Cast-aluminum single swing arm with BMW Motorrad Paralever
Spring travel on the rear wheel	8.7 in (220 mm), on wheel
-with lowered ^{OE}	6.7 in (170 mm), on wheel

BRAKES

Front wheel	
Type of front wheel brake	Hydraulically operated twin disk brake with 4-piston radial calipers and floating brake disks
Front brake pad material	Sintered metal
Front brake disc thickness	0.18 in (4.5 mm), New min 0.16 in (min 4.0 mm), Wear limit
Free travel of brake actuation (Front wheel brake lever)	0.06...0.08 in (1.6...2.1 mm), at the piston

Rear wheel	
Type of rear wheel brake	Hydraulically operated disc brake with 2-piston floating caliper and fixed brake disc
Rear brake pad material	Sintered metal
Rear brake disc thickness	0.2 in (5.0 mm), New min 0.18 in (min 4.5 mm), Wear limit
Blow-by clearance of foot-brake lever	0.04...0.06 in (1...1.5 mm), Between frame and footbrake lever

242 TECHNICAL DATA

WHEELS AND TIRES

Speed category of front/rear tires	V, minimum requirement: 149 mph (240 km/h)
------------------------------------	---

Front wheel

Front-wheel rim size	3.0"x19"
Front tire designation	120/70 - R19
Load index for front tire	At least 60
Permissible front-wheel imbalance	max 0.2 oz (max 5 g)
Permissible front wheel load	max 419 lbs (max 190 kg)

Rear wheel

Rear-wheel rim size	4.50"x17"
Rear tire designation	170/60 - R17
Load index for rear tire	At least 72
Permissible rear-wheel imbalance	max 0.2 oz (max 5 g)
Permissible rear wheel load	max 705 lbs (max 320 kg)

Tire inflation pressures

Front tire pressure	36.3 psi (2.5 bar), with tire cold
Rear tire pressure	42.1 psi (2.9 bar), with tire cold

ELECTRICAL SYSTEM

Electrical rating of onboard sockets	max 5 A, all onboard sockets together
Fuse 1	10 A, Instrument cluster, anti-theft alarm system (DWA), ignition switch, OBD socket, ignition coil for cut-off relay

Fuse 2	7.5 A, Left multifunction switch, Tire Pressure Control (TPM), sensor box, seat heating
Fuse carrier	50 A, Fuse 1: Voltage regulator
Battery	
Battery design	AGM (Absorbent Glass Mat) battery, maintenance-free
–with M Lightweight battery ^{OE}	Lithium ion battery
Battery voltage	12 V
–with M Lightweight battery ^{OE}	12 V
Battery capacity	14 Ah
–with M Lightweight battery ^{OE}	10 Ah
Battery type (For Keyless Ride radio-operated key)	CR 2032
Spark plugs	
Spark plugs, manufacturer and designation	NGK LMAR8AI-10
Light sources	
Bulb for high-beam headlight	
–without ^{OE} headlight control	LED
–with ^{OE} headlight control	H7 / 12 V / 55 W
Bulbs for low-beam headlight	
–without ^{OE} headlight control	LED
–with ^{OE} headlight control	H7 / 12 V / 55 W
Bulb for parking light	

244 TECHNICAL DATA

-without ^{OE} headlight control	LED
-with ^{OE} headlight control	W5W / 12 V / 5 W
Bulb for taillight/brake light	LED
Bulbs for flashing turn indicators	LED

DIMENSIONS

Motorcycle length	89.4 in (2270 mm), over splash guard
Motorcycle height	57.5...59.8 in (1460...1520 mm), over windshield, at DIN unloaded vehicle weight
-with Style Rallye ^{OE} -with lowered ^{OE}	55.5...57.9 in (1410...1470 mm), over windshield, at DIN unloaded vehicle weight
-with lowered ^{OE}	55.9...58.3 in (1420...1480 mm), over windshield, at DIN unloaded vehicle weight
-with Style Rallye ^{OE} or -with edition ^{OE}	57.1...59.4 in (1450...1510 mm), over windshield, at DIN unloaded vehicle weight
Motorcycle width	37.5 in (952 mm), with mirrors 38.6 in (980 mm), with hand guard

Front-seat height	35...35.8 in (890...910 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE} -with seat heating ^{OE}	31.7...32.5 in (805...825 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE} -with passenger package, low ^{OE}	32.3...33.1 in (820...840 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE} -with passenger package, low ^{OE} -with seat heating ^{OE}	32.7...33.5 in (830...850 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE}	33.1...33.9 in (840...860 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE} -with Rallye seat, low ^{OE}	33.1 in (840 mm), without rider, at DIN unloaded vehi- cle weight
-with Rallye seat, low ^{OE}	34.6 in (880 mm), without rider, at DIN unloaded vehi- cle weight
Rider's inside-leg arc, heel to heel	76.8...78.3 in (1950...1990 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE} -with passenger package, low ^{OE}	71.3...72.8 in (1810...1850 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE} -with passenger package, low ^{OE} -with seat heating ^{OE}	72...73.6 in (1830...1870 mm), without rider, at DIN unloaded vehicle weight

246 TECHNICAL DATA

-with lowered ^{OE} -with seat heating ^{OE}	72.4...73.2 in (1840...1860 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE}	72.8...74.4 in (1850...1890 mm), without rider, at DIN unloaded vehicle weight
-with lowered ^{OE} -with Rallye seat, low ^{OE}	74 in (1880 mm), without rider, at DIN unloaded vehi- cle weight
-with Rallye seat, low ^{OE}	75.6 in (1920 mm), without rider, at DIN unloaded vehicle weight

WEIGHTS

Unloaded vehicle weight	591 lbs (268 kg), DIN unladen weight, ready for road, fuel tank 90 % full, without OE
Gross vehicle weight	1069 lbs (485 kg)
Maximum payload	478 lbs (217 kg)

PERFORMANCE DATA

Maximum speed	>124 mph (>200 km/h)
-with aluminum case ^{OA}	112 mph (180 km/h)
-with aluminum topcase ^{OA}	112 mph (180 km/h)

SERVICE

13

REPORTING SAFETY DEFECTS	250
BMW MOTORRAD SERVICE	251
BMW MOTORRAD SERVICE HISTORY	251
BMW MOTORRAD MOBILITY SERVICES	252
MAINTENANCE WORK	252
MAINTENANCE SCHEDULE	254
BMW MOTORRAD BREAK-IN SERVICE	256
MAINTENANCE CONFIRMATIONS	257
SERVICE CONFIRMATIONS	269

REPORTING SAFETY DEFECTS

If you think that your vehicle has a fault which may cause an accident, injury or death, you must inform the NHTSA (National Highway Traffic Safety Administration) immediately and BMW of North America, LLC.

If the NHTSA receives other similar complaints, it may open an investigation. If it finds that a safety defect exists in a group of vehicles, the NHTSA may order the manufacturer to perform a recall and remedy campaign. However, the NHTSA cannot become involved in individual problems between you, your authorized BMW Motorrad dealer or BMW of North America, LLC.

You can contact the NHTSA by calling 1-888-327-4236 to reach the Vehicle Safety Hotline (Teletypewriter TTY for the hearing impaired: 1-800-424-9153) for free, by visiting the website at <http://www.safercar.gov> or by writing to Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. Further information on vehicle safety is available at the following website: <http://www.safercar.gov>.

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls may call the toll-free hotline 1-800-333-0510. You can also obtain other information about vehicle safety from <http://www.tc.gc.ca/road-safety>.

BMW MOTORRAD SERVICE

With its worldwide dealer network, BMW Motorrad can attend to you and your motorcycle in over 100 countries around the globe. Authorized BMW Motorrad dealers have the technical information and expertise needed to reliably conduct all preventive maintenance and repair procedures on your BMW.

You will find the nearest authorized BMW Motorrad dealer at our website: bmw-motorrad.com.



WARNING

Improperly performed preventive maintenance and repair procedures

Risk of accident due to subsequent damage

- BMW Motorrad recommends having corresponding work performed on the motorcycle by a repair shop, preferably by an authorized BMW Motorrad dealer.

To ensure that your BMW is always in optimum condition, BMW Motorrad recommends that you comply with the maintenance intervals specified for your motorcycle.

Have all preventive maintenance and repair work carried out confirmed in the "Service" chapter in this manual. Documented proof of scheduled preventive maintenance is essential for generous treatment of claims submitted after the warranty period has expired (goodwill).

You can obtain information on the contents of the BMW Motorrad Services from your authorized BMW Motorrad dealer.

BMW MOTORRAD SERVICE HISTORY

Entries

Maintenance work that has been performed is recorded in the diagnostics and information system. Like a Service Booklet, these entries provide proof of regular preventive maintenance. If an entry is made in the vehicle's service history, service-related data is stored on the

252 SERVICE

central IT systems that can be accessed via BMW.

When there is a change in vehicle owner, the data entered in the electronic Service History can also be viewed by the new vehicle owner. An authorized BMW Motorrad dealer or repair shop can view the data entered in the service history.

Objection

At an authorized BMW Motorrad dealer or repair shop, the vehicle owner can object to the entry of data in the service history with the related storage of data in the vehicle and the transfer of data to the vehicle manufacturer during his time as the vehicle owner. In this case, no entry is made in the vehicle's electronic Service History.

BMW MOTORRAD MOBILITY SERVICES

As the owner of a new BMW motorcycle, in the event of a breakdown you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. BMW Roadside Assistance, breakdown service, vehicle recovery service).

Contact your authorized BMW Motorrad dealer for additional information on available mobility services.

MAINTENANCE WORK

BMW pre-delivery check

The BMW pre-delivery check is carried out by your authorized BMW Motorrad dealer before it turns the vehicle over to you.

BMW Running-in Check

The BMW running-in check must be carried out between 300 mls (500 km) and 750 mls (1200 km).

BMW Motorrad Service

BMW Motorrad service is carried out once a year. The scope of the services performed may be dependent on the age of the vehicle and the distance covered. Your authorized BMW Motorrad dealer confirms that the service has been performed and enters the date for the next service. For riders with a high annual distance traveled, it may be necessary to come in for service before the entered date. In these cases, a corresponding maximum distance covered will also be entered in the confirmation of service. If

this distance covered is reached before the next service appointment, service must be performed sooner.

The service display in the display reminds you of the approaching service appointment approx. one month or 620 mi (1000 km) before the entered values.

More information on the topic of service is available at:

bmw-motorrad.com/service

The required scope of maintenance work for your vehicle can be found in the following maintenance schedule. The listed repair procedures are due at the respective specified mileage levels or the specified time intervals.

254 SERVICE

MAINTENANCE SCHEDULE

	500 -1200 km 300 - 750 mls	10 000 km 6 000 mls	20 000 km 12 000 mls	30 000 km 18 000 mls	40 000 km 24 000 mls	50 000 km 30 000 mls	60 000 km 36 000 mls	70 000 km 42 000 mls	80 000 km 48 000 mls	90 000 km 54 000 mls	100 000 km 60 000 mls	12 months	24 months
1	X												
2		X	X	X	X	X	X	X	X	X	X	X ^a	
3		X	X	X	X	X	X	X	X	X	X	X ^a	
4			X		X		X		X		X		X ^b
5			X		X		X		X		X		
6			X		X		X		X		X		
7			X		X		X		X		X		
8		X	X	X	X	X	X	X	X	X	X	X ^c	
9			X		X		X		X		X		
10			X		X		X		X		X		
11							X ^e						
12												X ^d	X ^d

- 1 BMW break-in inspection (including oil and oil filter change)
- 2 Standard scope of BMW Motorrad service
- 3 Engine oil change with filter
- 4 Oil change in the bevel gears
- 5 Check valve clearance
- 6 Replace all spark plugs
- 7 Replace the air filter insert
- 8 Check or replace the air filter insert (when used off-road)

- 9 Recommended: Check the universal shaft
- 10 Recommended: Lubricate the universal shaft
- 11 Replace the universal shaft
- 12 Change brake fluid in the entire system
 - a Annually or every 6000 mi (10000 km) (whichever comes first)
 - b Every two years or every 12000 mi (20000 km) (whichever comes first)

- c when used off-road, annually or every 6000 mi (10000 km) (whichever comes first)
- d At first after one year, then every two years
- e Relative to the service life of the component

BMW MOTORRAD BREAK-IN SERVICE

BMW Motorrad break-in service

The BMW Motorrad break-in service repair procedures are listed below. The actual scope of maintenance required for your vehicle may differ.

- Setting the service date and remaining distance
- Performing the vehicle test using the BMW Motorrad diagnostic system
- Engine oil change with filter
- Change oil in the angular gearbox
- Checking the front wheel brake fluid level
- Checking the rear wheel brake fluid level
- Checking the coolant level
- Check the tire tread depth and tire pressure
- Checking the lighting and signal system
- Check the tension of the spokes and tighten as needed
- Functional check for engine starting suppression
- Final inspection and road safety check
- Performing the vehicle test using the BMW Motorrad diagnostic system
- Confirming the BMW service in the vehicle literature

MAINTENANCE CONFIRMATIONS

BMW Motorrad Service standard scope

The repair procedures belonging to the BMW Motorrad Service standard package are listed below. The actual maintenance work applicable for your vehicle may differ.

- Performing the vehicle test using the BMW Motorrad diagnostic system
- Visual inspection of the clutch system
- Visual inspection of the brake lines, brake hoses and connections
- Checking the front brake pads and brake discs for wear
- Checking the front wheel brake fluid level
- Checking the rear brake pads and brake disc for wear
- Checking the rear wheel brake fluid level
- Checking the coolant level
- Checking side stand for ease of movement
- Checking center stand for ease of movement
- Checking the tire pressure and tread depth
- Check the tension of the spokes and tighten as needed
- Checking the lighting and signal system
- Functional check for engine starting suppression
- Final inspection and road safety check
- Performing the vehicle test using the BMW Motorrad diagnostic system
- Set the service date and remaining distance using the BMW Motorrad diagnostic system
- Checking charging state of battery
- Confirming the BMW Motorrad service in the vehicle literature

258 SERVICE

BMW Motorrad pre-delivery check

performed

on _____

Stamp, signature

BMW Motorrad break-in service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Stamp, signature

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

260 SERVICE

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

262 SERVICE

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

264 SERVICE

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

266 SERVICE

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

BMW Motorrad Service

performed

on _____

at km _____

Next service

latest

on _____

or, if reached earlier

at km _____

Work performed

	Yes	No
BMW Motorrad Service	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in engine with filter	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in bevel gears	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Replacing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Replacing air filter insert	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Check the universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Recommended: Lubricate universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Replace universal shaft (during preventive maintenance)	<input type="checkbox"/>	<input type="checkbox"/>
Changing brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

Stamp, signature

RADIO EQUIPMENT ELECTRONIC IMMOBILISER	273
KEYLESS RIDE KEY	274
KEYLESS RIDE ECU	275
CERTIFICATION TIRE PRESSURE CONTROL	275
RADIO EQUIPMENT TFT INSTRUMENT CLUSTER	276

RADIO EQUIPMENT ELEC- TRONIC IMMOBILISER

For all countries without EU

Model name: EWS 4 Manufacturer

BECOM Electronics GmbH
Technikerstraße 1, A-7442
Hochstraß, Austria

Technical information

Frequency Band: 134 kHz
Transponder: TMS37145/Type
DST80, TMS3705 Transponder
Base Station IC
Output Power: 50 dBµV/m

Country

Canada

Contains IC:
10430A-MREWS5012
This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'

exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

United States (USA)

Contains FCC ID:
ODE-MREWS5012
FCC § 15.19 Labelling requirements

This device complies with part 15 of the FCC Rules and Industry Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC § 15.21 Information to user

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
RF Exposure Requirements

274 APPENDIX

To comply with FCC RF exposure compliance requirements, the device must be installed to provide a separation distance of at least 20 cm from all persons.

KEYLESS RIDE KEY

For all Countries without EU

Model name: HUF5794

Manufacturer

Huf Hülbeck & Fürst GmbH & Co. KG
Steger Str. 17, 42551 Velbert, Germany

Technical information

Frequency band: 433,92 MHz
Output/Transmission Power:
10 mW

Country

Canada

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) L'appareil ne doit pas produire de brouillage;
(2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
CAUTION:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KEYLESS RIDE ECU

For all Countries without EU

Model name: HUF8485

Manufacturer

Huf Hülsbeck & Fürst GmbH & Co. KG

Steeger Str. 17, 42551 Velbert, Germany

Technical information

Frequency band: 134,45 kHz

Output/Transmission Power:
42 dBµV/m

Country**Canada**

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

United States (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CERTIFICATION TIRE PRESSURE CONTROL**TPC****United States (USA)**

FCC ID: MRXBC54MA4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is

276 APPENDIX

subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Canada

IC: 2546A-BC5A4

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: Changes or modifications not expressly ap-

proved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

RADIO EQUIPMENT TFT INSTRUMENT CLUSTER

For all Countries without EU

**Model name: ICC6.5in
Manufacturer**

Robert Bosch GmbH
Robert Bosch Str. 200, 31139
Hildesheim, Germany

Technical information

Technical Information

BT operating frq. Range:

2402 - 2480 MHz

BT version: 4.2 (no BTLE)

BT output power: < 4 dBm

WLAN operating frq. Range:

2412 - 2462 MHz

WLAN standards:

IEEE 802.11 b/g/n

WLAN output power:

< 20 dBm

Country

Canada

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

United States (USA)

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC

Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

278 INDEX

- A**
 - Abbreviations and symbols, 4
 - ABS
 - Displays, 57
 - Indicator lights, 57, 58
 - Operating element, 21
 - Self-diagnosis, 137
 - Technology in detail, 154
 - Accessories
 - General notes, 210
 - Adaptive front lighting, 171
 - Air filter
 - Installing, 193
 - Position in vehicle, 19
 - Removing, 192
 - Ambient temperature, 43
 - Anti-theft alarm system
 - Indicator light, 24
 - Operating, 105
- B**
 - Battery
 - Charging connected battery, 200
 - Charging disconnected battery, 201
 - Indicator lights, 44, 45
 - Installing, 202
 - Maintenance instructions, 199
 - Removing, 201
 - Technical data, 243
 - Bluetooth, 71
 - Brake fluid
 - Checking the front fill level, 180
 - Checking the rear fill level, 181
 - Front expansion tank, 19
 - Rear expansion tank, 19
 - Brake pads
 - Checking the front, 178
 - Checking the rear, 179
 - Running in, 139
 - Brakes
 - ABS Pro in detail, 157
 - ABS Pro depends on riding mode, 143
 - Adjusting the footbrake lever, 119
 - Adjusting the handlebar lever, 118
 - Checking function, 178
 - Dynamic Brake Control depends on riding mode, 143
 - Safety instructions, 141
 - Technical data, 241
 - Break-in, 138
- C**
 - Care
 - Chrome, 226
 - Paint preservation, 227
 - Washing the vehicle, 224
 - Case
 - Operation, 212
 - Chassis
 - Technical data, 240
 - Check Control
 - Dialog, 35
 - Display, 35
 - Clutch
 - Adjusting the handlebar lever, 117
 - Checking function, 182
 - Technical data, 240

- Coolant
 - Checking the fill level, 182
 - Topping up, 183

D

- Damping
 - Rear adjusting element, 18
- Diagnostic socket
 - Detaching, 205
 - Fastening, 205
- Dimensions
 - Technical data, 244
- DTC
 - Indicator lights, 58, 59, 60
 - Operating, 92
 - Self-diagnosis, 138
 - Technology in detail, 157
 - Turning off, 92
 - Turning on, 92

DWA

- Indicator lights, 47, 48
- Dynamic Brake Control, 165
 - Technology in detail, 165
- Dynamic engine brake control, 159
- Dynamic ESA
 - Operating, 93
 - Operating element, 21

E

- Electrical system
 - Technical data, 242
- Emergency call
 - automatically, for a heavy fall, 89
 - automatically, for a minor fall, 88
 - Indicator lights, 56
 - Language, 87

- manual, 87
- Notes, 11
- Emergency-off switch, 22, 23
 - Operating, 86
- Engine
 - Indicator lights, 50, 51
 - Starting, 135
 - Technical data, 239
- Engine oil
 - Checking the fill level, 176
 - Electronic oil-level check, 48
 - Filling level indicator, 19
 - Indicator light for engine oil level, 49
 - Oil filler opening, 19
 - Technical data, 238
 - Topping up, 177
- Engine temperature, 49, 50

F

- Frame
 - Technical data, 240
- Front wheel stand
 - Attaching, 175
- Fuel
 - Fuel quality, 144
 - Oil filler opening, 18
 - Refueling, 145
 - refueling with Keyless Ride, 147, 148
 - Technical data, 238
- Fuel filler cap emergency release, 149
- Fuel reserve
 - Indicator lights, 61
 - Range, 32
- Fuses
 - Replacing, 203

280 INDEX

- G**
Gearshift assistant
 Gear not taught in, 62
 Riding, 140
 Technology in detail, 167
- H**
Handlebars
 Setting, 122
Hazard warning flasher
 Operating, 89
 Operating element, 21, 22, 23
Headlight
 Headlamp range, 115
 Headlight range adjustment, 18
Headlight courtesy delay
 feature, 80, 90
Heated grips
 Operating, 108
 Operating element, 22, 23
Hill Start Control, 102, 169
 cannot be activated, 61
 Indicator and warning lights, 61
 Operating, 103
 Technology in detail, 169
 Turning on and off, 103
Hill Start Control Pro
 Operating, 104
 Setting, 105
 Technology in detail, 169
Horn, 21
- I**
Ignition
 Turning off, 81
 Turning on, 80
Immobilizer, 84
 Wallet key, 81
Indicator lights, 24
 ABS, 57, 58
 Anti-theft alarm system, 48
 DTC, 58, 59, 60
 DWA, 47, 48
 Emergency call, 56
 Engine control, 50, 51
 Engine electronics, 51
 Engine oil level, 49
 Engine temperature, 49, 50
 External temperature warning, 43
 Faulty light source, 46
 Fuel reserve, 61
 Gear not taught in, 62
 Hill Start Control, 61
 Keyless Ride, 43, 44
 Layout, 35
 Light control unit failed, 47
 My Vehicle, 33
 Overview, 28
 RDC, 53
 Service, 63
 Side stand, 56
 Tire Pressure Monitor (TPM), 53, 54, 55
 Vehicle voltage, 44, 45
Instrument cluster, 24
 Operating, 64, 68, 69
 Operating element, 21
 Overview, 24, 29, 30
 Photodiode, 24
 Selecting the display, 66
- J**
Jump-starting, 197

K

Keyless Ride

- Battery of radio-operated key is dead or radio-operated key is lost, 84

- Electronic immobilizer

- EWS, 84

- Indicator lights, 43, 44

- Locking the steering lock, 82

- Turning off the ignition, 83

- Turning on the ignition, 83

- Unlocking the fuel cap, 147, 148

- Keys, 80, 82

L

Light sources

- High beams, 194

- Indicator lights, 46

- Low beams, 194

- Parking lights, 196

- Replacing the LED light source, 194

- Technical data, 243

Lights

- Headlight courtesy delay feature, 90

- Low beams, 89

- Operating element, 21

- Operating headlight flasher, 90

- Operating high beams, 90

- Operating the auxiliary headlights, 90

- Parking lights, 89

- Roadside parking lights, 90

Lowered suspension

- Limitations, 132

Luggage

- Loading information, 132

M

Maintenance

- Maintenance schedule, 254

- Maintenance confirmations, 257

- Maintenance intervals, 252

Media

- Operating, 75

Menu

- Going to, 68

Mirrors

- Adjusting the mirror arm, 115

- Adjusting the mirrors, 114

- Setting, 114

- Mobility Services, 252

Motorcycle

- Cleaning, 222

- Lashing down, 150

- Parking, 143

- Putting into operation, 227

- Storage, 227

- Vehicle are, 222

Multifunction switch

- Overview, left, 21

- Overview, right, 22, 23

N

Navigation

- Operating, 73

- Notice concerning current status, 6

O

- Offroad riding, 139

- Onboard vehicle toolkit

- Position on vehicle, 20

282 INDEX

- Operating focus
 - change, 73
- Outside temperature, 43
- Overview of warning indicators, 37
- Overviews
 - Indicator and warning lights, 28
 - Instrument cluster, 24, 29, 30
 - Left side of vehicle, 18
 - Left-side multifunction switch, 21
 - My Vehicle, 33
 - Right side of vehicle, 19
 - Right-hand multifunction switch, 22, 23
 - Underneath the seat, 20

P

- Pairing, 71
- Parking light, 90
- Performance data
 - Technical data, 246
- Phone
 - Operating, 76
- Pre-Ride-Check, 136
- Pure Ride
 - Overview, 30

R

- Radio-operated key
 - Indicator lights, 43, 44
- Rallye seat
 - Height adjustment, 126
 - Installing, 127
 - Removing, 126
- RDC
 - Indicator lights, 53, 54, 55
 - Technology in detail, 166

- Rear-wheel drive
 - Technical data, 240
- Refueling, 145
 - Fuel quality, 144
 - with Keyless Ride, 147, 148
- Remote control
 - Replacing the battery, 85
- Rider's Manual (US Model)
 - Position on vehicle, 20
- Riding mode
 - Operating element, 22, 23
 - Setting, 96
 - Setting the Pro riding mode, 99
 - Technology in detail, 160
- Road sign detection
 - Turning on or off, 75

S

- Safety information
 - For riding, 132
 - On braking, 141
- Screw connections, 235
- Seat
 - Height adjustment position, 20
- Seat heating
 - Operating, 108
- Seats
 - Adjusting the seat height, 124
 - Lock, 18
 - Removing and installing, 123
- Service, 251
 - Indicator lights, 63
 - Reporting safety defects, 250
 - Service History, 251
- Service display, 62
- Shift lever
 - Setting, 120

- ShiftCam, 170
 - Technology in detail, 170
- Shifting gears
 - Upshift recommendation, 32
- Socket
 - Information on use, 210
- Spark plugs
 - Technical Data, 243
- Speed control
 - Operating, 100
- Speedometer, 24
- Spring preload
 - Rear adjusting element, 19
 - Setting, 127
- Start, 135
 - Operating element, 22, 23
- Status bar, top
 - Setting, 69, 70
- Steering lock
 - Locking, 80
- Switching off, 143
- T**
- Tachometer, 24
 - Tachometer, 31
- Technical data
 - Battery, 243
 - Brakes, 241
 - Bulbs, 243
 - Clutch, 240
 - Dimensions, 244
 - Electrical system, 242
 - Engine, 239
 - Engine oil, 238
 - Frame, 240
 - Fuel, 238
 - Performance data, 246
 - Rear-wheel drive, 240
 - Running gear, 240
 - Spark plugs, 243
 - Transmission, 240
 - Weights, 246
 - Wheels and tires, 242
- Tire Pressure Control TPC/RDC
 - Display, 52
- Tires
 - Checking tire pressure, 184
 - Checking tread depth, 185
 - Inflation pressure table, 18
 - Inflation pressures, 242
 - Maximum speed, 133
 - Running in, 139
 - Technical data, 242
- Topcase
 - Operation, 214
- Torques, 235
- Traction Control
 - DTC, 157
- Transmission
 - Technical data, 240
- Troubleshooting chart, 232
- Turn signals
 - Operating, 89
 - Operating element, 21
 - Operating element, right, 22, 23
- Type plate
 - Position on vehicle, 19
- U**
- USB charging interface
 - Position on vehicle, 19
- V**
- Values
 - Display, 35

284 INDEX

Vehicle identification number

Position on vehicle, 19

Vehicle voltage, 44, 45

W

Warning lights, 24

Overview, 28

Weights

Payload table, 20

Technical data, 246

Wheels

Checking rims, 185

Checking spokes, 185

Installing the front wheel, 188

Installing the rear wheel, 191

Removing front wheel, 186

Size change, 185

Technical data, 242

Windshield

Adjusting element, 19

Setting, 116

The descriptions and illustrations in this manual may vary from your own motorcycle's actual equipment, depending upon its equipment level and accessories as well as your specific national version. No claims will be entertained as a result of such discrepancies. Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances. The right to modify designs, equipment and accessories is reserved. Errors and omissions excepted.

© 2023 Bayerische Motoren Werke Aktiengesellschaft
80788 Munich, Germany
Reprinting, in whole or in part, is only permitted with the written permission of BMW Motorrad, Aftersales. Original Rider's Manual, printed in Germany.



WARNING

Harmful substances

Operating and preventive maintenance of a passenger vehicle or off-road vehicle can expose you to substances such as exhaust gases, carbon monoxide, phthalates and lead, which are known to the State of California to be carcinogenic as well as detrimental to childbirth and reproduction.

- To minimize exposure, avoid breathing exhaust gases, do not put the engine in Neutral except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle.
- Further information is available at:

**[www.P65Warnings.ca.gov/
passenger-vehicle](http://www.P65Warnings.ca.gov/passenger-vehicle)**

Important data for refueling stop:

Fuel

Recommended fuel quality	Super unleaded (max. 15 % ethanol, E15) 89 AKI (95 ROZ/RON) 90 AKI
--------------------------	--

Alternative fuel quality	Normal unleaded (with performance penalty) (max. 15 % ethanol, E15) 87 AKI (91 ROZ/RON) 87 AKI
--------------------------	--

Usable fuel quantity	Approx. 7.9 gal (Approx. 30 l)
----------------------	--------------------------------

Reserve fuel quantity	Approx. 1.1 gal (Approx. 4 l)
-----------------------	-------------------------------

Tire inflation pressures

Front tire pressure	36.3 psi (2.5 bar), with tire cold
---------------------	------------------------------------

Rear tire pressure	42.1 psi (2.9 bar), with tire cold
--------------------	------------------------------------

You can find further information on all aspects of your vehicle at:
bmw-motorrad.com

